



Secure the green box in-place inside the wall of the shower. Run ½" pipe to the appropriate valve fittings for both hot and cold water (Pipe not included). Determine the locations of the shower attachments (tub faucet, showerhead, & hand-held) and run ½" pipe to their appropriate valve fittings on the green box (Pipe not included).

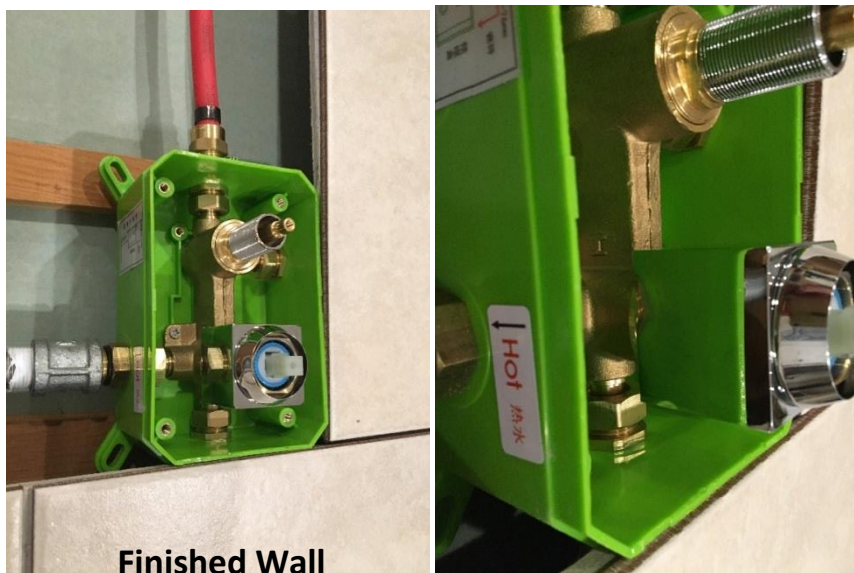

The lip of the opening of the green box should be slightly recessed from the finished wall. The ½" pipe fittings that will receive the shower attachments (tub faucet, showerhead, & hand-held) should also be slightly recessed with the finished wall. Replace the green box lid and 4 screws.

Place a bead of silicone completely around the back side of the face-plate and appropriately adhere the face-plate over the green valve box and finished wall. The face-plate will cover the opening of the green box and the silicone will seal the face-plate to the finished wall. Wipe off any excess silicone.

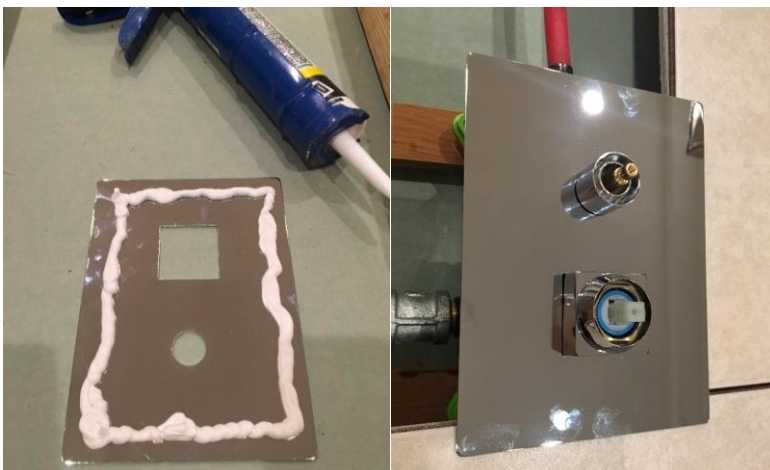

Finish installing the shower attachments. Wait at least 48 hours for the silicone to dry before using.