


Assembly Instructions

SPACE SAVER

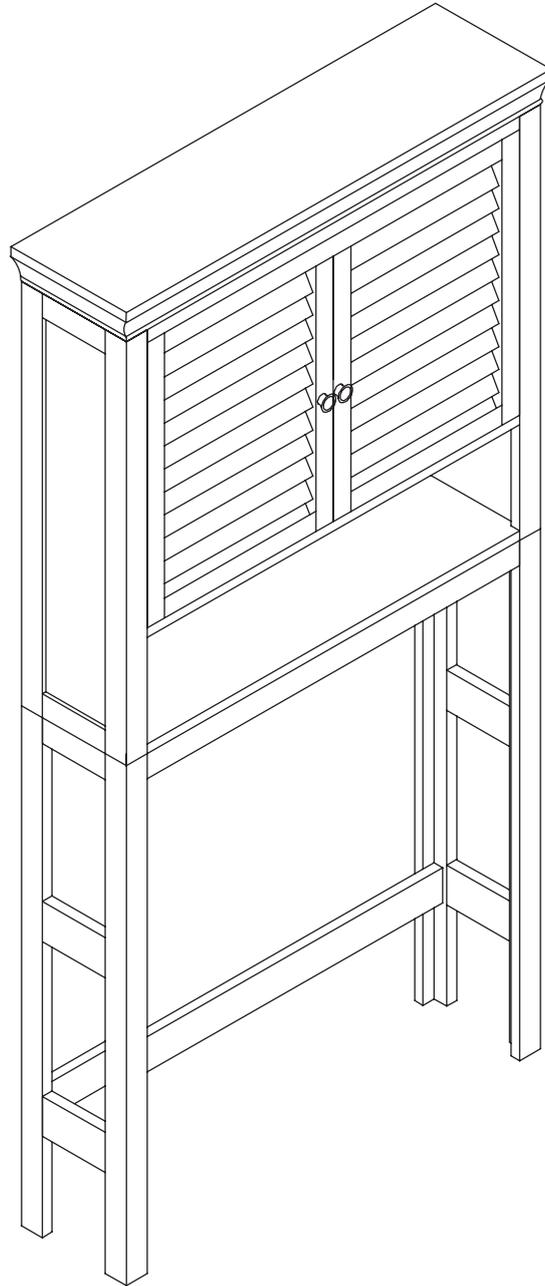


Carefully unpack and identify each component before beginning assembly. Before you begin, please refer to parts list to make sure that you have all parts. Please take care when assembling the unit and always place the parts on a clean, soft surface. If you require assistance with assembly or parts, please call us.














Get social with us and discover more about our products, tips and exclusive discounts!




Visit our YouTube channel for product assembly demonstrations

Parts List

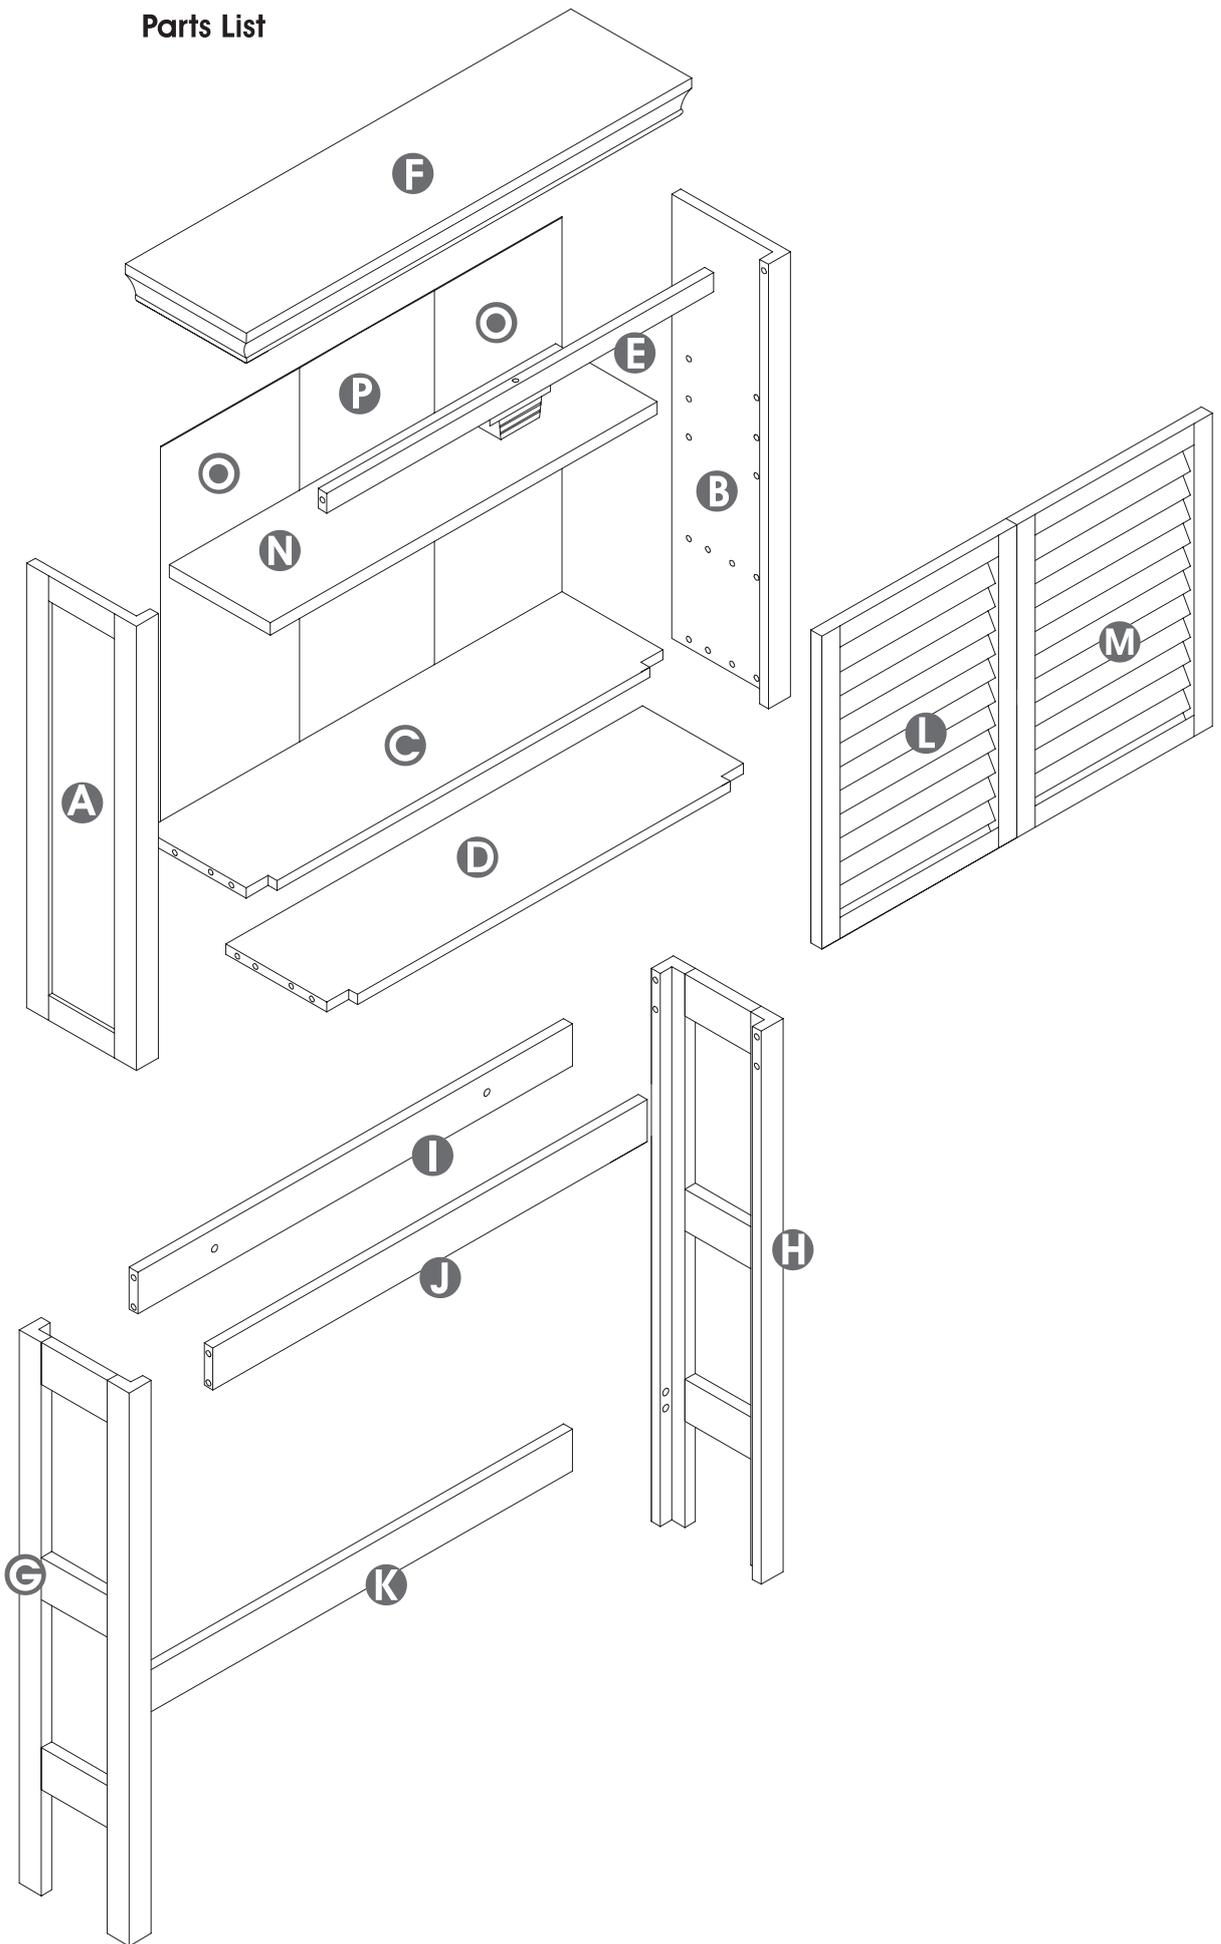


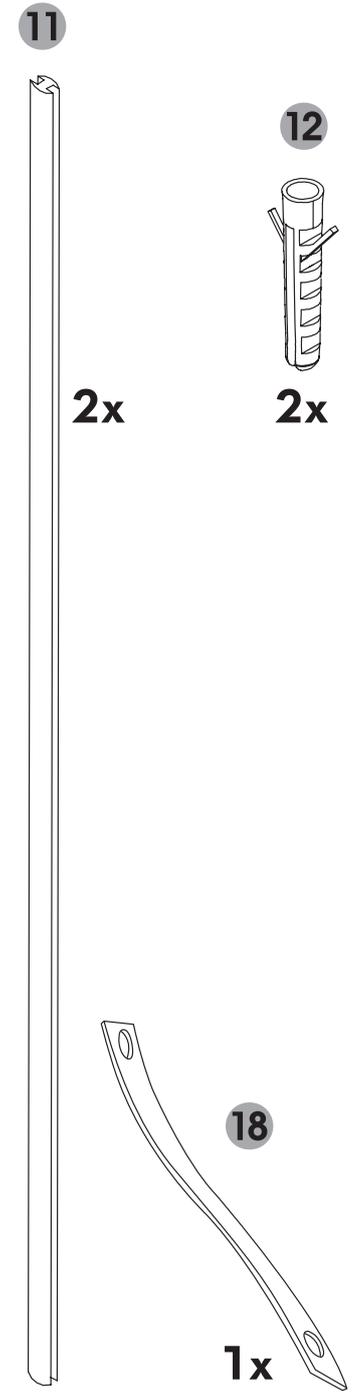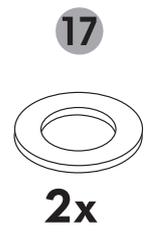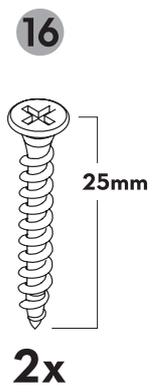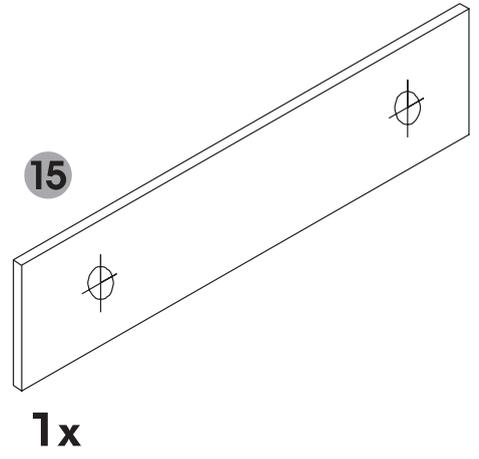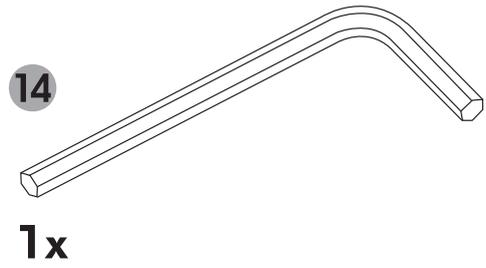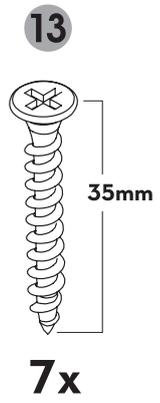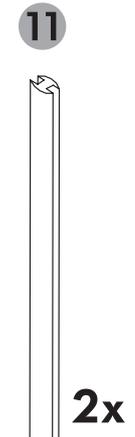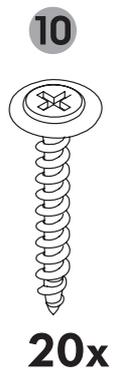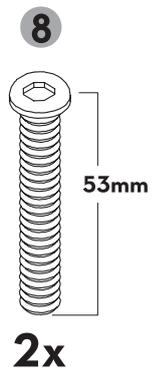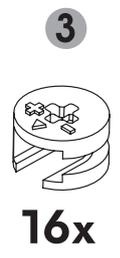

in **Step 1** you need **A** **C** **D** **E**

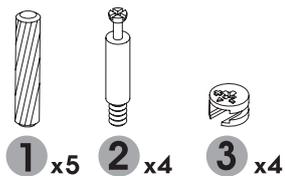

First screw cam bolt **2** into part A,
then slide part C, D into part A,
lastly tighten the cam lock **3** until secure.

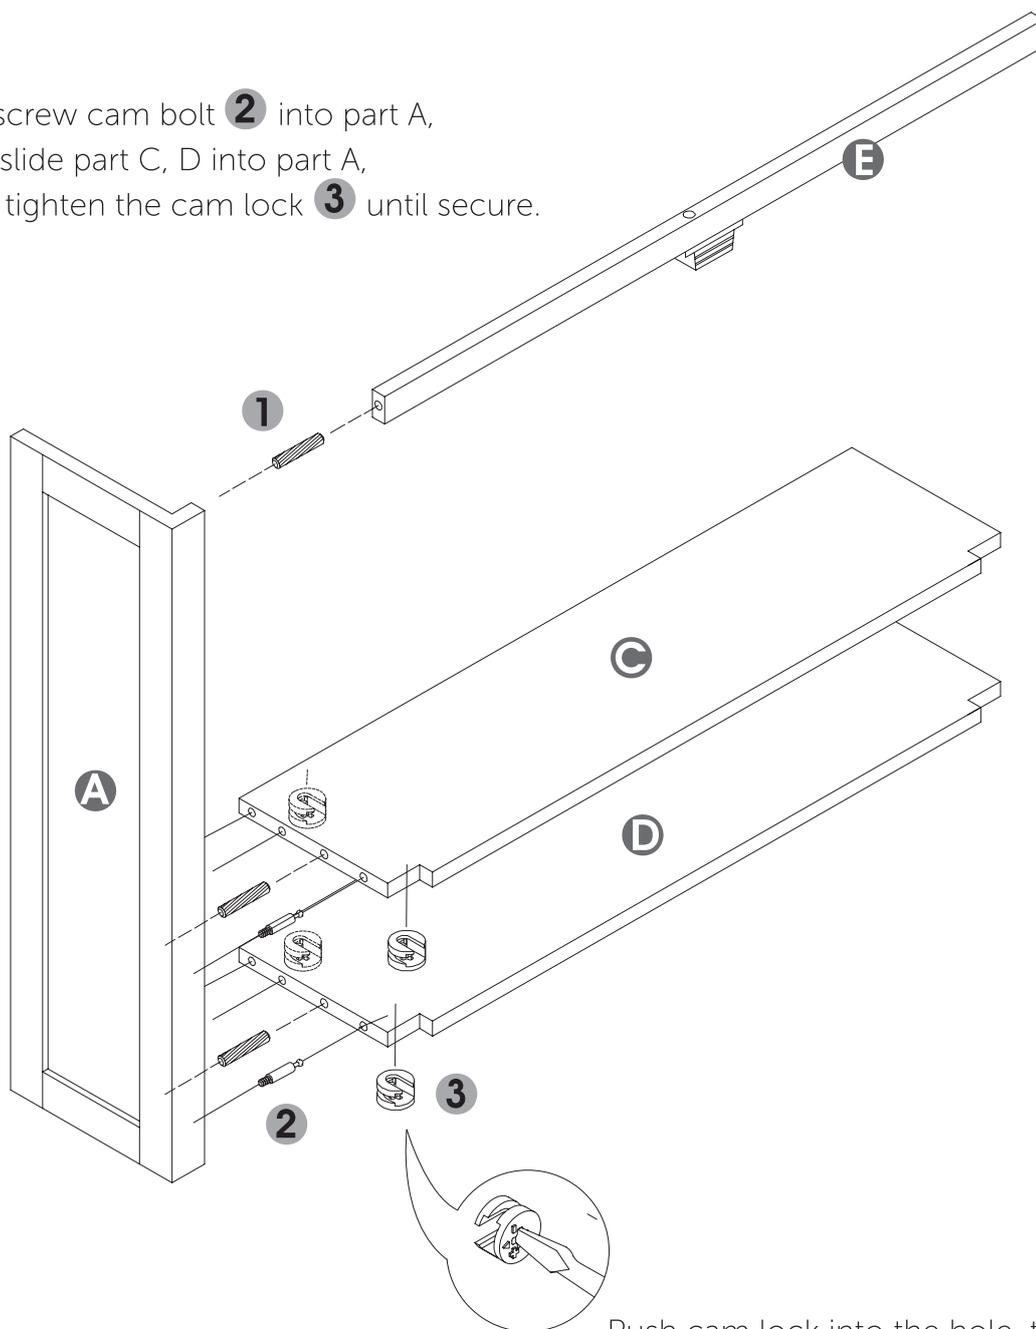


Push cam lock into the hole, then take a flathead screwdriver (as pictured) and twist 45 degrees until it is locked in place.



in **Step 2** you need

B

-  **1** x5
-  **2** x4
-  **3** x4

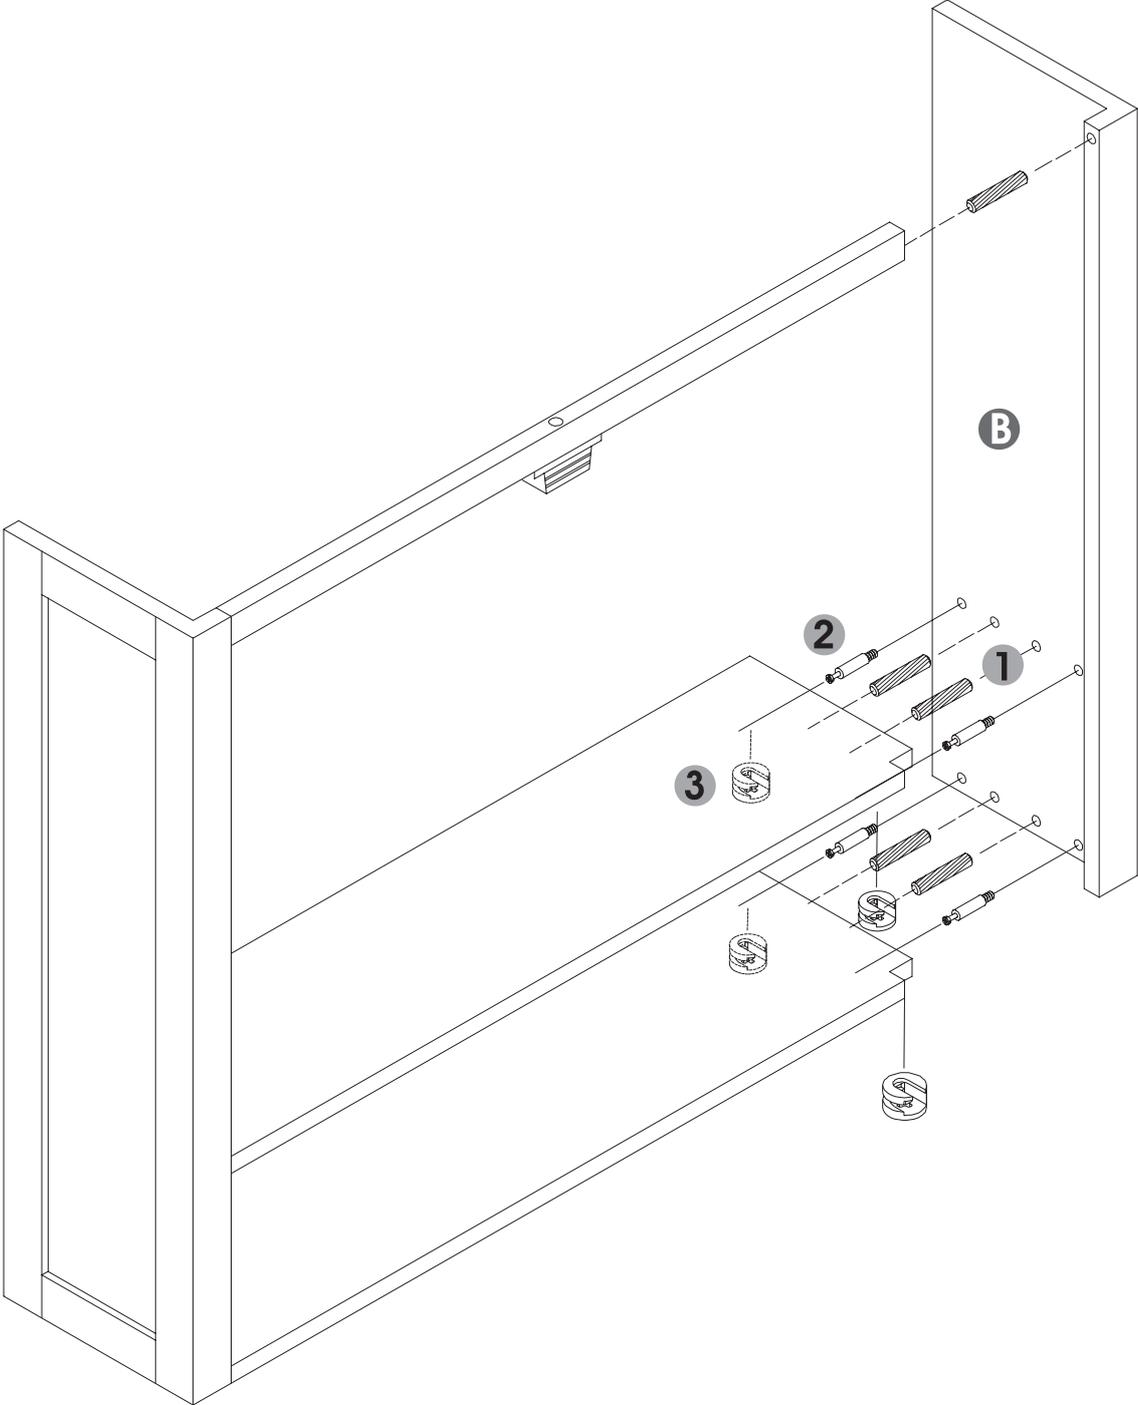

in **Step 3** you need **F**

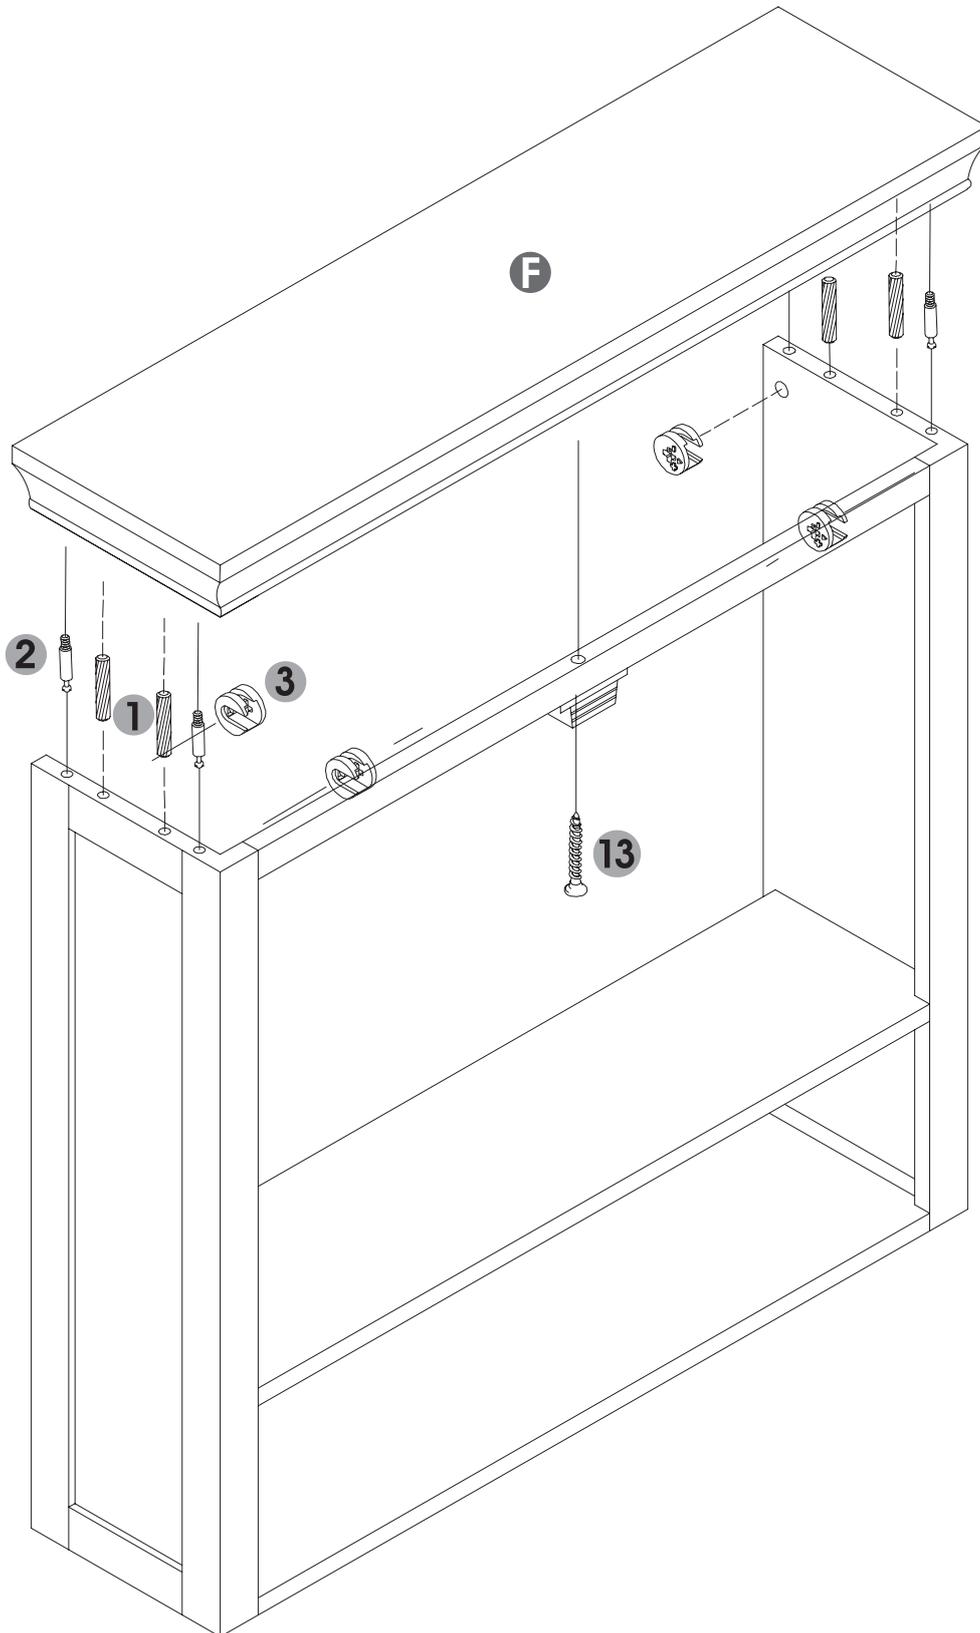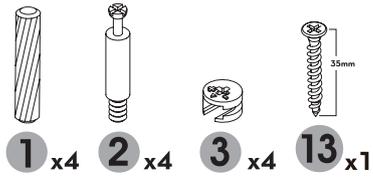

in **Step 4** you need




11 x2




10 x20


back connector slide

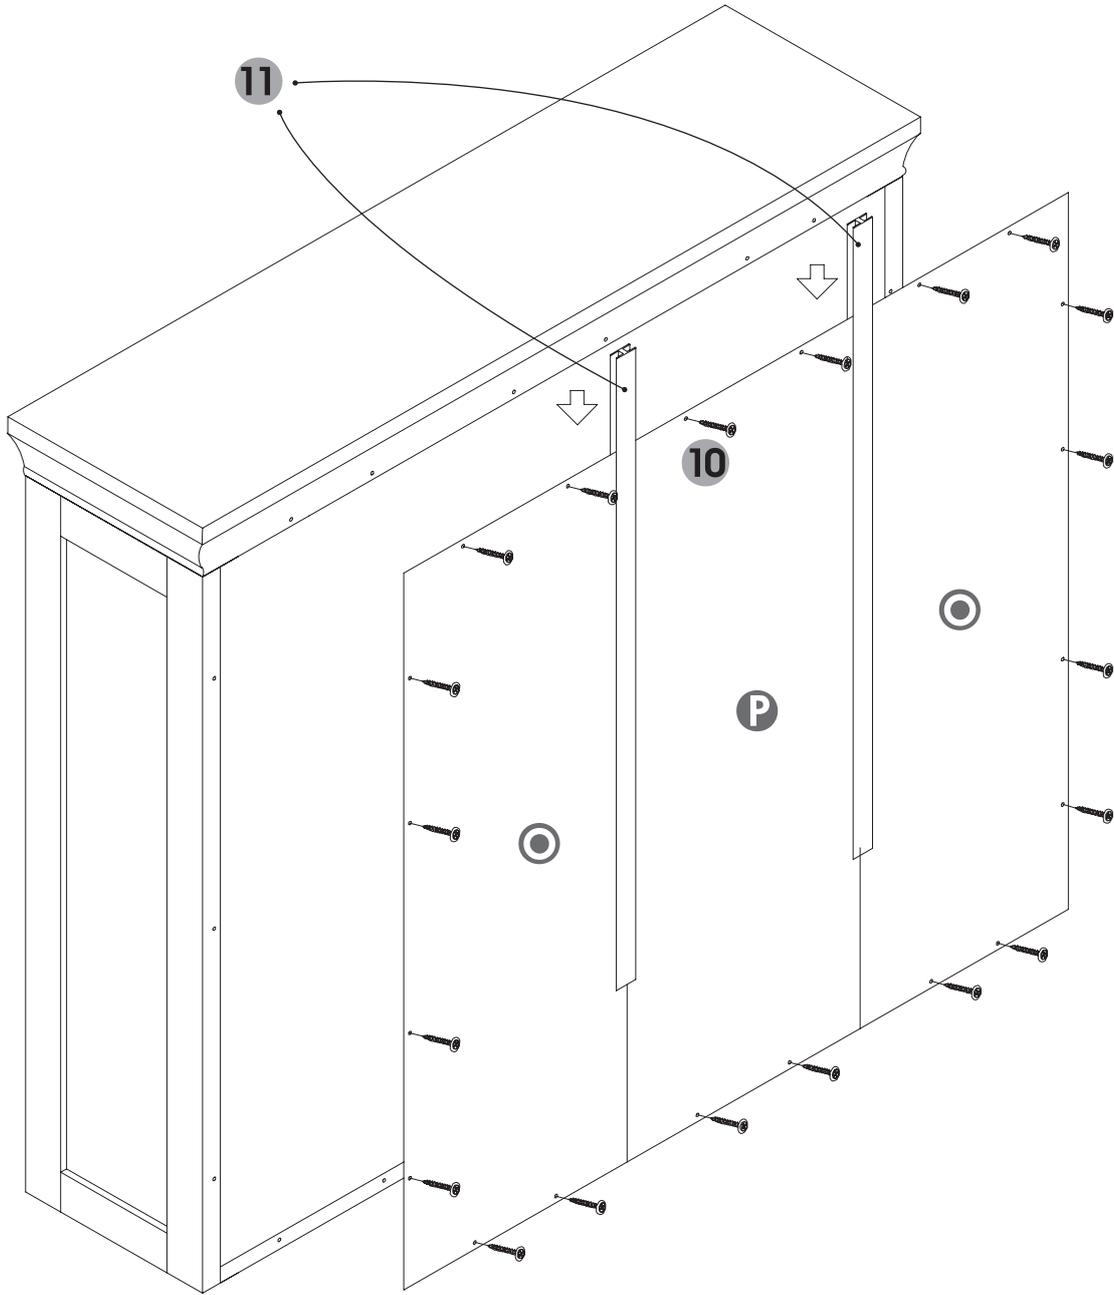



in **Step 5** you need **I** **J** **G** **H**

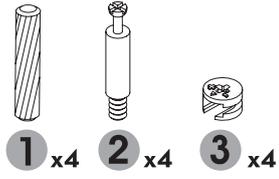



Note the **I** bar (the bar with two holes) is backfacing.

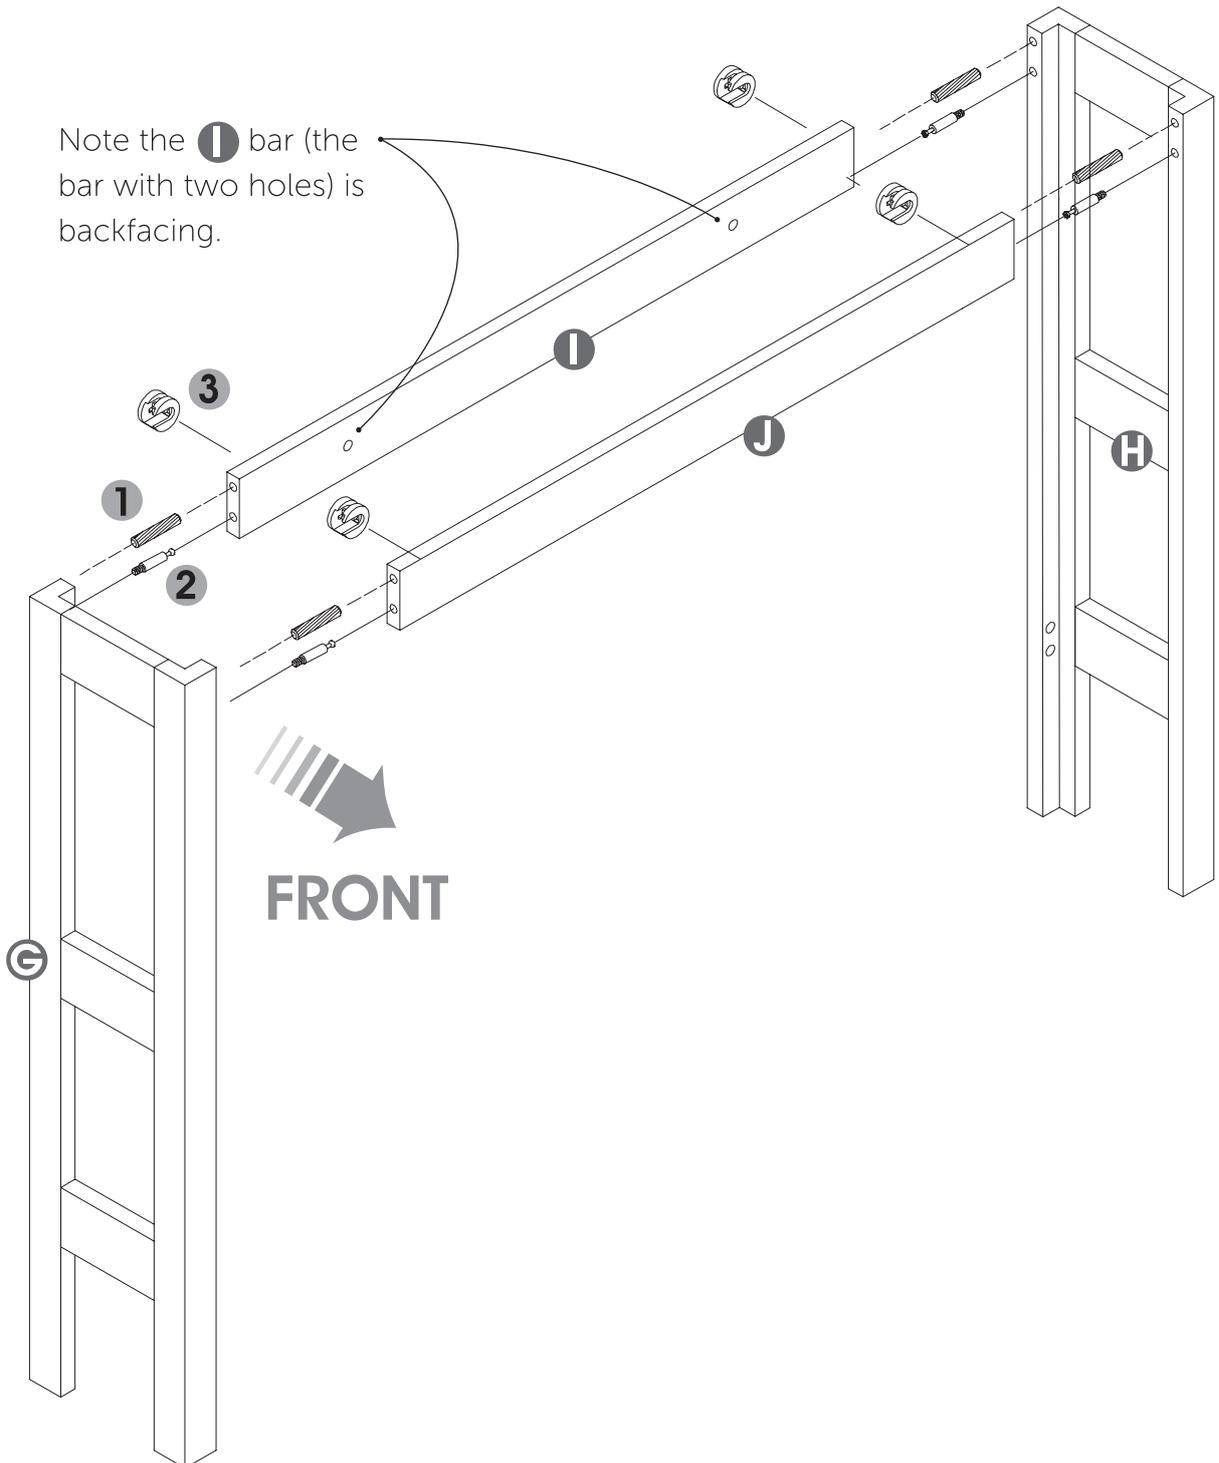

in **Step 6** you need **K**

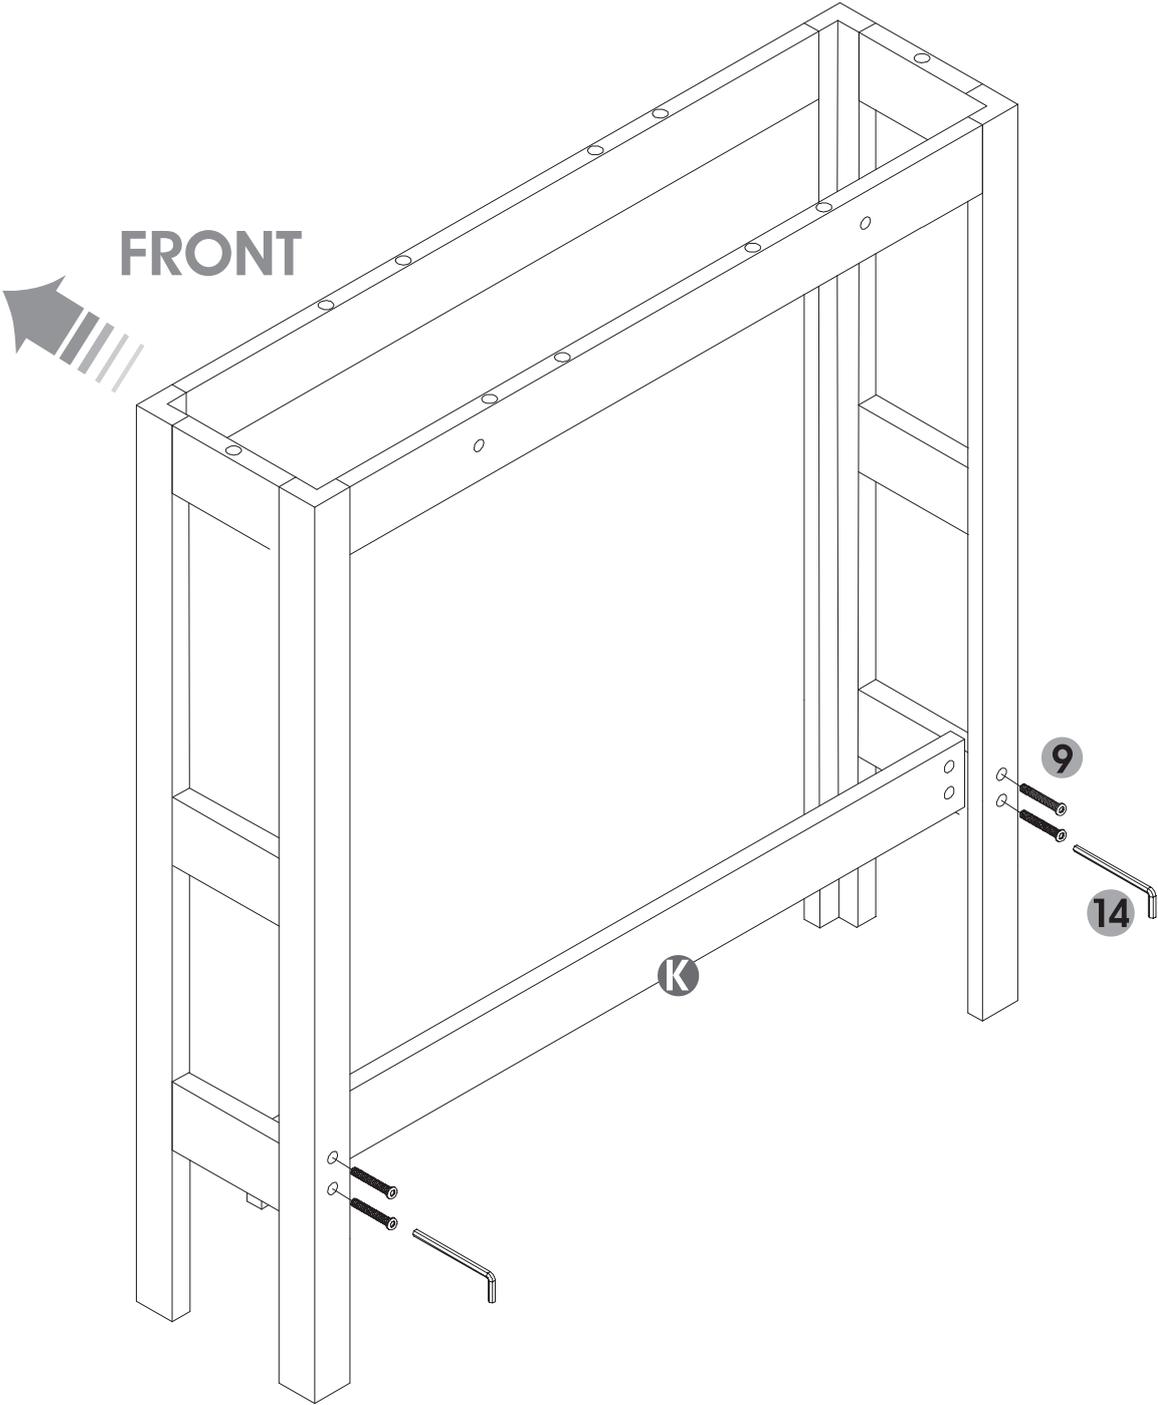
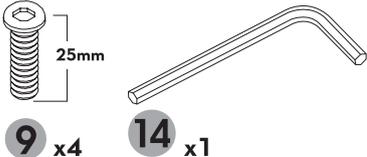


in **Step 7** you need

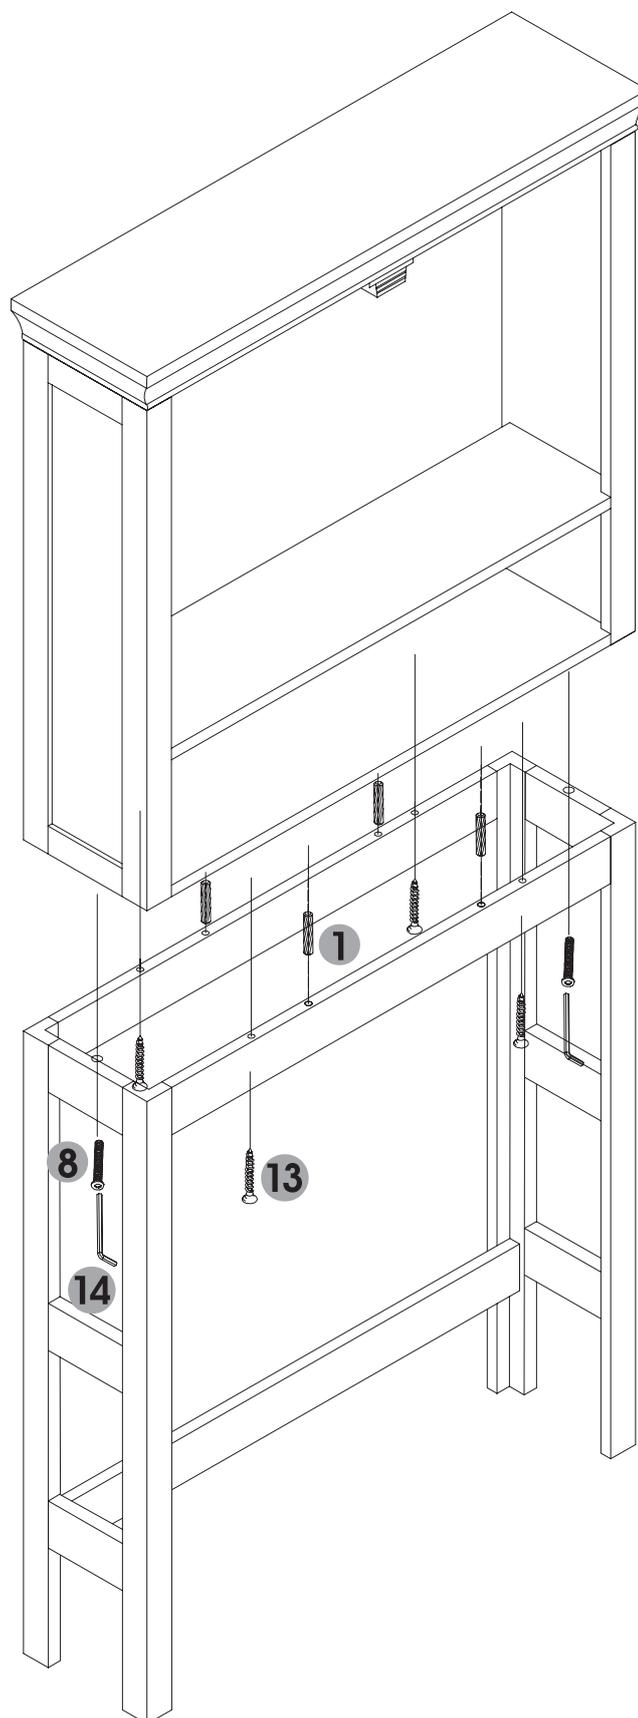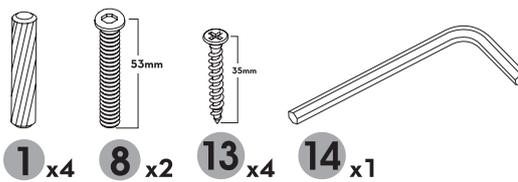

in Step 8 you need

L **M**

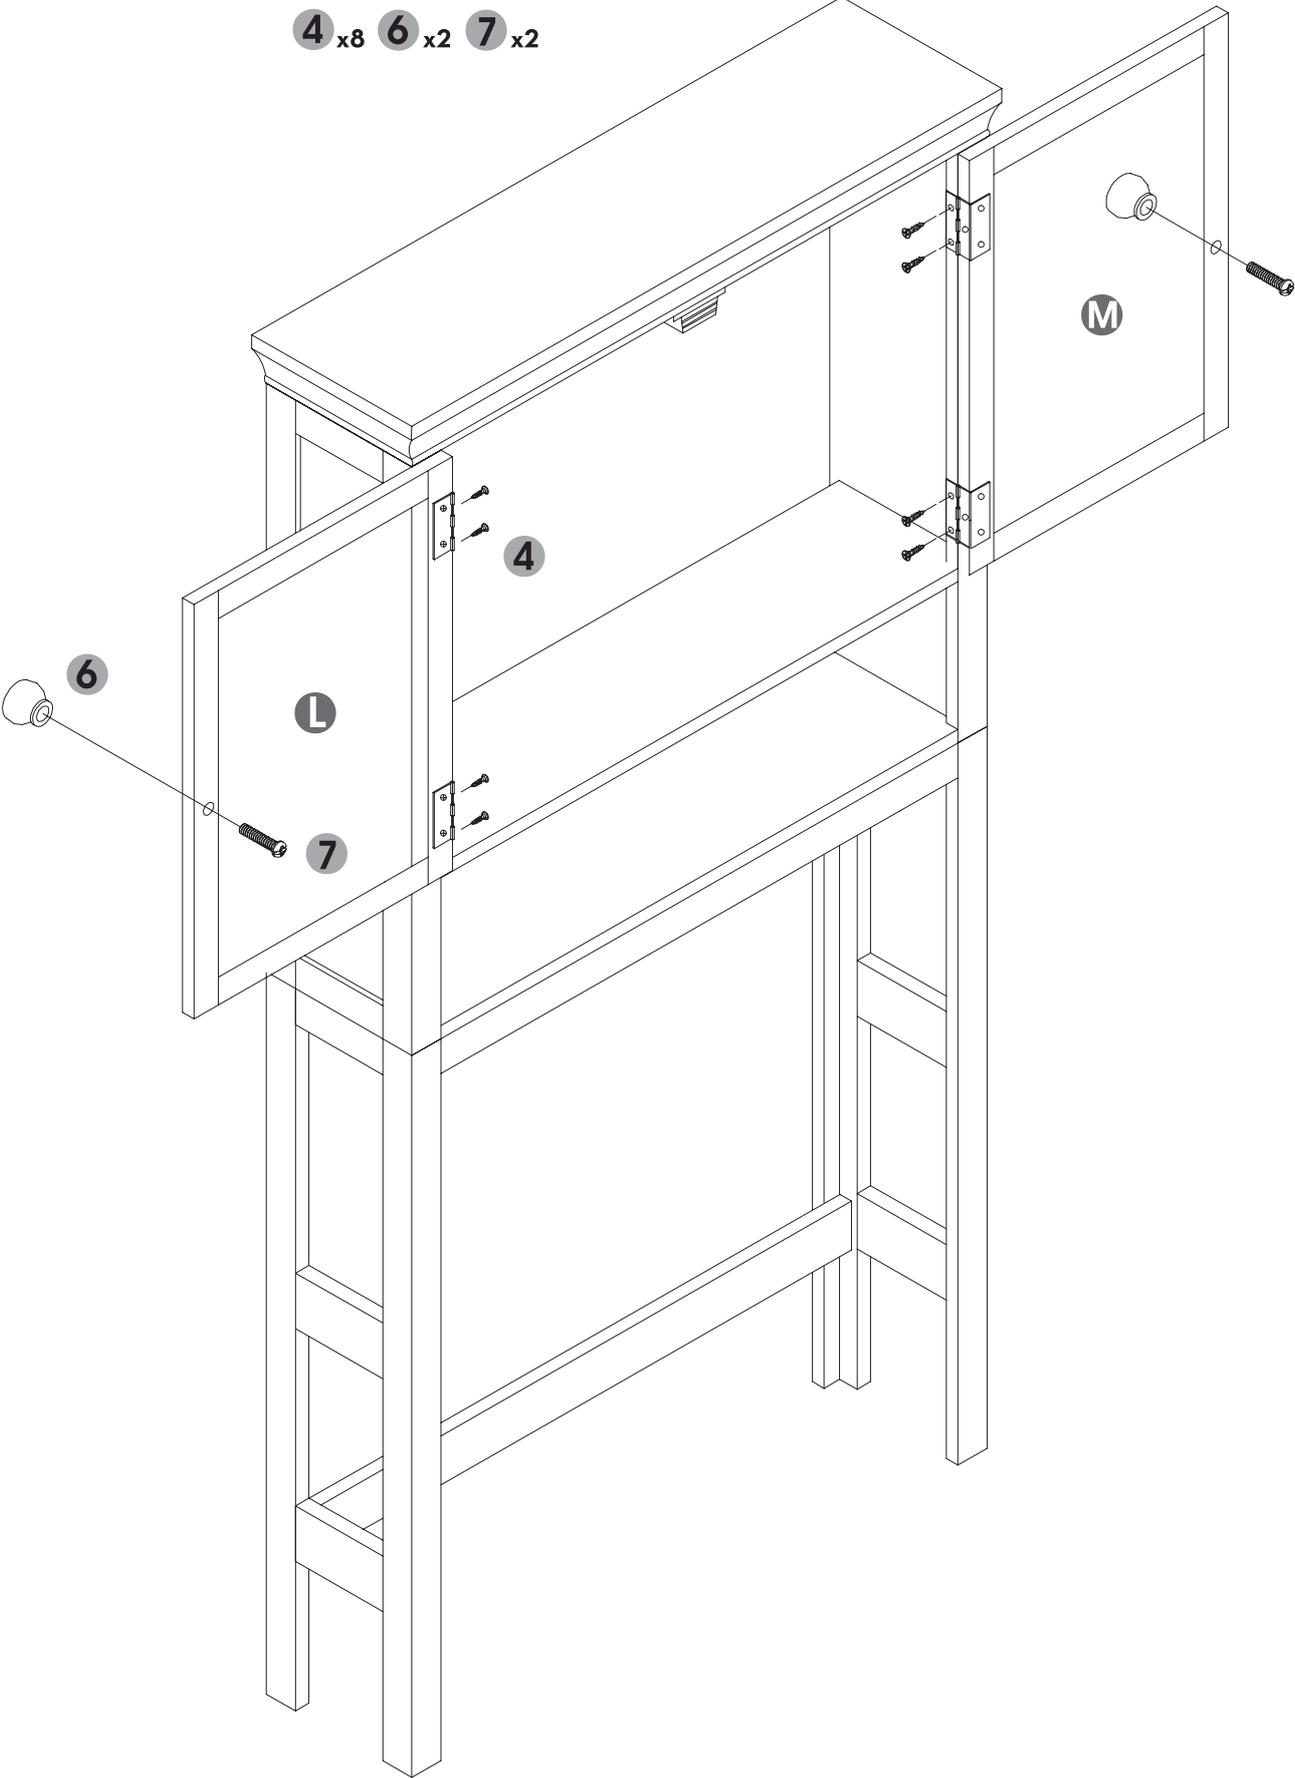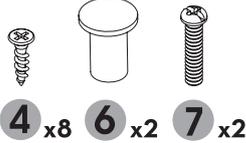


in **Step 9** you need



N



5 x4


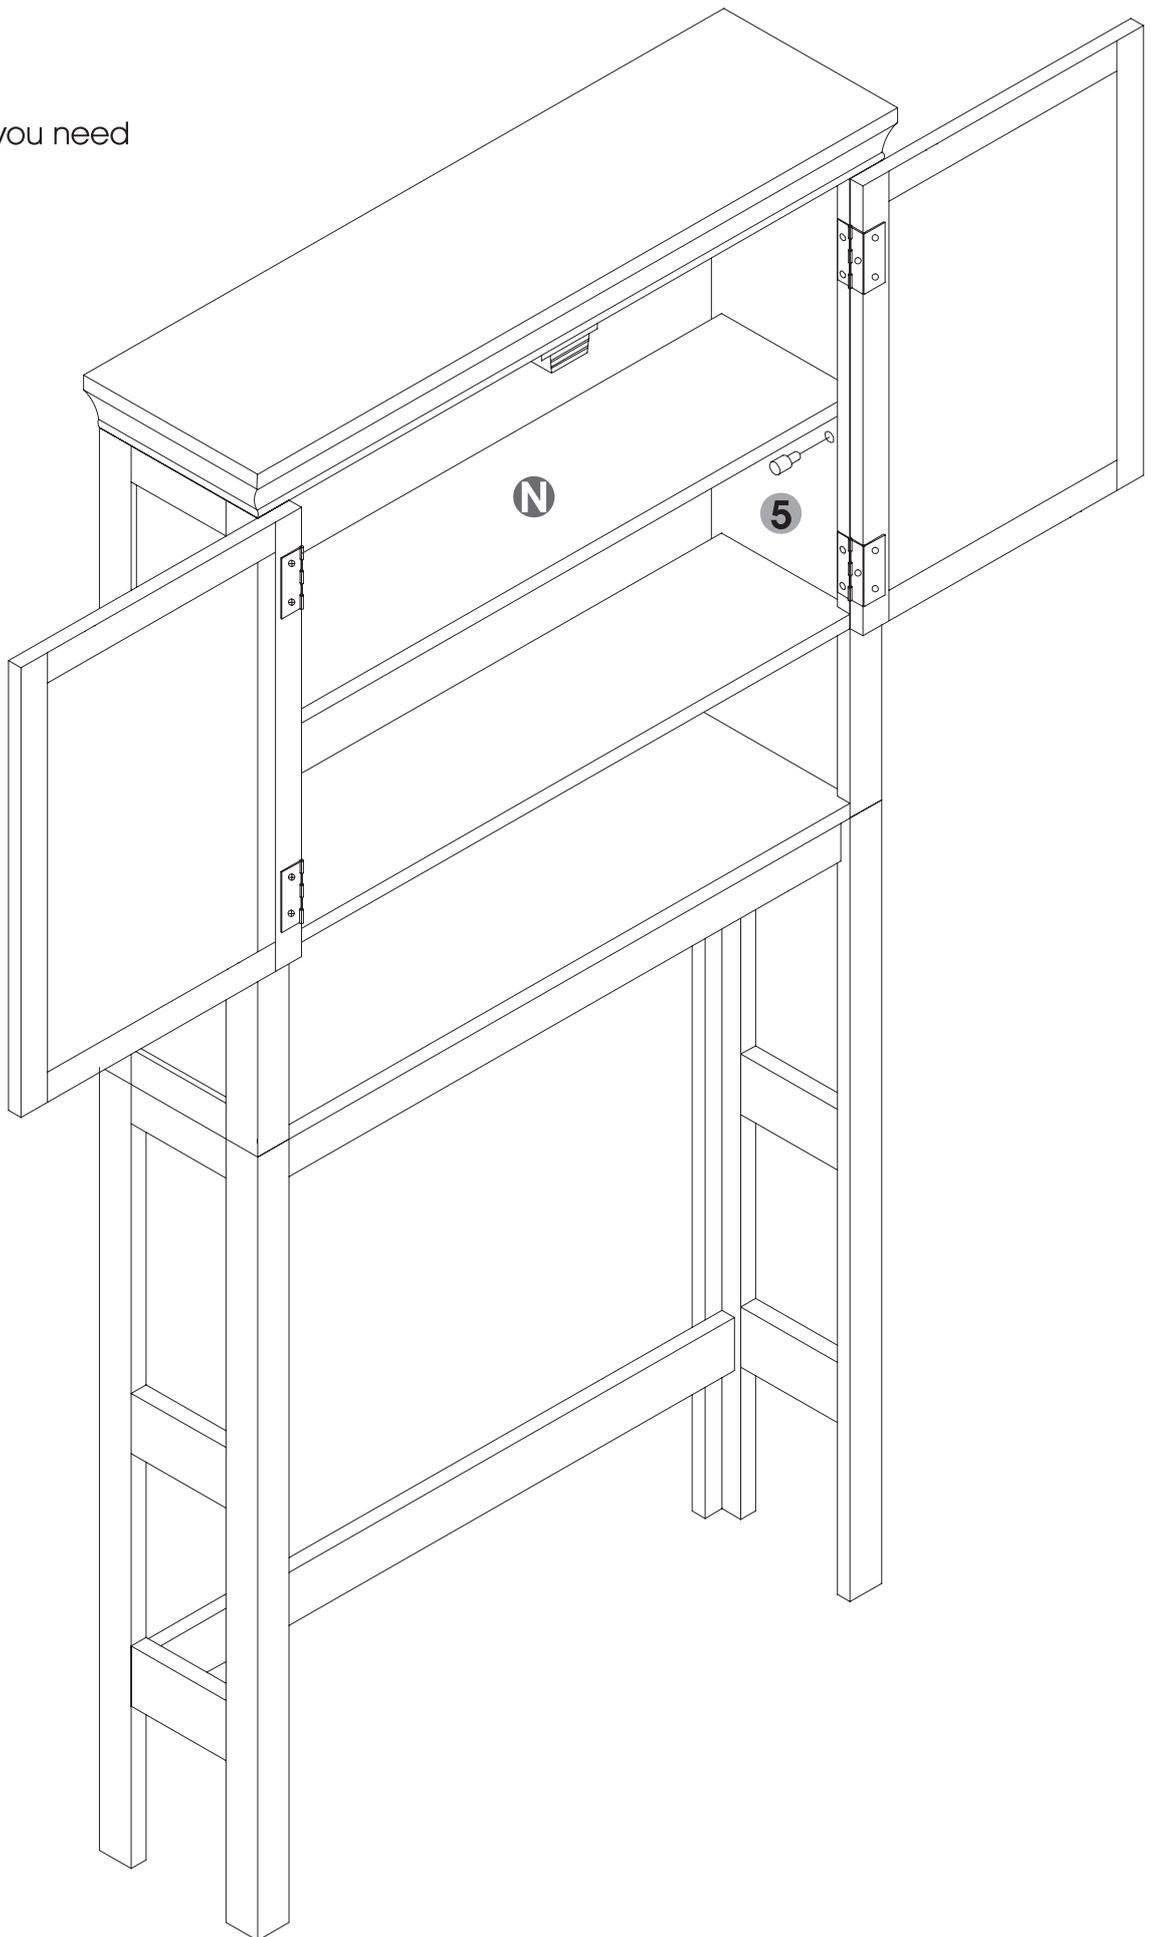


in **Step 10** you need

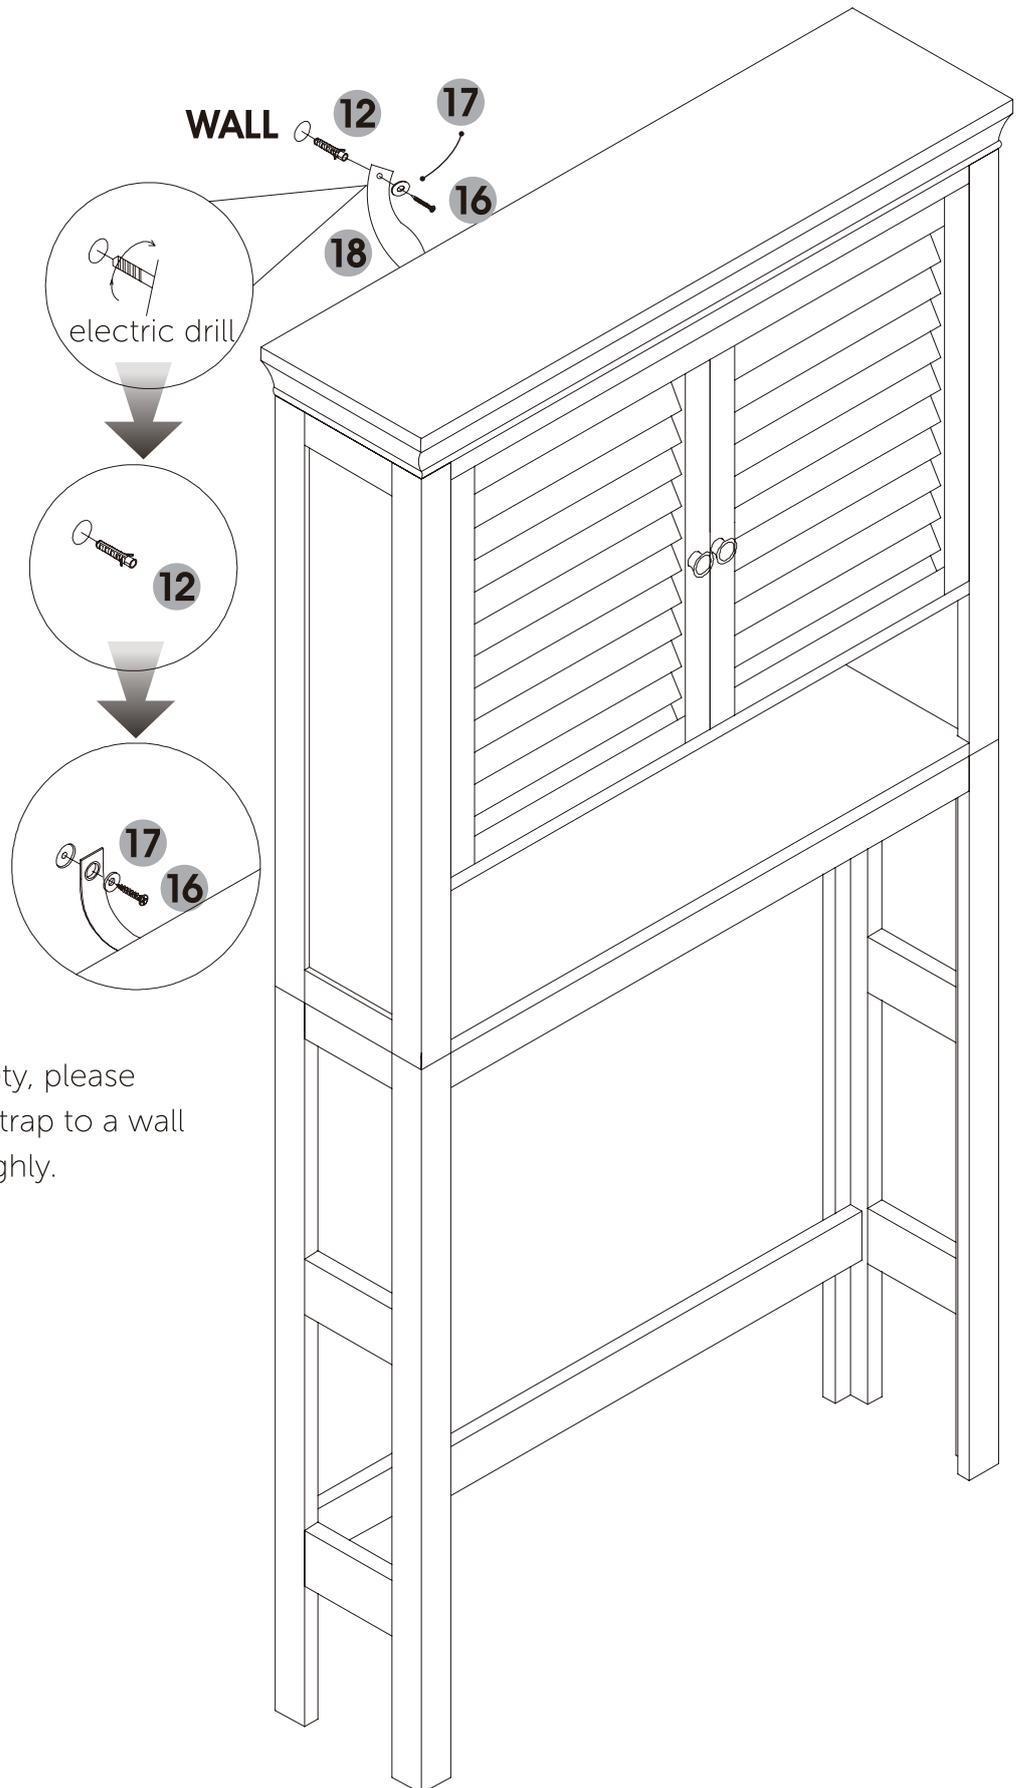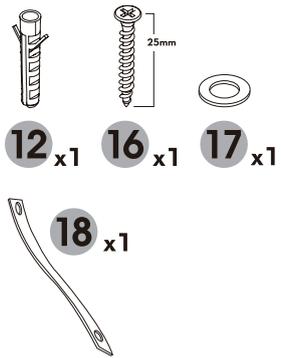

For your safety, please
secure anchor-strap to a wall
thoroughly.


in **Step 11** you need

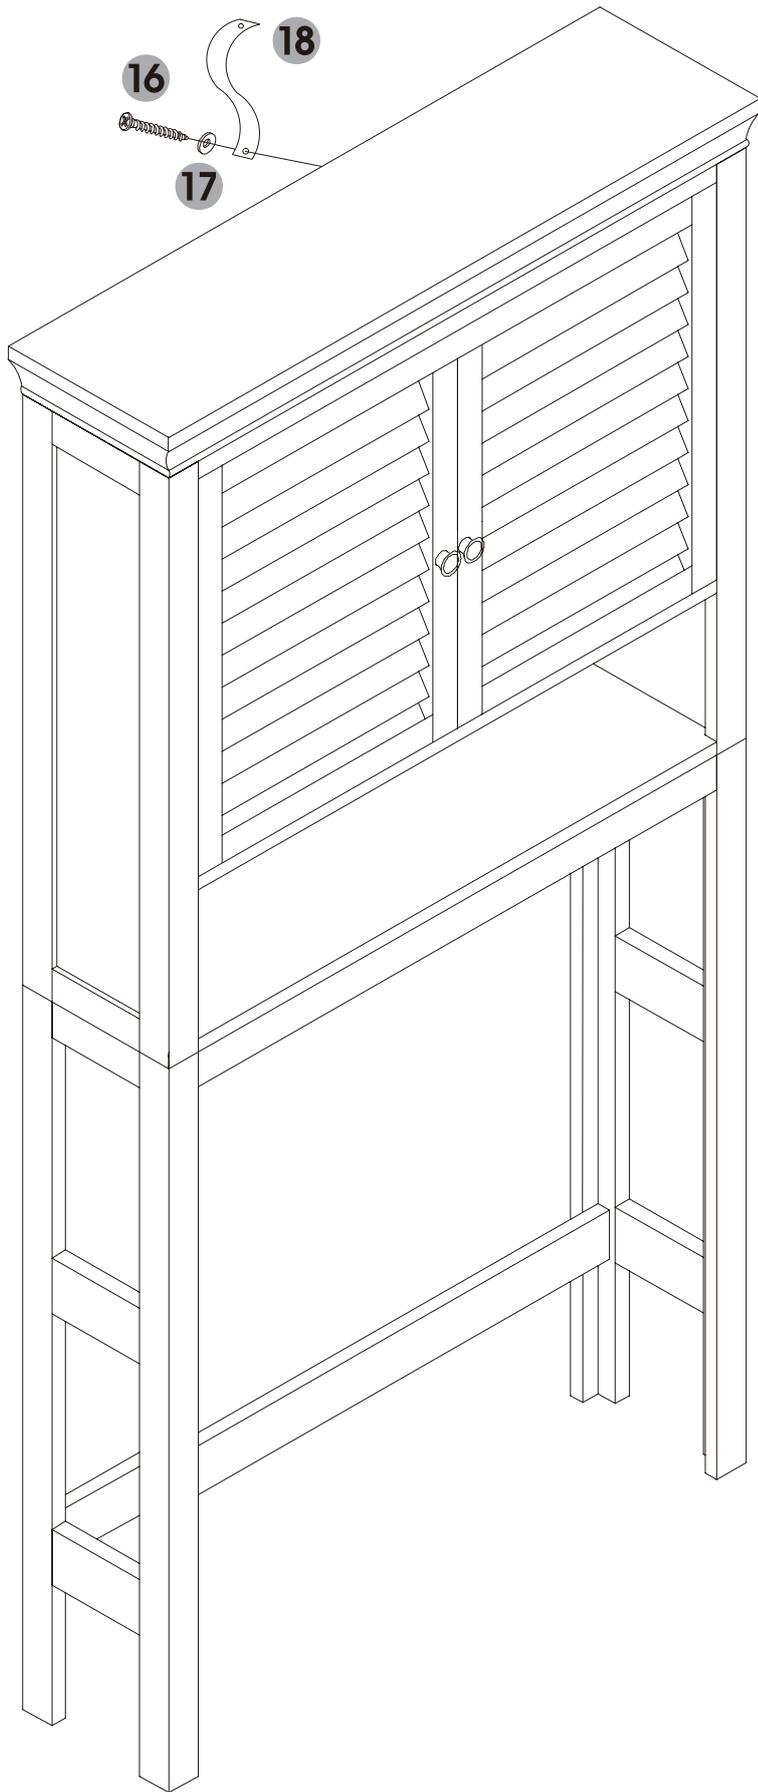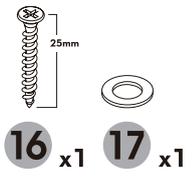


in Step 12 you need



12 x2



13 x2

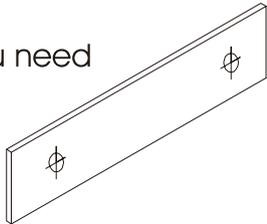

15 x1

WALL

15

12

13

