


Before You Start

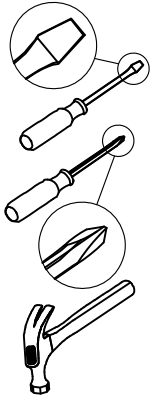

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

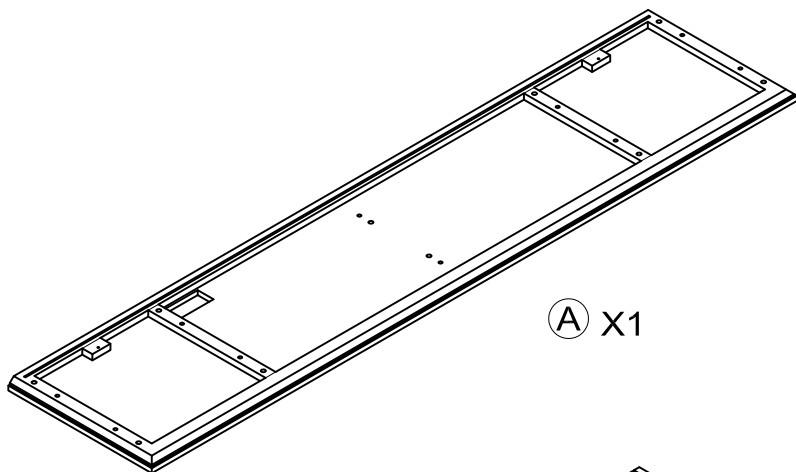


(A) X1

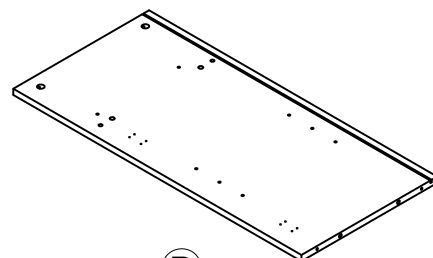


(B) X1

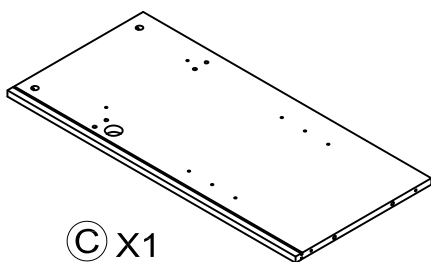


(C) X1

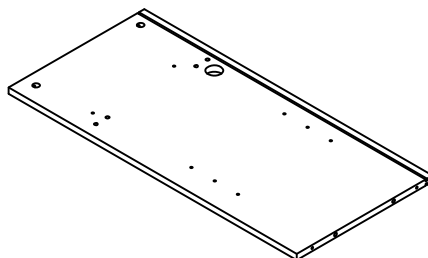


(D) X1

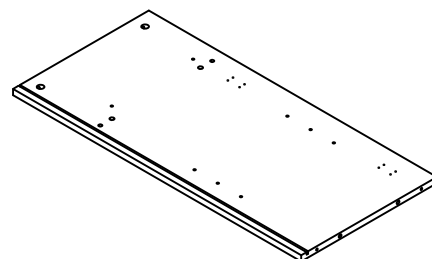


(E) X1




(F) X4

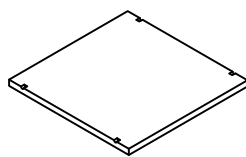


(G) X2

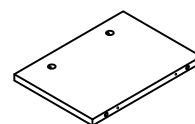


(H) X1

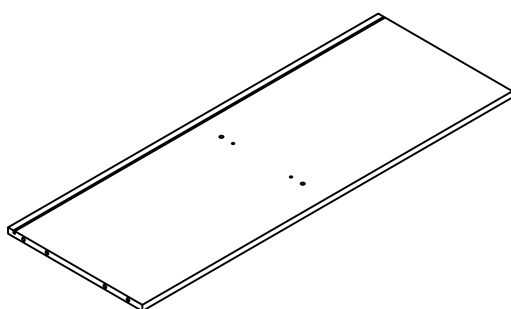

(I) X1

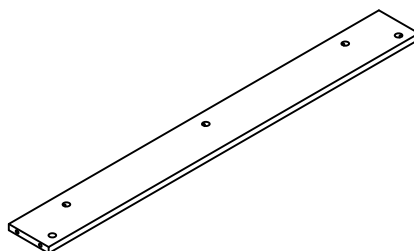


(J) X1




(K) X1

Board Identification


Not actual size




Ⓛ X1

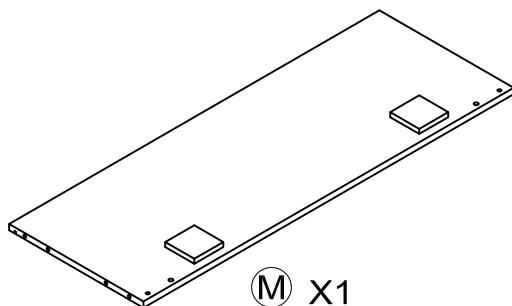


Ⓜ X1

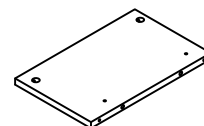


Ⓝ X1

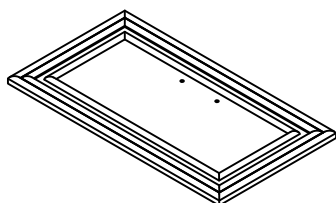


Ⓞ X2

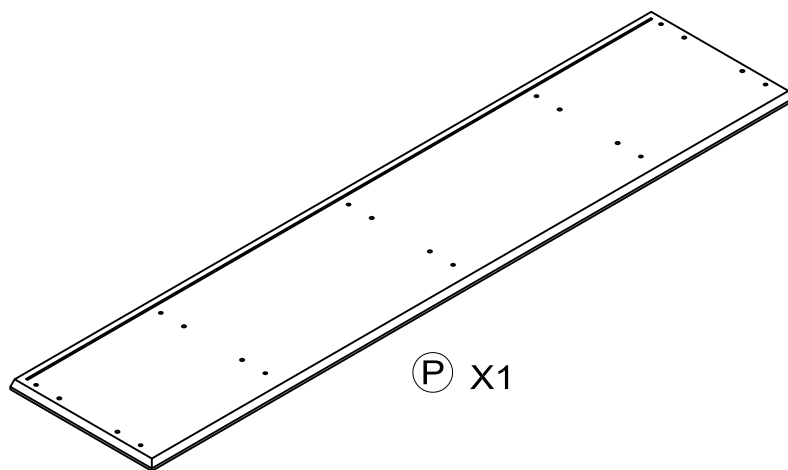


Ⓟ X1

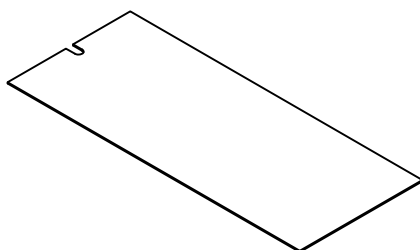


Ⓠ X2

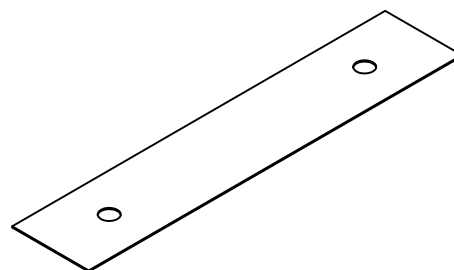


Ⓡ X1

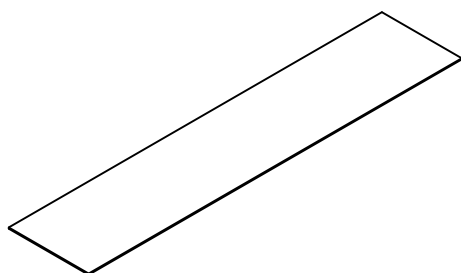

Ⓢ X1




Ⓣ X1




Ⓤ X1

Board Identification


Not actual size




Ⓥ X1

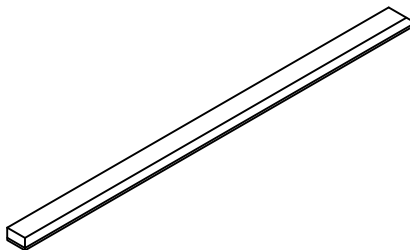


Ⓦ X1

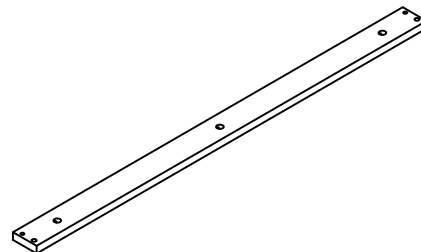


ⓧ X1




Ⓨ X1




Ⓩ X1




ⒶⒶ X1




ⒷⒷ X4




ⒸⒸ X4




ⒹⒹ X2

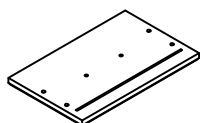

ⒺⒺ X2

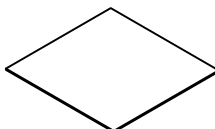


ⒻⒻ X2

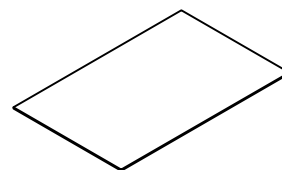


ⒼⒼ X2

Board Identification


Not actual size

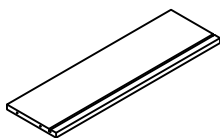

Ⓜ X2

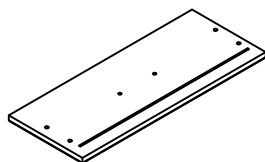


Ⓜ X1

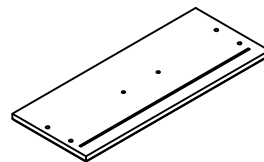


Ⓜ X1


Part List

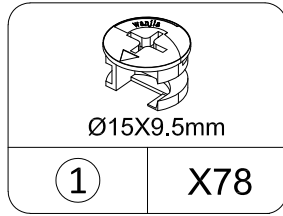


CAM LOCK
spare:2

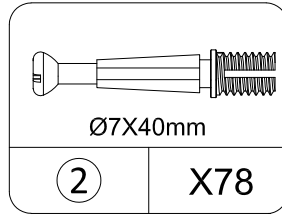


CAM BOLT
spare:2

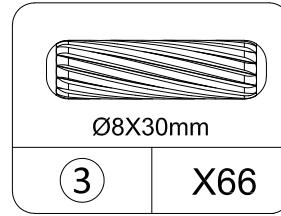


WOODEN DOWEL
spare:2

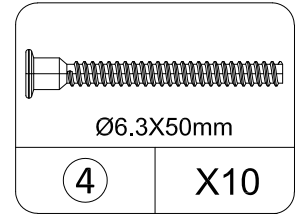


SCREW
spare:1

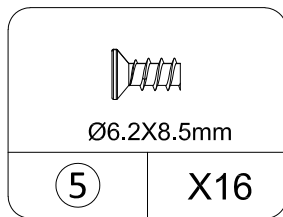


SCREW
spare:1

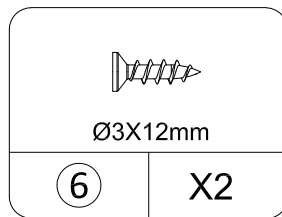


SCREW
spare:1

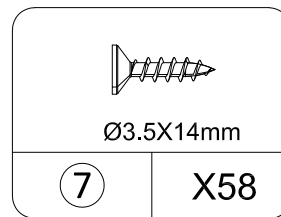


SCREW
spare:2

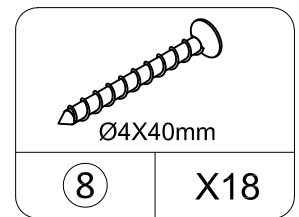


SCREW
spare:1

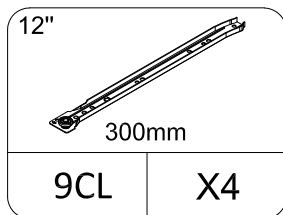


LEFT CABINET MEMBER

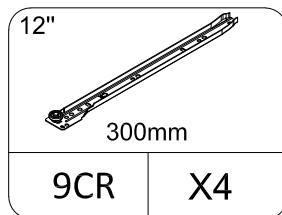


RIGHT CABINET MEMBER

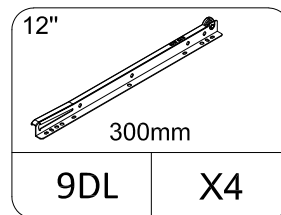


LEFT DRAWER RUNNER

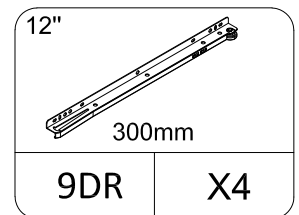


RIGHT DRAWER RUNNER

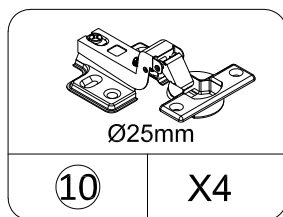


HINGE

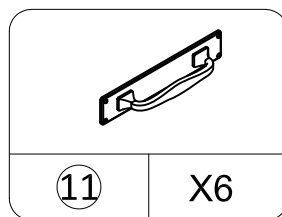


HANDLE

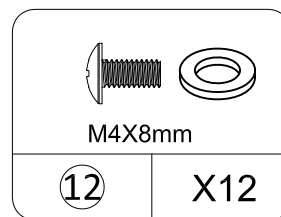


SCREW
spare:1

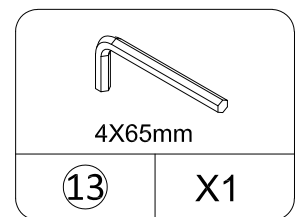


HEX KEY

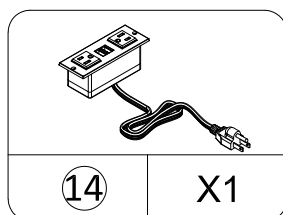


PLUG BOARD

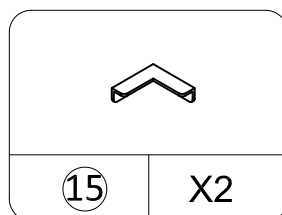

CORNER BUMPER

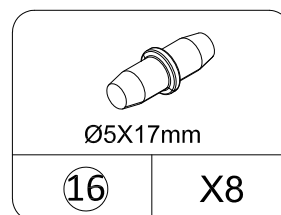


SHELF SUPPORT
spare:1

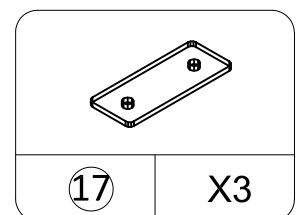


METAL PLANT


Part List

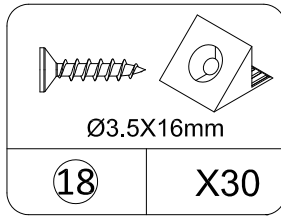


BACKBOARD BUCKLE

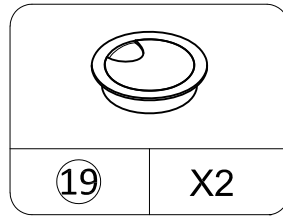

CABLE COVER

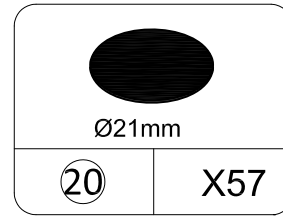


PERFECT STICKER
apare:3

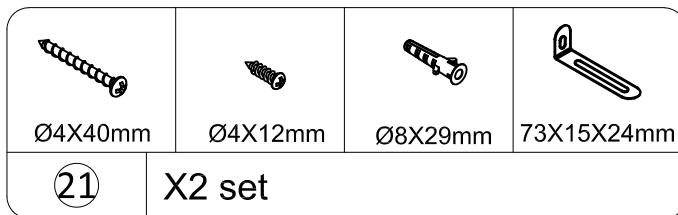

ANTI-TIPPING HARDWARE


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.



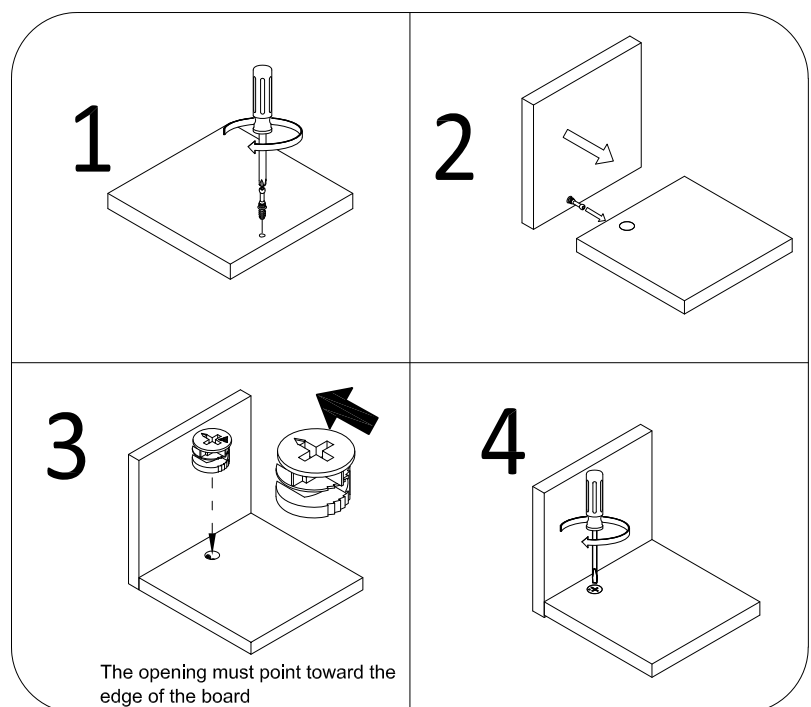


Board Identification

Not actual size






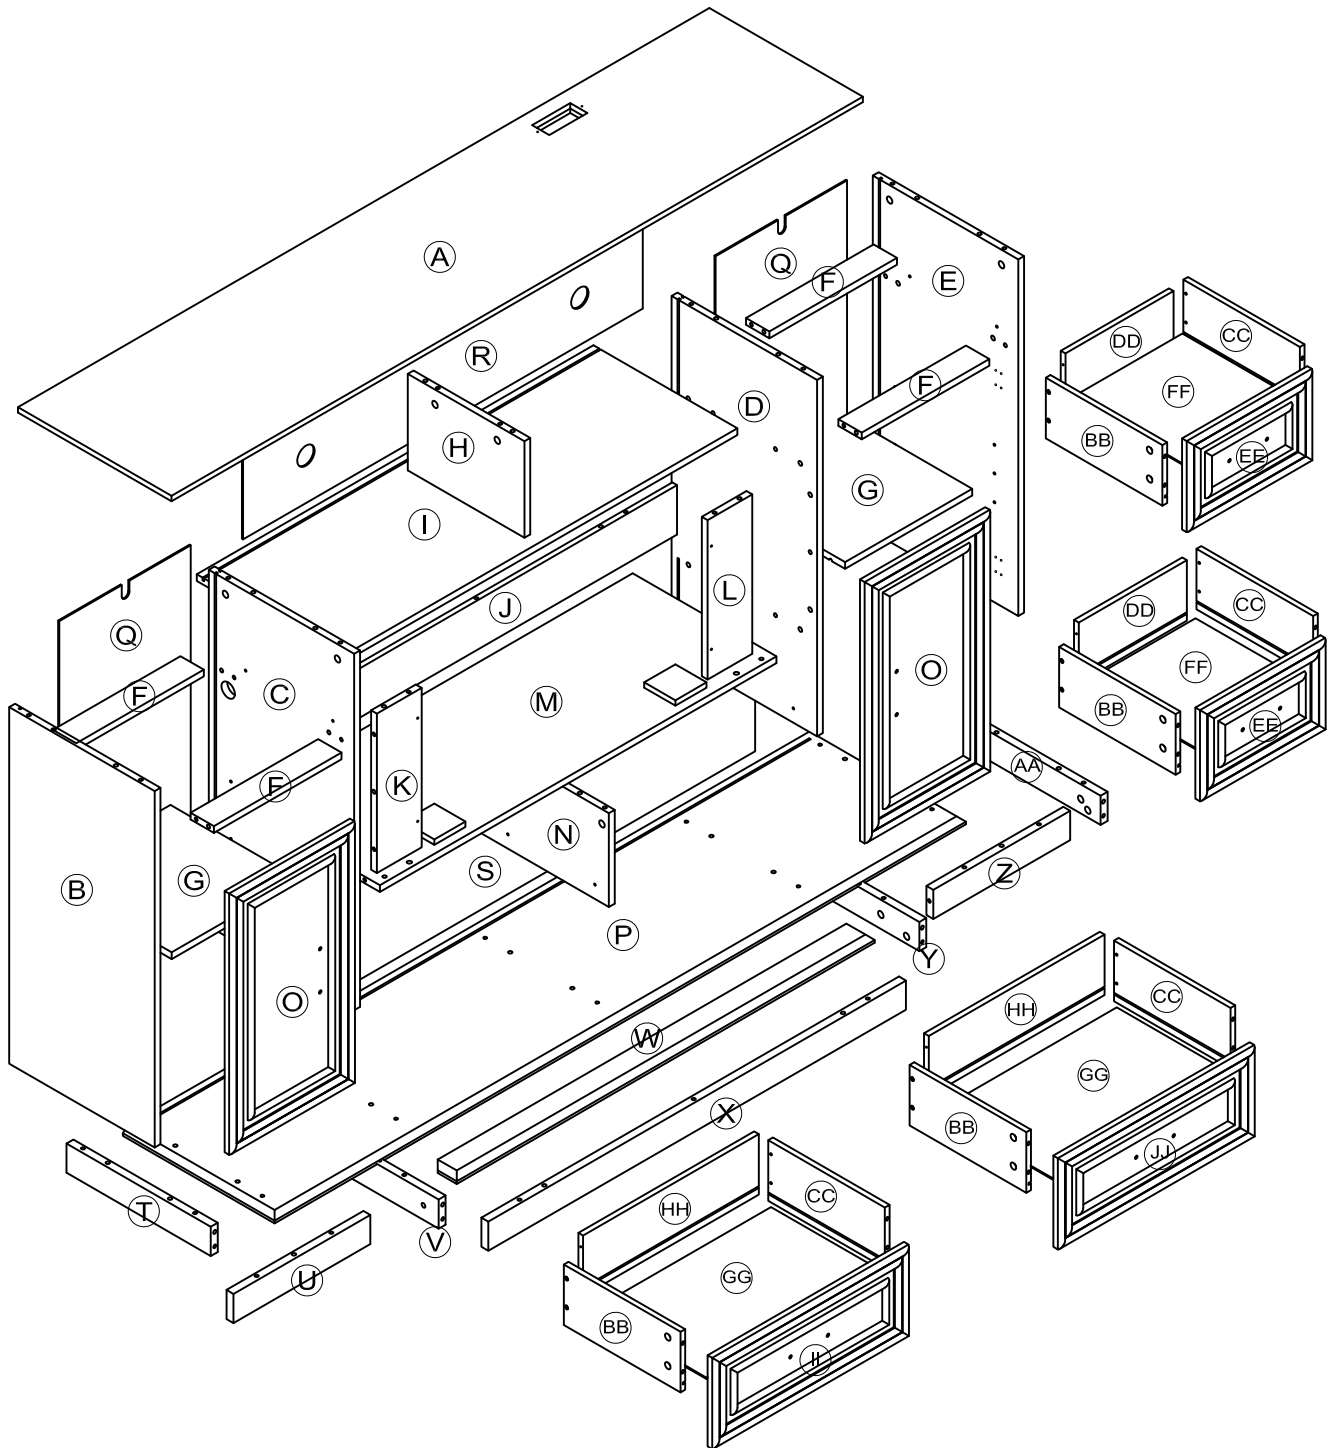


STEP1

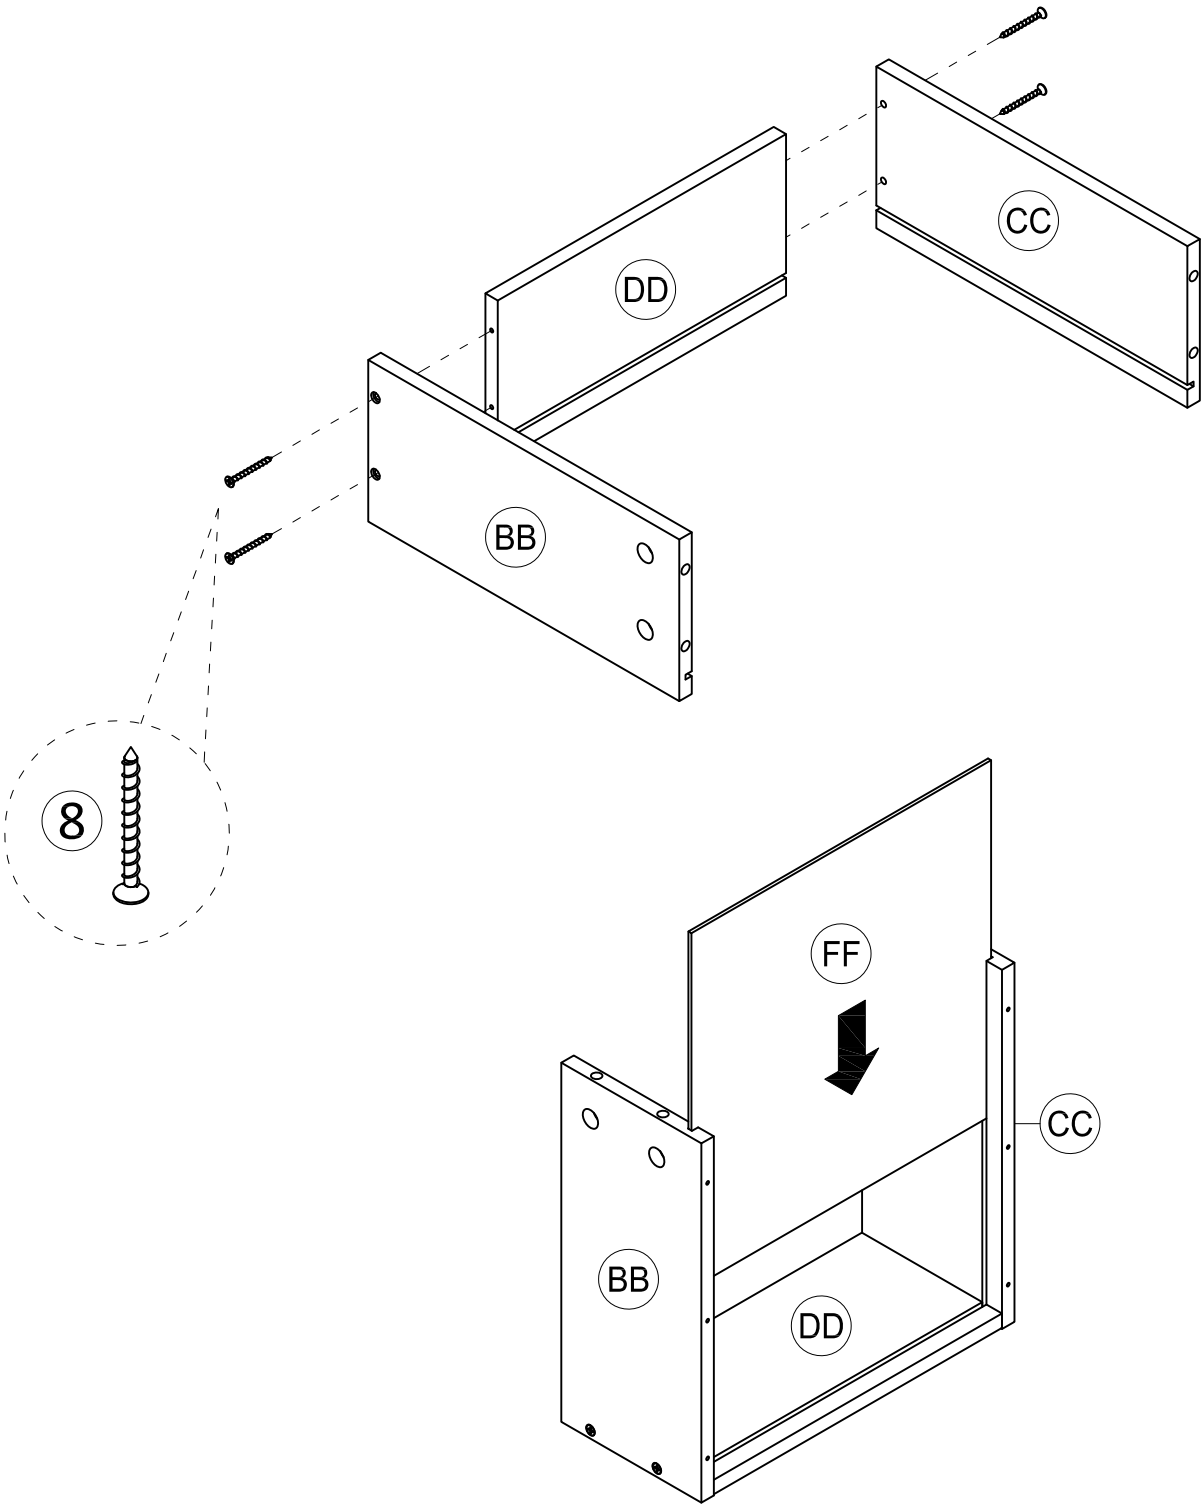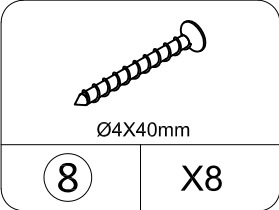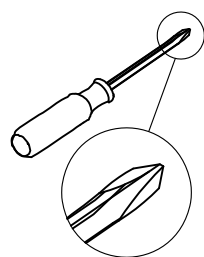



x 2

STEP2

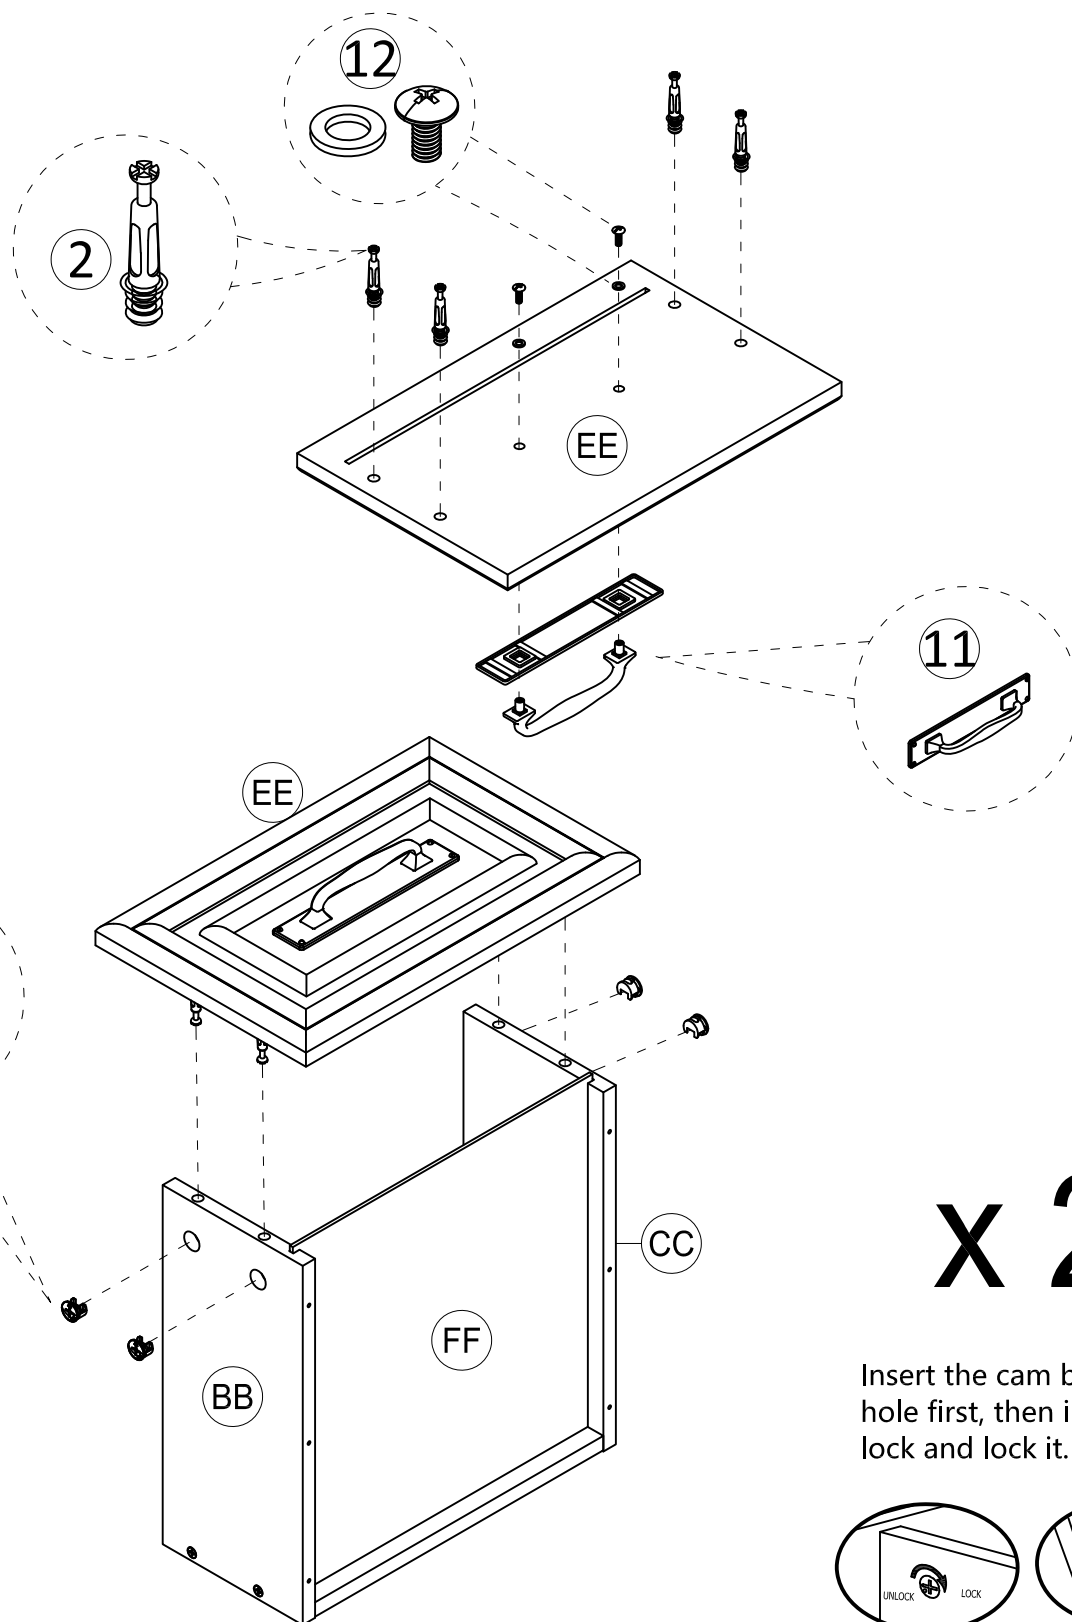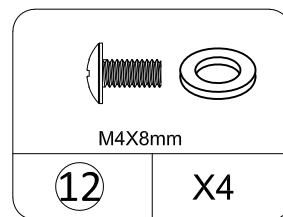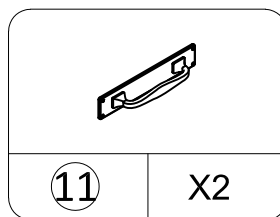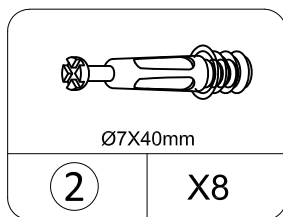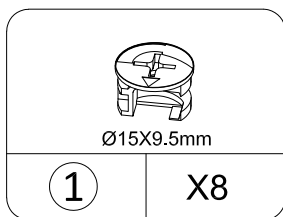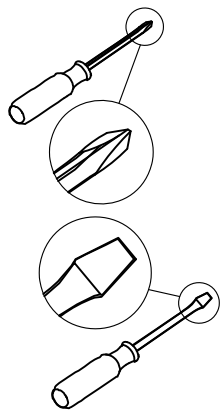







x 2

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

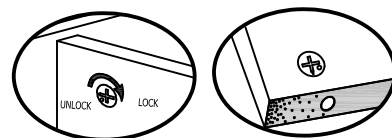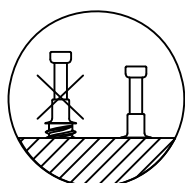




Proper orientation of CAM LOCK

STEP3

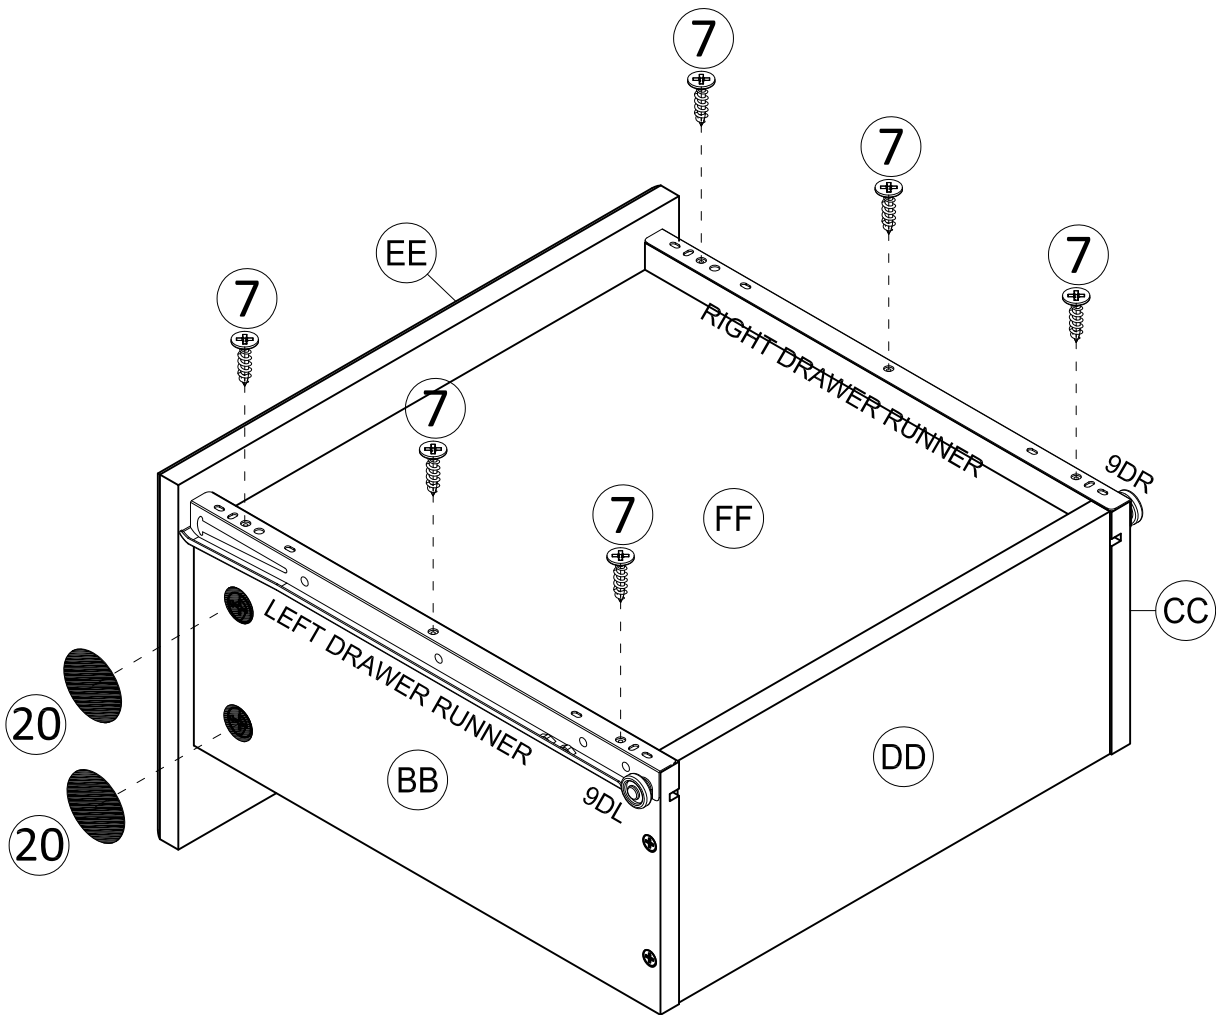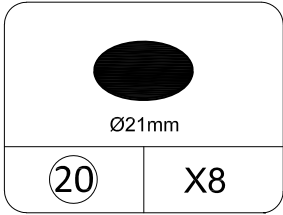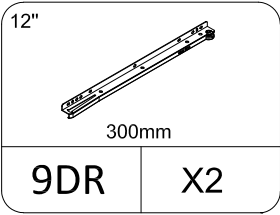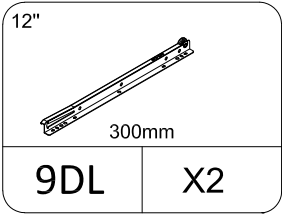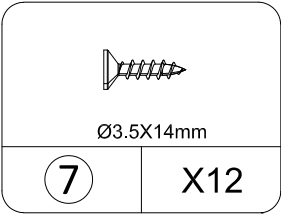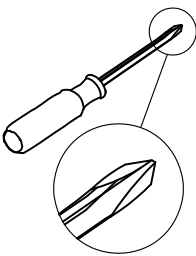









x 2

STEP4

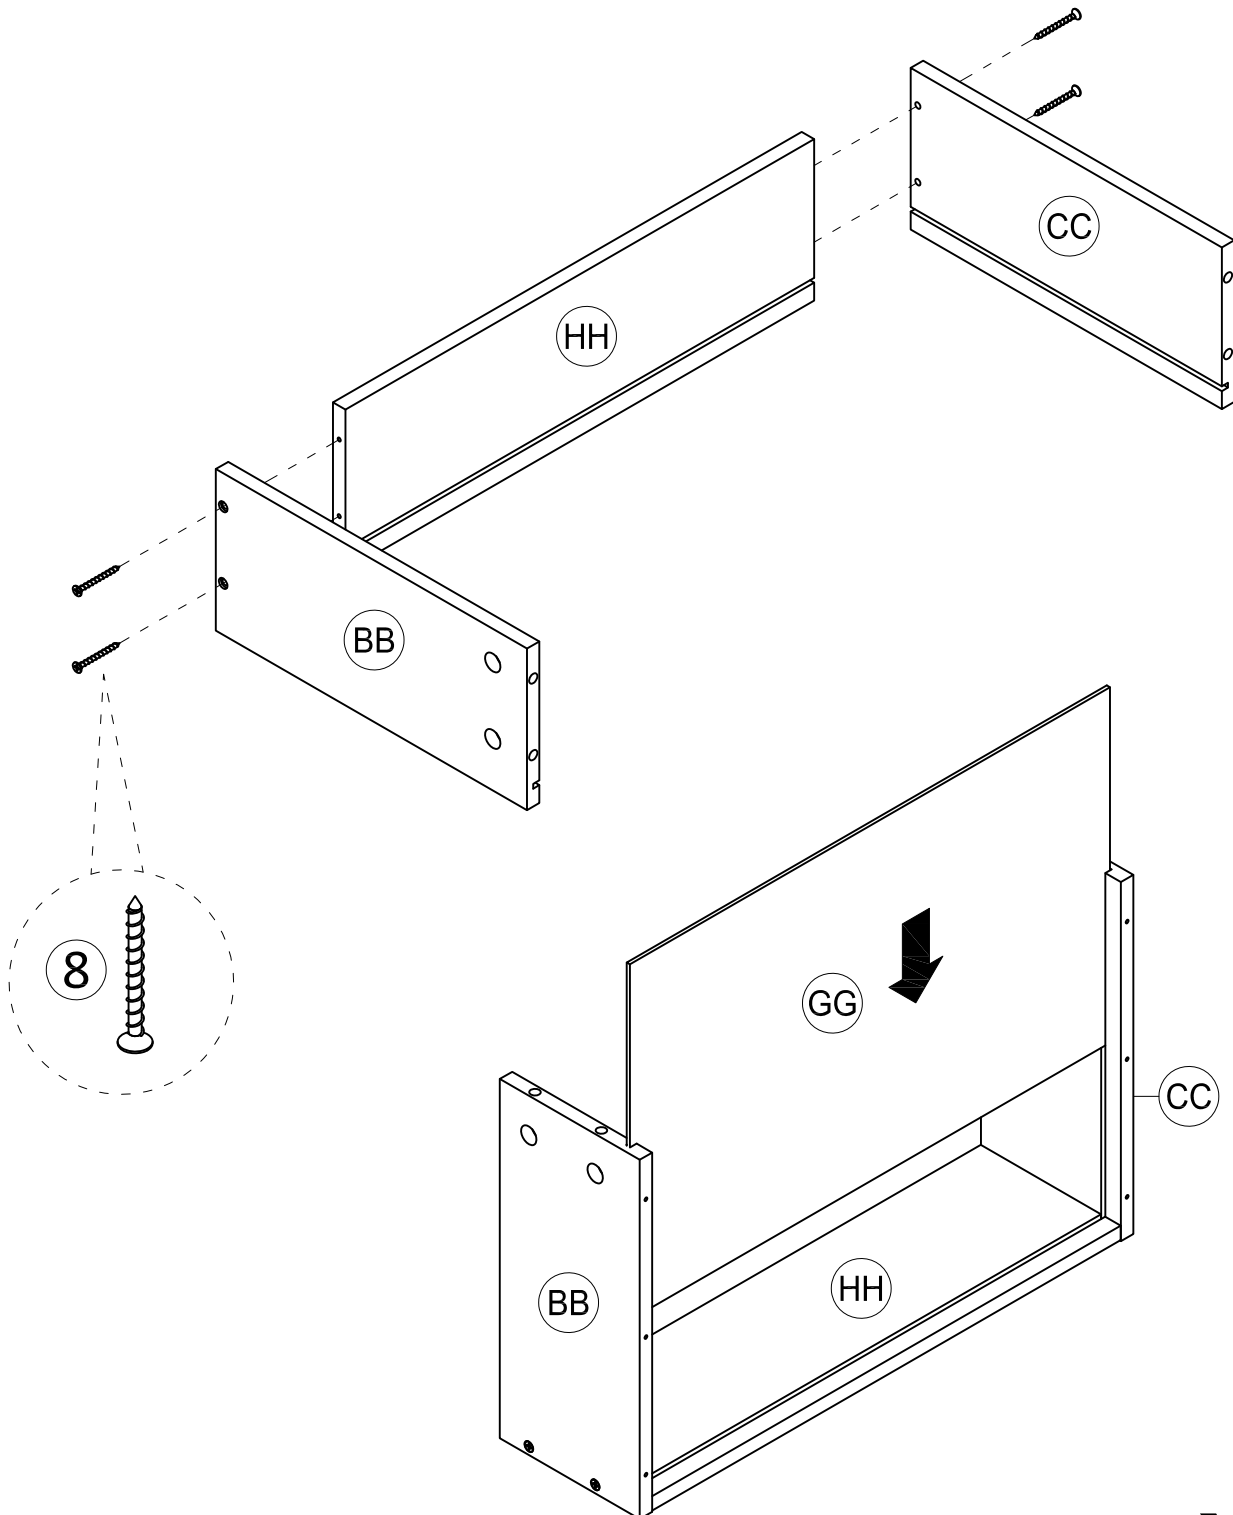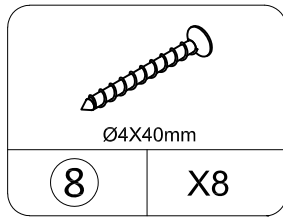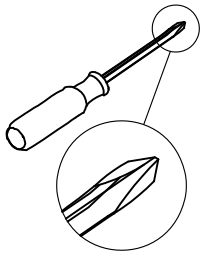


x 2

STEP5

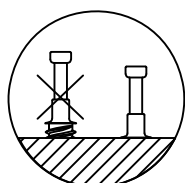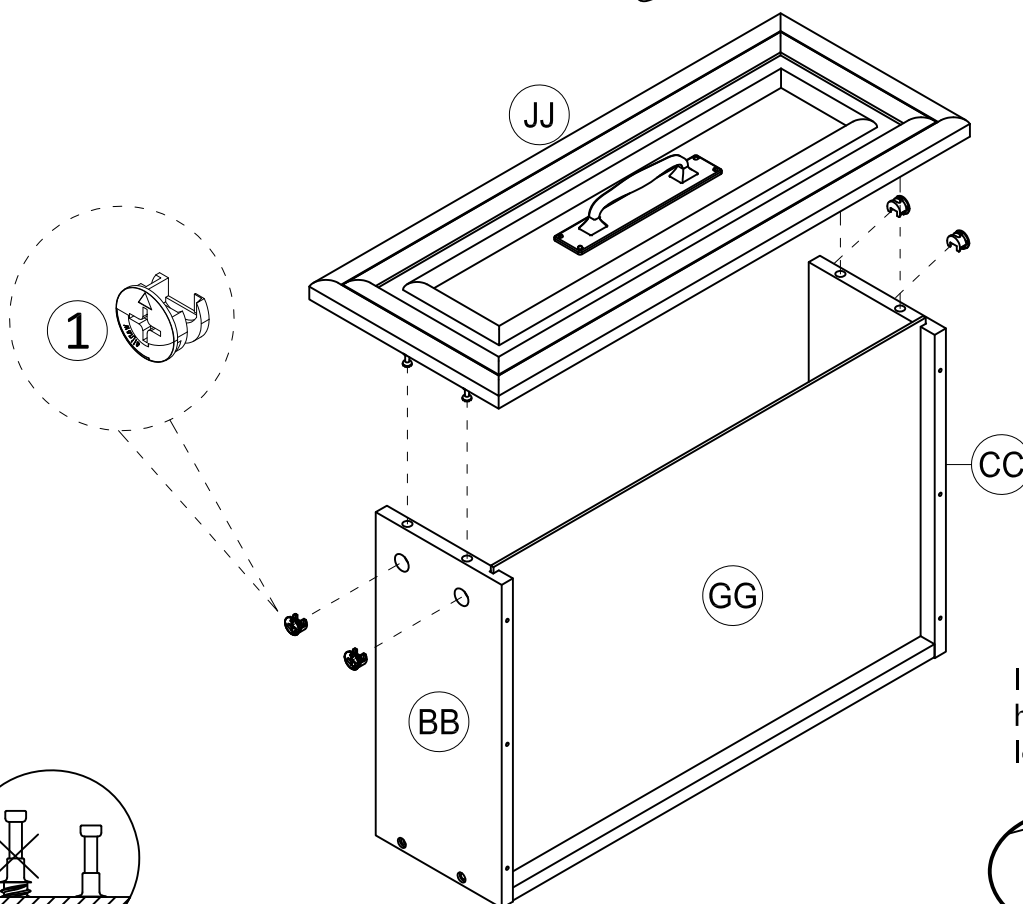
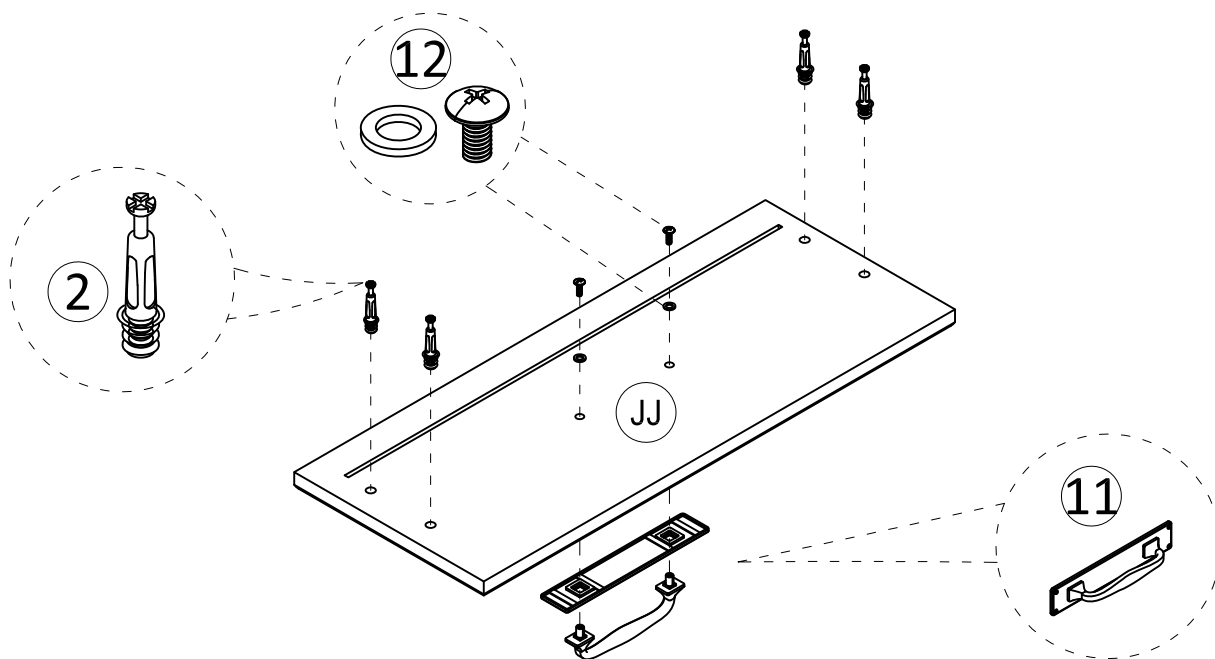
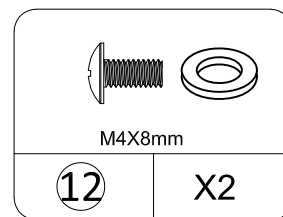
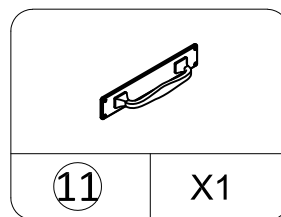
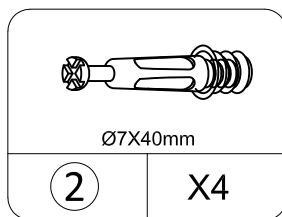
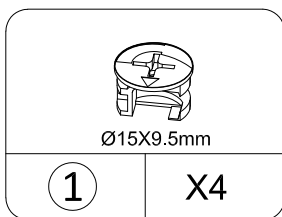
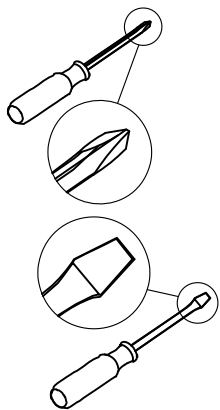


Insert the cam bolt into the hole first, then insert the cam lock and lock it.






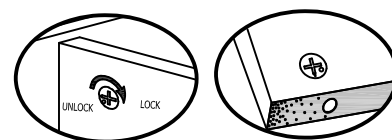


Proper orientation of CAM LOCK




STEP6

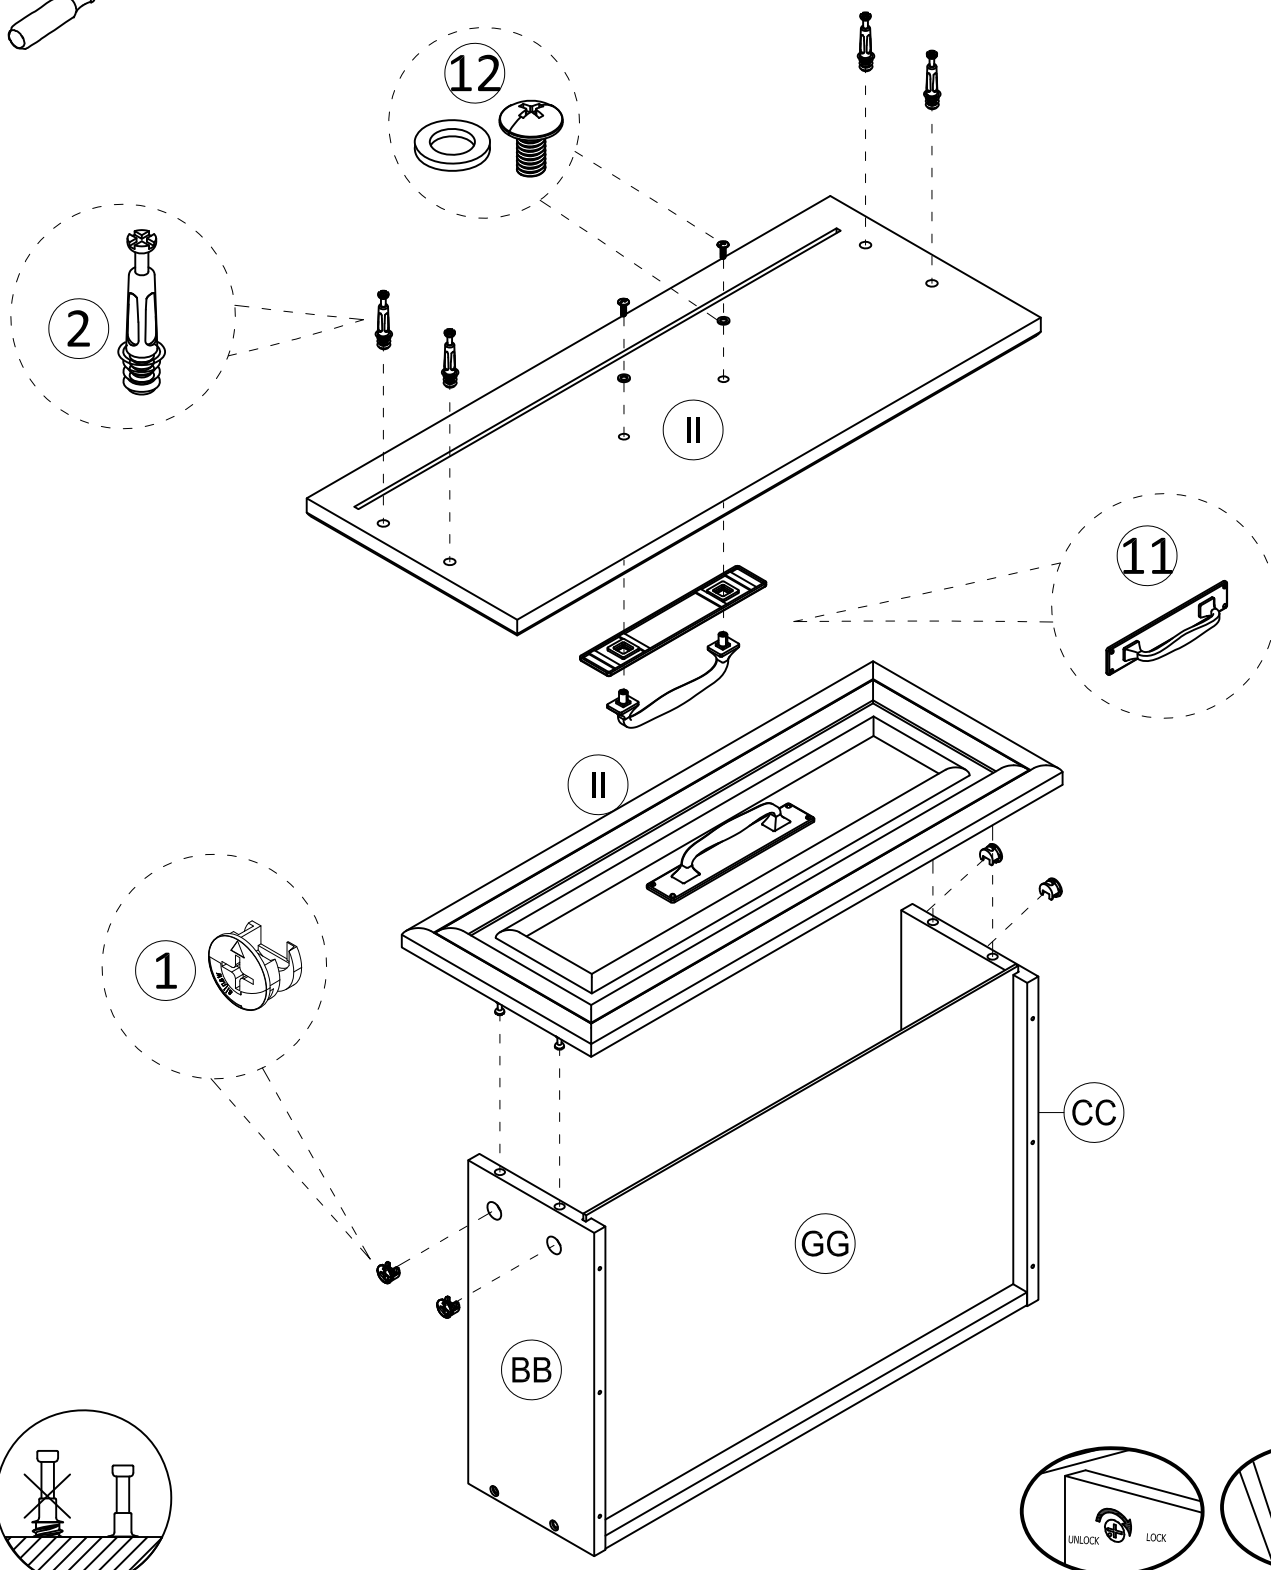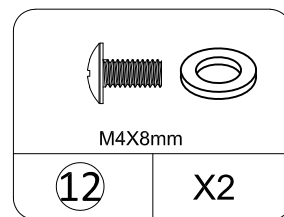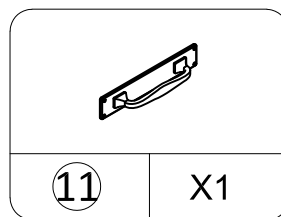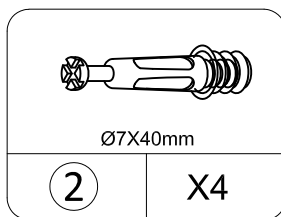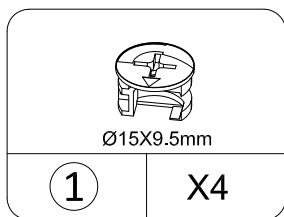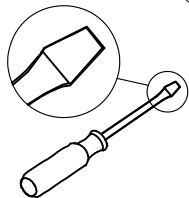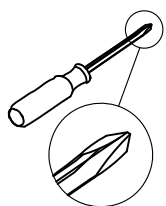







STEP 7

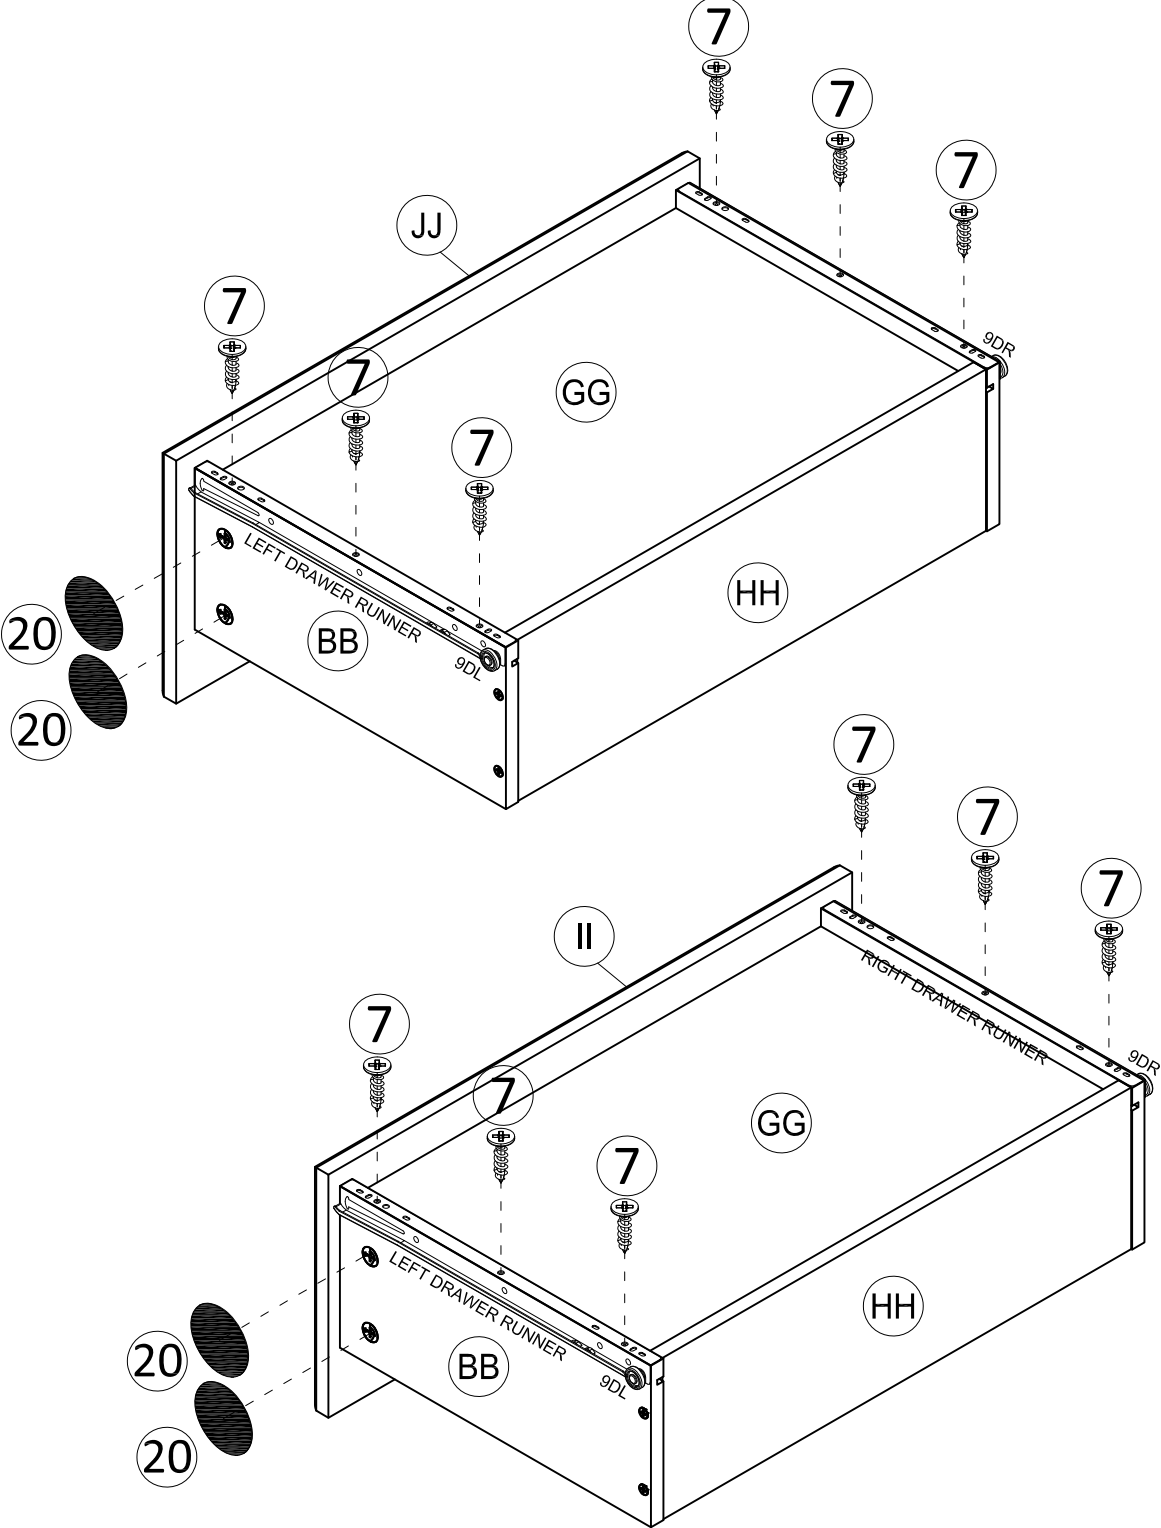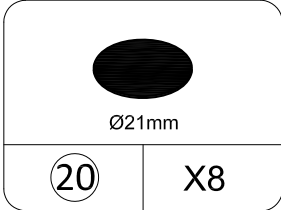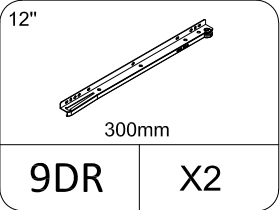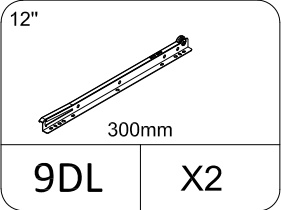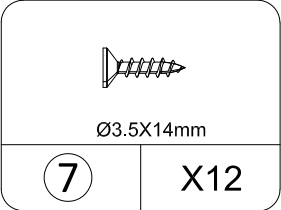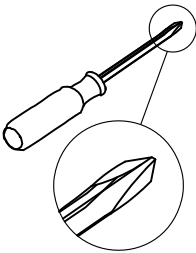


A line drawing of a screwdriver. A circular callout provides a magnified view of the tip, showing a sharp, double-fluted design.

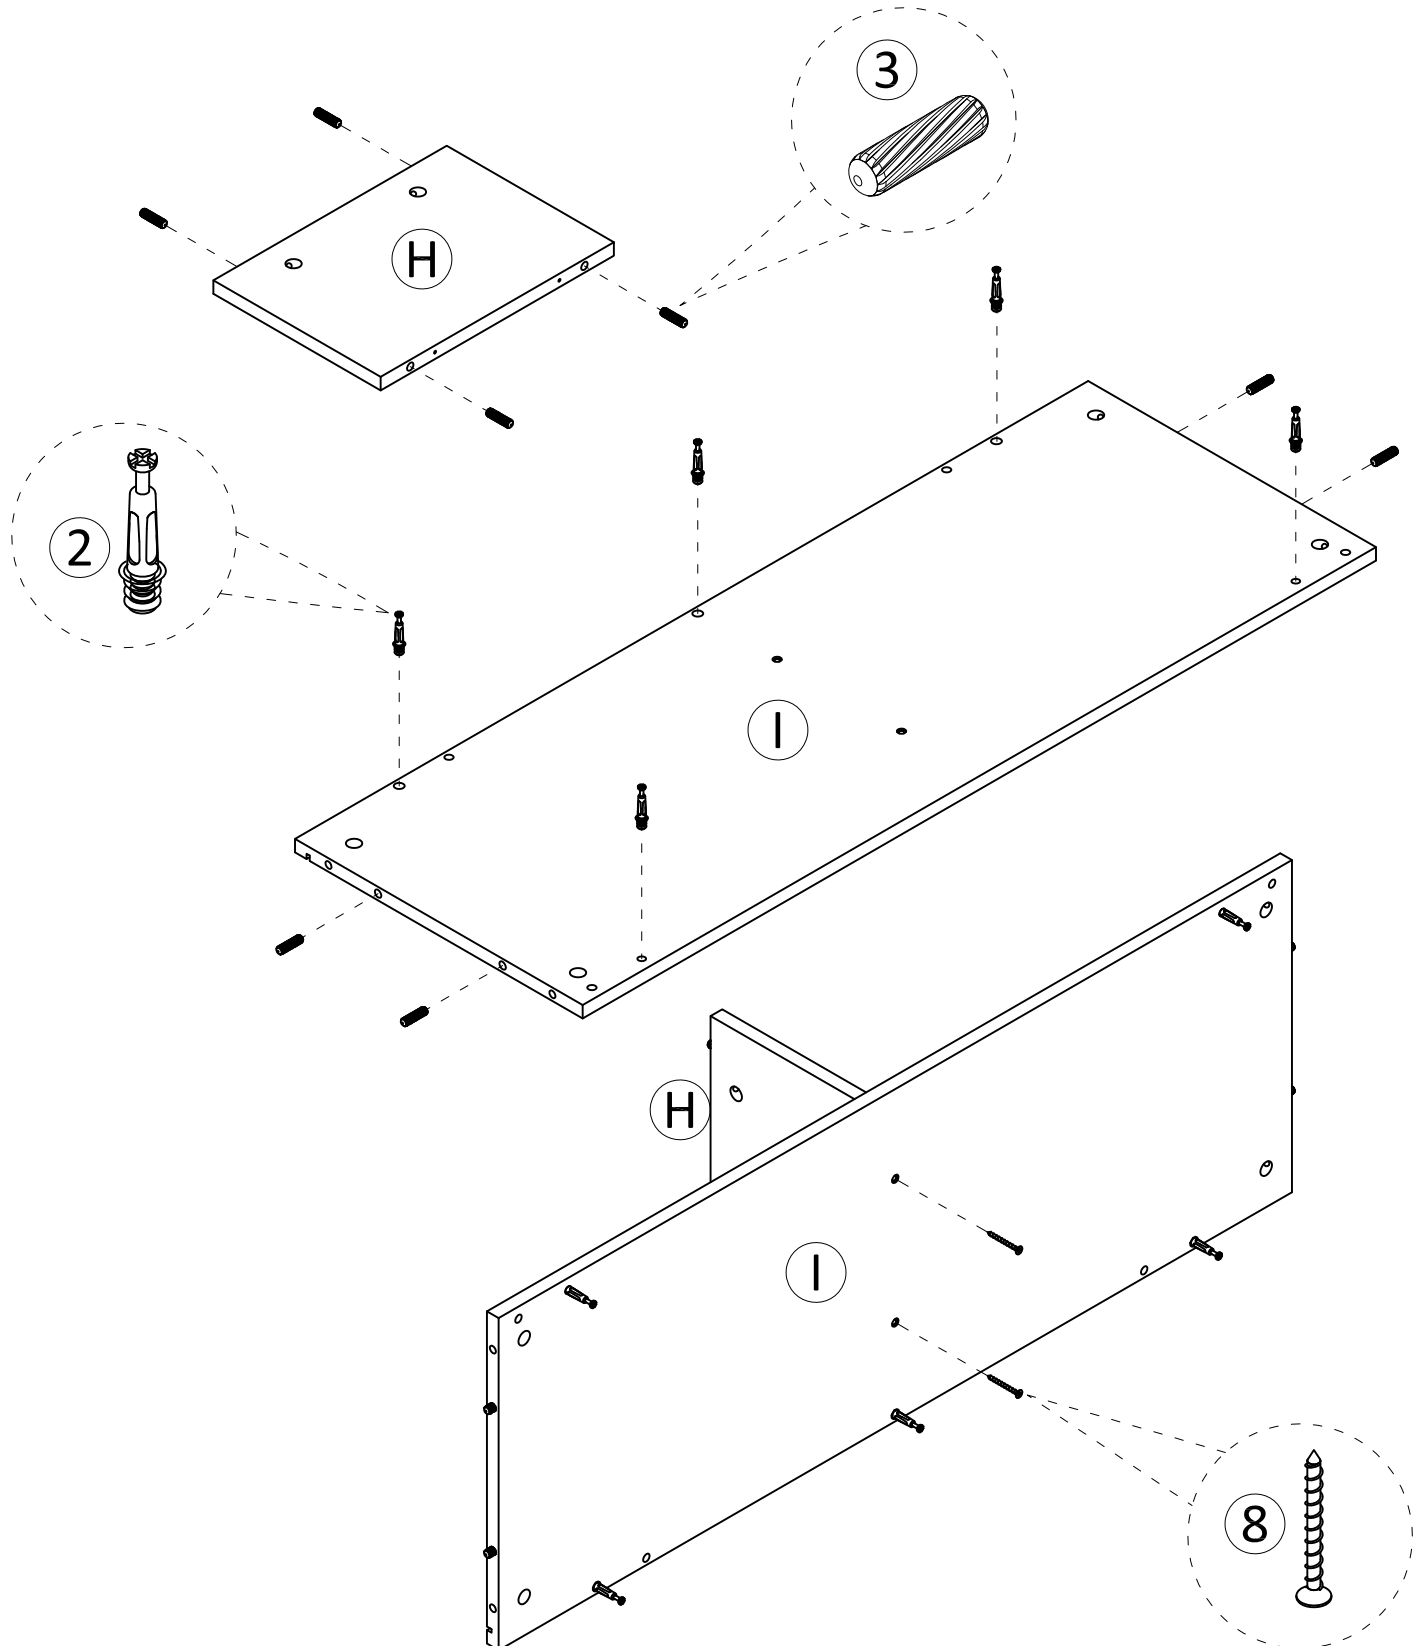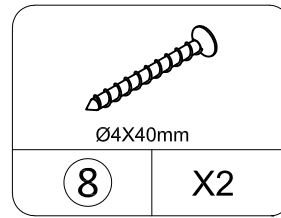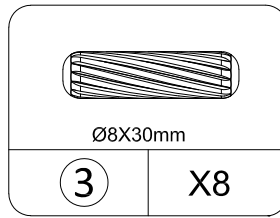

STEP9

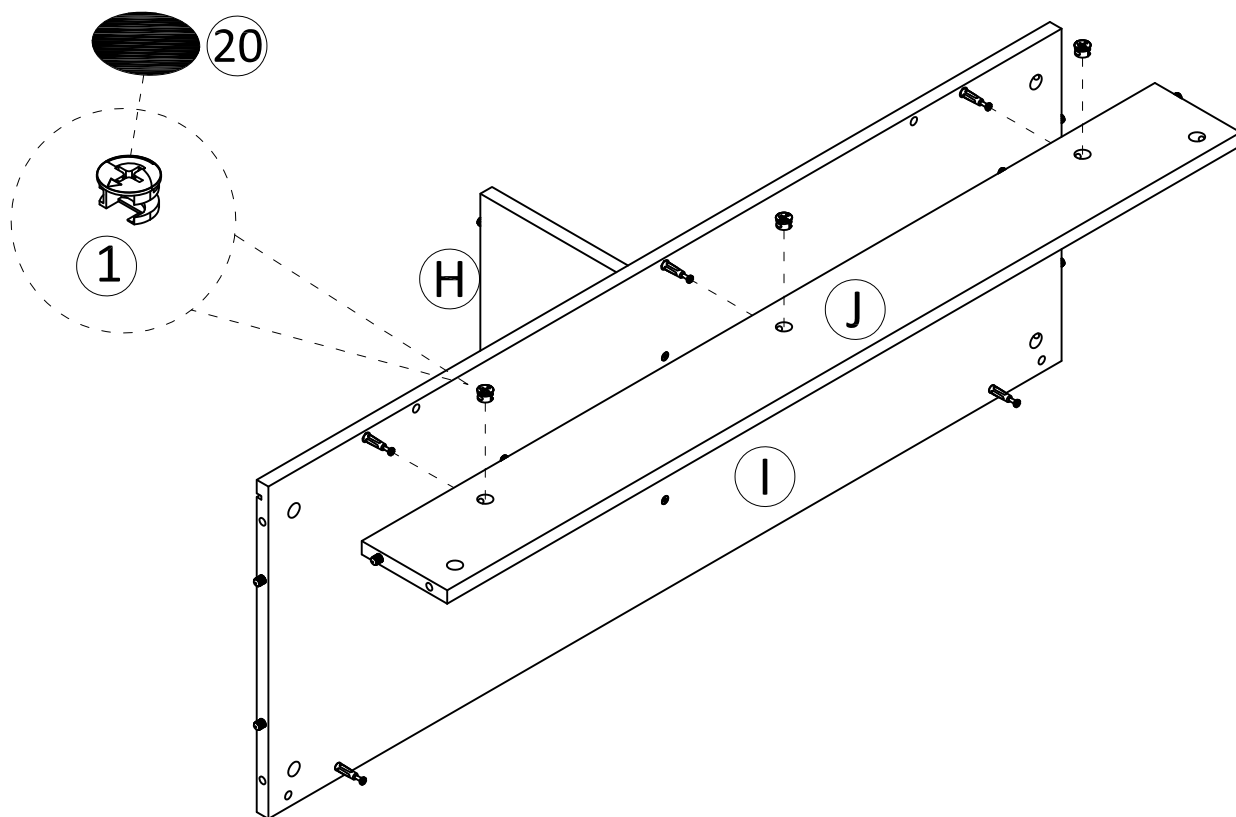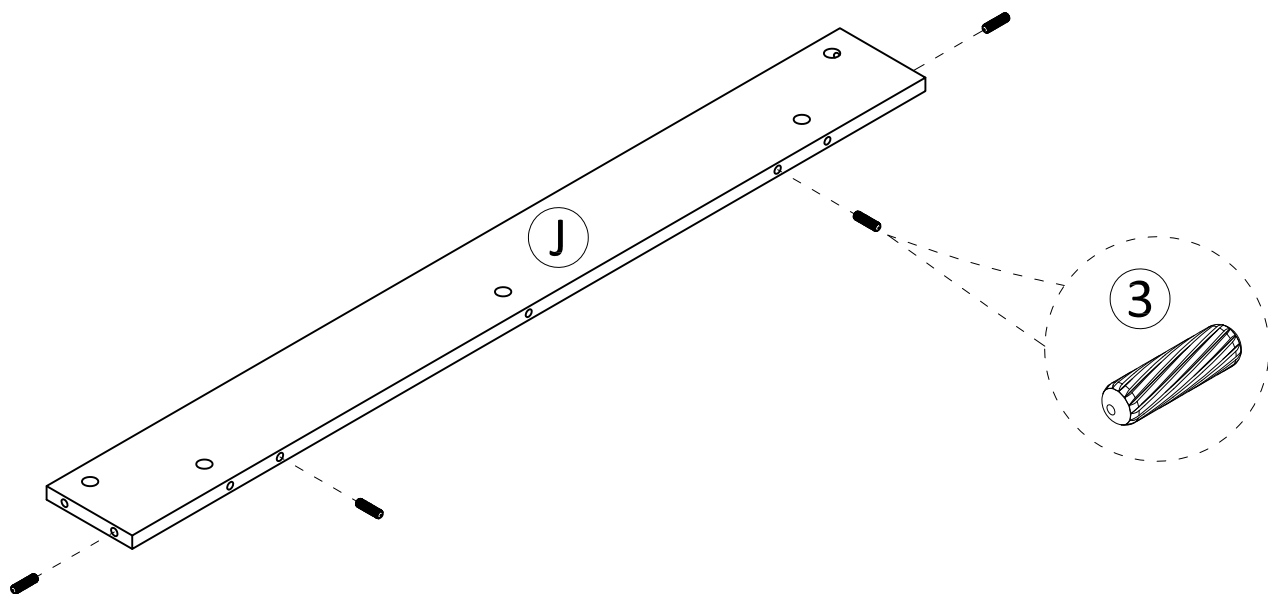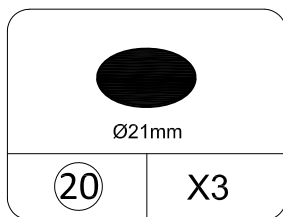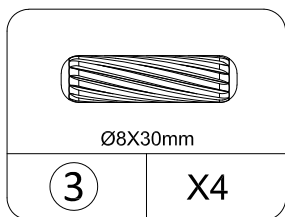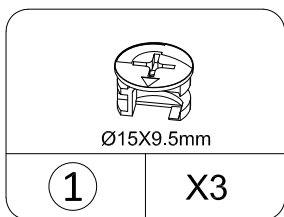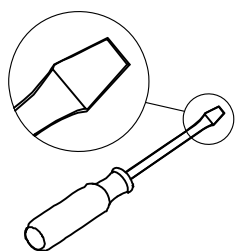

STEP10








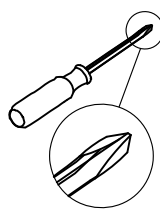


3	X10








5	X4

9CL	X1



9CR	X1

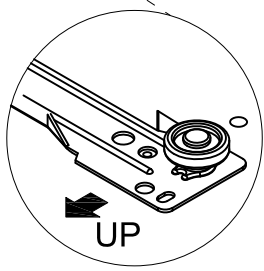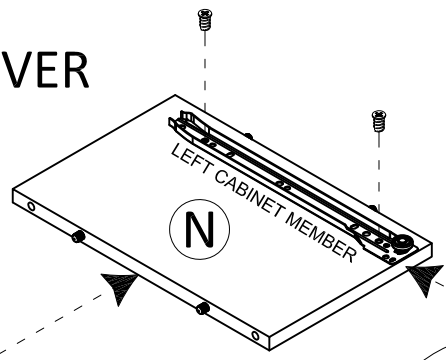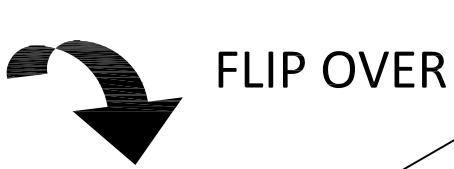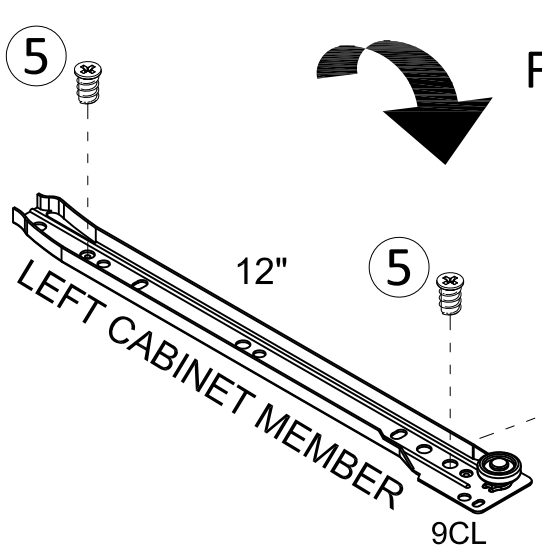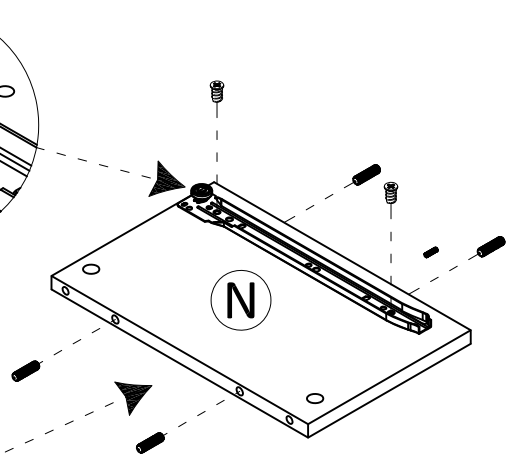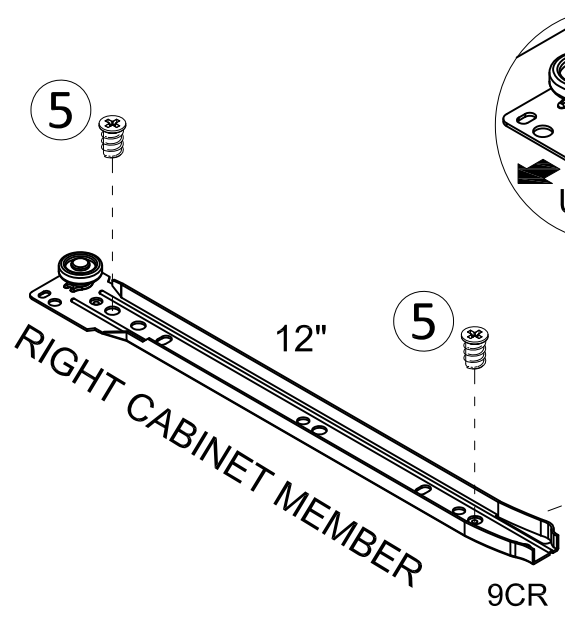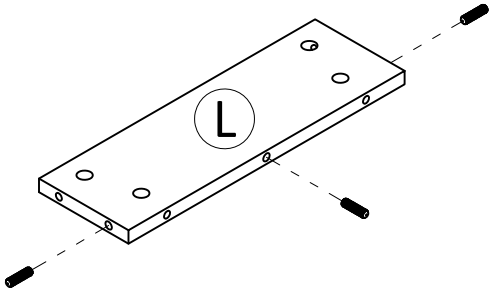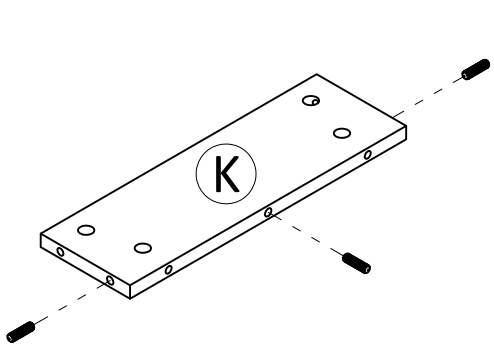

STEP11



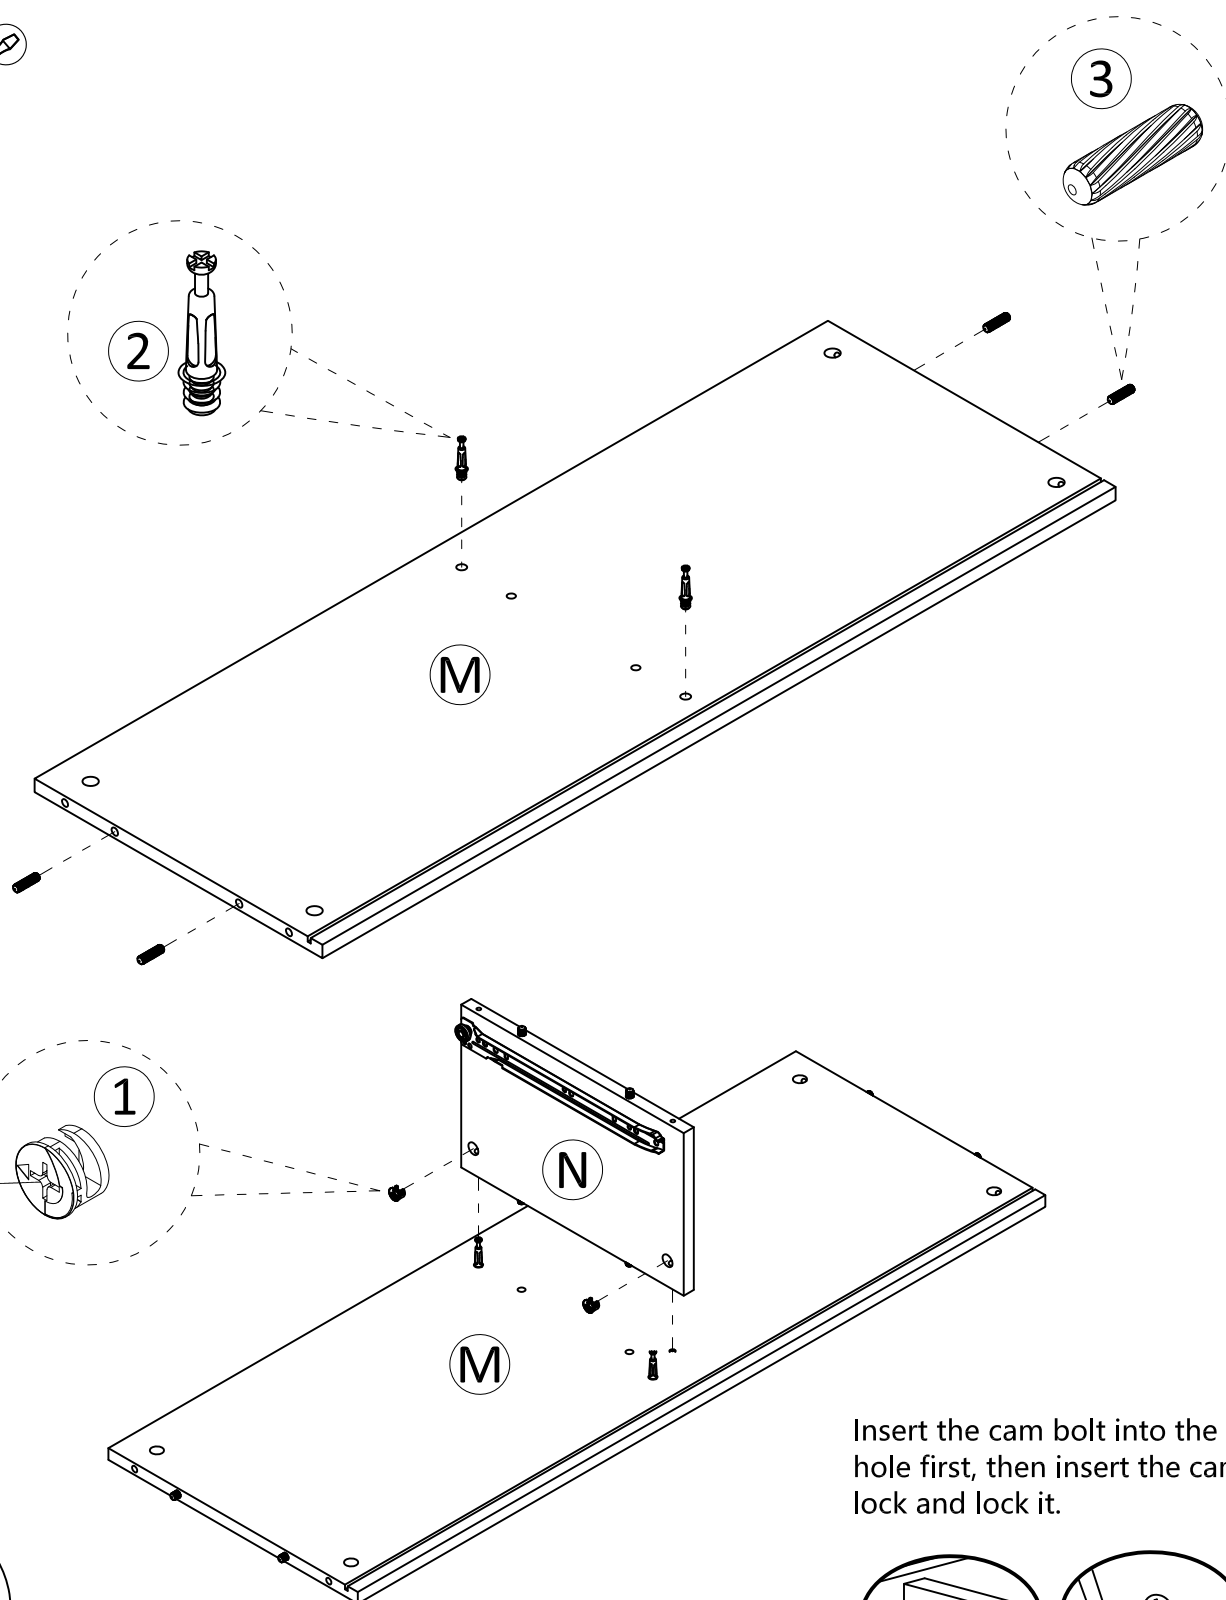
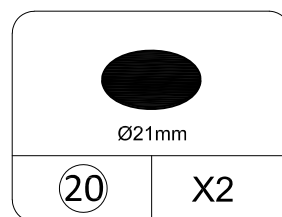
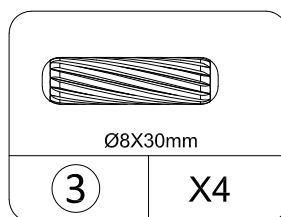
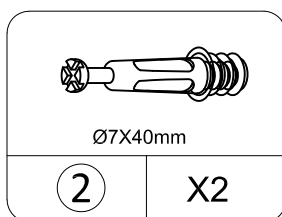
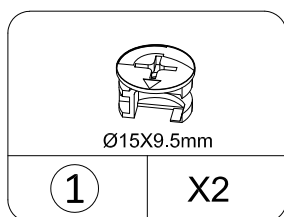
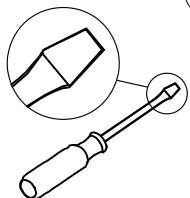
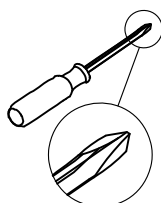


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

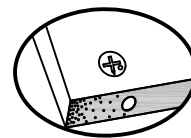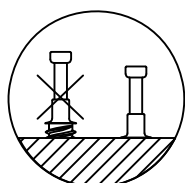


Proper orientation of CAM LOCK


STEP12

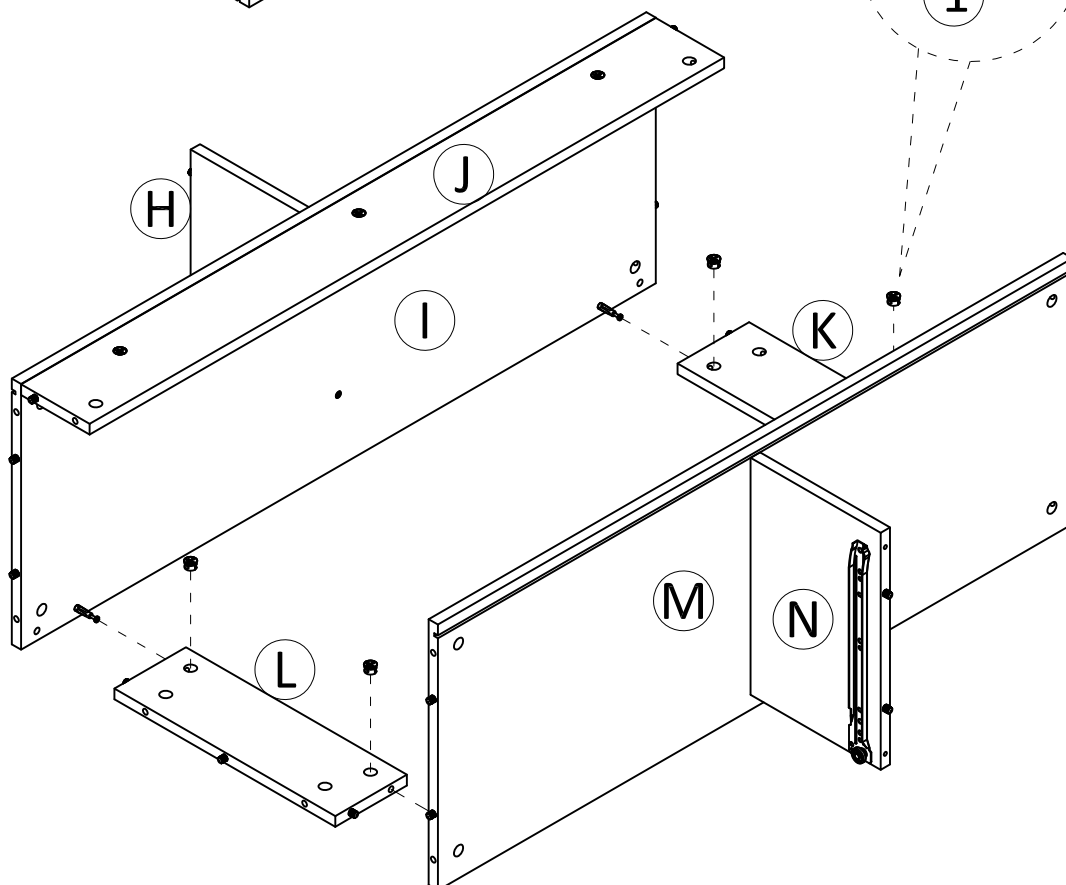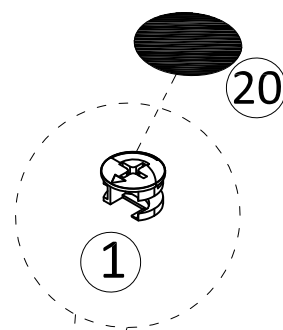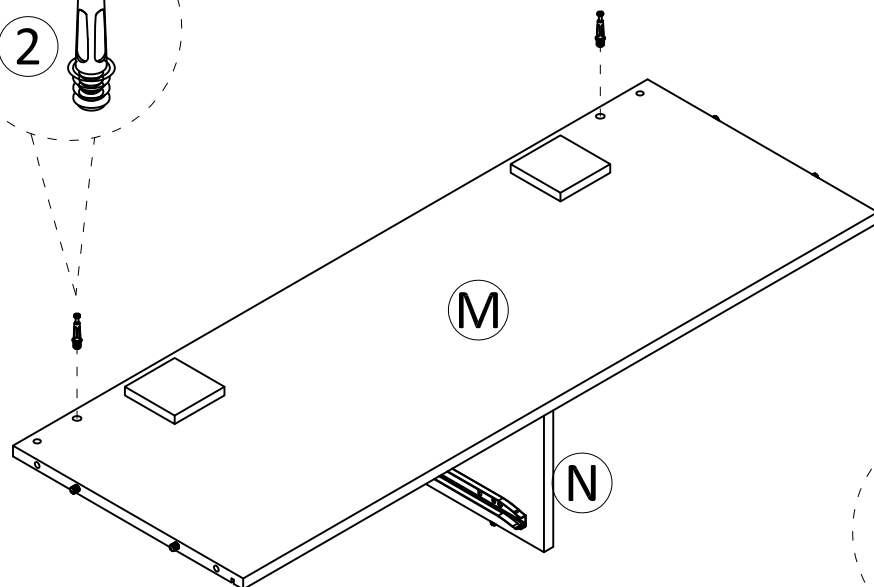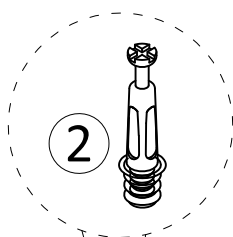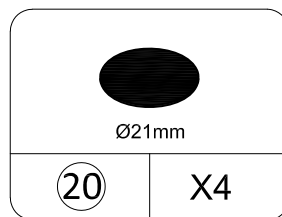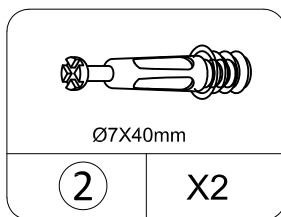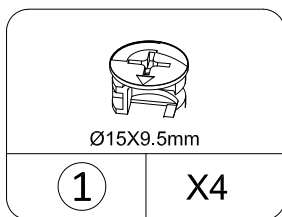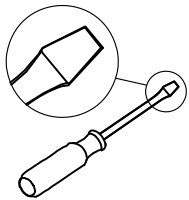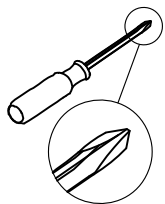





STEP13

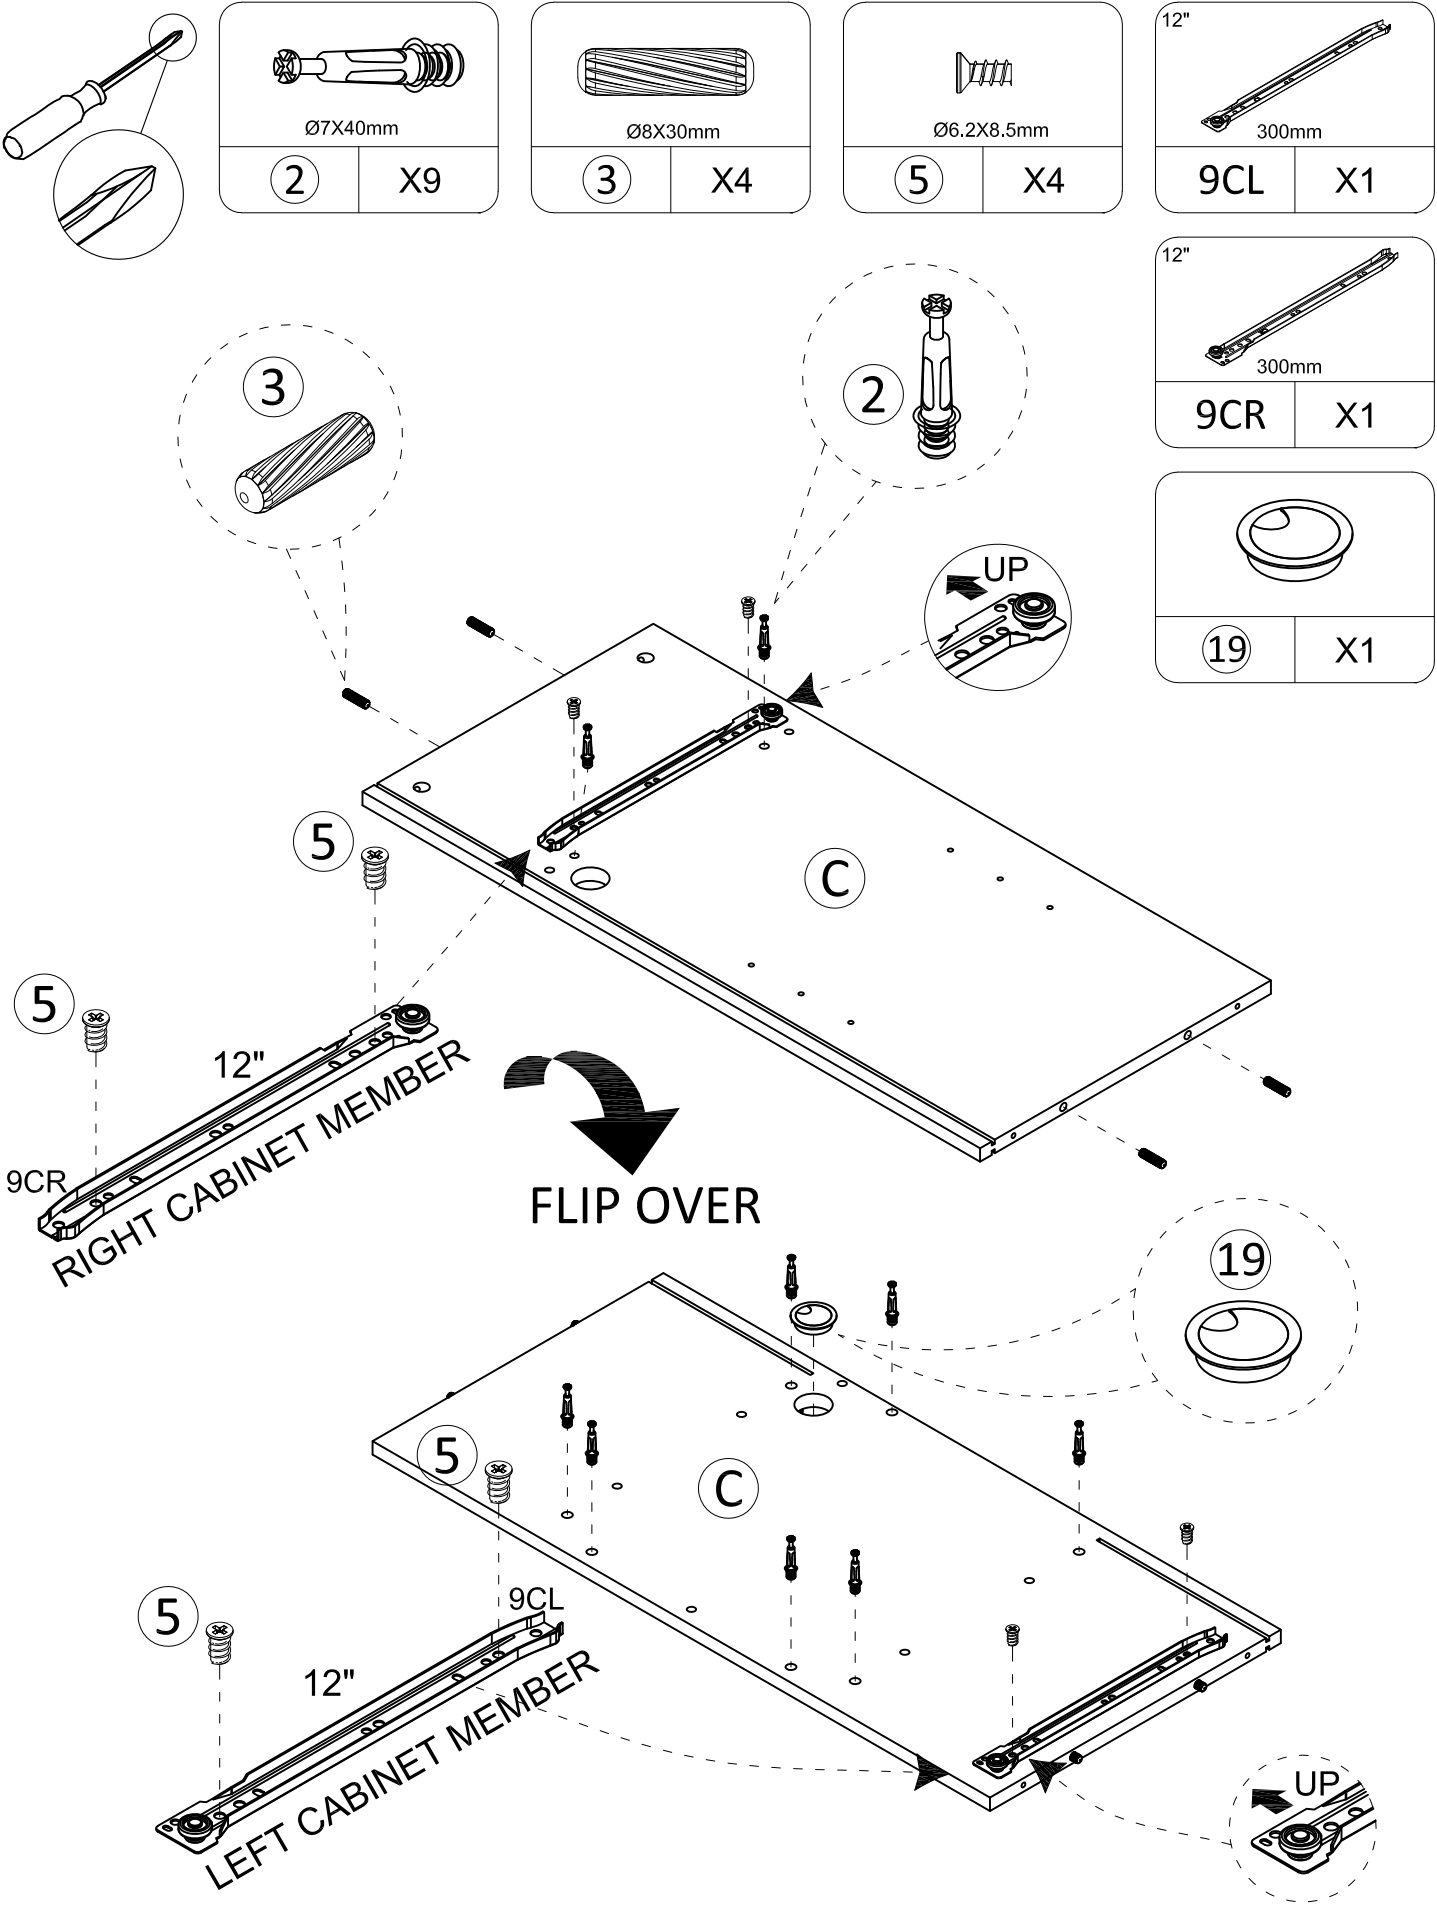


STEP14

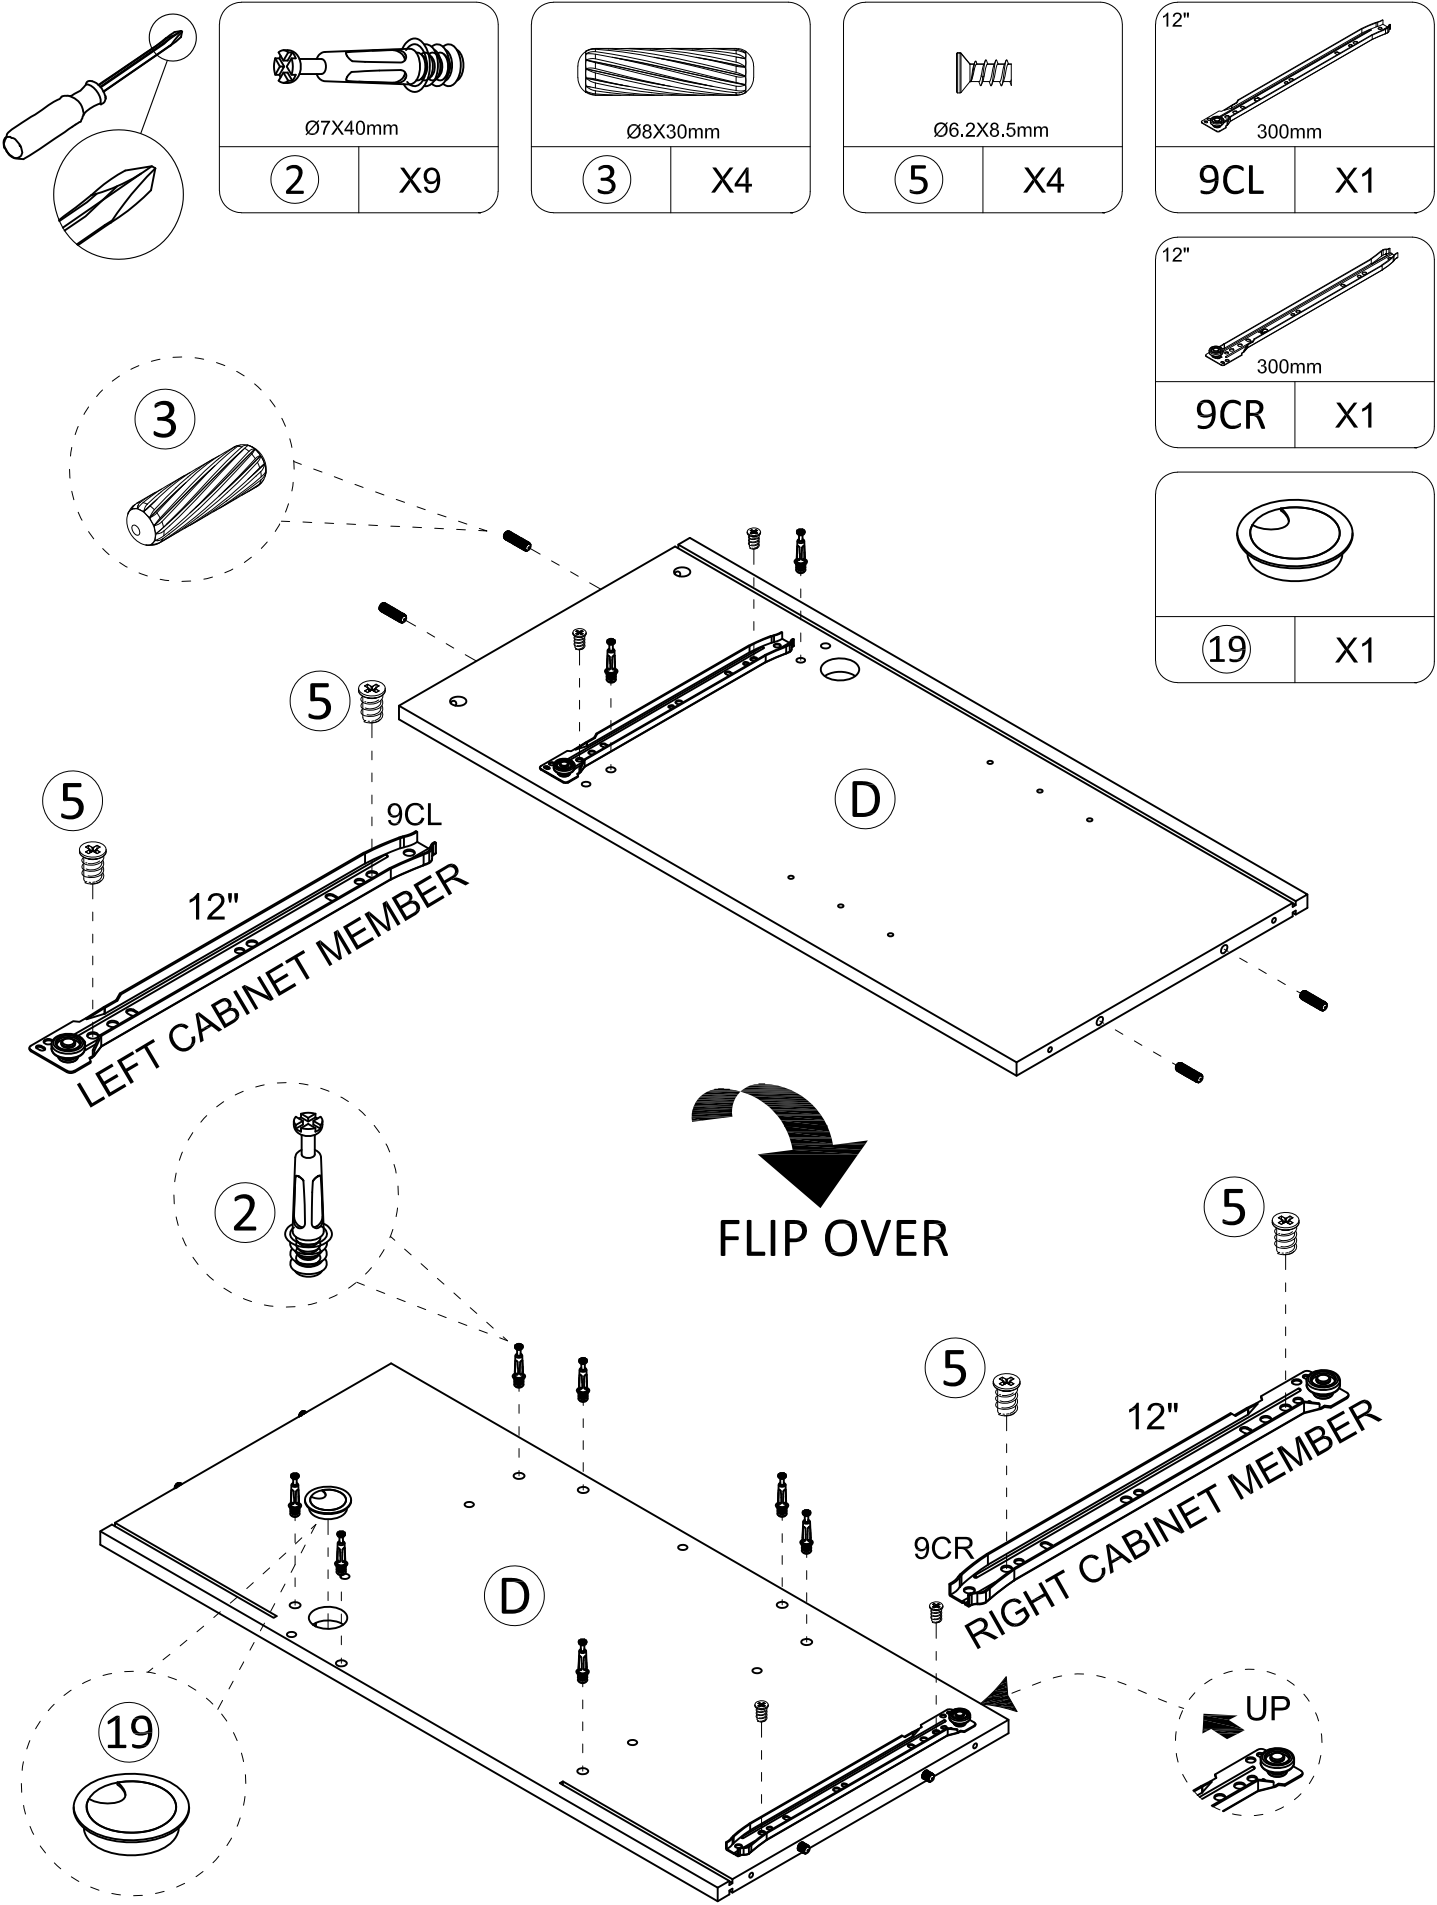


STEP15

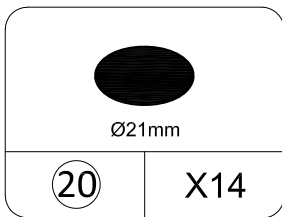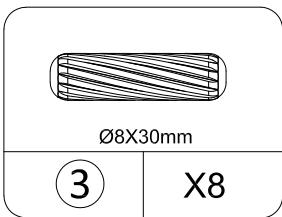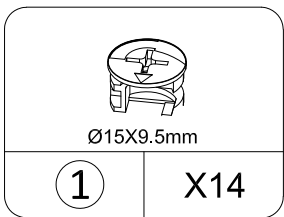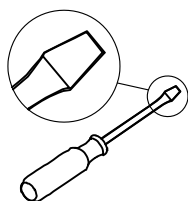










x 4

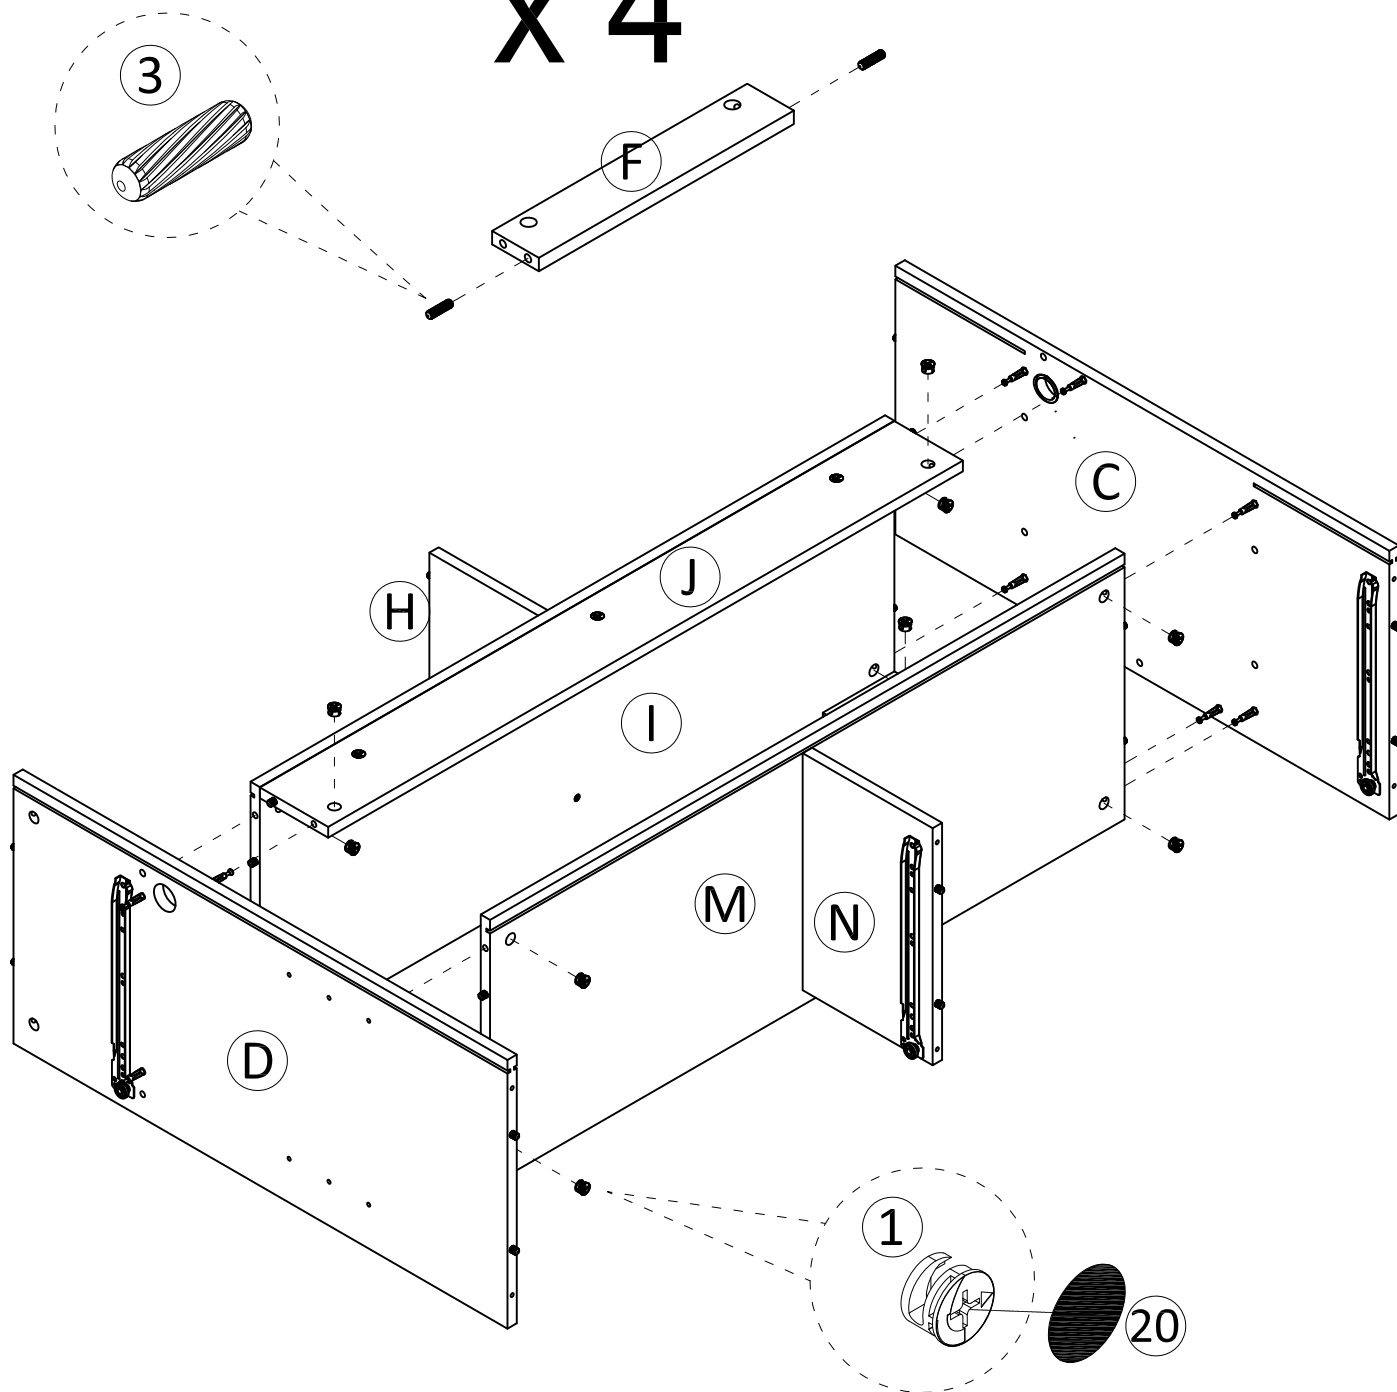












STEP16

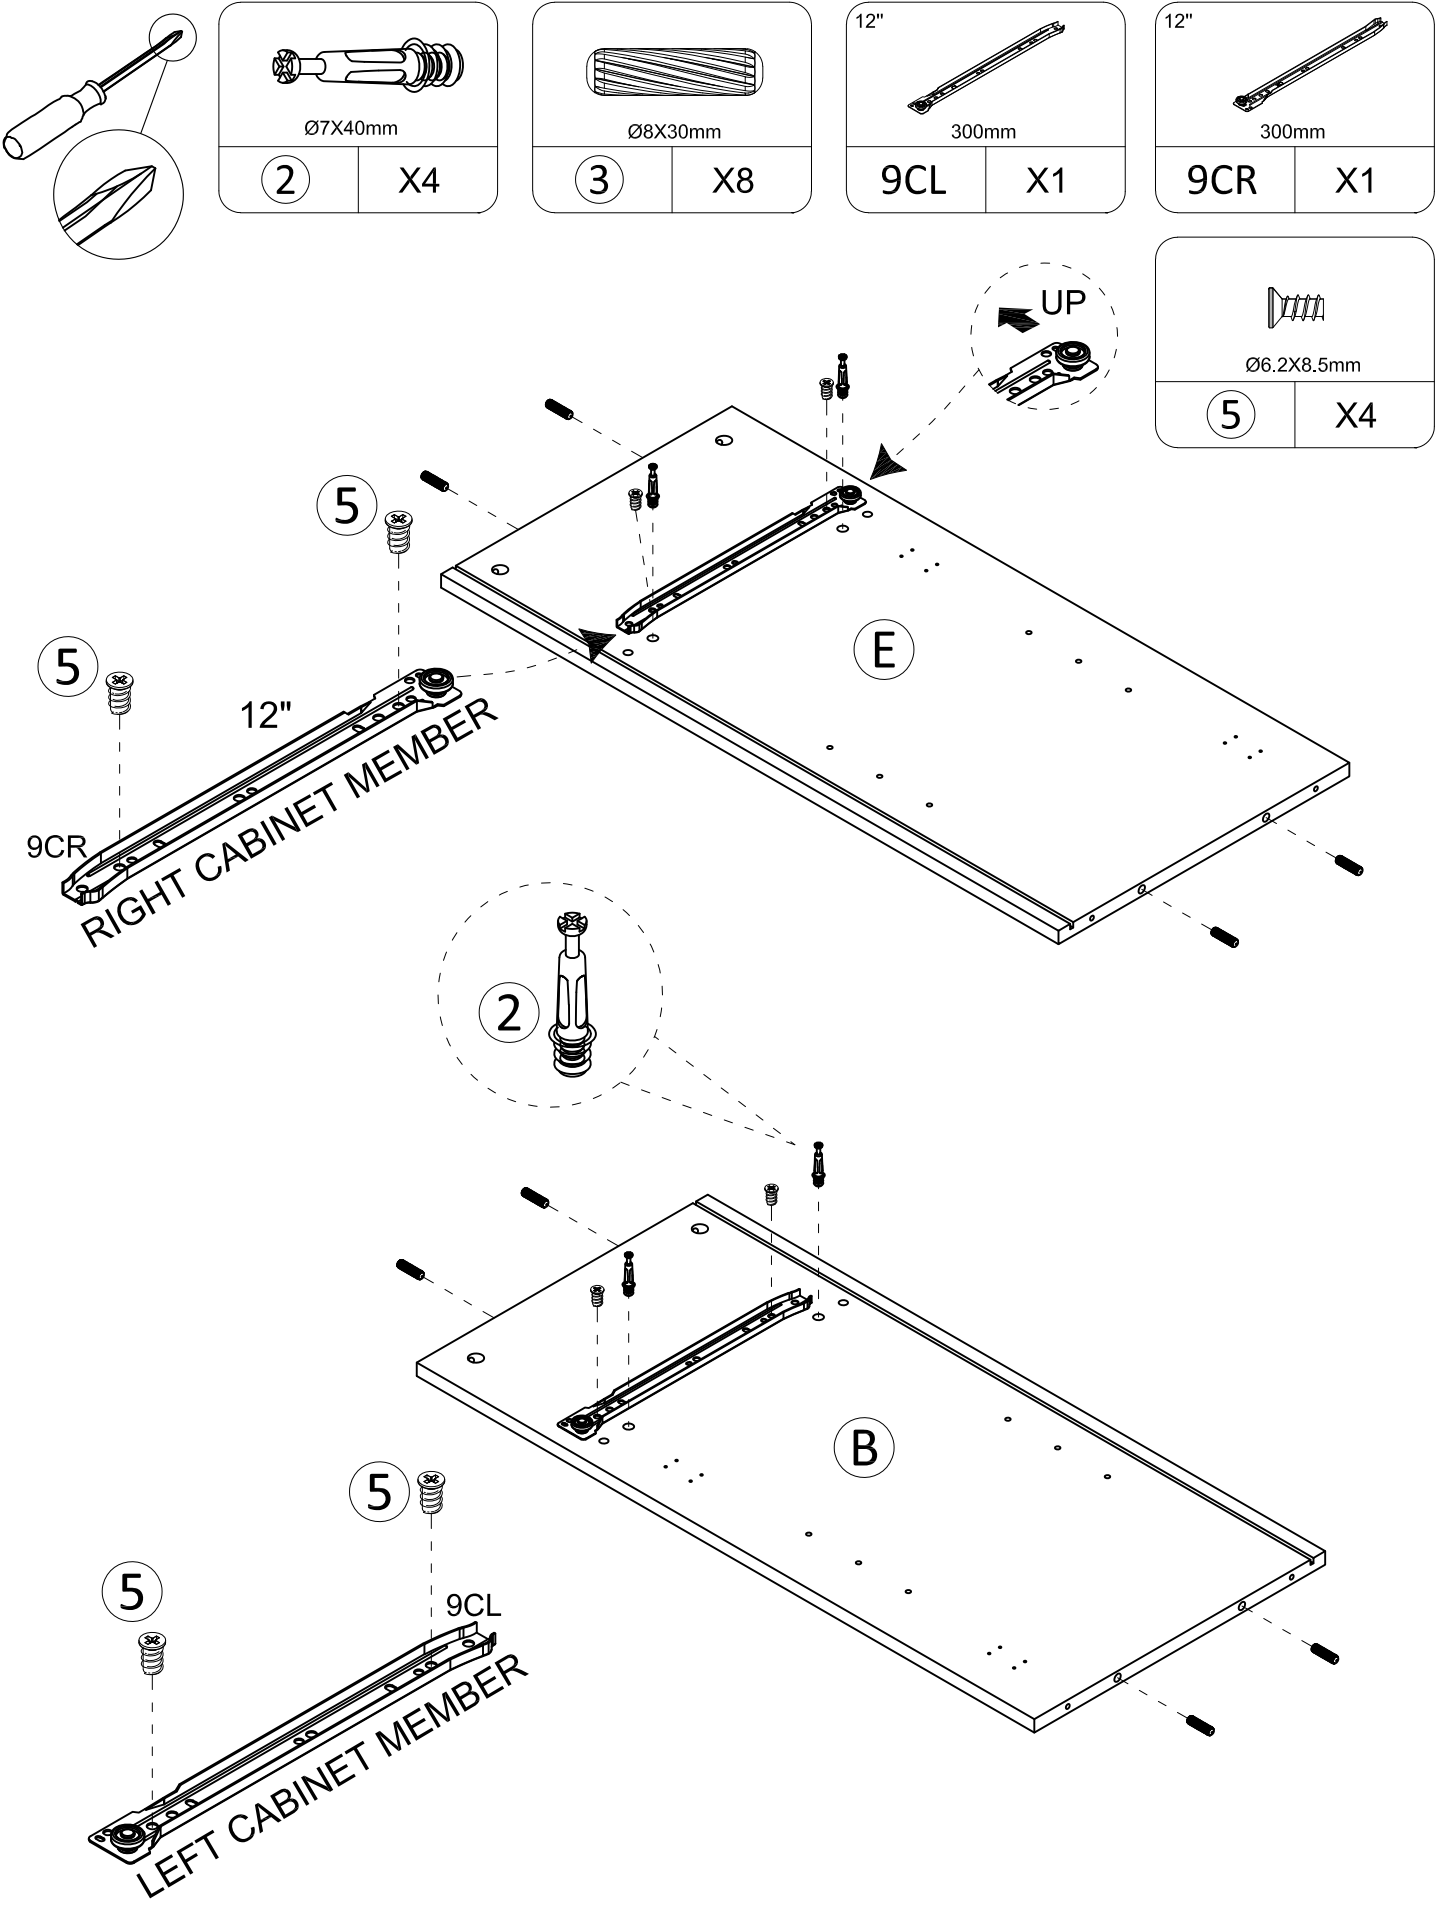


STEP17

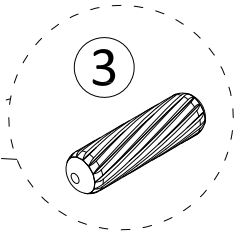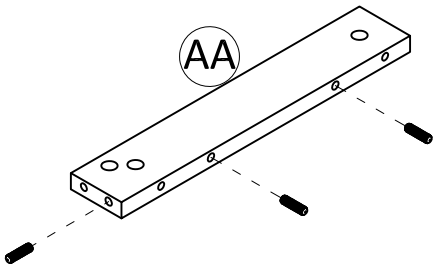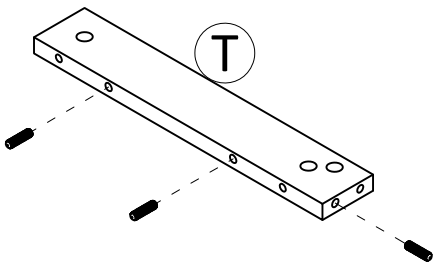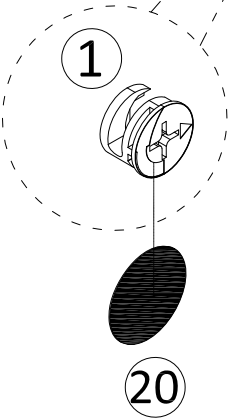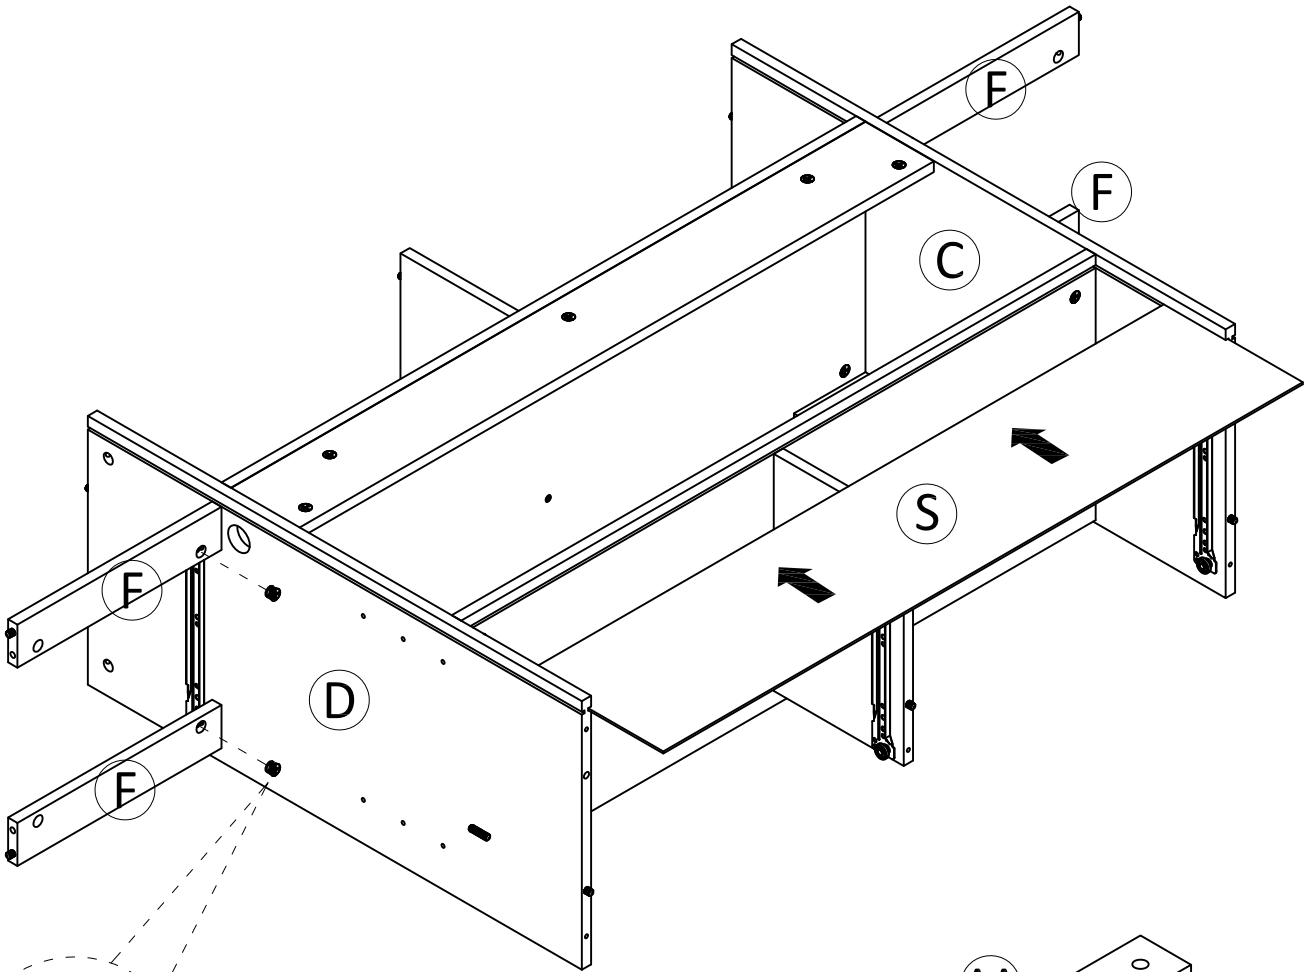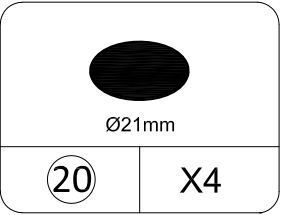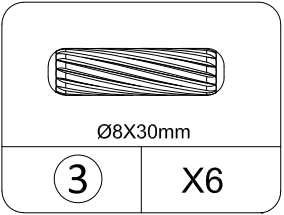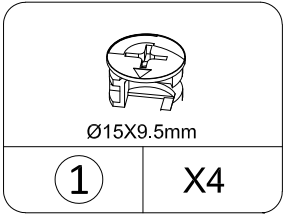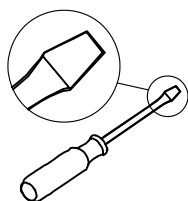


STEP18

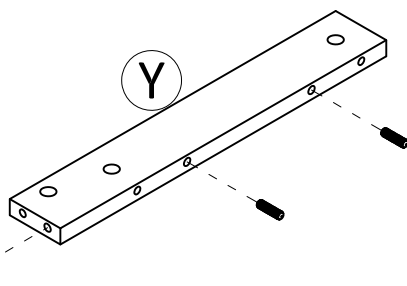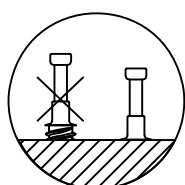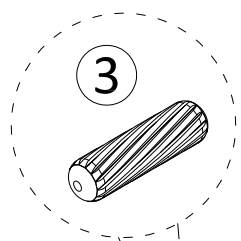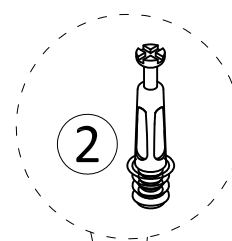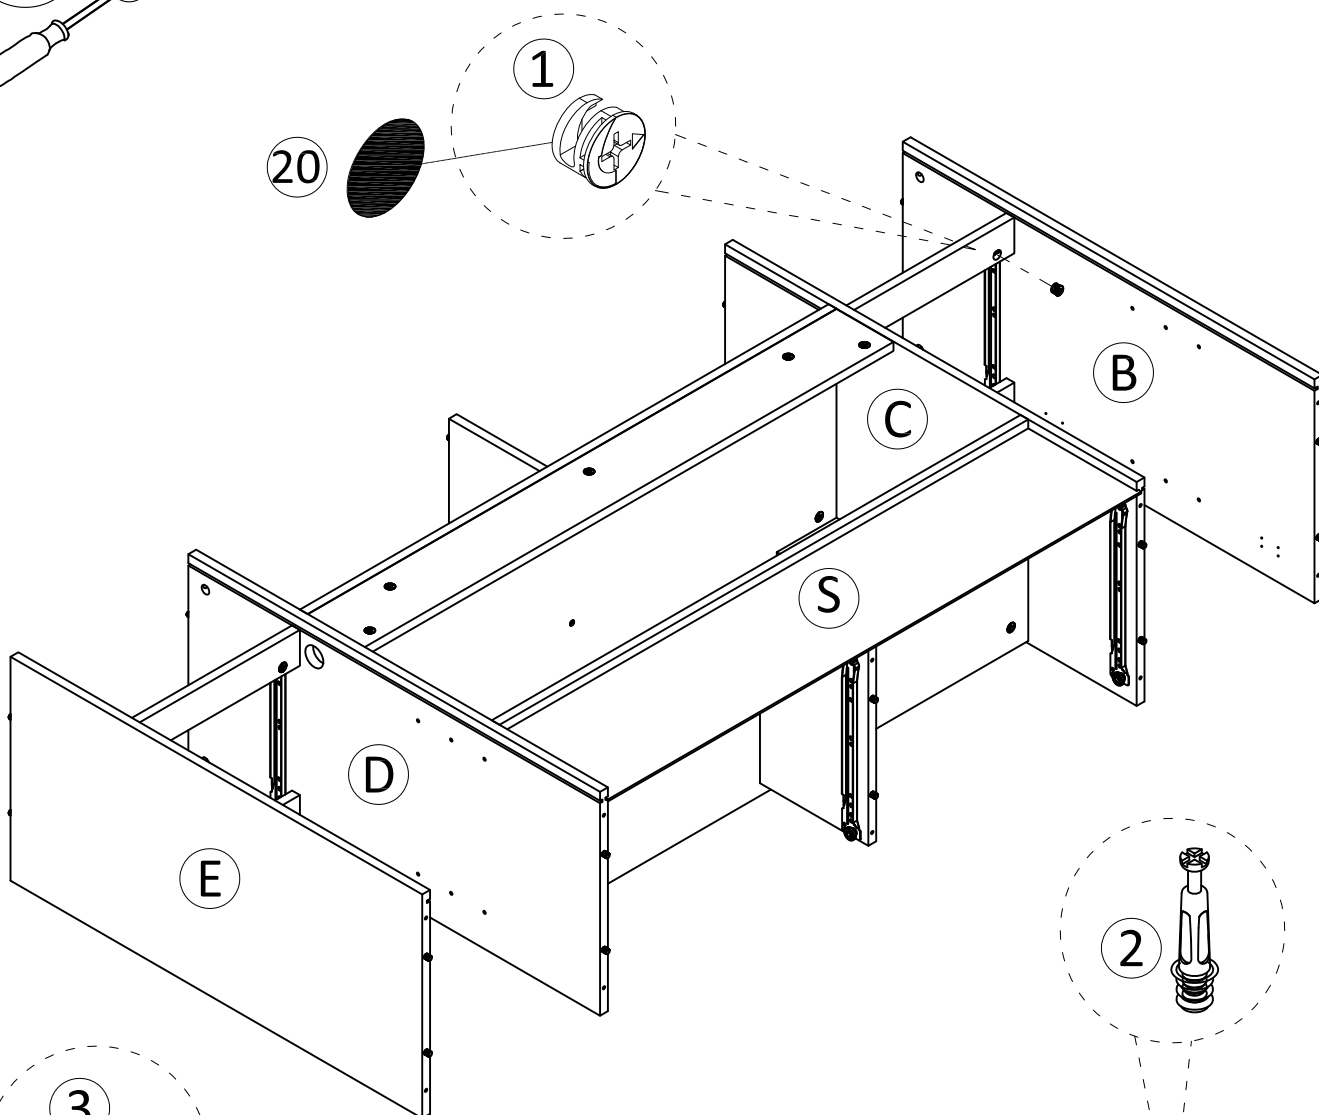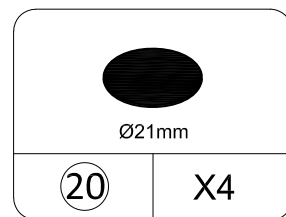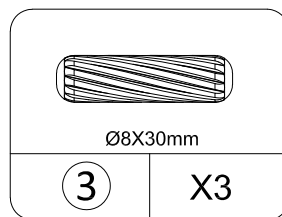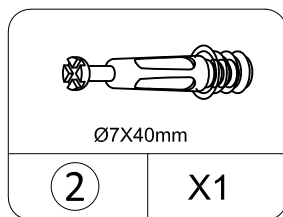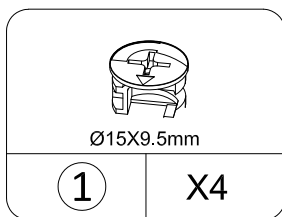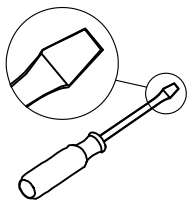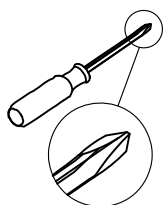












FLIP OVER

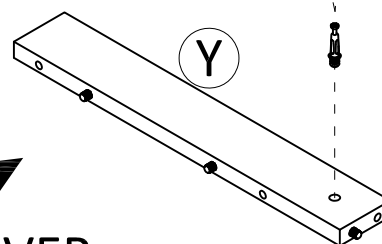




STEP19

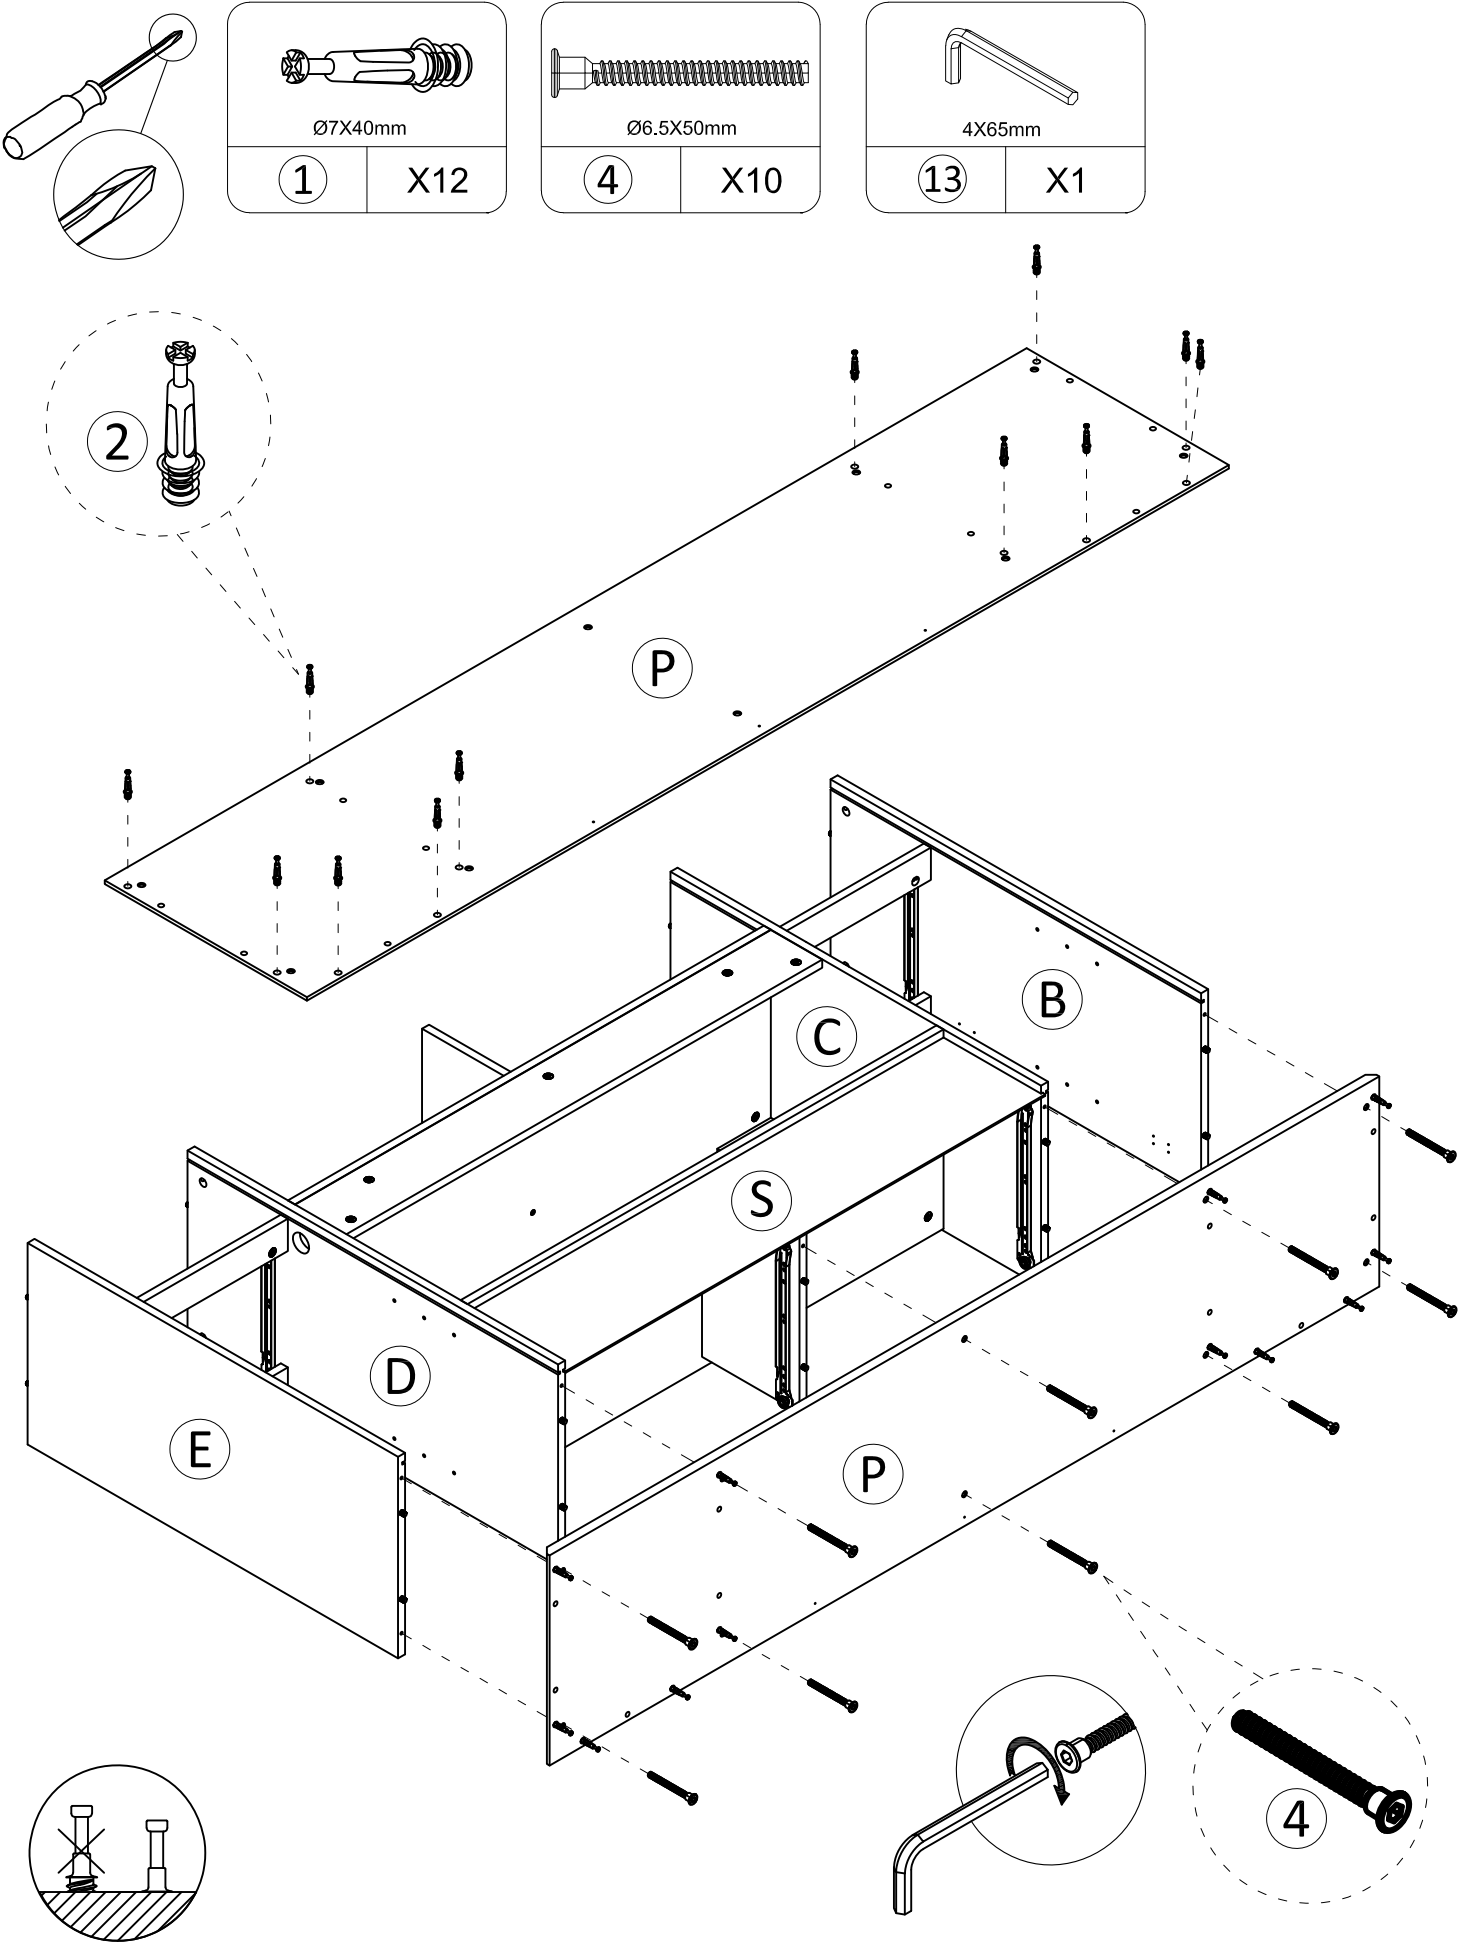


STEP20

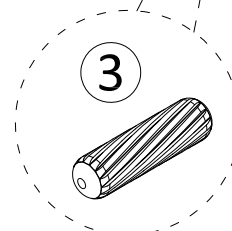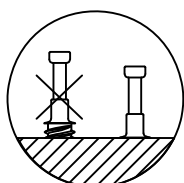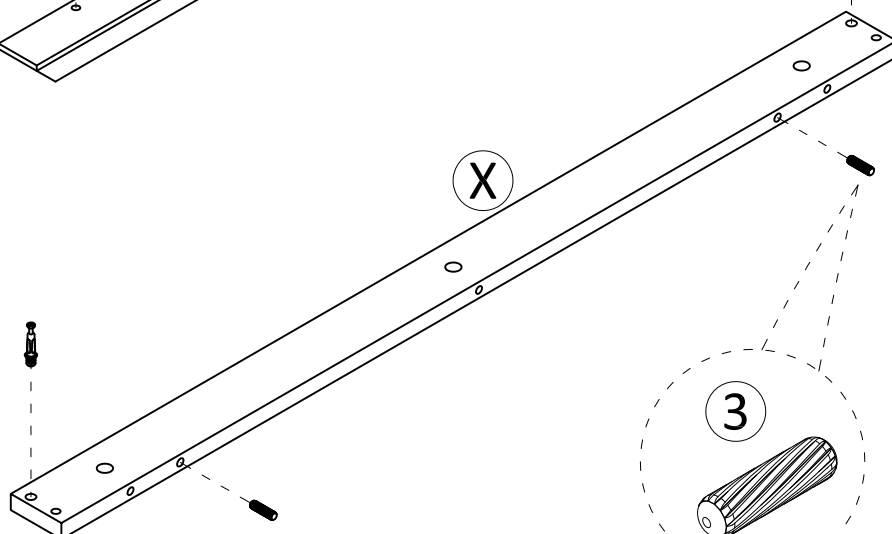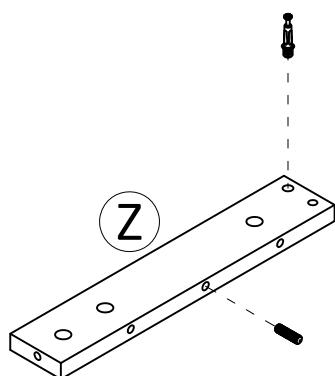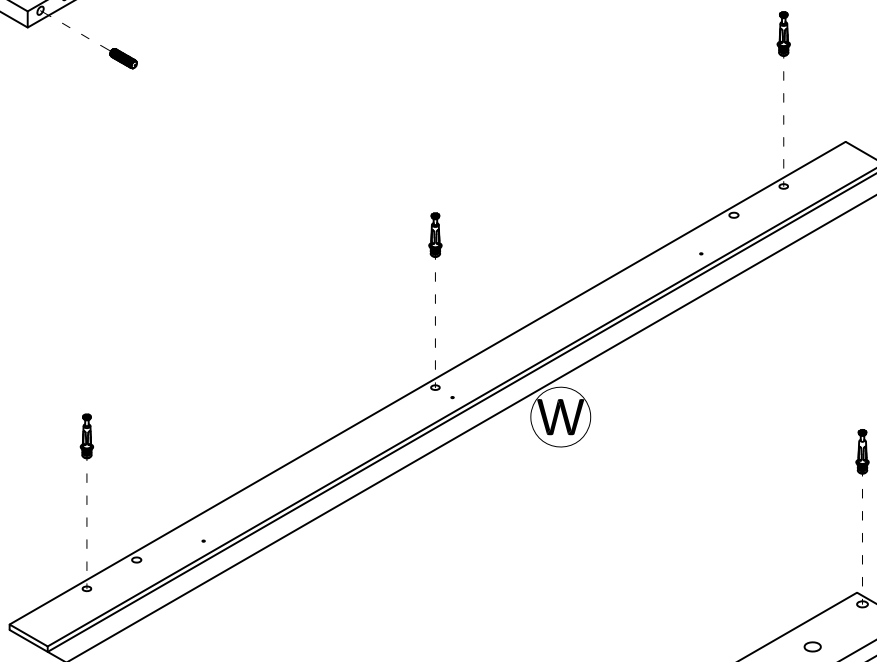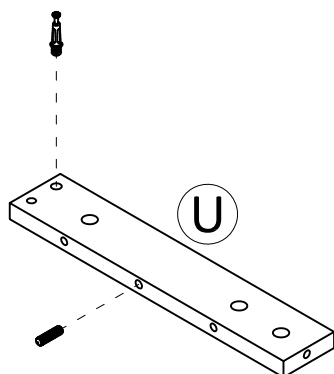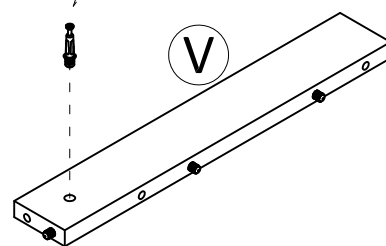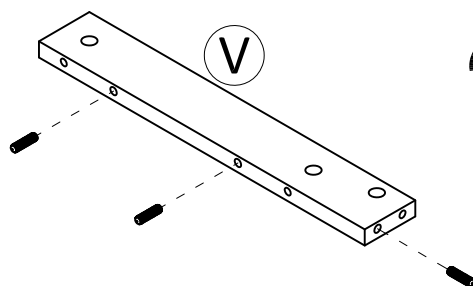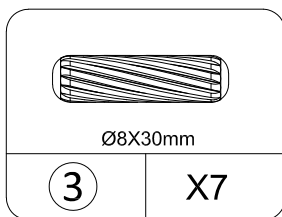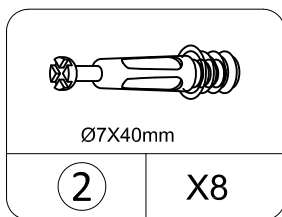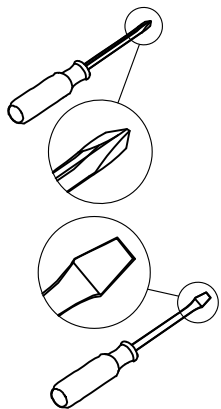






STEP21

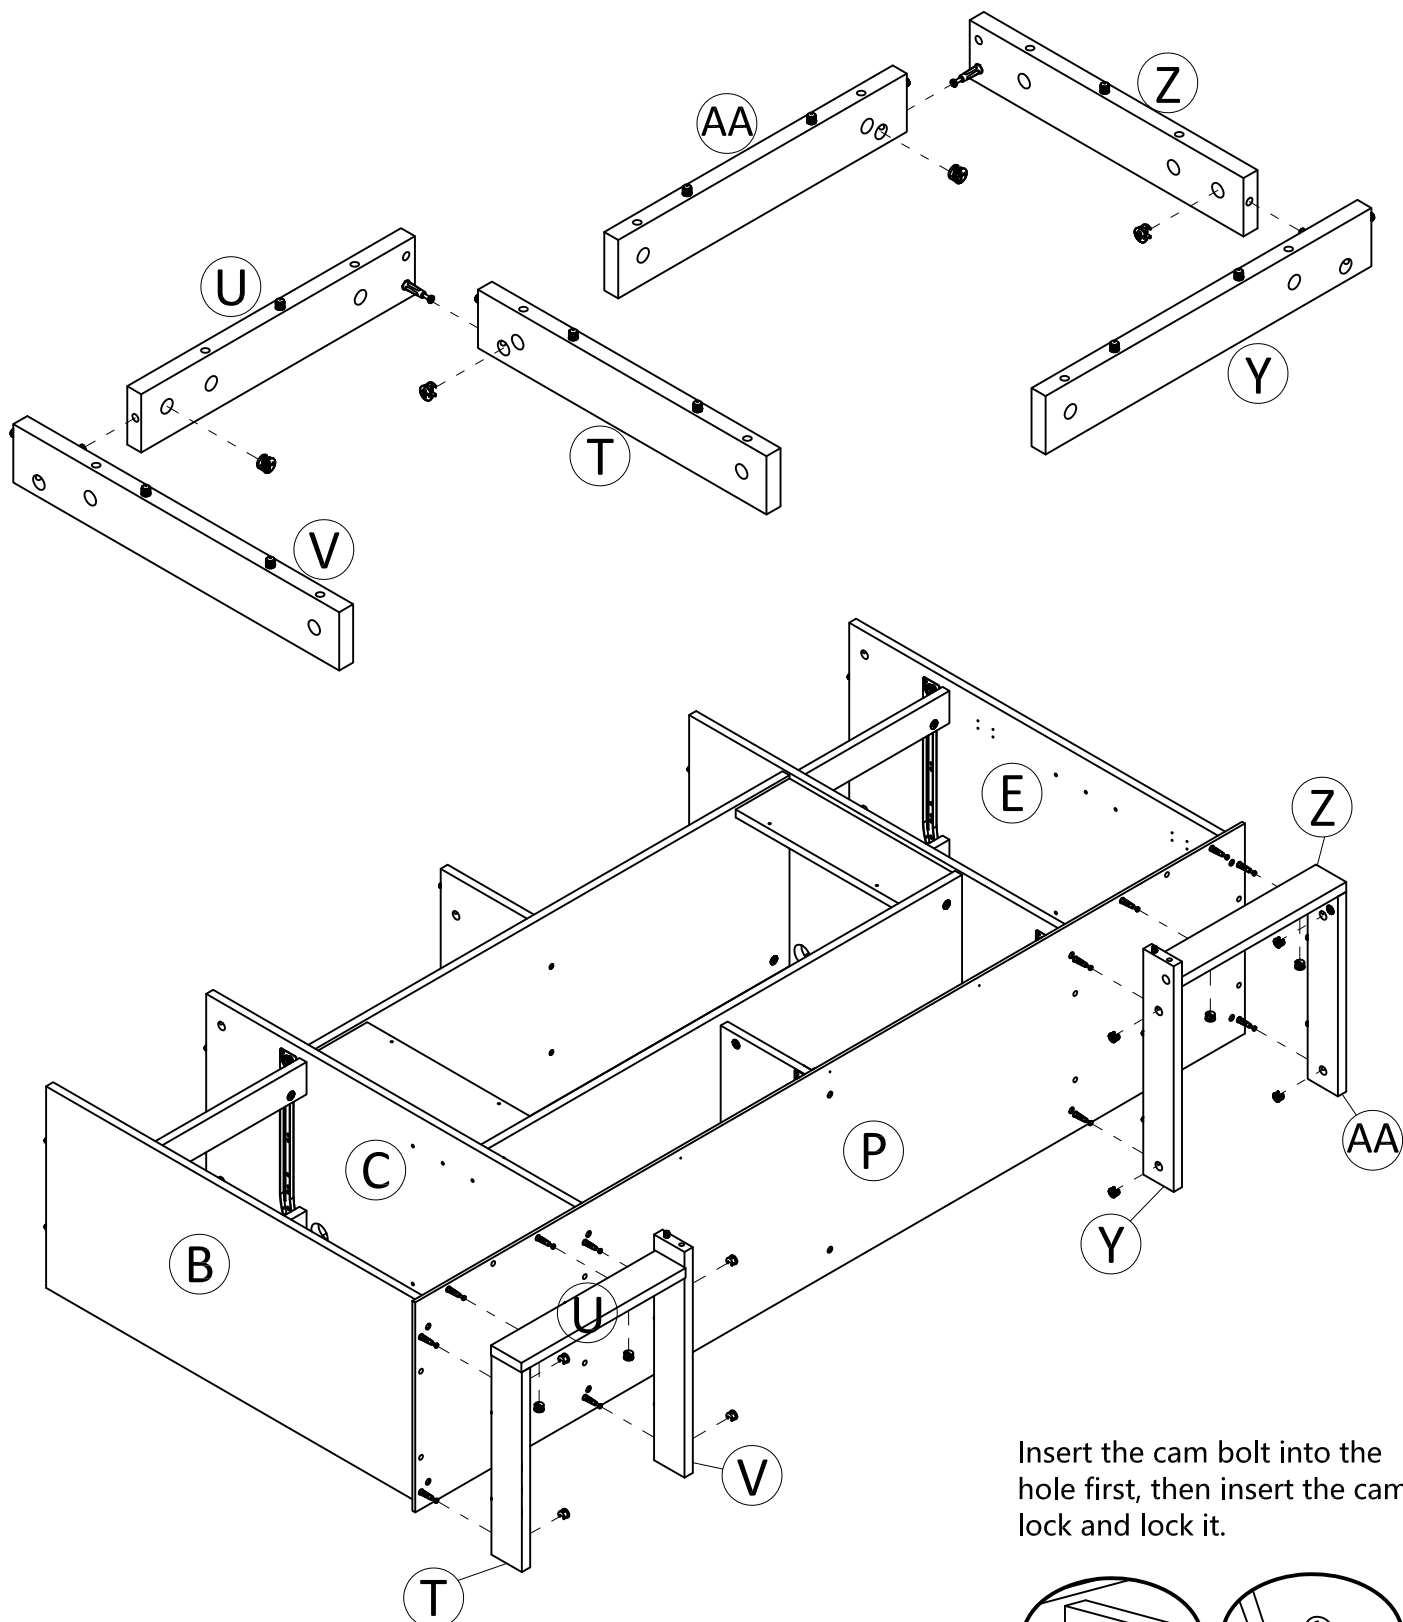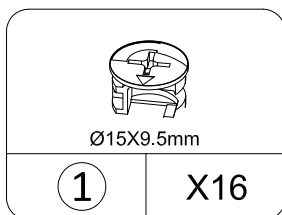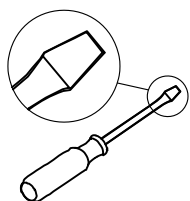





Insert the cam bolt into the hole first, then insert the cam lock and lock it.

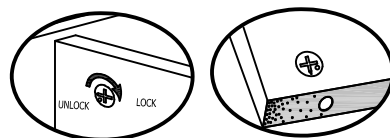














STEP22

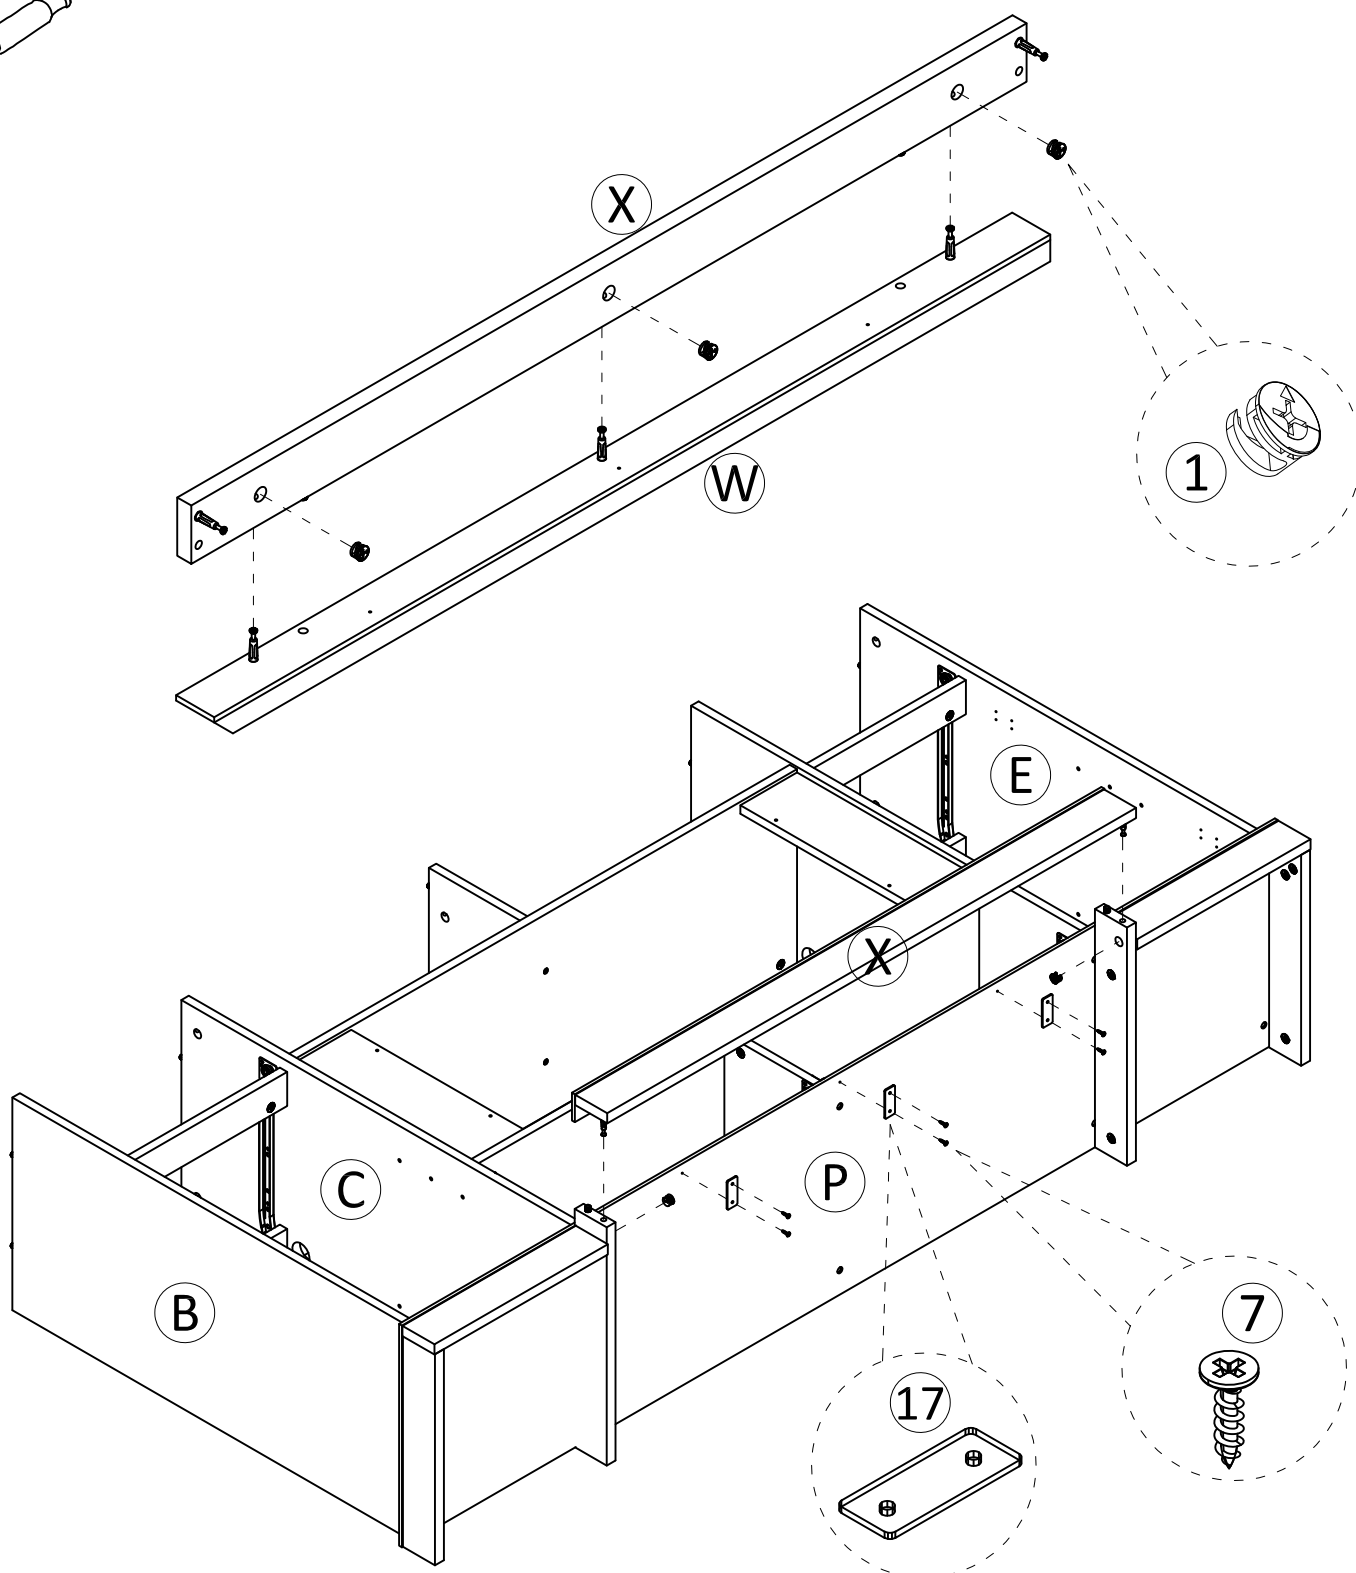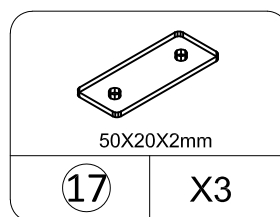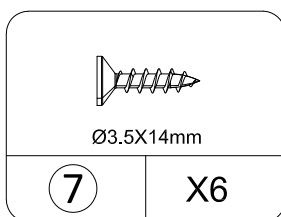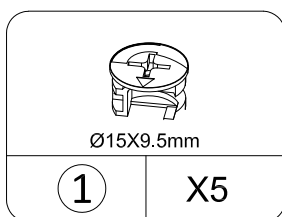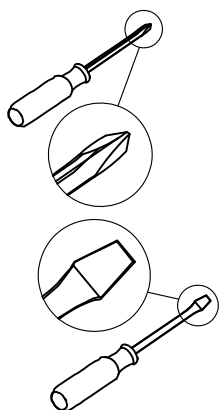





STEP23

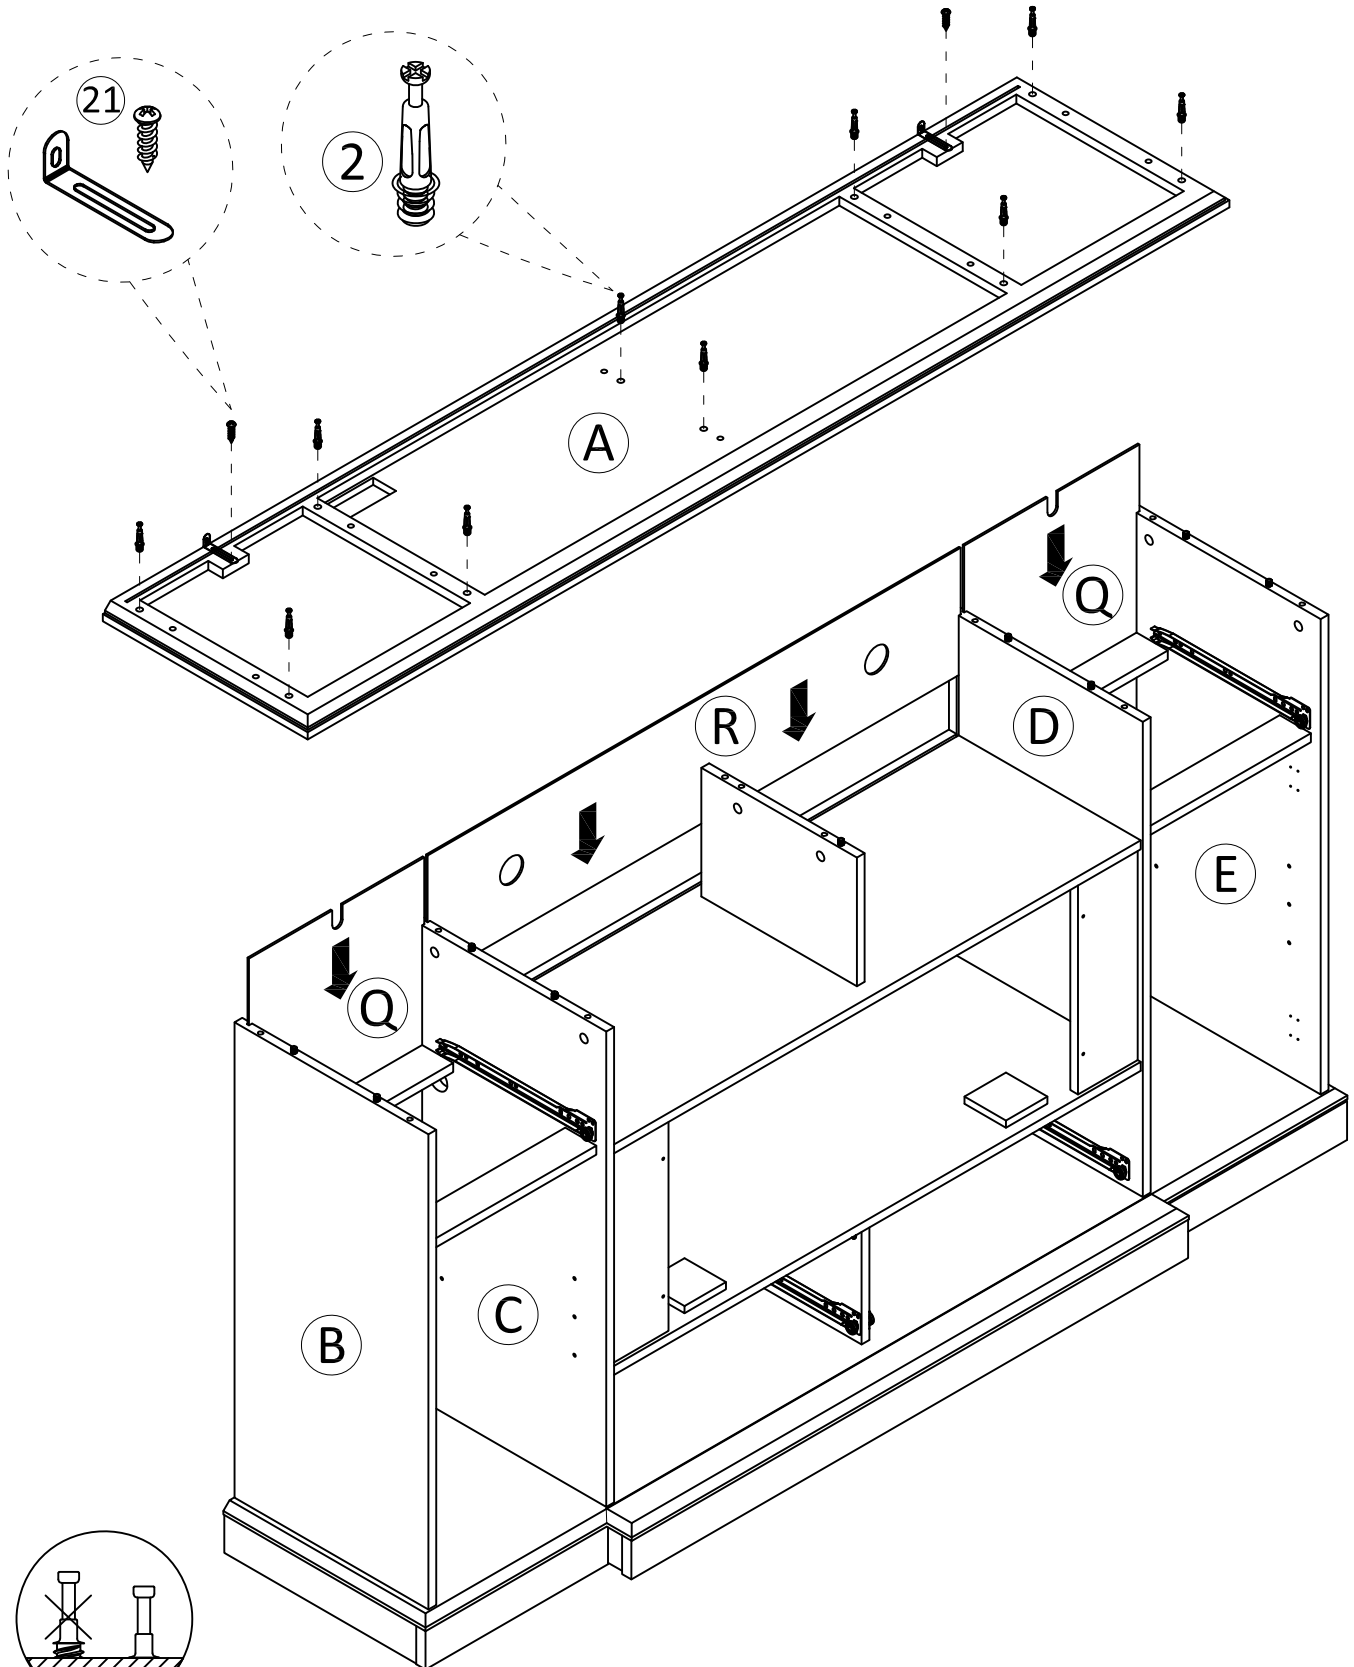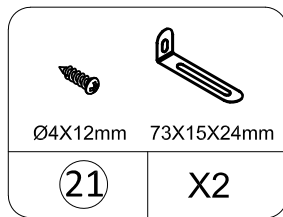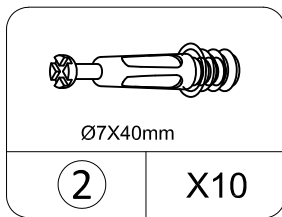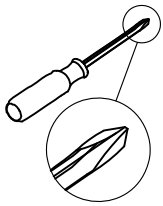






STEP24

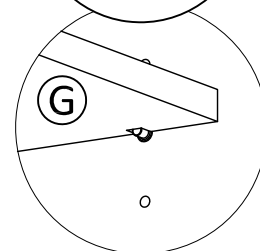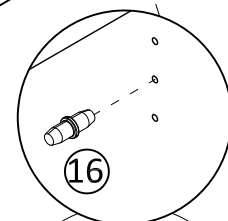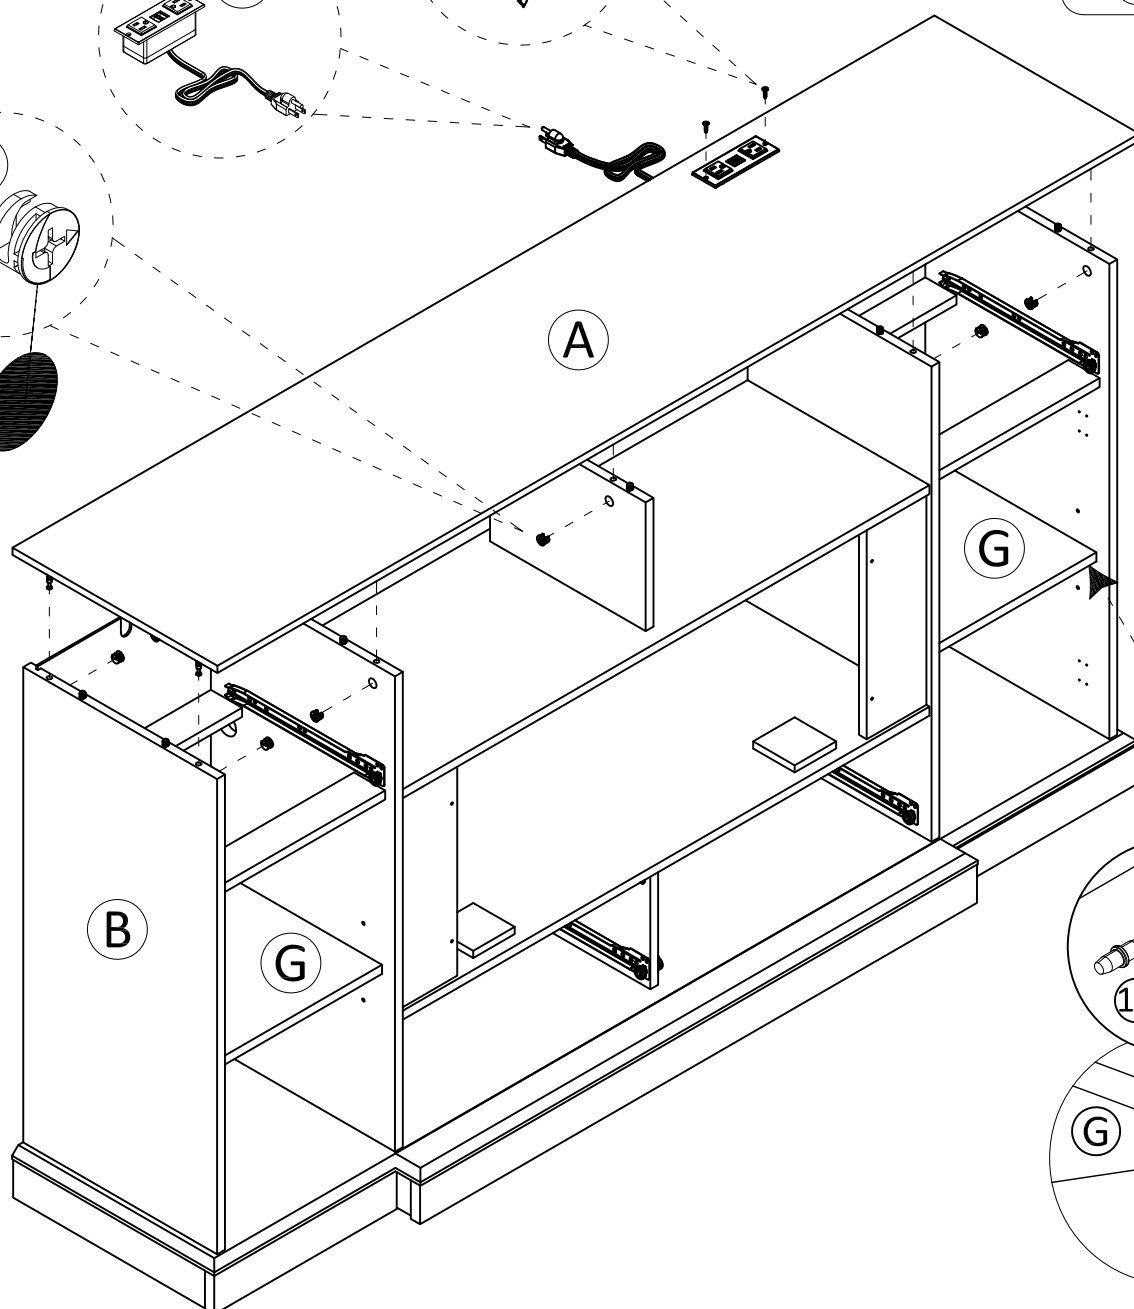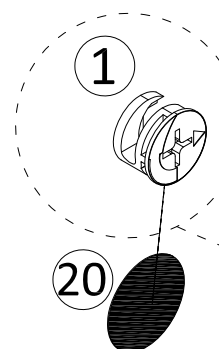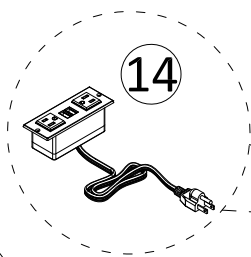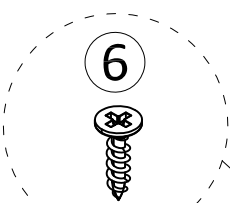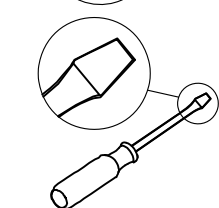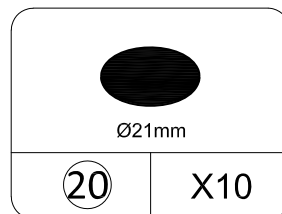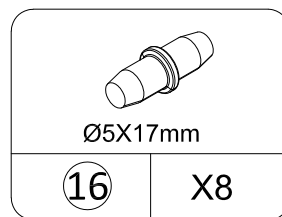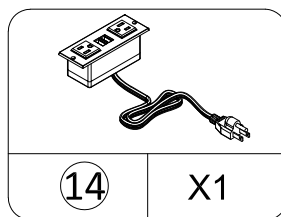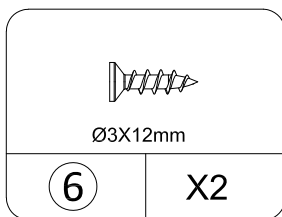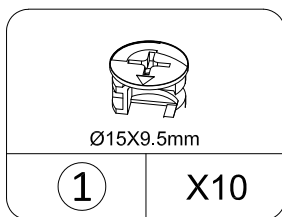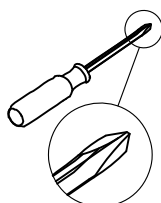





STEP25

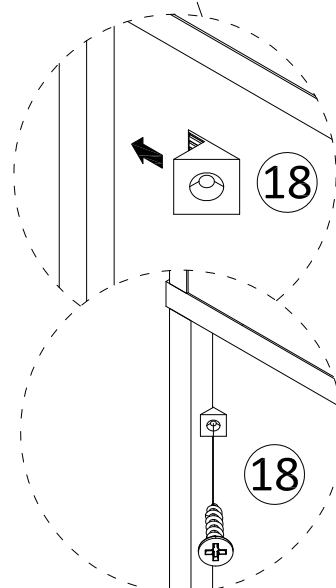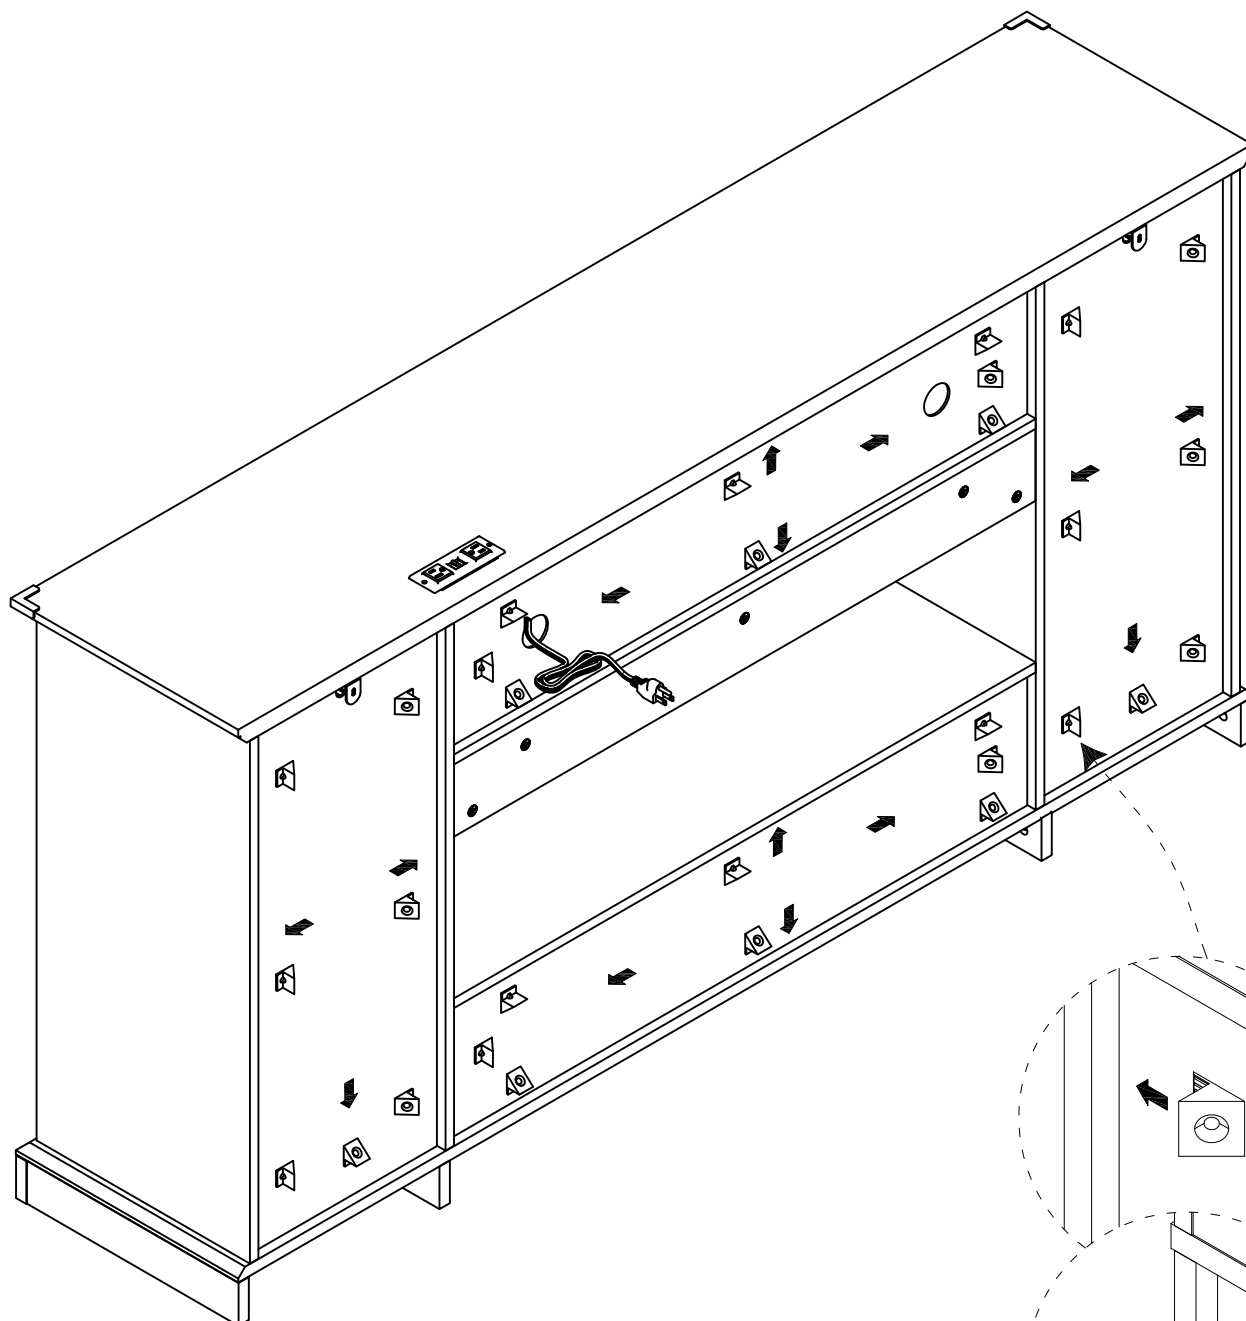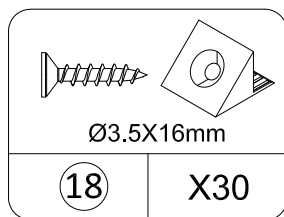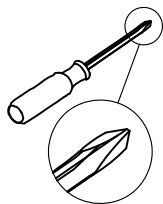





STEP26

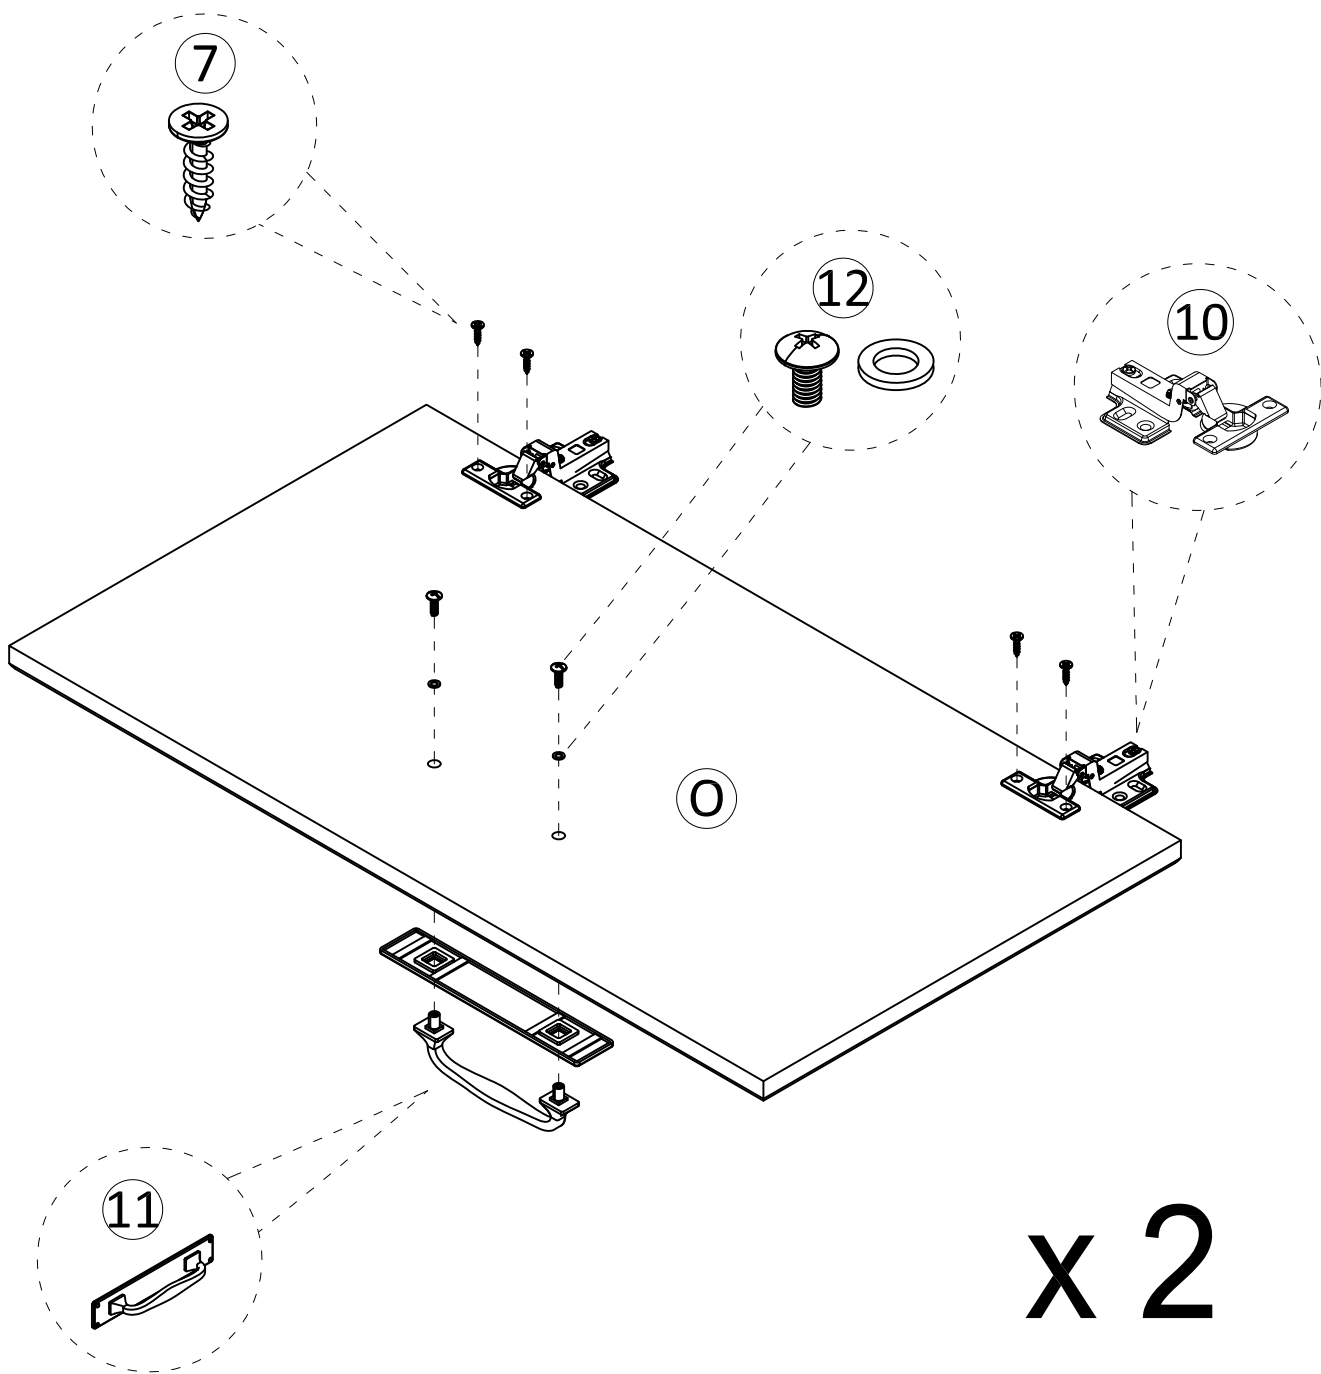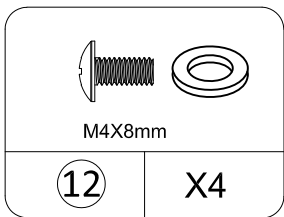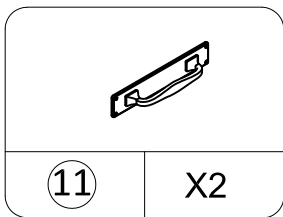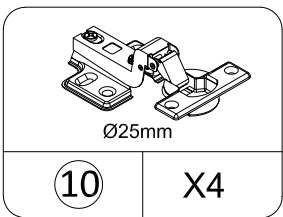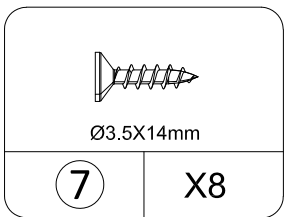


STEP27

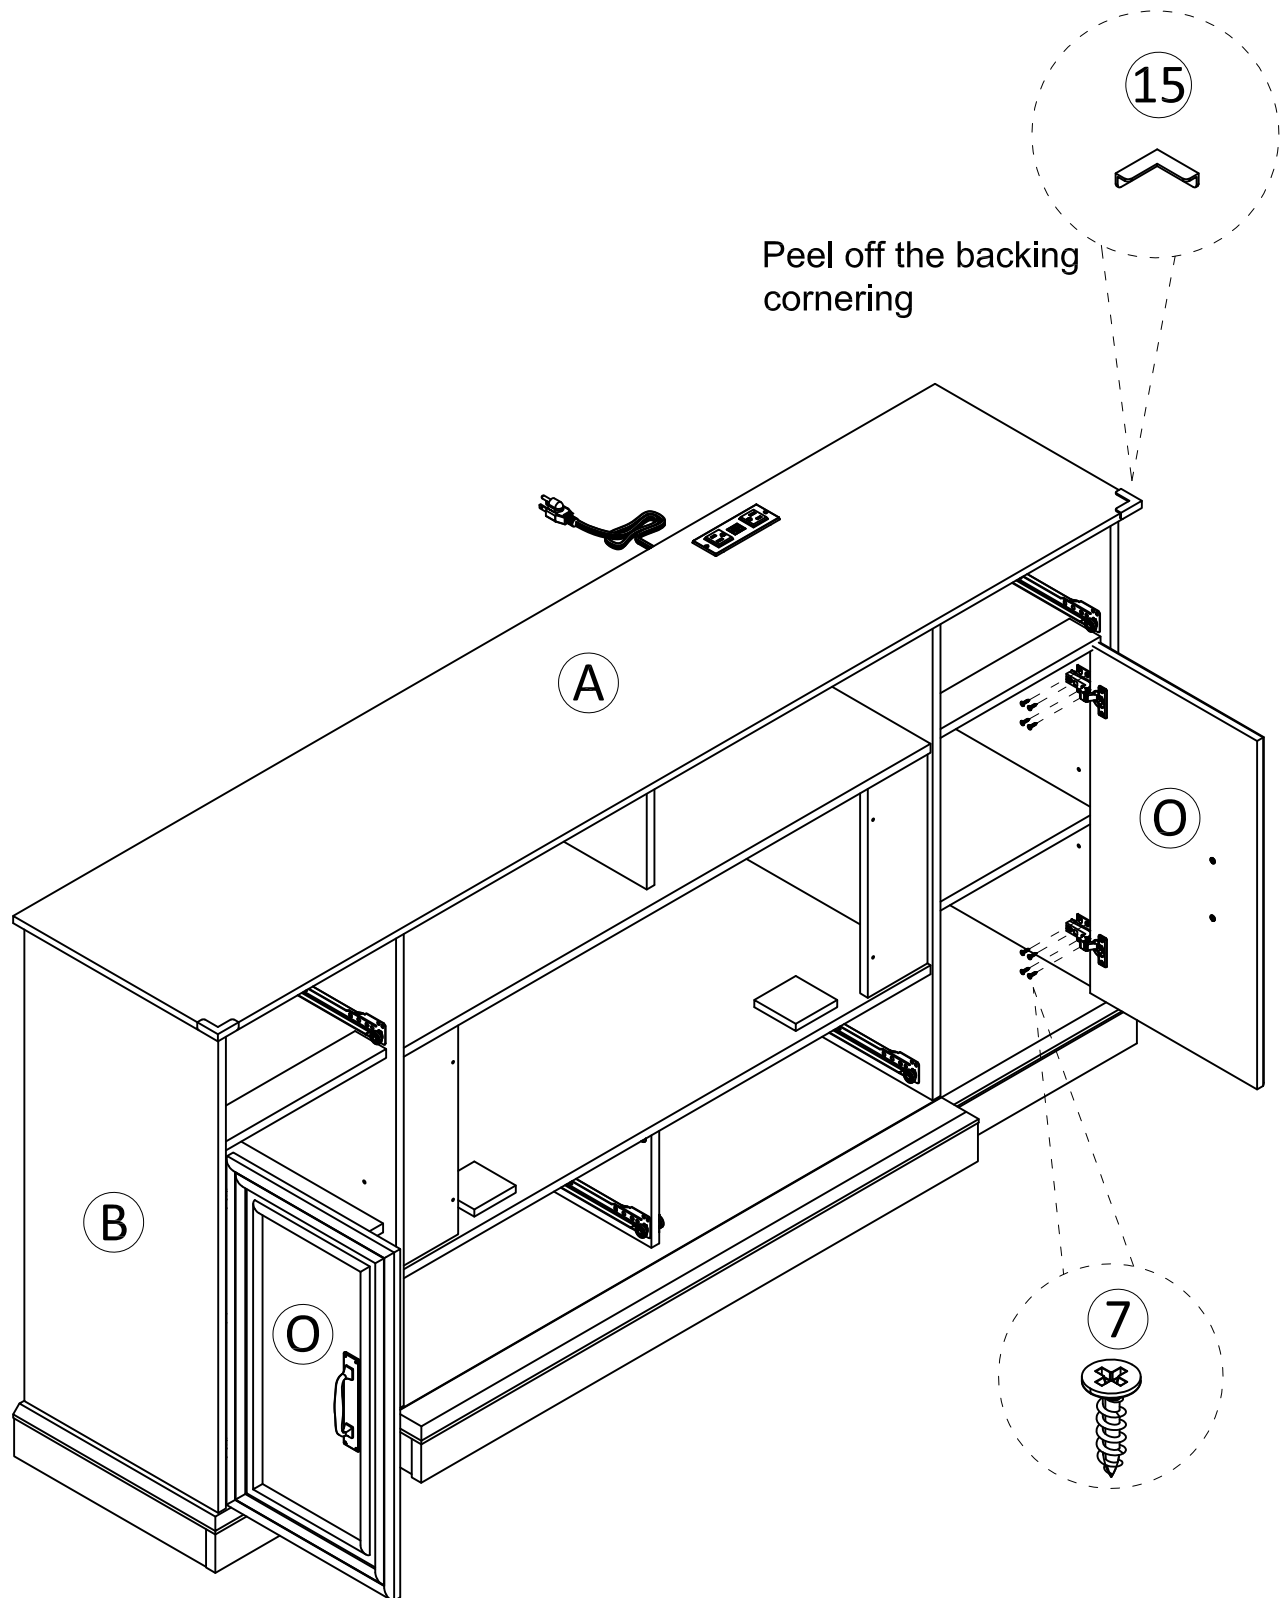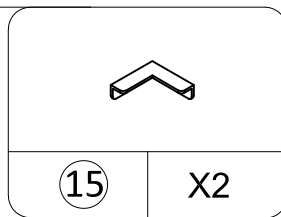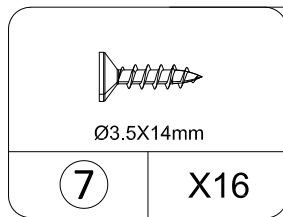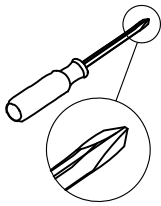

STEP28

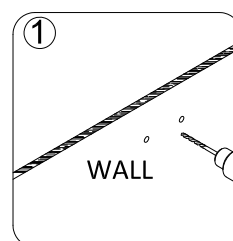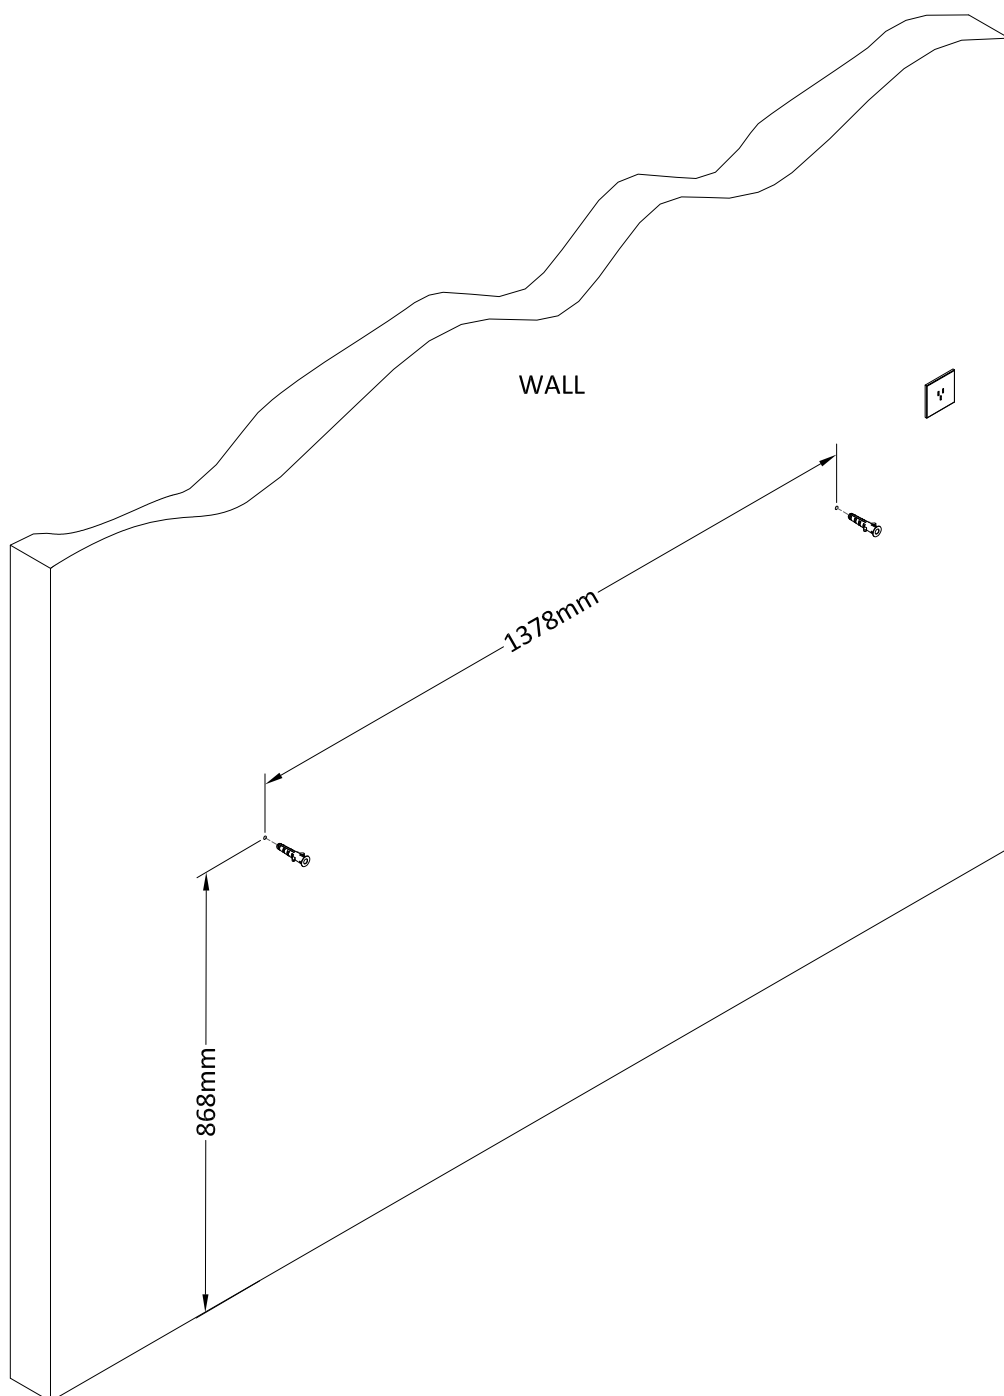
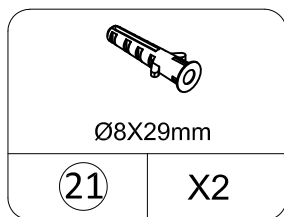
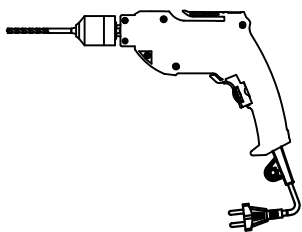


drill two Ø6
holes on the
wall

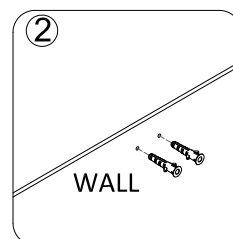

put two anchors
in the holes

STEP29

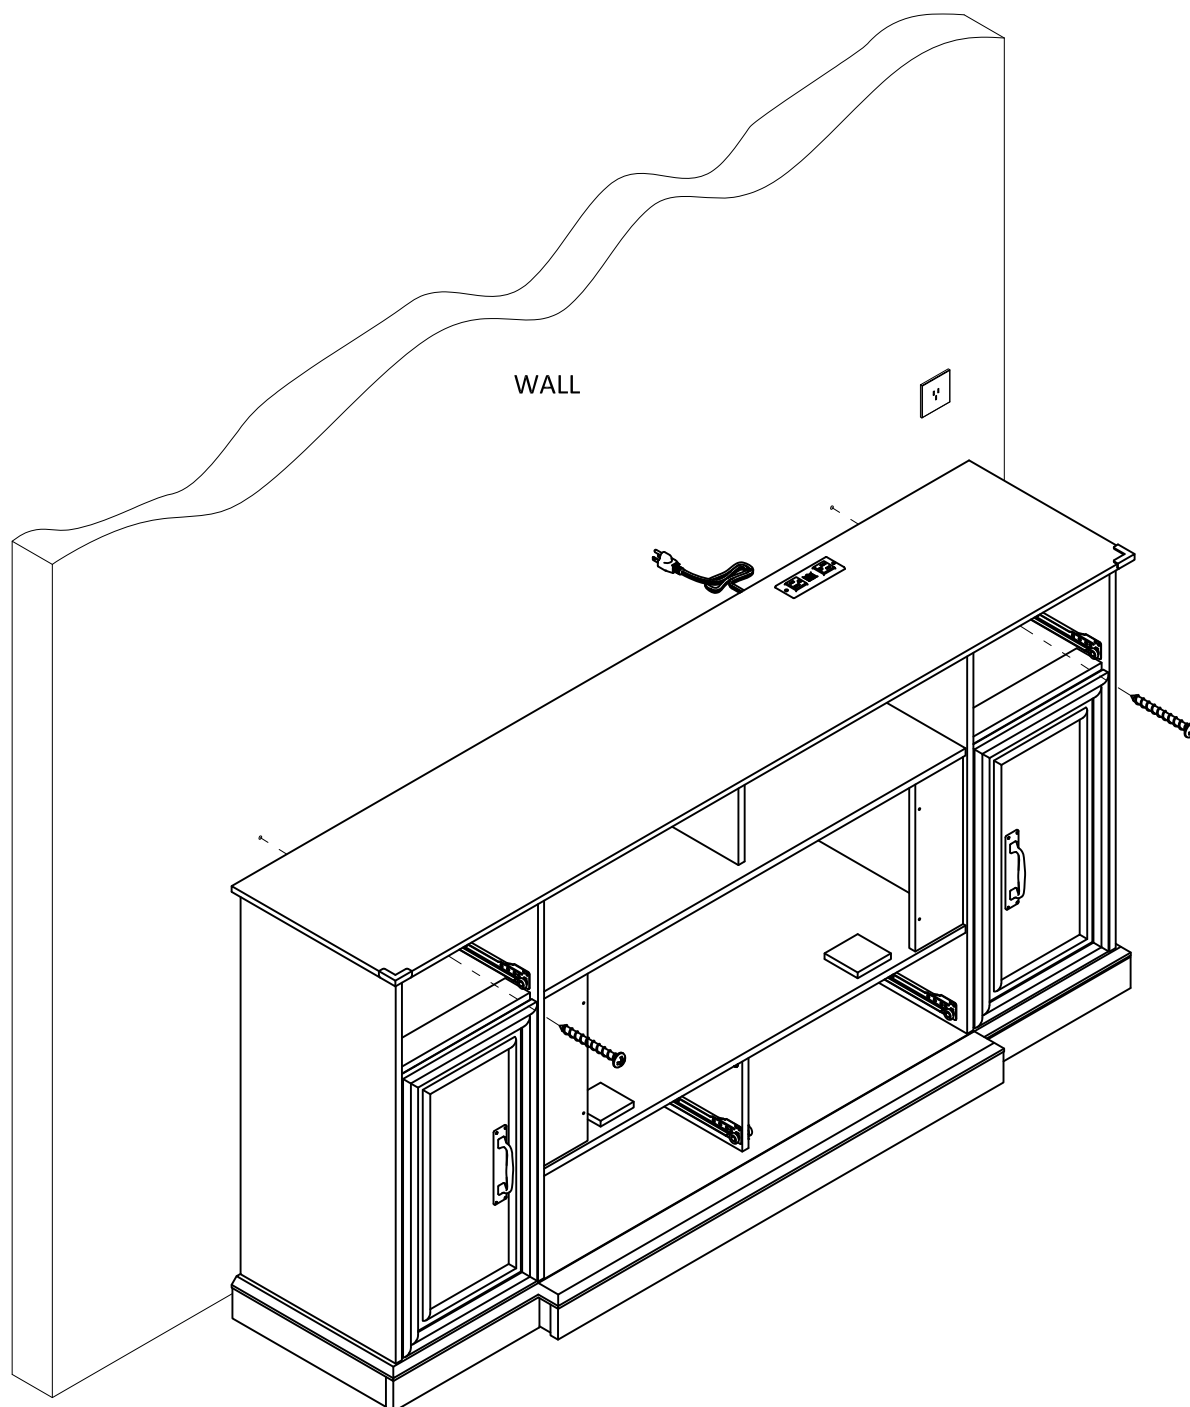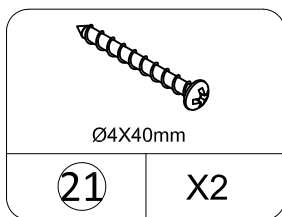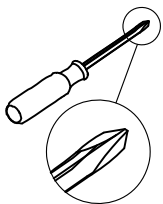

STEP30

