

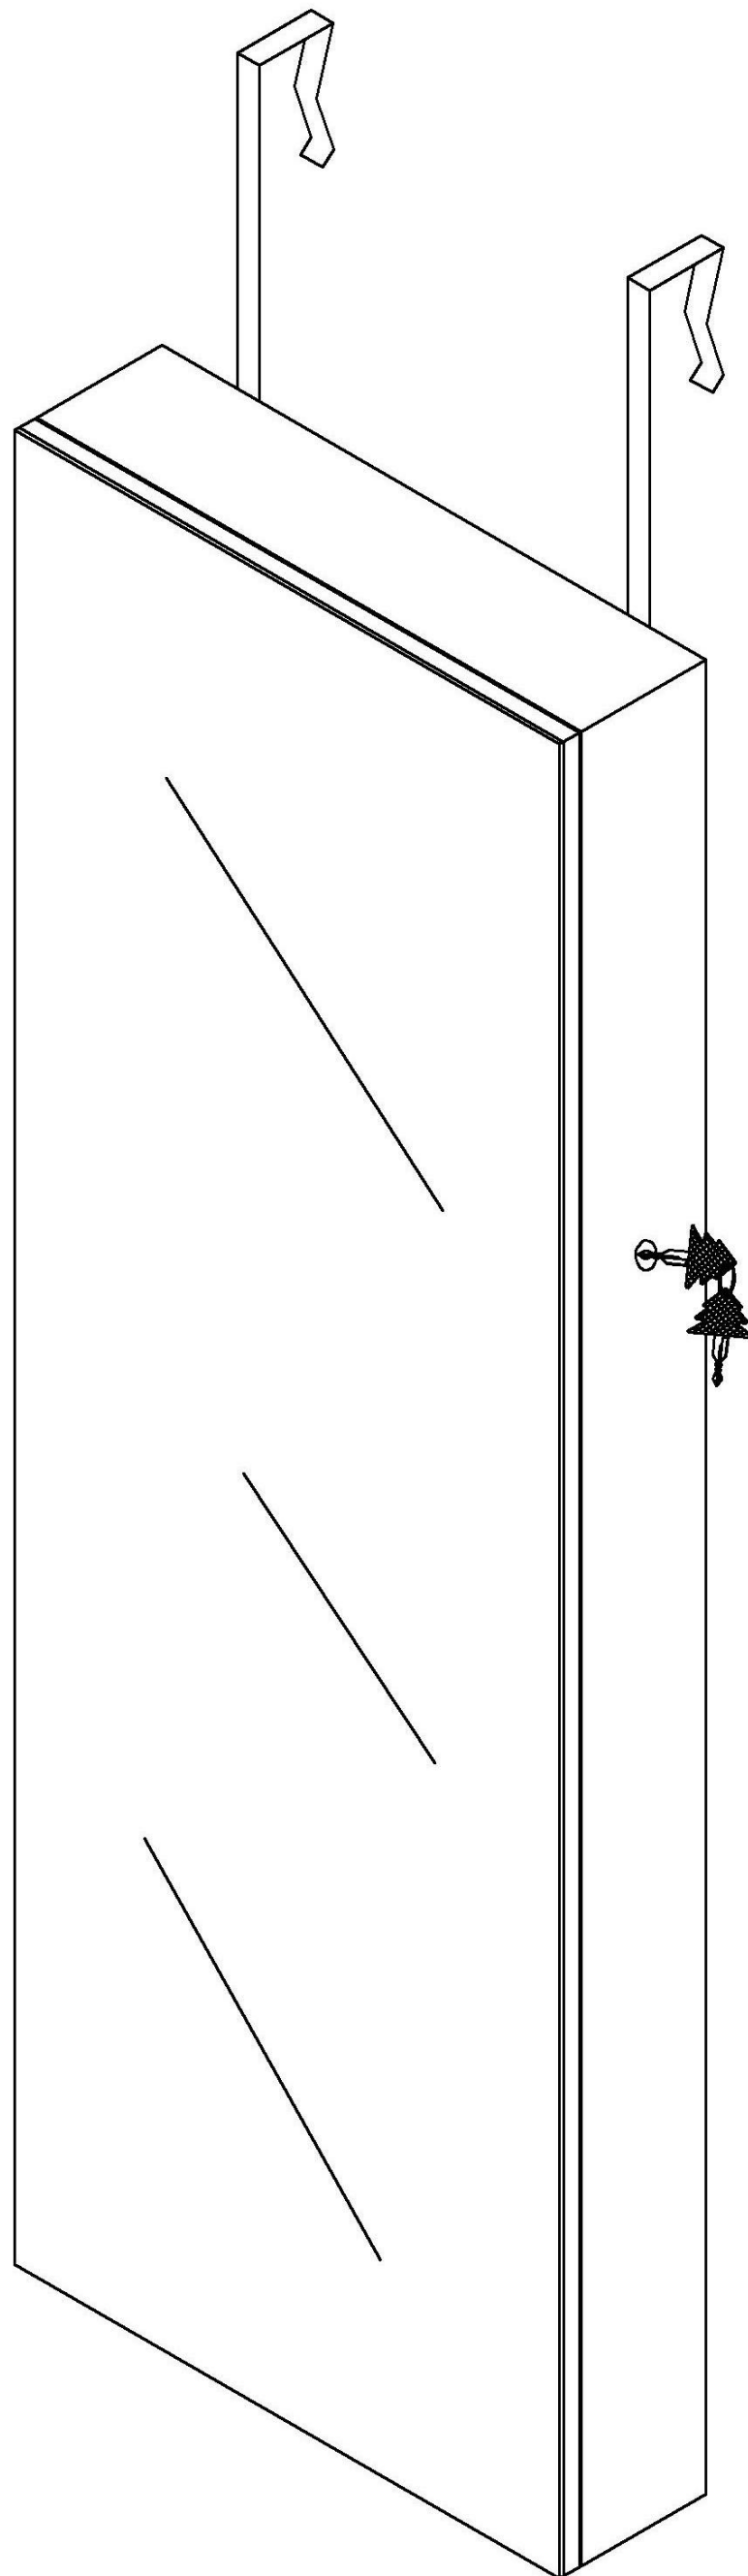






MIRROR JEWELLERY CABINET


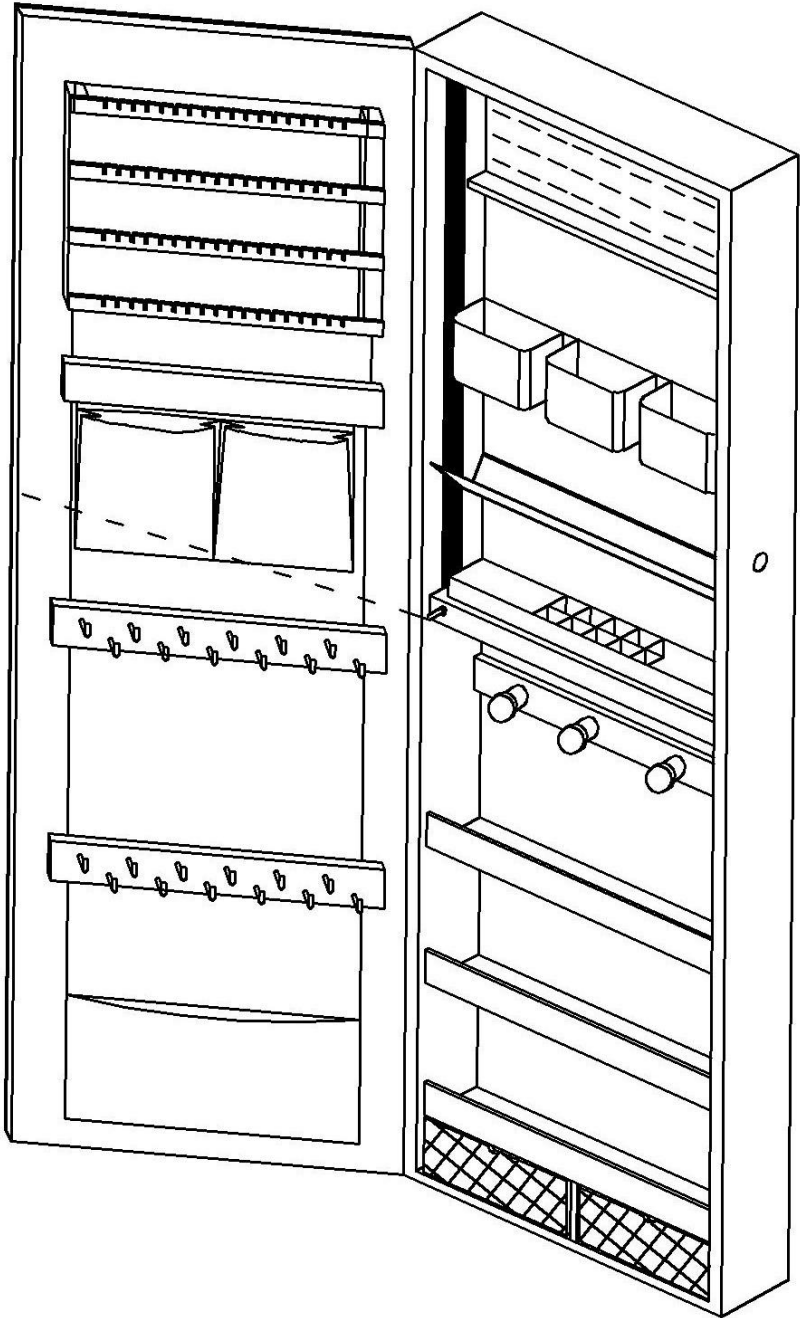



(A)		screw(6*16mm)	4 Pcs
(B)		The key	1 Pcs
(C)		Hook	2 Pcs
(D)		Self tapping wire(4x45mm)	2 Pcs
(E)		Colloidal granules	2 Pcs
(F)		Sponge gasket	4 Pcs
(G)		Adhesive Velcro	1 Pcs



Battery installation
(Tip: use 3 AA Batteries)

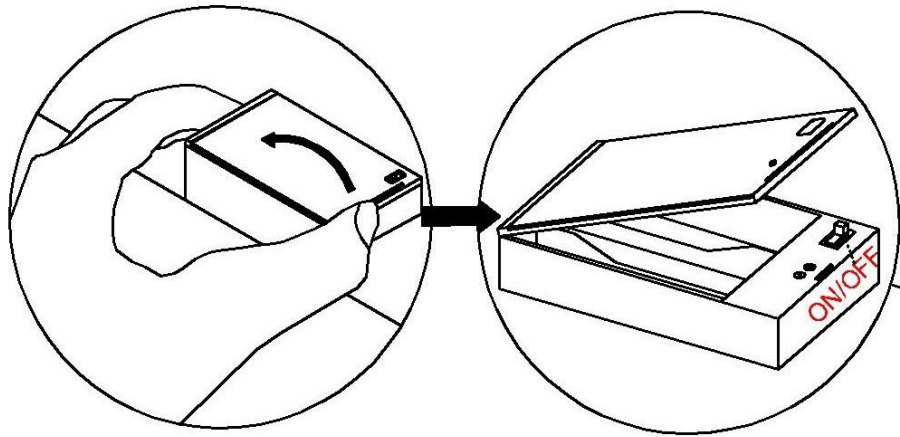

Over The Door

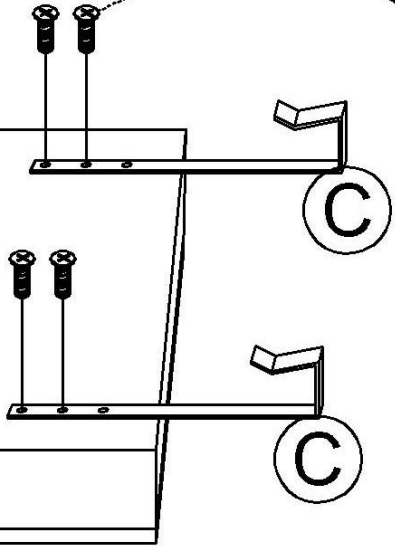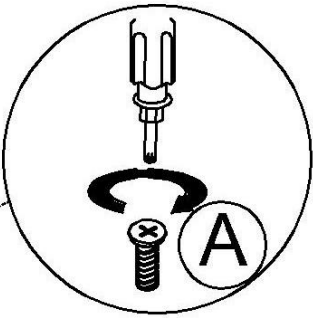


(A)		x 4
(C)		x 2
(F)		x 4
(G)		x 1

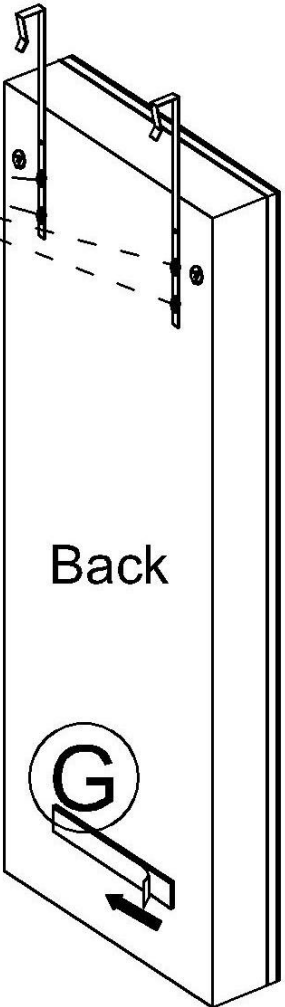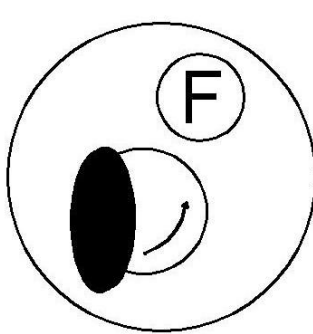


Fixed on the door to prevent swaying.


(B)		x 1
-----	---	-----


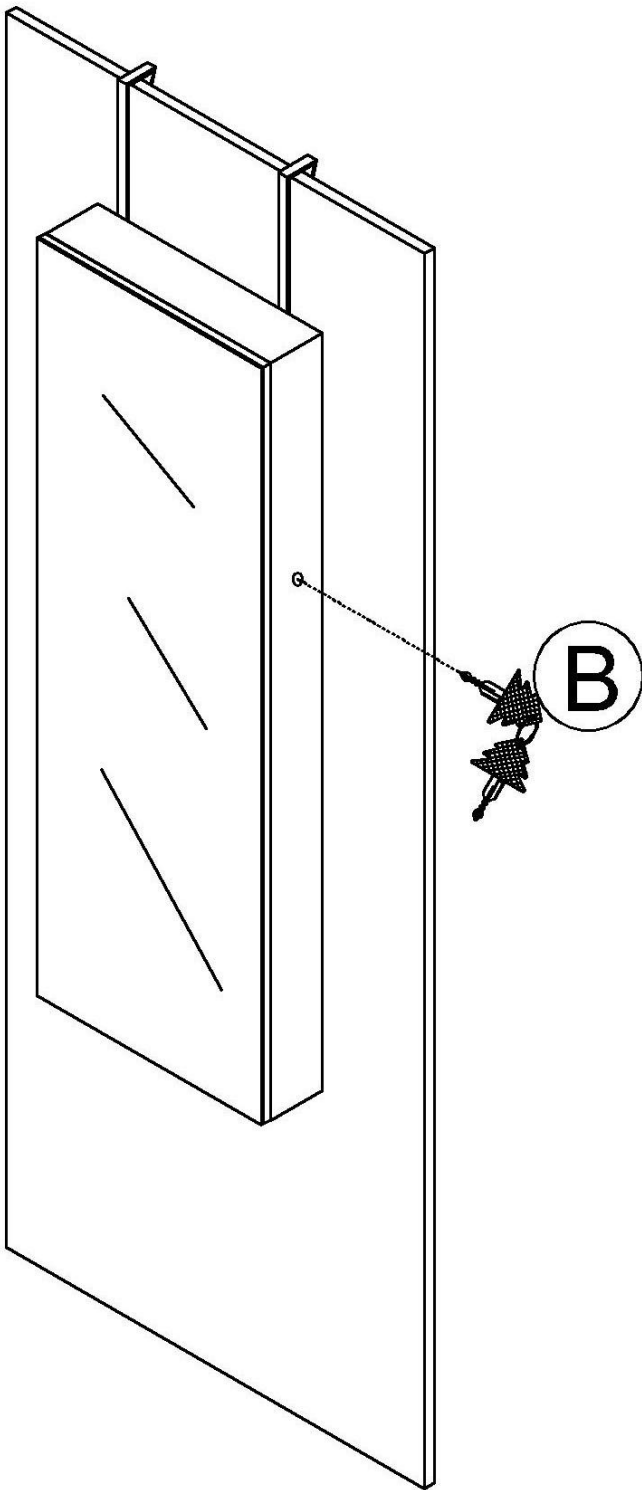



Wall Mount



(Tip: Please use your own tools)

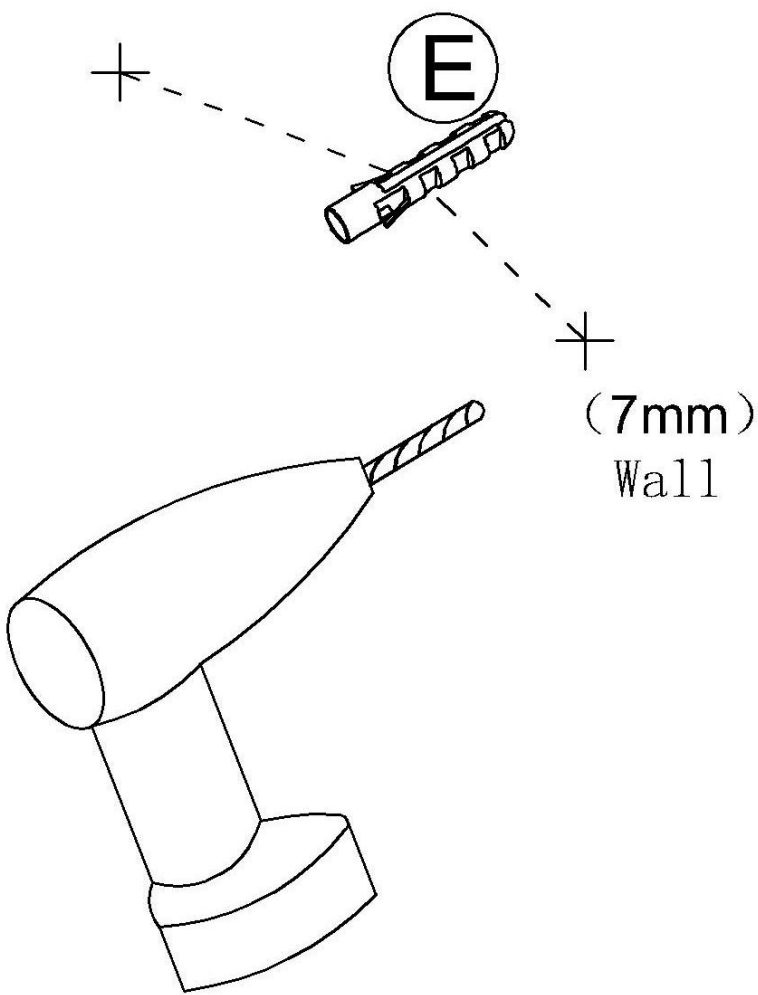

(E)		x 2
(D)		x 2

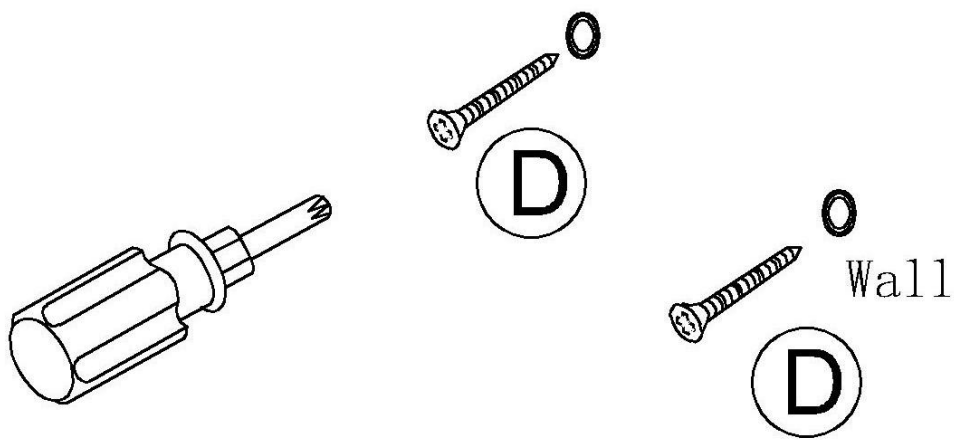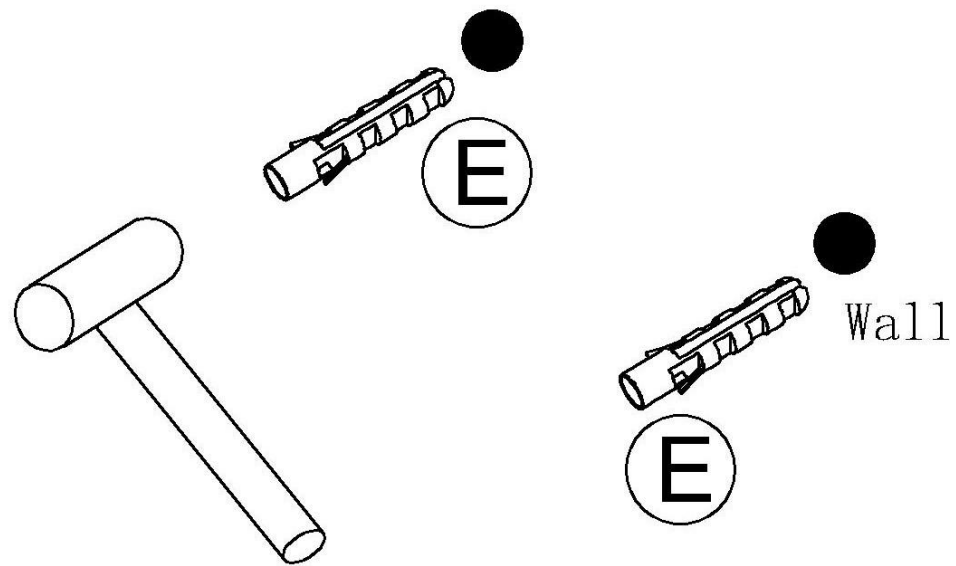

(B)		x 1
(G)		x 1

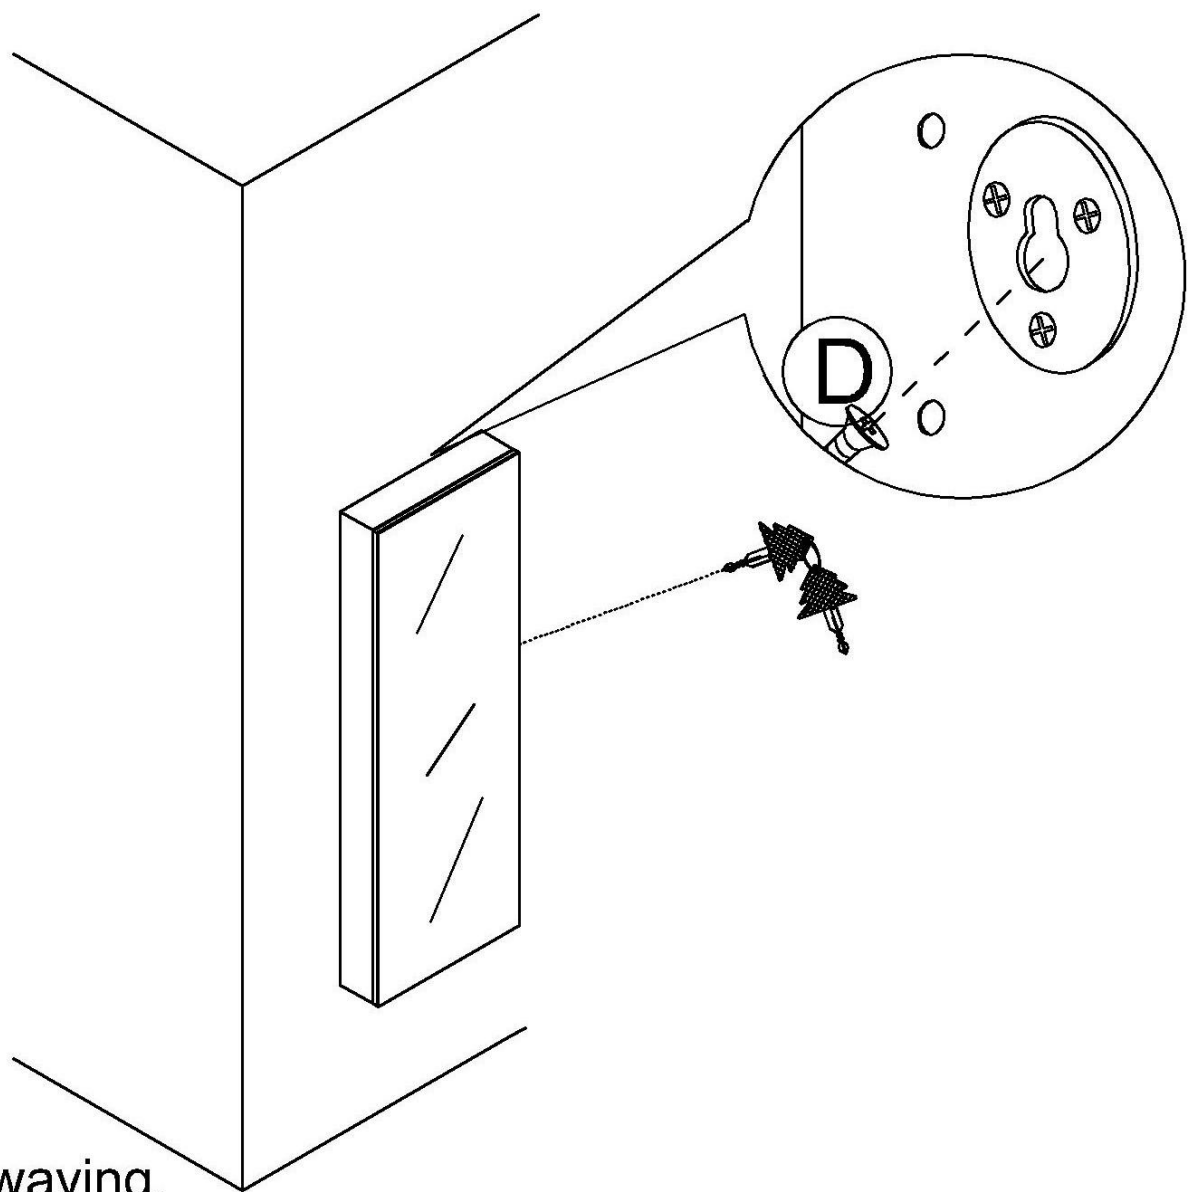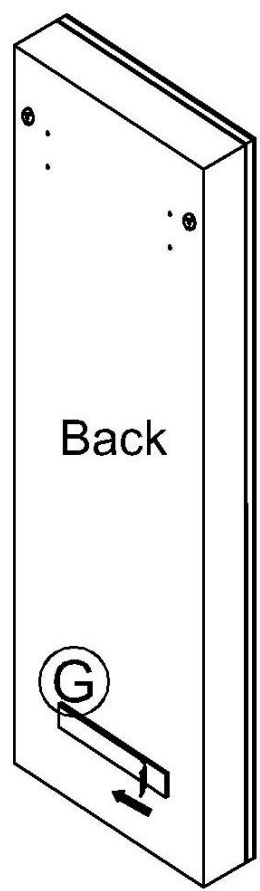

Fixed on the door to prevent swaying.