
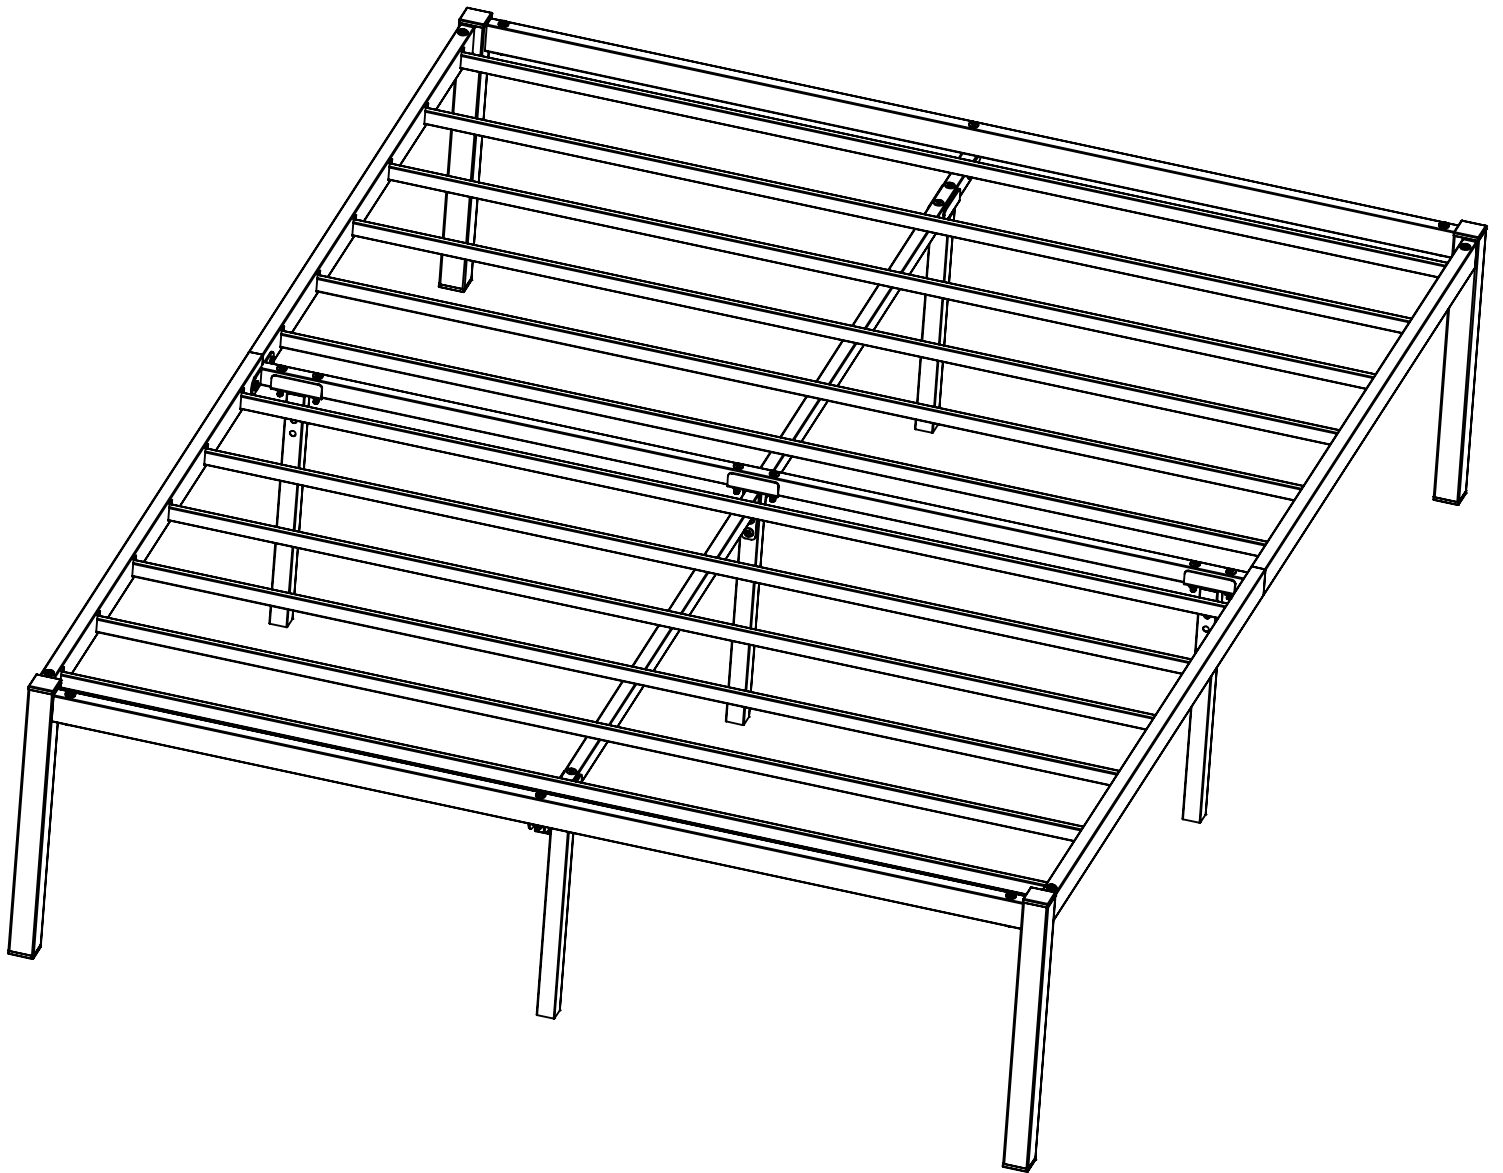

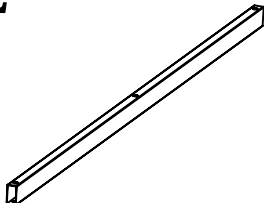
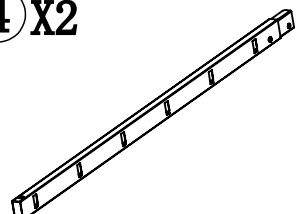
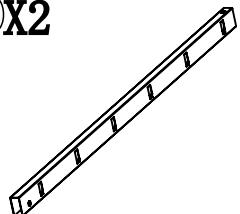
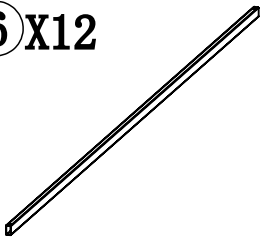
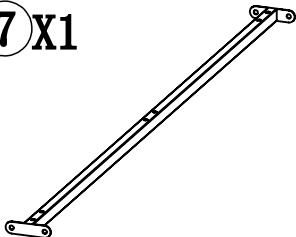
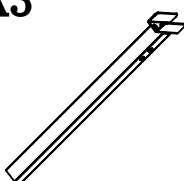
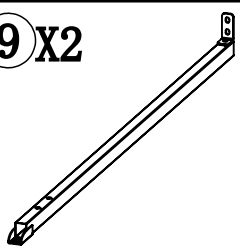
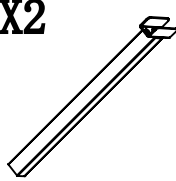

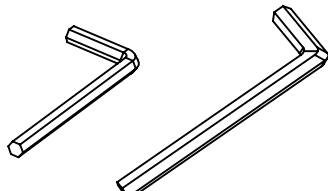



Metal Bed Frame Installation Instruction

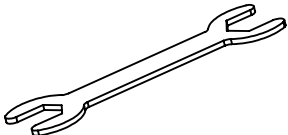


#Numbering System
Easy assembly by following 1,2,3...

② X4 	③ X2 	④ X2 	⑤ X2 
⑥ X12 	⑦ X1 	⑧ X3 	⑨ X2 
⑩ X2 	Ⓐ X2  M6X50	Ⓑ X12  M6X40	Ⓒ X20  M8X12
Ⓓ X12  M6	Ⓚ X24 		


1.

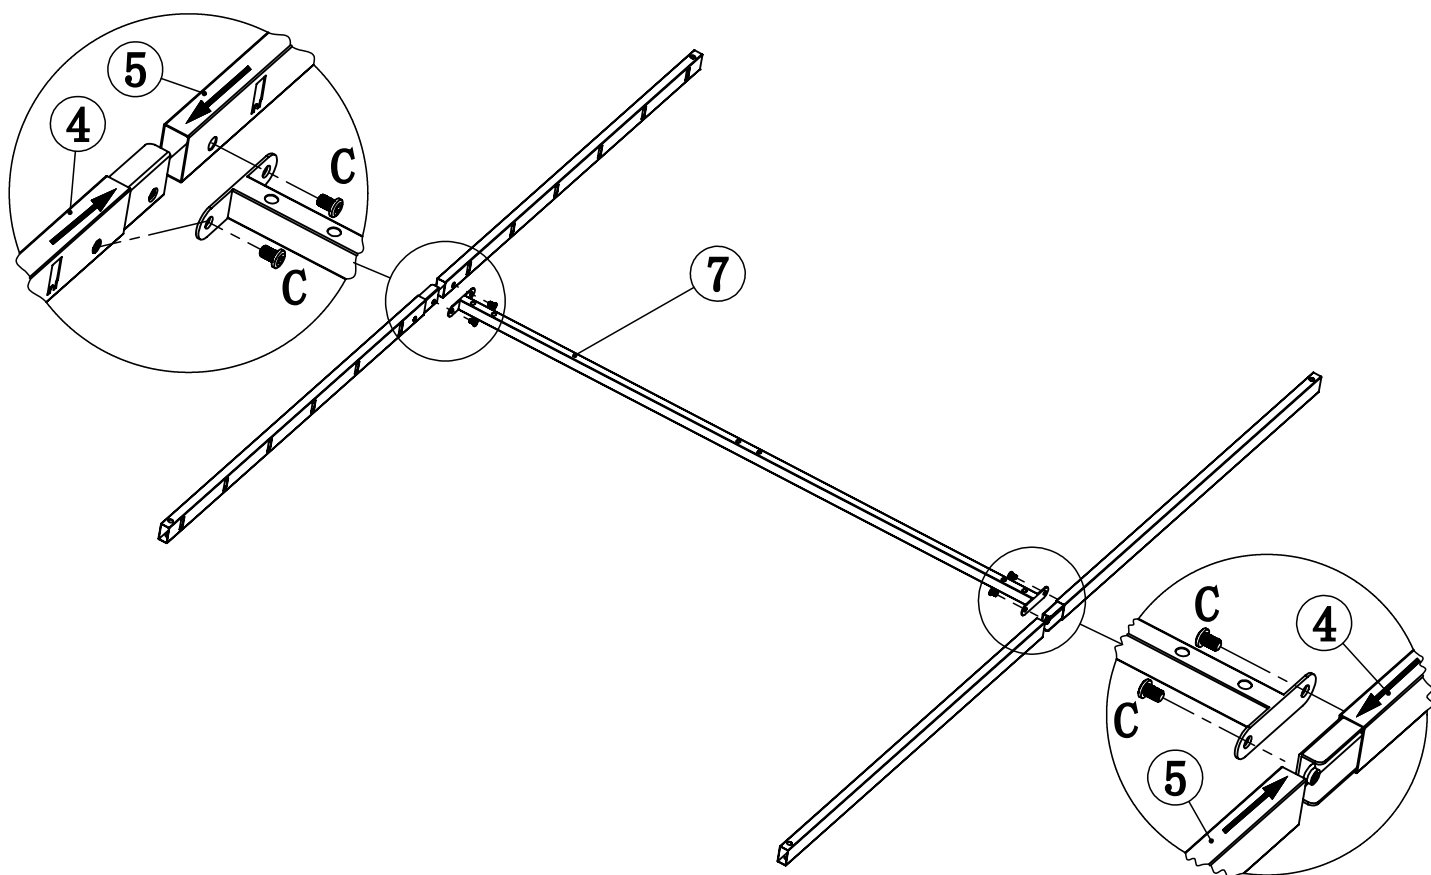


2.

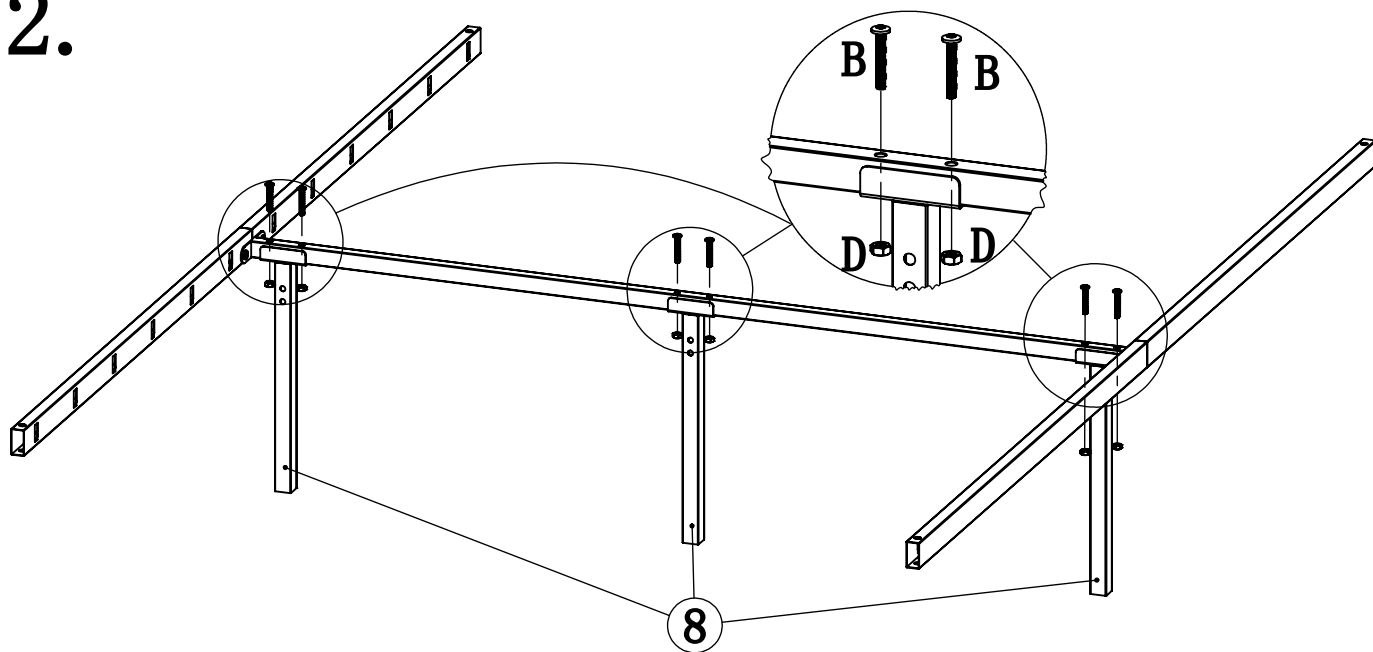


3.

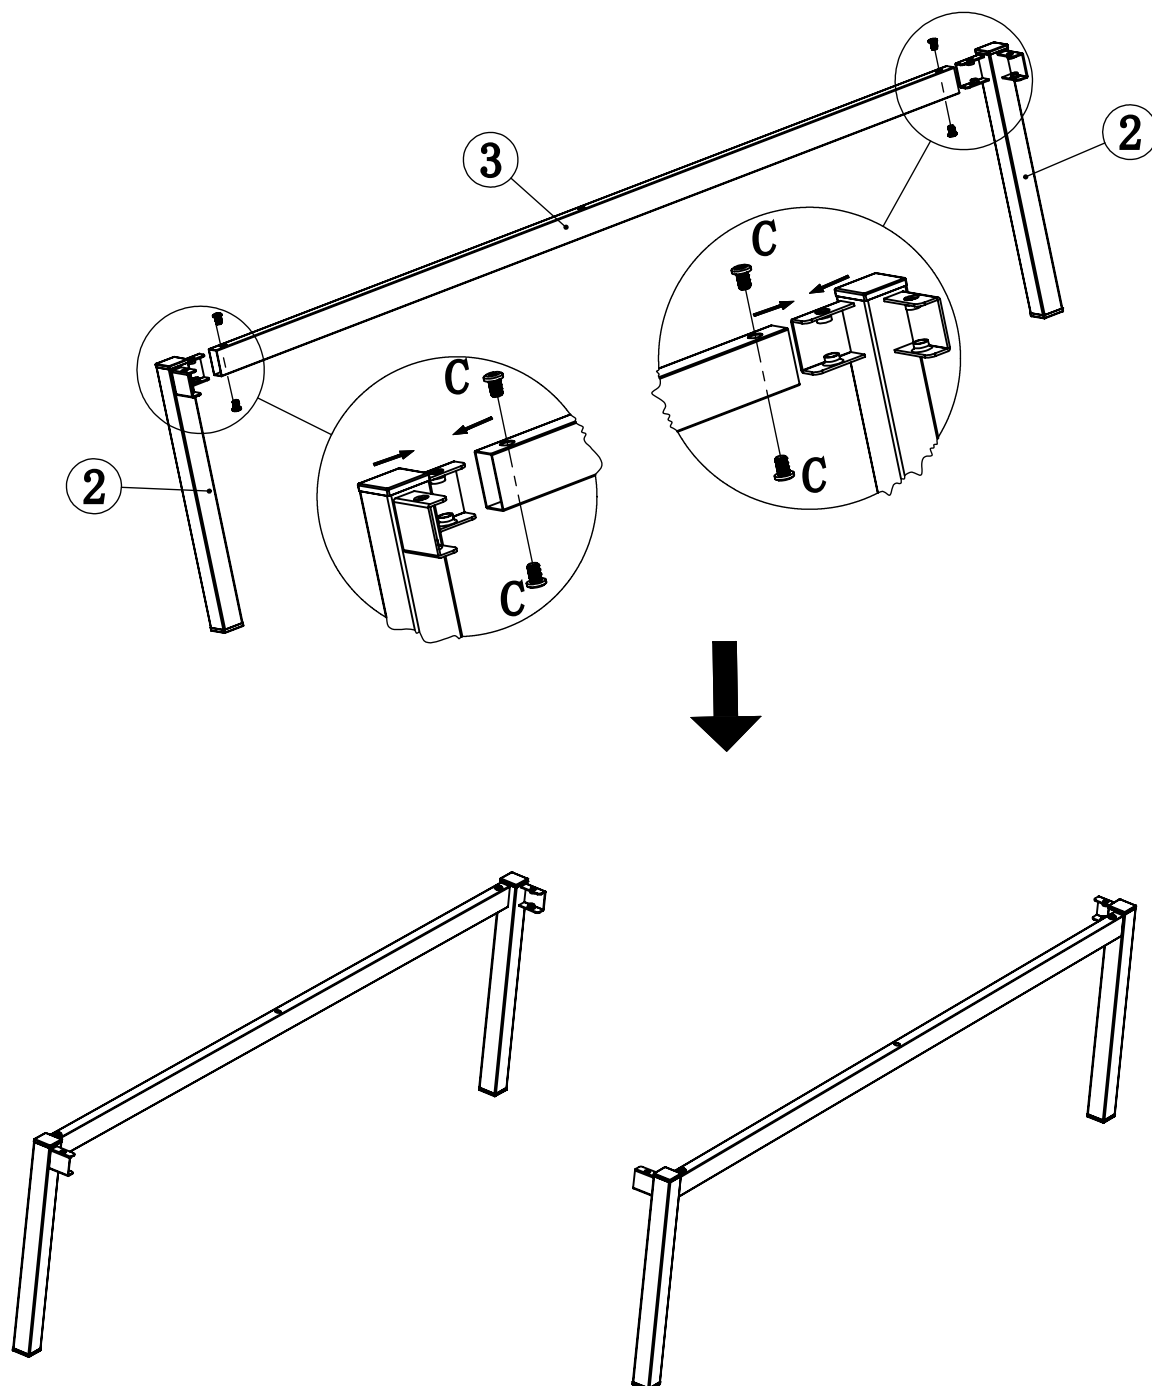


4.

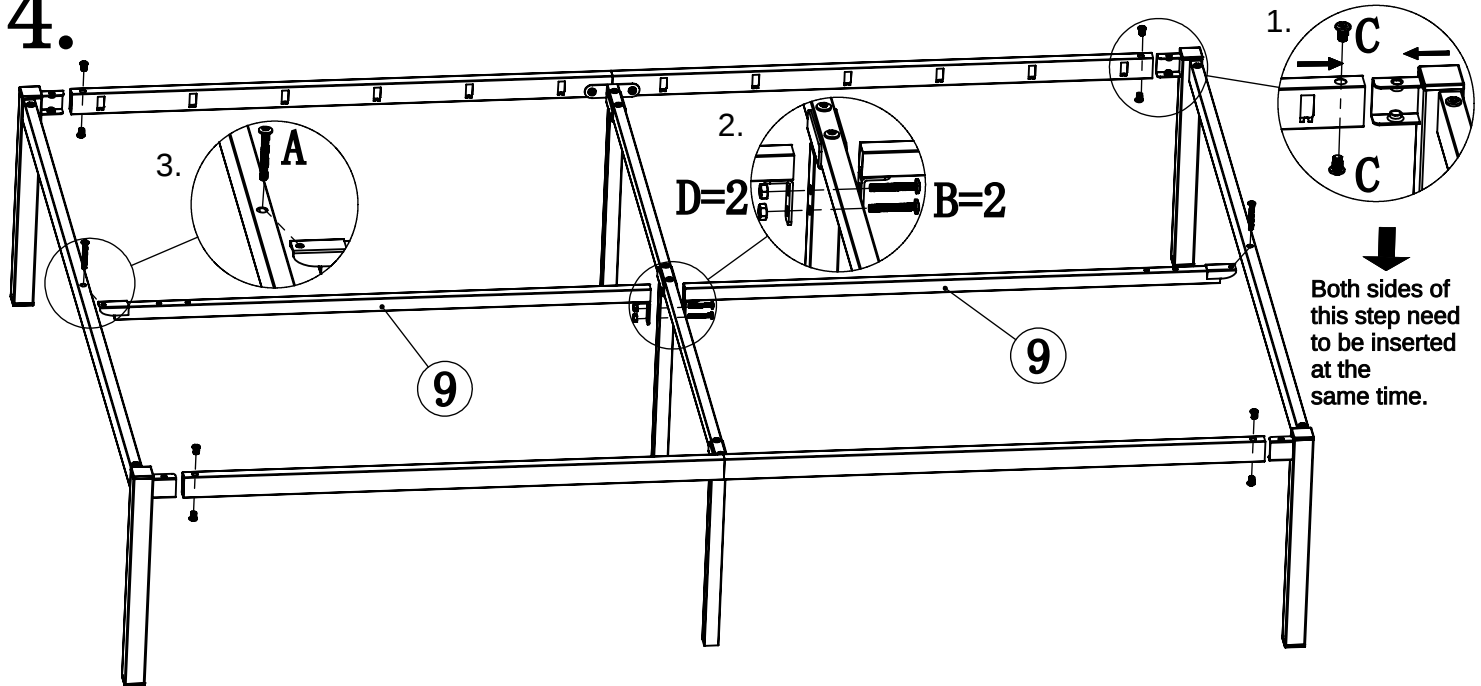


5.

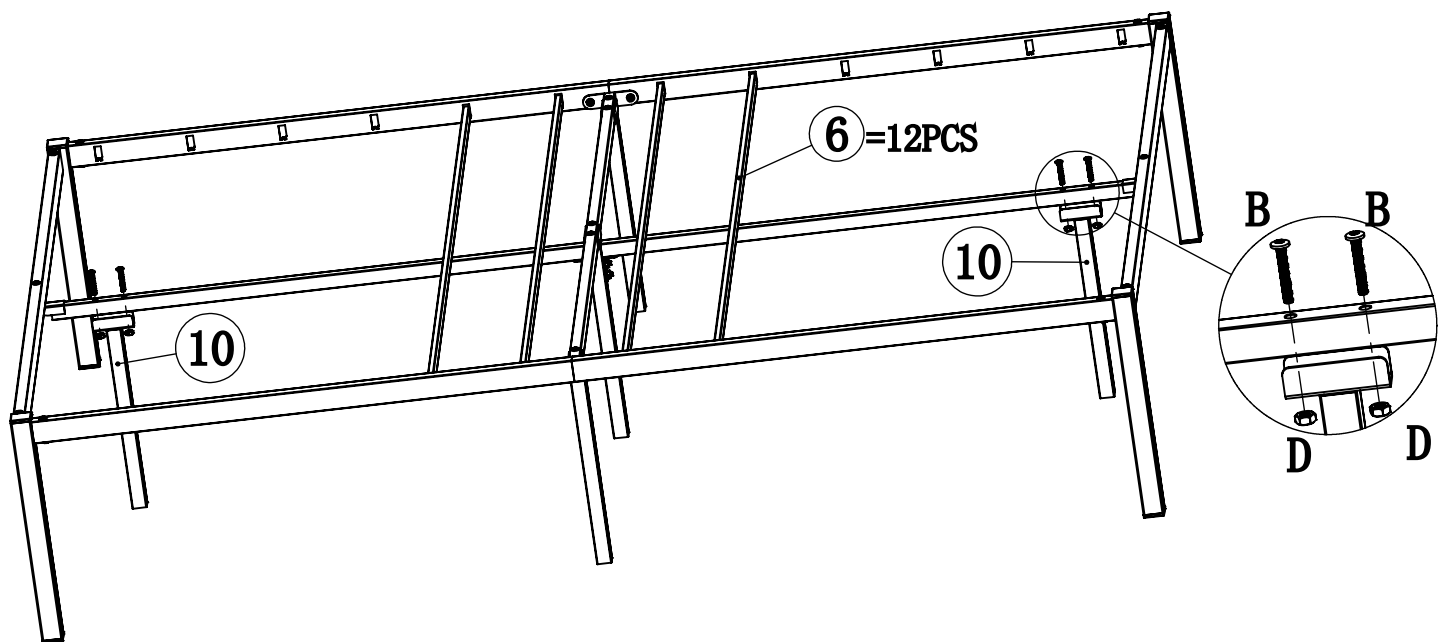


Detailed Installation Steps of part ⑥:

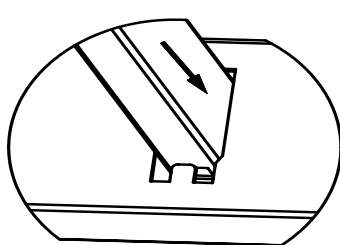

1. Fully inserted;

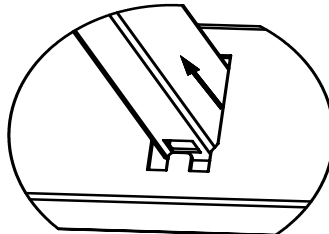


2. Align the holes on the other side and pull them reverse at the same time;

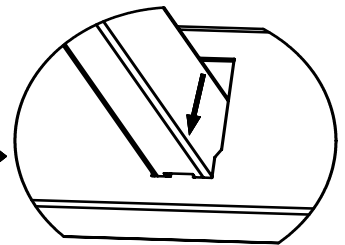

3. Align the small square hole and buckle it down to the end;

Note: Please check out the whole installation to ensure the small square holes on both sides of part⑥ are fastened firmly and all the screws are fastened completely.

6.

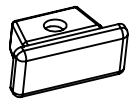

K=24pcs

