

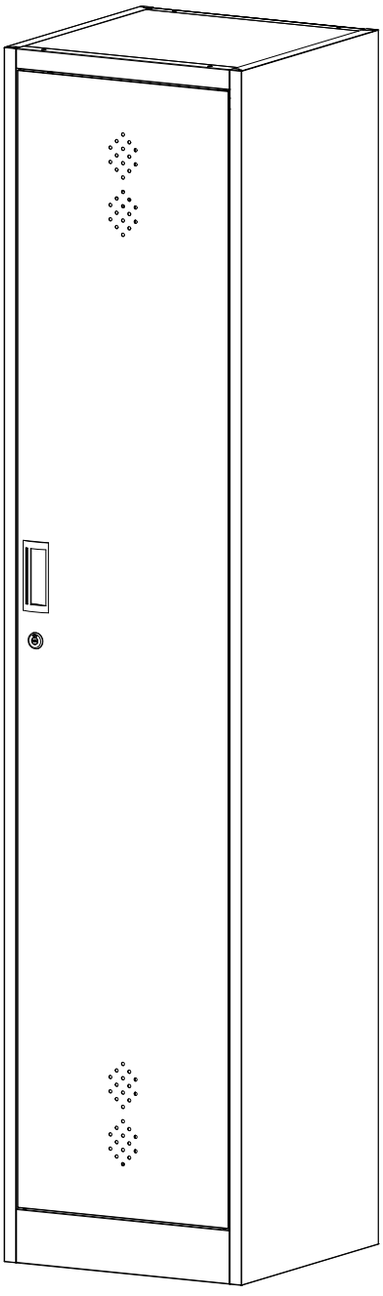
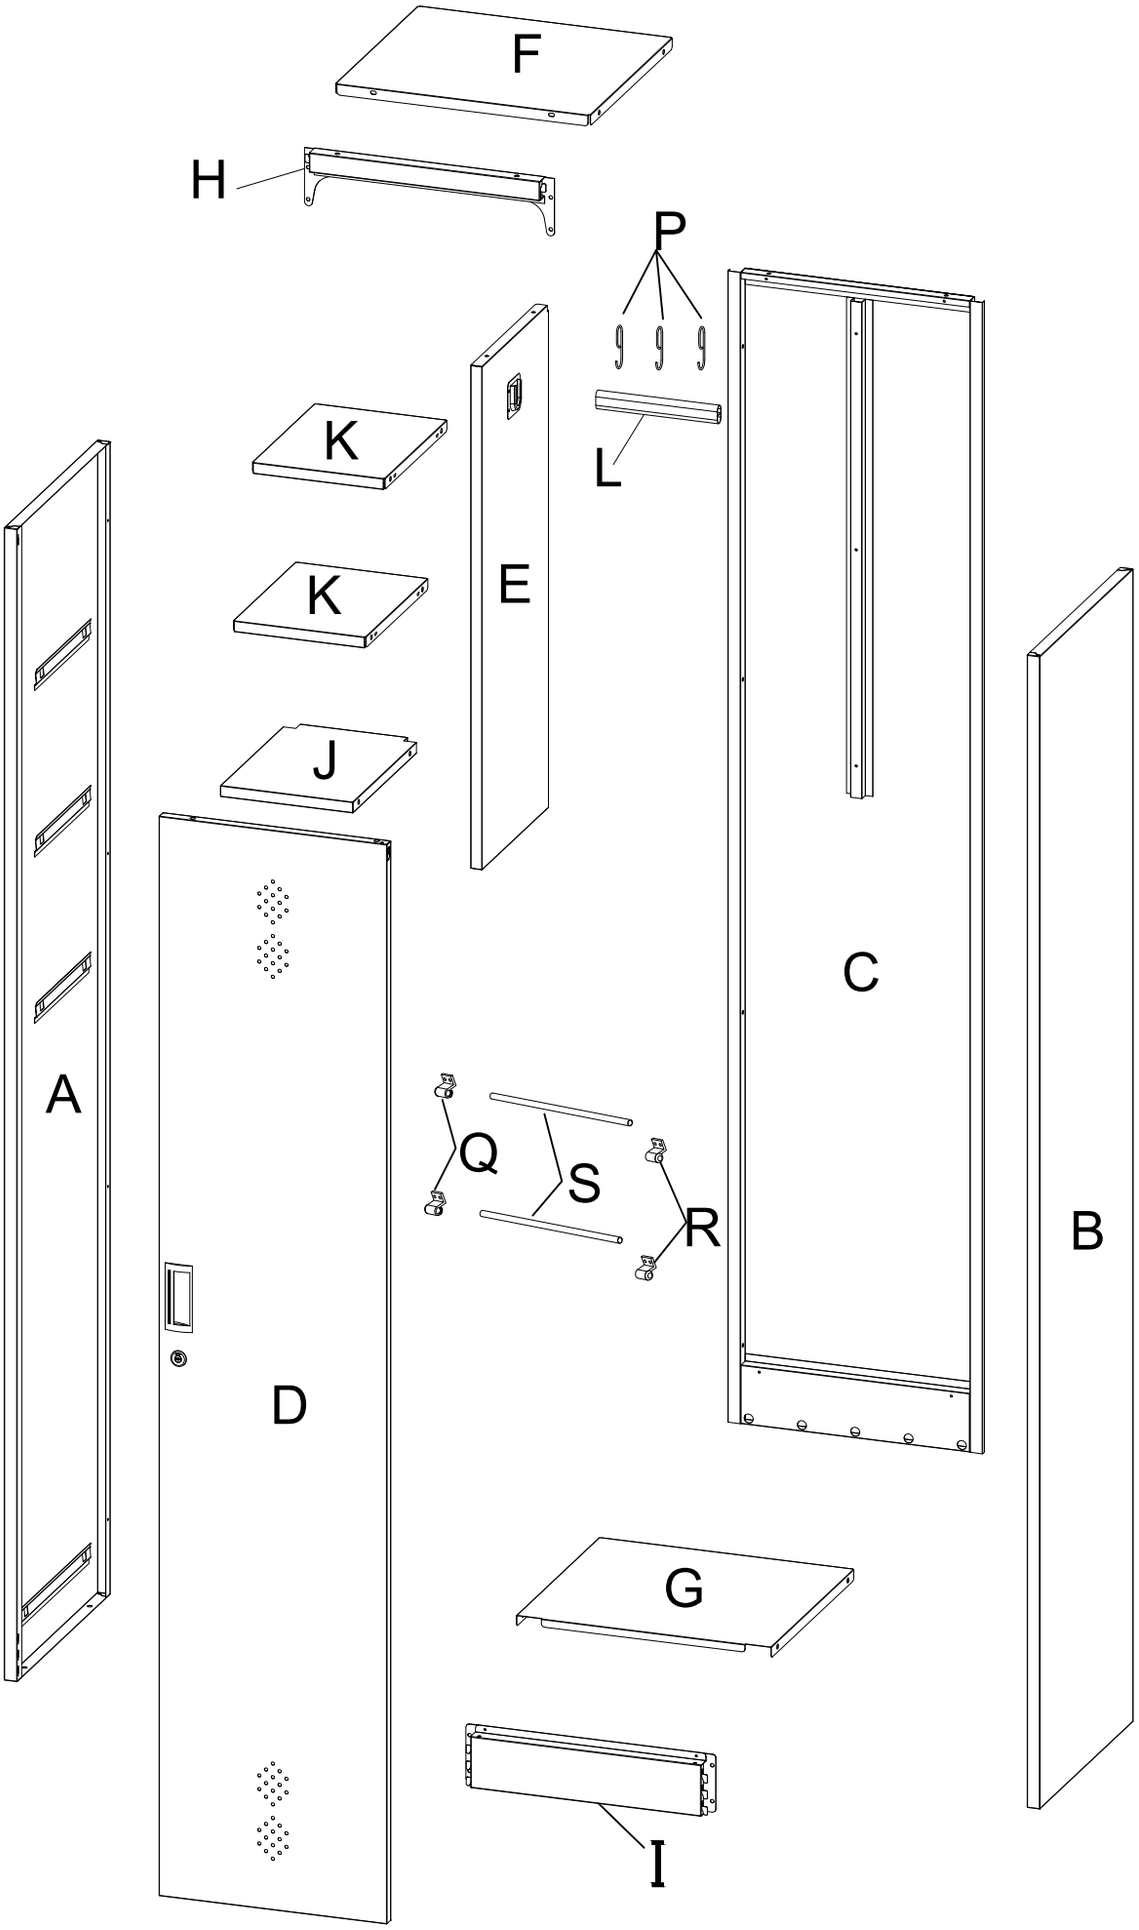



F
H
P
K
L
K
E
J
A
C
B
D
Q
S
R
G
I


A×1

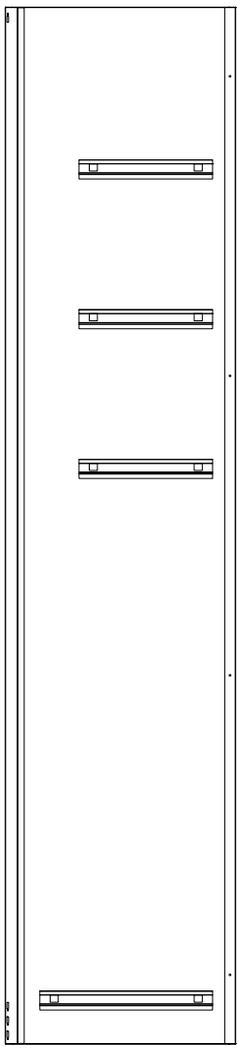


B×1

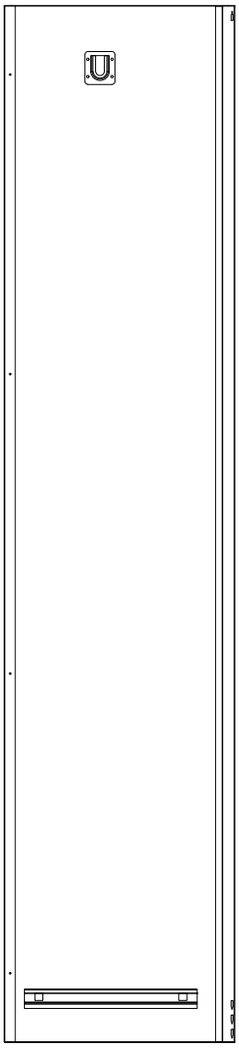


C×1

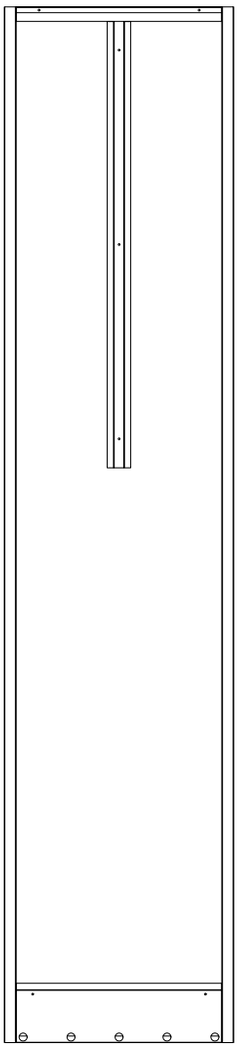


D×1

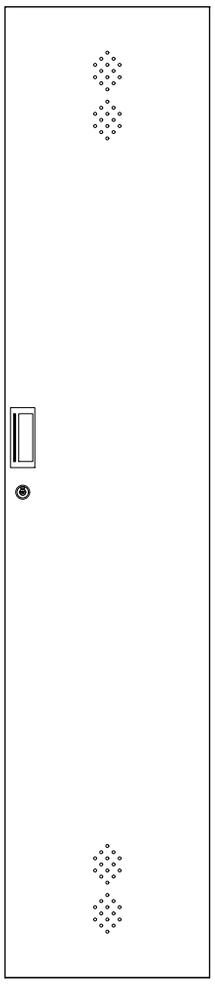


E×1

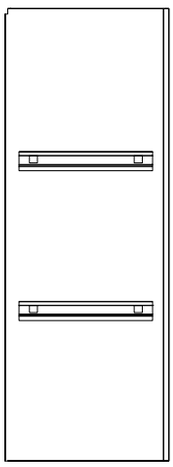

F×1



G×1




H×1




I×1




J×1




K×2




L×1



M×37



N×1



O×1


Spare Parts




P×3



Q×4



R×2




S×2




T×2





1


Simply overlap each sidewall in the channel of the rear wall and put four screws on each side to hold them in place. Note that Part A is on the left side and Part B is on the right side. If they are misplaced, it will affect the assembly.

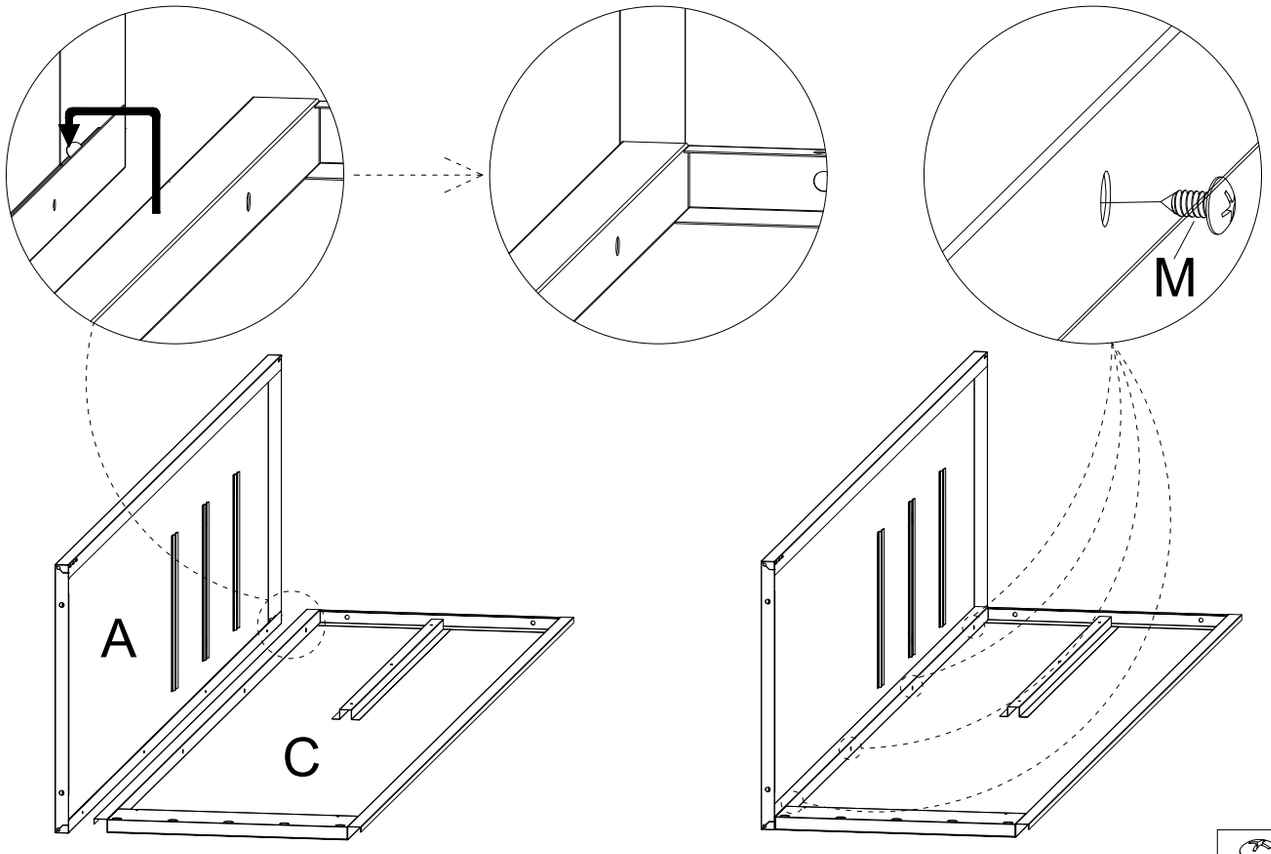

M×4

2


Simply overlap each sidewall in the channel of the rear wall and put four screws on each side to hold them in place. Note that Part A is on the left side and Part B is on the right side. If they are misplaced, it will affect the assembly.

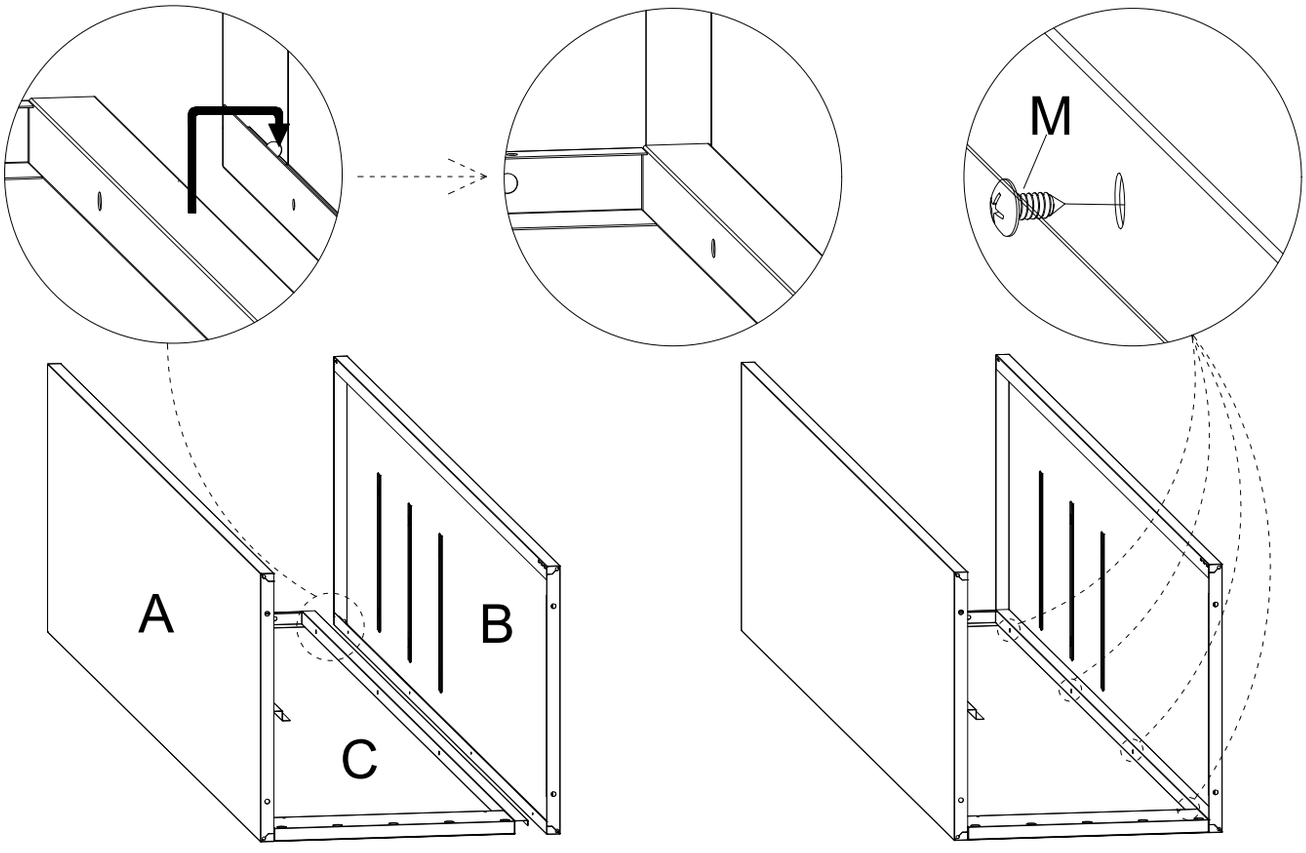

M×4

3


Snap the buckle on either side of Part I into the hole in both side panels and then push it down so that it snaps into the bottom of the cabinet and then put four screws R from inside to hold it into place.

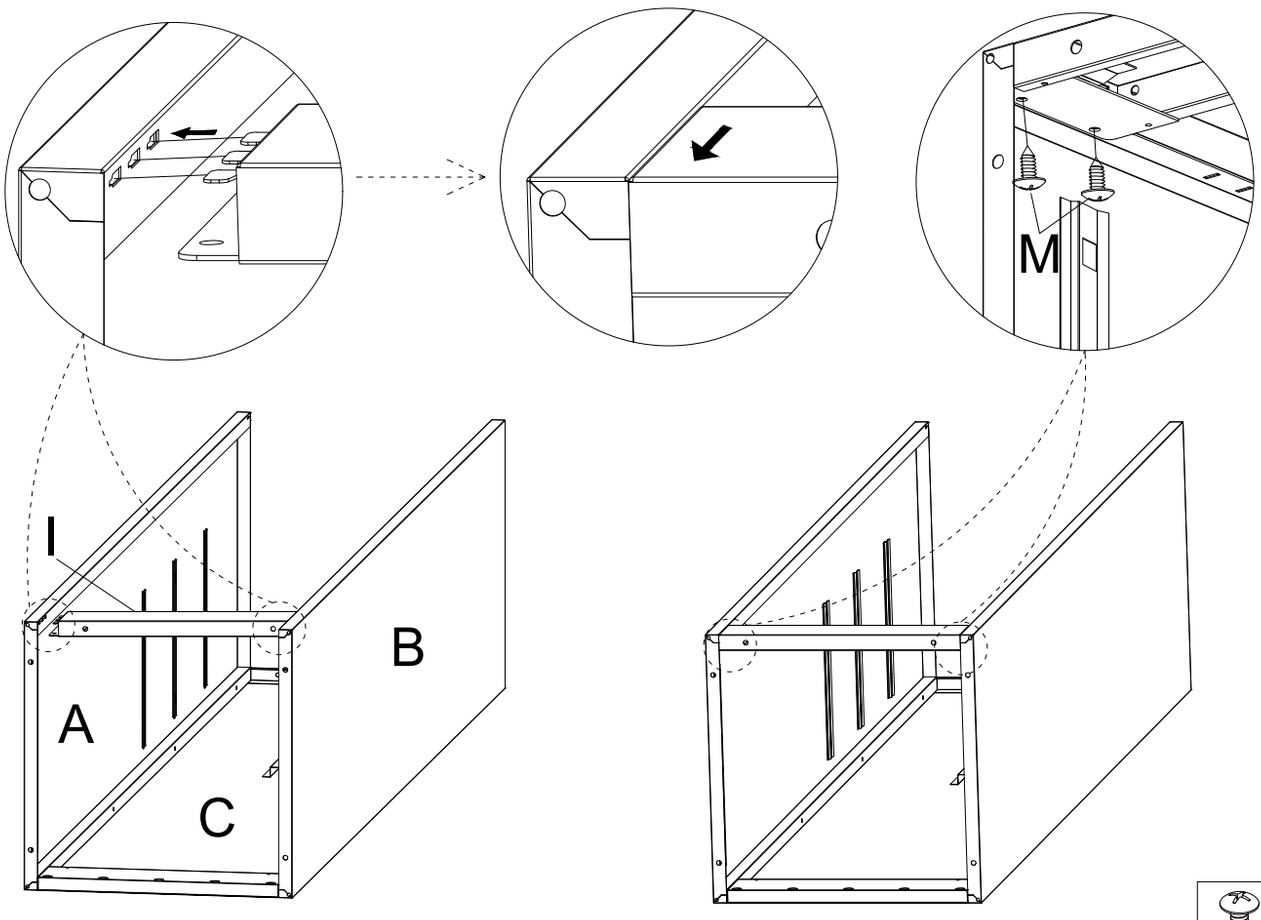

M×4

4


Snap the buckle on either side of Part H into the hole in both side panels and then push it up so that it snaps into the top of the cabinet and then put four screws M from inside to hold it into place.

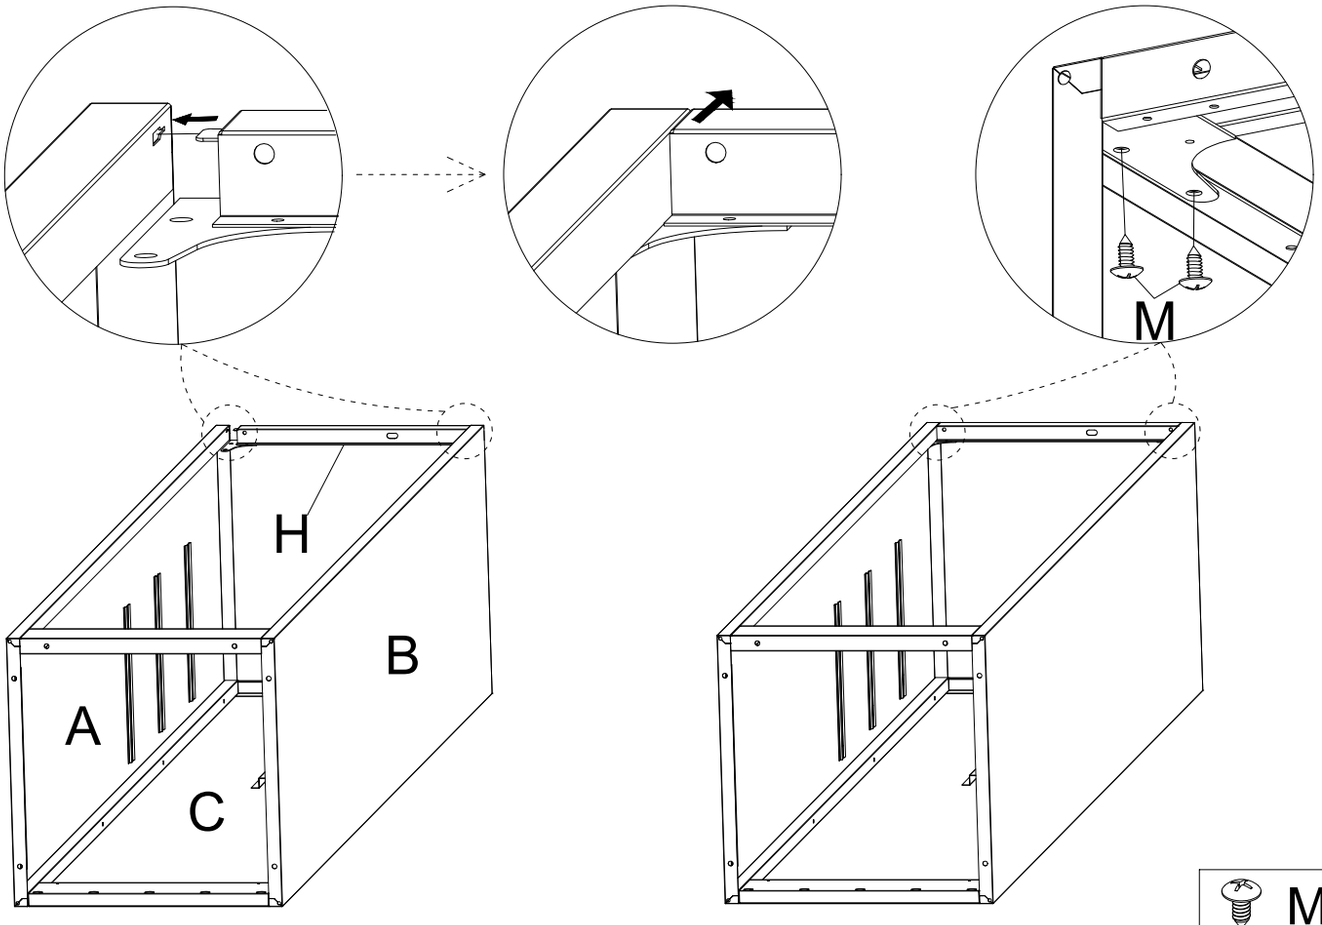

M×4

5


Put in Part F, orient the support bar on the back of F vertically, and then put two screws at the top and bottom respectively to fix it.

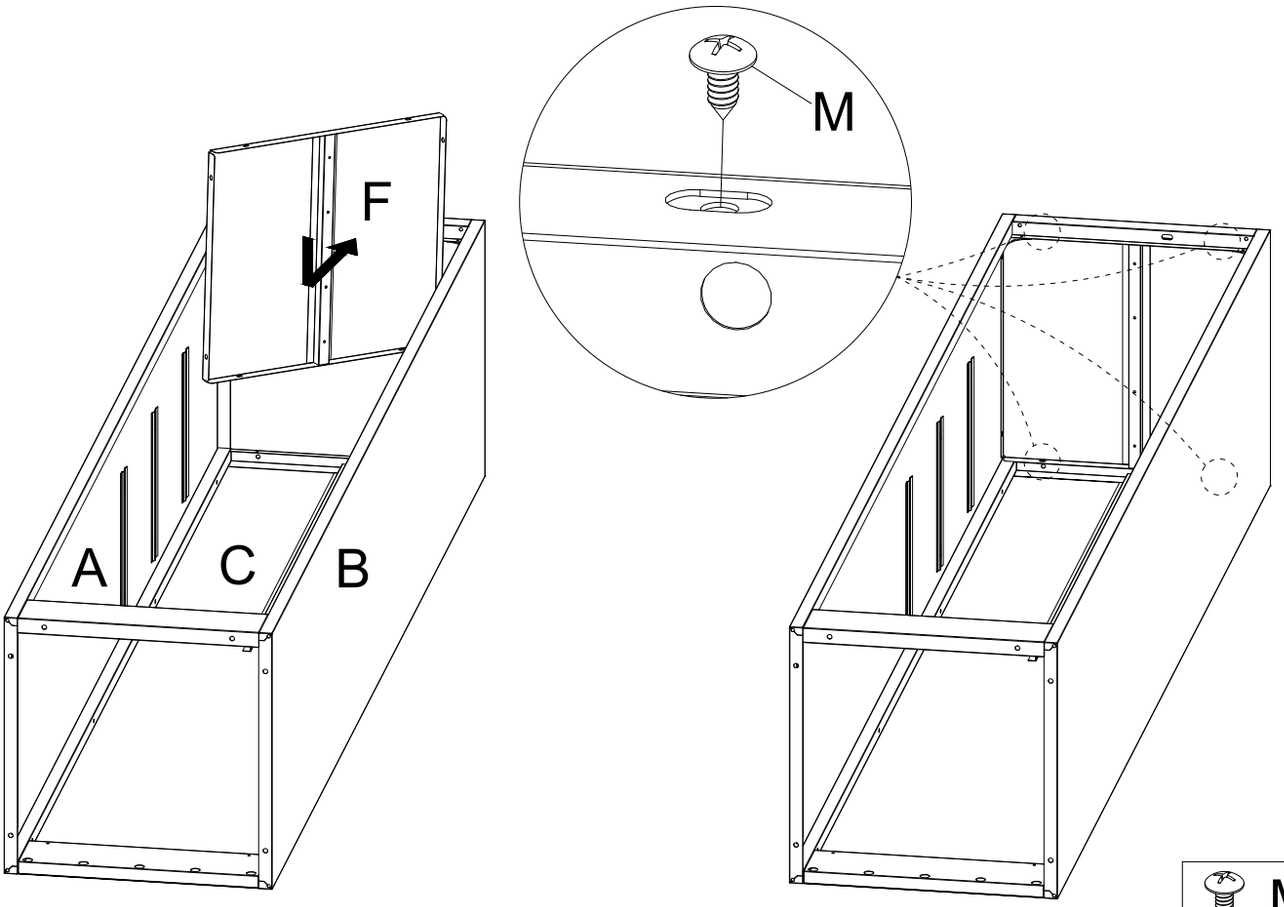

M×4

6


When placing Part G, place the notched side facing forward.

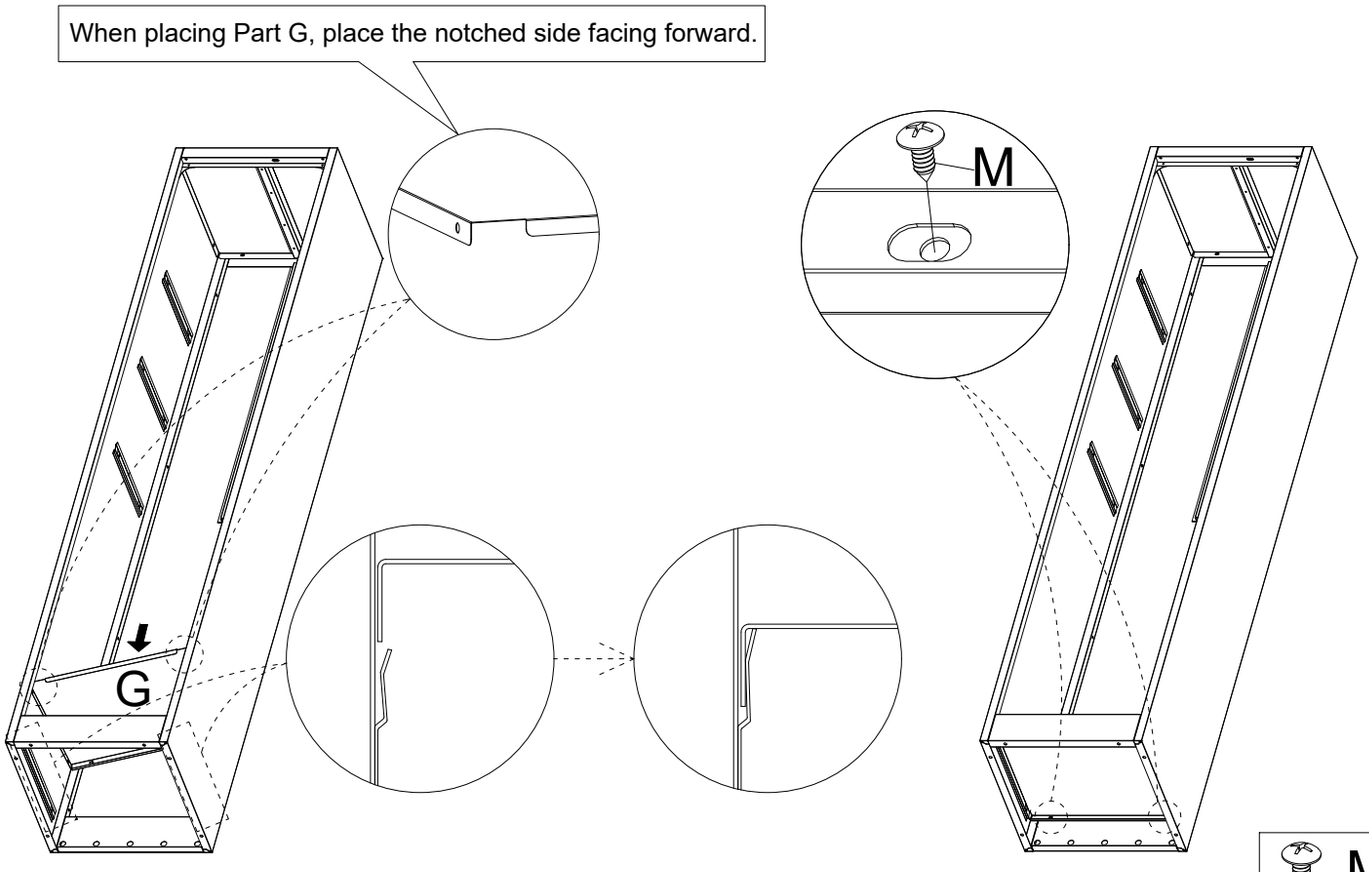

M×2

7


Put in Part E, with the side with the two support bars facing left, and secure it with five screws.

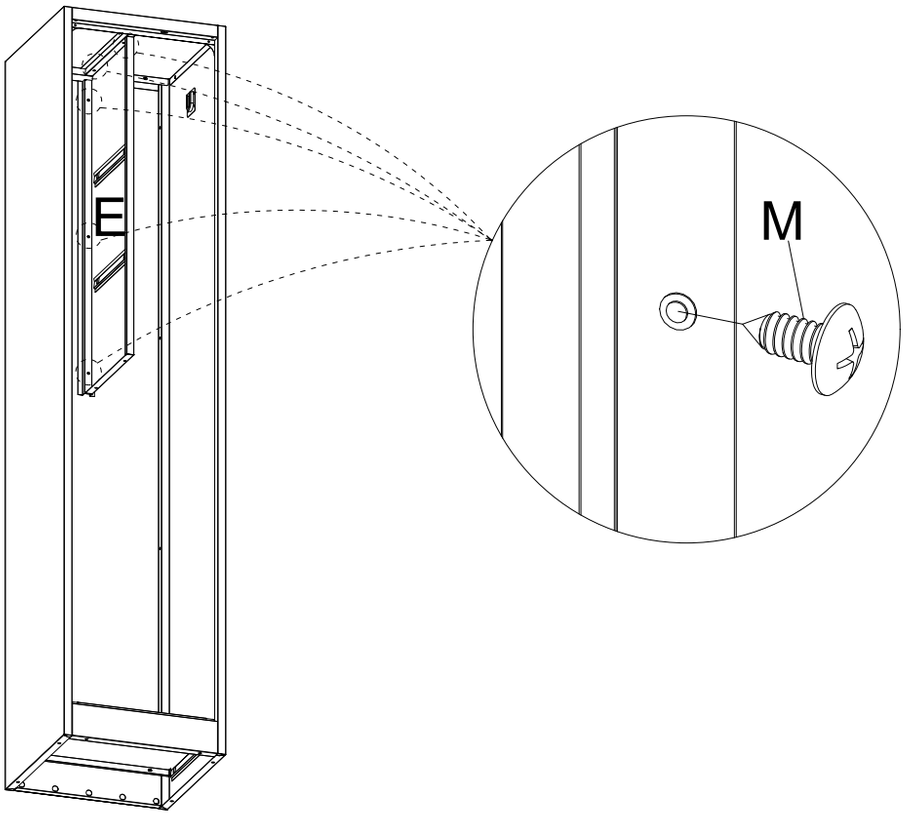

M×5


8

When placing Part J, place the notched side facing back.Then put in two screws from the bottom right side to secure it.

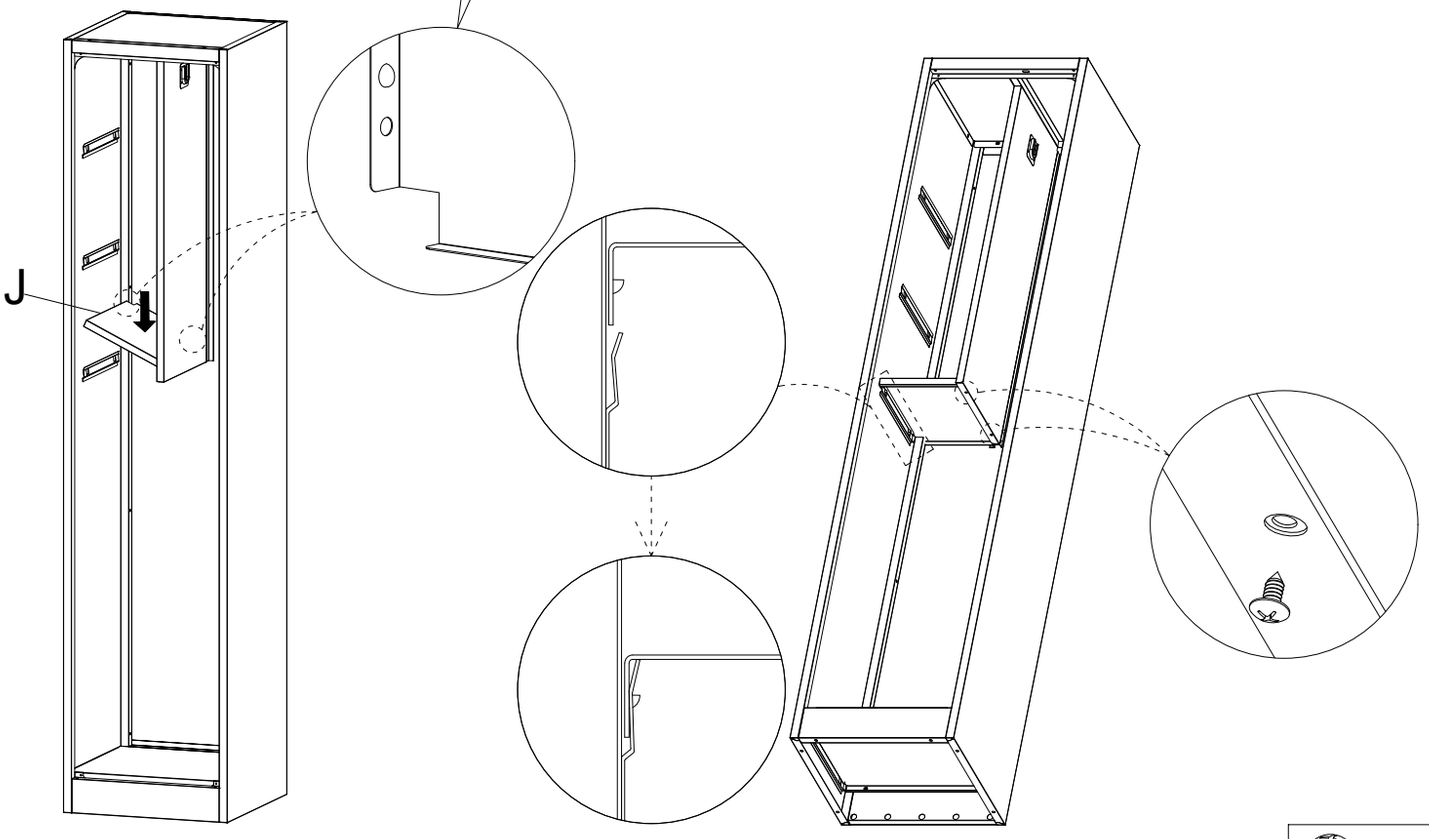


M×2

9

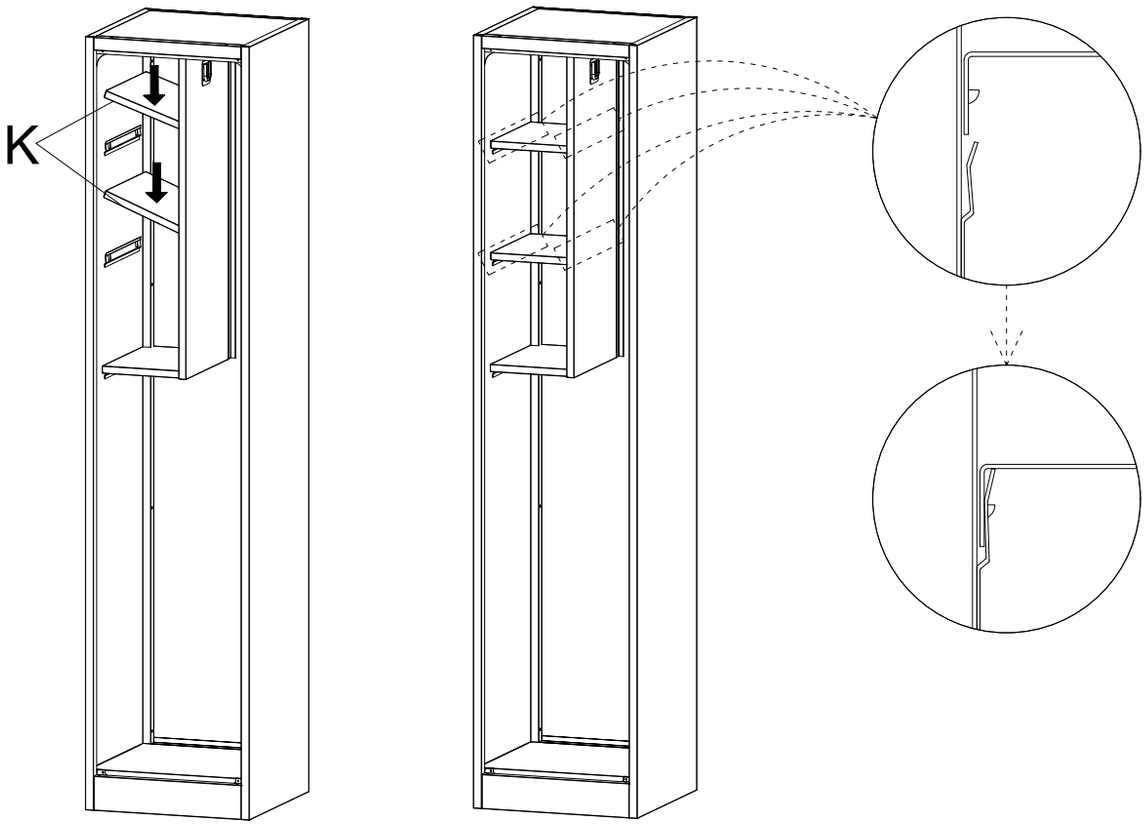


10

First, hang the hooks P on the hanging rod L and then put the hanging rod L into the locker.

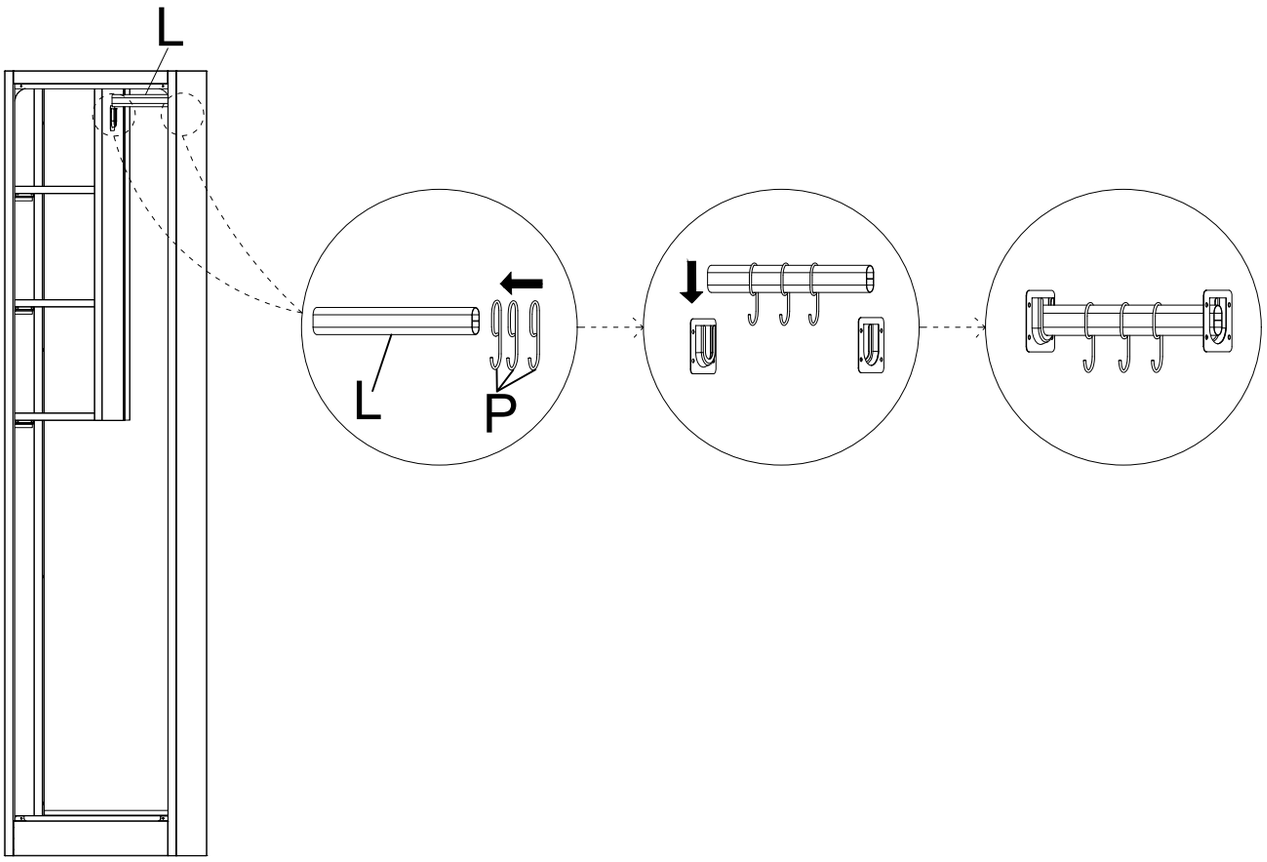

11


First, fasten Part Q to the left side of the back of the door with two screws; then put one end of the hanging rod S into Part Q and the other end into Part R. Finally, fasten Part R to the right side of the back of the door with two screws.

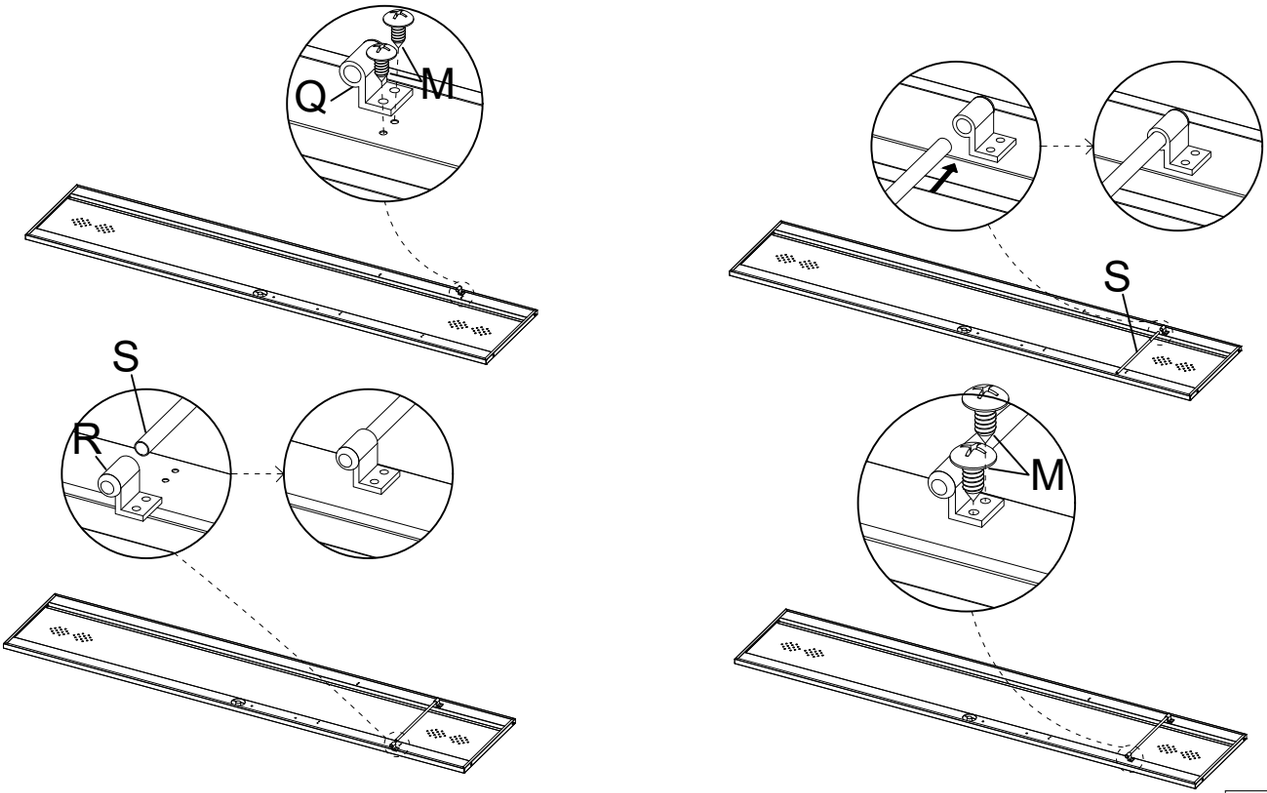

M×4

12


Repeat step 11 to install another hanging rod

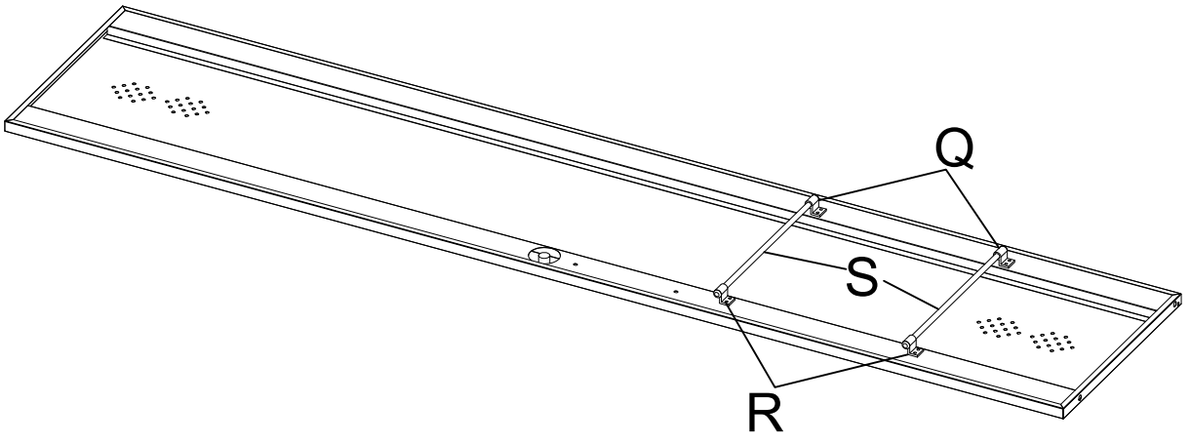

M×4

13

Install the door by first installing the door pin N, then by pressing the spring shaft on the top of the door.

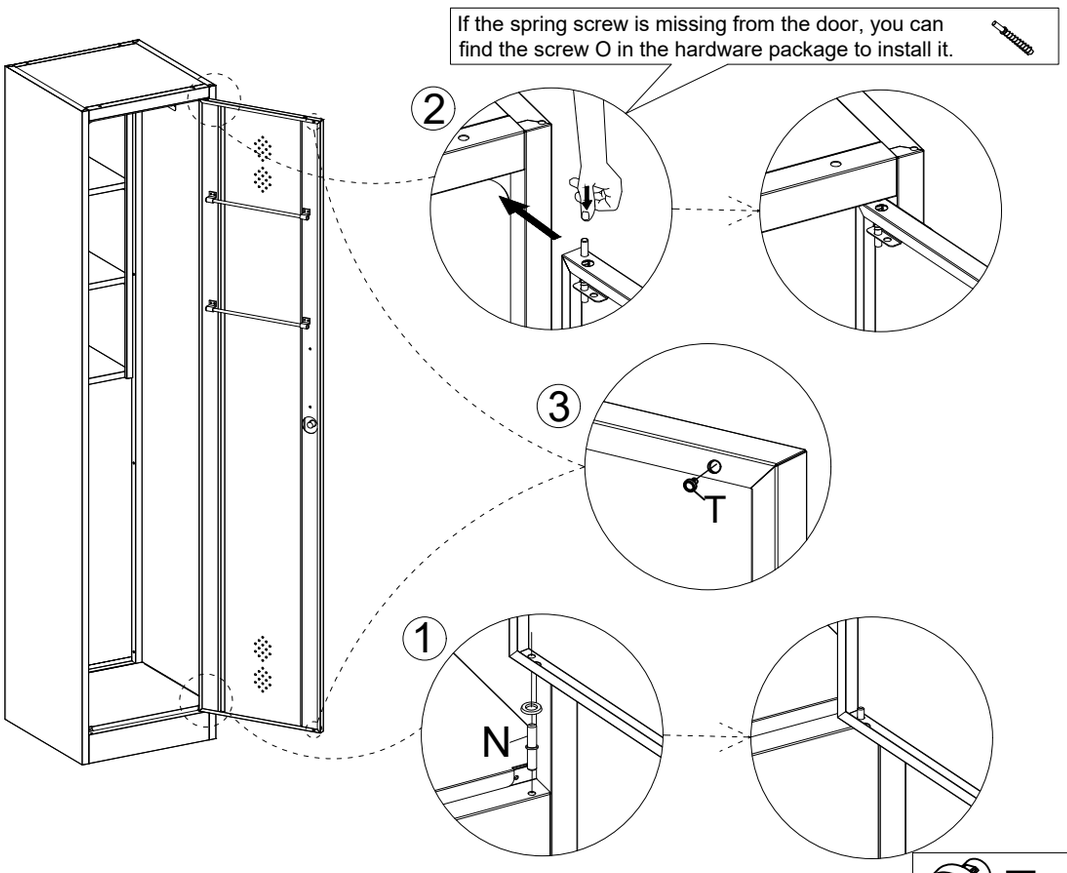

T×2 N×1

14

