


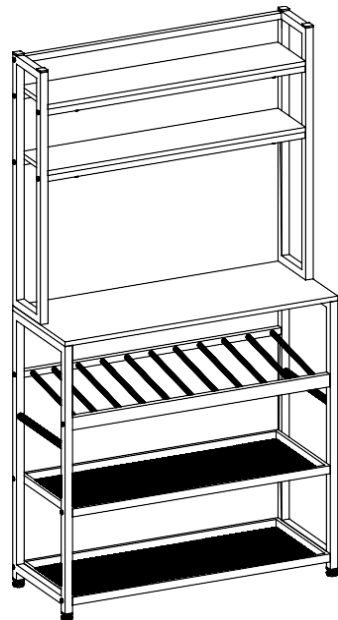

















ASSEMBLE INSTRUCTION



WARNING



○ Please don't tighten all the screws until all installed

ACCESSORIES



①  x2	②  x2	③  x2
④  x1	⑤  x11	⑥  x1
⑦  x4	⑧  x1	⑨  x2
⑩  x1	⑪  6x30 x8	⑫  6x40 x22
⑬  6x60 x4	⑭  6x35 x2	⑮  x4
⑯  x4	⑰  x4	A  x1

ASSEMBLE


Step 1:

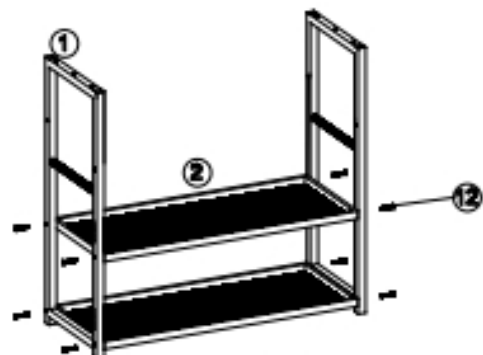



Step 2:

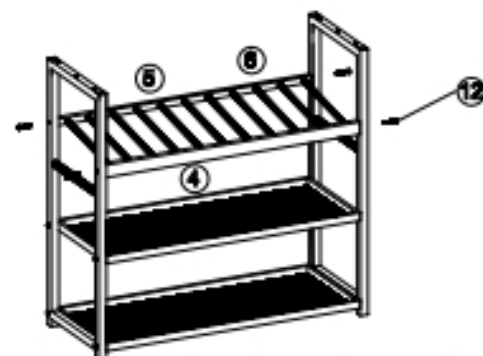


Step 3:

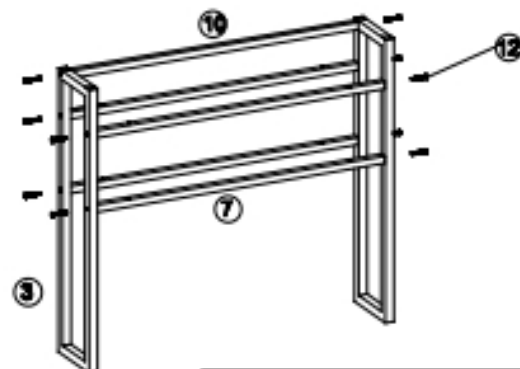

Step 4:

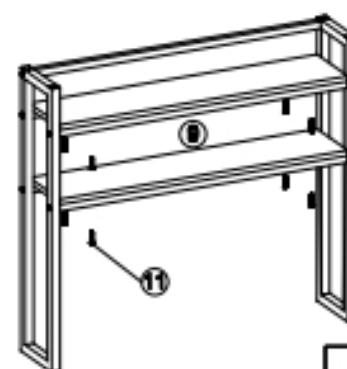


Step 6:

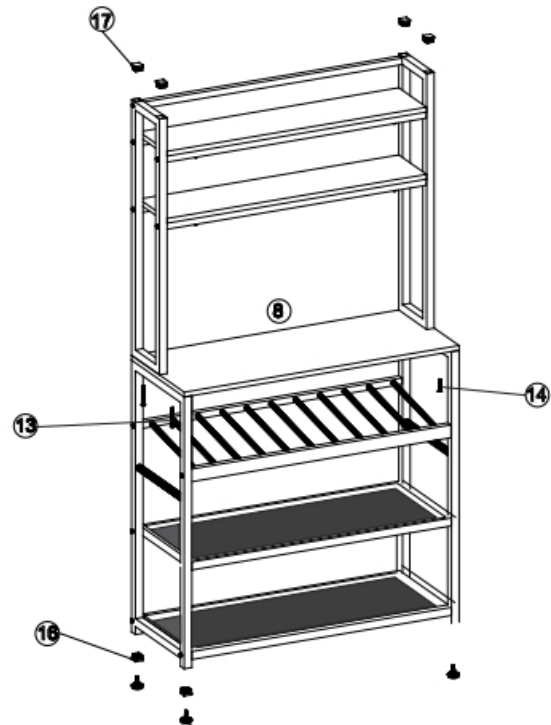

8	x1	x4

17	x4	x4

FINAL:

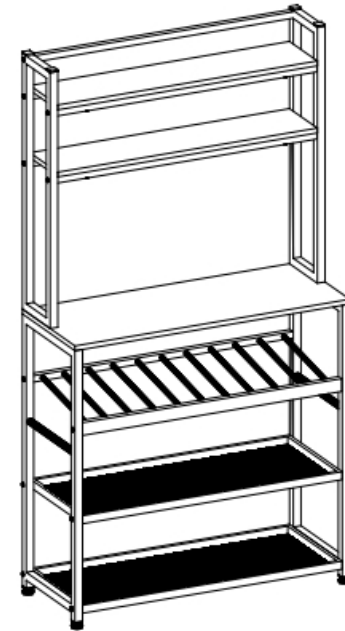

TOTAL VIEM

