

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Stains may be removed with mild soap solution and damp cloth.




- Children should not climb or jump on the furniture.






- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

SOFA




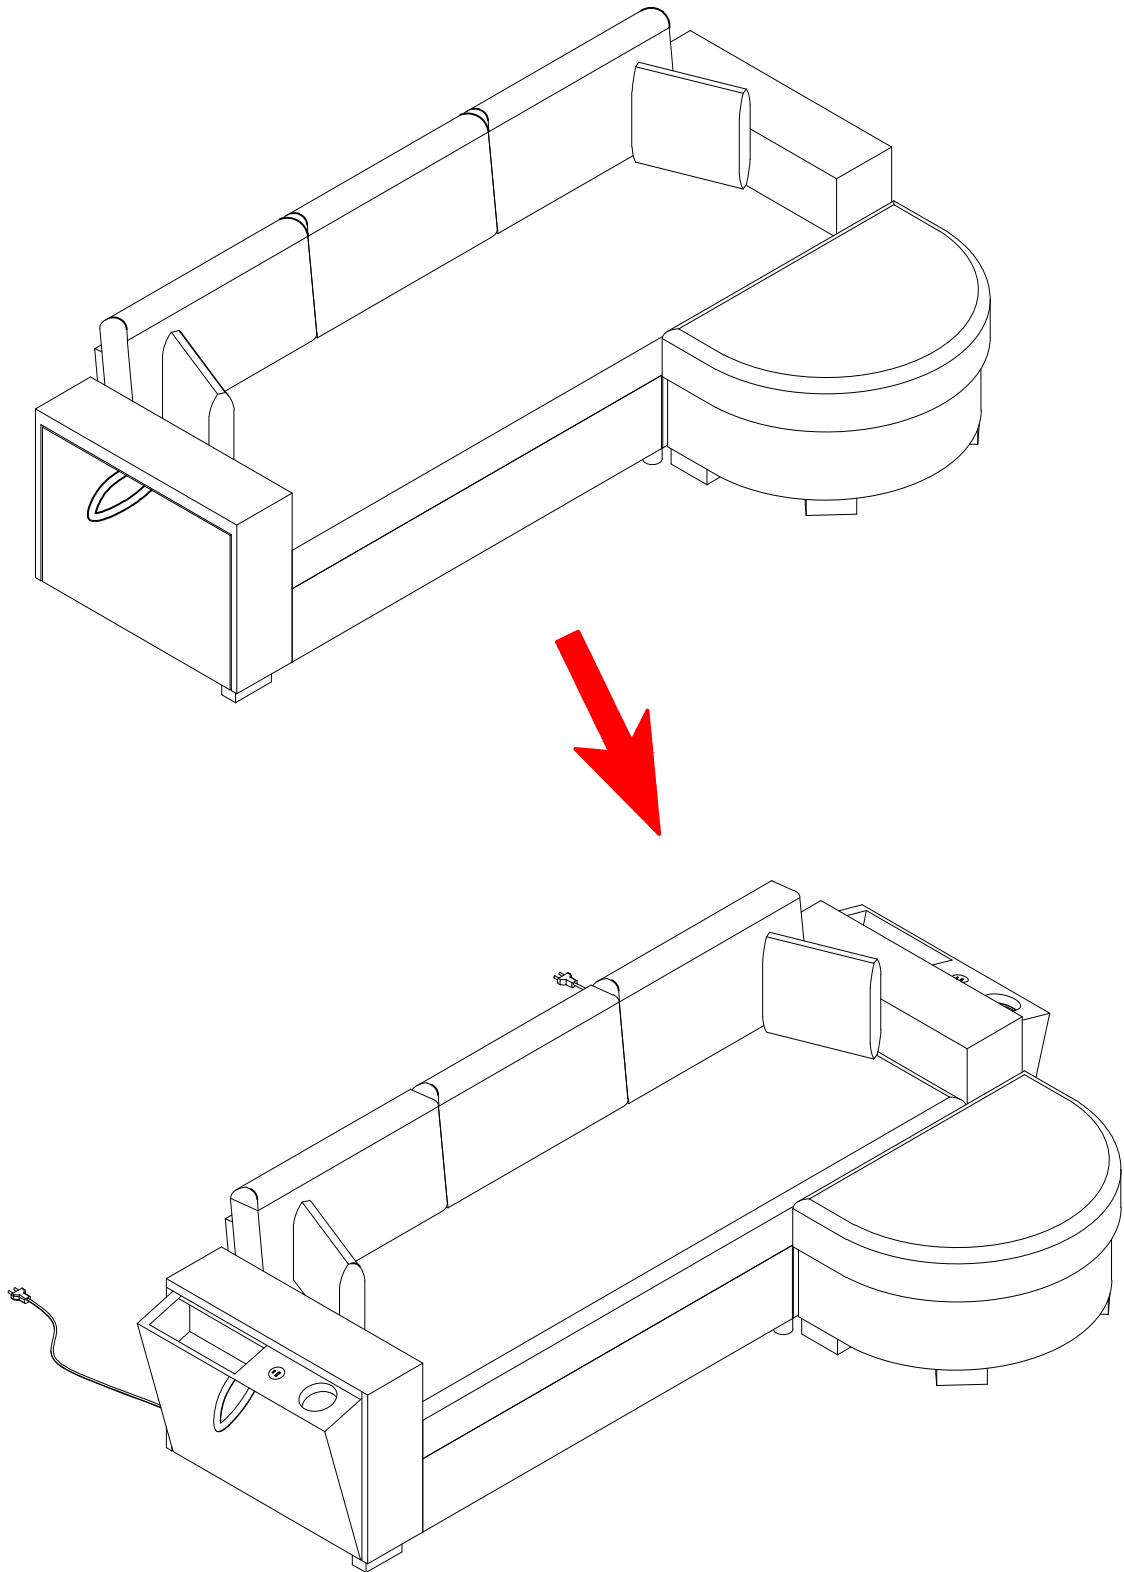


The armrests on both sides of the chair can be opened to access the built-in hidden features, including a USB port, cup holders, and storage compartments.







PART LIST : N719P478274

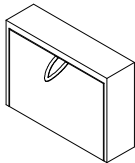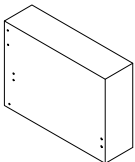LABEL	PICTURE	DESCRIPTION	QTY
B		LEFT ARMREST	1
C		RIGHT ARMREST	1
N		BACK CUSHION	1

PART LIST : N719P478275

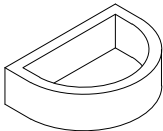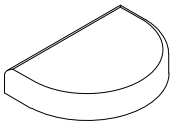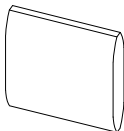LABEL	PICTURE	DESCRIPTION	QTY
E		OTTOMAN	1
H		SEAT OTTOMAN	1
O		PILLOW	2
N		BACK CUSHION	2

PART LIST : N719P478276

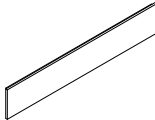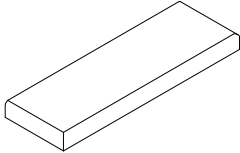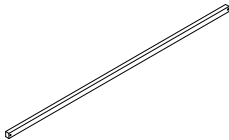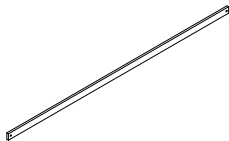LABEL	PICTURE	DESCRIPTION	QTY
A		BACKREST	1
D1		FRONT RAIL LEFT	1
D2		FRONT RAIL RIGHT	1
K		SEAT CUSHION	1
I		REAR SUPPORT BAR	1
G		BACKREST SUPPORT BAR	1
L		SLAT	2
R		LEGS	8
R1		LEG	1
P		CENTER LEGS	2
	Hardware 	HARDWARE	1


Hardware

Label	Picture	DESCRIPTION	QTY
①		BOLT (1/4 X 50MM)	18
②		BOLT (5/16 X 30MM)	4
③		BOLT (1/4 X 15MM)	22
④		SCREW (M4X 30MM)	20
⑤		SCREW (M4X 15MM)	16
⑥		FLAT WASHER (5/16)	4
⑦		LOCK WASHER(5/16)	4
⑧		FLAT WASHER (1/4)	30
⑨		LOCK WASHER (1/4)	30
⑩		RIGHT LINK	1
⑪		LEFT LINK	1

LABEL	PICTURE	DESCRIPTION	QTY
12		ALLEN WRENCH	1
13		RIGHT STEEL CONNECTING PLATE	1
14		LEFT STEEL CONNECTING PLATE	1
15		TAPERED CONNECTORS ON THE BACKREST	2
16		TAPERED CONNECTORS ON THE ARMREST	2
17		INTERMEDIATE IRON CONNECTING PLATE	1
18		INTERMEDIATE IRON CONNECTING PLATE	2



Assembly Steps

Overview

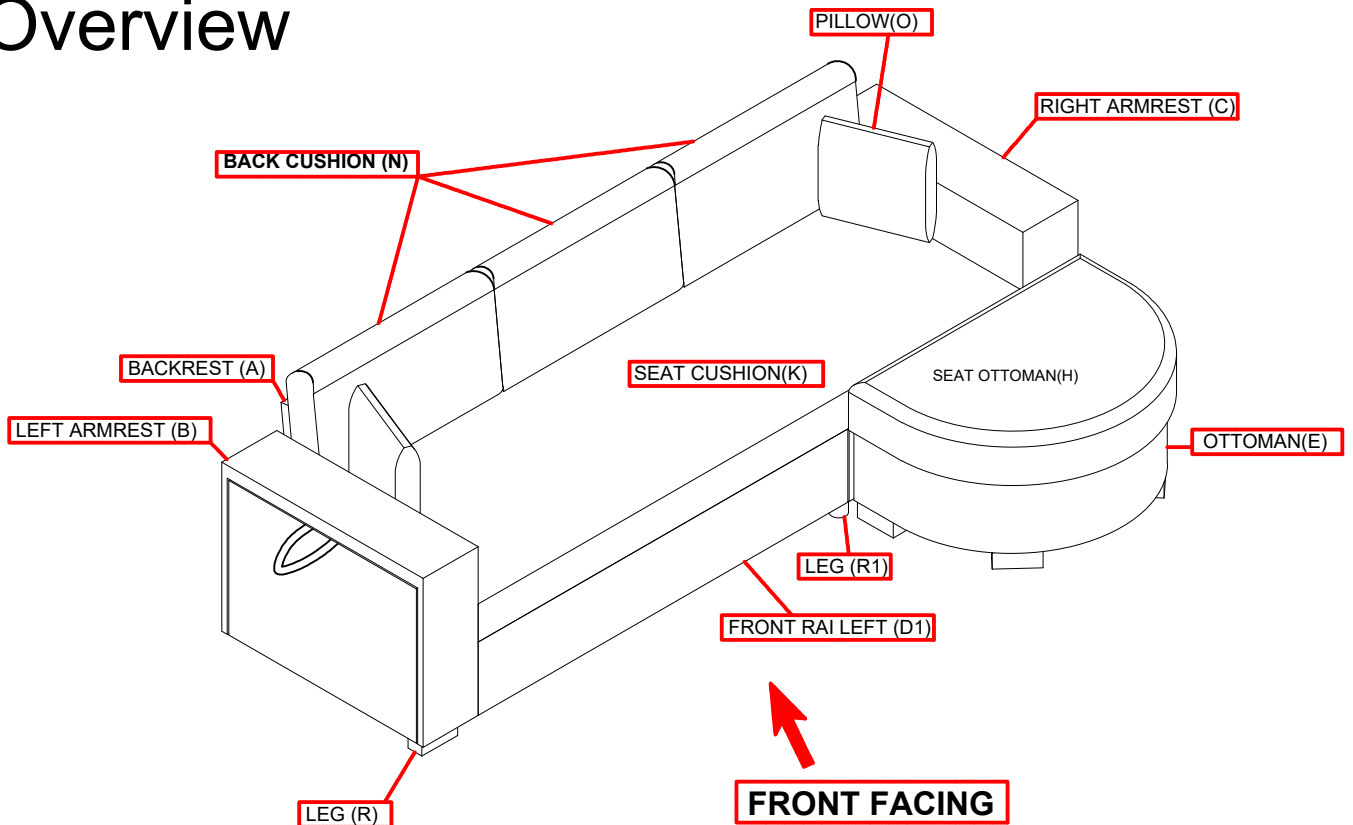

THIS SOFA HAS MULTIPLE PARTS AND MAY REQUIRE UP TO 60 MINUTES TO ASSEMBLE. TO GIVE YOU AN OVERVIEW OF THE SOFA PARTS, THE ABOVE PICTURE IS TO HELP YOU PUT THE VARIOUS SOFA PARTS INTO PERSPECTIVE. PLEASE READ THROUGH THE INSTRUCTIONS TO FAMILIARISE YOURSELF WITH THE PARTS AND STEPS BEFORE ASSEMBLY.


STEP 1

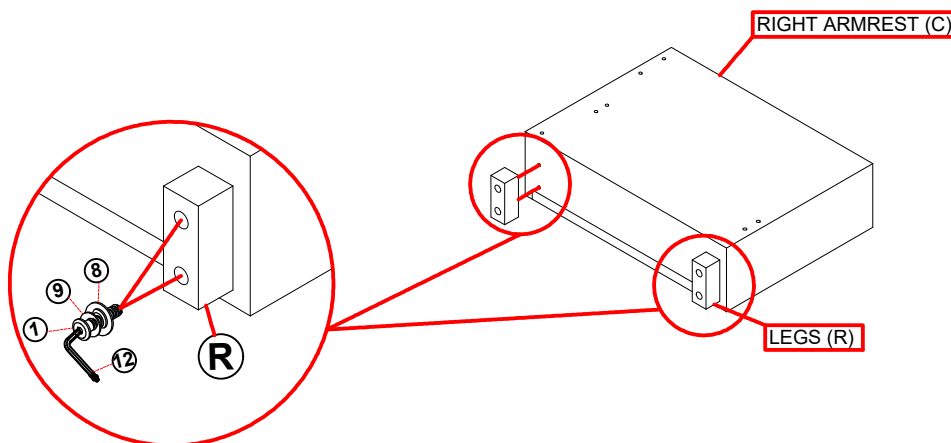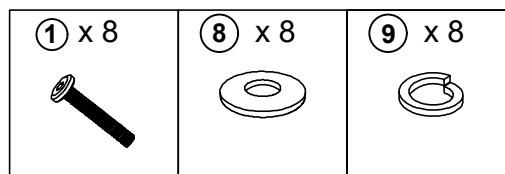

POSITION CHAIR LEG (R) CORRECTLY ONTO ARMREST (C). SECURE THE LEG USING BOLT (1) TOGETHER WITH FLAT WASHER (8) AND SPRING WASHER (9), TIGHTENING FIRMLY AS SHOWN IN THE ILLUSTRATION. REPEAT THE SAME PROCEDURE TO ATTACH THE LEG TO ARMREST (B).

STEP 2


③ x 8 	⑧ x 8 	⑨ x 8 	⑬ x 1 	⑭ x 1 	⑯ x 2 
--	--	--	---	--	--

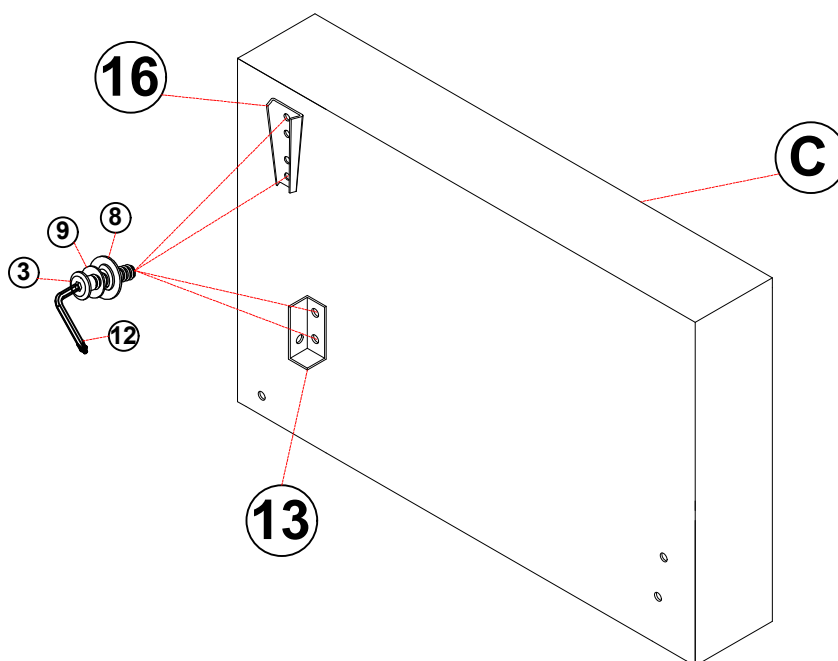

Position Accessories (13) and (16) in the correct locations as shown in the illustration. Secure them using Bolt (3) together with Flat Washer (8) and Spring Washer (9), then tighten firmly using Wrench (12).
Repeat the same procedure to assemble the remaining parts on Armrest (B) with Accessory (14).

STEP 3

③ x 4 	⑧ x 4 	⑨ x 4 	⑰ x 1 
--	--	--	---

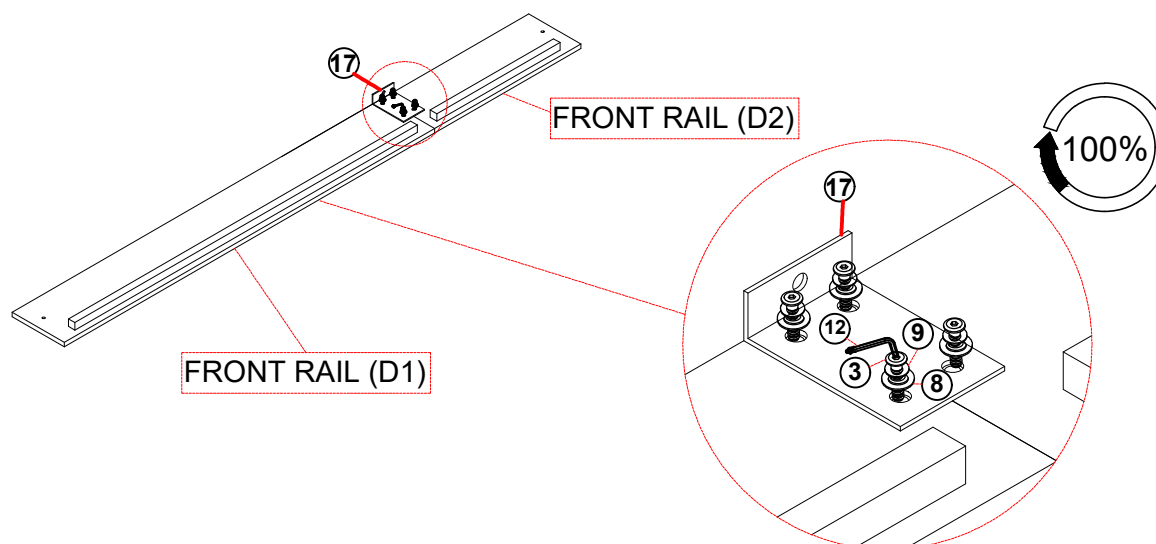

CONNECT THE TWO FRONT RAILS (D1) AND (D2) USING THE IRON CONNECTING PLATE (17), BOLTS (3), SPRING WASHER (9) FLAT WASHER (8) WITH A HEX WRENCH (12) TURNING CLOCKWISE UNTIL TIGHT.

STEP 4


③ x 2



⑩ x 1



⑪ x 1

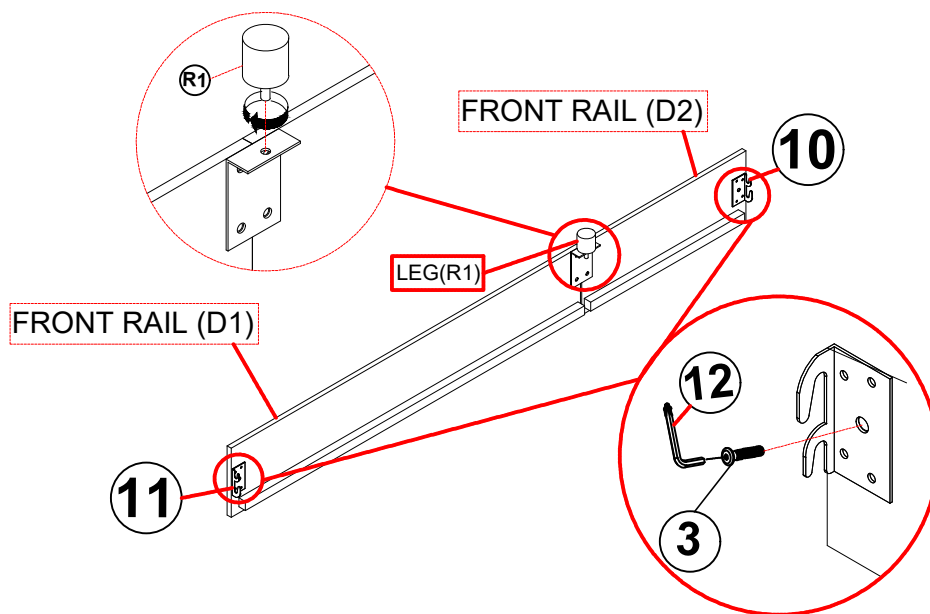


4.1 Attach Leg (R1) to the Intermediate Iron Connecting Plate. Turn the leg base clockwise until it is securely tightened, as shown in the illustration.

4.2 Position Components (10) and (11) in the correct locations on Parts (D1) and (D2). Secure them using Bolts (3) and tighten firmly with the Allen Wrench (12), as shown in the illustration.


STEP 5

⑤ x 8

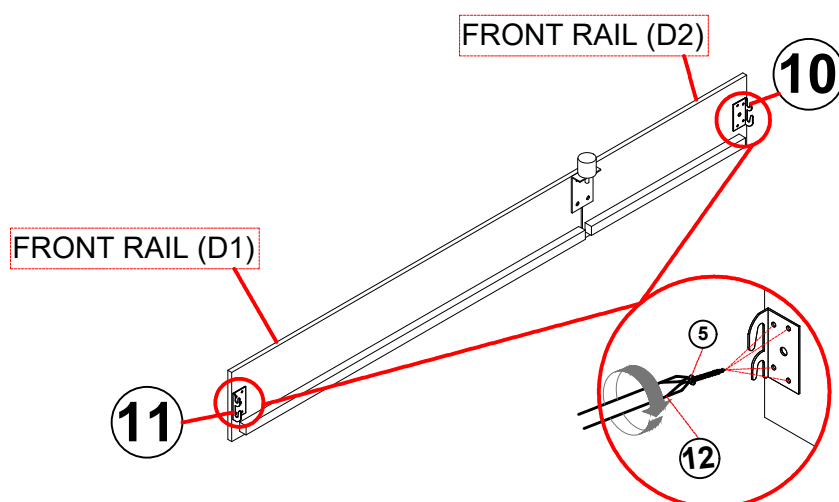



Then, use Screws (5) to further secure and reinforce Components (10) and (11), as shown in the illustration.

STEP 6

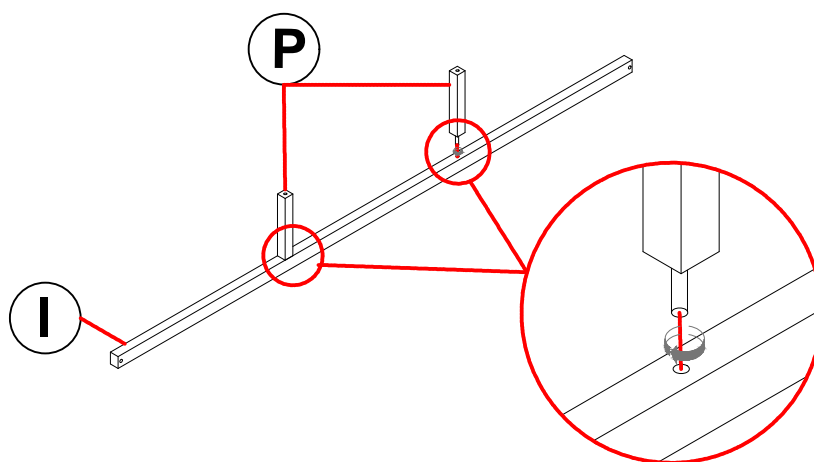

Position the Center Support Leg (P) correctly onto the Rear Support Bar(I). Then tighten it securely by turning the support leg clockwise, as shown in the illustration.

STEP 7

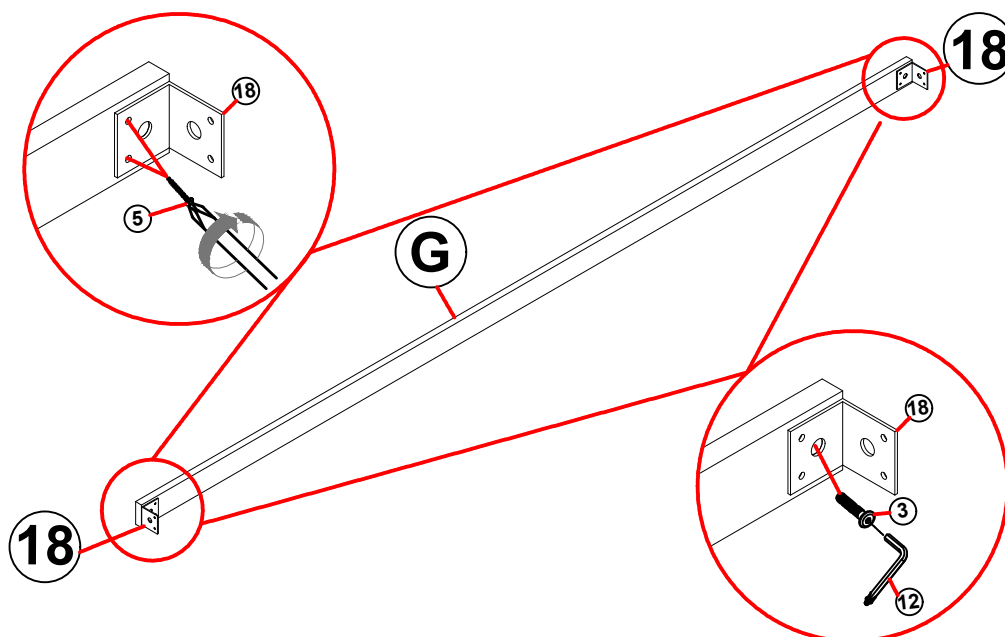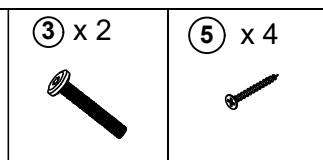


Position Hardware Part (18) correctly on Part (G) as shown in the illustration. Secure it using Bolt (3) and tighten firmly with the Allen Wrench (12). Then, further reinforce the assembly using Screw (5)

STEP 8

③ x 4



⑮ x 2

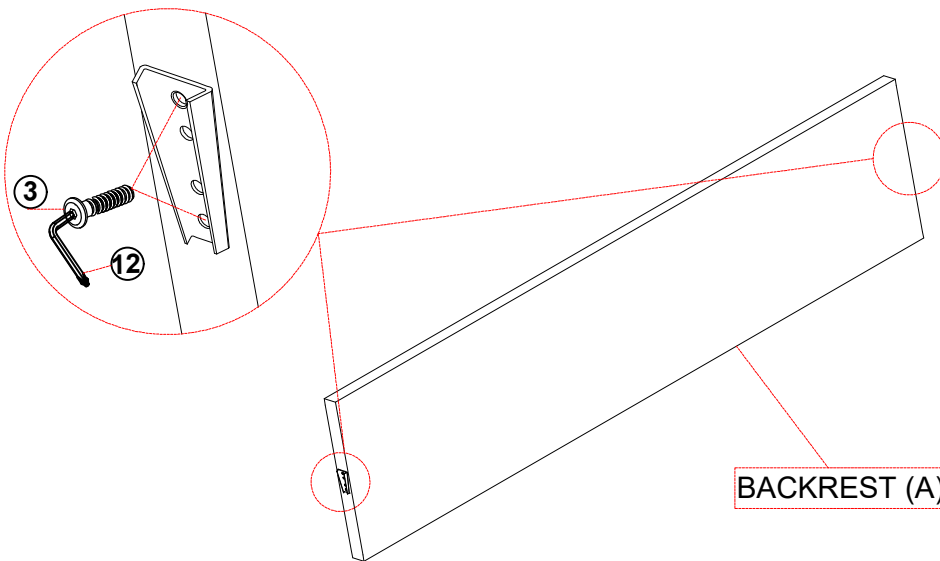


BACKREST (A)

Place the fittings (15) into the correct positions as shown in the illustration. Secure them using bolts (3) then tighten firmly with wrench (12).

Assemble the remaining parts in the same manner on the opposite side.

STEP 9

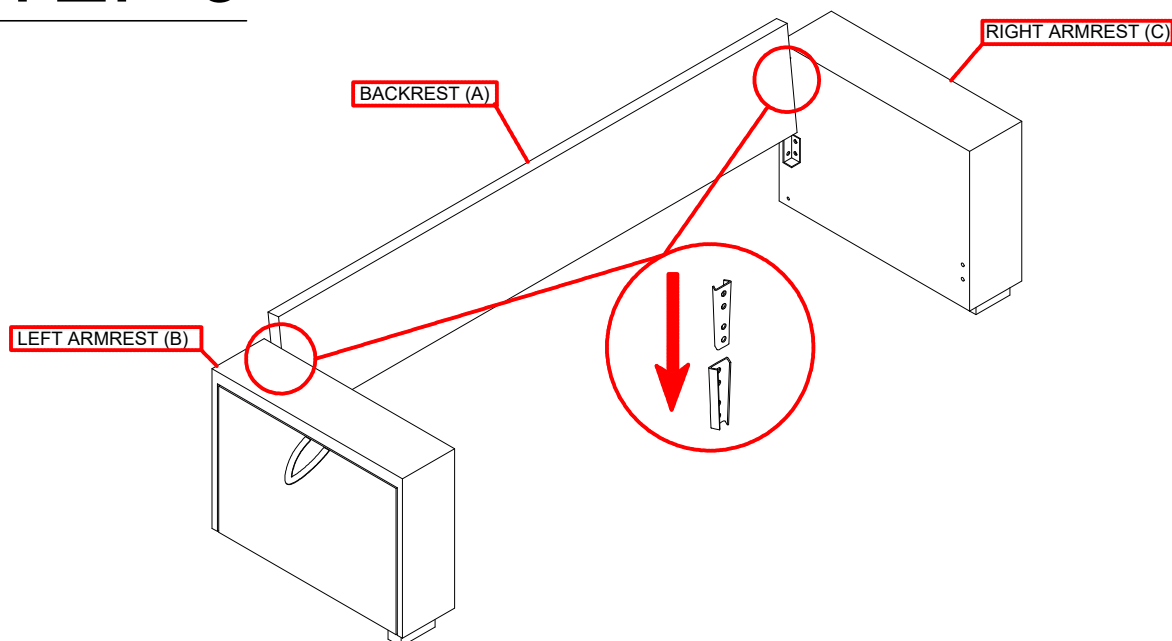

BACKREST (A)

LEFT ARMREST (B)

RIGHT ARMREST (C)

Slide the Tapered Connectors on the Backrest(A) into the Tapered Connectors on the Left Armrest(B) as shown in the picture. Repeat the same steps with the Right Armrest(C).

Note: Make sure the Tapered Connectors on Backrest(A) lock into the Tapered Connectors on the Left Armrest(B) and Right Armrest(C). Assistance from an adult partner is necessary for this assembly process. During this assembly process - do exercise caution. You may need to use your hand to press down or pave away the padded surface to facilitate the 'slip and slide' assembly.

Caution: Ensure that your fingers do not get caught or pinched in the assembly process.

STEP 10


② x 4



⑥ x 4



⑦ x 4

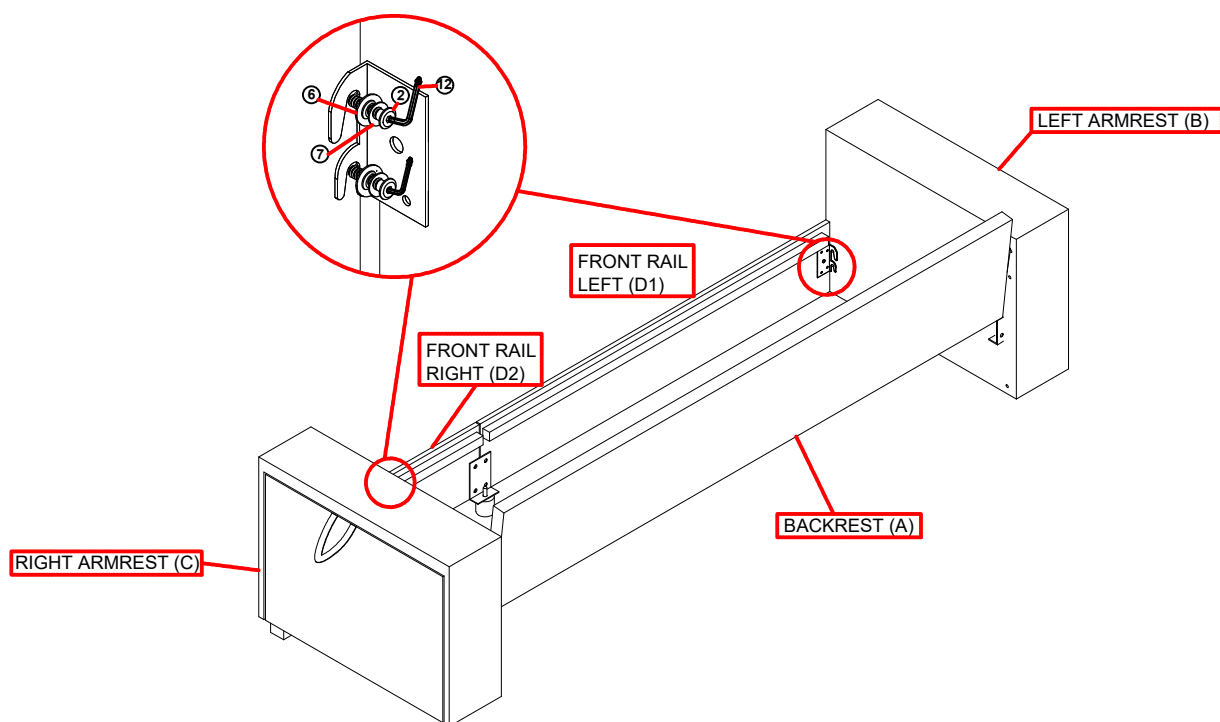


Align Parts (D1) and (D2) into the correct positions on Armrests (B) and (C). Secure them using Bolts (3) together with Flat Washers (6) and Spring Washers (7), then tighten firmly with the Allen Wrench (12) as shown in the illustration.

STEP 11

③ x 2





⑤ x 4

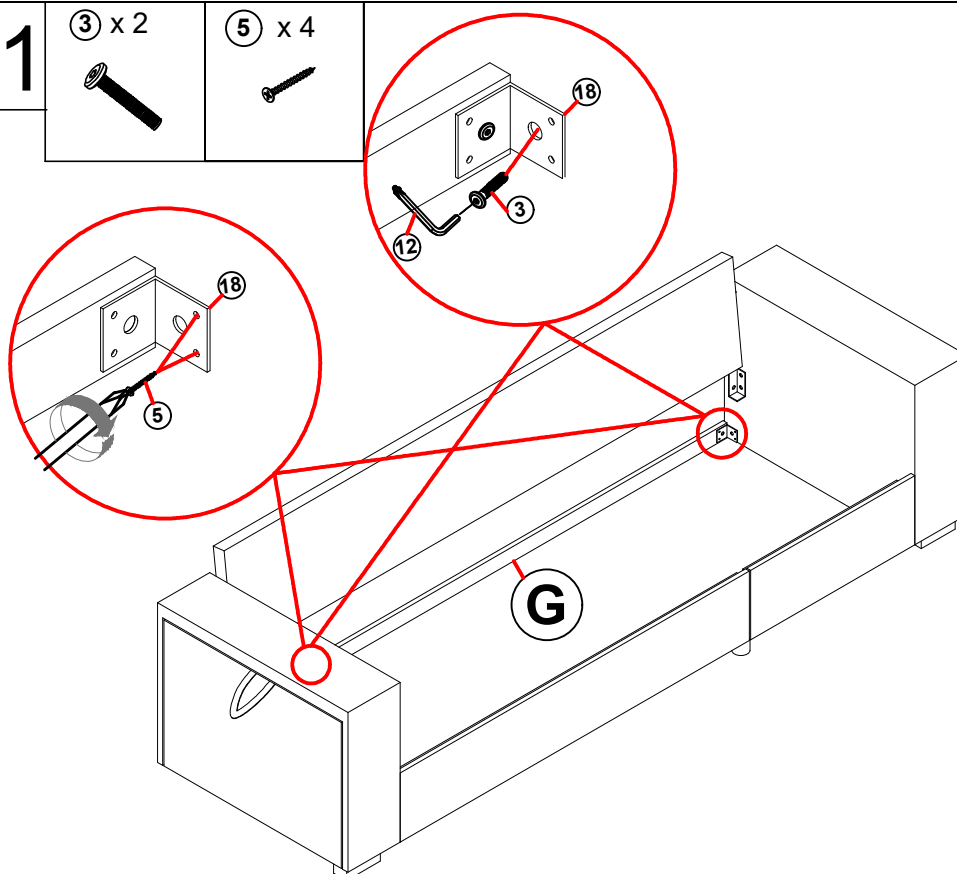



Position Part (G) in the correct location as shown in the illustration. Adjust it so that the mounting holes align with those on Armrests (B) and (C). Secure it using Bolt (3) and tighten clockwise with the Allen Wrench (12) until firmly fixed. Then, use Screw (5) to further reinforce the assembly, ensuring increased stability and strength of the assembled unit.

STEP 12

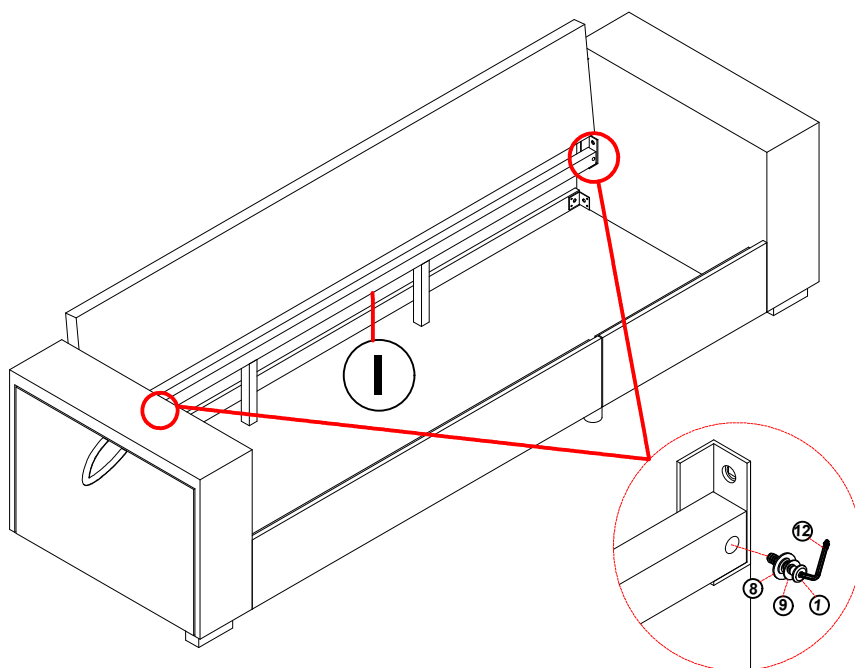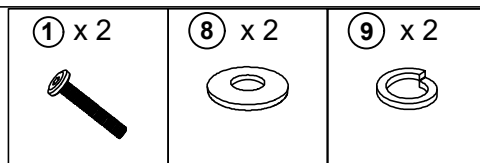


Position the Rear Support Bar (I) as shown in the illustration. Secure it using Bolts (1) together with Flat Washers (8) and Spring Washers (9). Tighten clockwise until all parts are firmly secured and the assembly is stable.

STEP 13

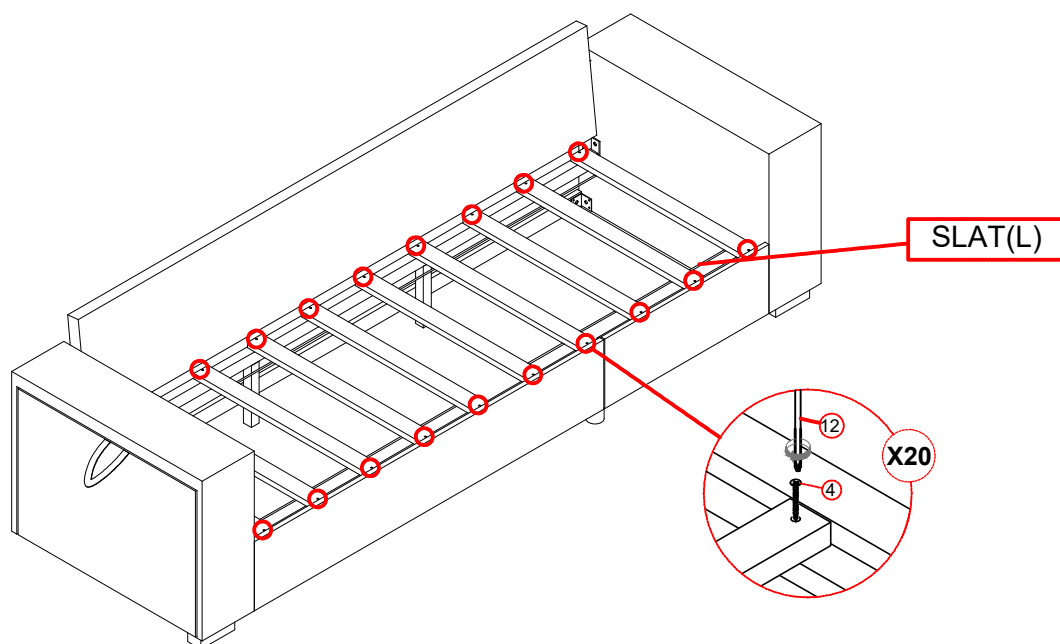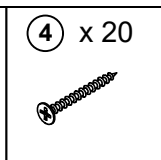

Place the Bed Slat (L) onto the sofa frame as shown in the illustration. Use the Screwdriver (12) to fasten the Screws (4), securing the Bed Slat (L) to the supporting frame. A total of 20 screws are required to complete this assembly step.


STEP 14

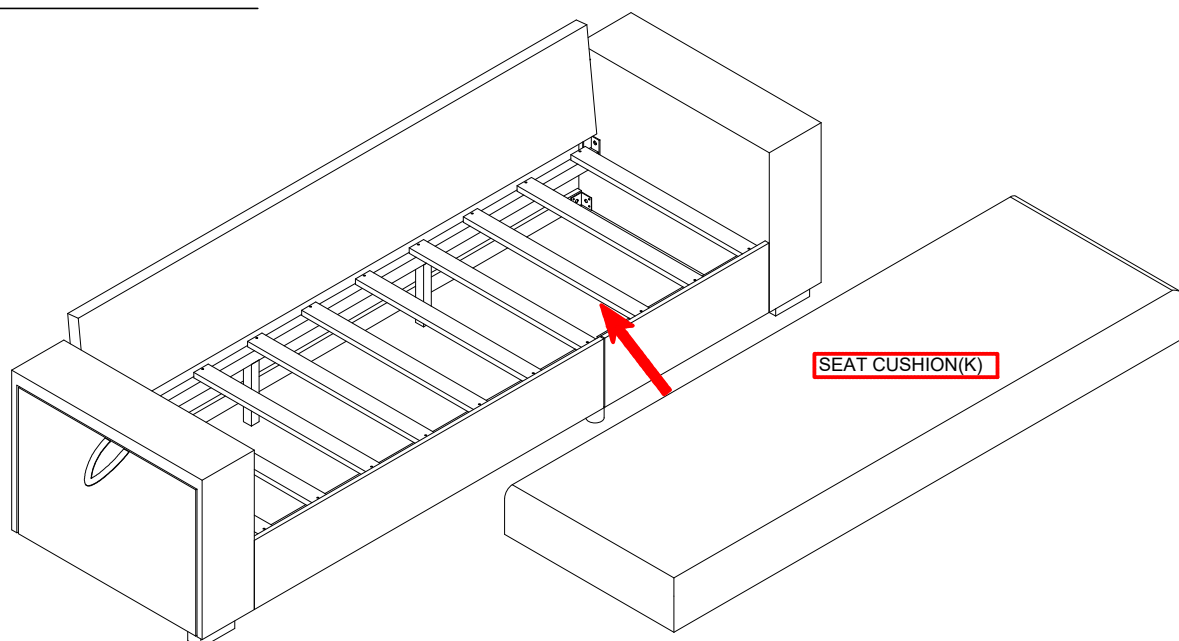

Remove the Seat Cushion (K) from the vacuum-sealed bag. Position the Seat Cushion (K) into the chair frame as shown in the illustration.

NOTE: The Seat Cushion will fully expand and recover its original shape within 72 hours after being removed from the vacuum-sealed packaging.

STEP 15

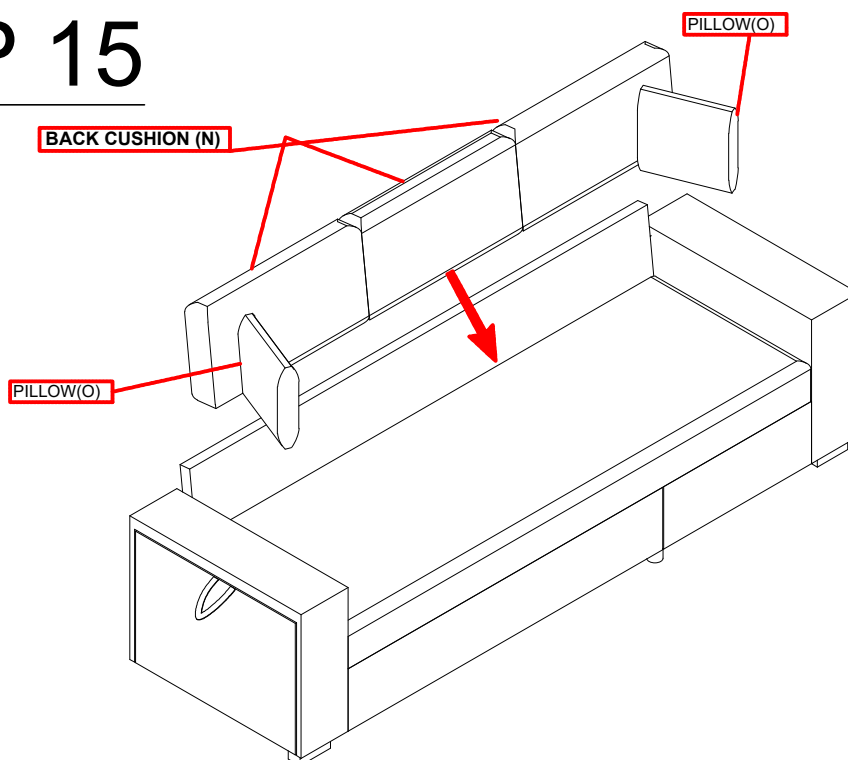

Remove the Back Cushion (N) and Decorative Pillow (O) from the vacuum-sealed bag. Position the Back Cushion (N) and Decorative Pillow (O) onto the chair frame in the correct locations as shown in the illustration.

NOTE: The Back Cushion (N) and Decorative Pillow (O) will fully expand and recover their original shape and resilience within 72 hours after being removed from the vacuum-sealed packaging.

STEP 16


① x 8



⑧ x 8




⑨ x 8

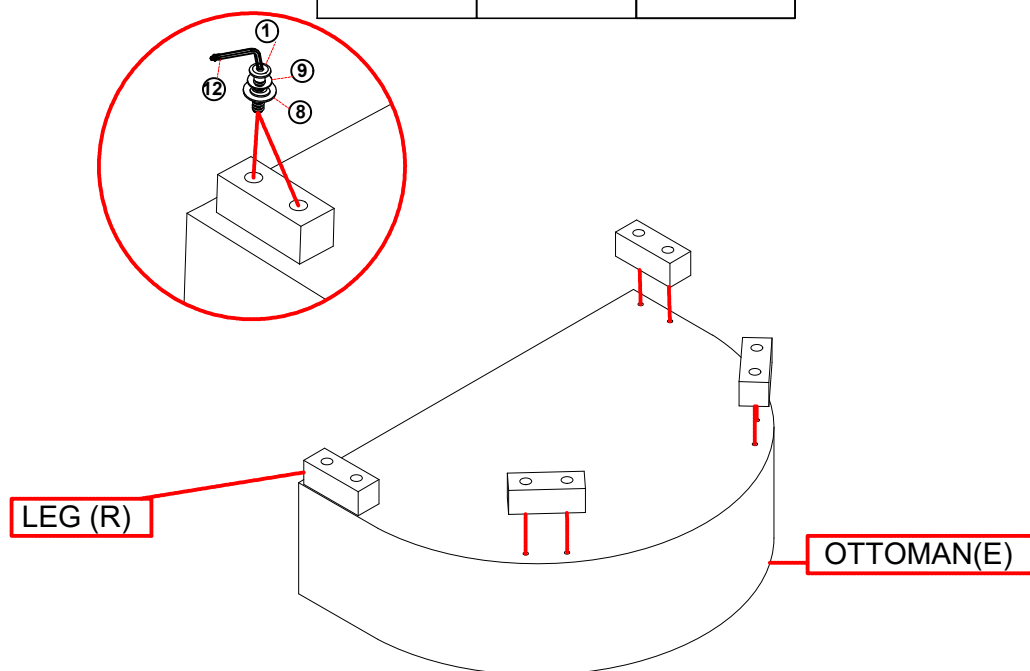


Place the Ottoman Frame (E) upside down on a flat surface. Position the Chair Legs (R) correctly onto the Ottoman Frame (E). Secure each leg using Bolt (1) together with Flat Washer (8) and Spring Washer (9), then tighten firmly as shown in the illustration.

STEP 17

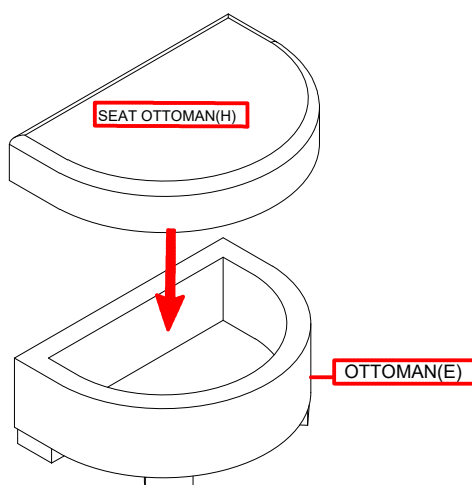


Place the Ottoman Seat Cushion (H) into the Ottoman Frame (E) as shown in the illustration.

STEP 18

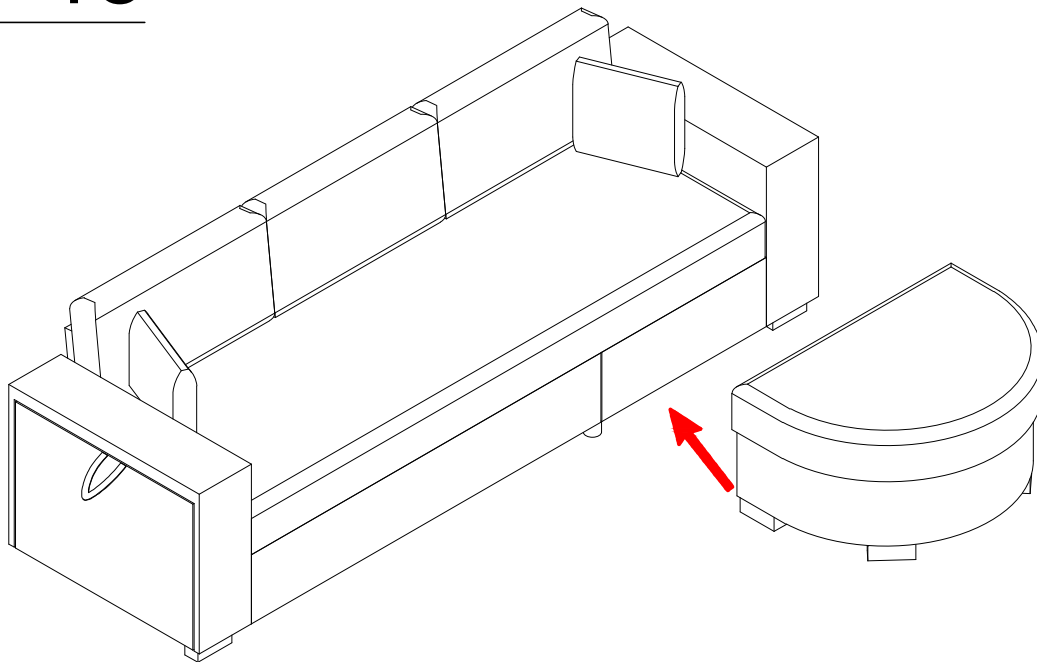


Place the Ottoman into the sofa frame as shown in the illustration to complete the assembly.

STEP 19

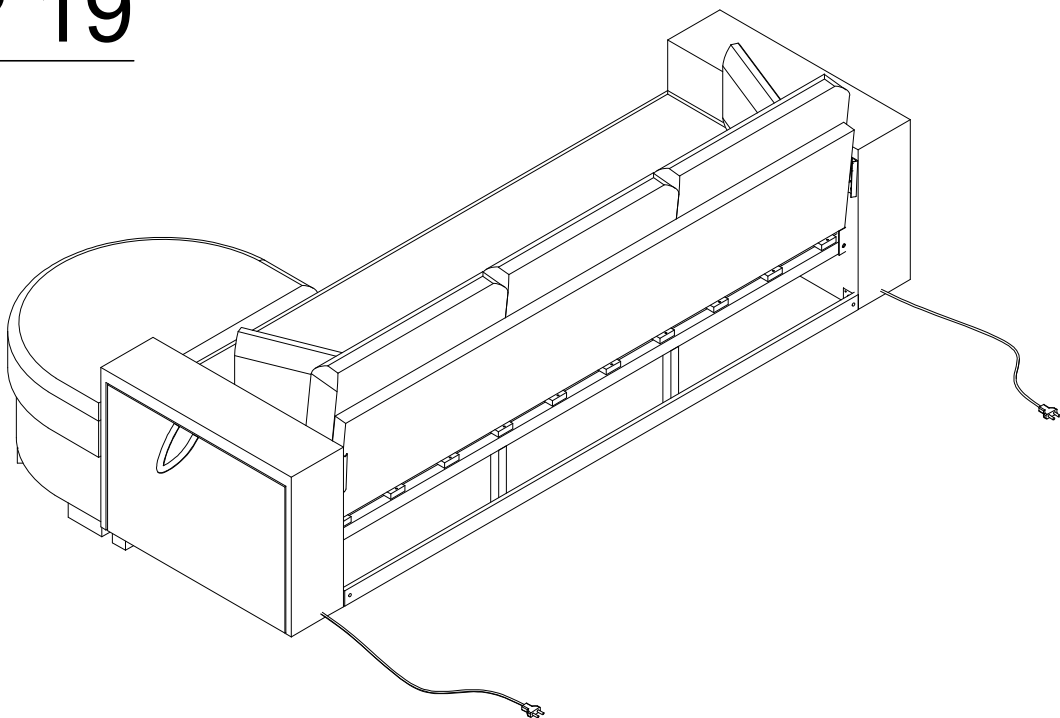

As shown in the illustration, the power cord can now be used normally.

COMPLETED ASSEMBLY

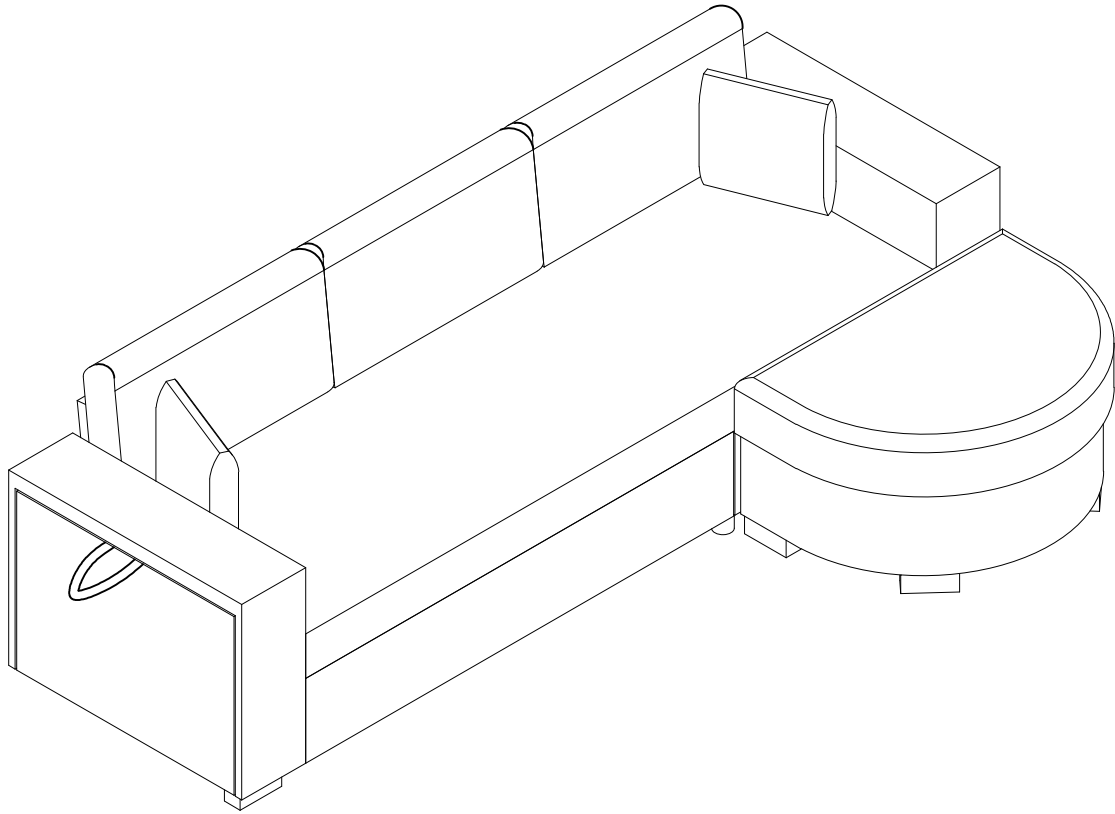

Place the chair on a flat surface. Check and ensure all parts are securely connected.
This will help align all parts at the connection points.

Note 1: When tightening screws, tighten them in sequence.
Do not fully tighten any screw before moving on to the next.

This will cause the chair frame to warp.

If still loose, loosen the screws and repeat the process. Do not fully tighten any screw
before moving on to the next.

Warning!! IF THE CHAIR IS NOT STABLE, IT MAY DAMAGE THE PRODUCT.

ENSURE ALL SCREWS ARE TIGHTENED.

The chair is READY TO USE.

NOTE 2: THIS CHAIR CAN ONLY BE USED ON A FLAT SURFACE.



Product Name:USB CHARGER
Model :TY892

"This device complies with part 15 of the Fcc Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."