

**Platform Bed
(FULL, QUEEN & KING)**

Congratulations on the purchase of your PlatformBed. This bed has been crafted to the highest standards of quality and safety and will give you many years of enjoyment and practical use.


On this insert you will find a list of the hardware and platform bed parts included as well as detailed instructions for assembly. Assembly is quite simple and requires only a Phillips head screwdriver. The use of a power drill with a Phillips head attachment is helpful but not necessary. Assembly will be most easily accomplished if you take the time to carefully sort the hardware and familiarize yourself with the function of each piece.

If you should require assistance with assembly, part replacement or any other matter, contact the toll-free Service Center


You may also fax your requests or comments to us or email us and a service representative will respond.

Thank you and Enjoy


Bamboo Platform Bed Hardware & Parts List

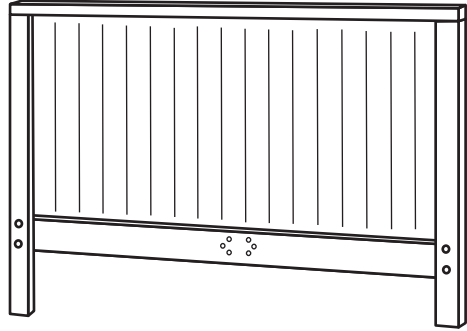


1 x HEADBOARD

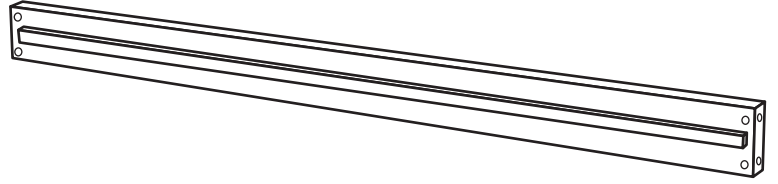


2 x SIDE RAILS

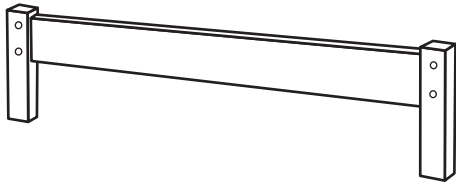


1 x FOOTBOARD

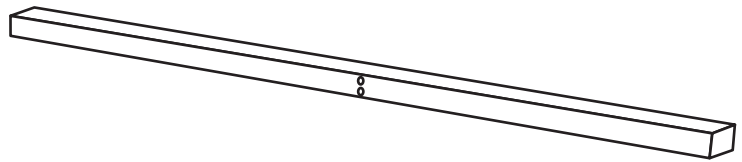


1 x CENTER SUPPORT

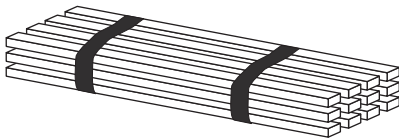


1 x SLAT BUNDLE




1 x DROP SUPPORT



2 x BRACKET



4 x HALF MOON BRACKET,
NUT & STEEL DOWEL




39 x WOOD SCREWS



4 x 110mm BOLT




2 x 70mm BOLT



12 x MACHINE SCREWS



4 x BARREL NUT



1 x ALLEN WRENCH




1 x WRENCH


Have a question? Need a part ASAP? Please call us.

1


Insert all 4 of the threaded steel dowels into the footboard by hand. Slide the footboard toward the side rails so that the dowels go through the holes at the end of the side rails. Slide the half moon washer over the dowel as shown. Hand tighten the nut behind the half moon washer. Use the wrench provided to tighten the nut.

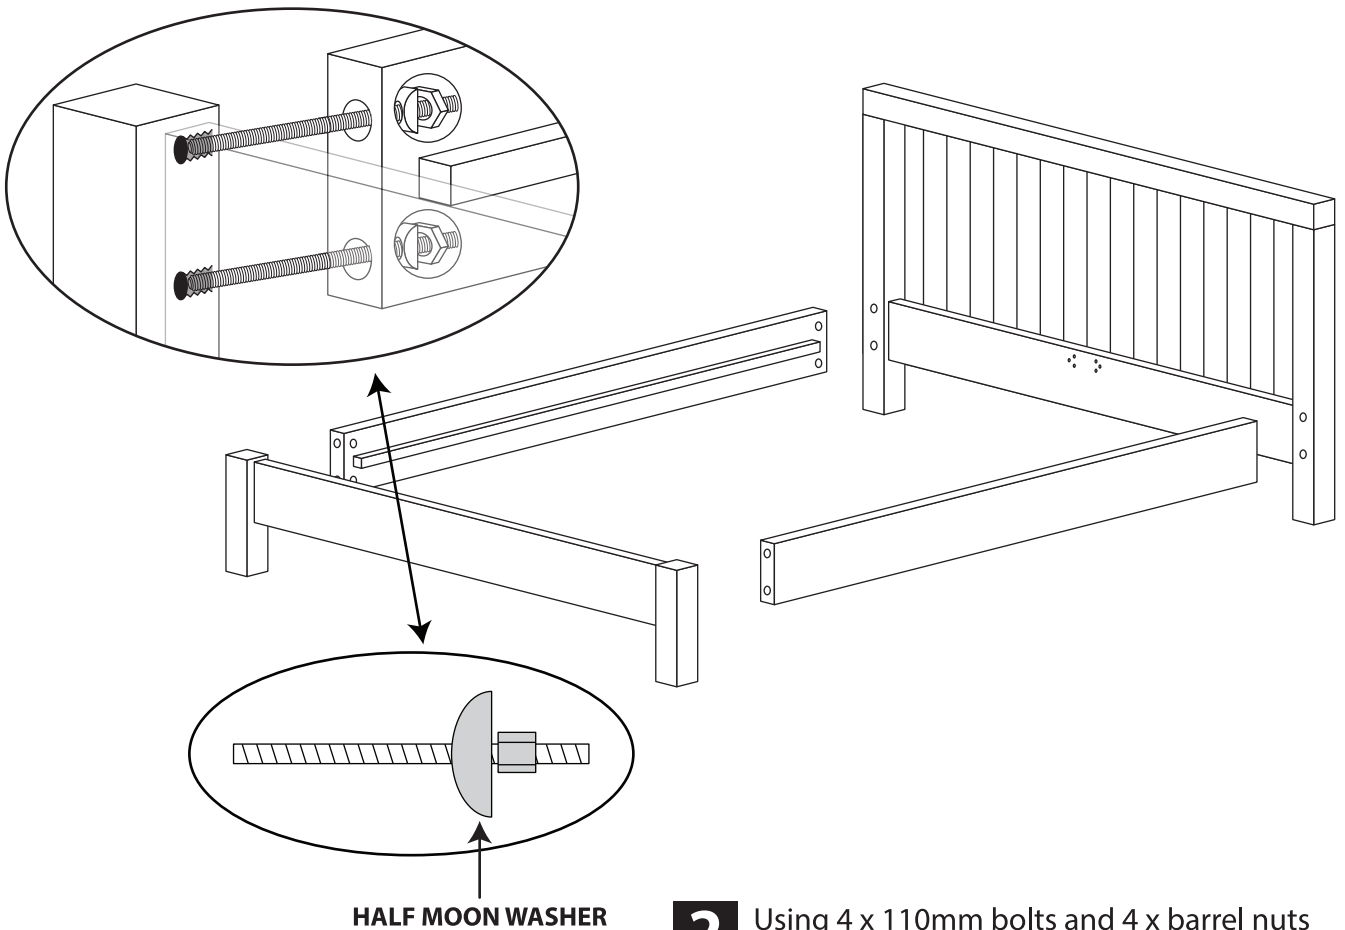**2**

Using 4 x 110mm bolts and 4 x barrel nuts attach the bed rails to the headboard.
Note: Do one rail at a time and only hand tighten the bolts. Then fully tighten the bolts with the Allen Wrench provided.

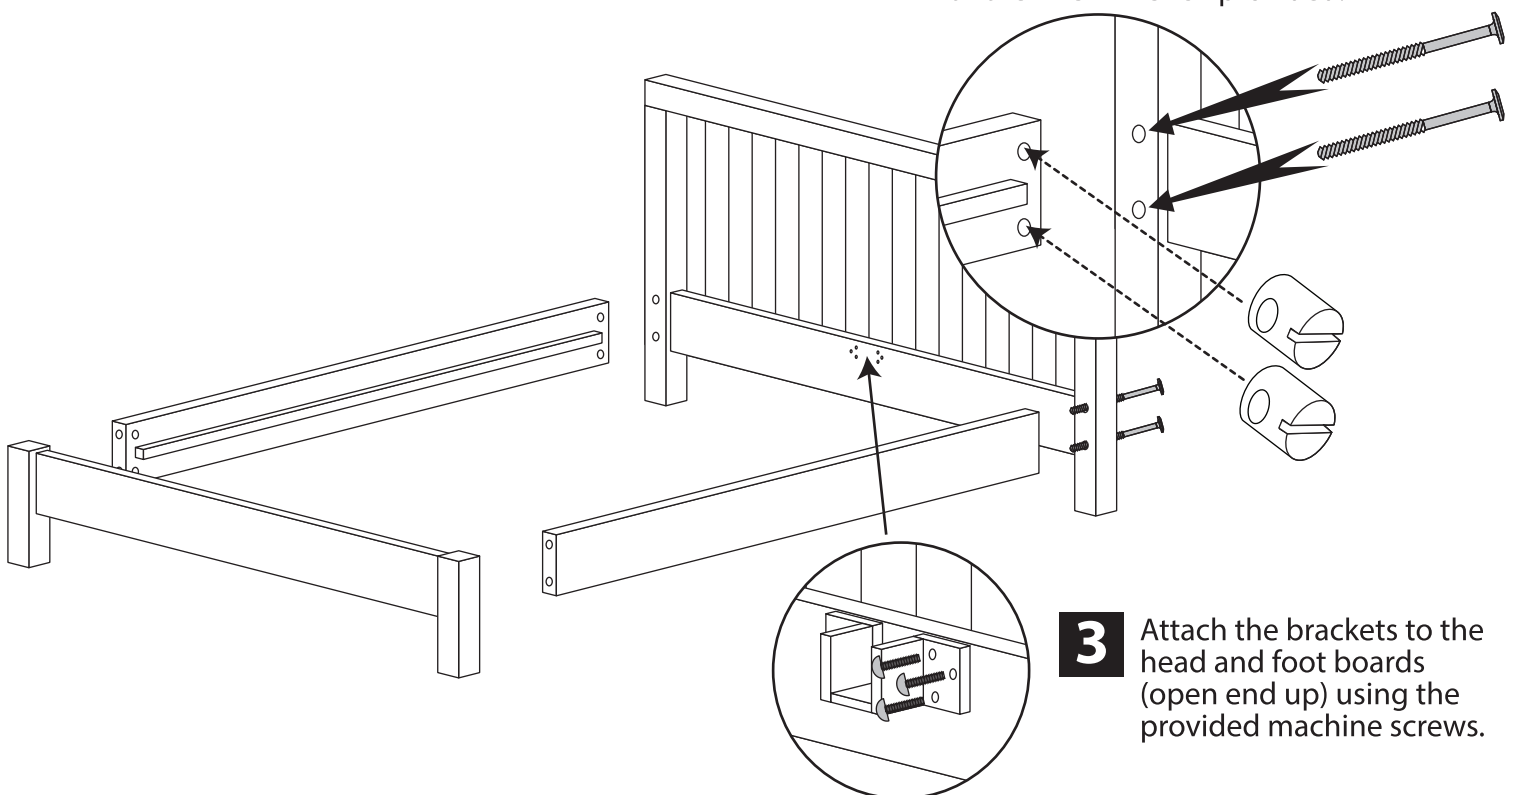**3**

Attach the brackets to the head and foot boards (open end up) using the provided machine screws.

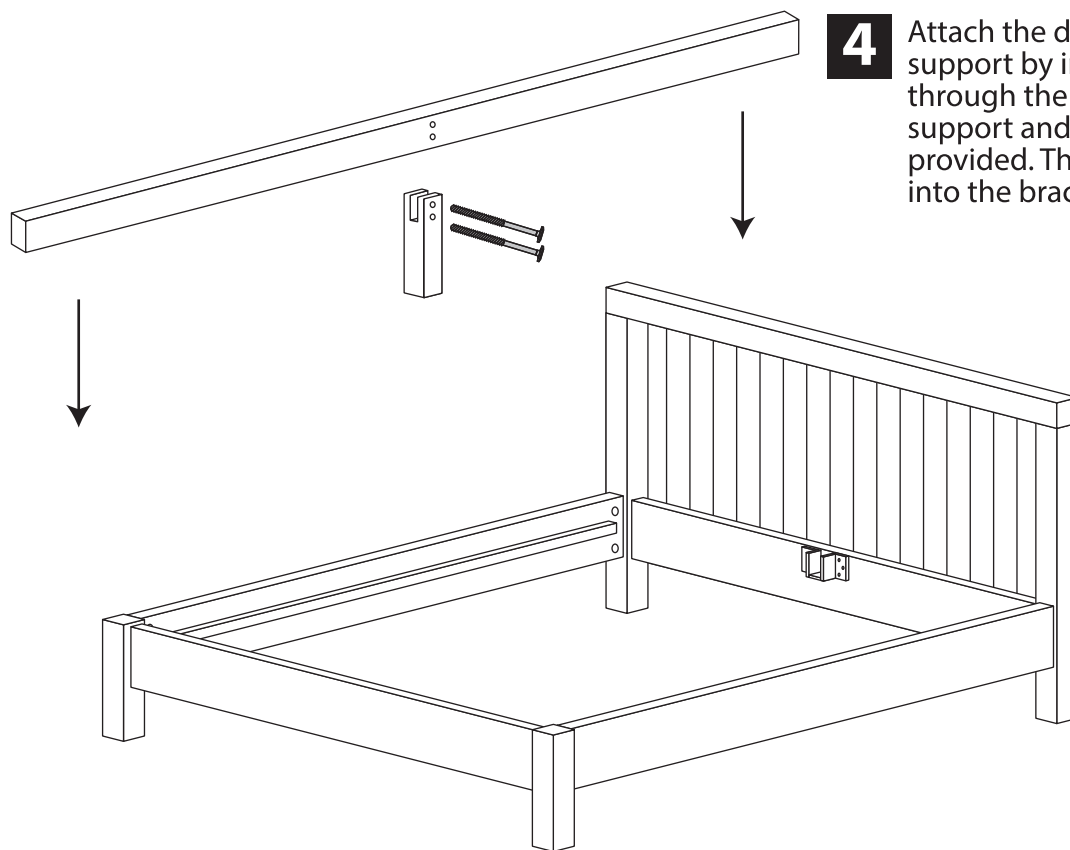

4 Attach the drop support to the center support by inserting two 70mm bolt through the drop support into the center support and tighten with the Allen Wrench provided. Then lower the center support into the brackets.

5 Spread the slat bundle cloth side down evenly across the slat rails. First secure one slat on one end and then the other end evenly. Then use the remaining wood screws to secure all slats to the slat rails with a Phillips Head screwdriver. A power screwdriver comes in handy for this step.

