


INSTRUCTION MANUAL

AIR 105-B

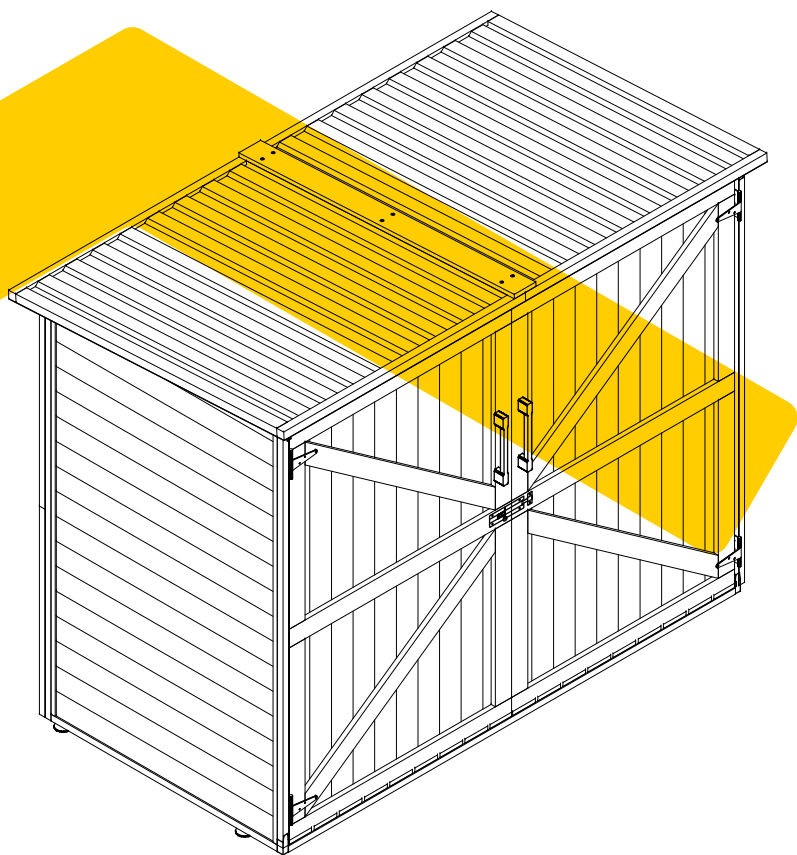



NOTICE


Please keep this manual for future reference.

- Firmly tighten all bolts, screws, and knobs before use.
- Check all bolts, screws, and knobs every 90 days to ensure they remain secure.
- During assembly, fasten screws loosely at first. Do not fully tighten until the entire unit is assembled.
- Do not use or store this product near open flames or flammable materials.
- Some parts may be heavy or have sharp edges. Use caution.
- Moving parts may cause injury, pinching, or cuts. Handle with care.
- If any parts are missing, broken, or damaged, discontinue use until repairs or replacements are made.
- Use this product only as described in the instructions. Improper use may void the warranty.

TOOLS REQUIRED //



Phillips
screwdriver



Drill
(recommended)




Two-person assembly
recommended



Estimated assembly
time: 45 minutes

HARDWARE //

M6.0 x 30mm bolt
8 pcs + 1 spare



P1

M3.5 x 35 mm screw
13 pcs + 1 spare



P2

M3.5 x 25 mm screw
6 pcs + 1 spare



P3

M3.0 x 16 mm screw
18 pcs + 1 spare



P4

M3.0 x 10 mm screw
8 pcs + 1 spare




P5

Magnetic catch
2 pcs



P6

Handle with M4.0 x 25 mm bolt
2 pcs




P7

Mushroom cap
4 pcs



P8

Latch
1 pc

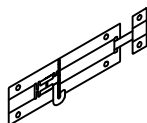

P9

Shelf bracket (M6x20)
4PCS+1spare



P10

CARTON 1/2


Left door panel
1 pc

**C**


Right door panel
1 pc

**D**


Left panel
1 pc

**G**


Right panel
1 pc

**H**


Bottom panel
2 pc

**I**


Roof joint cover
1 pc

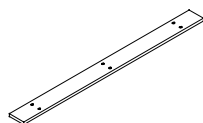**M**

Left roof panel
1 pc

**K**

Right roof panel
1 pc


**L**

Hardware bag




CARTON 2/2

Upper and lower metal frame
2 pcs

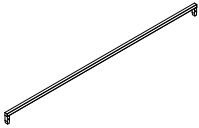

A

Front crossbar
1 pc

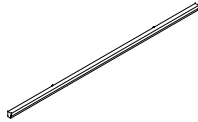

B

Upper back panel
1 pc




E

Lower back panel
1 pc



F

Shelf
1 pc

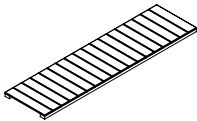


J

PRODUCT ASSEMBLY //


01

Attach 1x A to B using 5x P2 screws.

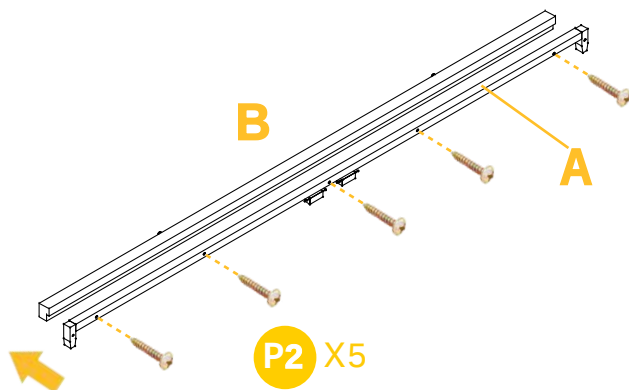

02


Attach E and F to G and H using 8x P1 bolts.

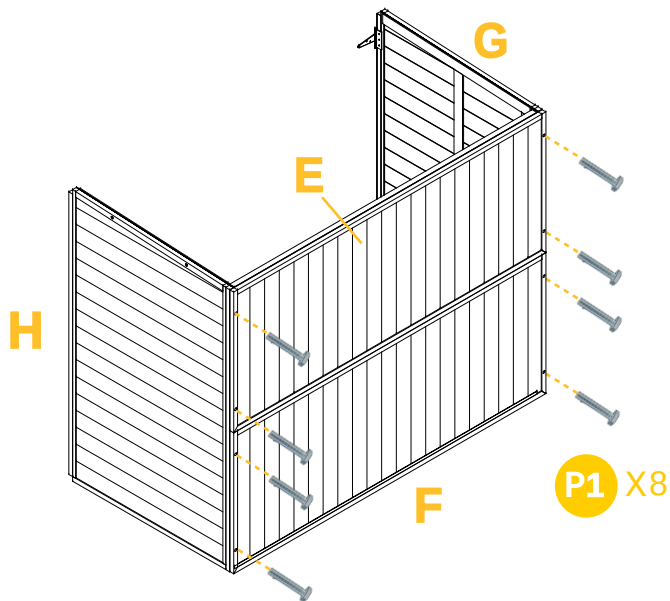

PRODUCT ASSEMBLY //


03

Attach 2x A to G and H using 4x P5 screws total.

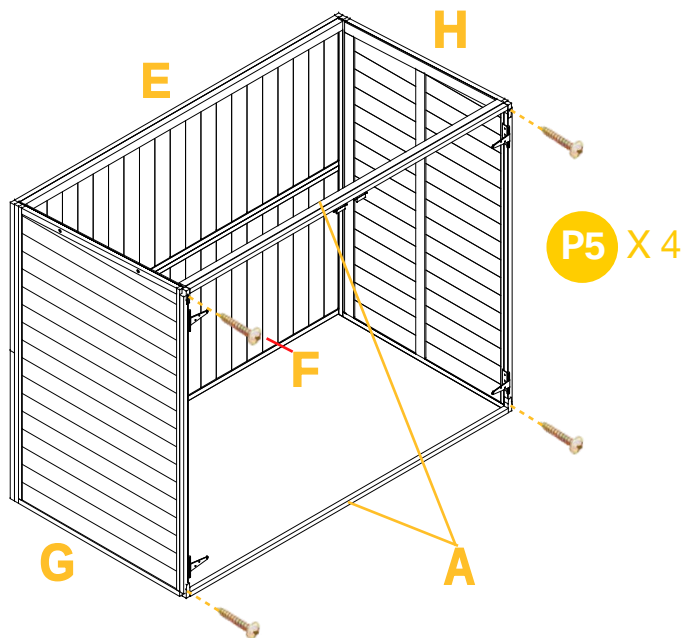


04

Insert 2x I.

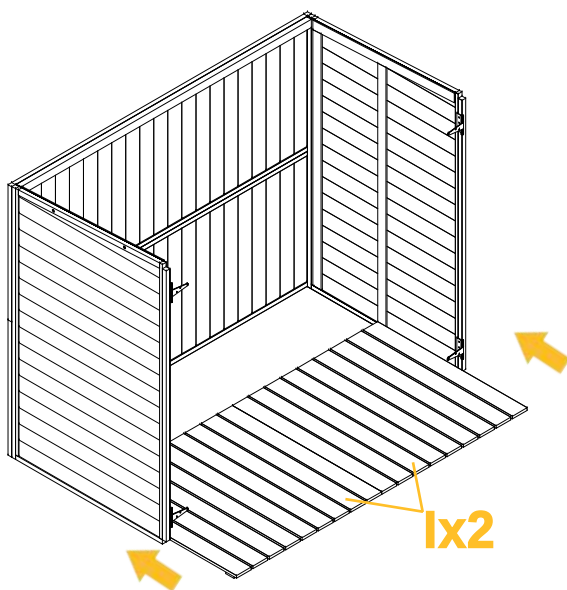


PRODUCT ASSEMBLY //

05 Install C and D using 12x P4 screws total.

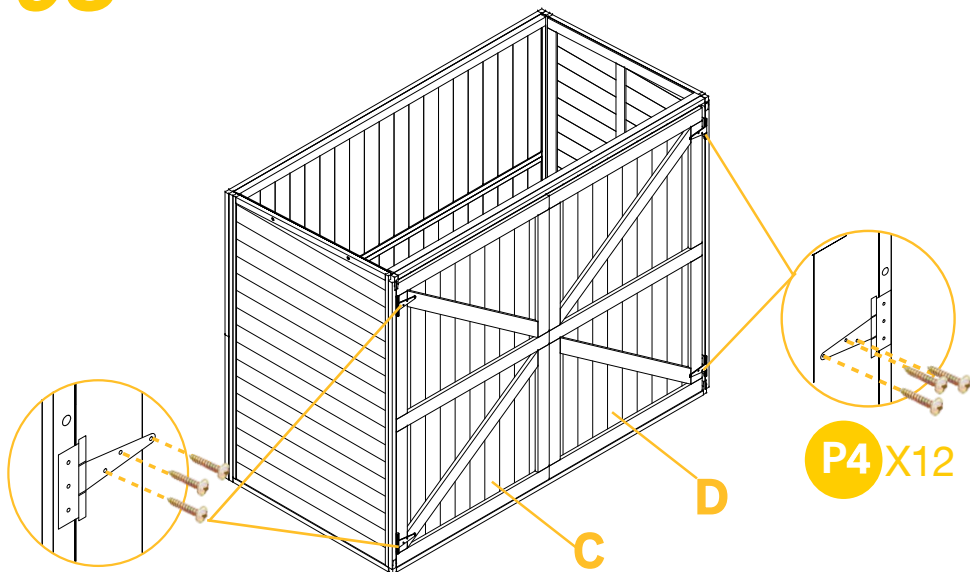

06 Insert 4x P8 mushroom caps.

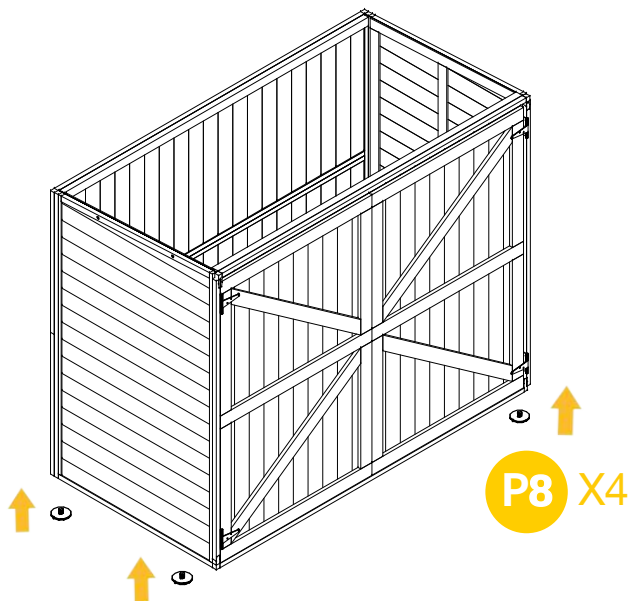


07

PRODUCT ASSEMBLY //

07

Install 2x P6 magnetic catches with 4x P5 screws.

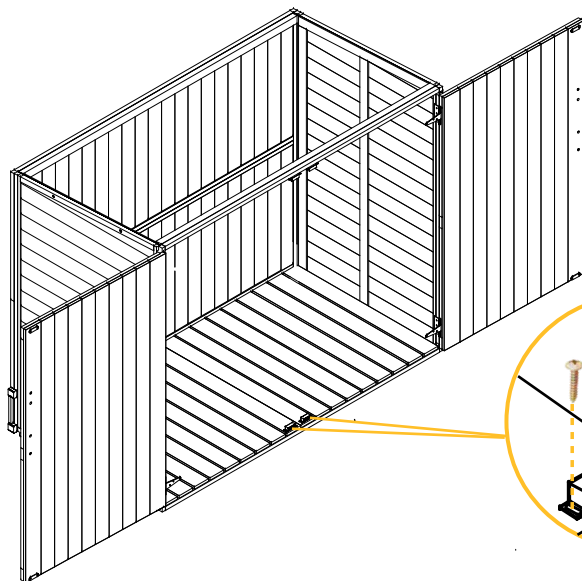


P5 X4

P6 X2



08

Place J.

Insert shelf bracket 4xP10 according to your own needs.

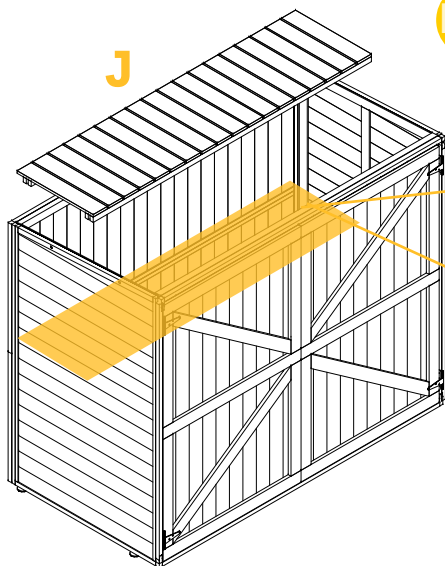

P10 X4

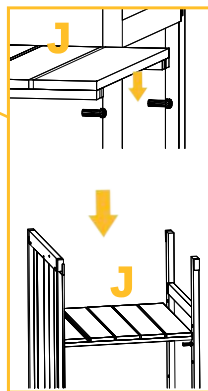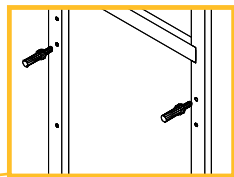


08

PRODUCT ASSEMBLY //

09


Install K and L using 8x P2 screws.

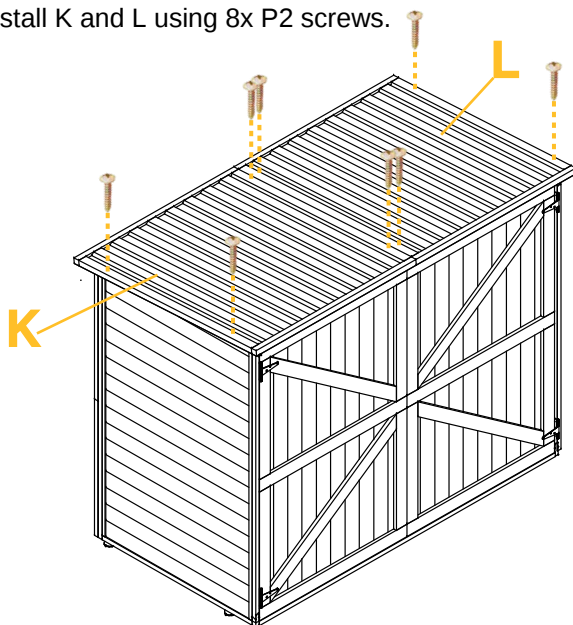

P2 X8

10

Install M with 6x P3 screws.

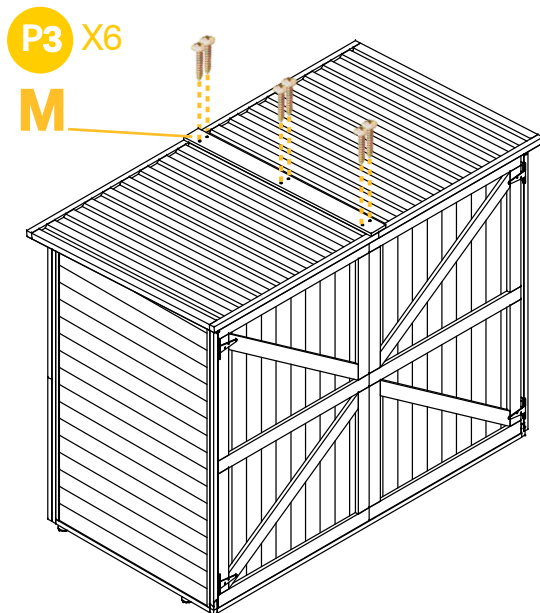


P3 X6

M


PRODUCT ASSEMBLY //

11

Install 2x P7 handles with bolts.
Install 1x P9 latch with 6x P4 screws.

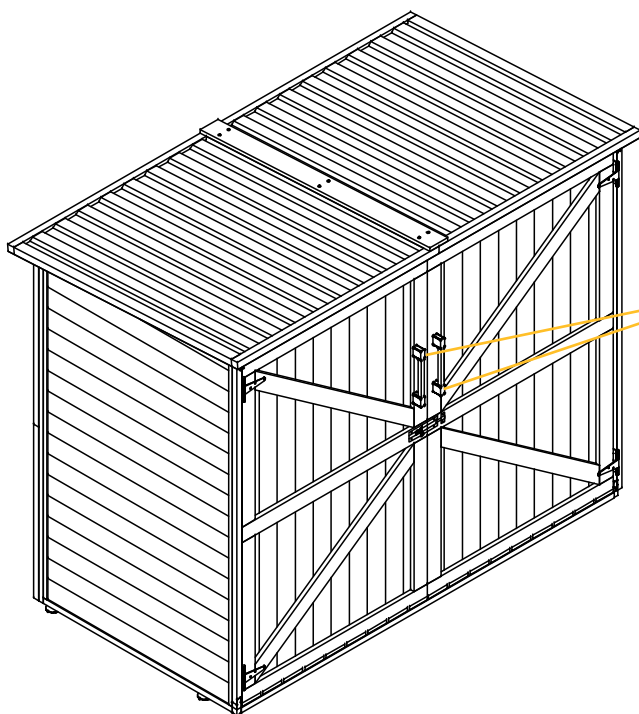


P7 X2

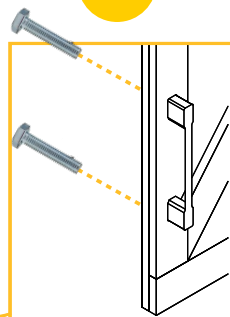

P9 X1

P4 X6

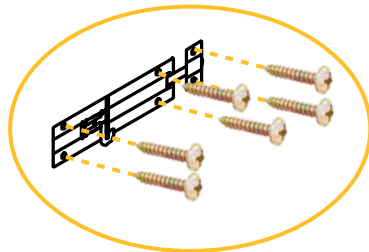

**WARNING**

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.