


Carport instructions

(10*20FT)







Parts

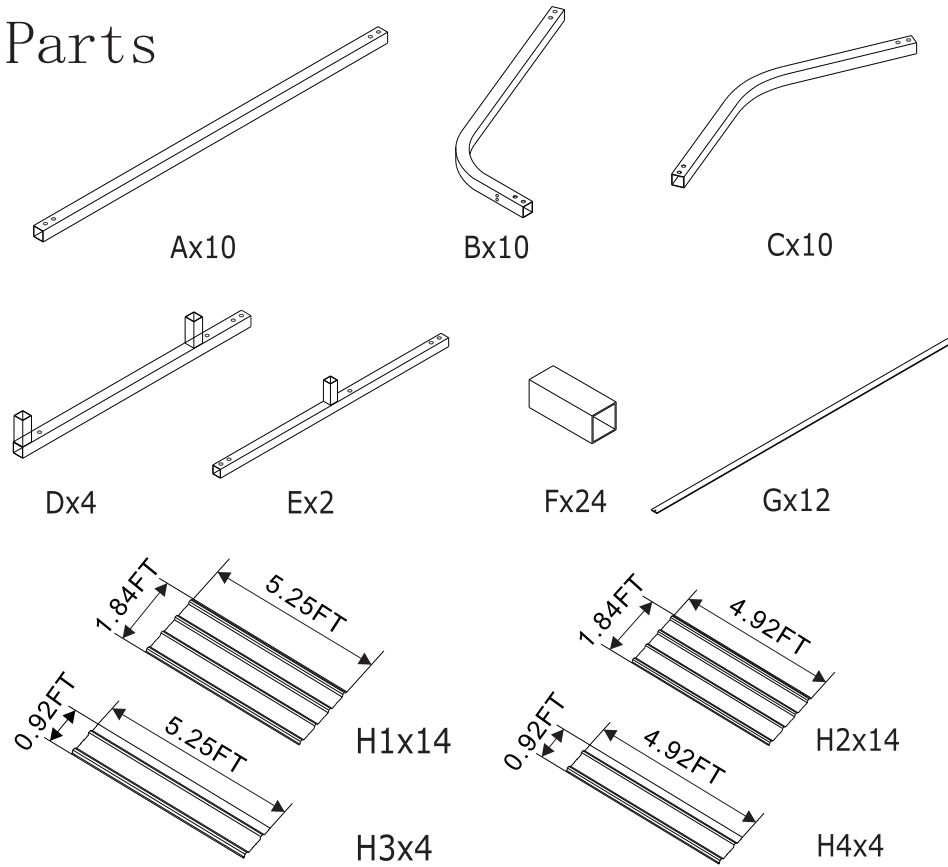


Hardware

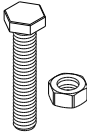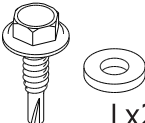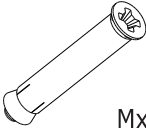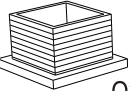


 Kx15 Hex Head Cap Bolt/ Screw	 Lx230 Hex Self Drilling Screw	 Mx10 Philips Flat Head Expansion Screws	 Nx1 Waterproofing Strip
 Ox4 Square Plugs	 Px1 Edgeband		

STEP1:


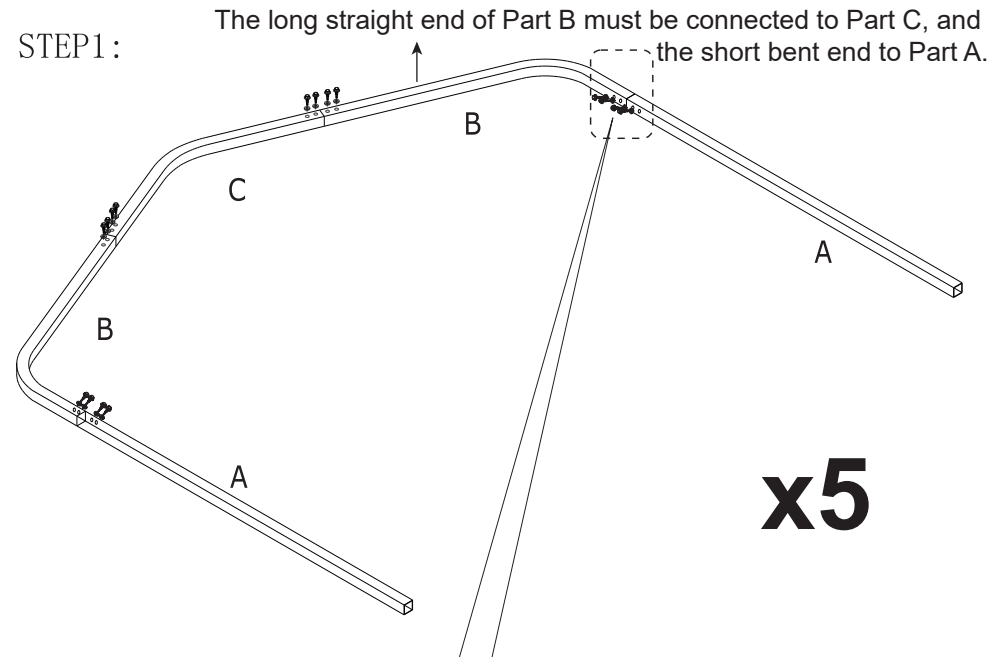


x5

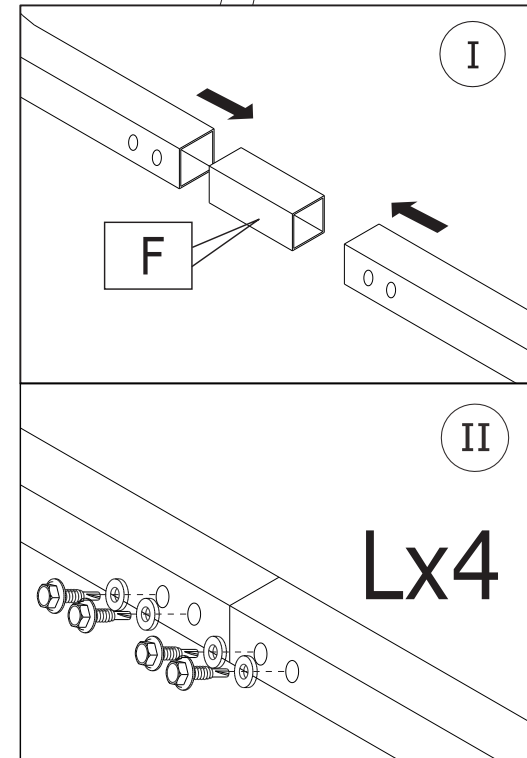


Lx4

STEP2:

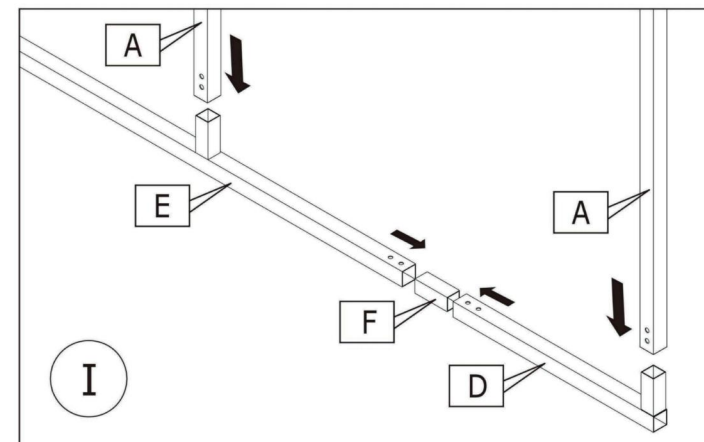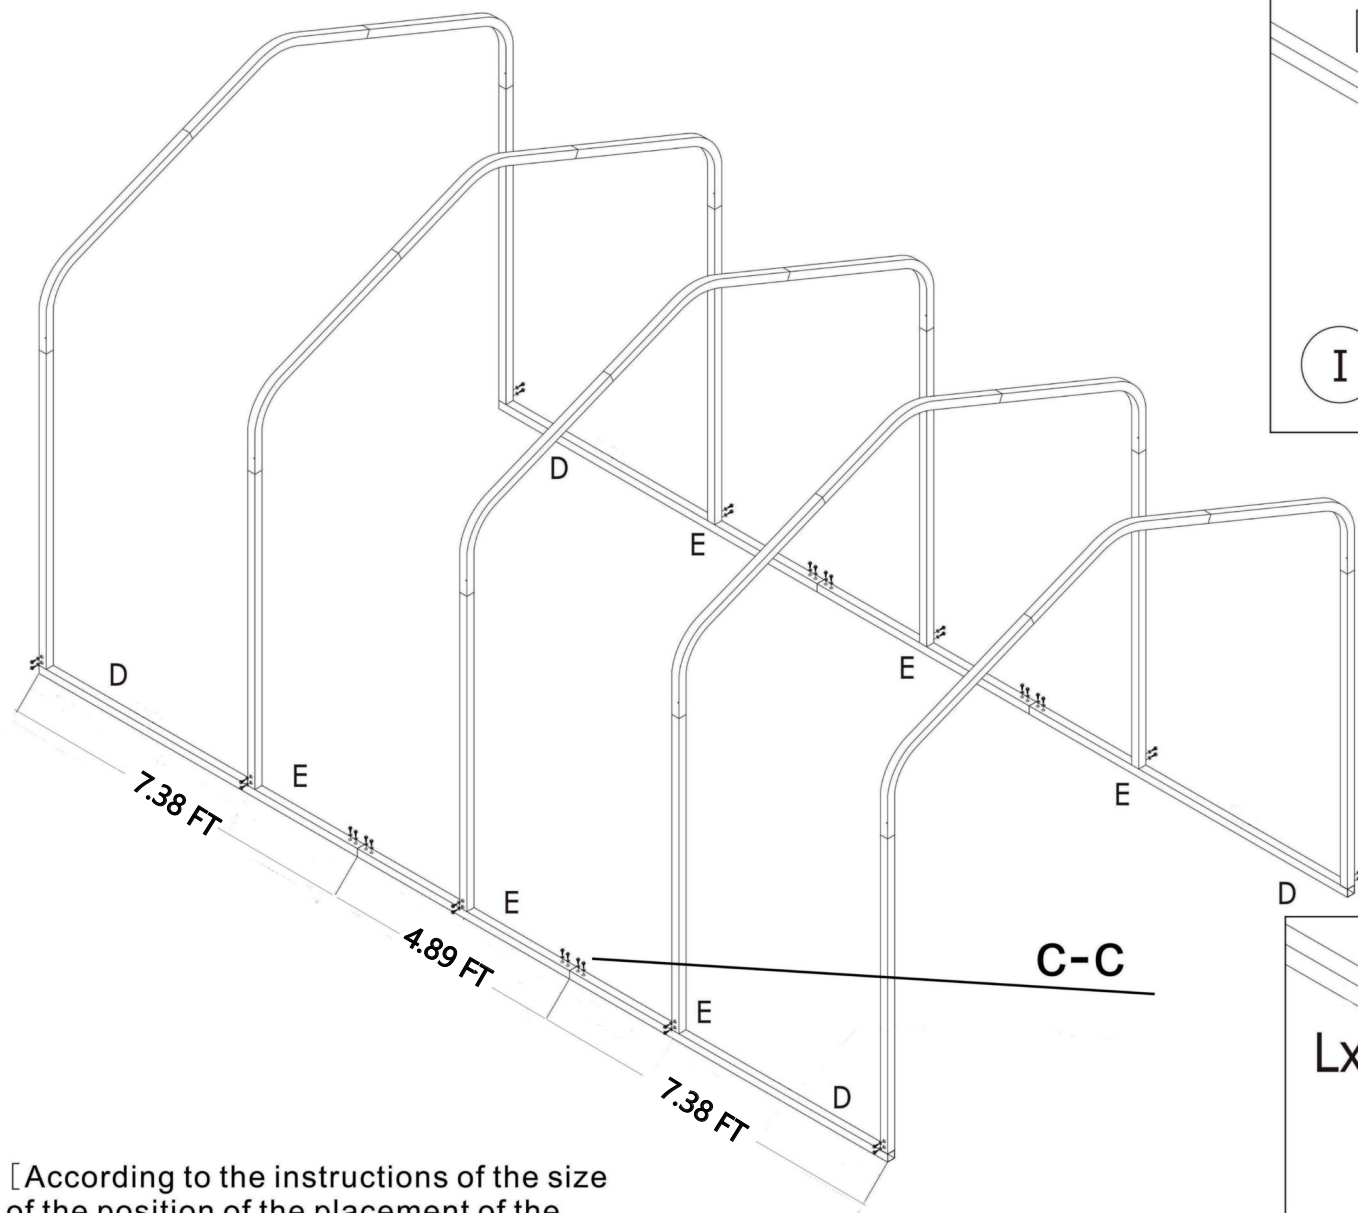


C-C

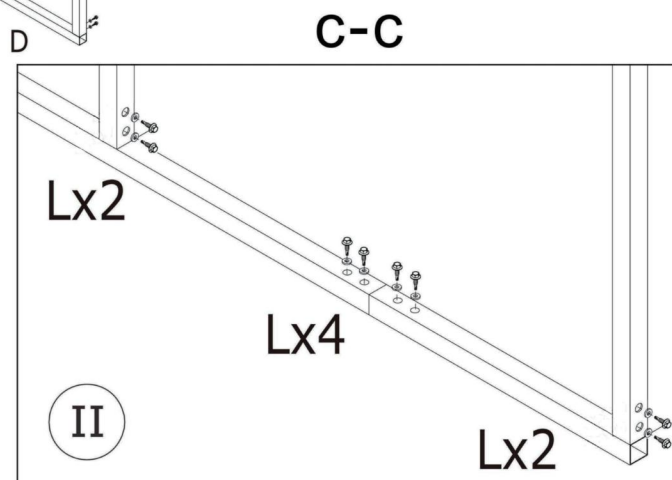

C-C



[According to the instructions of the size of the position of the placement of the installation, the other side of the size of the position as shown in the figure corresponds to one by one, in order to install the successful]

STEP3:

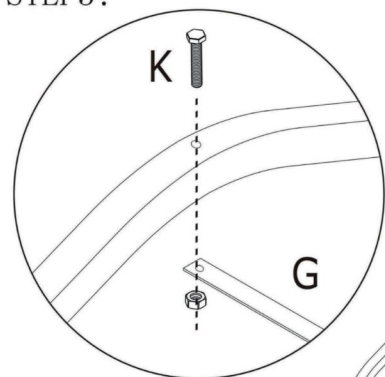

D-D


D-D

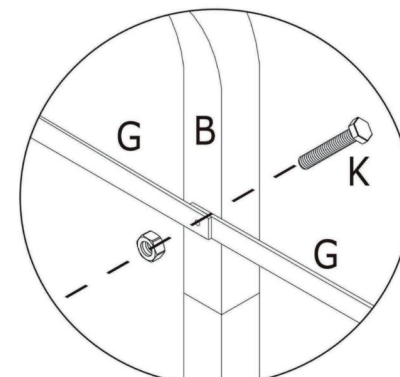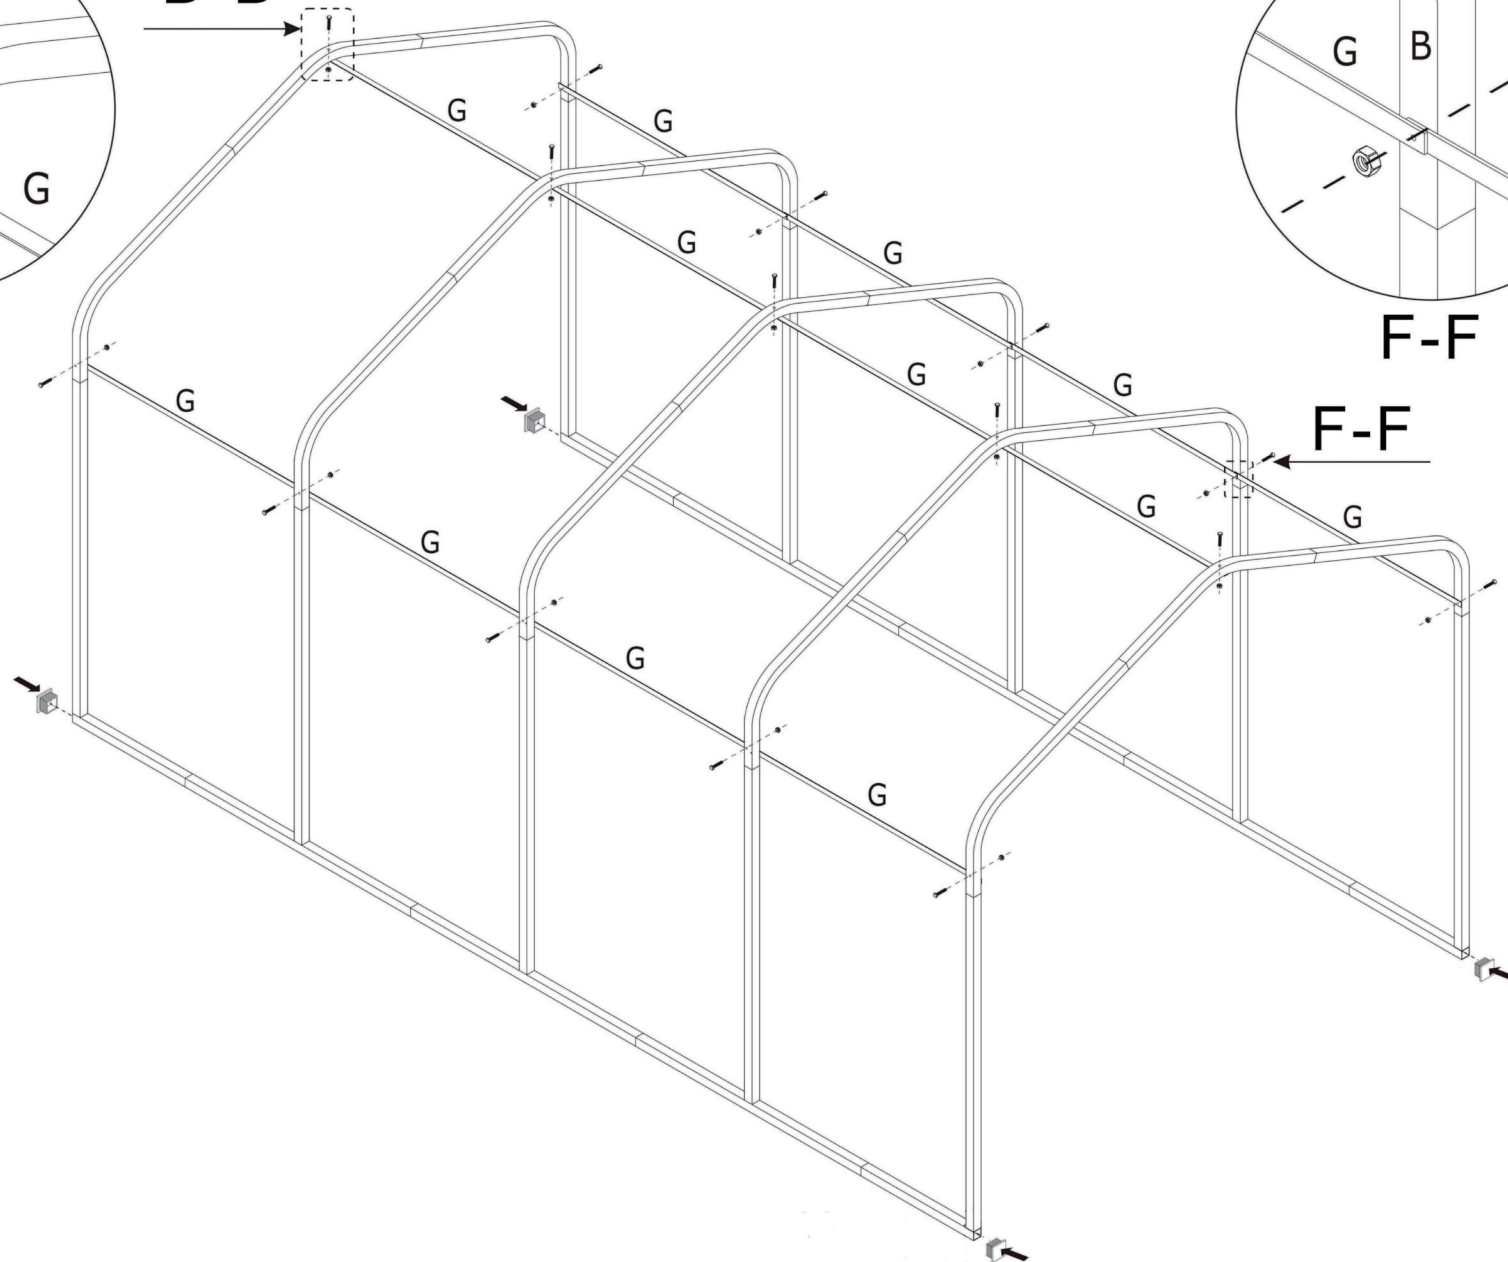


F-F

F-F

STEP4:

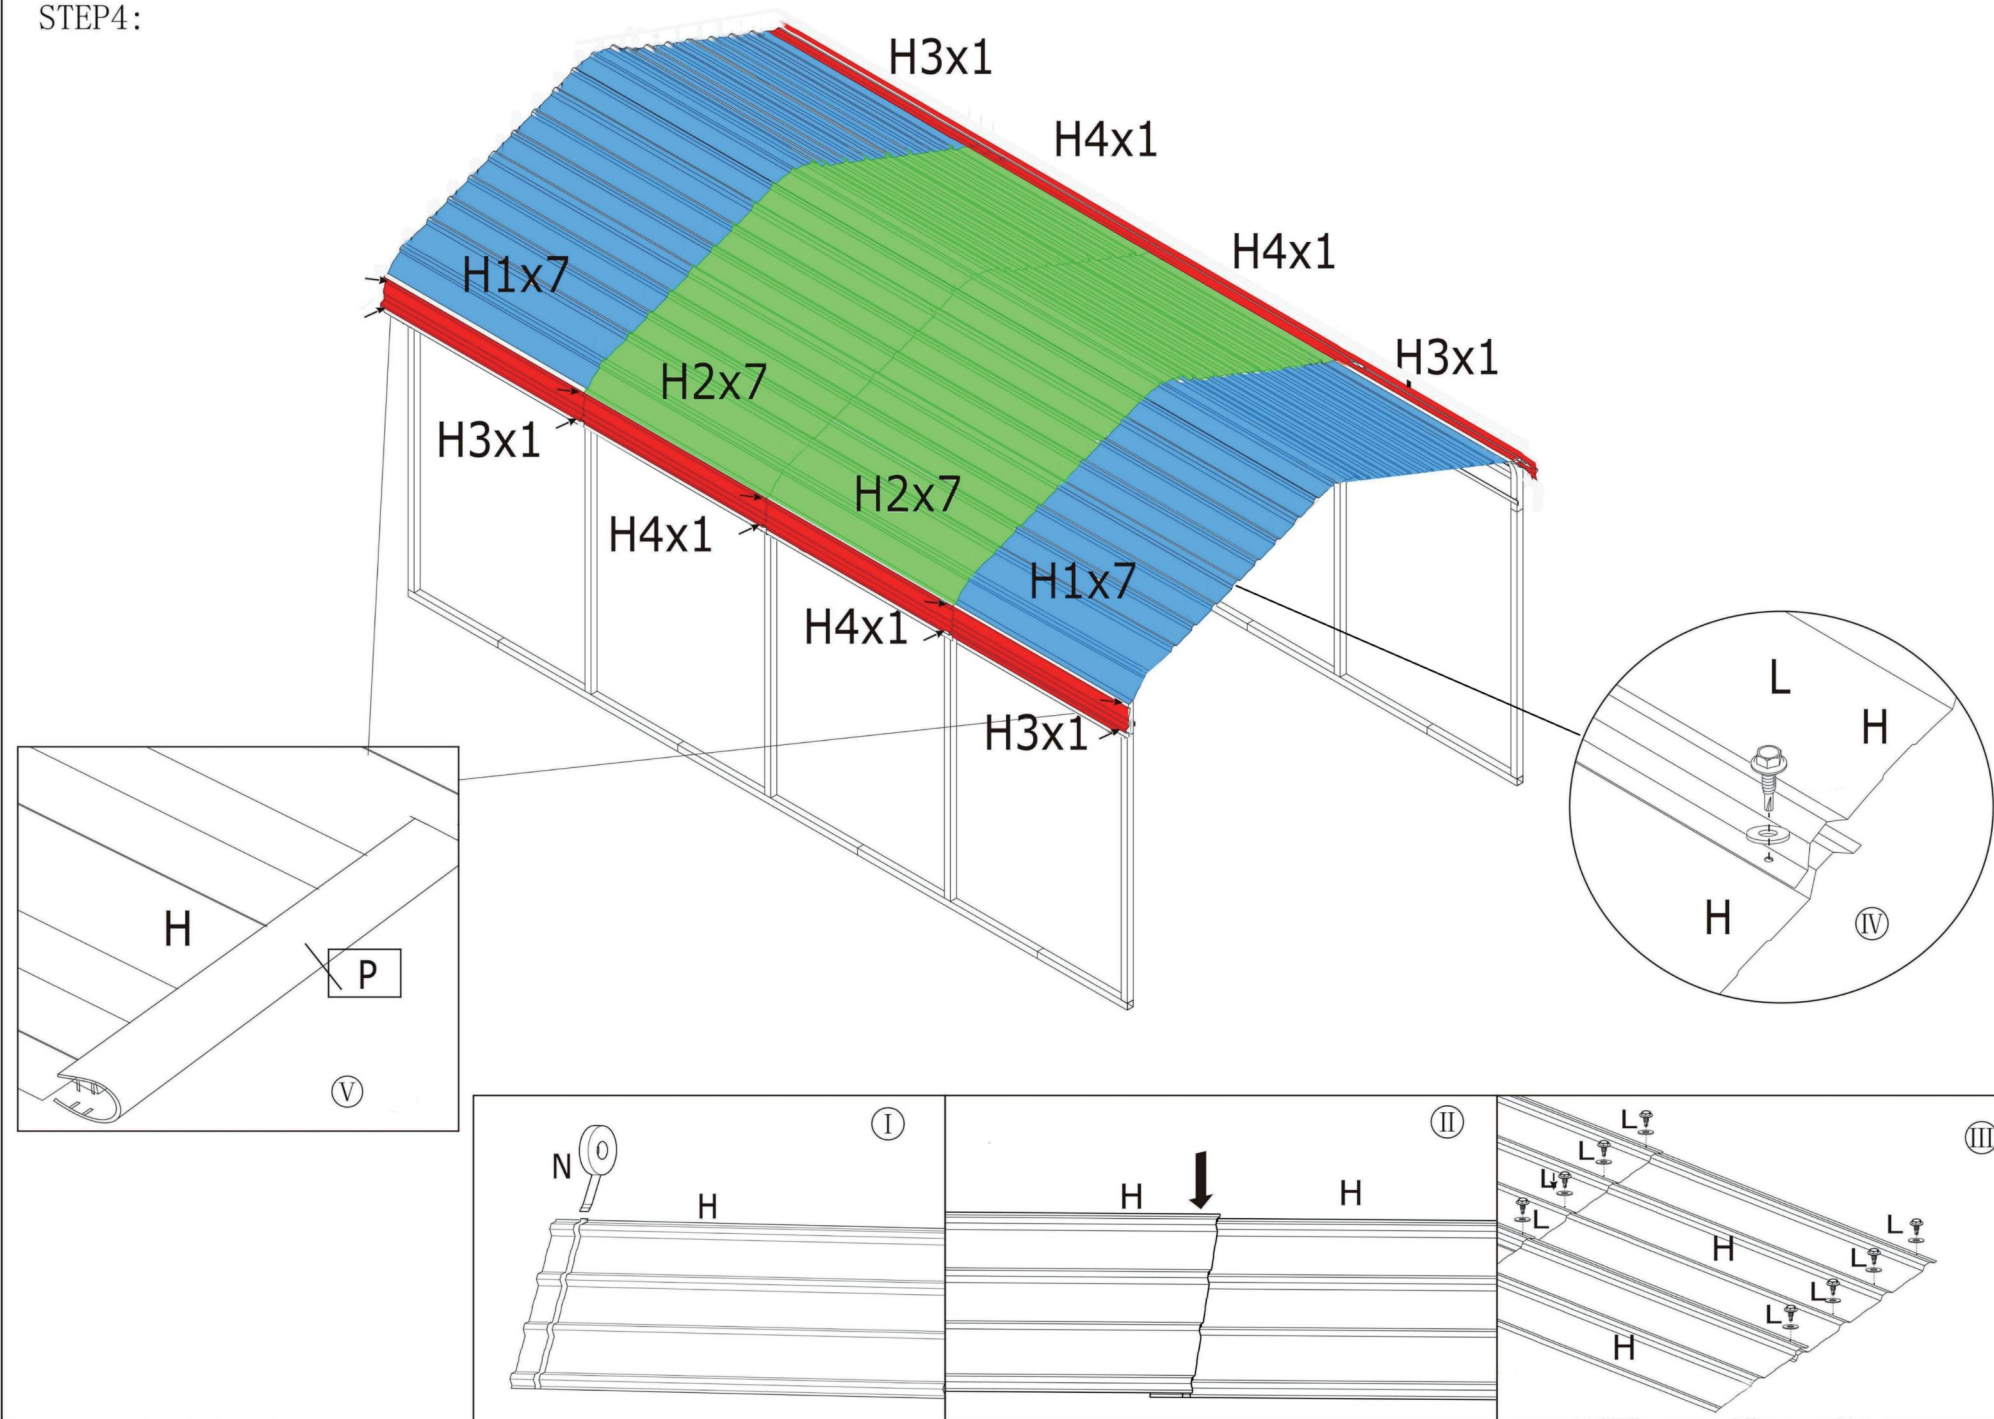

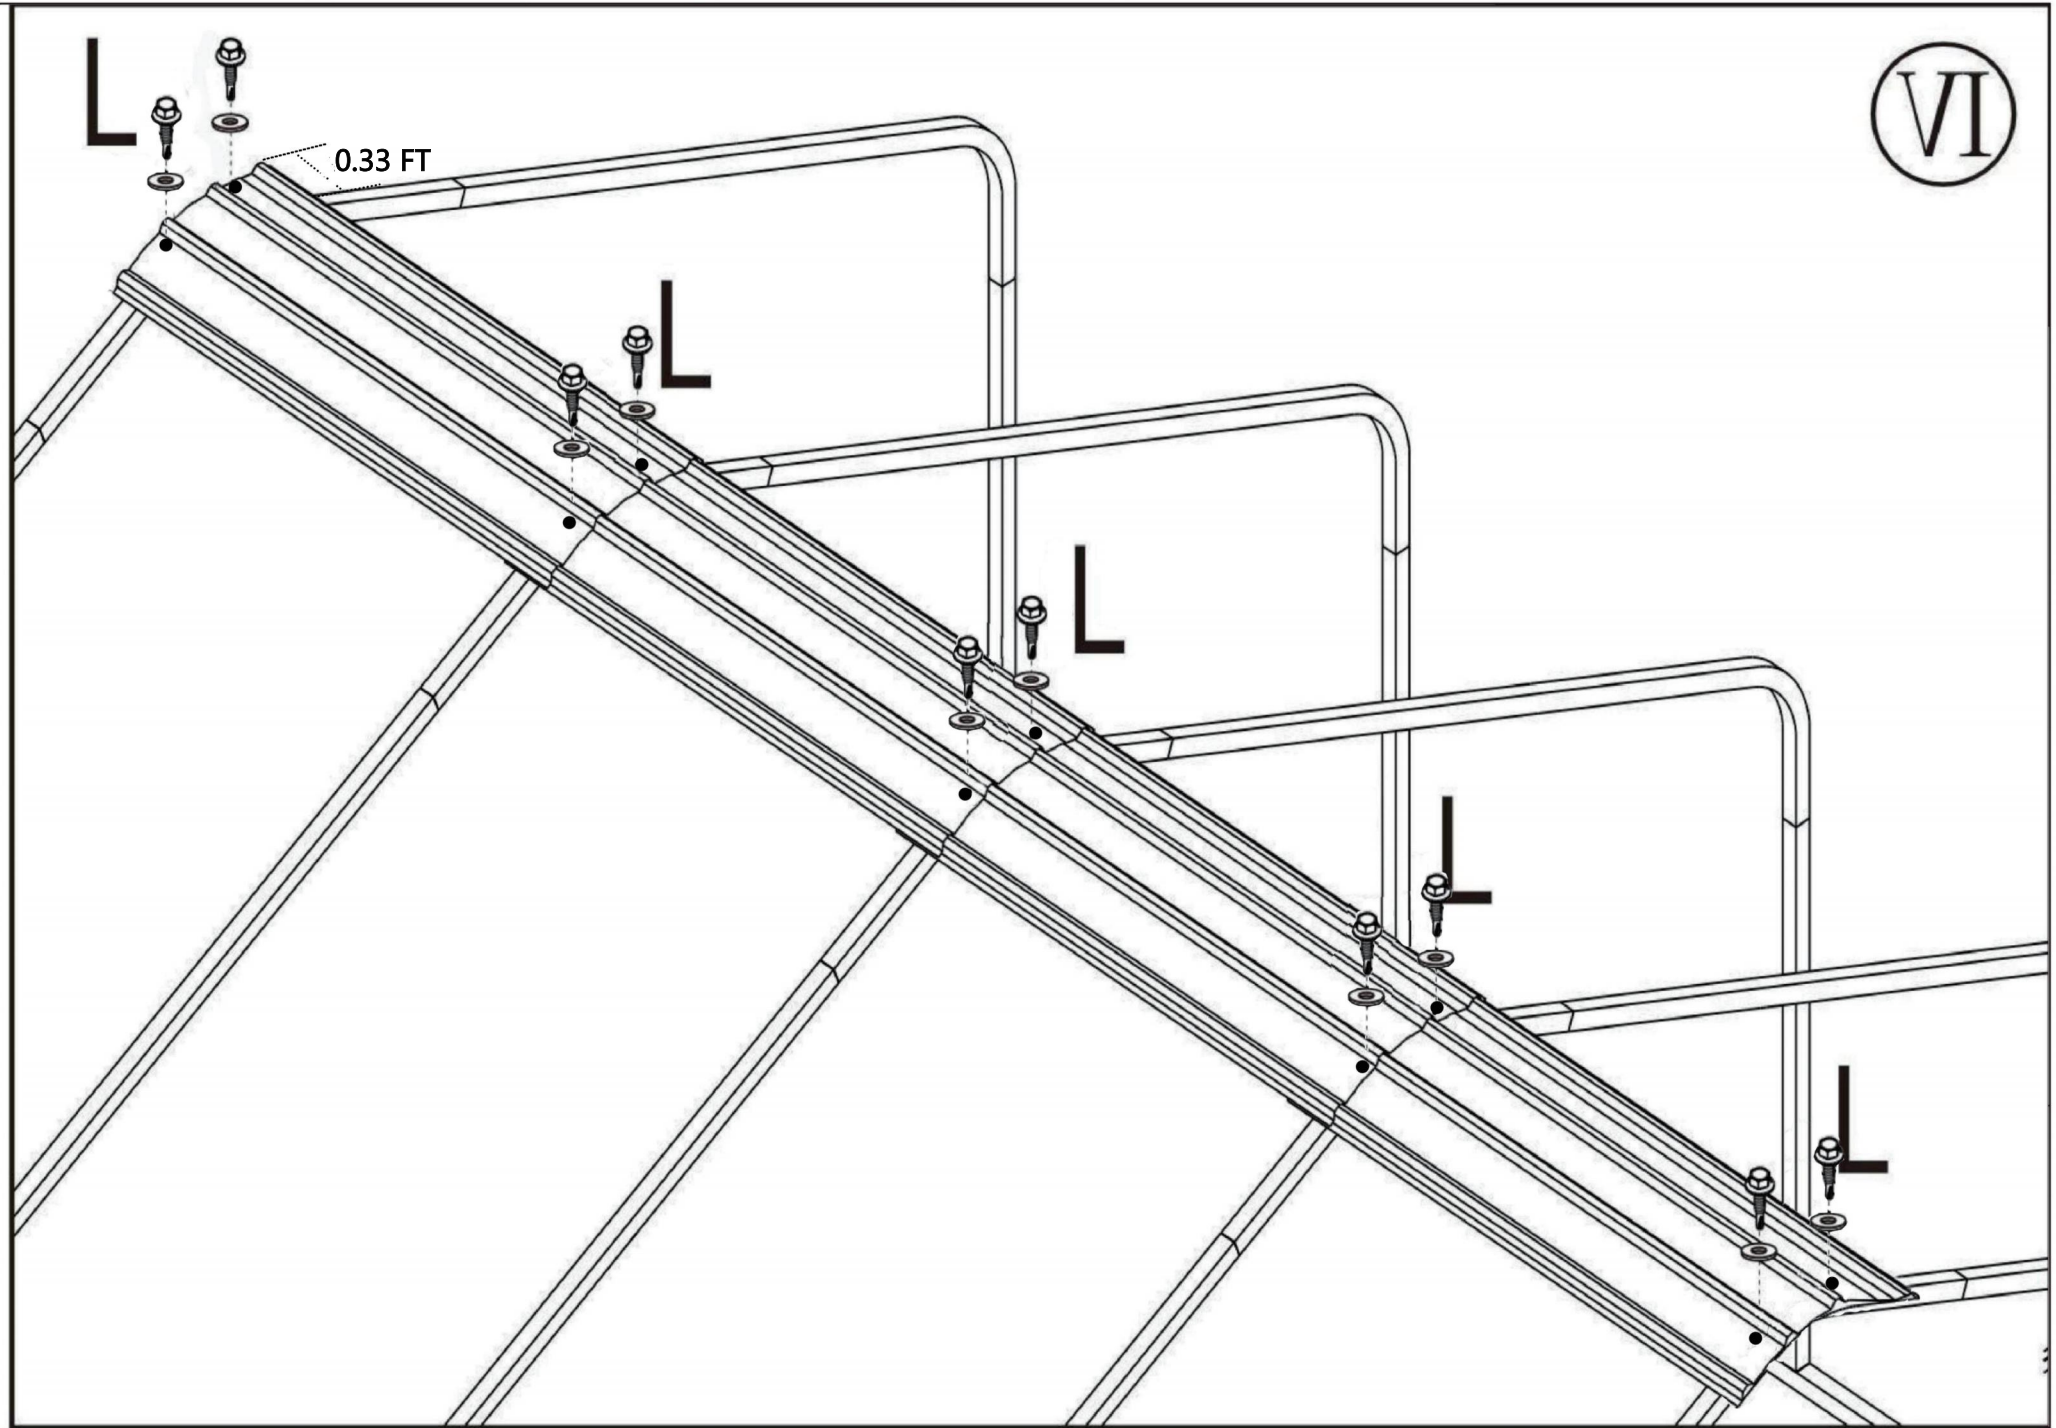

STEP5:

