




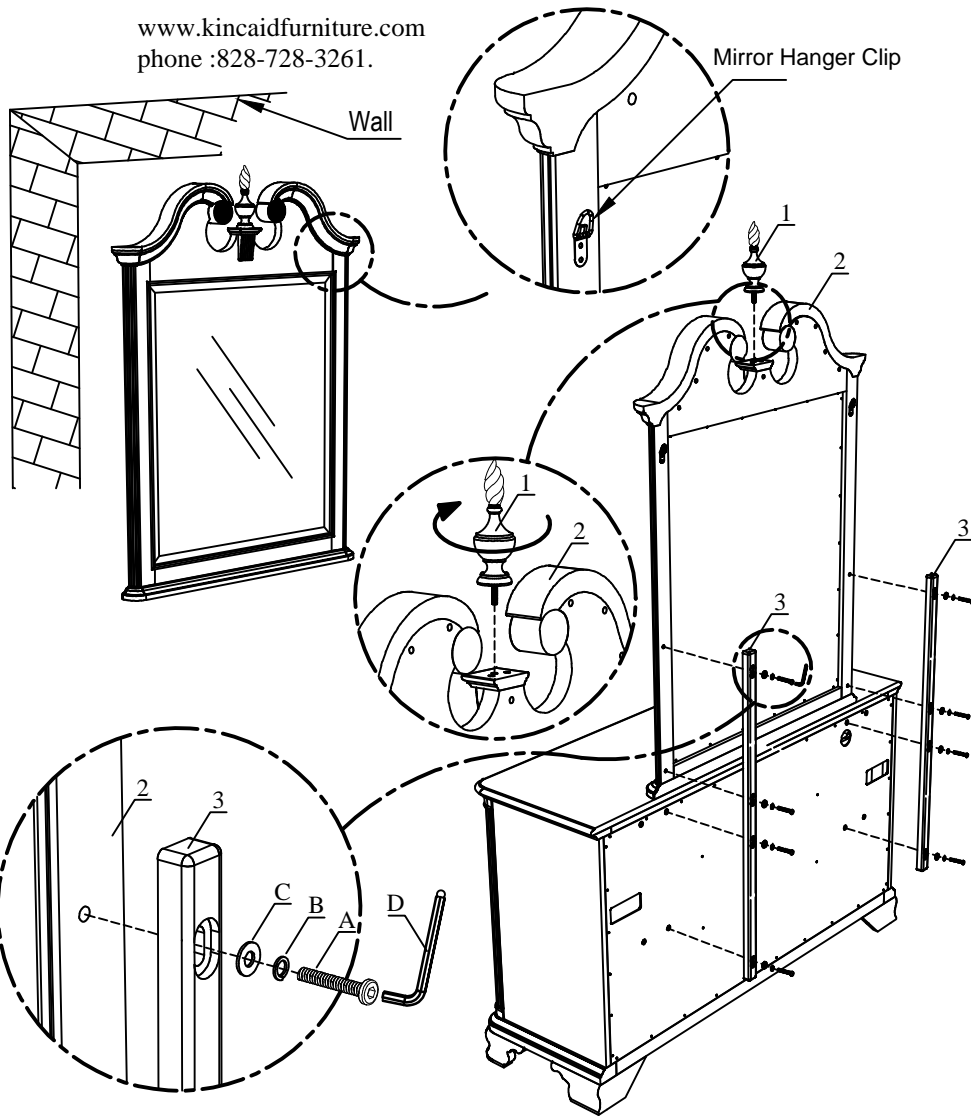

# KINCAID

-SOLID WOOD SINCE 1946-

www.kincaidfurniture.com  
phone :828-728-3261.



## 607-030 Mirror Assembly Instruction Hardware List

CODE	DESCRIPTION	QTY
A	 Bolts <math>\frac{1}{4}</math>" * 1-1/2"	8
B	 Lock Washer * 1/4"	8
C	 Flat Washer * 1/4" * 19D	8
D	 Allen Key 100*50*4 MM	1


### IMPORTANT NOTES

- Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples and packing straps before you start to assemble.
- Do not tighten all screws and bolts until completely assembled.
- Keep all hardware out of the reach of children.

Step 1: Attach the threaded bolt top finial (1) to the mirror (2) by screwing into a place tighten by hand only.

Step 2: Assemble mirror (2) and dresser with mirror support (3) by using flat washer (C), lock washer (B) and bolt (A).  
Do not tighten the bolt now.

Step 3: Tighten the bolts (A) with Allen key (D).

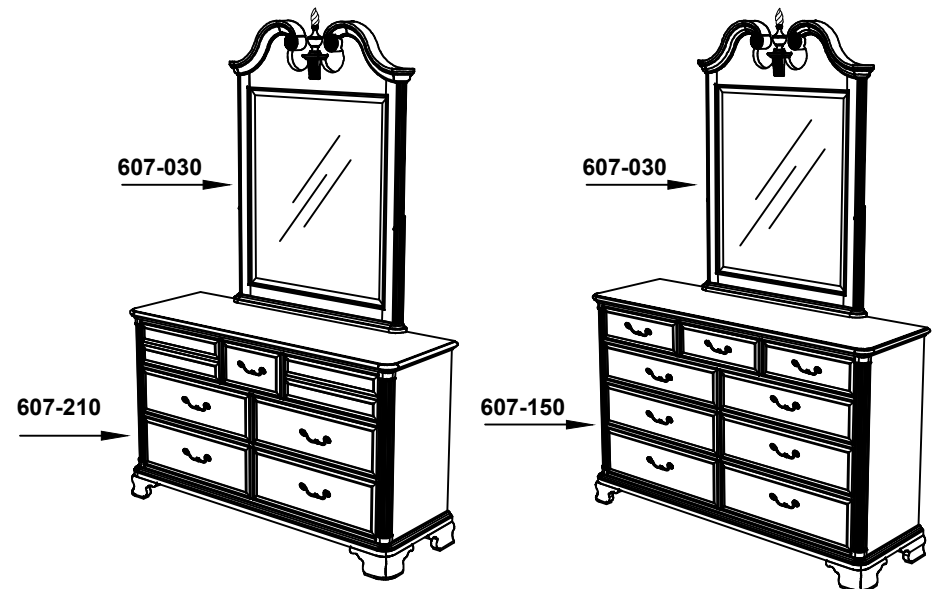

MADE IN VIETNAM