


# LONDON TERRACE

## MIRROR INSTALLATION INSTRUCTIONS

*Complement your purchase with other fine accessories also from **MOTIV**.*

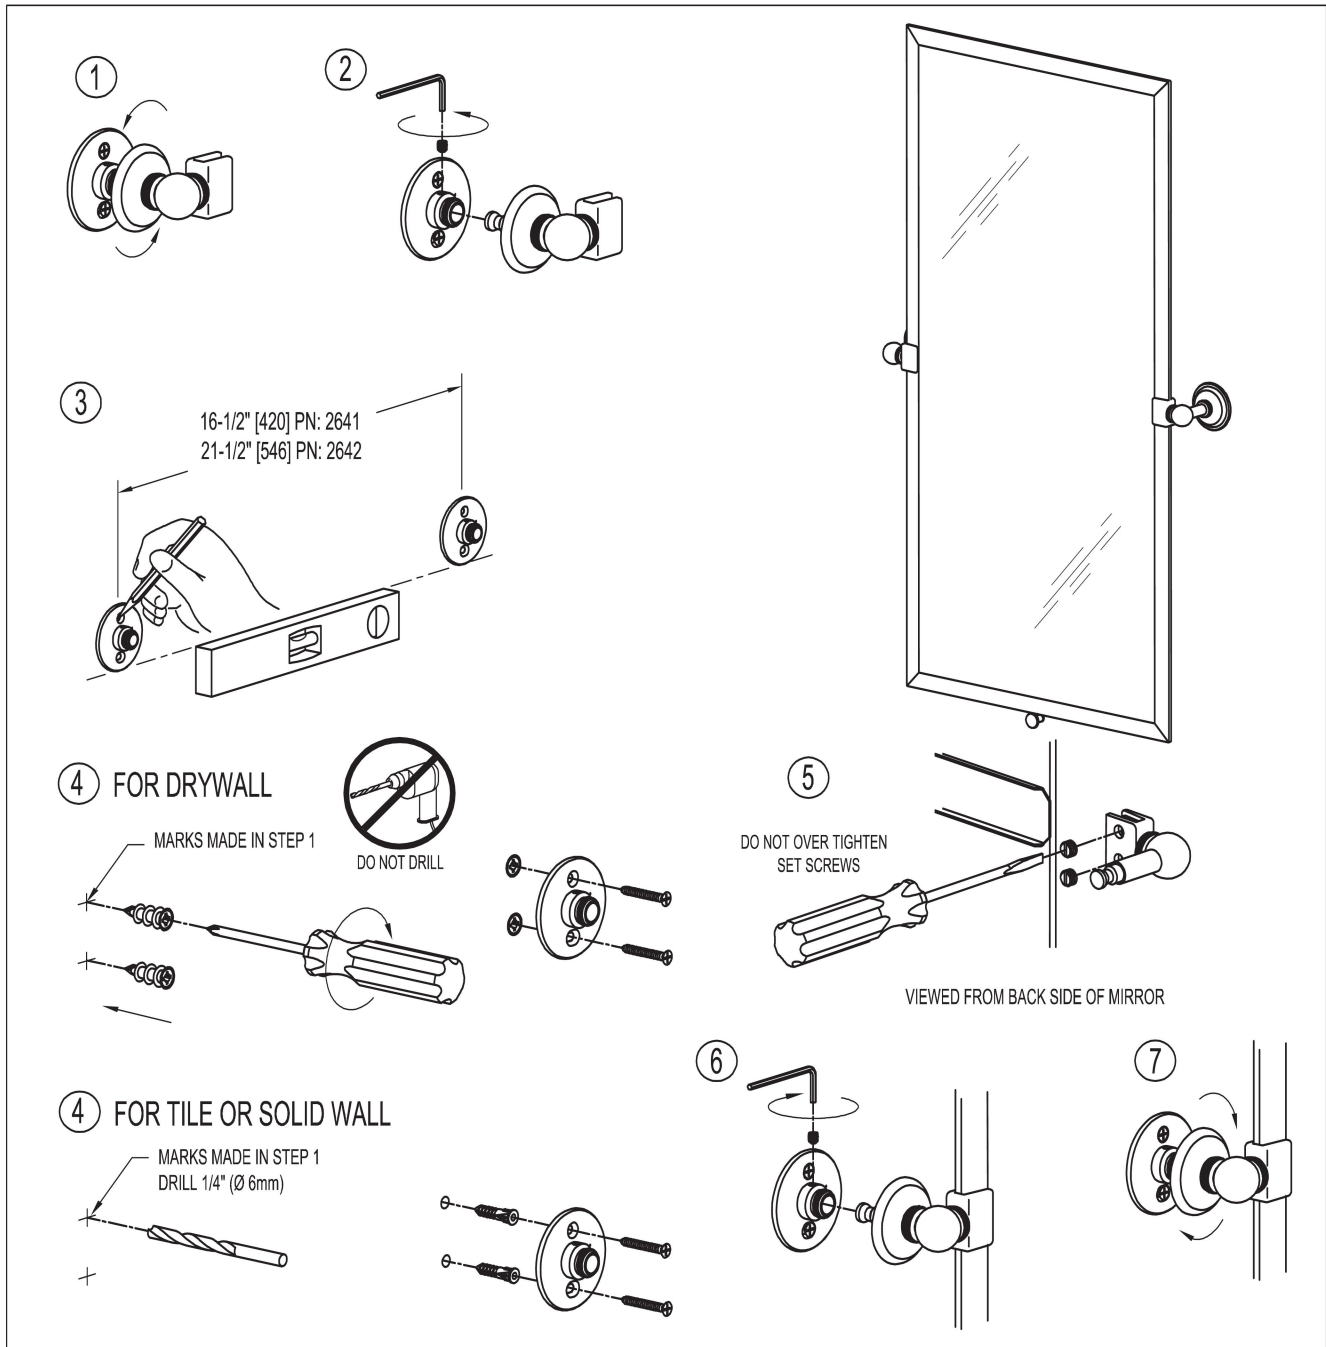

**Tools needed:** Pencil, Tape measure, Phillips Screwdriver, Drill and Level.

**motiv**

2001 CARNEGIE AVE  
SANTA ANA CA  
T. 949-417-5207  
www.motiv.us