


WALL SCONCE

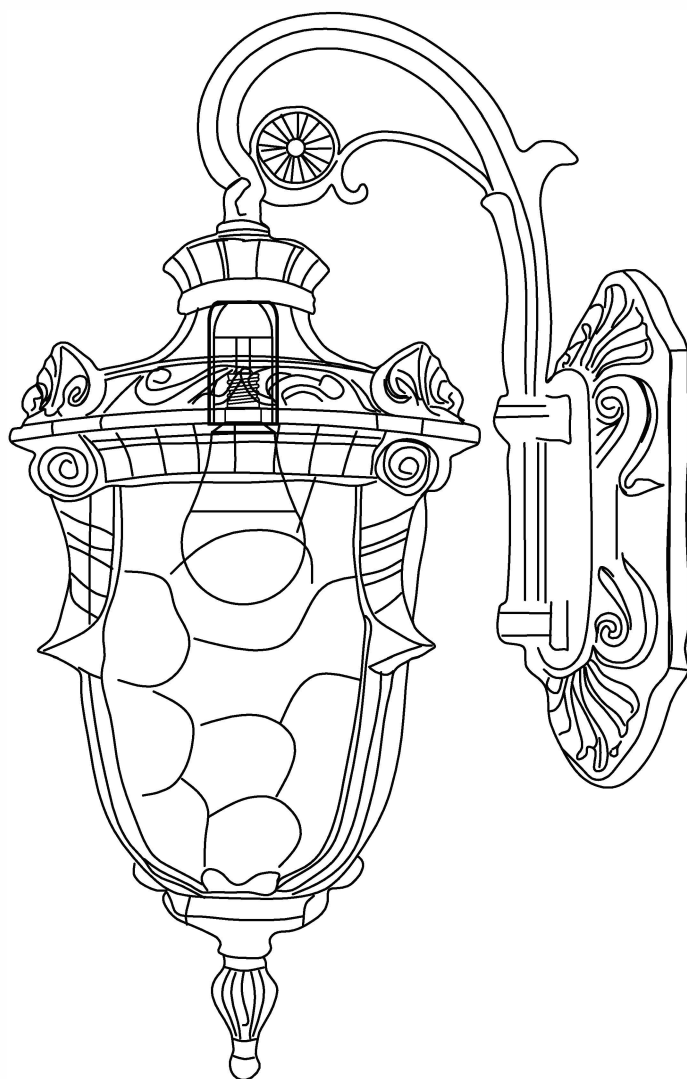

INSTALLATION MANUAL

TOOLS REQUIRED



Ladder



Pliers




Wire Strippers



Screwdrivers


01

PACKING LIST

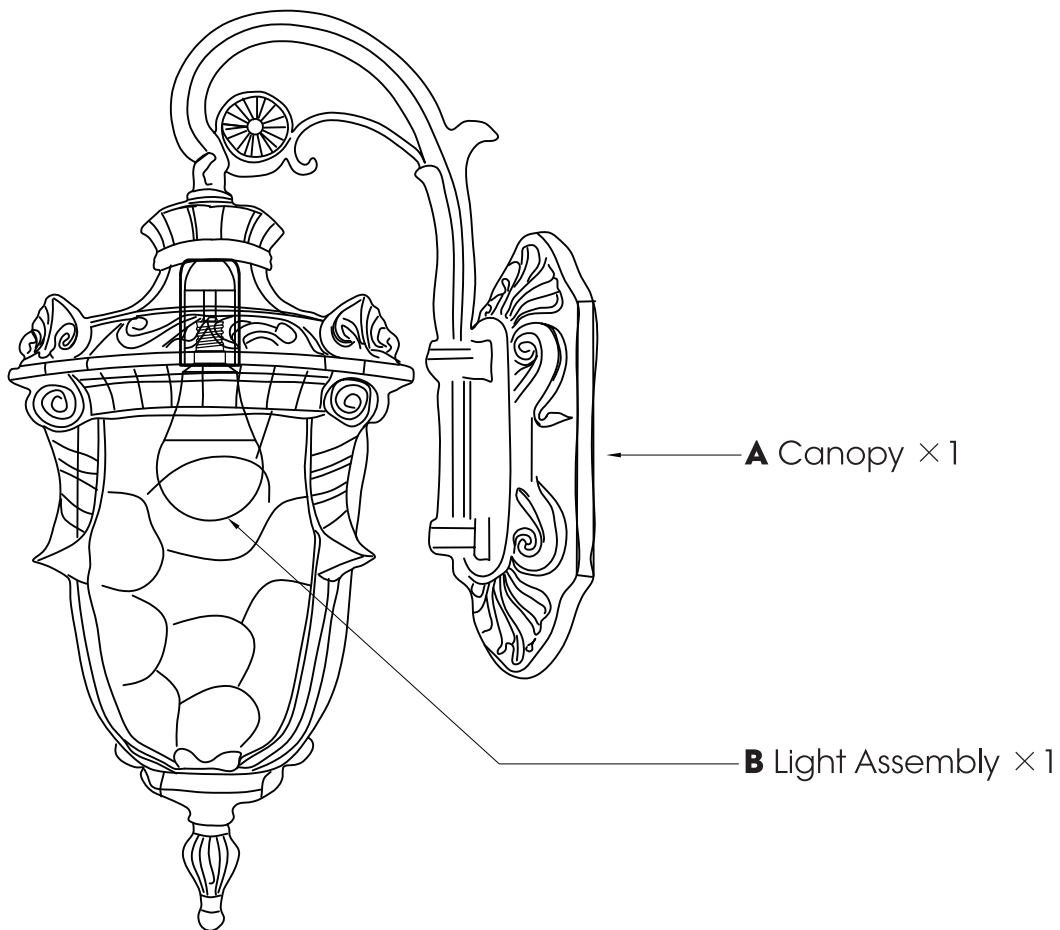

02

INSTALLATION KIT

AA 1×  Mounting Bracket	BB 1×  Ground Screw	CC 2×  Outlet Box Screw	DD 3×  Wire Nut	EE 2×  Plastic Anchor
FF 2×  Wood Screw	GG 2×  Flat Washer	HH 4×  Knurled Nut	II 1×  Hex Nut	JJ 1×  Gloves

NOTE:

1. BB has already been pre-installed in AA, and AA/HH have already been pre-installed in A.
2. Some extra hardware may be included, and the quantity listed above is the number required for installation.

03


MOUNTING AND WIRE

1. Installing the Mounting Bracket and the Canopy

Step 1: Loosen the Knurled Nut (HH) from Canopy (A), and take out the Mounting Bracket (AA).

Step 2: Install the Mounting Bracket (AA) onto the wall using Wood Screw (FF) and Plastic Anchor (EE), and then install the Canopy (A) onto the Mounting Bracket (AA) with Knurled Nut (HH).

Step 3: Install the E26 bulb (not included) × 1, Max 60W each.

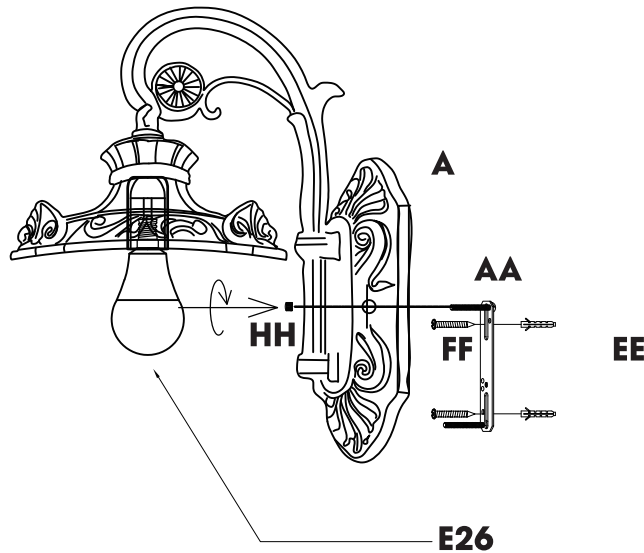

NOTE:


Fully dimmable when used with dimmable bulbs and compatible dimming switches (not included).

2. Connect the Wires

Step 1: Wrap the ground wire from the outlet box around the Ground Screw on the Mounting Bracket (AA), and then connect the ground wire from the fixture to the ground wire from the outlet box.

Step 2: Connect the wires from the fixture to the house supply wires, neutral (white) to neutral wire, and hot (black) to hot wire.

Step 3: Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other.

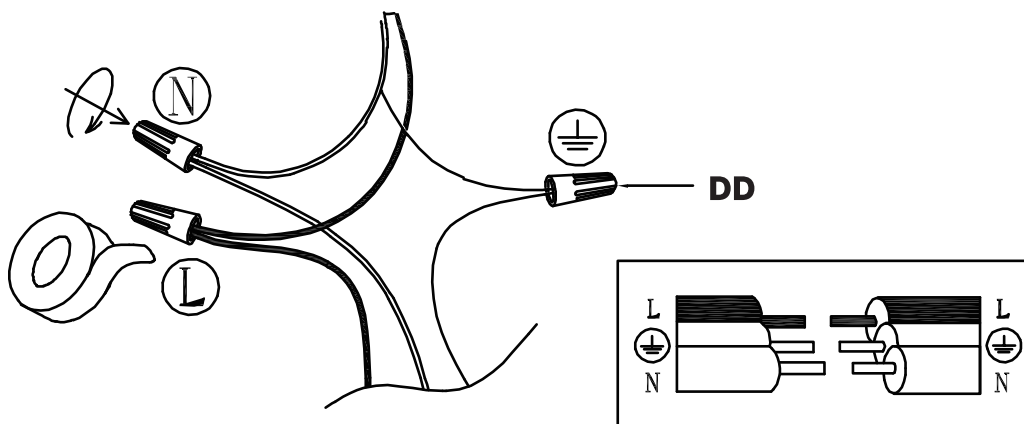

3. Install the Light Assembly

Install the Light Assembly (B) onto the lamp frame using Knurled Nut (HH).

