



C16129 ASSEMBLY INSTRUCTIONS

Parts:

(2) 1/8" thick dividers



(1) Top and Bottom



(2) Sides



(1) 5/8" thick shelf



(2) Backs





(2) 1/8" thick shelves



Hardware:

(12) Hex screws


(1) Allen wrench

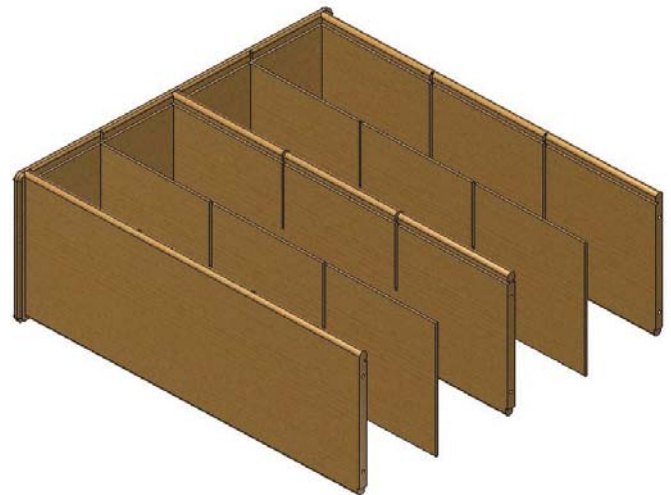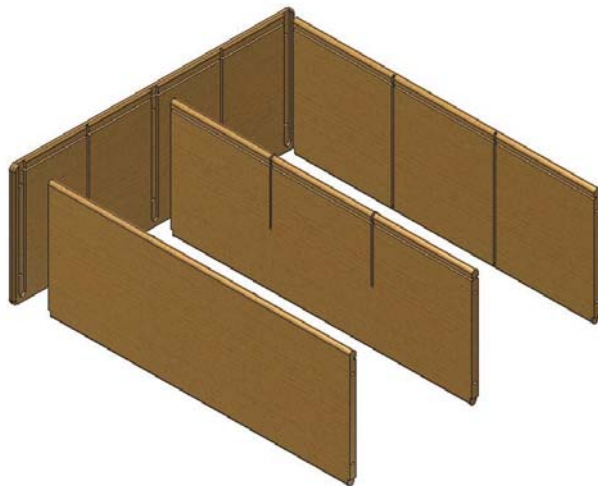


Step 1: Attach **Top**, **Bottom**, and **5/8" thick shelf** into a **Side** piece using **(6)** supplied **Hex screws** and **Allen wrench** provided. Back grooves in Top and Bottom, -cuts that go all the way through from short end to short end, align with 3/8" deep back groove in Side piece. Back grooves face inwards towards middle of Side piece. Slots in 5/8" thick shelves also point towards 3/8" deep groove in Side piece.

Step 2: Slide **(2) 1/8" thick shelves** into place between 5/8" thick shelf and Top and Bottom. No hardware is required in this step.

For assistance, call: Customer Service 1-800-247-8465

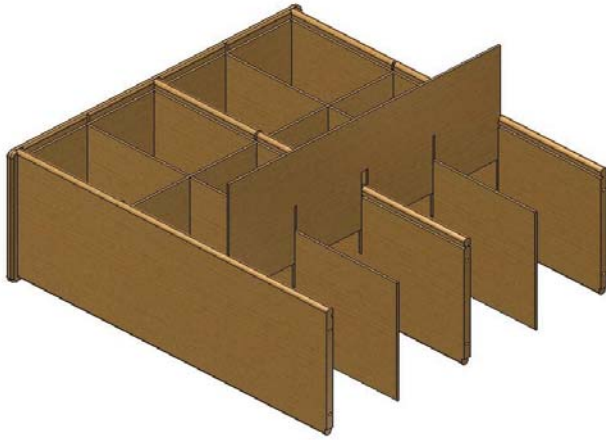

Step 3: Attach (2) 1/8" thick dividers to Top and Bottom pieces. Slots in 1/8" thick dividers scissor into 1/8" wide slots in shelf pieces. Backs of dividers, (top of dividers pictured above), sit below back grooves in Top and Bottom pieces. No hardware is required to attach 1/8" thick dividers.

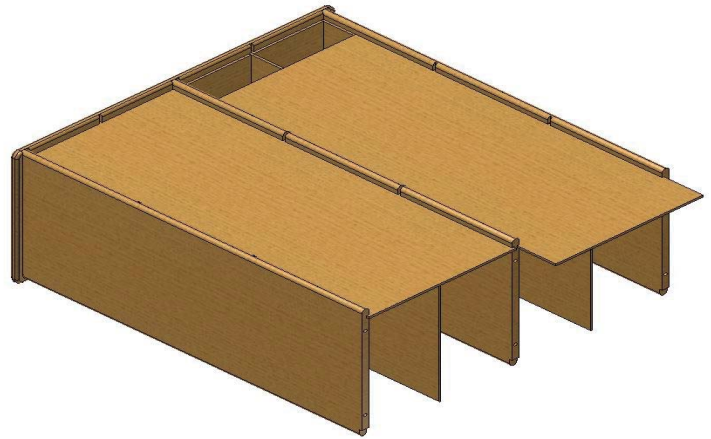

Step 4: Slide (2) Backs into place using back grooves in Top, Bottom, and 5/8" thick shelf. Backs will extend out past edge of Top, Bottom, and Shelf. Do not force and make flush. Make sure Backs are sitting in back groove of Side piece.



Step 5: Attach second Side piece using (6) supplied Hex screws and Allen wrench. Overhang on backs past Top, Bottom, and shelves will fit into deeper 3/8" back groove of second Side piece.



Step 6: Set unit upright, resting edges of Sides on floor. Tighten all screws snugly. **DO NOT OVER-TIGHTEN. DO NOT DRILL.** Assembly is now complete.

For assistance, call: Customer Service 1-800-247-8465