



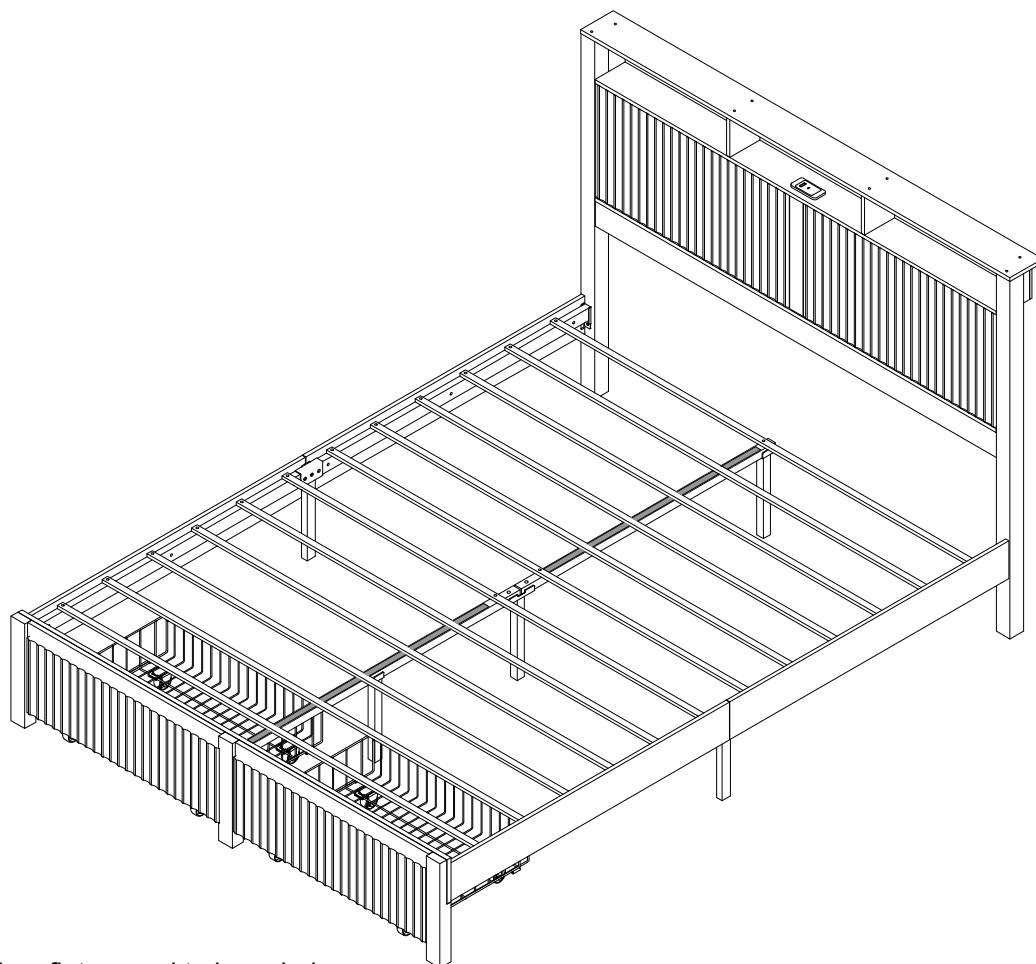


Note:
 Should be assembled on flat ground to keep balance.
 It needs at least two people to install.
 Before starting the assembly, you must read the whole manual and follow the instructions.




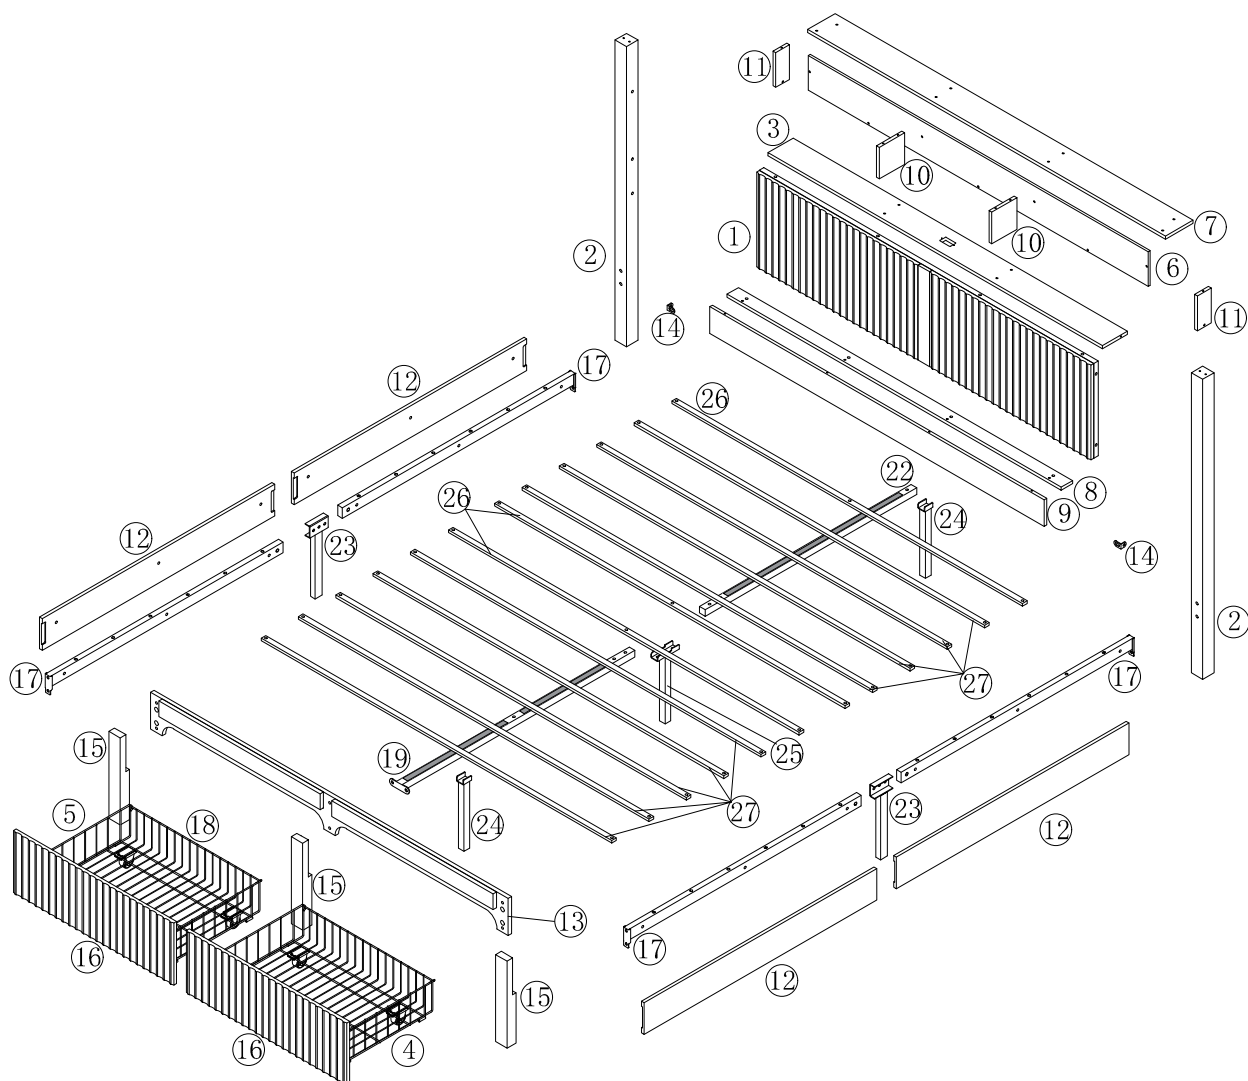


Pls make sure all the accessories are complete!

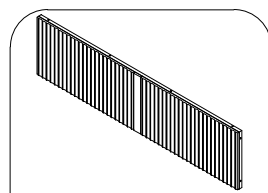


① 1pc

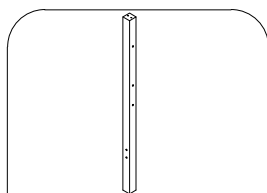


② 2pcs

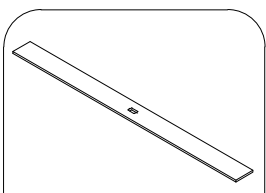


③ 1pc

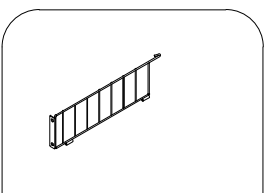


④ 2pcs

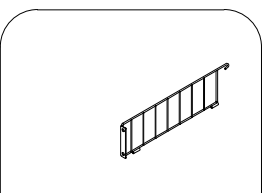


⑤ 2pcs

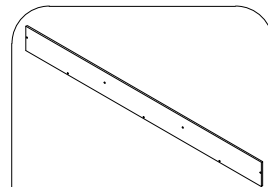


⑥ 1pc

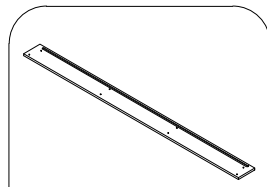


⑦ 1pc

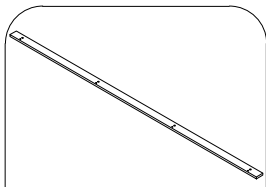


⑧ 1pc

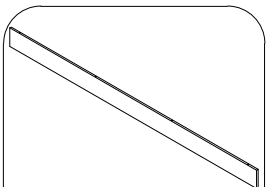


⑨ 1pc

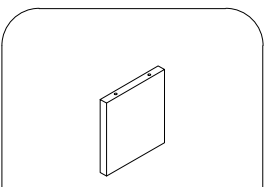


⑩ 2pcs

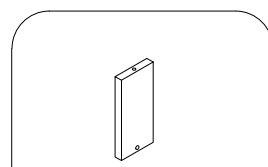


⑪ 2pcs

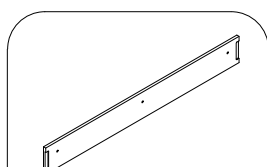


⑫ 4pcs

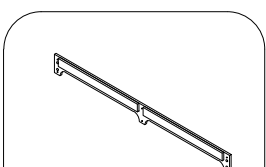


⑬ 1pc

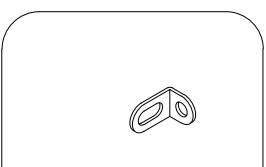


⑭ 2pcs

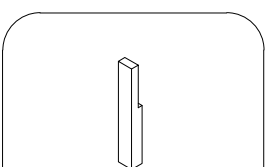


⑮ 3pcs

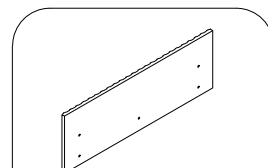


⑯ 2pcs

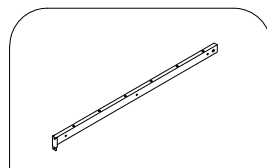


⑰ 4pcs

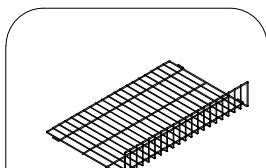


⑱ 2pcs

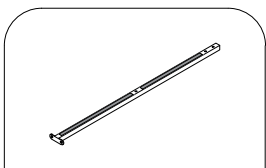


⑲ 1pc

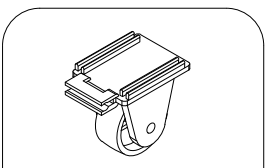


⑳ 8pcs

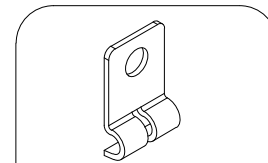


㉑ 2pcs

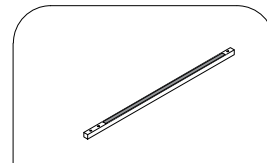


㉒ 1pc

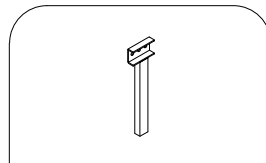


㉓ 2pcs

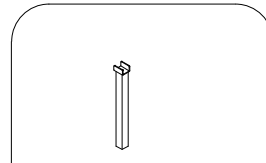


㉔ 2pcs

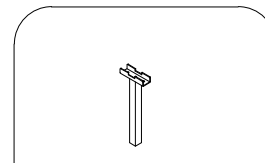


㉕ 1pc

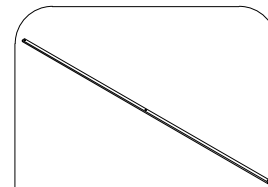


㉖ 3pcs

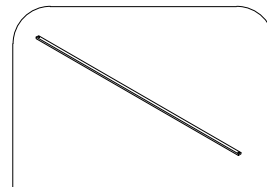


㉗ 9pcs

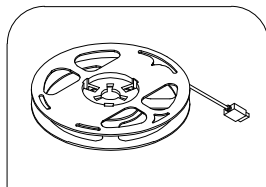


㉘ 1pc

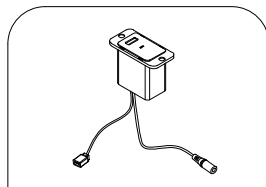


㉙ 1pc

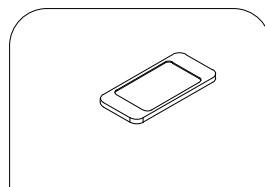


㉚ 1pc

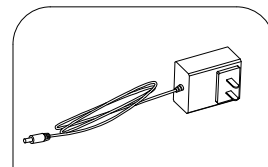

㉛ 1pc

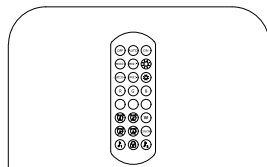

㉜ 1pc



M5x40mm

Ⓐ 25pcs



M6x28mm

Ⓑ 32pcs



M3x15

Ⓒ 2pcs




M6x10mm

Ⓓ 14pcs



M8x35mm

Ⓔ 7pcs



M8x60mm

Ⓕ 5pcs



M6x18mm

Ⓖ 4pcs



M8x15mm

Ⓗ 2pcs




M6x55mm

Ⓙ 24pcs



M6

Ⓚ 28pcs



S5

1pc



S4

1pc



S3

1pc




PH2

1pc


Step1

A		M5x40mm	4pcs
---	---	---------	------

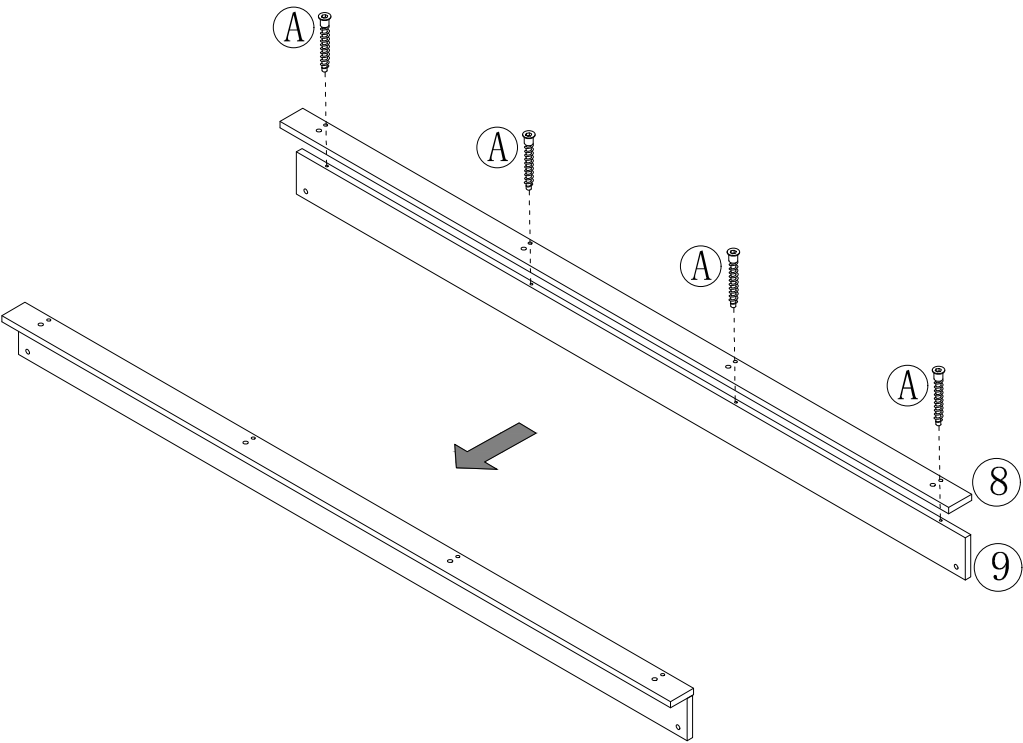


Step2

B		M6x28mm	4pcs
---	---	---------	------

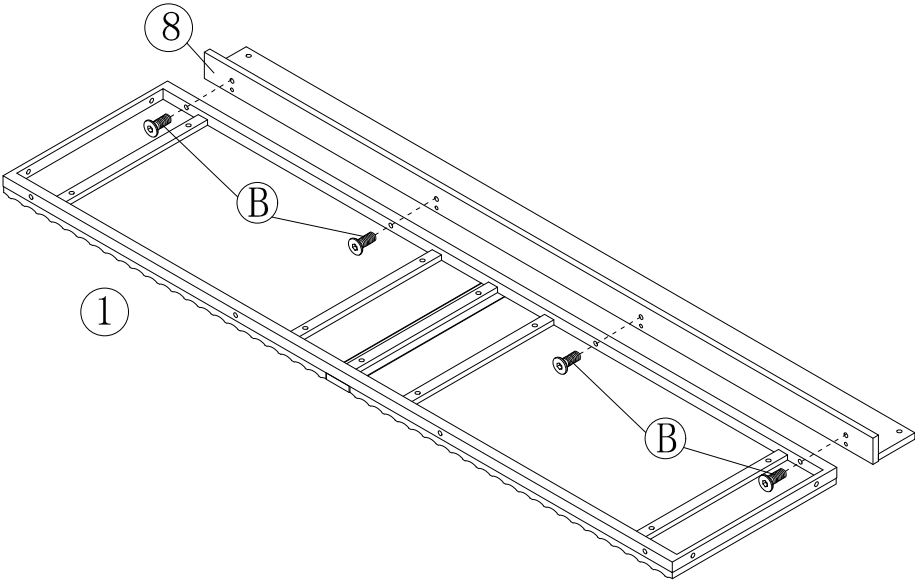


Step3

A




M5x40mm

4pcs

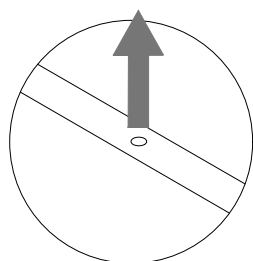

NOTE:

Make sure the side with hole of part (3)&(10) are facing upwards as shown.

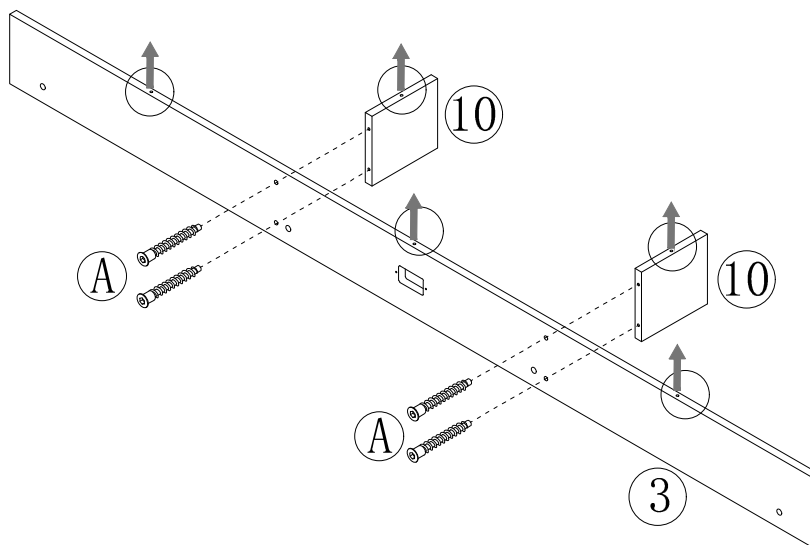


Step4

B




M6x28mm

4pcs

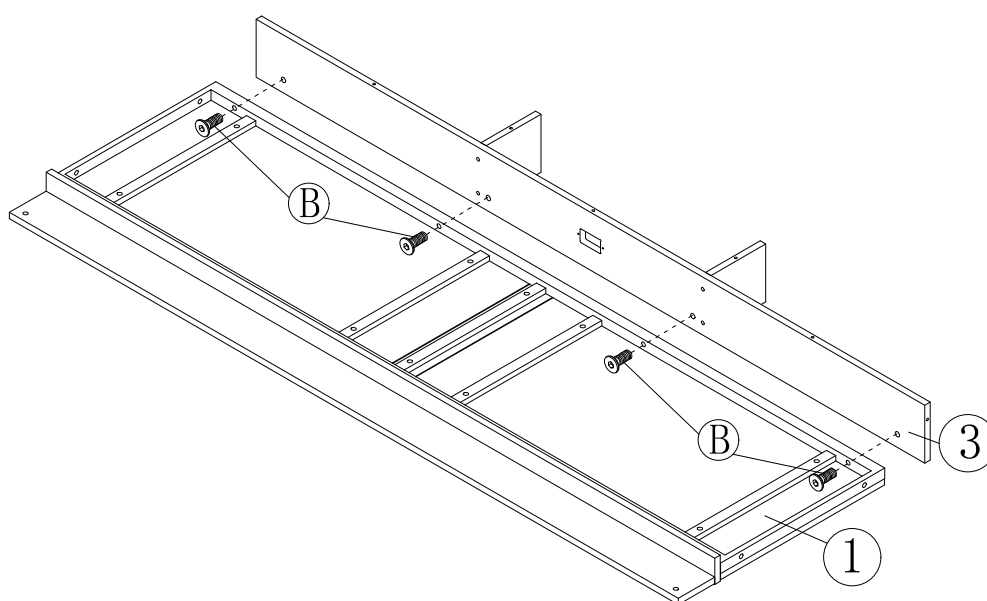



Step5

D		M6x28mm	4pcs
---	---	---------	------

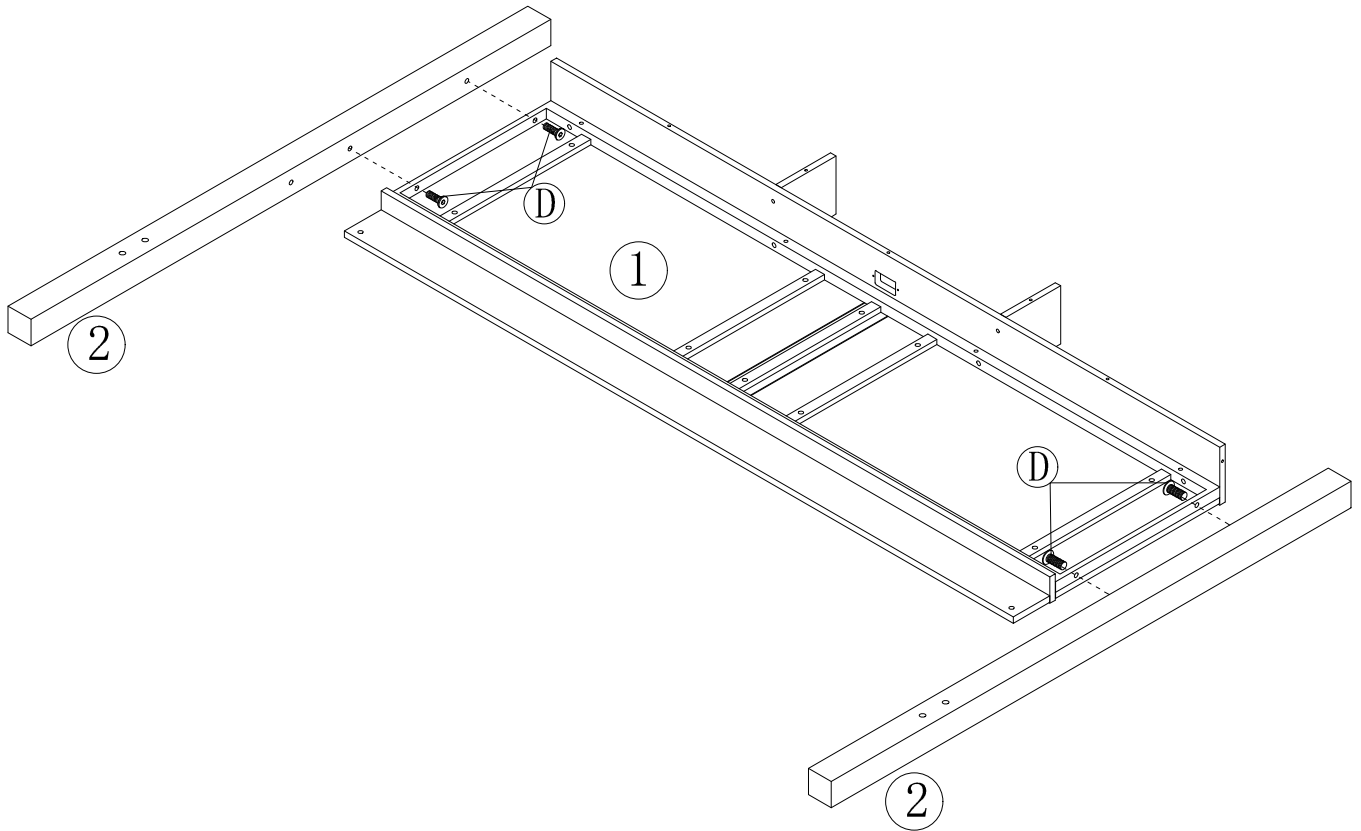

Step6

A		M5x40mm	2pcs
D		M6x10mm	4pcs

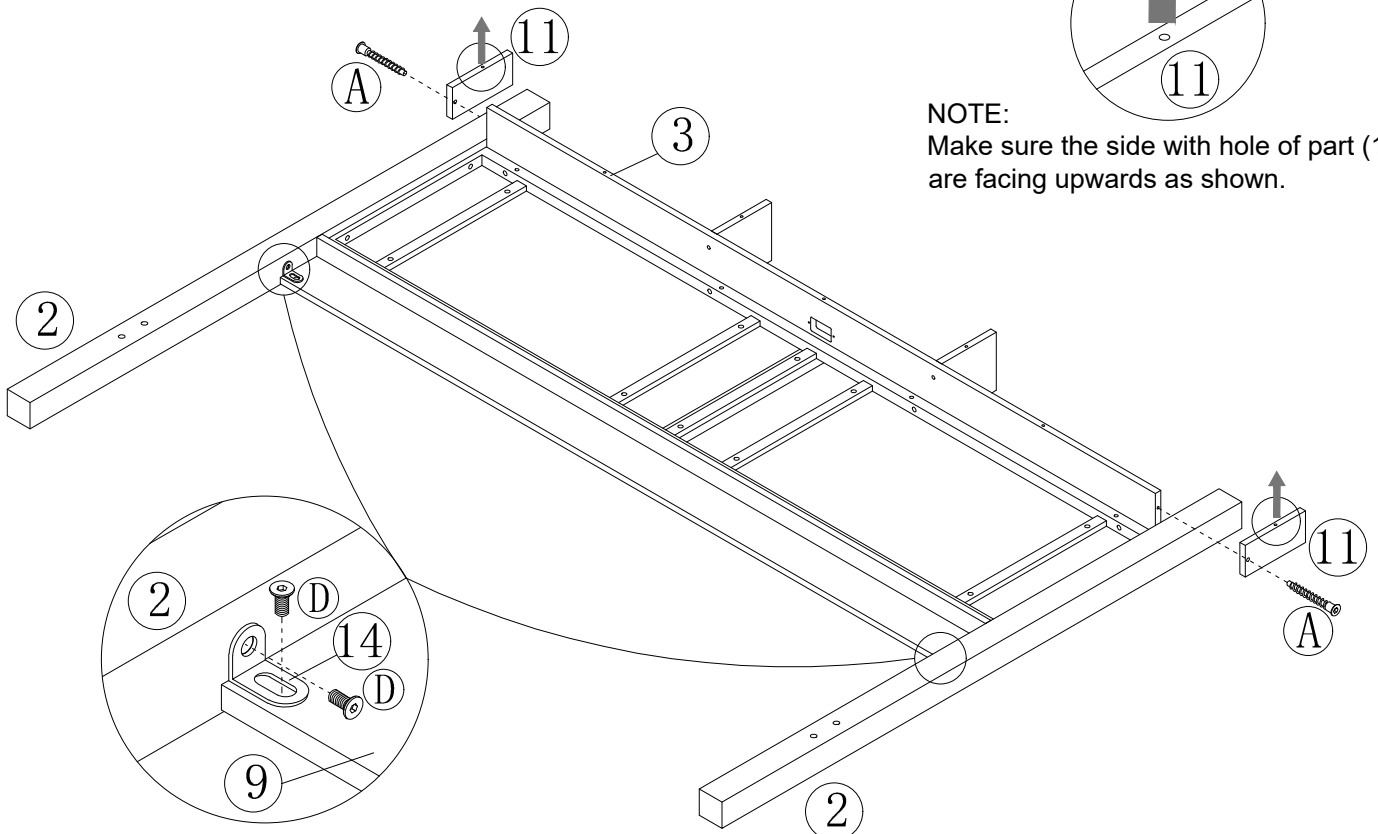


Step7

A






M5x40mm


7pcs

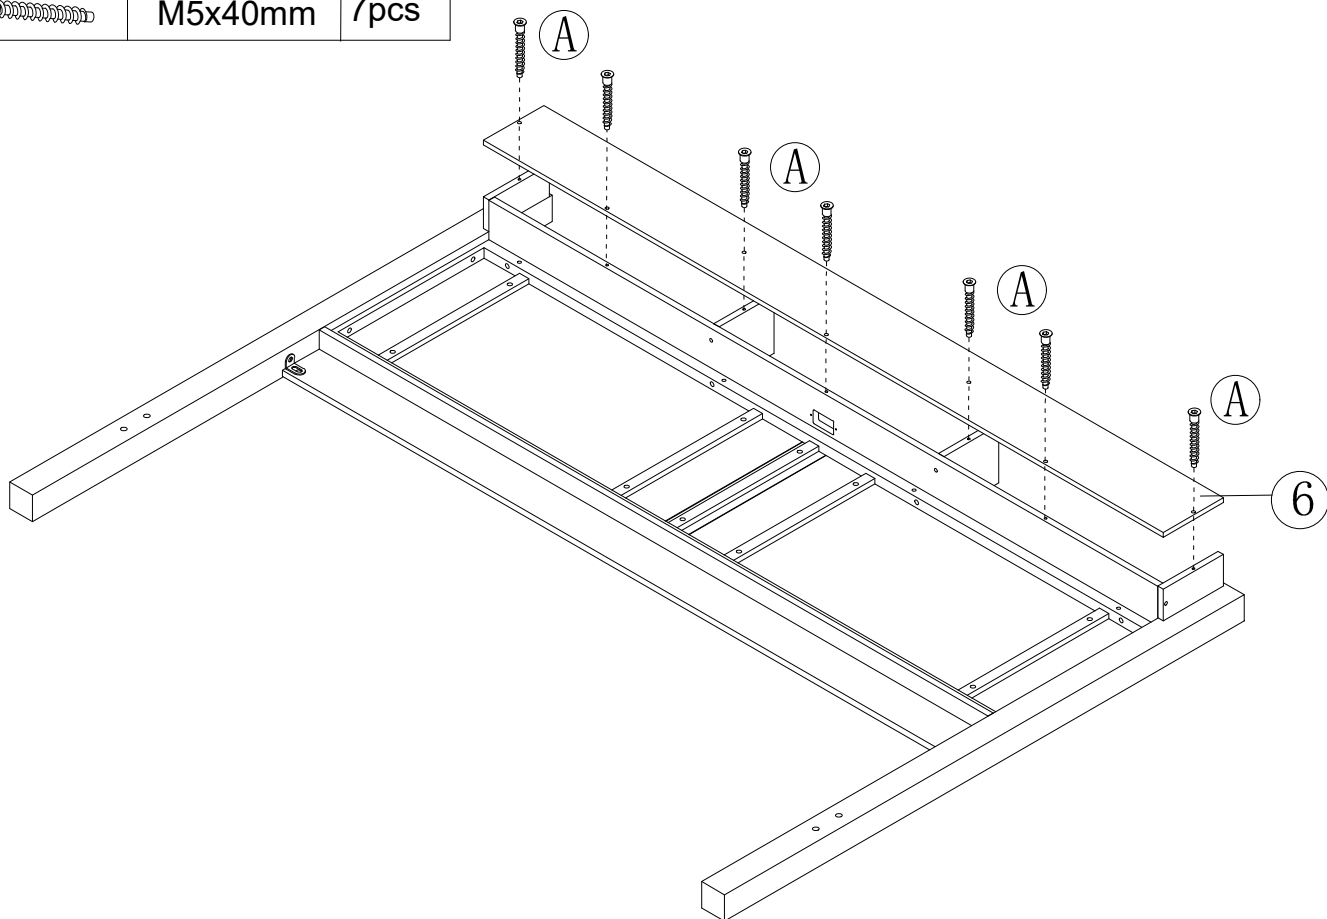


Step8

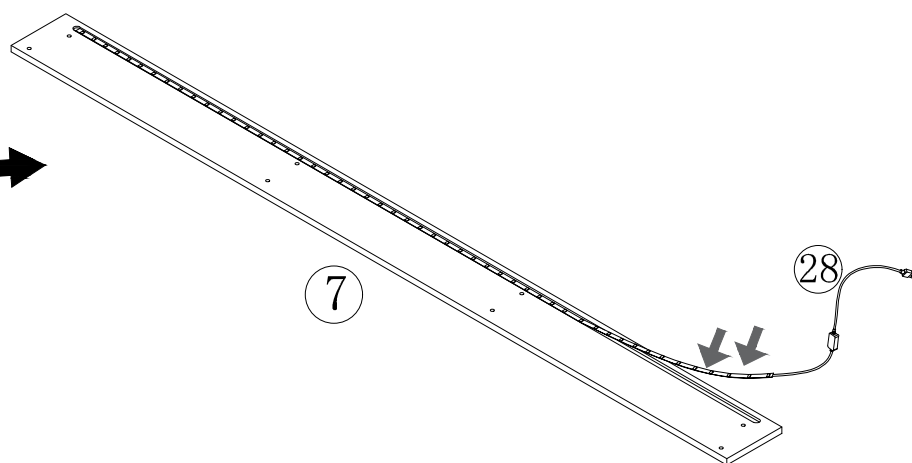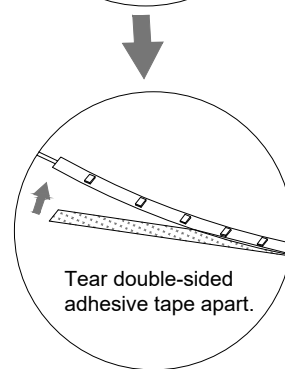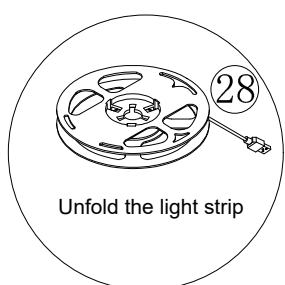


Step9

A		M5x40mm	8pcs
---	---	---------	------

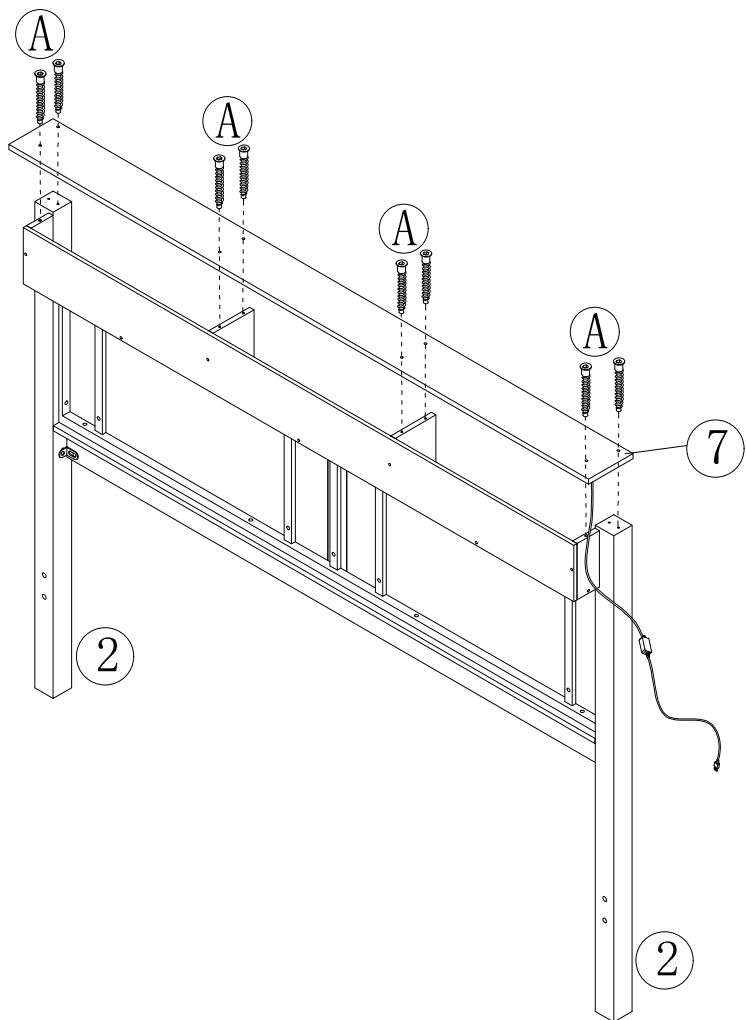

Step10


G		M6x18mm	4pcs
K		M6	4pcs

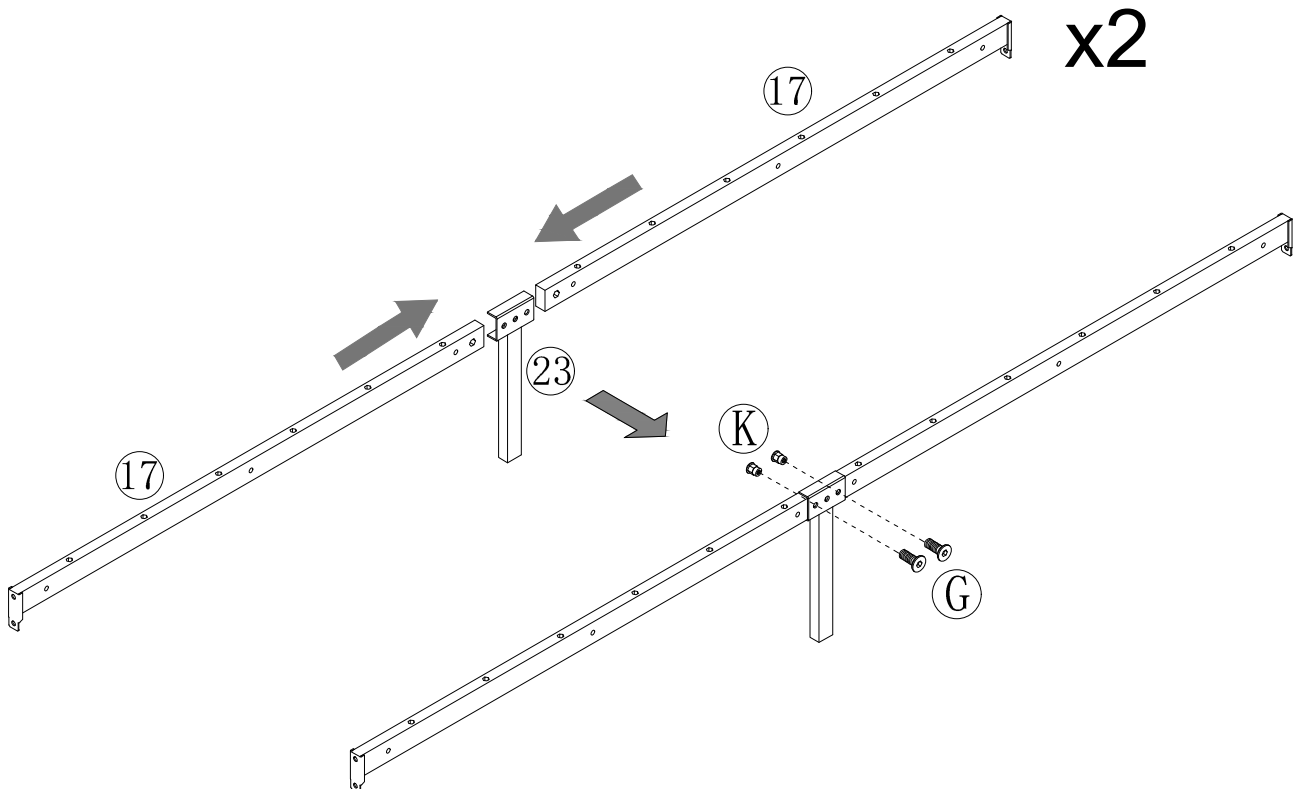

Step11

E		M8x35mm	3pcs
---	---	---------	------


Please note that the side with EVA is upward during installation.

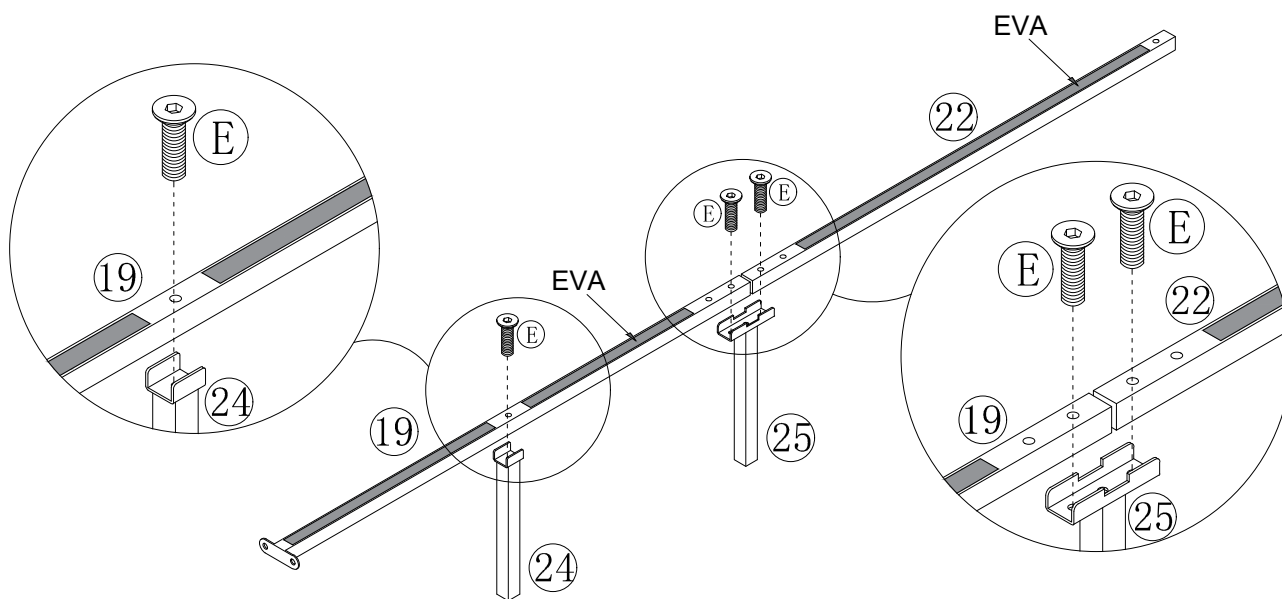

Step12

F		M8x60mm	4pcs
---	---	---------	------



NOTICE:
Please ensure that the specific side of part (23) faces inside.

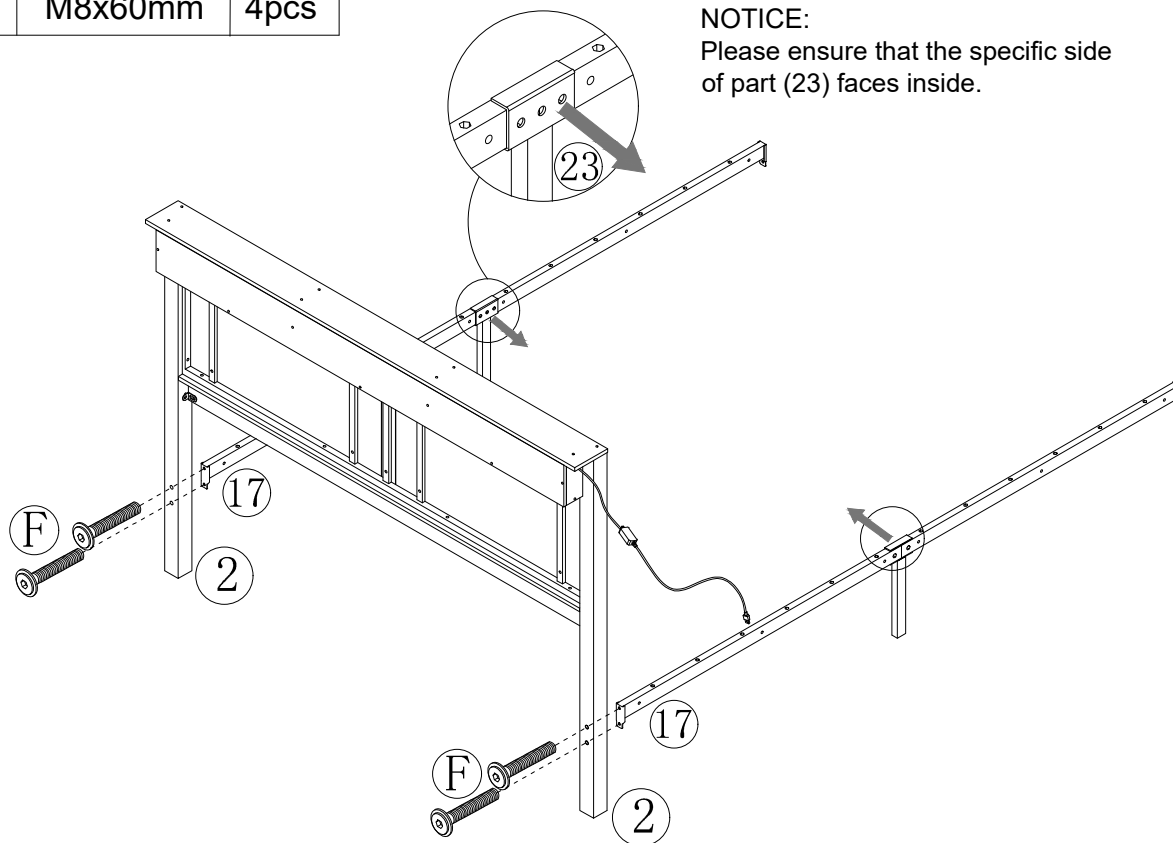

Step13


E		M8x35mm	4pcs
---	---	---------	------

NOTICE:
Please ensure that the specific side
of part (13) faces outward.

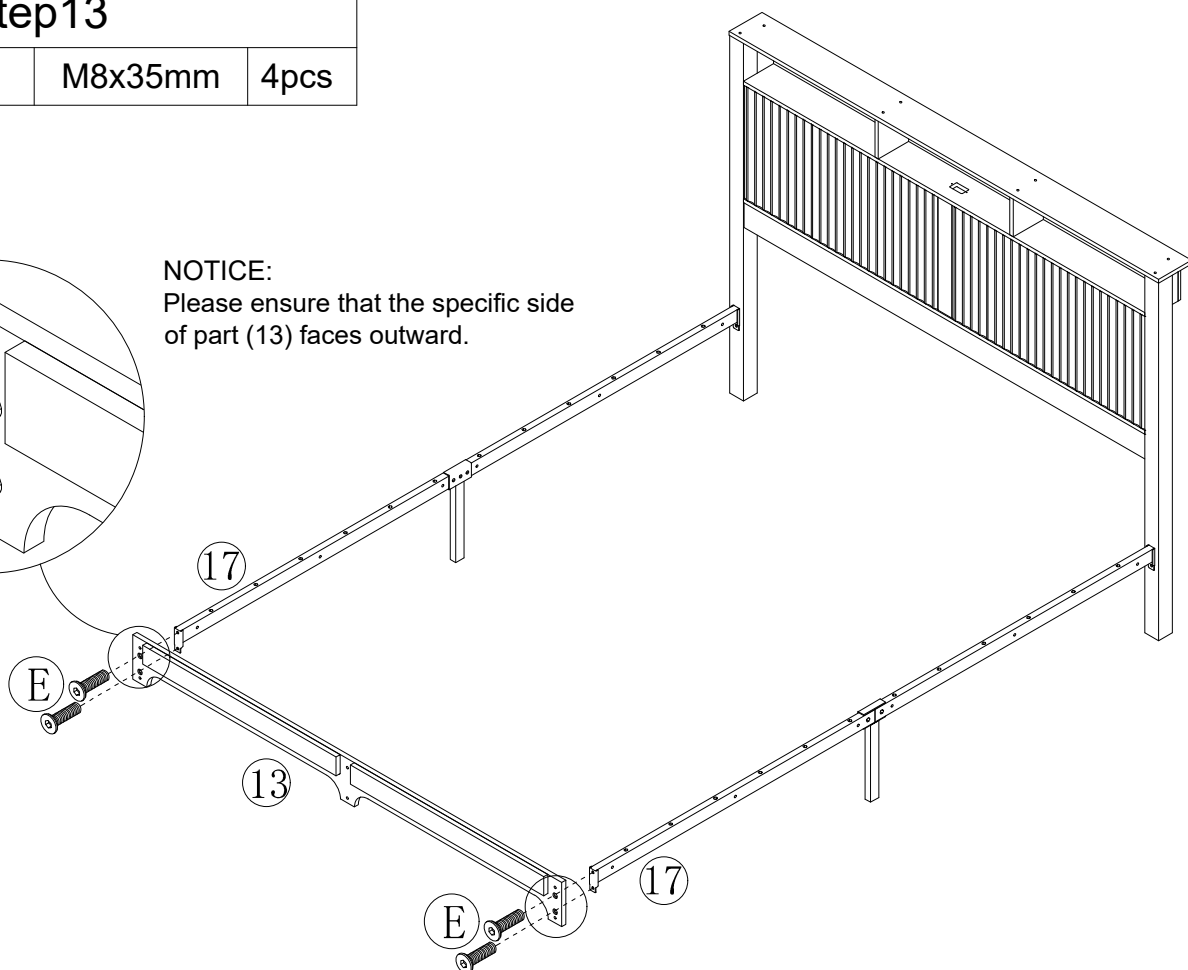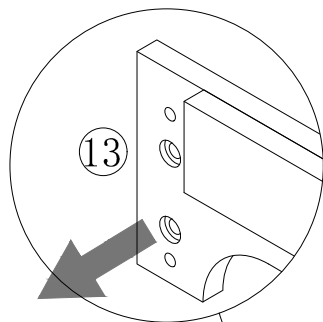

Step14

B		M6x28mm	6pcs
---	---	---------	------

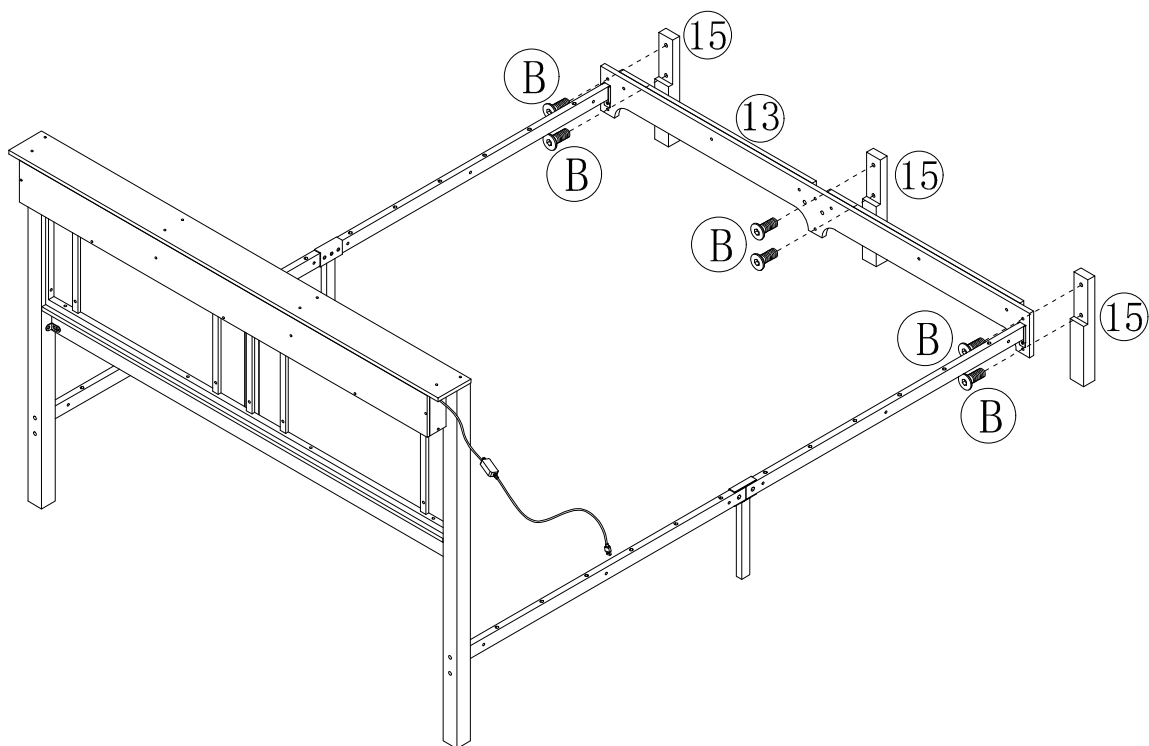


Step15

H



M8x15mm

2pcs

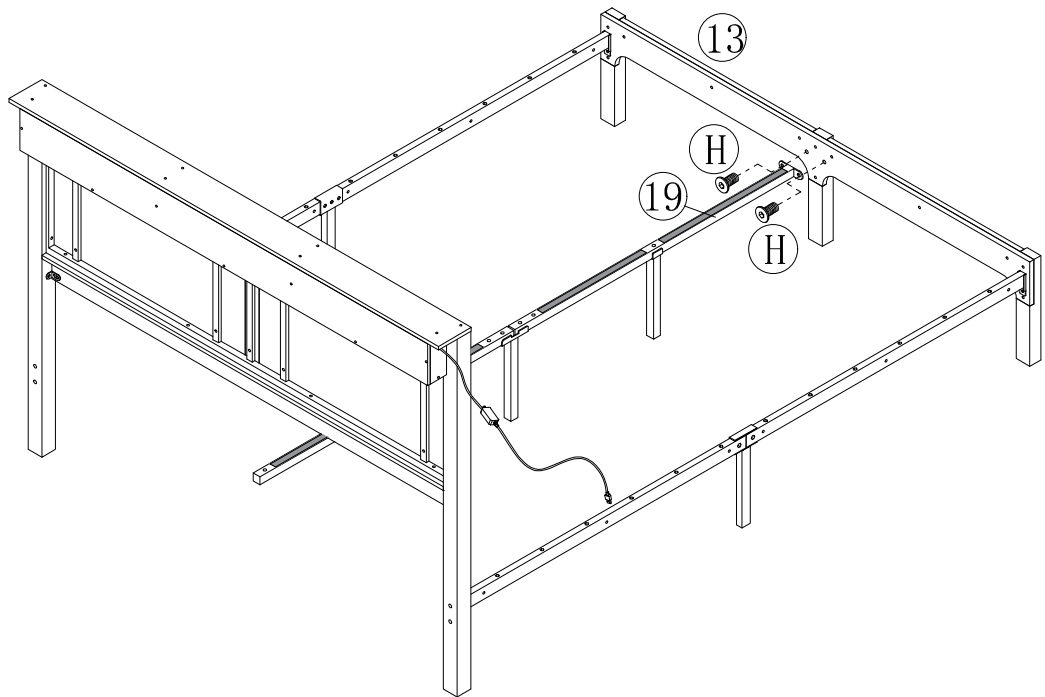


Step16

B




M6x28mm

12pcs

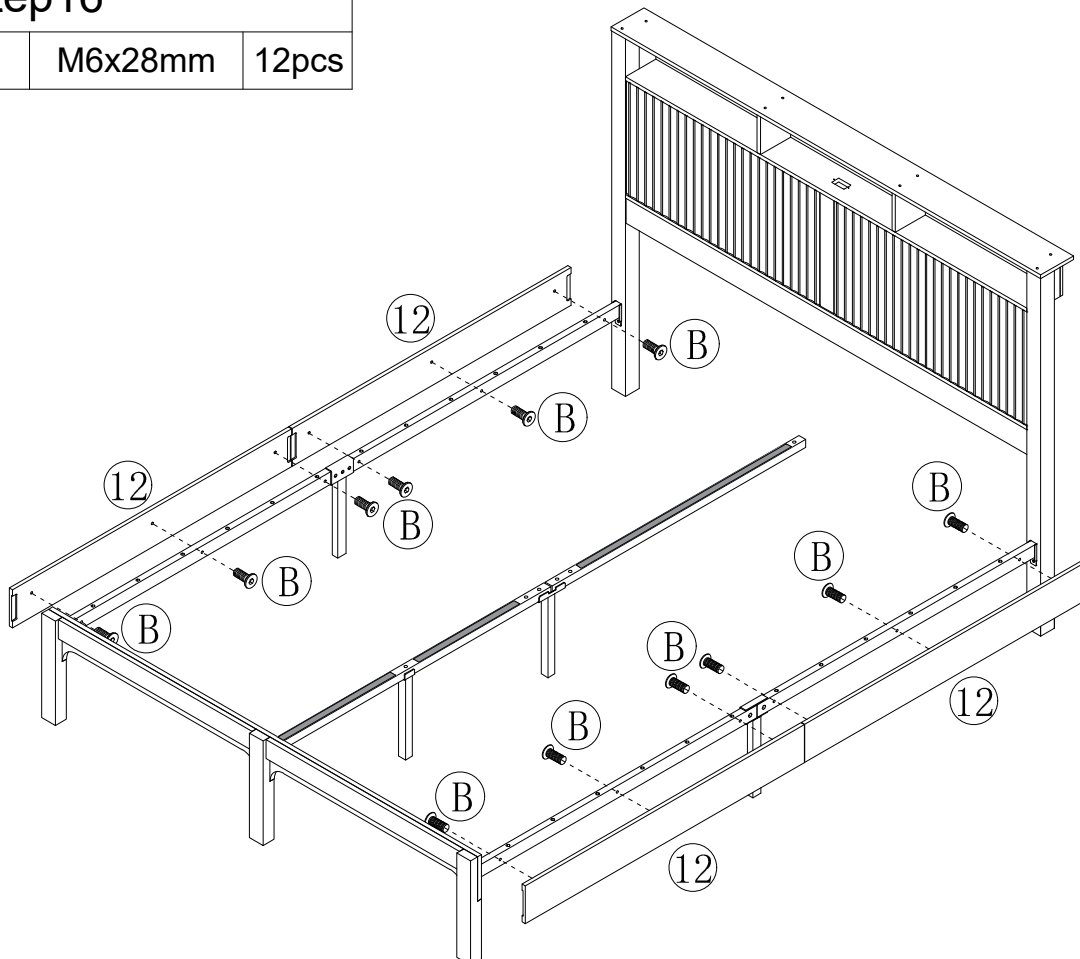


Step17

B		M6x28mm	2pcs
F		M8x60mm	1pc
J		M6x55mm	6pcs
K		M6	6pcs





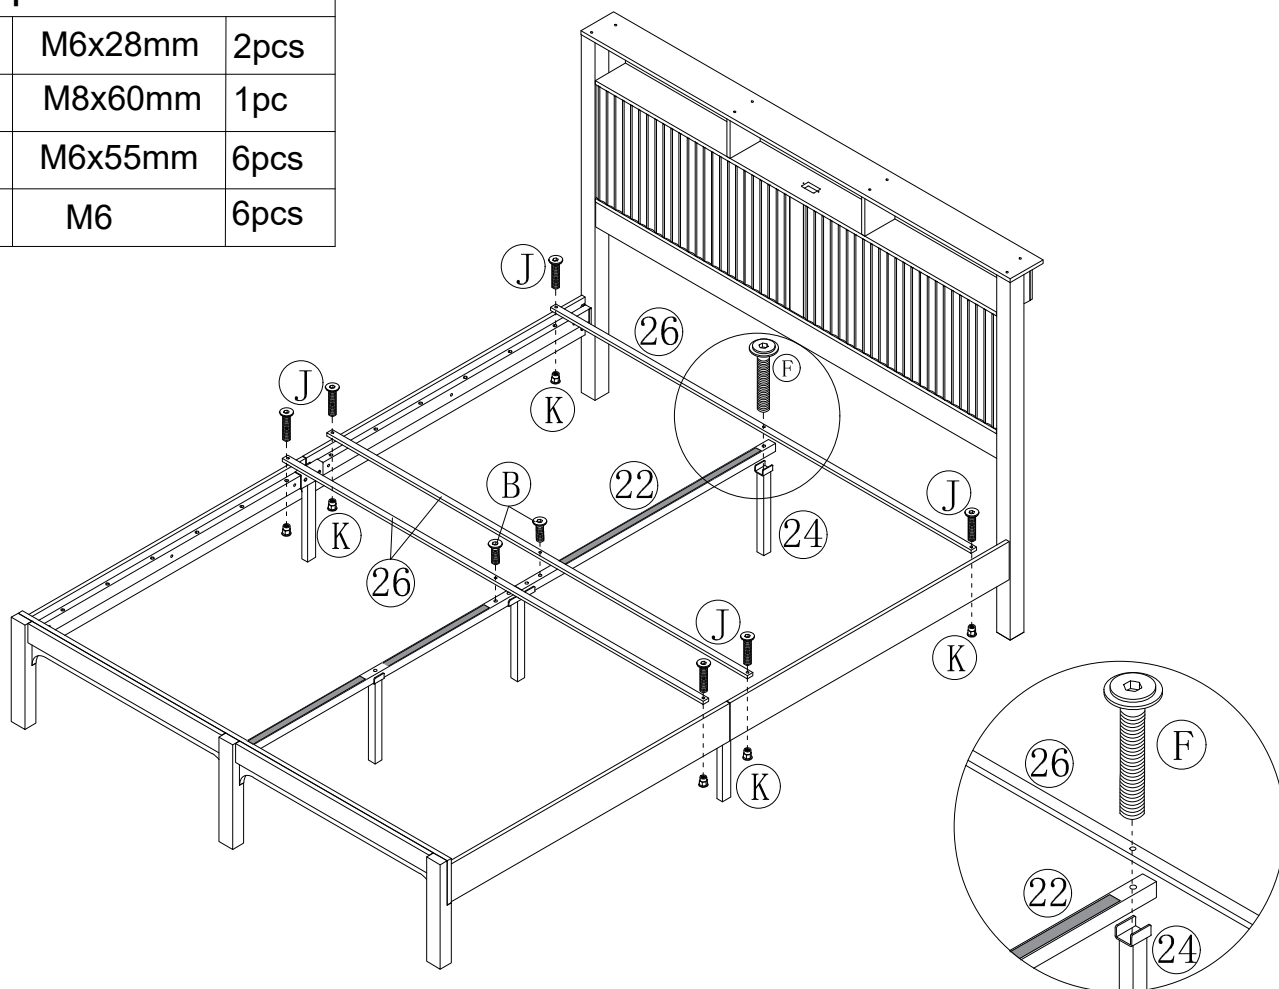


Step18



J		M6x55mm	18pcs
K		M6	18pcs

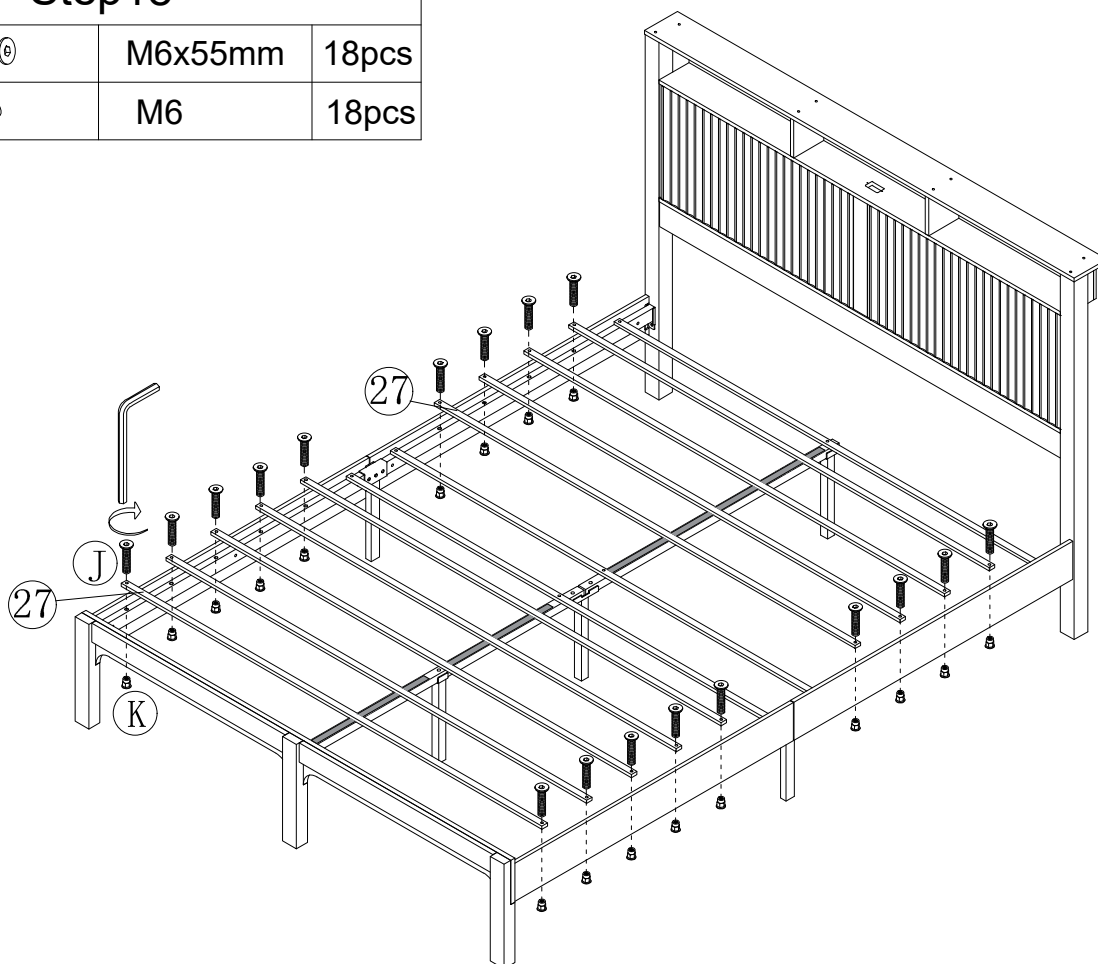

Step19

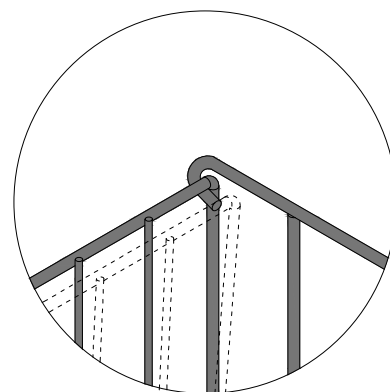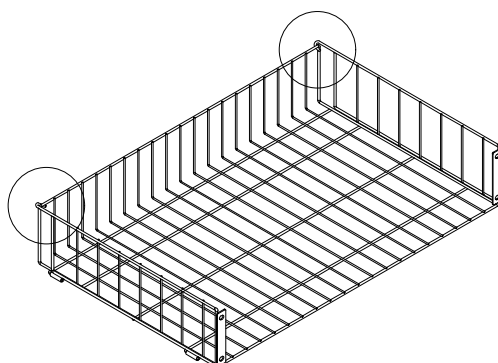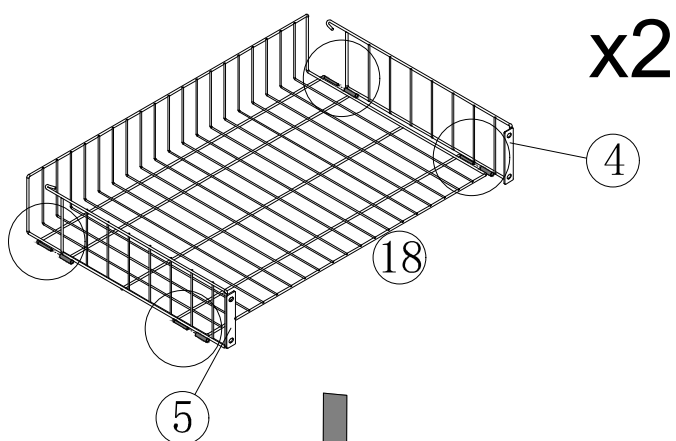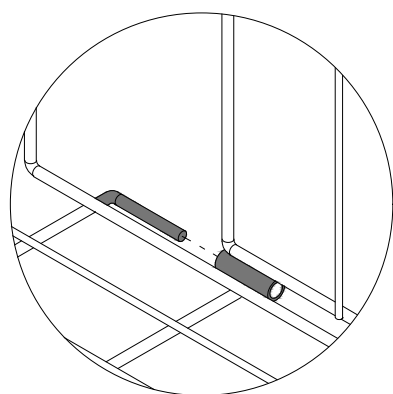

Step20

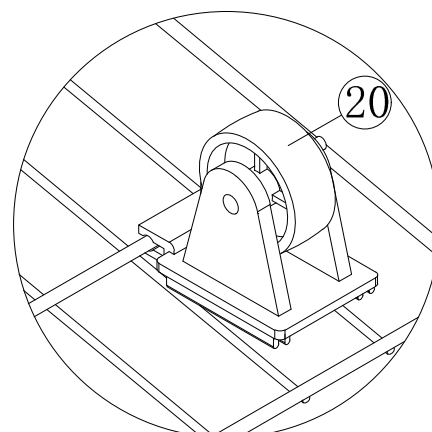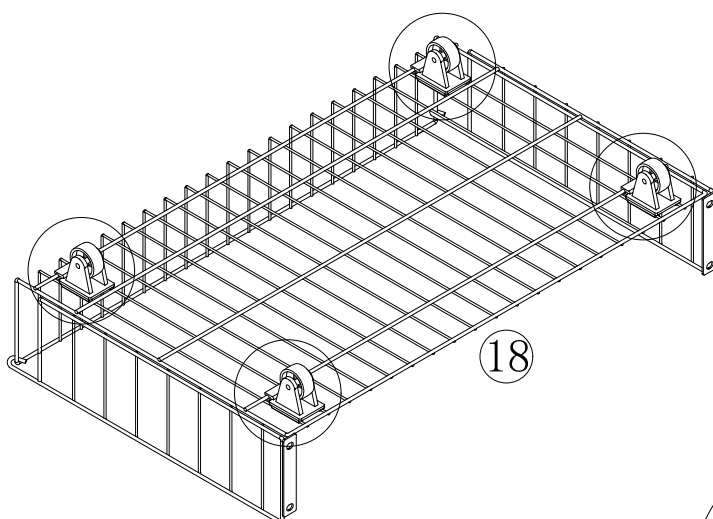



Step21

D



M6x10mm 8pcs

x2

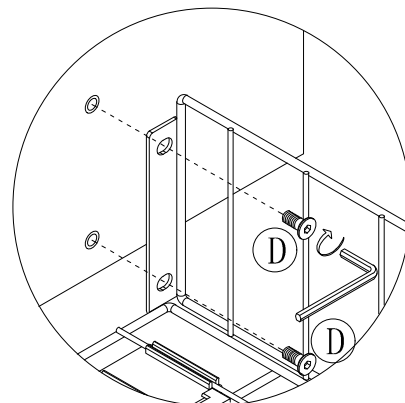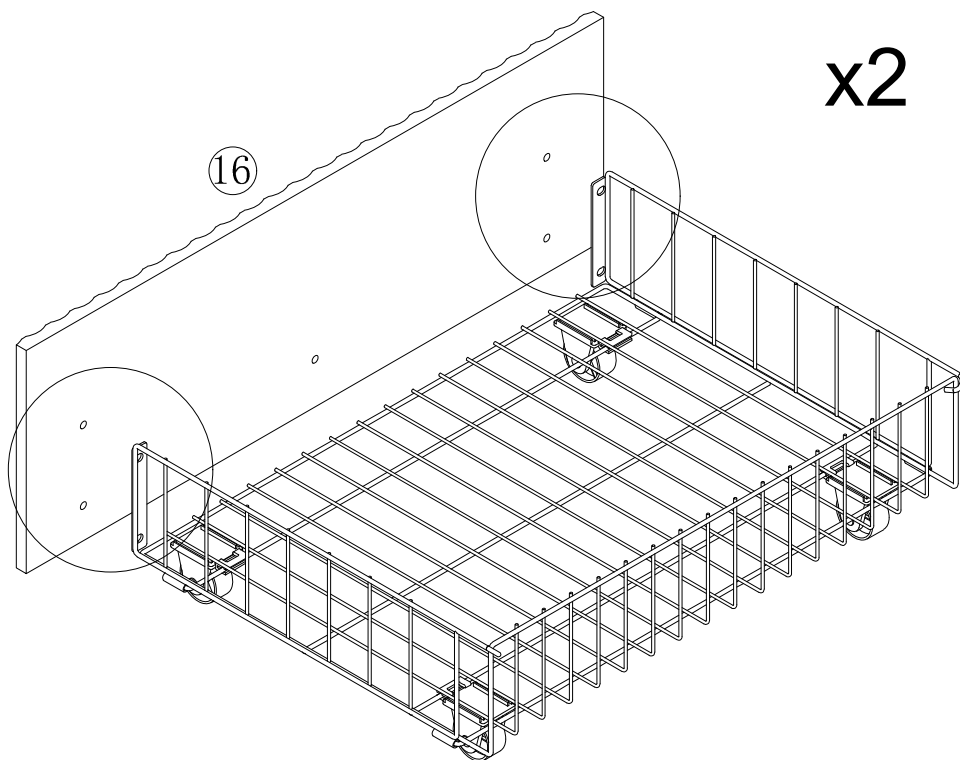



Step22

D




M6x10mm 2pcs

x2

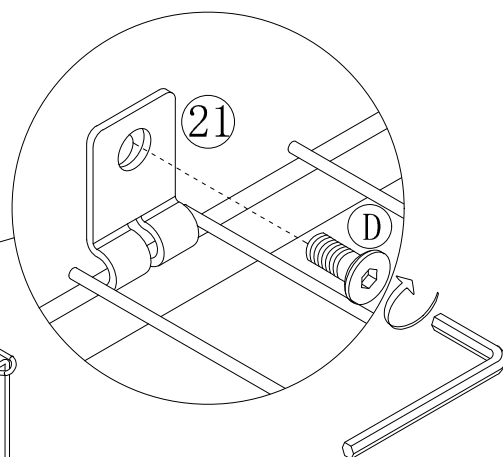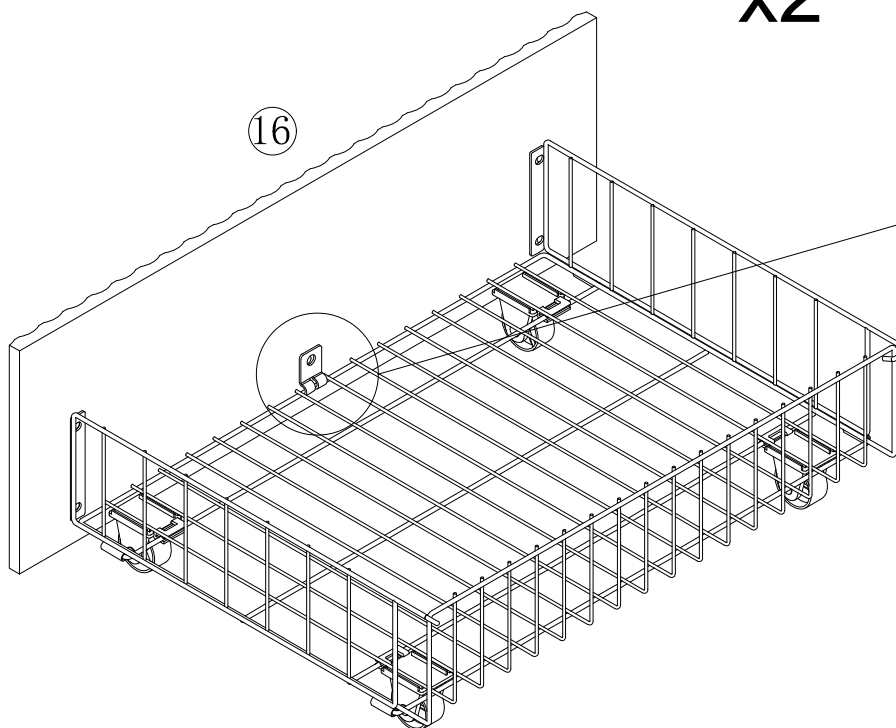

Step23

C		M3x15mm	2pcs
---	---	---------	------

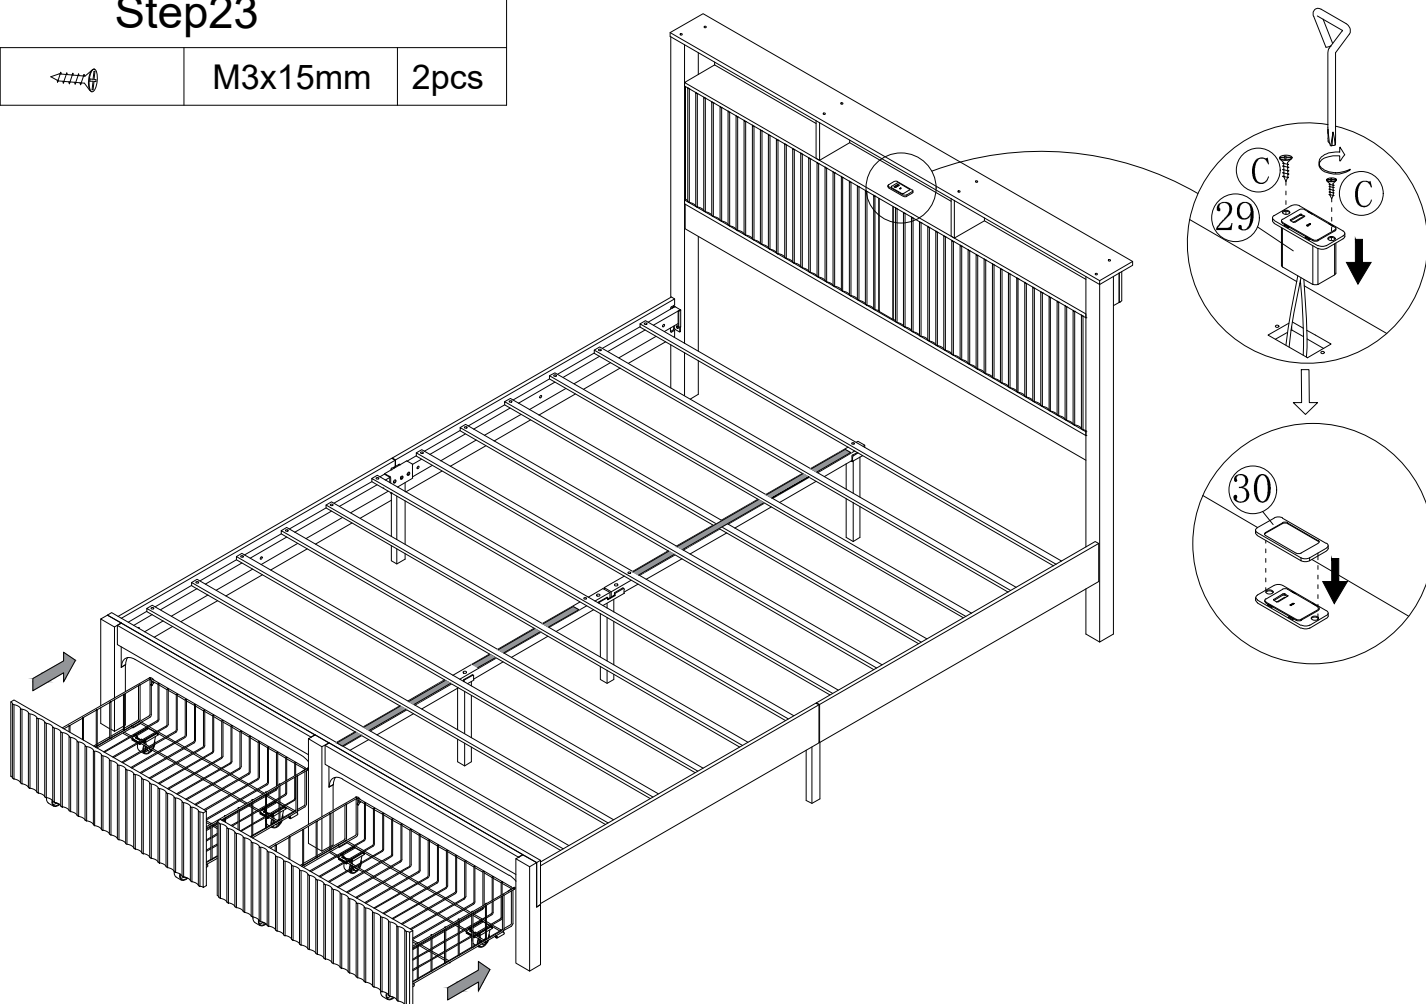

Step24

