


# INSTALLATION MANUAL

## Single Hanging Storage Unit

### Module 04

(LY001)

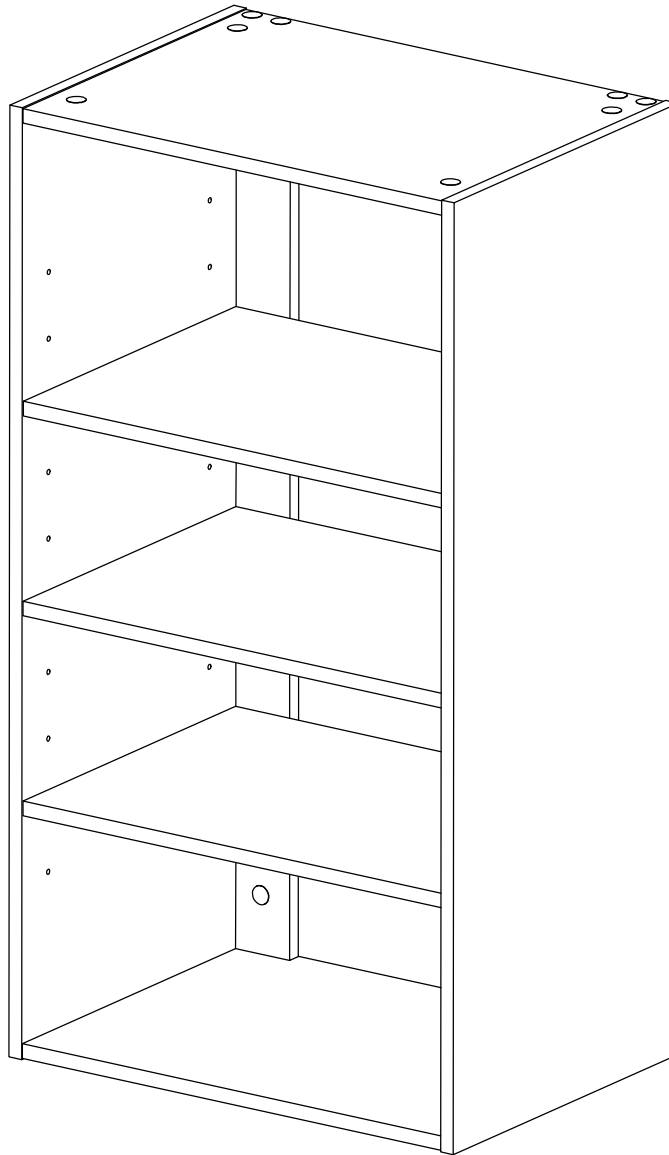

Note: If you encounter any problems during installation, or if any parts are missing or need replacement, please contact us and provide your ORDER ID. We will assist you as soon as possible.

#### **Customer Support**

**Phone: +1(986)-888-1726**


**Email: [help@unified-support.com](mailto:help@unified-support.com)**

**Hours: Mon-Fri, 9:00 AM - 6:00 PM ET**

# 1.Closet Kit Layout

Closet kits can be installed in several layouts. Plan your layout before starting installation.


## Top View

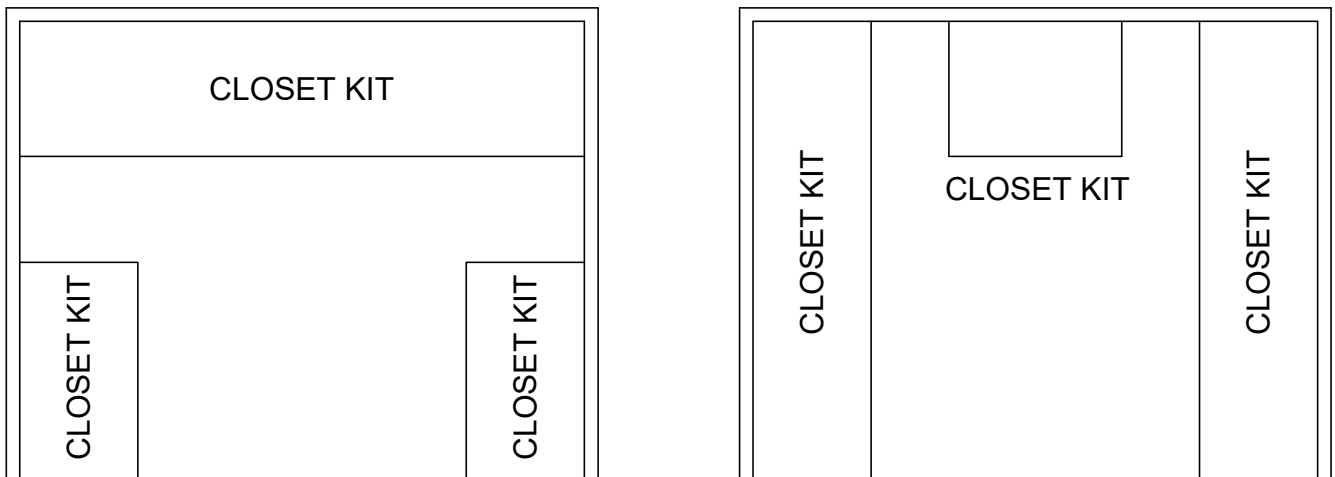

## 2.Corners

In room comers, it is important for one closet kit to go all the way up to the adjacent wall. The next kit placed on that adjacent wall should be installed a minimum of 14" from adjacent product to ensure access.


## Top View

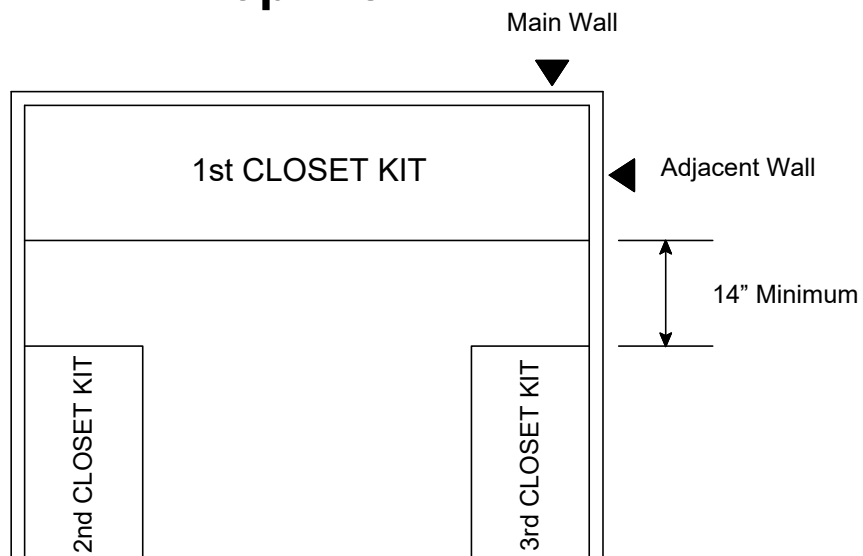


### 3.Do's and Don'ts

Closet kits can be installed in several layouts. Plan your layout before starting installation.


#### Top View

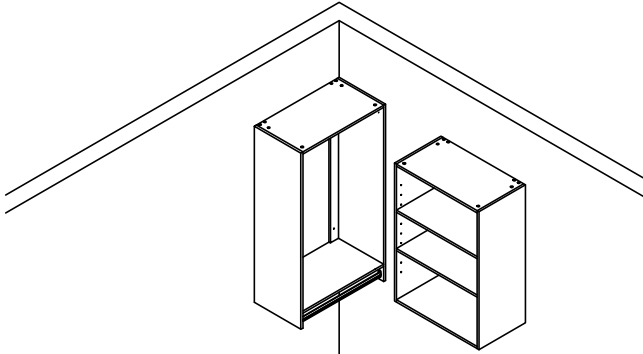

✓ Do place hanging sections on wall adjacent to shelf in order to ensure easy access.

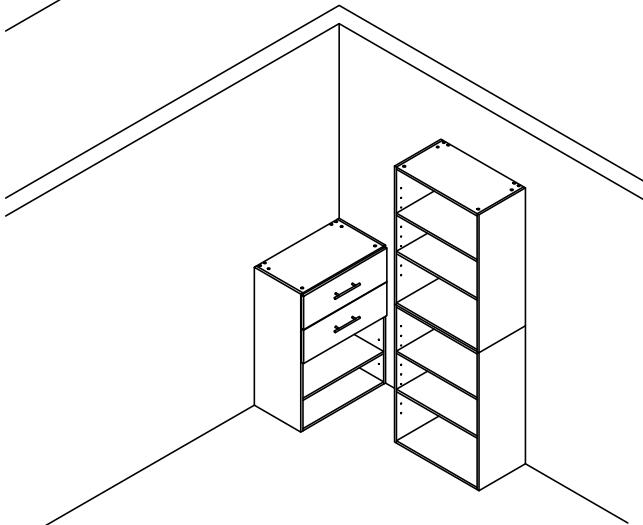

! Don't put drawers in corner or you will not be able to fully open your drawer.

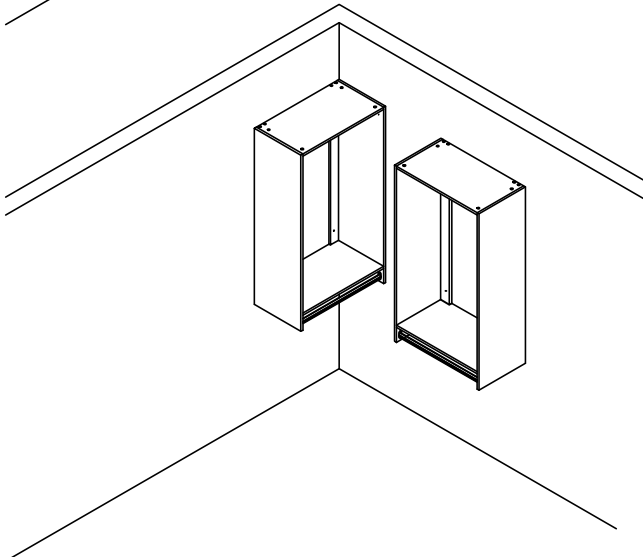


! Don't put a hanging section into a hanging section or your clothes will be hard to reach.


1. Decide where to locate the top of the vertical panel. Mark a hang line for the track 4.5" down from the top of the vertical panel.

## TIP


Top Unit: We recommend a height of 84" for the top of the vertical panel.  
Base Unit: We recommend a height of 48" for the top of the vertical panel.

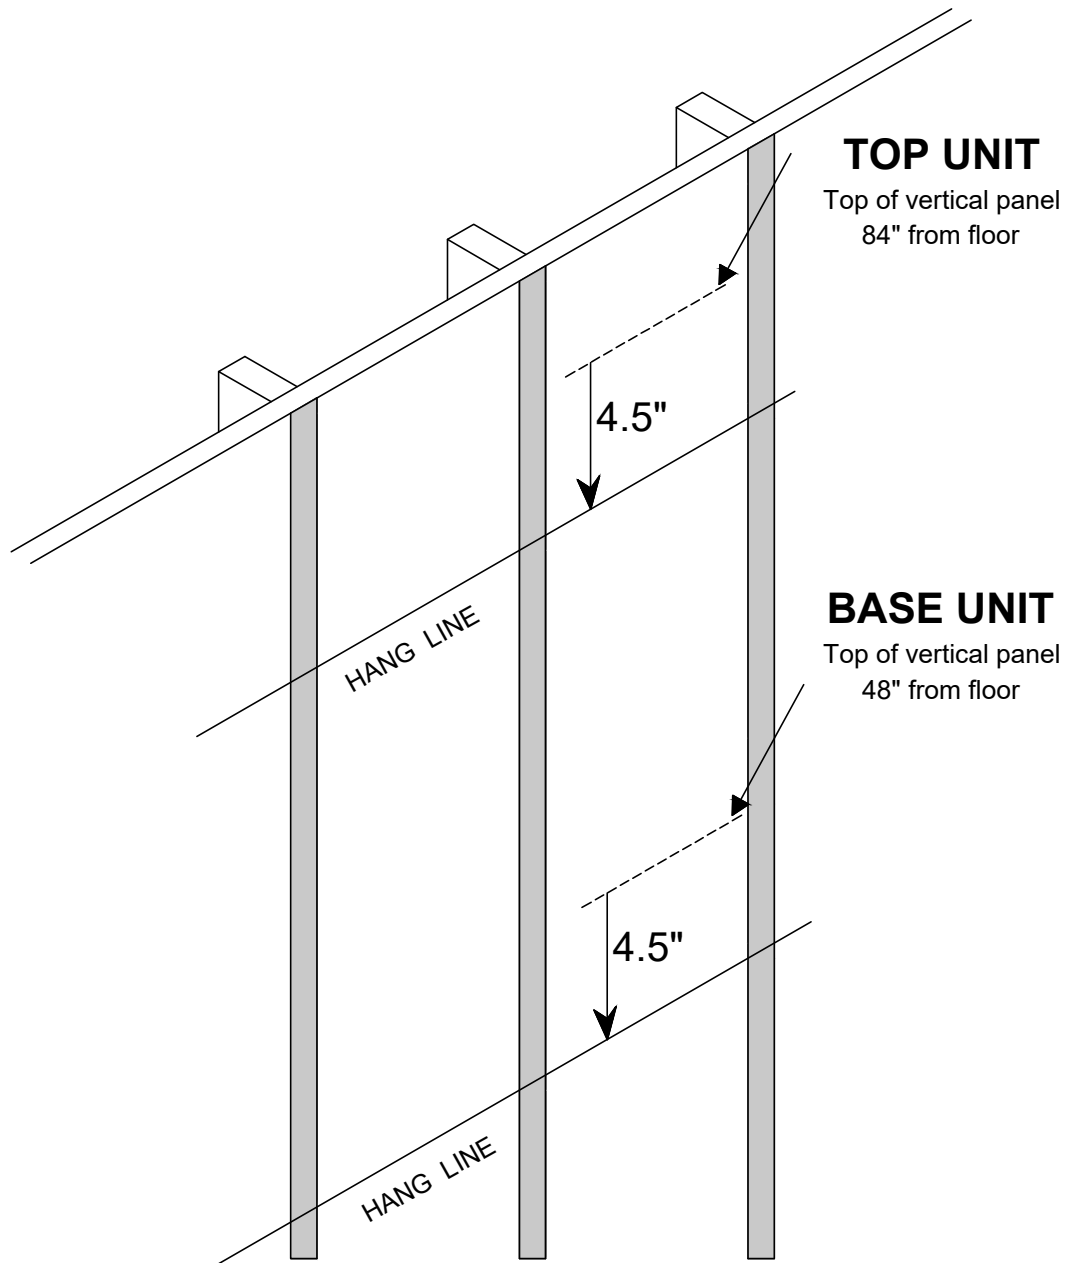

2. Mark locations of studs. On the hang line.  
Using a stud finder, locate studs to which the unit will be secured. Mark stud locations with a pencil

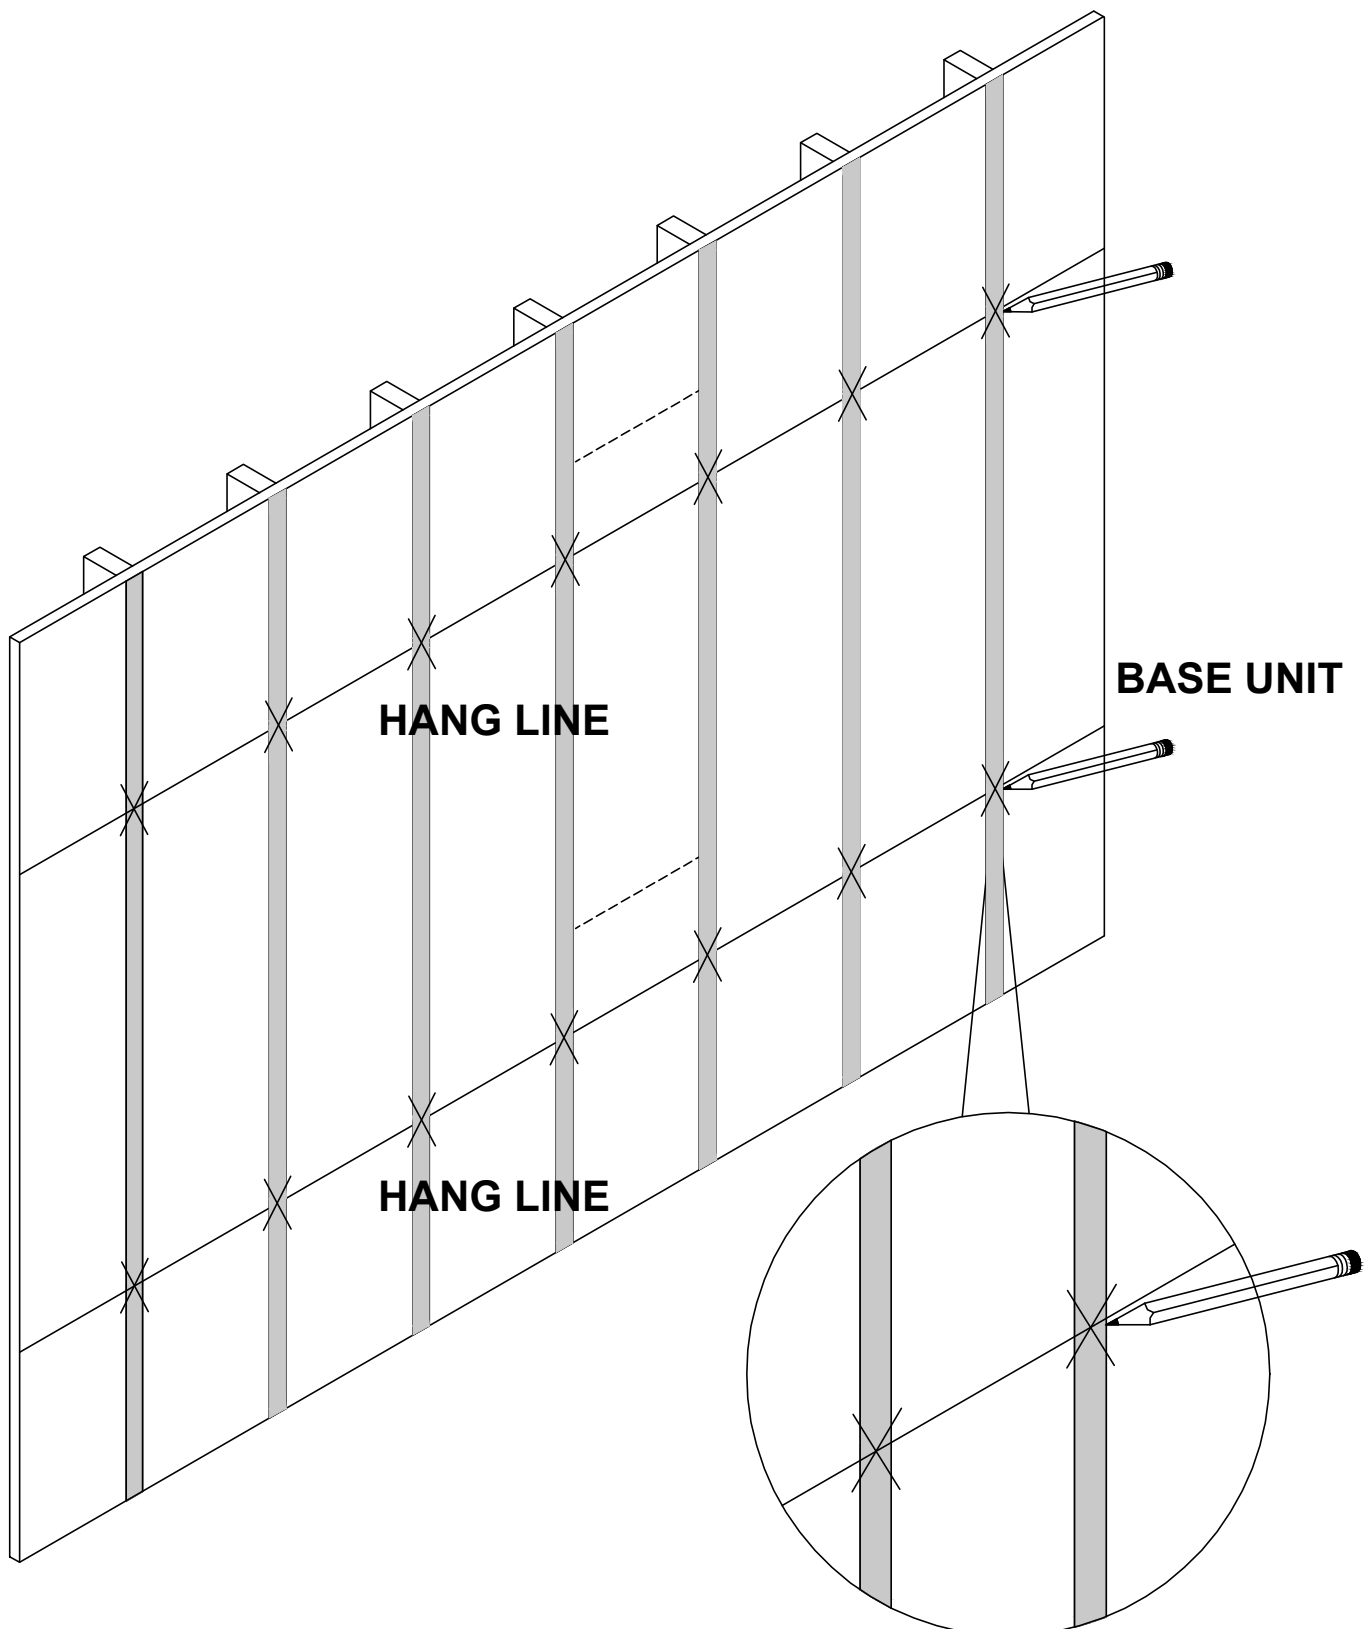


# Parts List

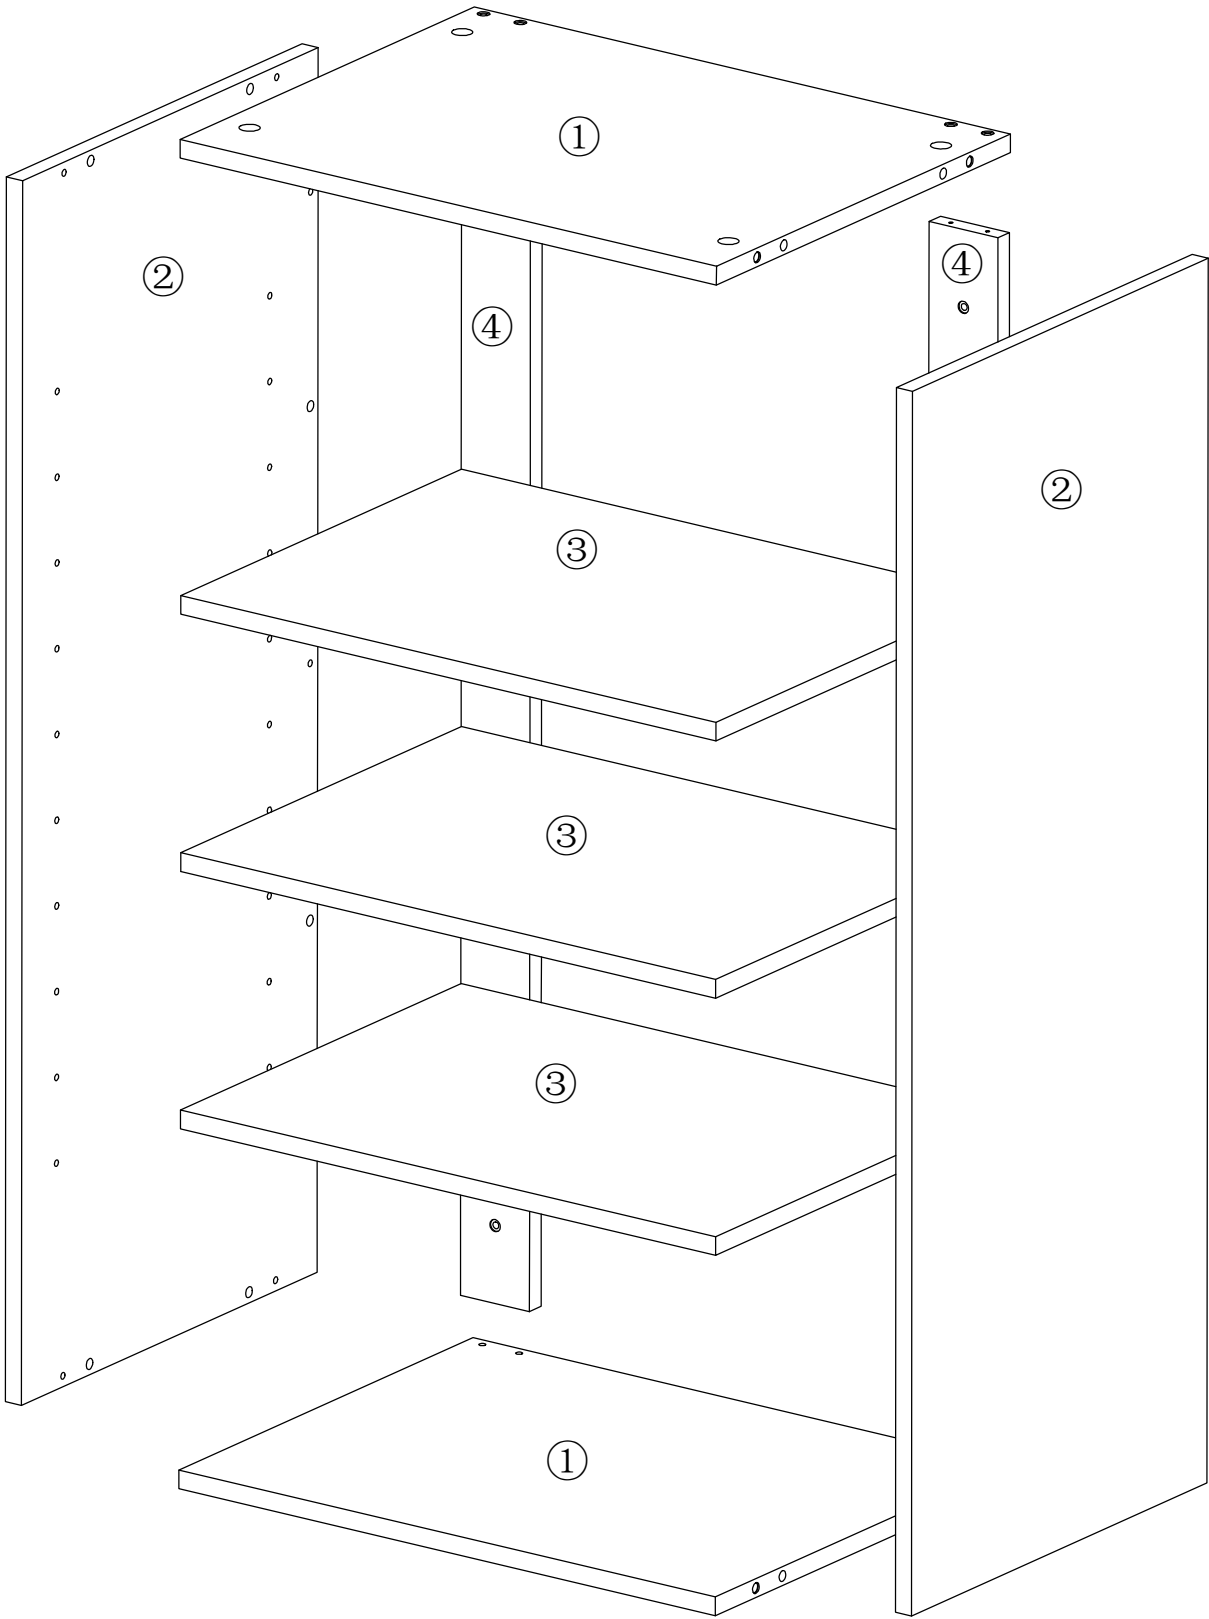


# Component Panels & Part List


Please check that all panels listed below are included.

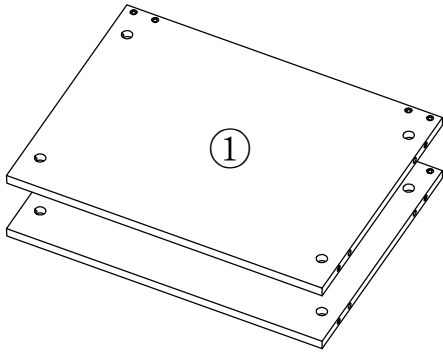


Qty:2pcs

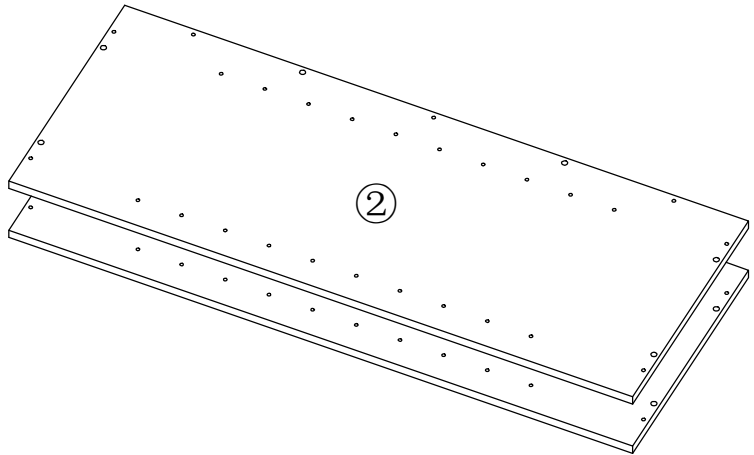

Qty:2pcs

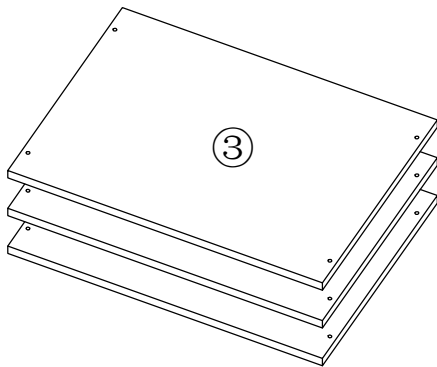

Qty:3pcs

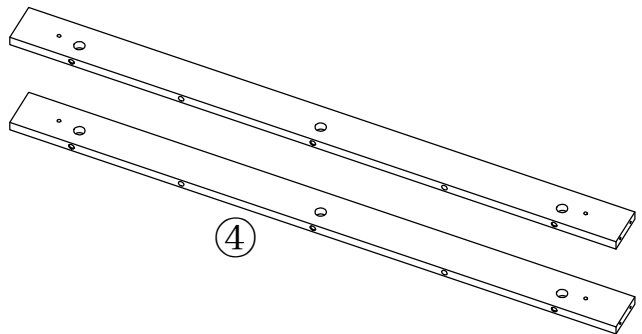


Qty:2pcs


# Hardware Usage Guide

## How to Use Cam Locks and Cam Bolts


1. Note: Cam bolts and cam locks are used together to secure the panels.

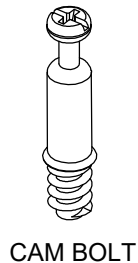

Turn the CAM BOLT until the shoulder is against the surface of the part.

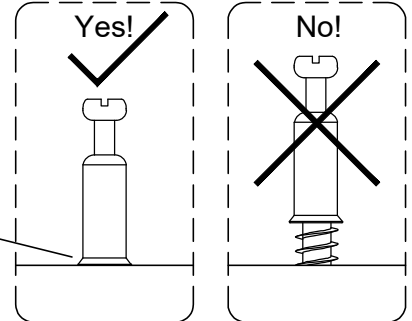


2.

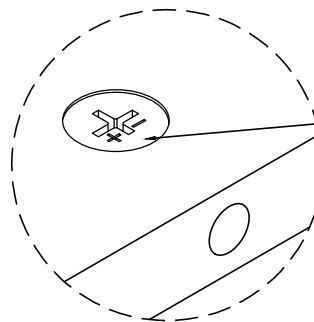


Push a CAM LOCK into the part. The arrow in the CAM LOCK must point toward the hole in the edge of the board.


3. Insert the cam bolt into the cam lock, then tighten the cam lock to secure the connection.

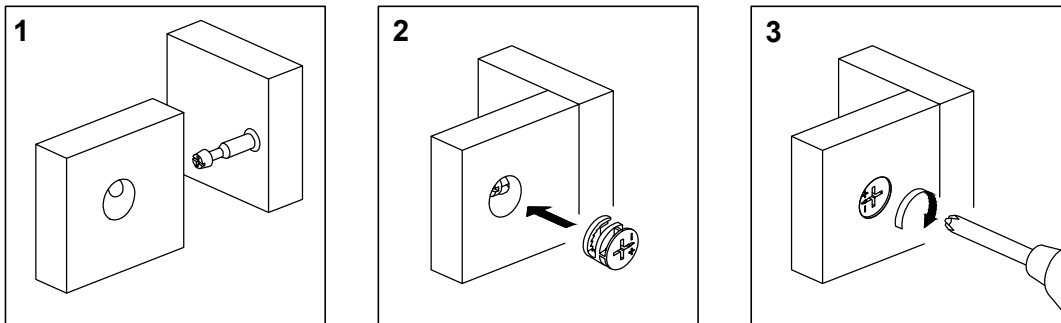


4. Use the stickers to cover all visible cam-lock and bolt holes.

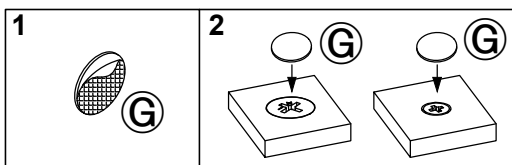


## TOOLS REQUIRED




TAPE MEASURE




STUD FINDER

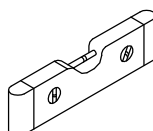

LEVEL



PENCIL

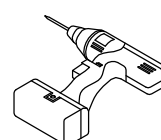



POWER DRILL





PHILIPS  
SCREWDRIVER


# Hardware List

- Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.
- Carefully and strictly follow these assembly&installation instructions to ensure a completed product as designed.
- Do not tighten all the screws until each part is properly assembled.



| Item No. | Reference Image                                                                                                | Qty. |
|----------|----------------------------------------------------------------------------------------------------------------|------|
| Ⓐ        | <br>Cam lock (Ø15 x 12 mm)    | x14  |
| Ⓑ        | <br>Cam bolt (Ø6.5 x 34 mm)   | x14  |
| Ⓒ        | <br>Wood dowel (Ø8 x 40 mm) | x12  |
| Ⓓ        | <br>Shelf support           | x12  |

| Item No. | Reference Image                                                                                                    | Qty. |
|----------|--------------------------------------------------------------------------------------------------------------------|------|
| Ⓔ        | <br>Plastic anchor (Ø4 x 40 mm) | x4   |
| Ⓕ        | <br>With screw (Ø4 x 50 mm)     | x12  |
| Ⓖ        | <br>Sticker                   | x20  |
|          |                                                                                                                    |      |


Step 1

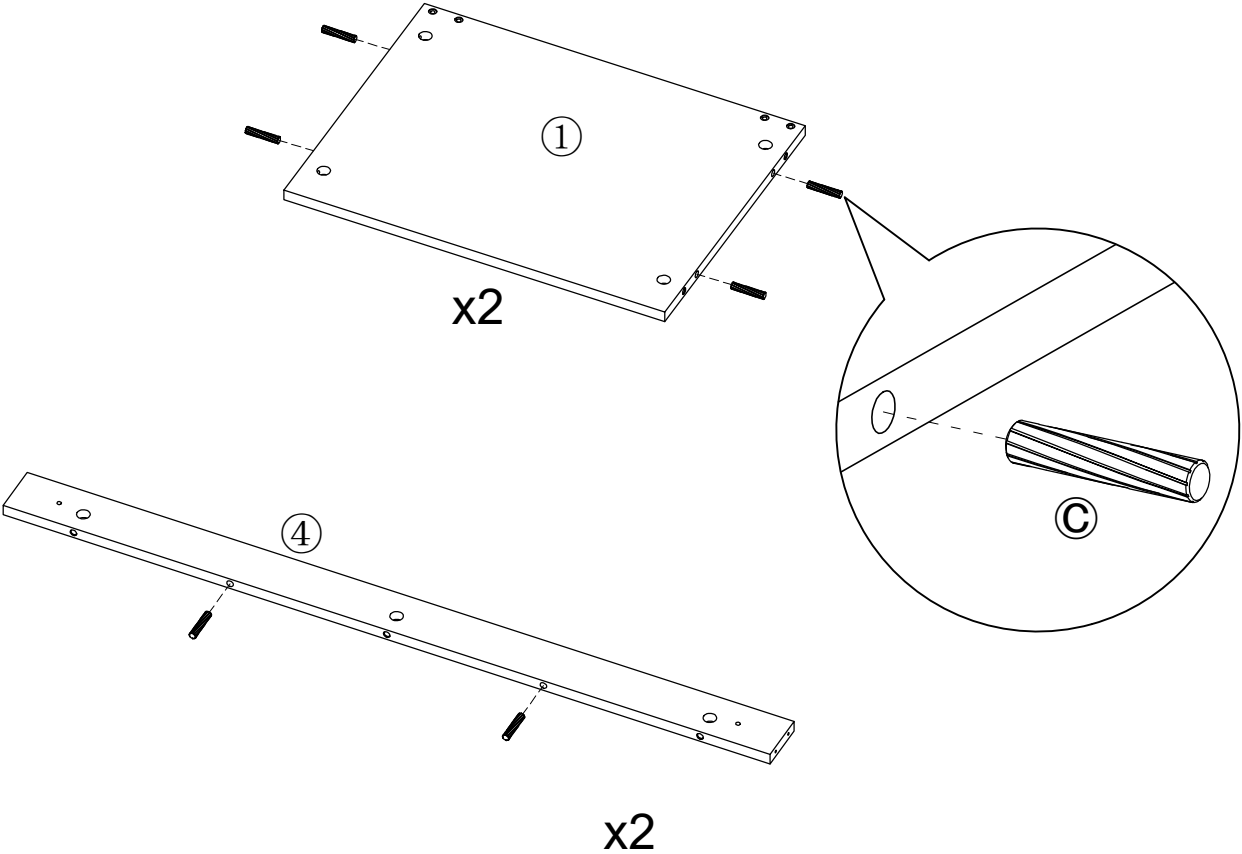


Step 2

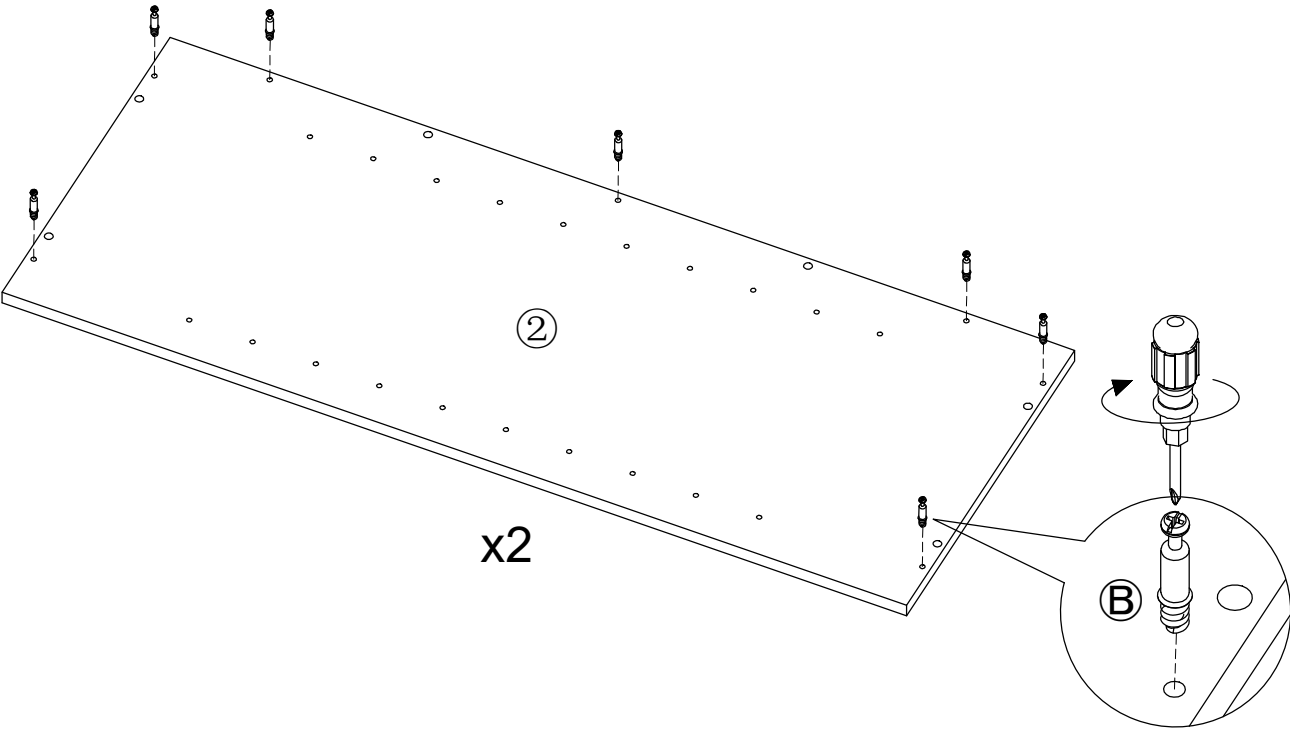

Step 3

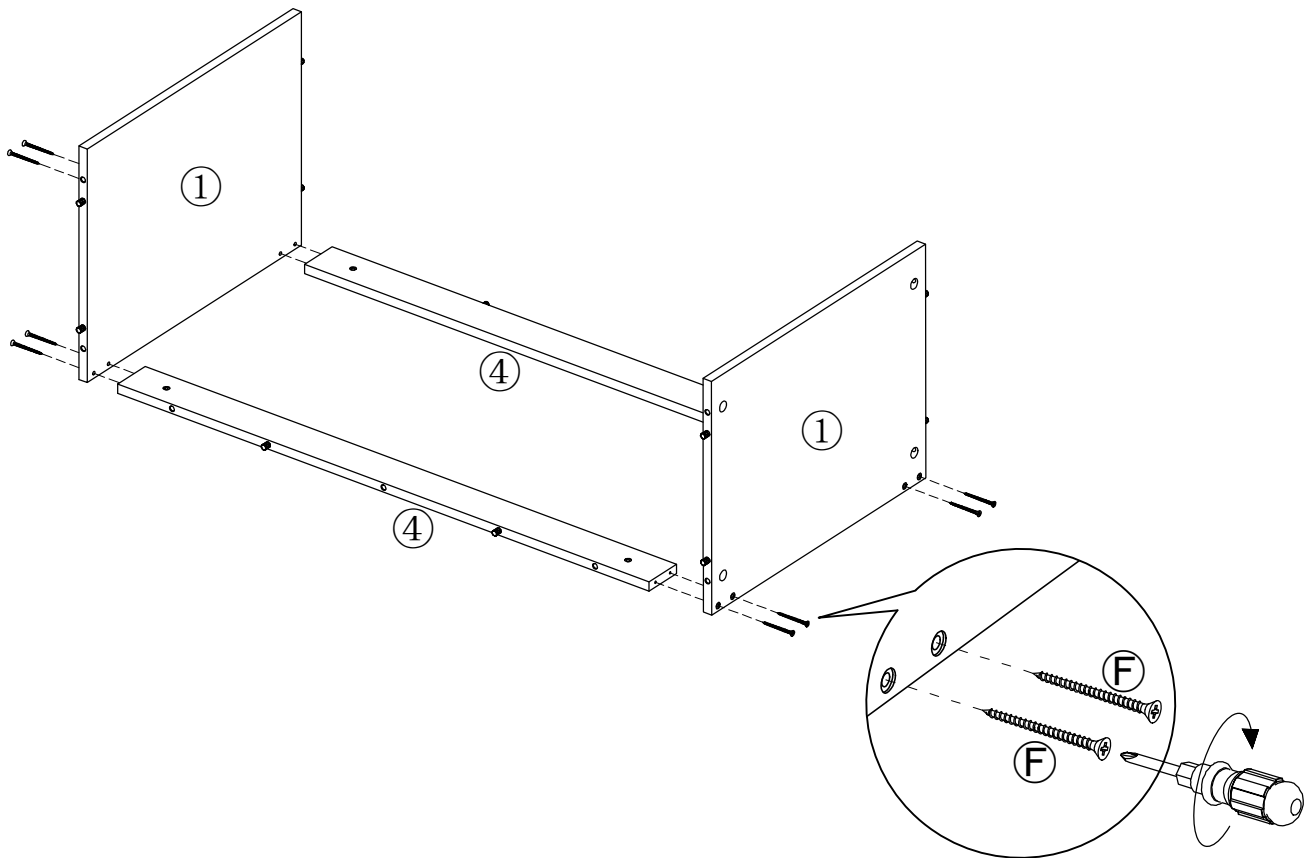


Step 4

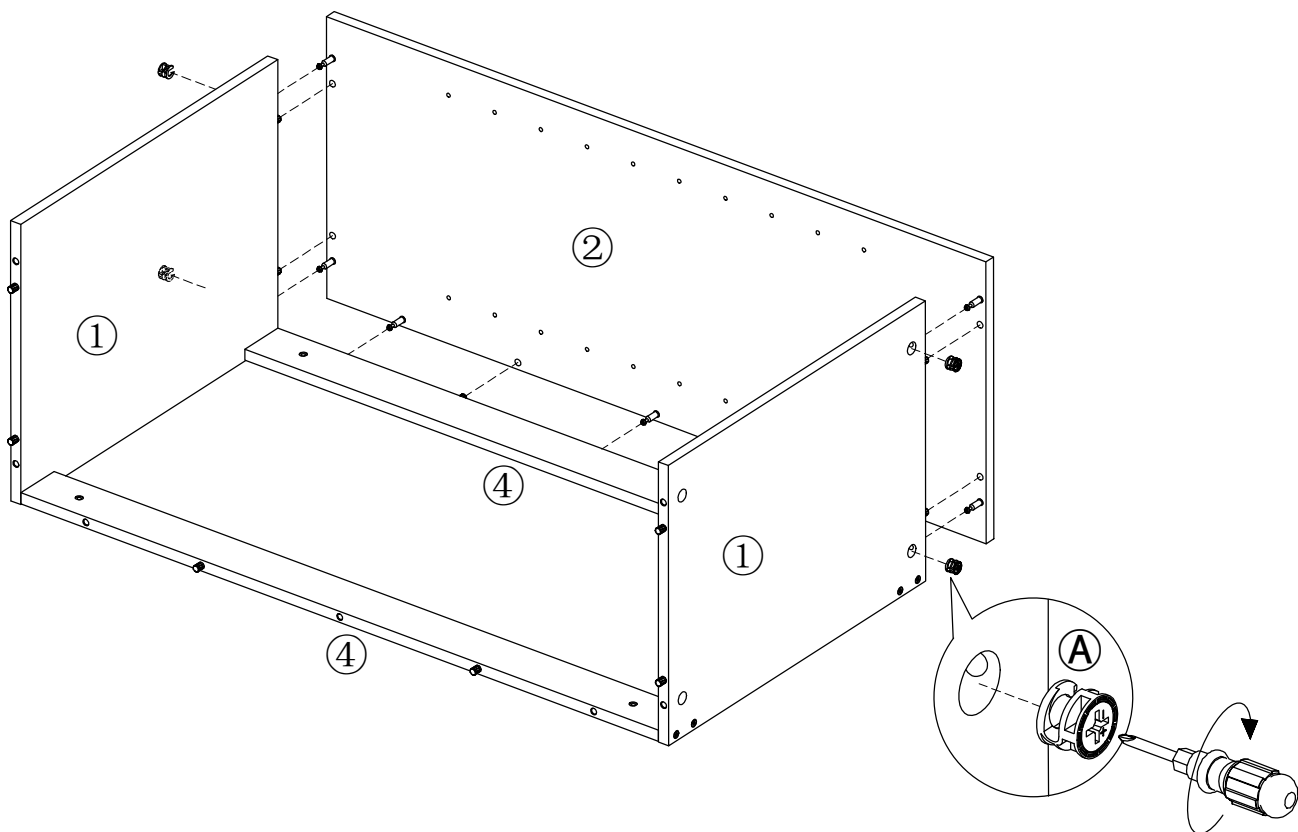

## Step 5



A x 10

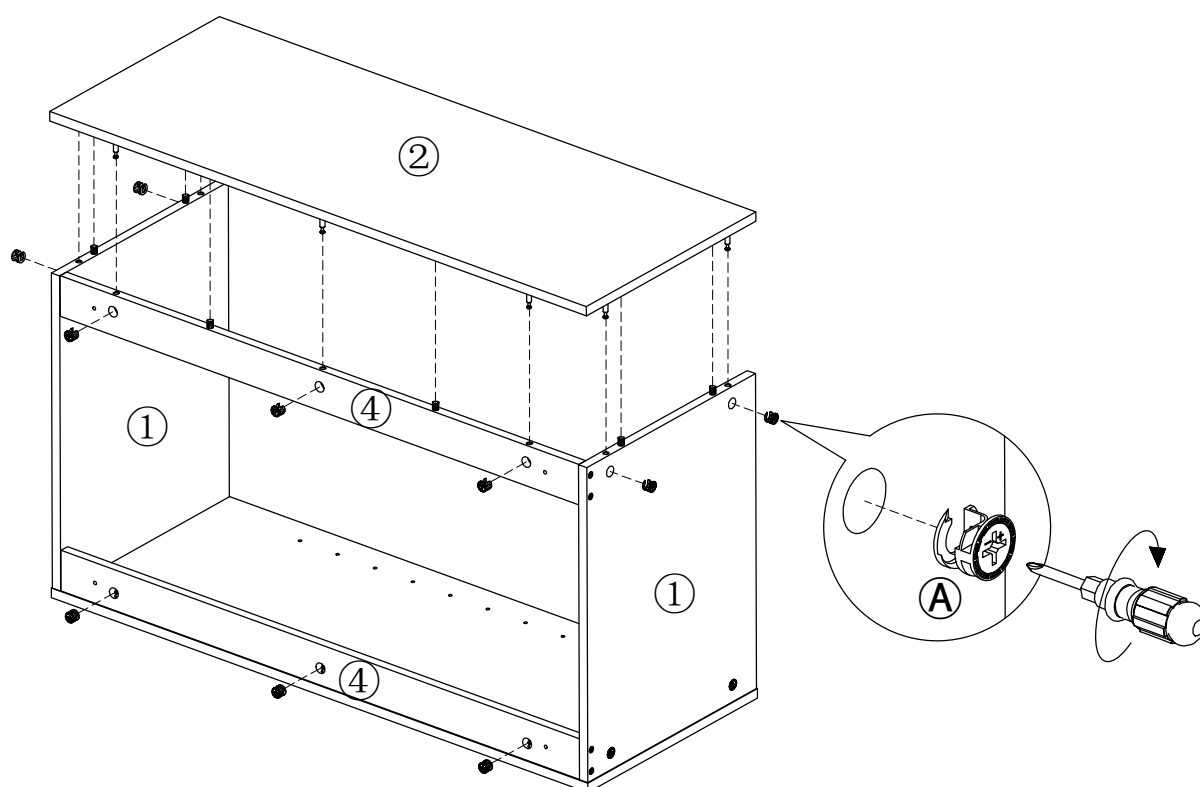


## Step 6




G x 16

Use the stickers to cover all visible cam-lock and bolt holes.

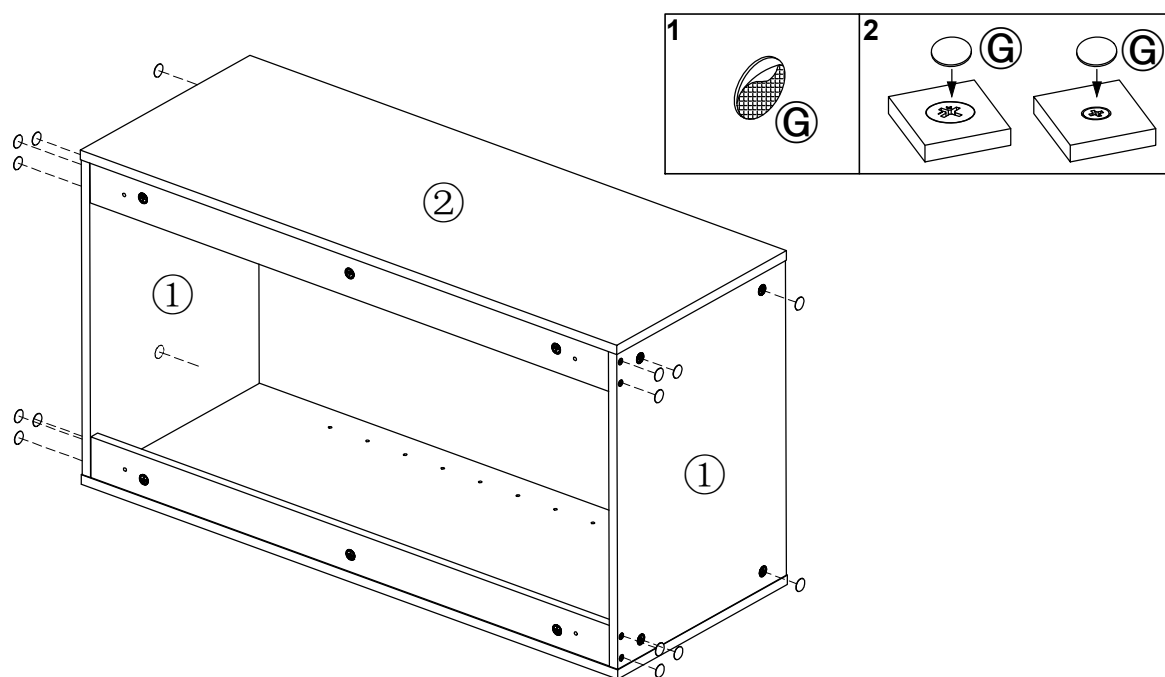


## Step 7

1. Determine the mounting location for the unit.
2. With the unit positioned at the desired location, level the unit, then drill Dia. 1/5" pilot holes through Rear Hanging Panel.

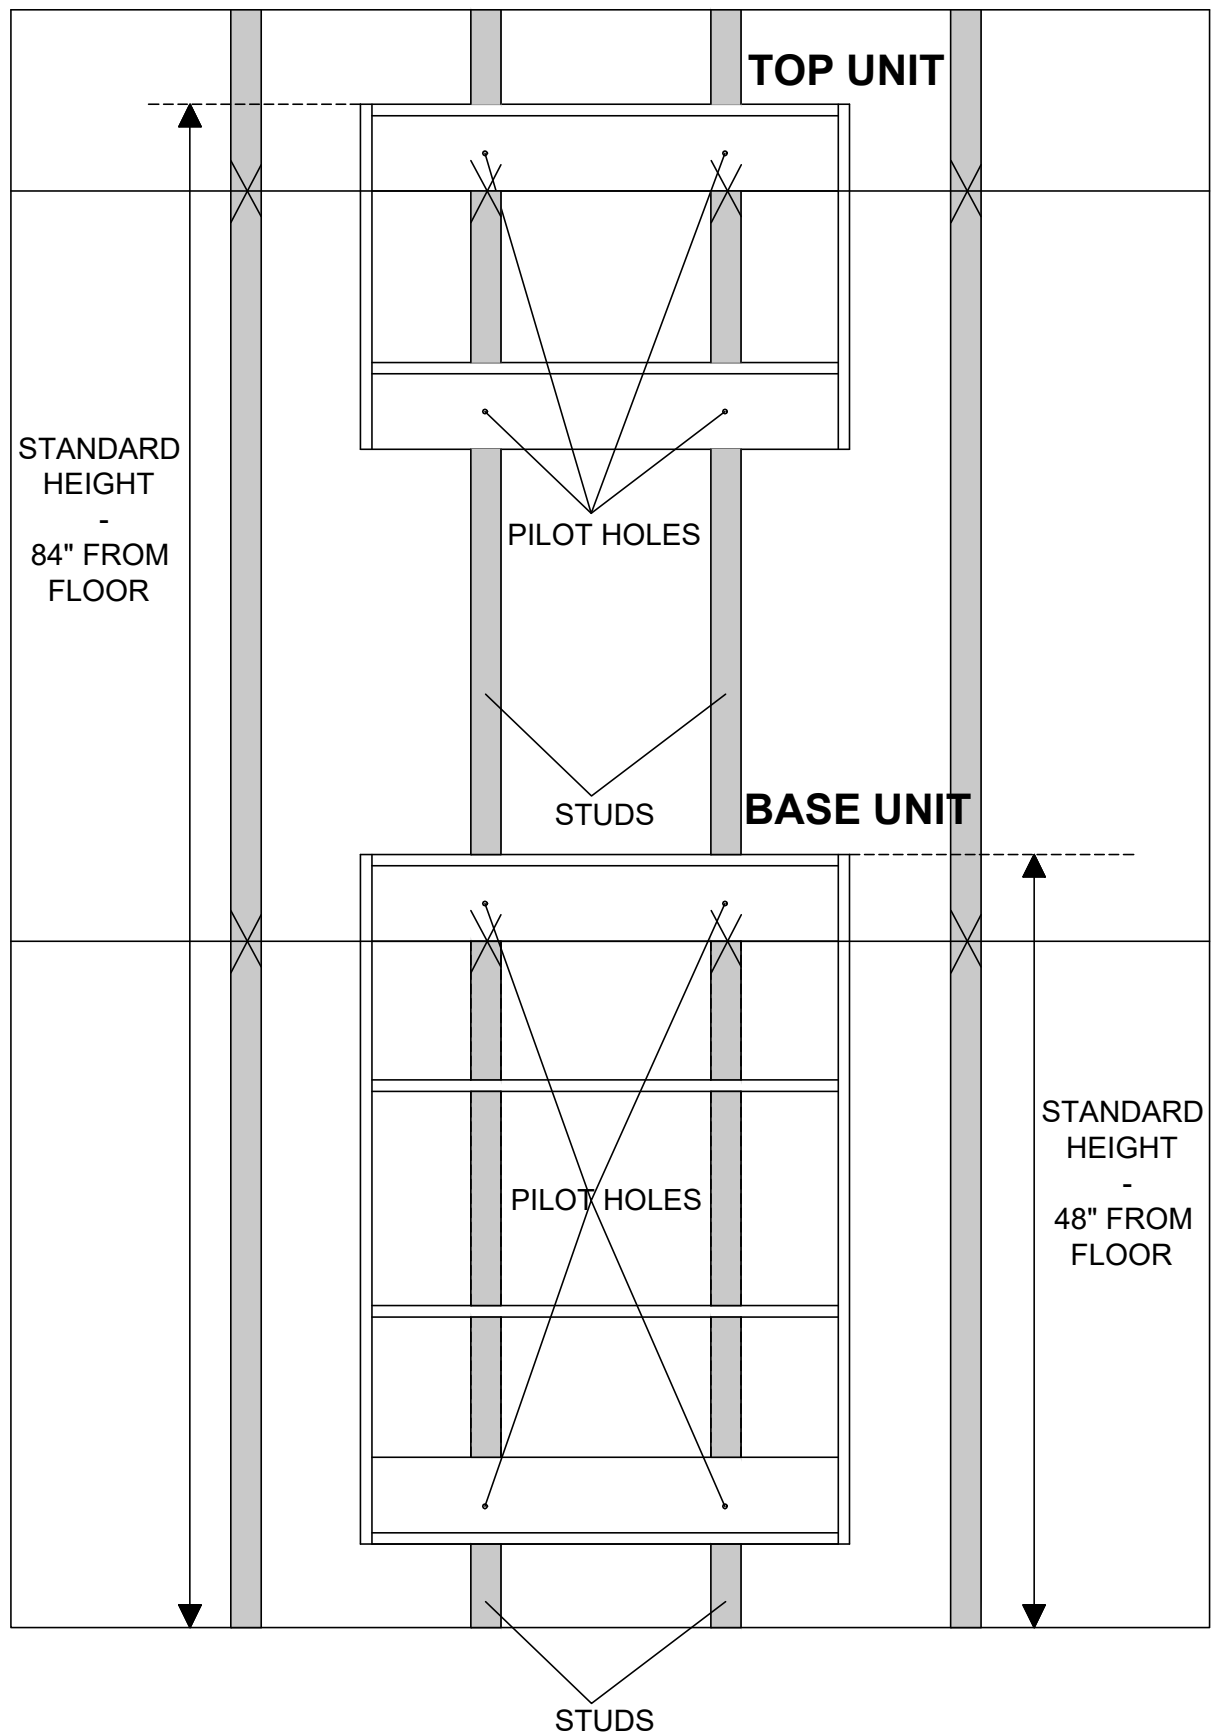


## Step 8

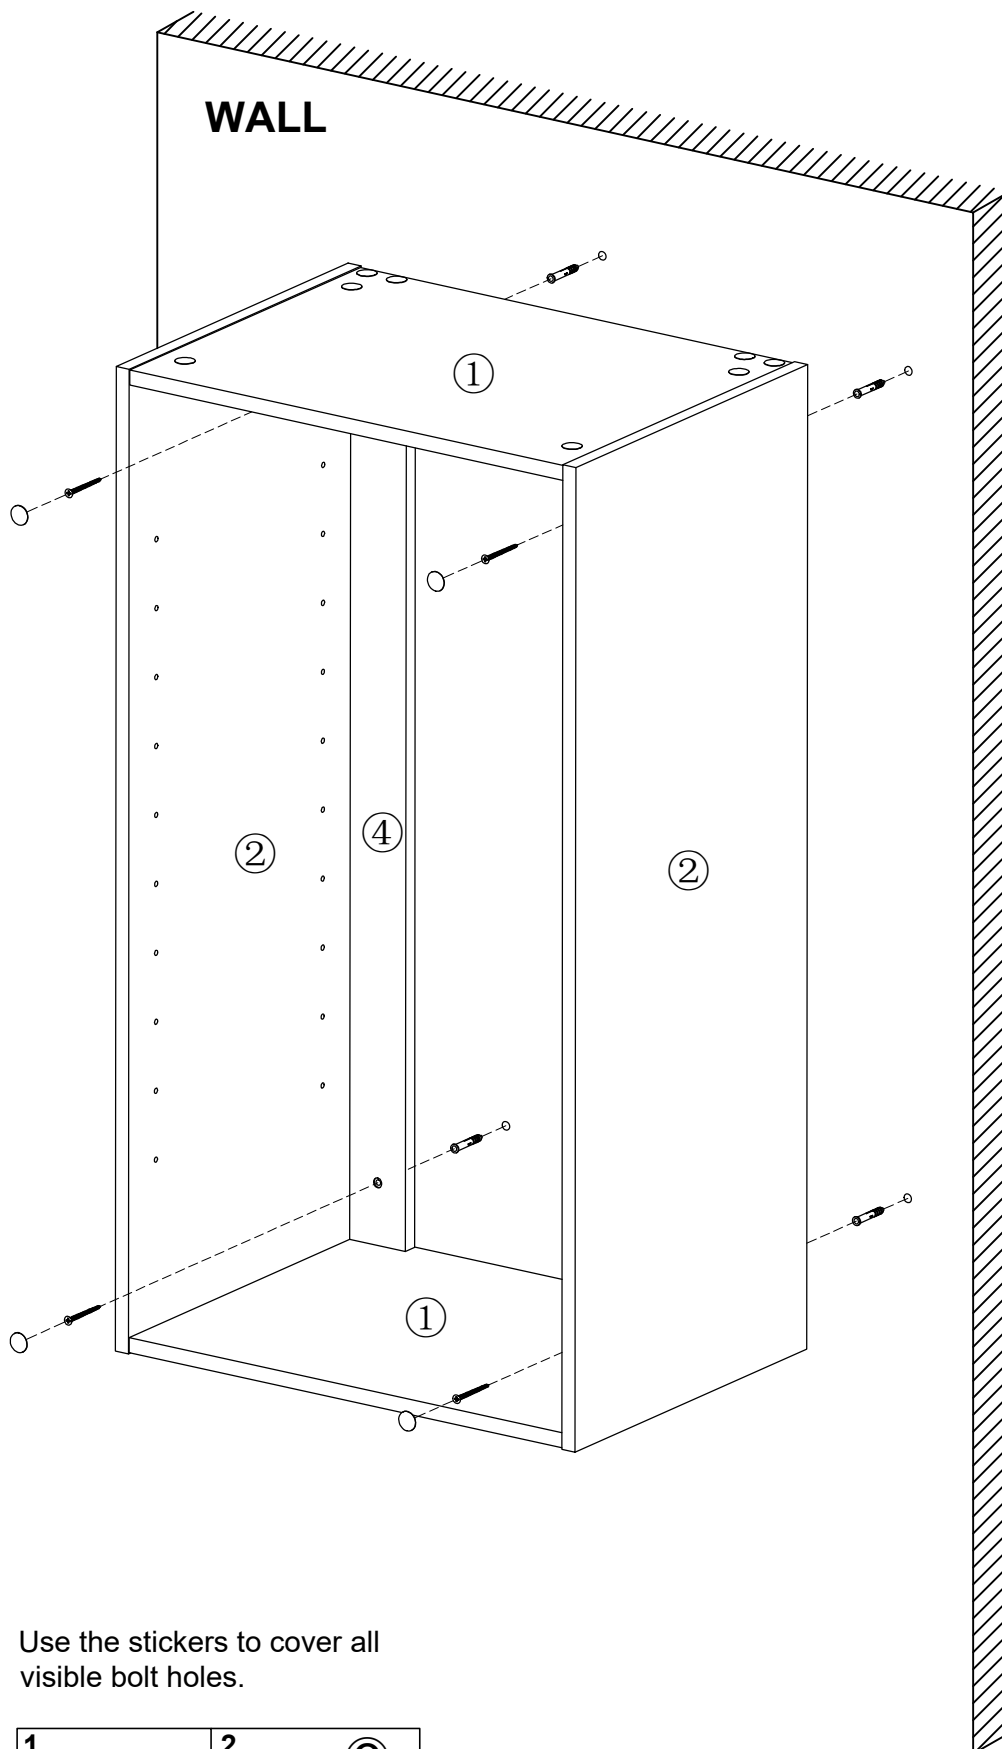


|  |       |
|--|-------|
|  | E x 4 |
|  | F x 4 |
|  | G x 4 |


### DETAIL HOLE FOR WALL FIXING

Note: hammer is not included.

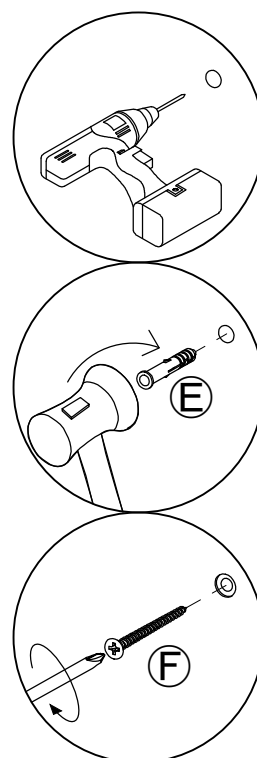

Use the stickers to cover all visible bolt holes.

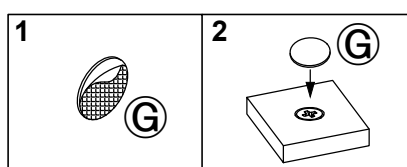

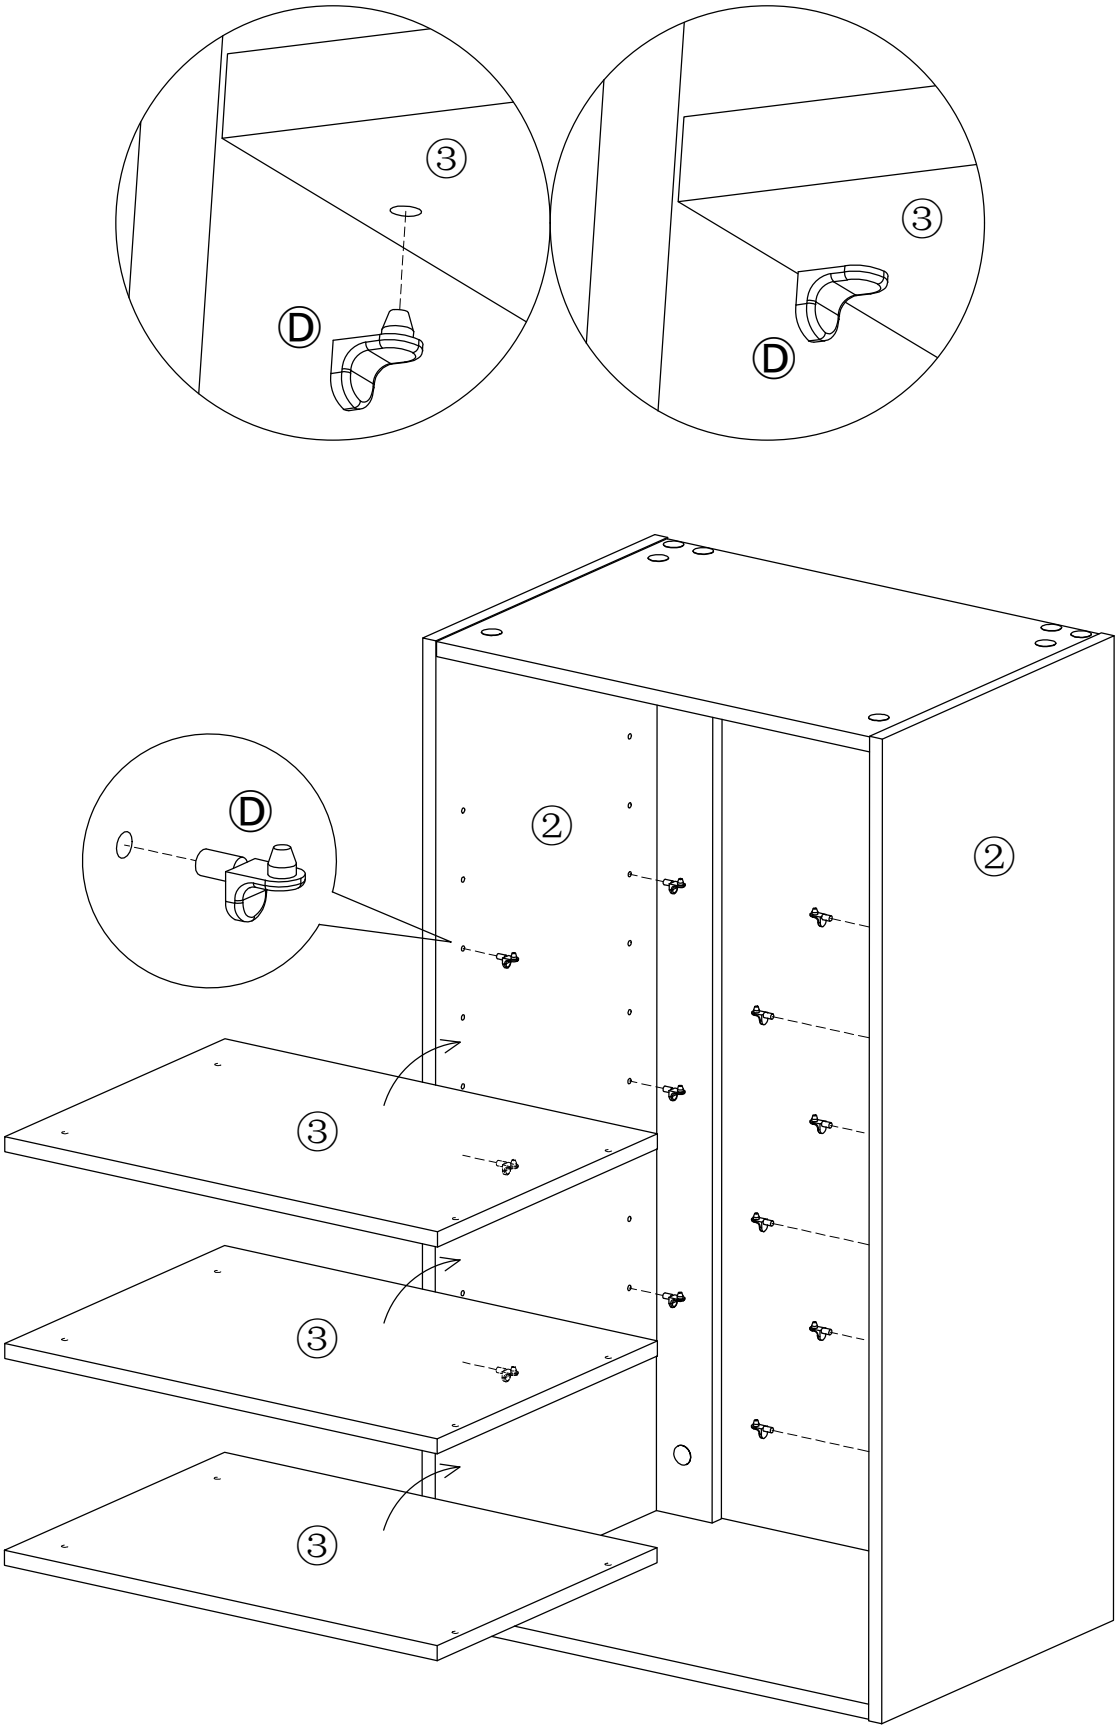

# AFTER-SALES SERVICE CARD

Thank you for choosing our product. We hope it brings convenience and enjoyment to your home. We guarantee that the product has undergone strict quality inspection and meticulous packaging. If you encounter any issue regarding either shipping or the product, please feel free to contact us at any time. We'd be more than happy to serve you wholeheartedly.

Yours Sincerely.

- Please avoid harsh, corrosive and abrasive cleaners.

**Customer Support**  
**Phone: +1(986)-888-1726**  
**Email: [help@unified-support.com](mailto:help@unified-support.com)**  
**Hours: Mon-Fri, 9:00 AM - 6:00 PM ET**

If you have any questions or concerns please feel free to contact us.  
We're committed to providing our customers with the quality service.