


ASSEMBLY INSTRUCTION

TWIN BED






W2582P185391 W2582P185394

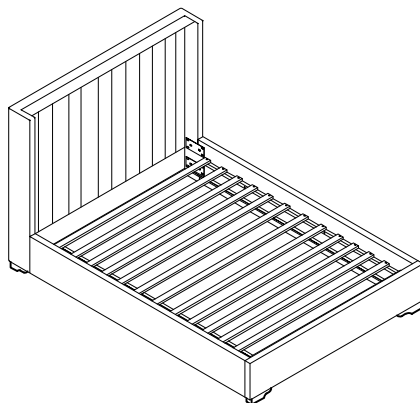W2582P185396 W2582P185444










W2582P185387 W2582P185388




Part list

W2582P185391/ W2582P185396 W2582P185387			
No.	Parts	Description	QTY
A		Headboard	1
W2582P185394/ W2582P185444 W2582P185388			
B		Footboard	1
C		Side Rail	2
D		Wood strip for Side rail	2
E		Slats	13

Hardware

W2582P185394/ W2582P185444 W2582P185388			
No.	Parts	Description	QTY
1		Bolt 5/16"*25mm	30
2		Flat Washer 5/16"	30
3		Spring washer 5/16"	42
4		Bolt 1/4"*60mm	12
5		Flat Washer 1/4"	12
6		Screw #8*30mm	26
7		Large L metal connector	2
8		Metal bracket	4
9		Allen Wrench	1

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS!

STEP 1:


Attach Large L metal connector (7) to Side rail (C),
Footboard (B) with Bolt (1),
Lock washer (3) and Flat washer (2) .
Tighten with Allen Wrench (9).

Attach Metal Bracket (8) to Side rail (C),
Headboard(A) with Bolt (1),
Lock washer (3) and Flat washer (2) .
Tighten with Allen Wrench (9).

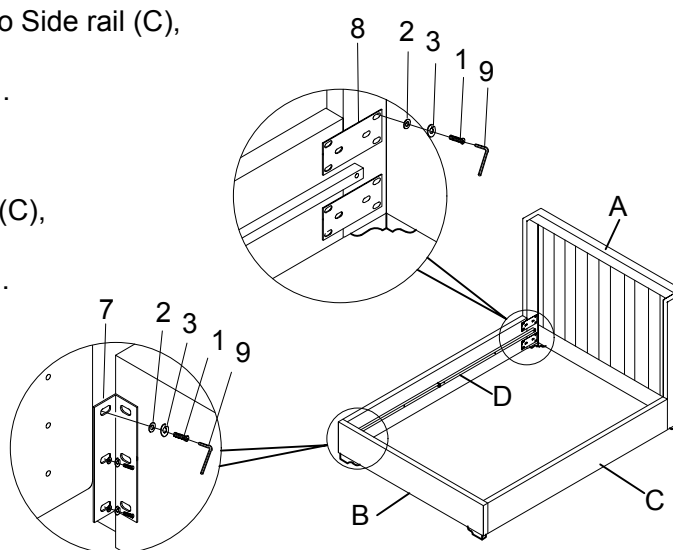

STEP 2:

Attach Wood strip for Side rail (D) to Side rail (C)
with Bolt (4), Lock washer (3) and
Flat washer (5) . Tighten with Allen Wrench (9).

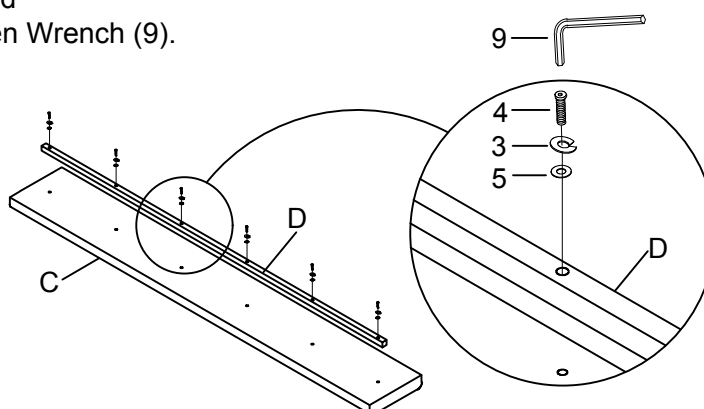

STEP 3:

Attach Slats (E) to Side rail (C) with Allen Screw (6).

