



by Stevens Industries, Inc.  
704 West Main St.  
Teutopolis, IL 62467  
P: 800.350.3270  
P: 217-857-7100  
F: 217-857-7101  
www.totmate.com

**TMS302R**  
**TM2302R**  
**TMS301R**  
**TM2304R**

**Toddler Shelf Storage**



**TMS302R**  
HARDWARE BAG# 0563-3293



**TM2302R**  
HARDWARE BAG# 0563-3293

**Preschool Shelf Storage**



**TMS301R**  
HARDWARE BAG# 0563-3293



**TM2304R**  
HARDWARE BAG# 0563-3293




**CAUTION – CHOKING HAZARD**  
Adult assembly required due to presence of small parts and sharp edges.

**ATTENTION**

Please unpack and assemble in an area away from children's activities. Remove all tools and excess materials from work area after assembly of unit is complete. Dispose of pallet and packaging materials in an environmentally friendly manner. If any parts are missing or damaged, please call Stevens for immediate parts replacement (1-800-350-3270). When ordering parts, give the Model Number and Color of the unit.

**HARDWARE / TOOLS INCLUDED**

(Phillips screwdriver required but not included.)

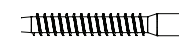

**Confirmat Bolt**  
(Screw Conn HxDc Ni 7mmx50mm)



**Hex Wrench**

**Illustrations and part numbers are for TM2304R.**

Basic assembly instructions are the same for models shown. 2-Person assembly recommended.

**IMPORTANT!**

Be sure to keep all parts supported during assembly to avoid damage. Do not over-tighten bolts or it will damage the pre-drilled holes. Snug fit is adequate.

**NOTE:** Refer to exploded drawing for orientation of holes to parts.

**PARTS for TM2304R**

| ITEM | QTY | DESCRIPTION                    |
|------|-----|--------------------------------|
| 1    | 2   | End                            |
| 2    | 2   | Back                           |
| 3    | 1   | Shelf, double grooved          |
| 4    | 2   | Top-Bottom                     |
| 5    | 12  | Screw Conn HxDc Ni, 7mm x 50mm |

- STEP 1:** Locate **Tops (4)**, **Shelf (3)** and one **End (1)**. Arrange them on the floor near each other. Identify the correct orientation of the **Tops (4)** and **Shelf (3)** to insert into **End (1)**. Take note of the location of the edgebanding seam on **End (1)**. **IMPORTANT: Edgebanding seam must be on the bottom of the unit when assembly is complete.**
- STEP 2:** With **End (1)** resting on its front edge, insert dowels on one **Top (4)** into holes on **End (1)**. Make sure the routed channel on **Top (4)** is facing toward interior of unit. Secure **End (1)** to **Top (4)** with two **Confirmat Bolts (5)**.
- STEP 3:** Repeat **Step 2** with other **Top (4)**. Make sure routed channel is facing toward interior of unit and channels on both **Tops (4)** are aligned.
- STEP 4:** Insert dowels on **double-grooved Shelf (3)** into remaining holes on **End (1)**. Secure **End (1)** to **Shelf (3)** with **Confirmat Bolts (5)**.
- STEP 5:** Slide **both Backs (2)** into channels on **Tops (4)**. Seat firmly against **End (1)** & **double-grooved Shelf (3)**.
- STEP 6:** Position other **End (1)** at opposite end of unit, with front edge down. Insert dowels on **Tops (4)** and **Shelf (3)** into holes on **End (1)**. Make sure edgebanding seam is on bottom of unit. **NOTE: Propping up Tops and Shelves will allow End to be positioned without obstruction.**
- STEP 7:** Secure **End (1)** to **Tops (4)** and **Shelf (3)** with six **Confirmat Bolts (5)**.
- STEP 8:** Carefully stand unit upright.
- STEP 9:** Ensure that all joints, bolts and screws are tight.  
This completes the assembly.

