


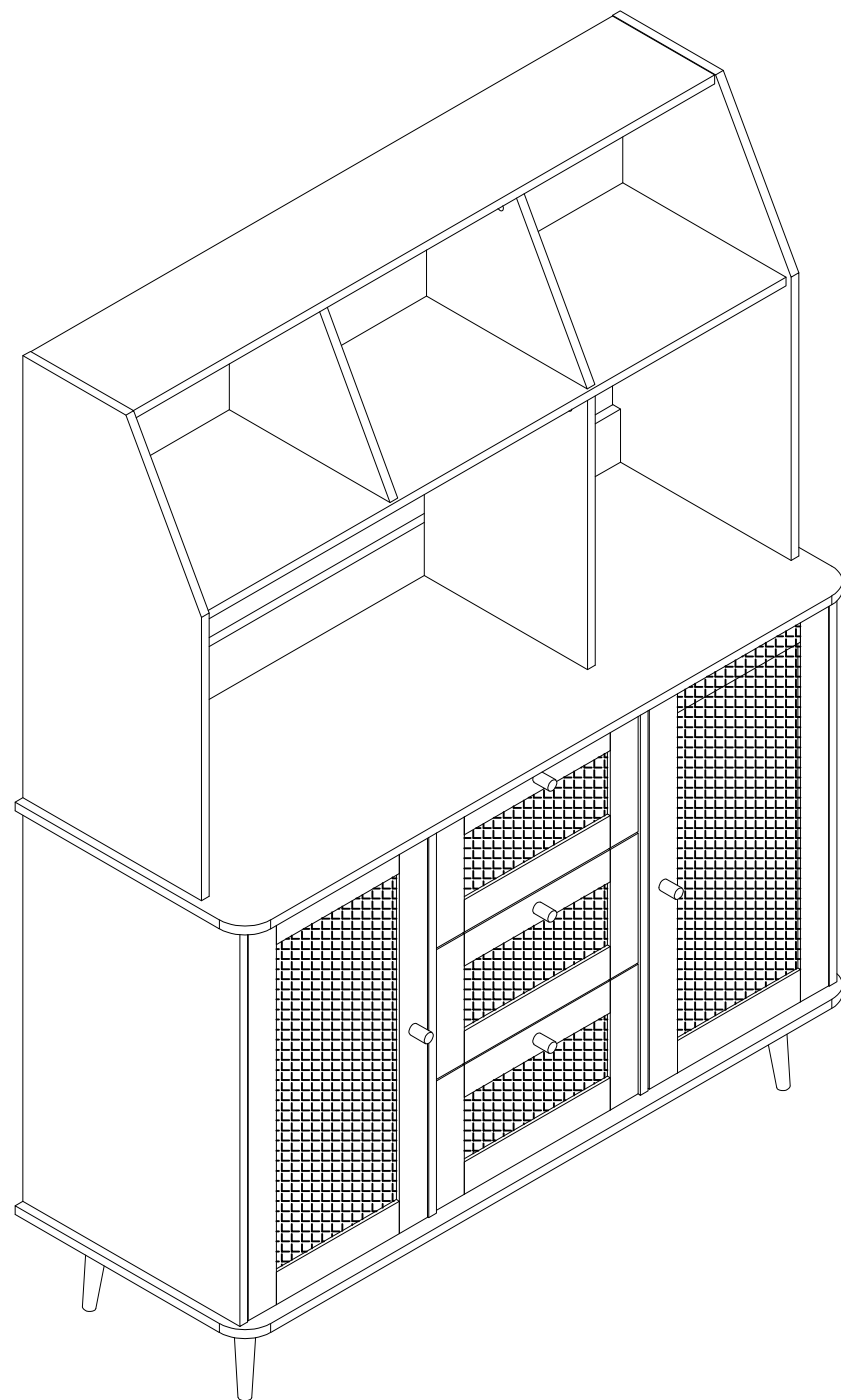
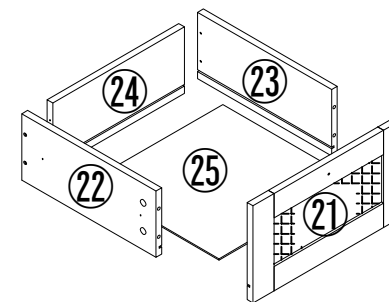
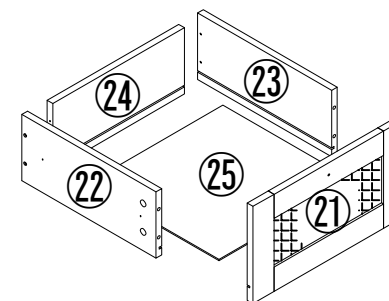
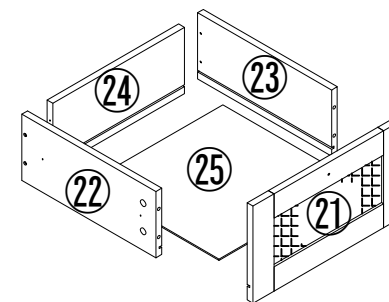
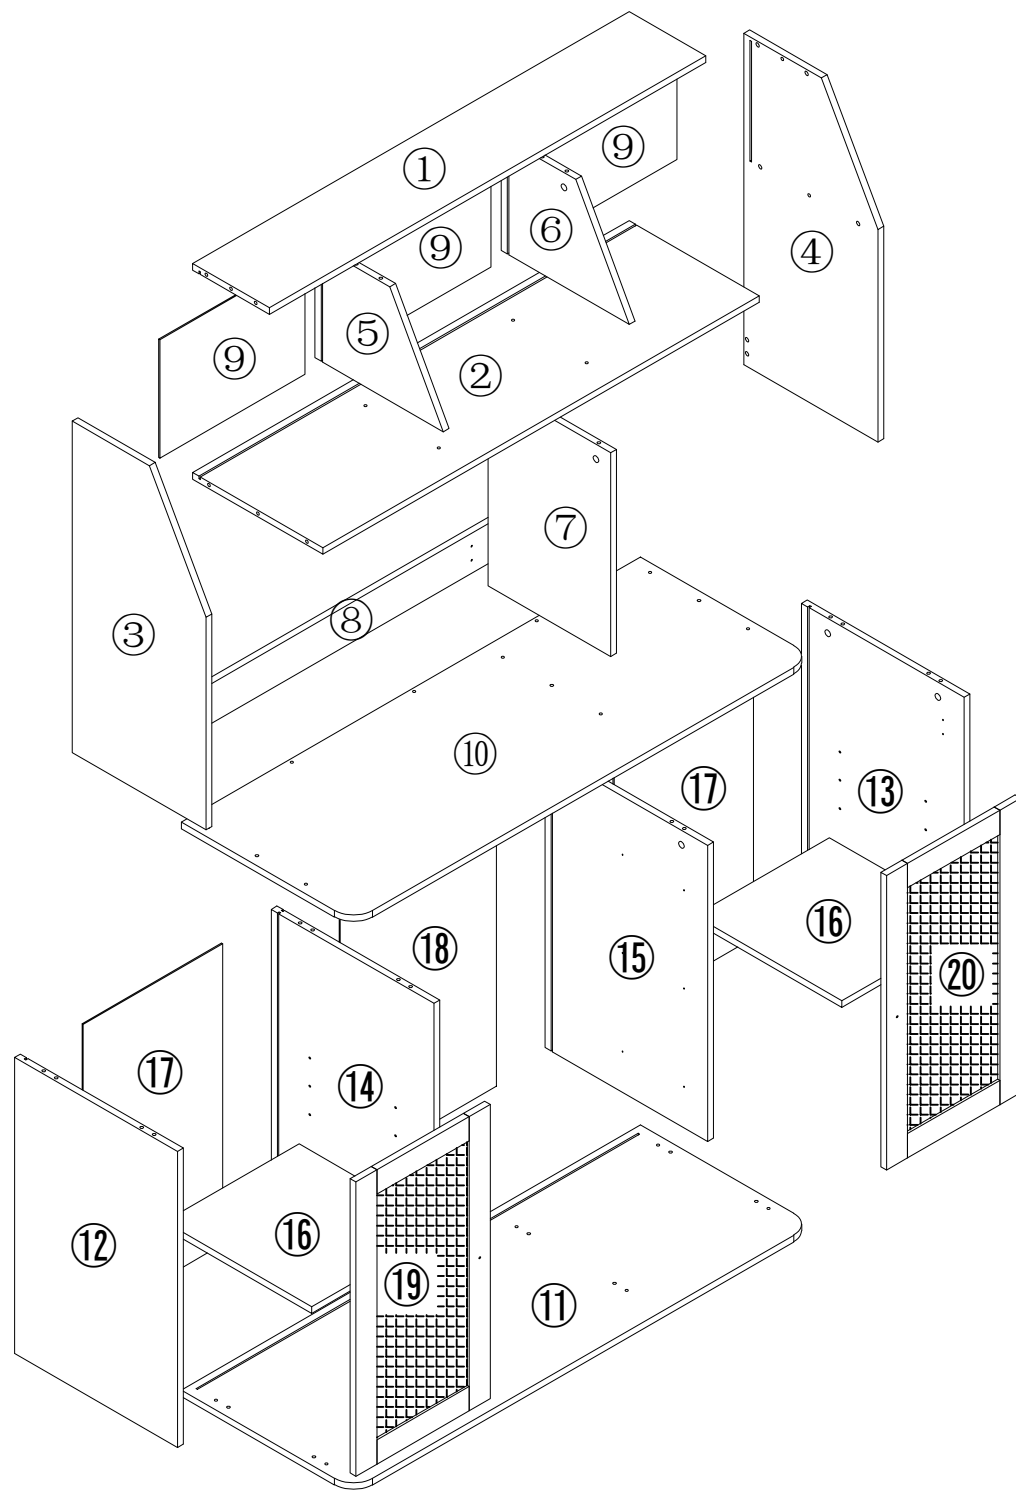
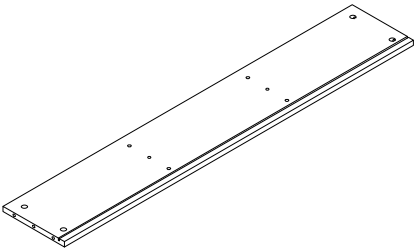
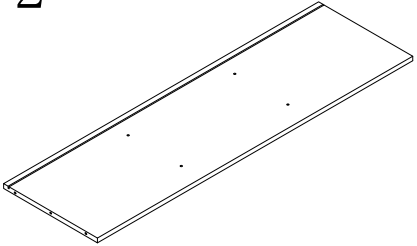
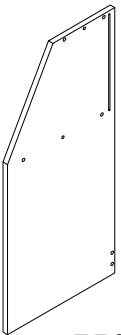

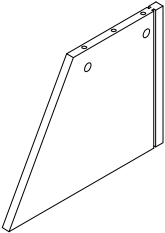
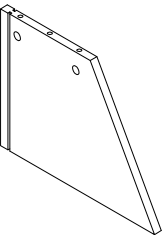

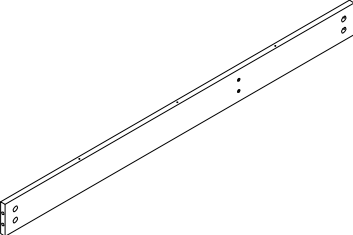
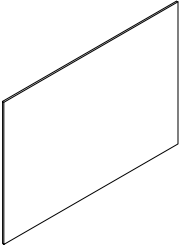
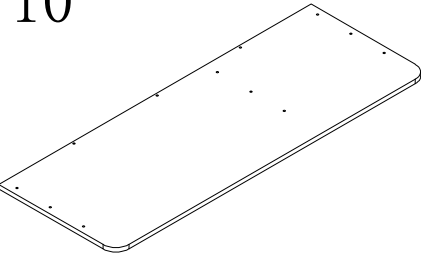
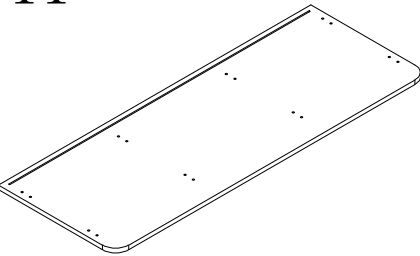
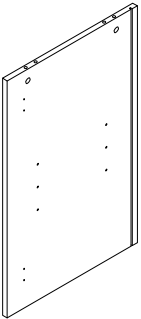
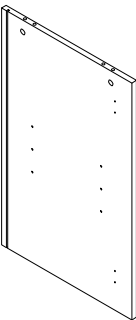
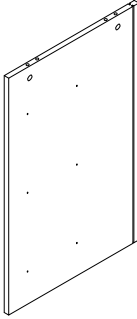
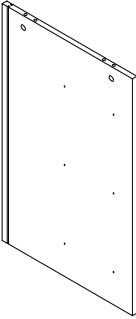
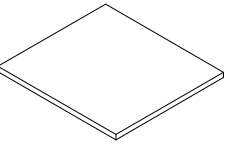


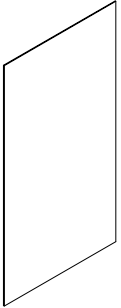

H23060 QD

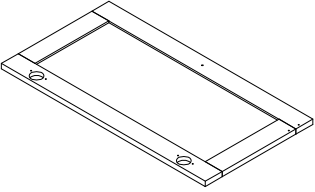


1  1140*200 1 PCS	2  1140*340 1 PCS	3  750*350 1 PCS	4  750*350 1 PCS	5  258*335 1 PCS
6  258*335 1 PCS	7  461*320 1 PCS	8  1140*90 1 PCS	9  268*379 3 PCS	10  1200*450 1 PCS
11  1200*450 1 PCS	12  670*425 1 PCS	13  670*425 1 PCS	14  670*425 1 PCS	15  670*425 1 PCS
16  352*385 2 PCS	17  680*364 2 PCS	18  680*408 1 PCS	19  666*351 1 PCS	20  666*351 1 PCS

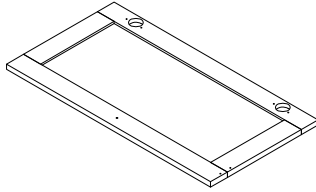


Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

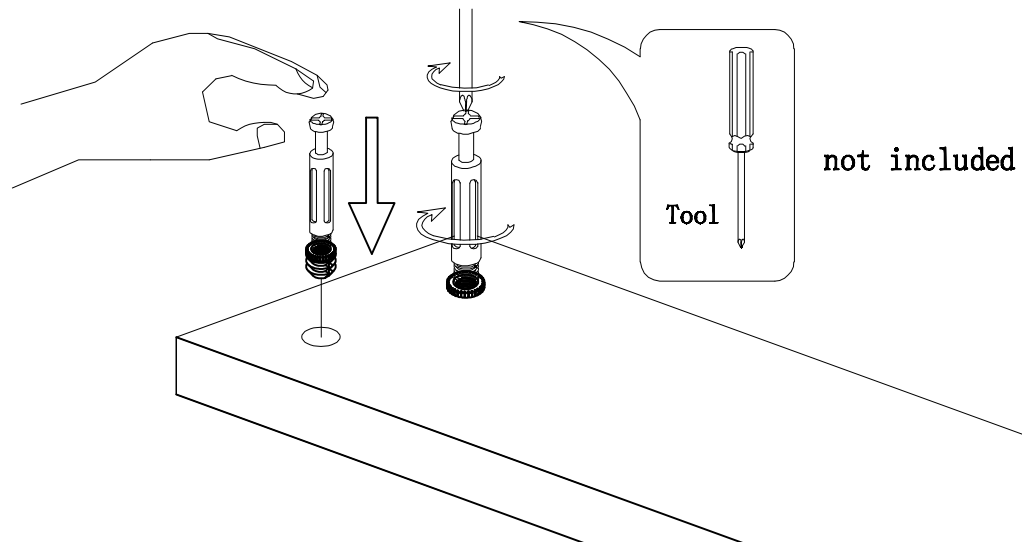

II

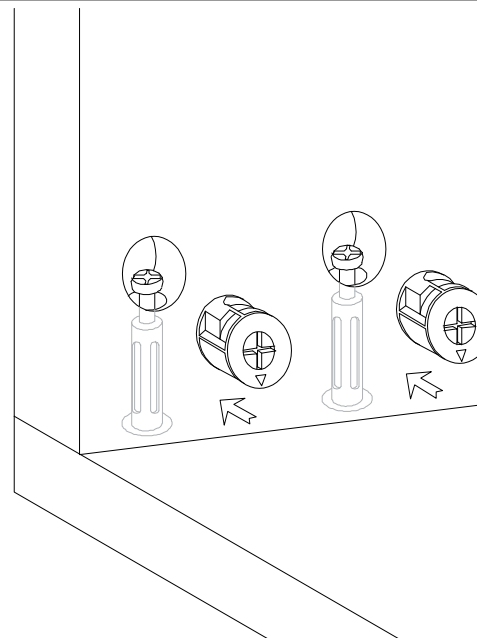

III








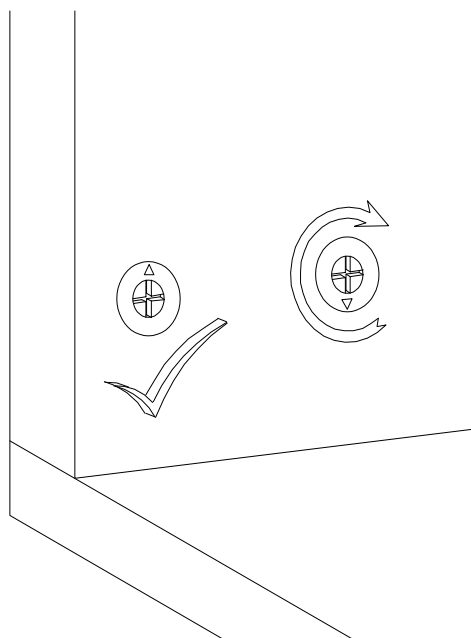


IV




Scan QR code for assembly video

①

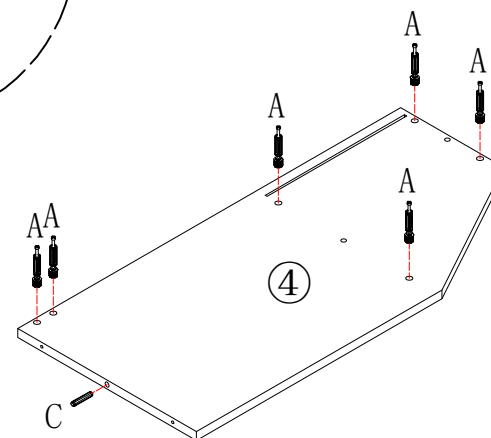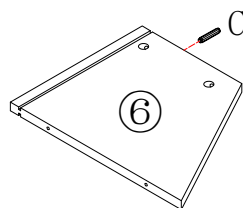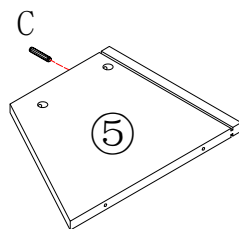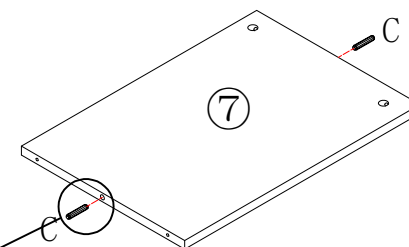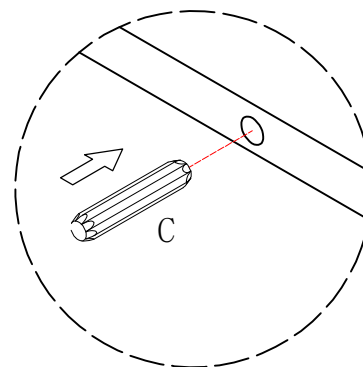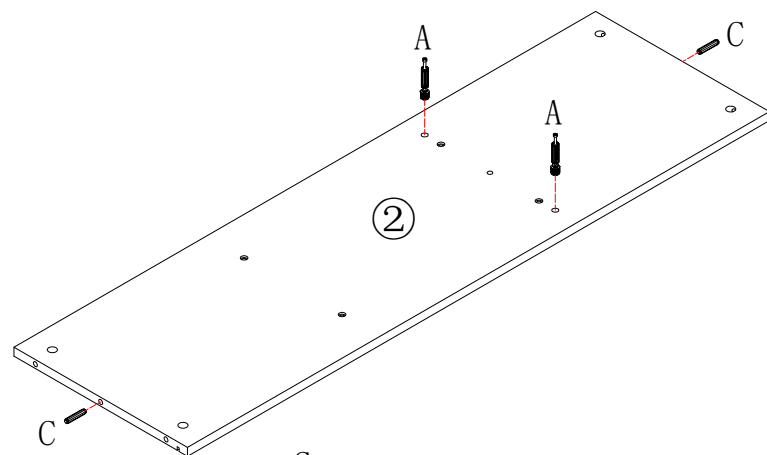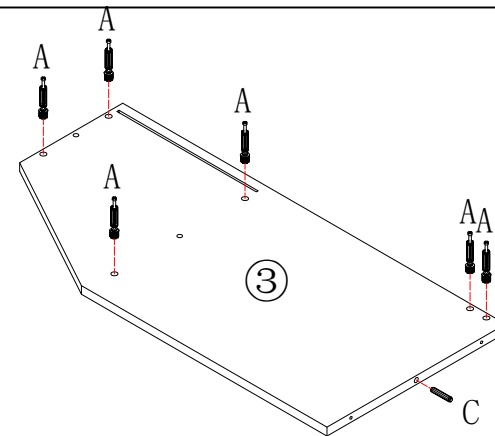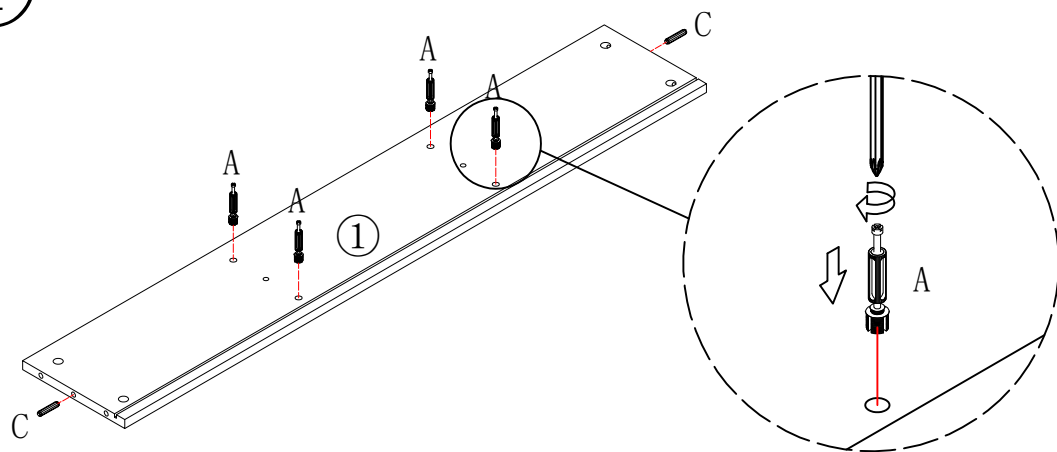

	A*18	put A on board ①②③④
	C*10	put C on board ①②③④⑤⑥⑦

②

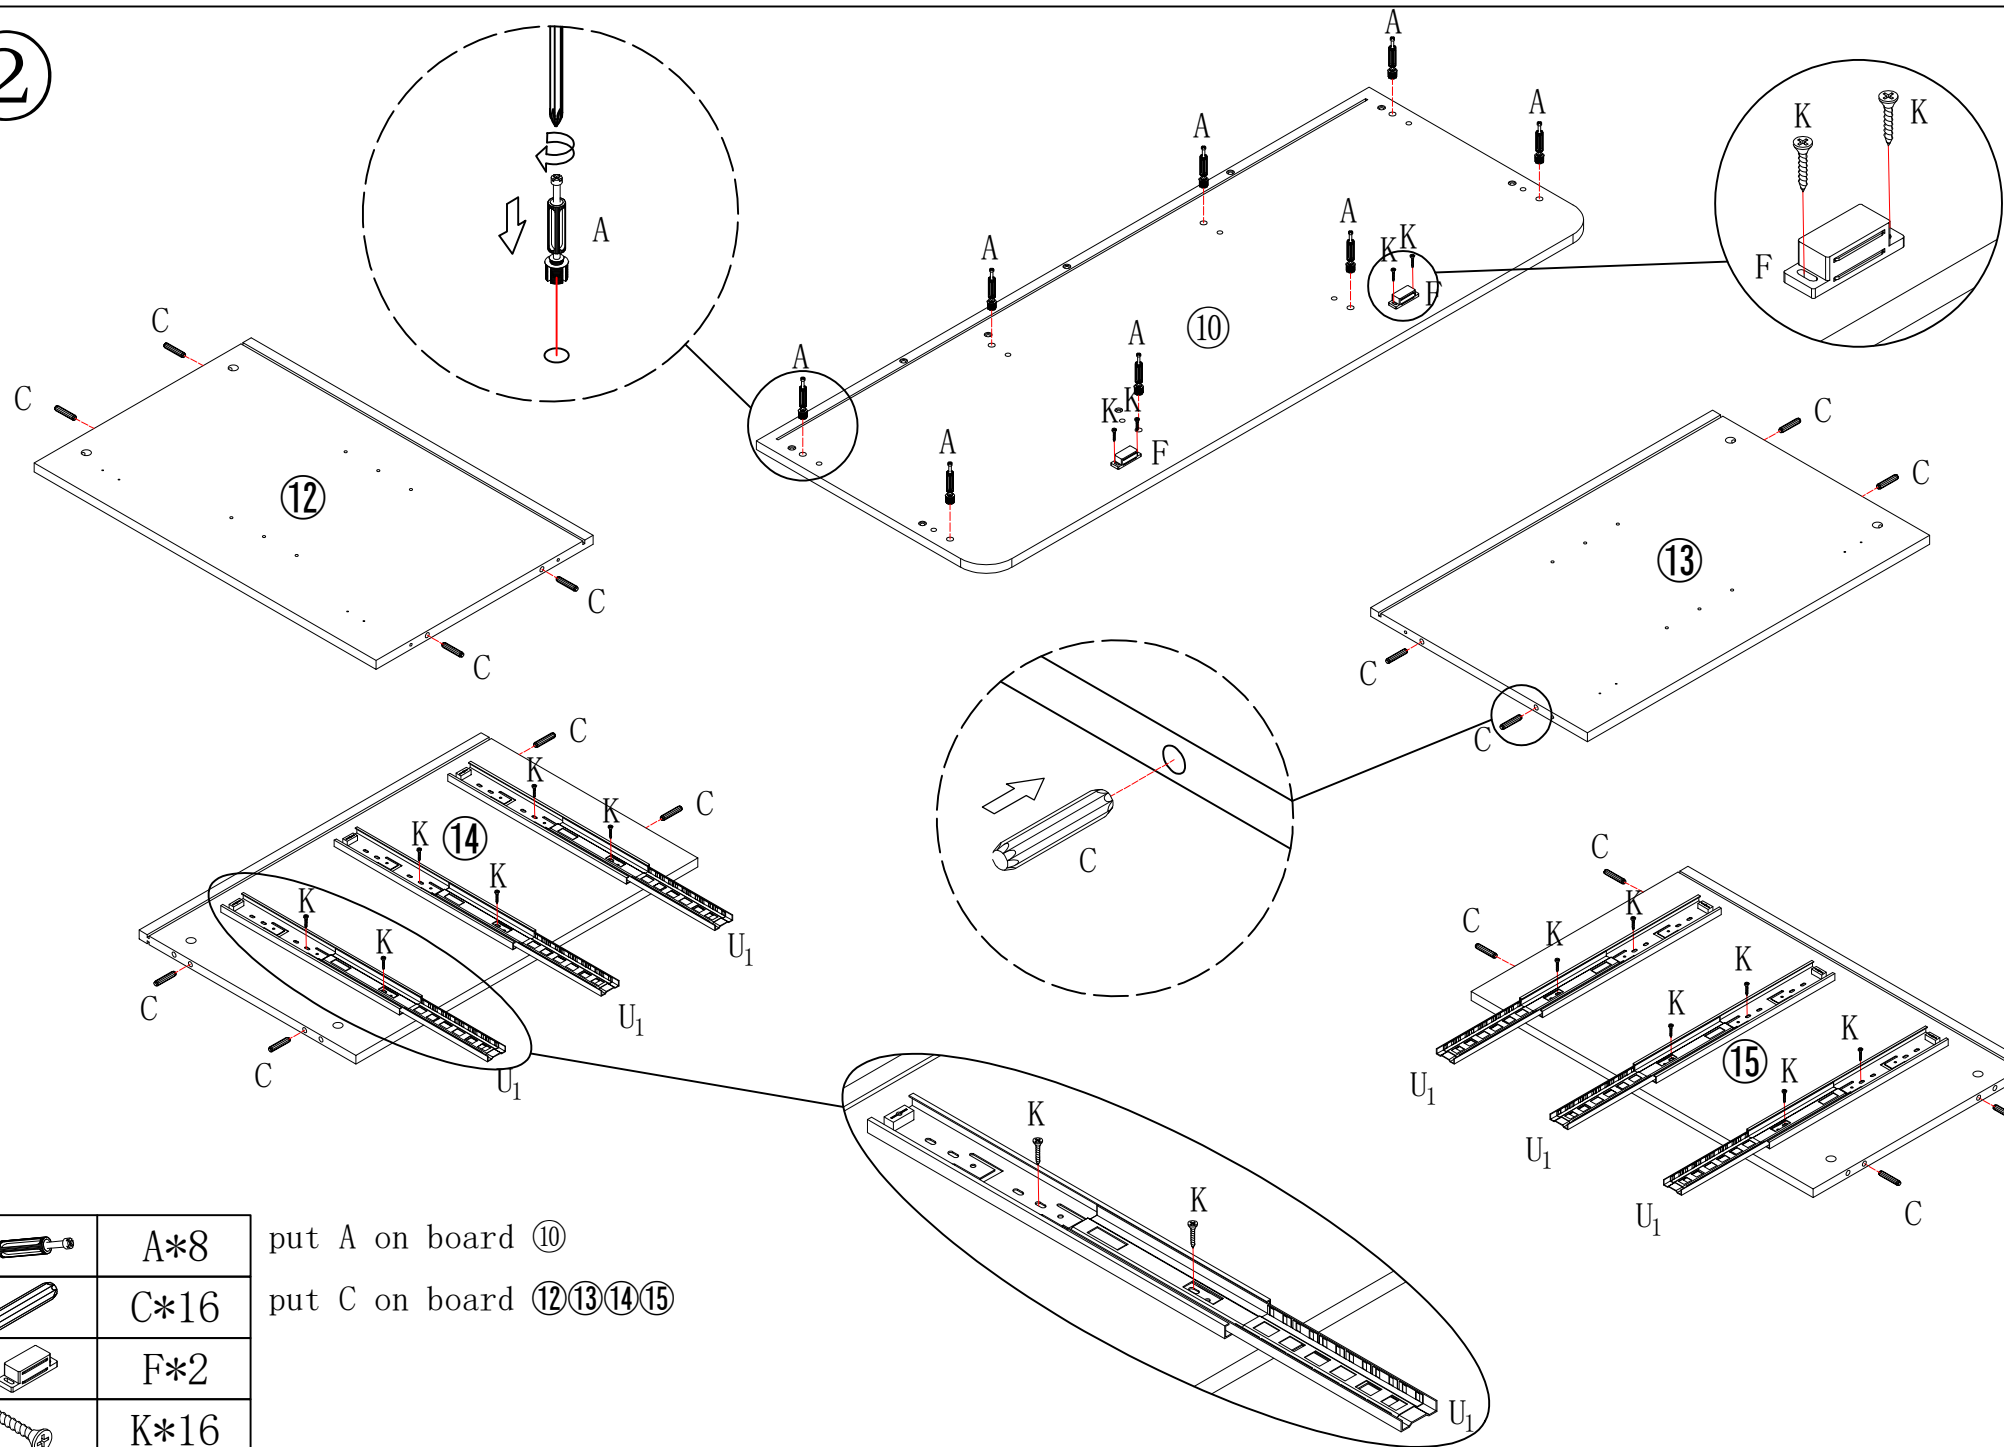


	A*8
	C*16
	F*2
	K*16
	U1*6

put A on board ⑩
put C on board ⑫⑬⑭⑮

3


Make sure the arrow on the screw
align to the hole on the side.

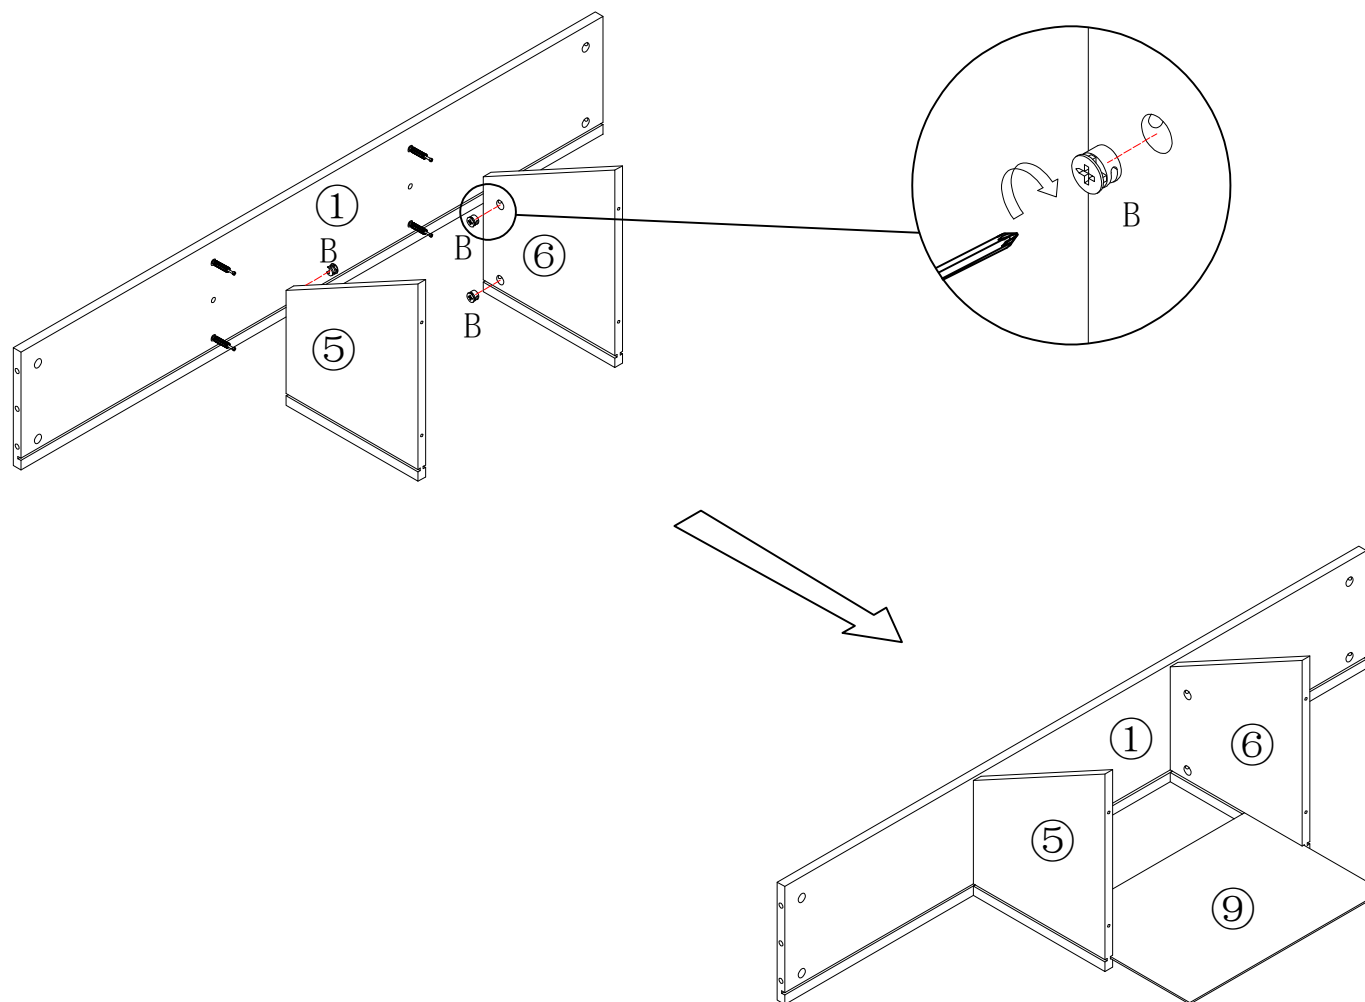

B*4


put B on board ⑤⑥

4

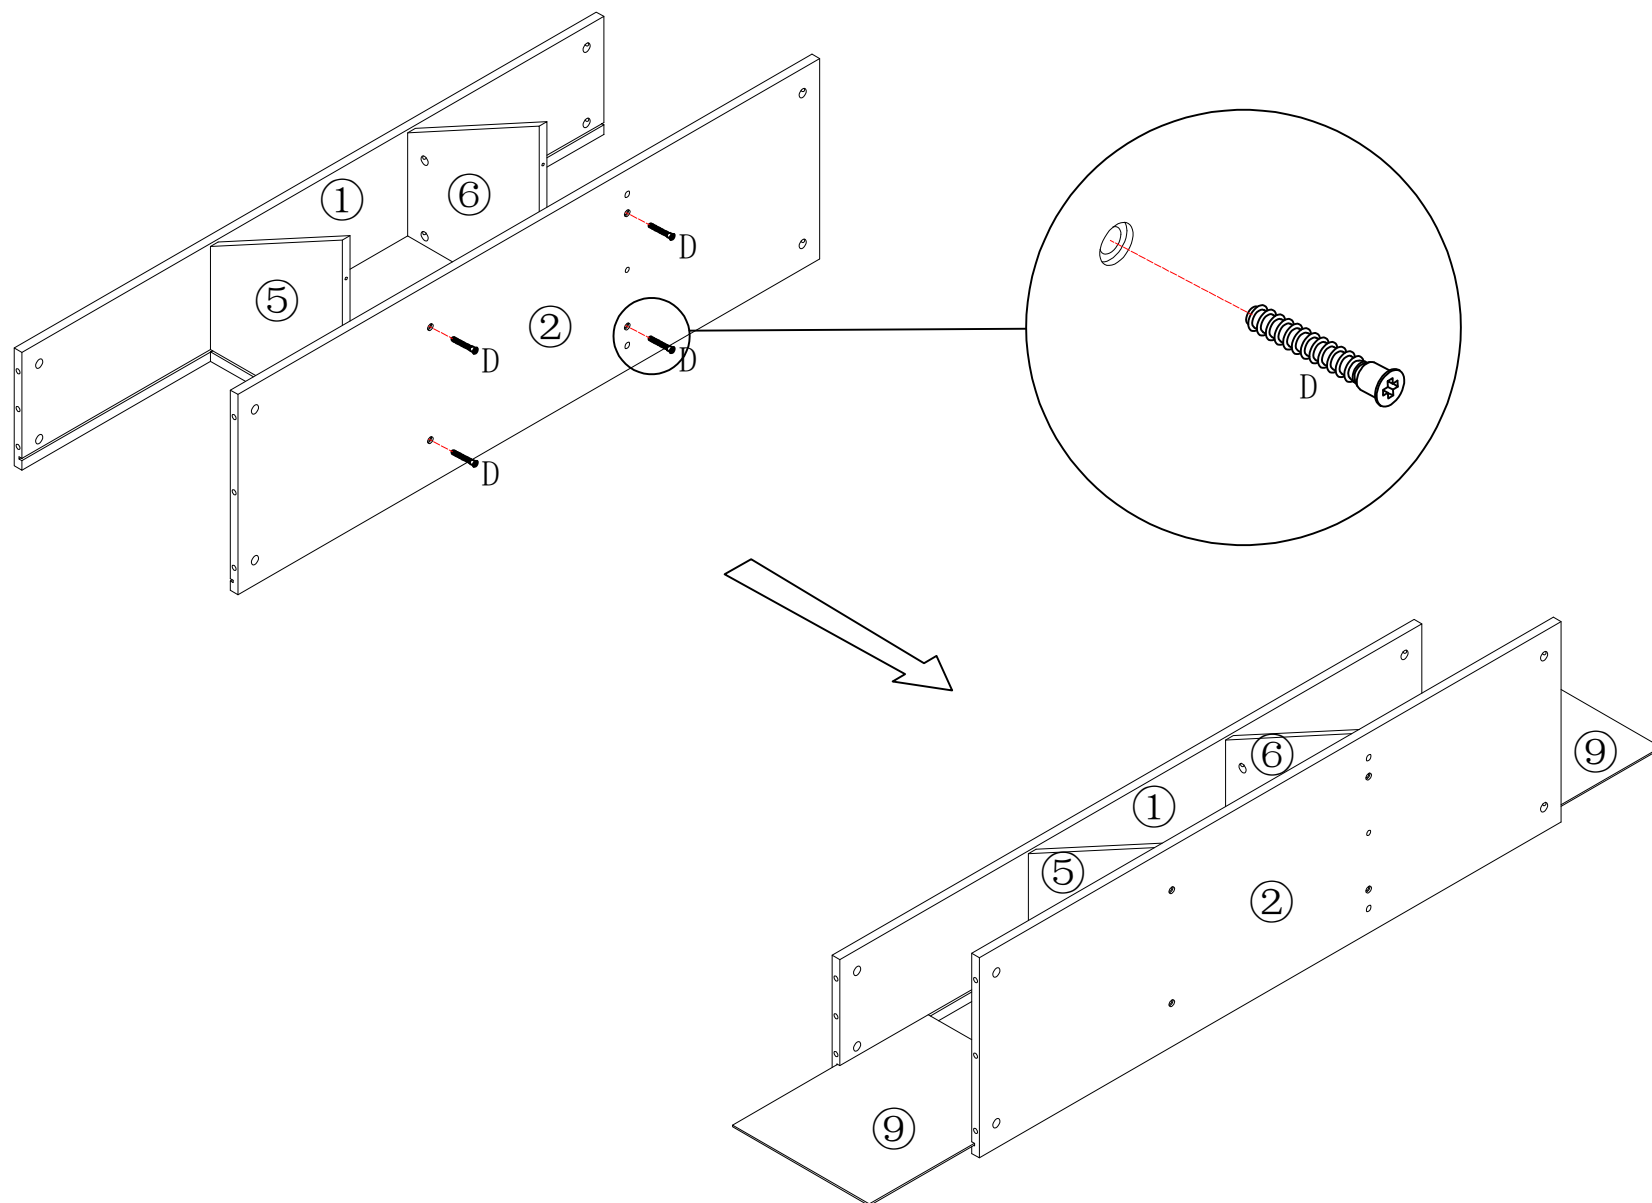


D*4

⑤

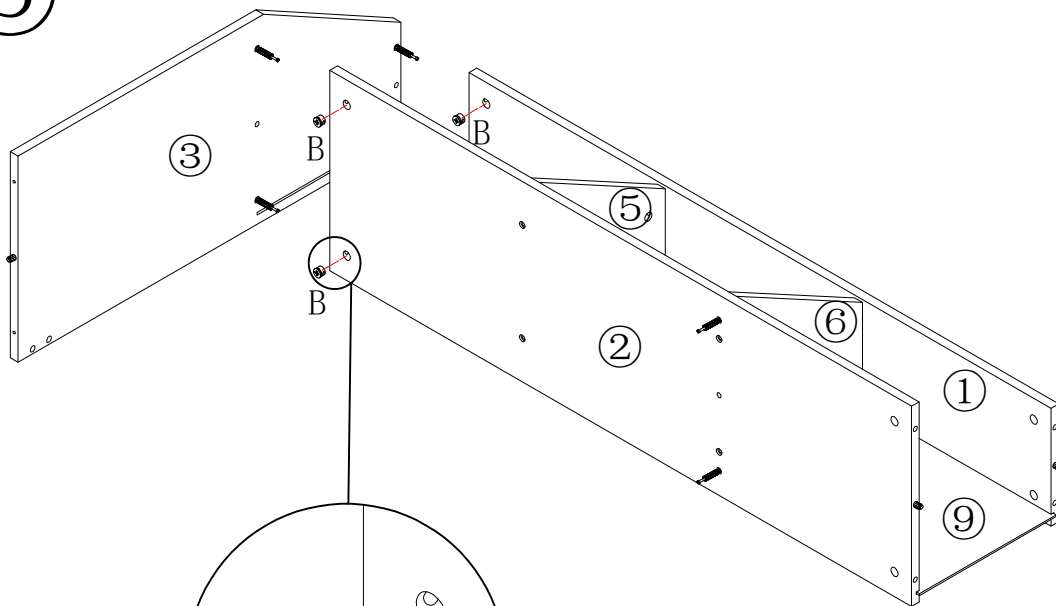


Make sure the arrow on the screw align to the hole on the side.

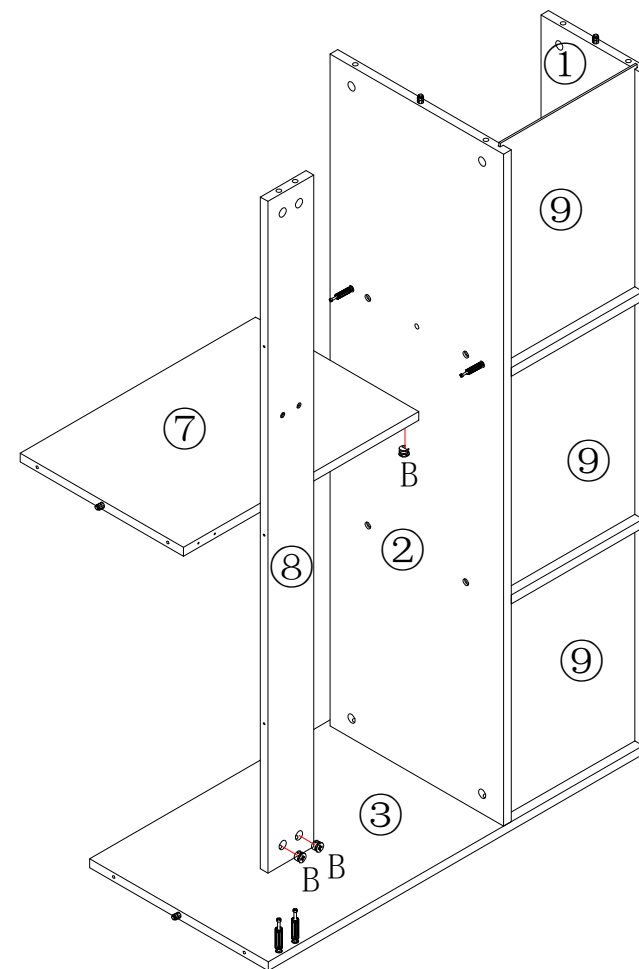




B*8

put B on board ①②⑦⑧

⑥

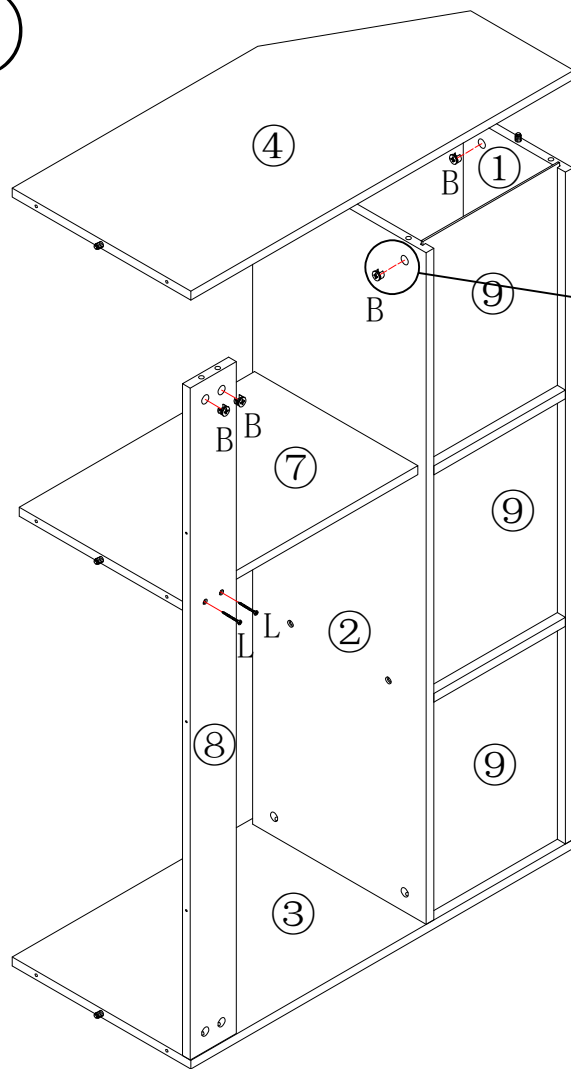




Make sure the arrow on the screw align to the hole on the side.

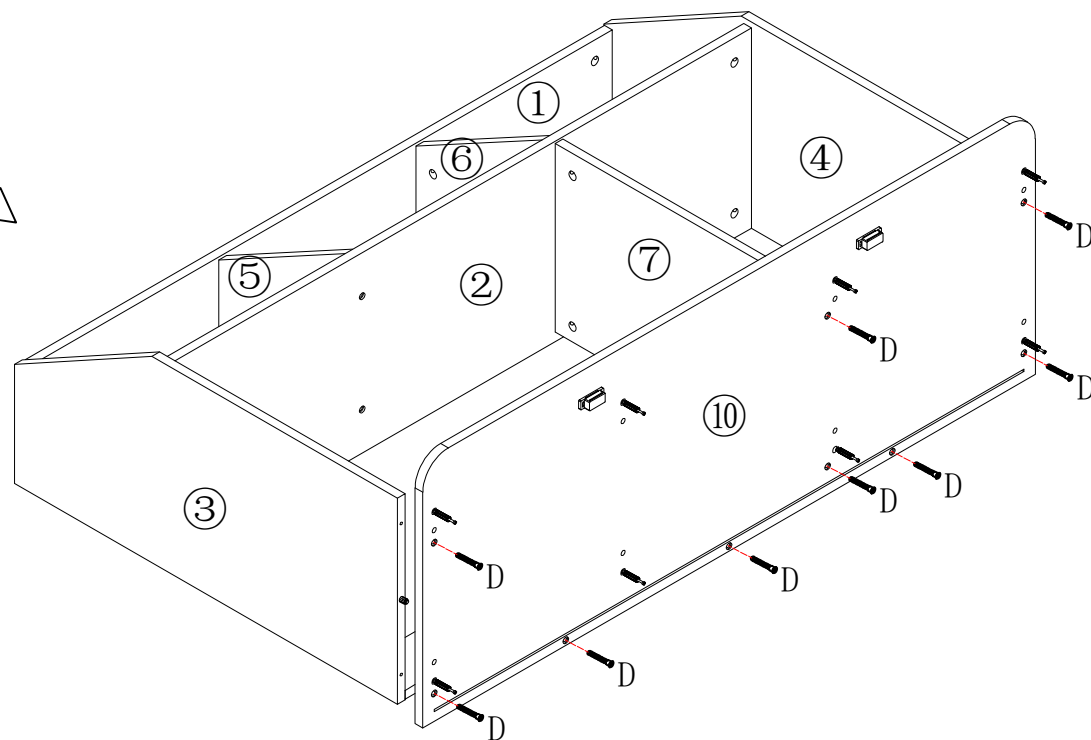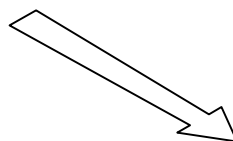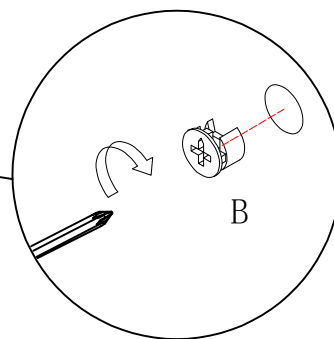

	B*6
	D*9
	L*2



put B on board ①②⑧

7

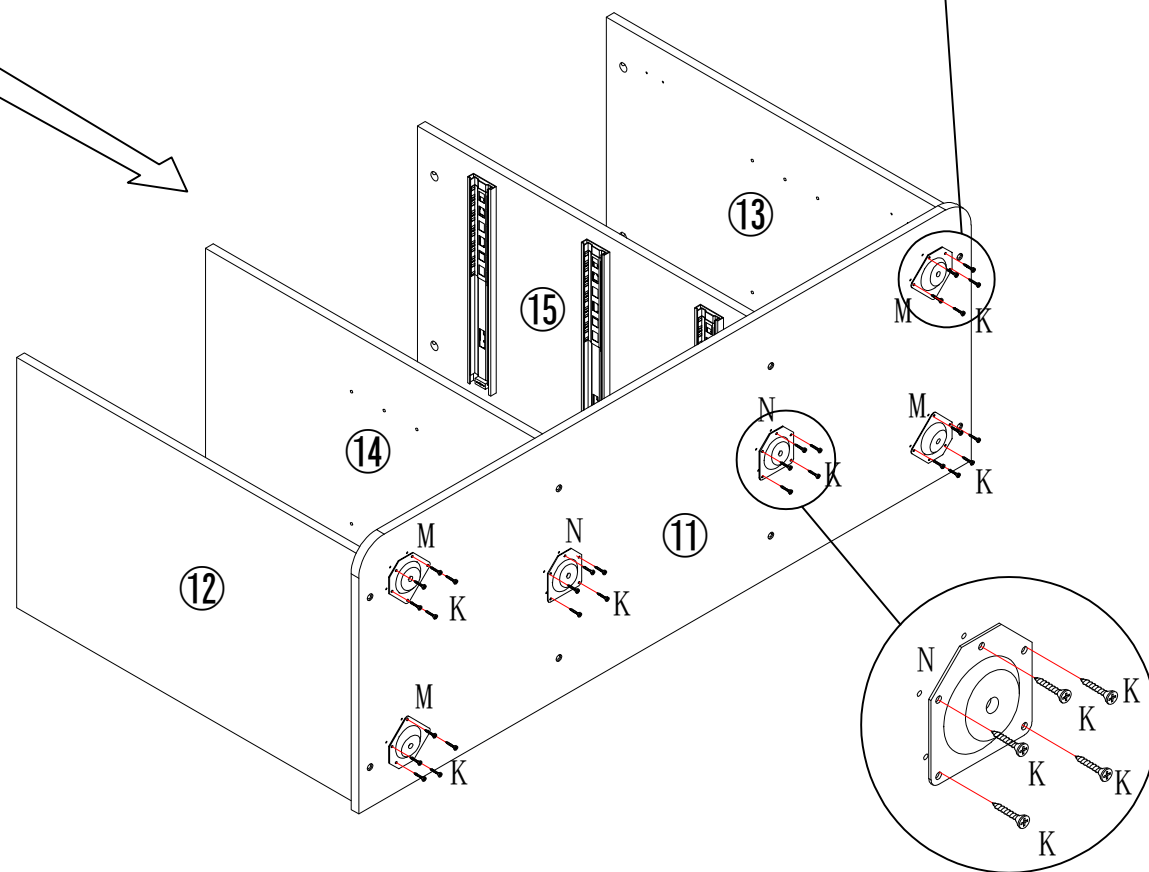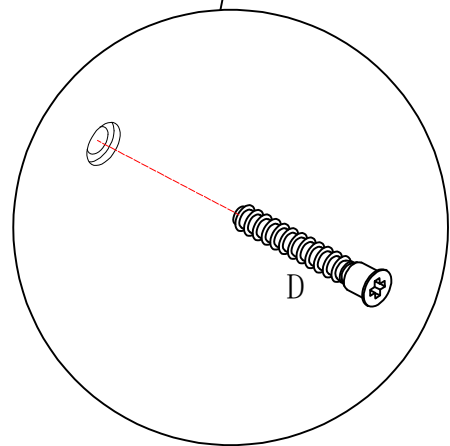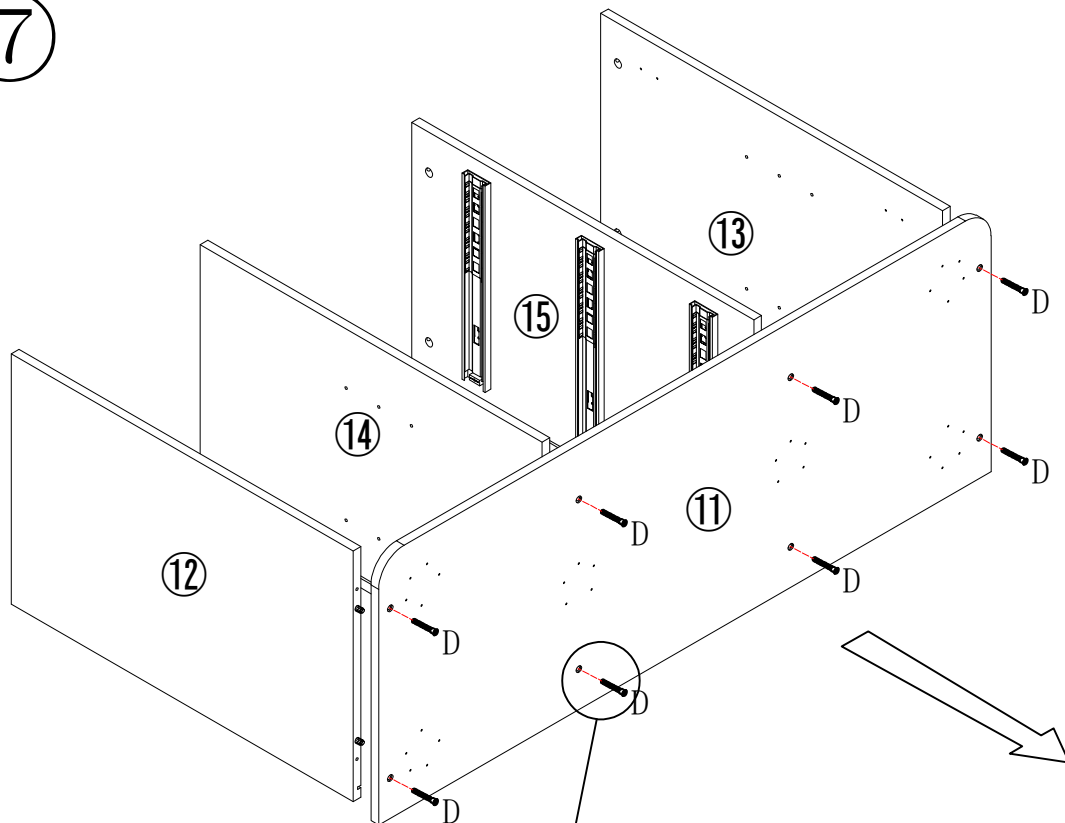


	D*8
	K*30
	M*4
	N*2

⑧

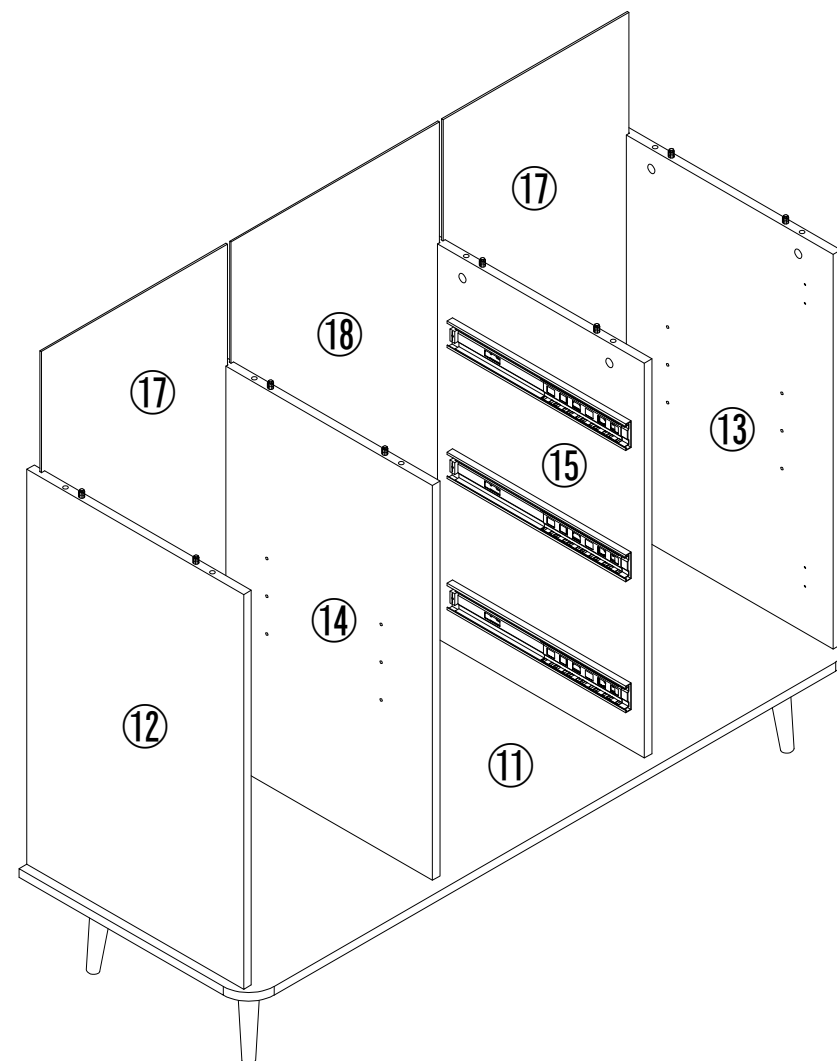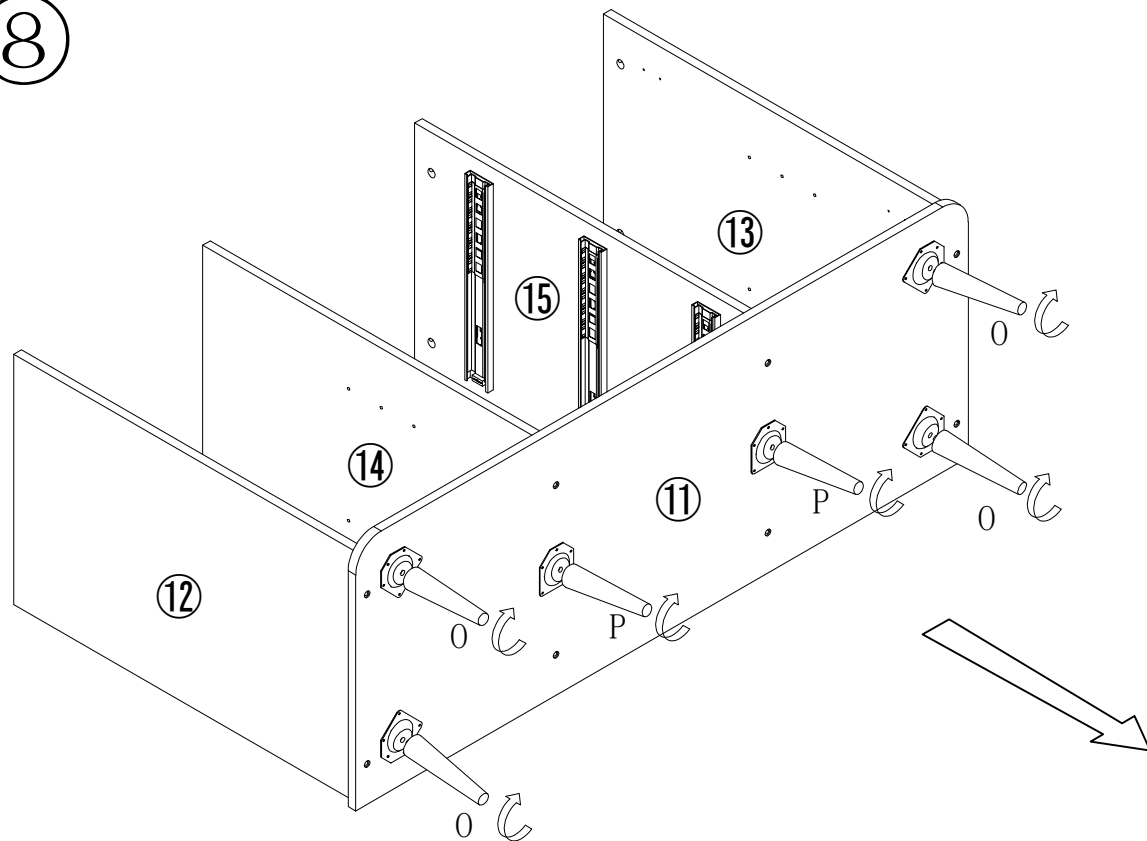


	0*4
	P*2

9

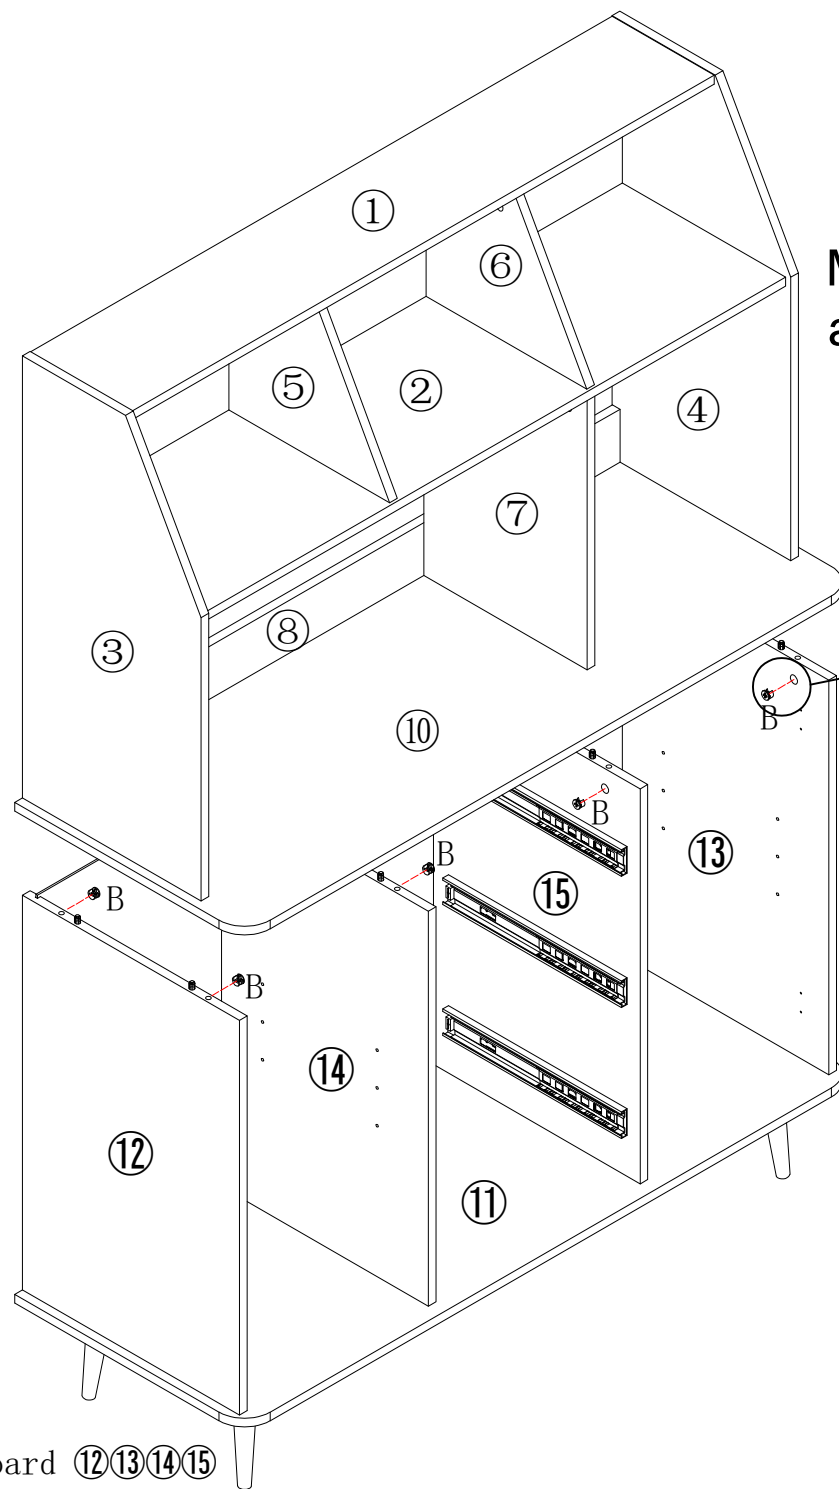



Make sure the arrow on the screw align to the hole on the side.

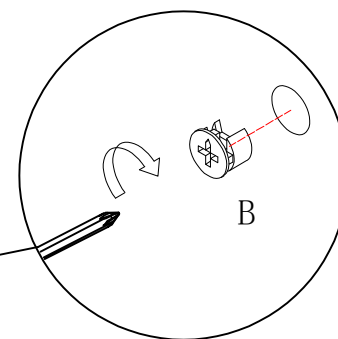

B*8

put B on board 12 13 14 15

10

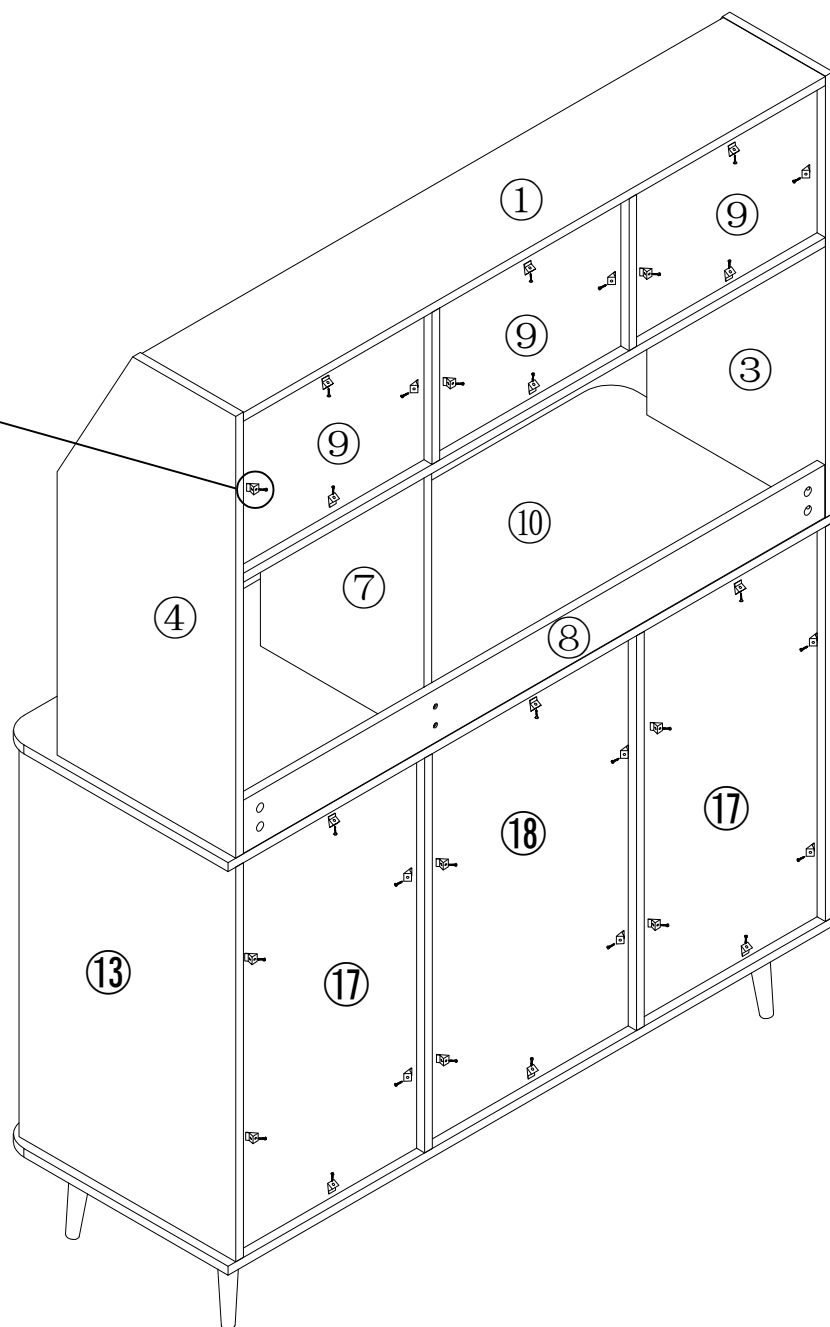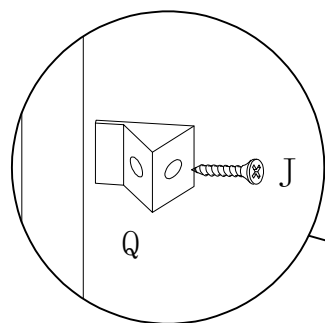


J*30




Q*30


11

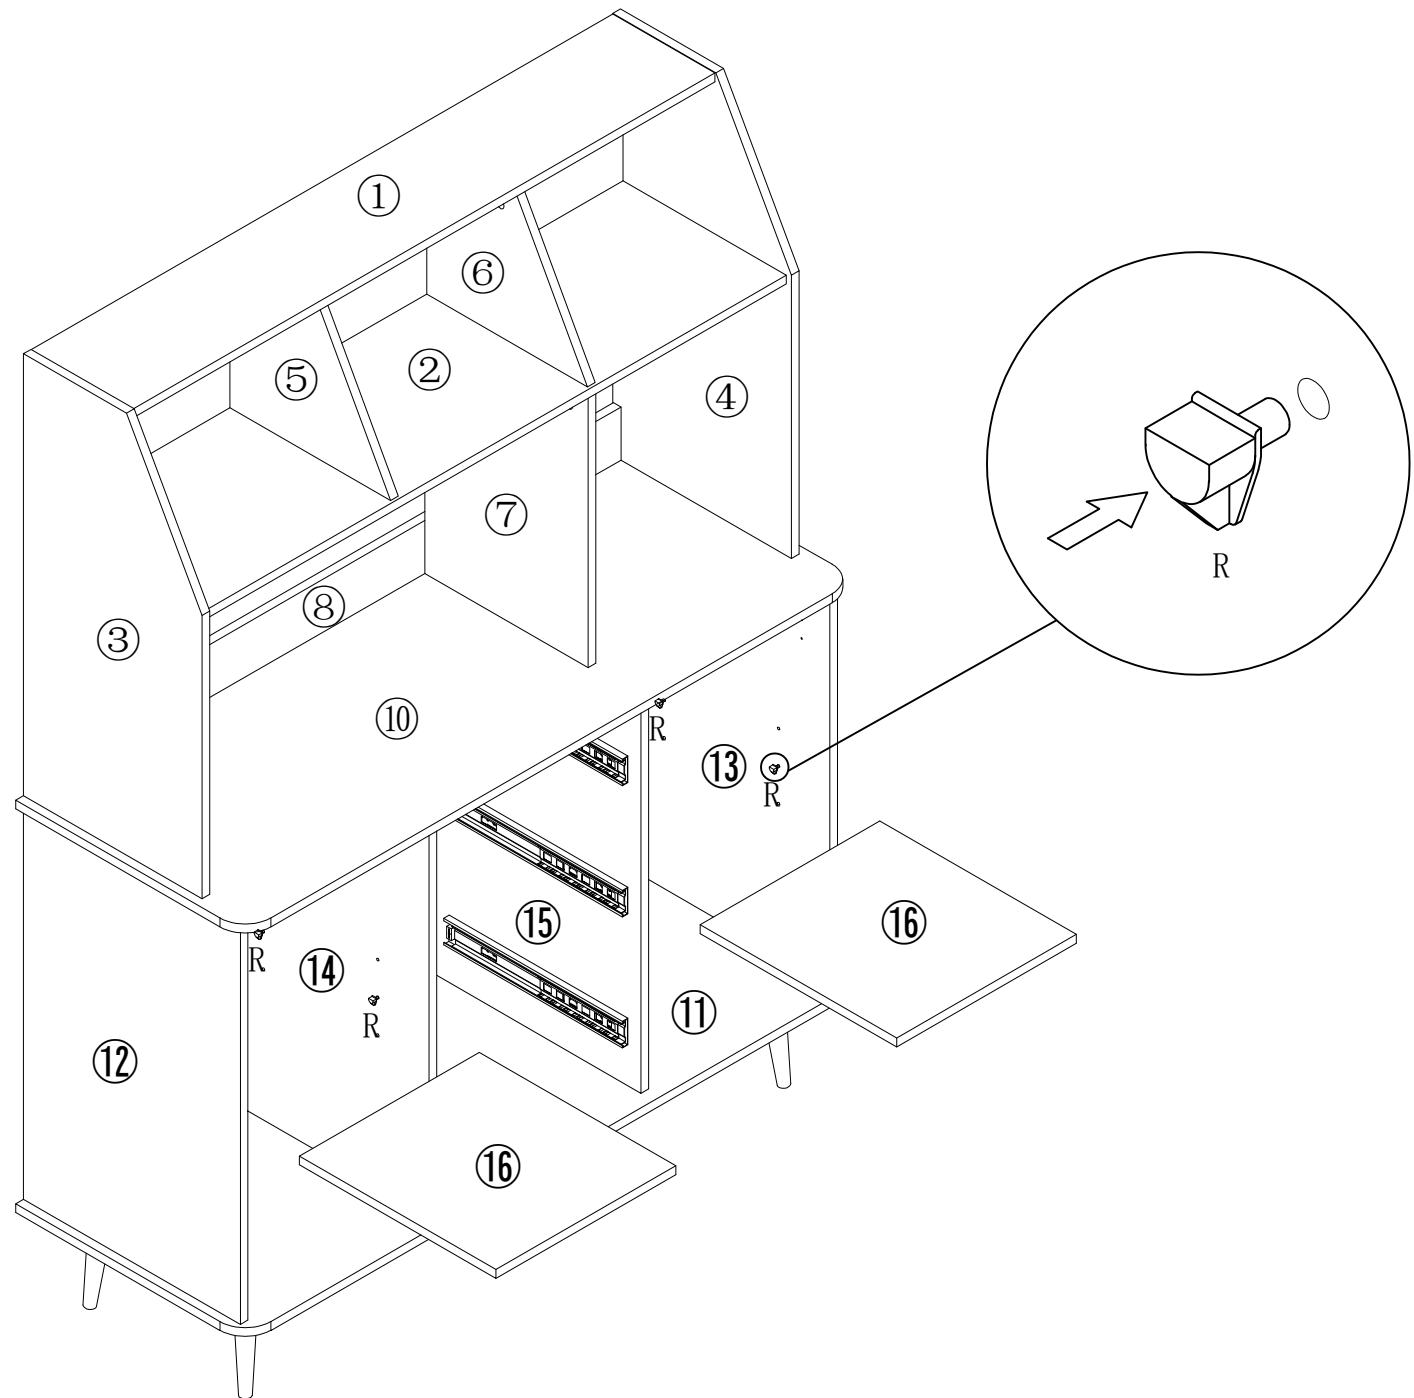


R*8

12







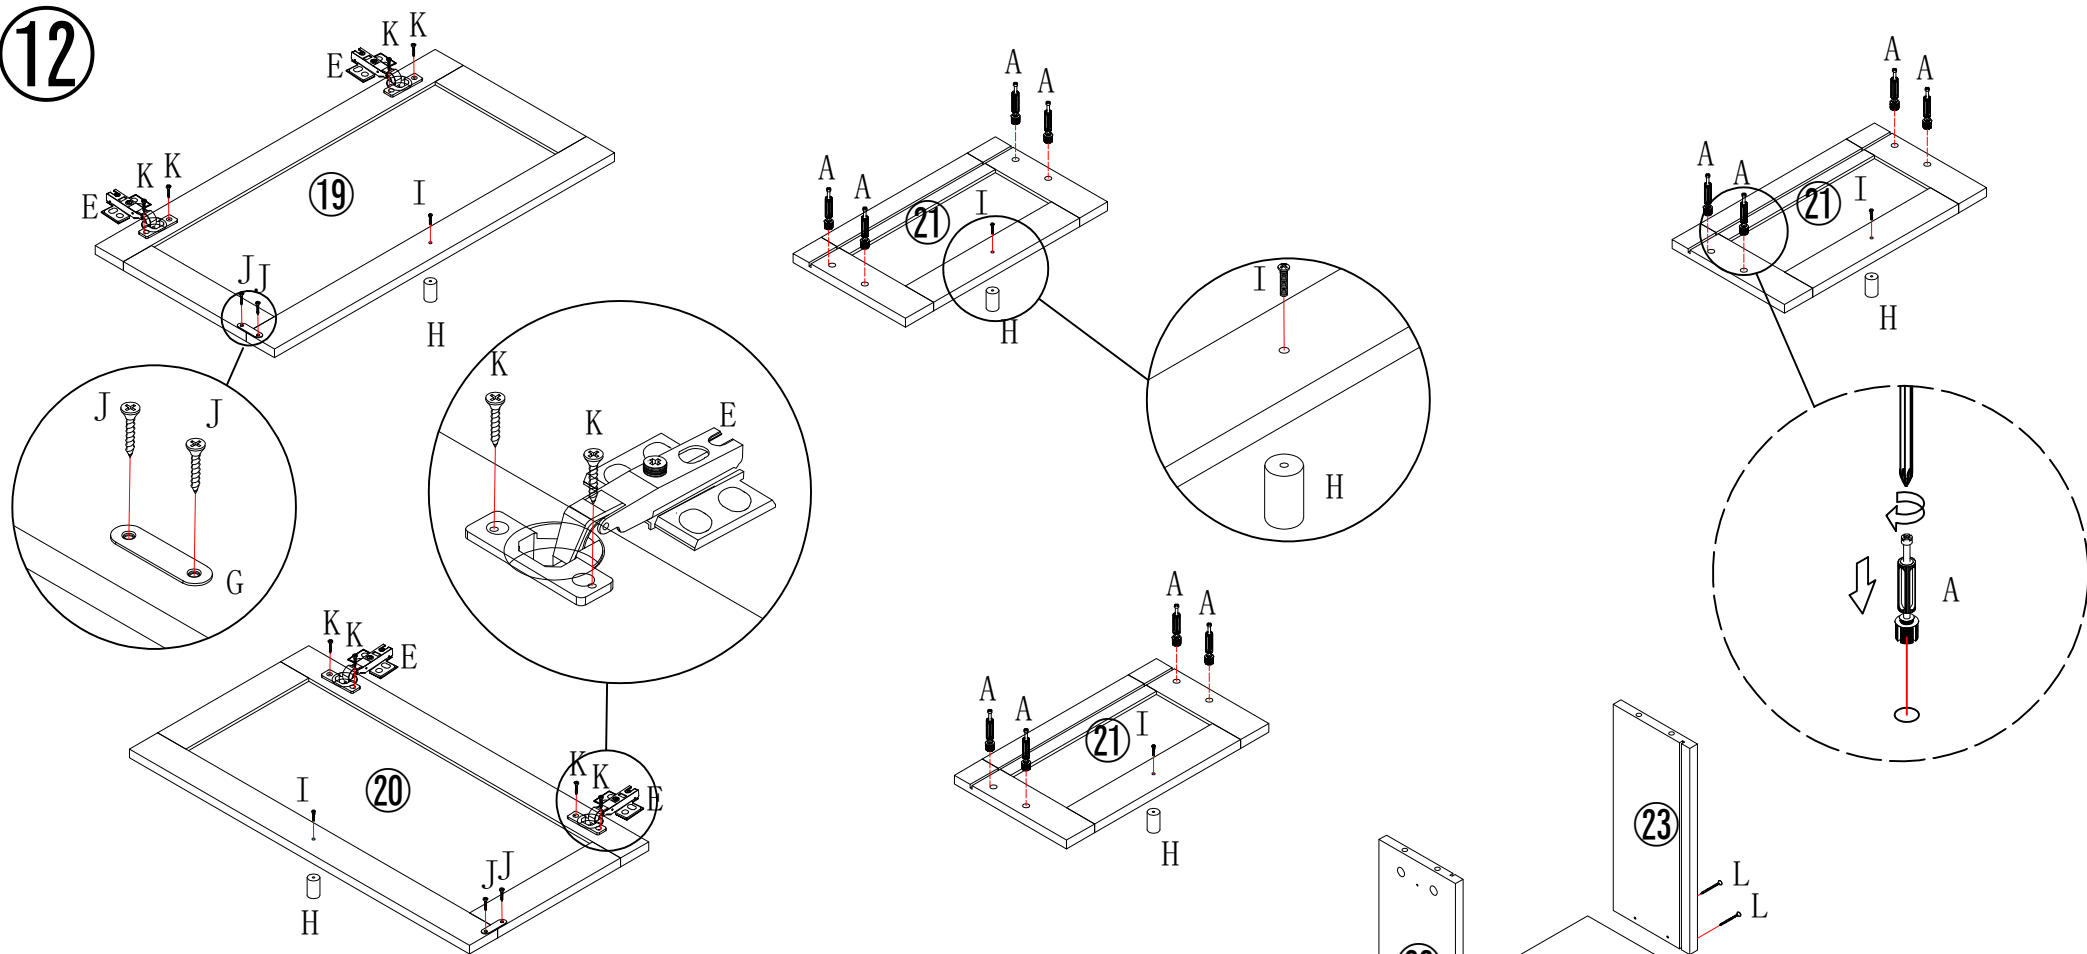


	A*12
	E*4
	G*2
	H*5
	I*5
	J*4
	K*8
	L*12

put A on board ②1

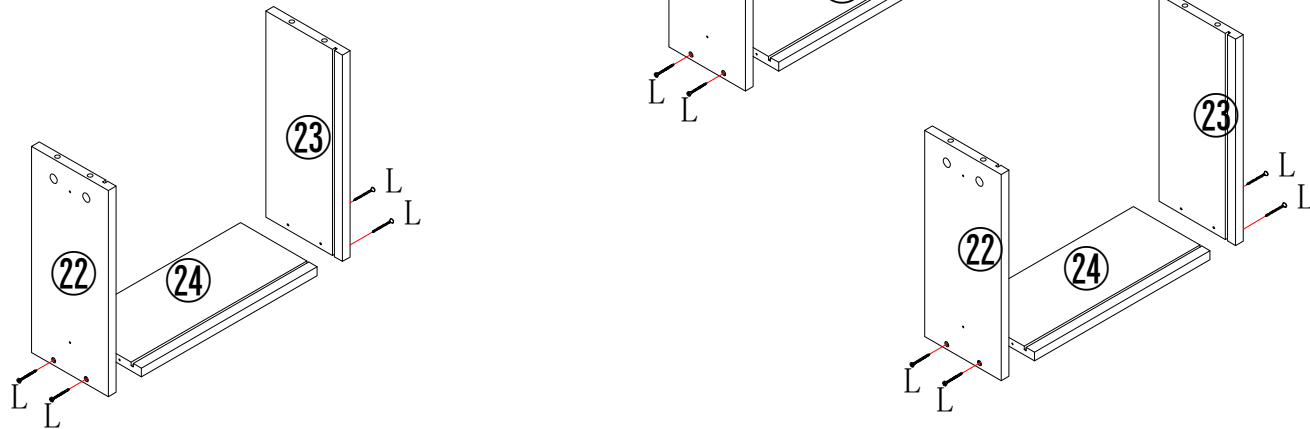

13

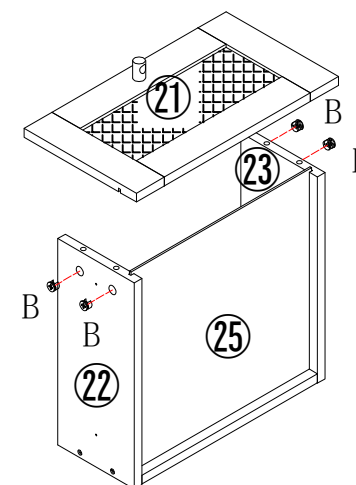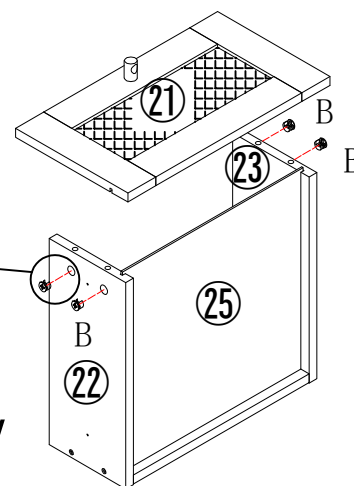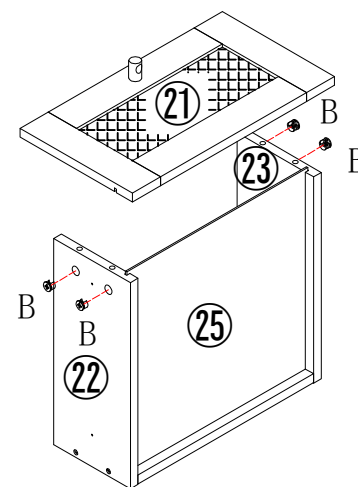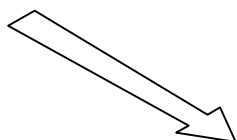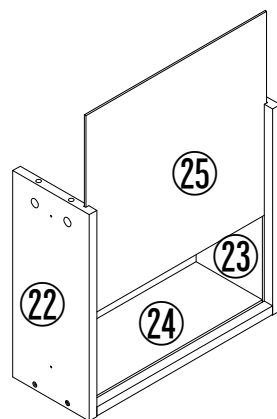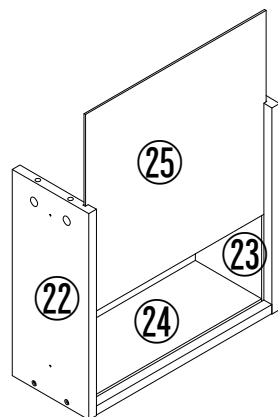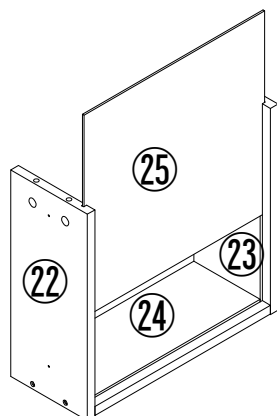





Make sure the arrow on the screw align to the hole on the side.



B*12

put B on board 22/23

14

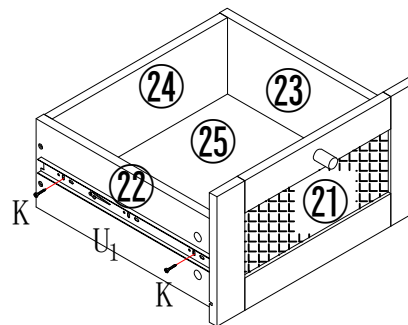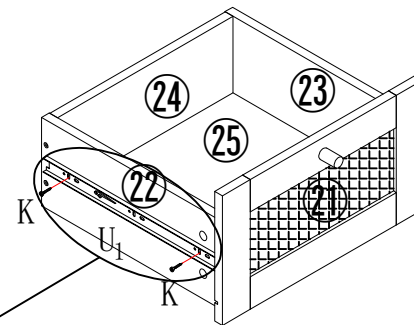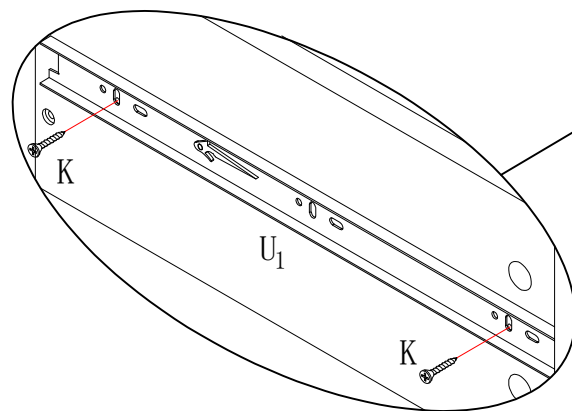
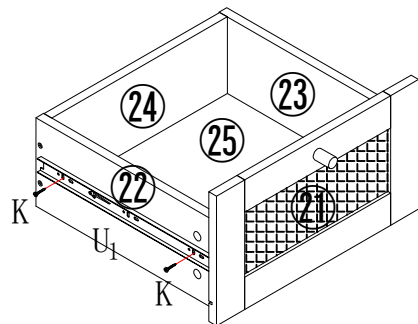


K*12






U₂*6

15

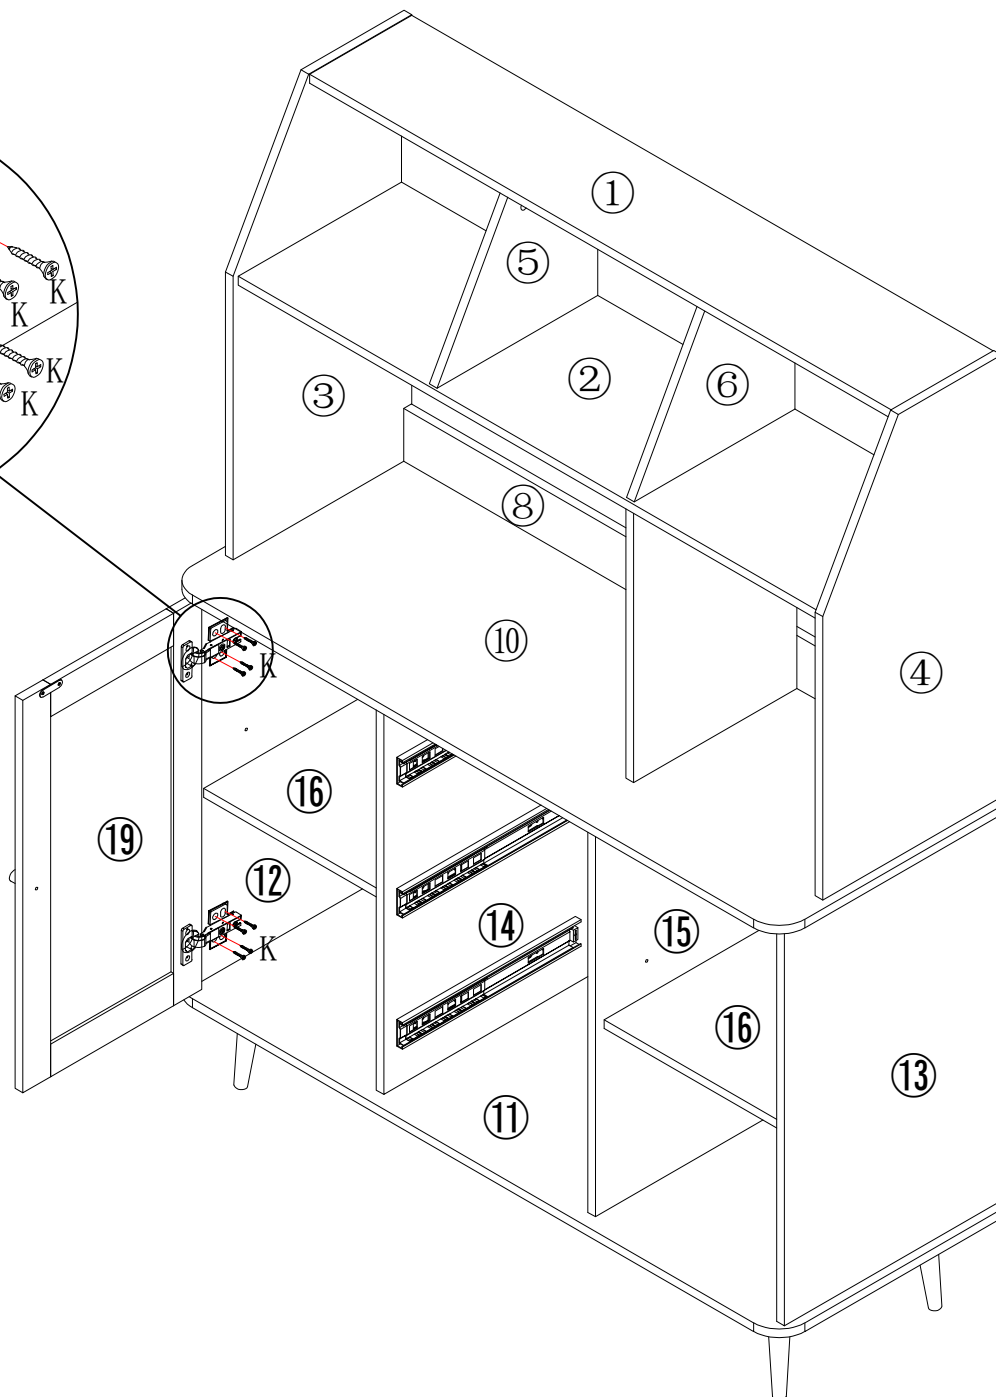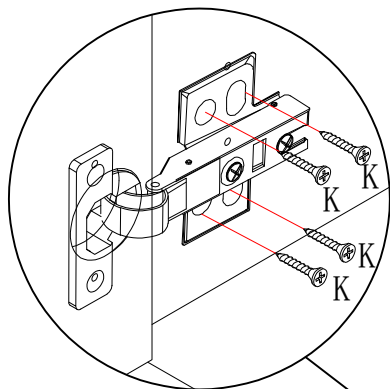


K*8

16

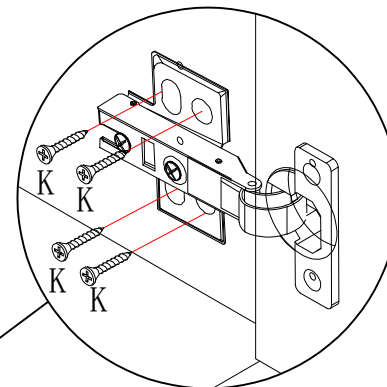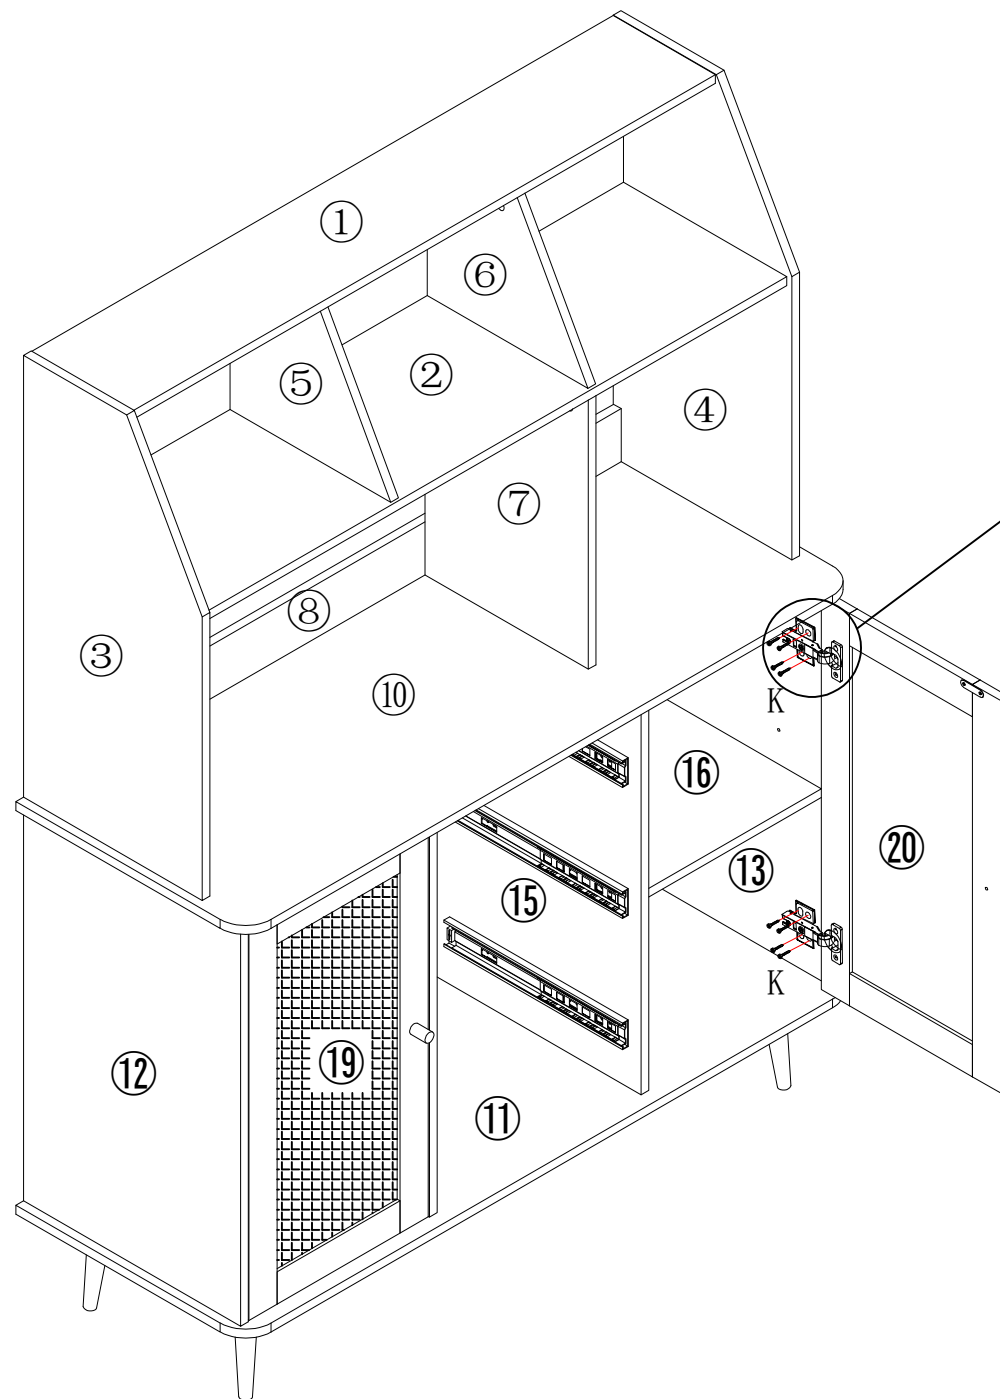



K*8

17

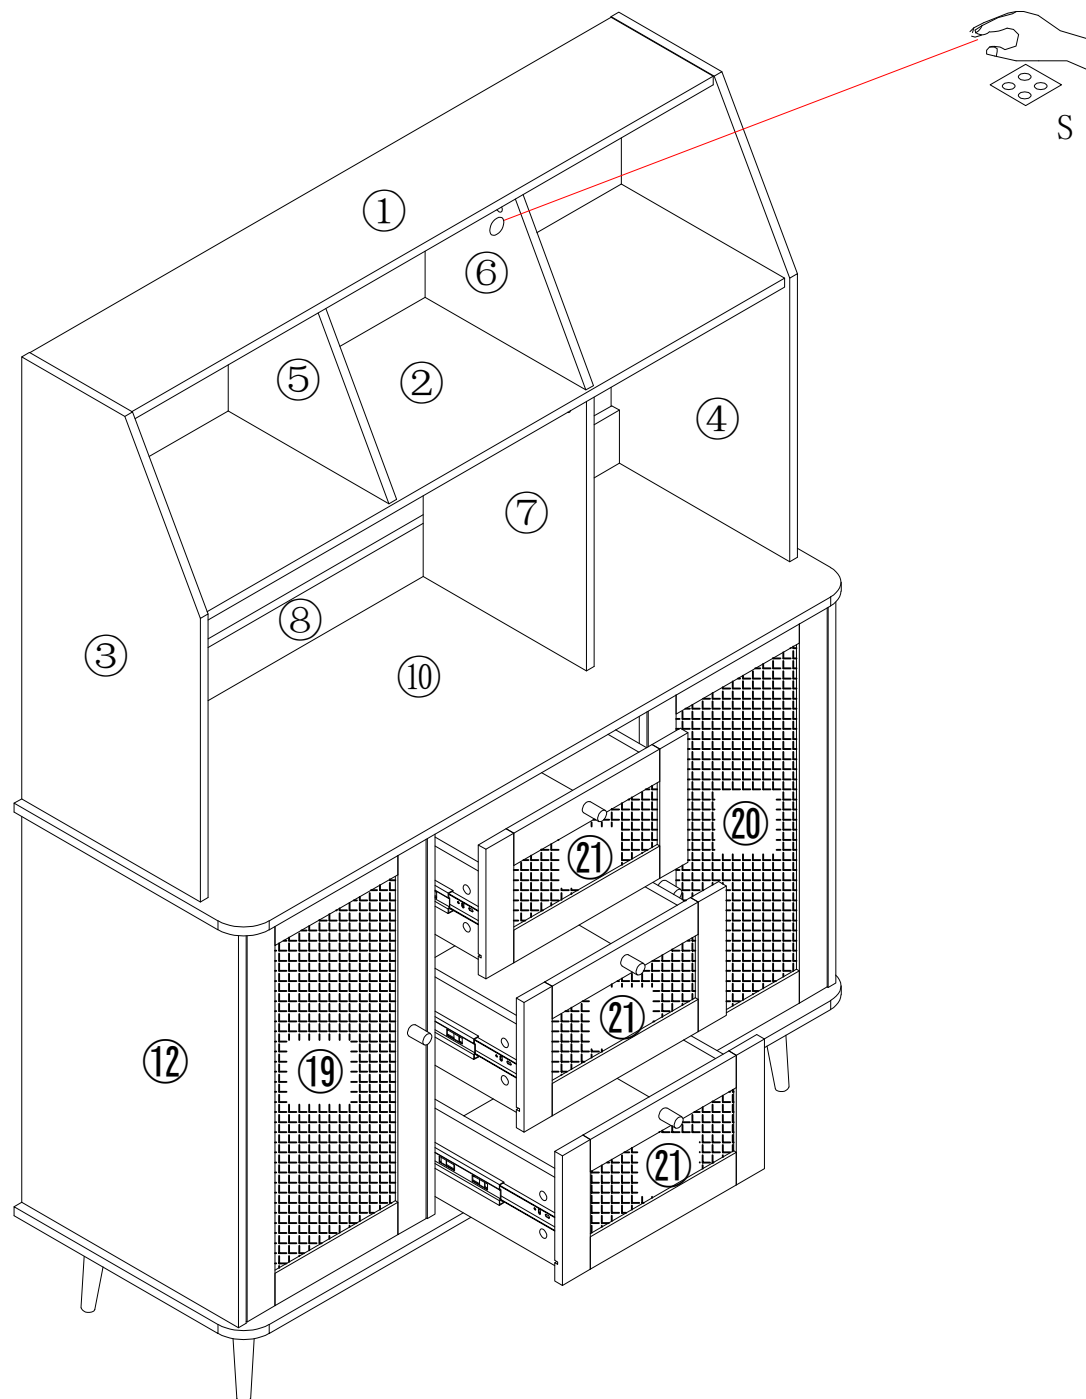

S*14

18

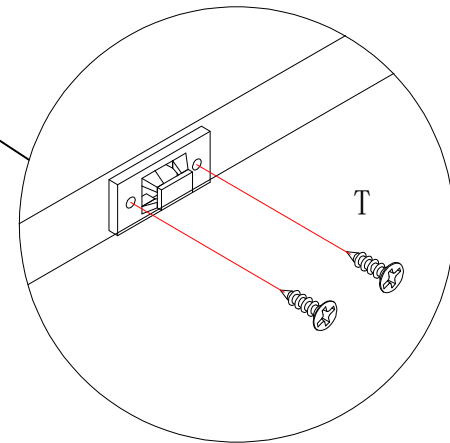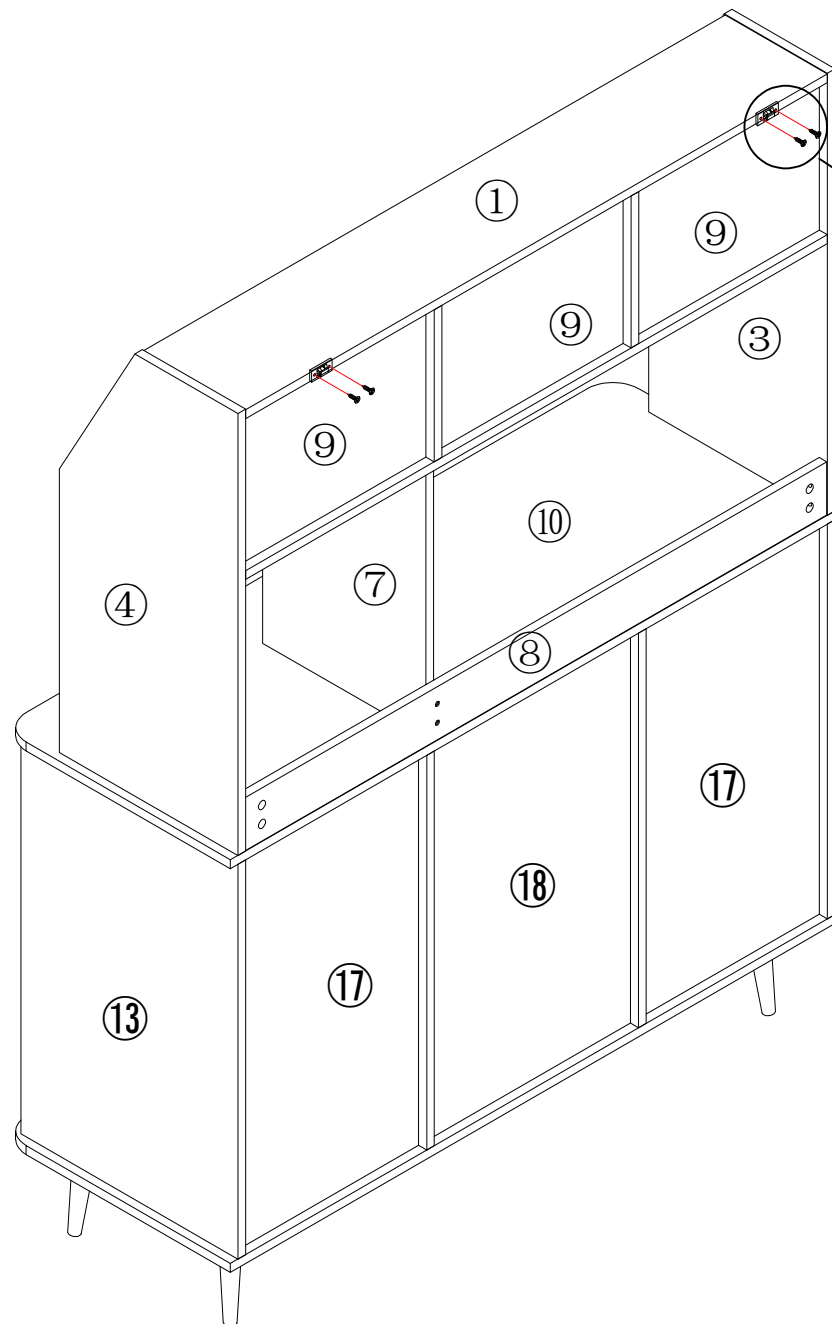

T*2

19

