
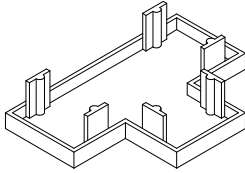
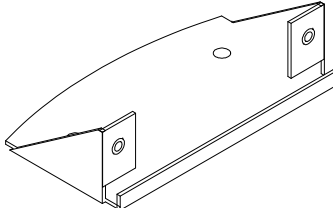
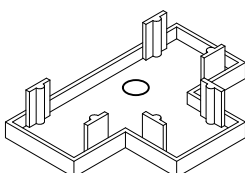

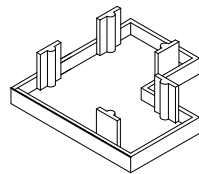

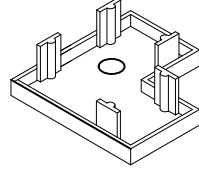
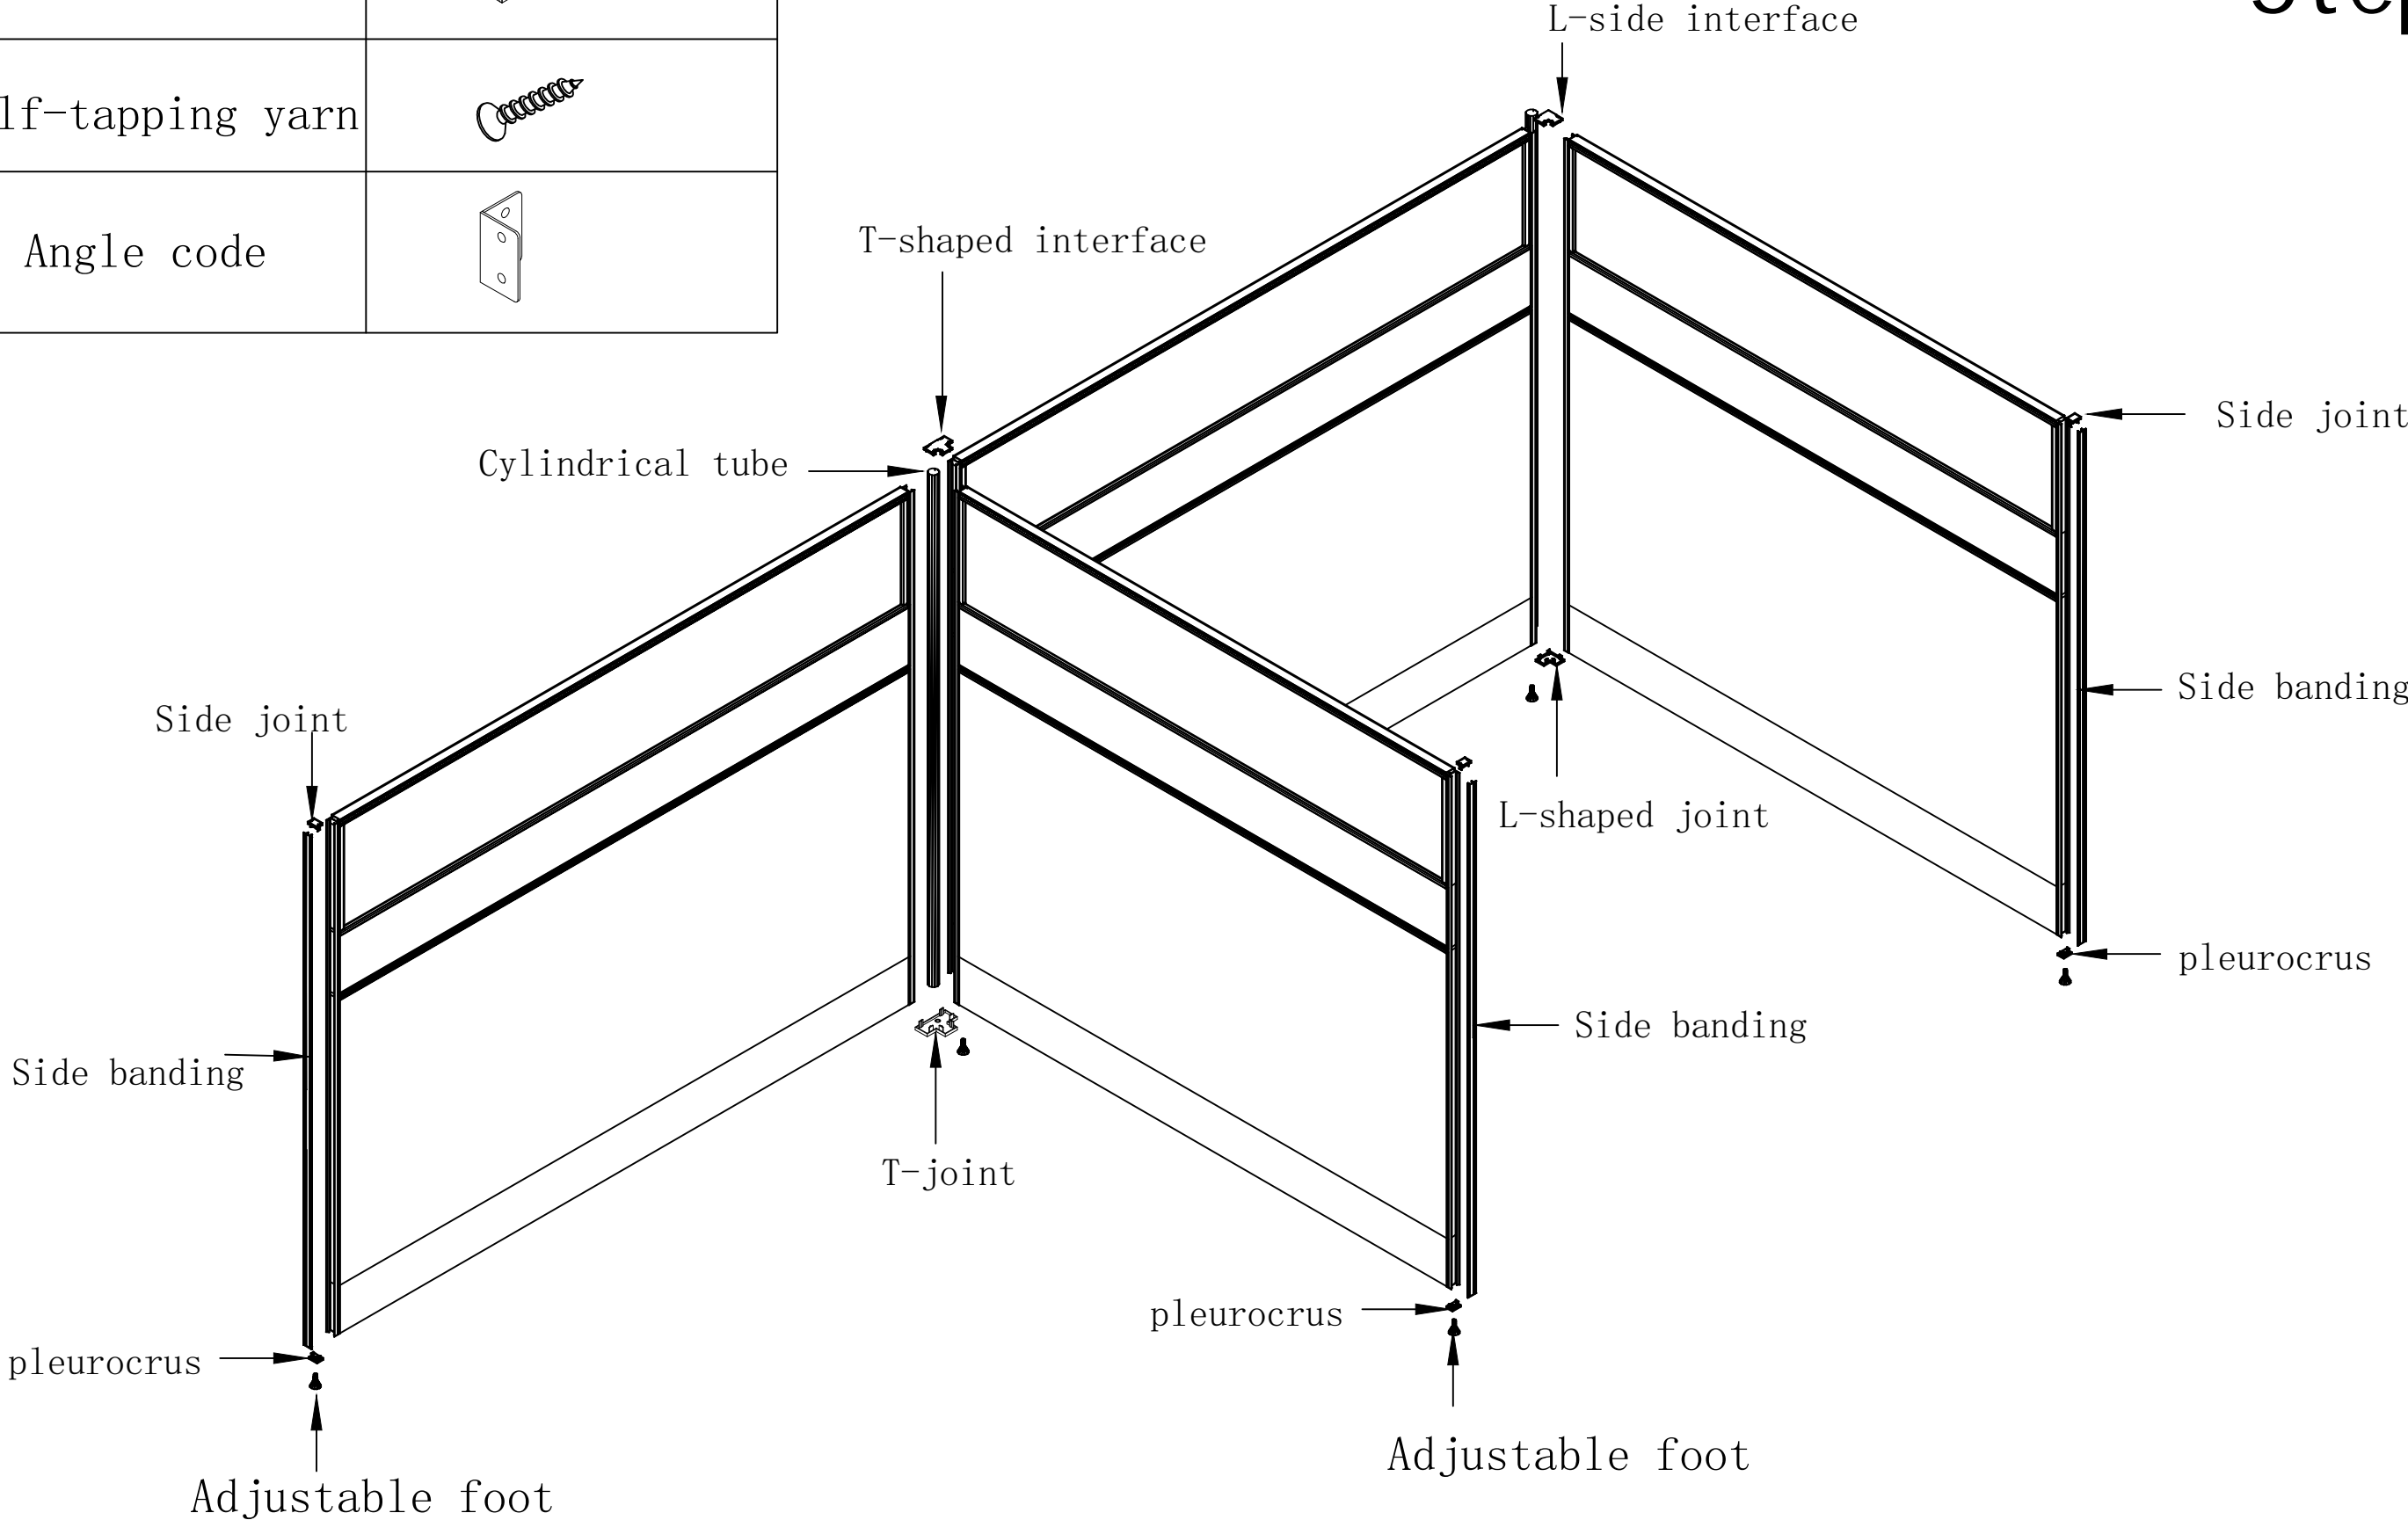
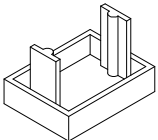
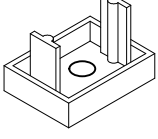
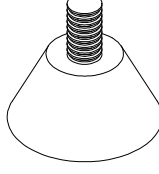
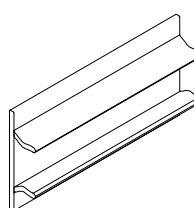
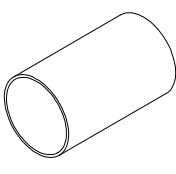


Installation guide

T-shaped interface		corbel	
T-joint		Self-tapping yarn	
L-side interface		Angle code	
L-shaped joint		<div>Step 1</div> 	
Side joint			
pleurocrus			
Adjustable foot			
Side banding			
Cylindrical tube			


Step 2

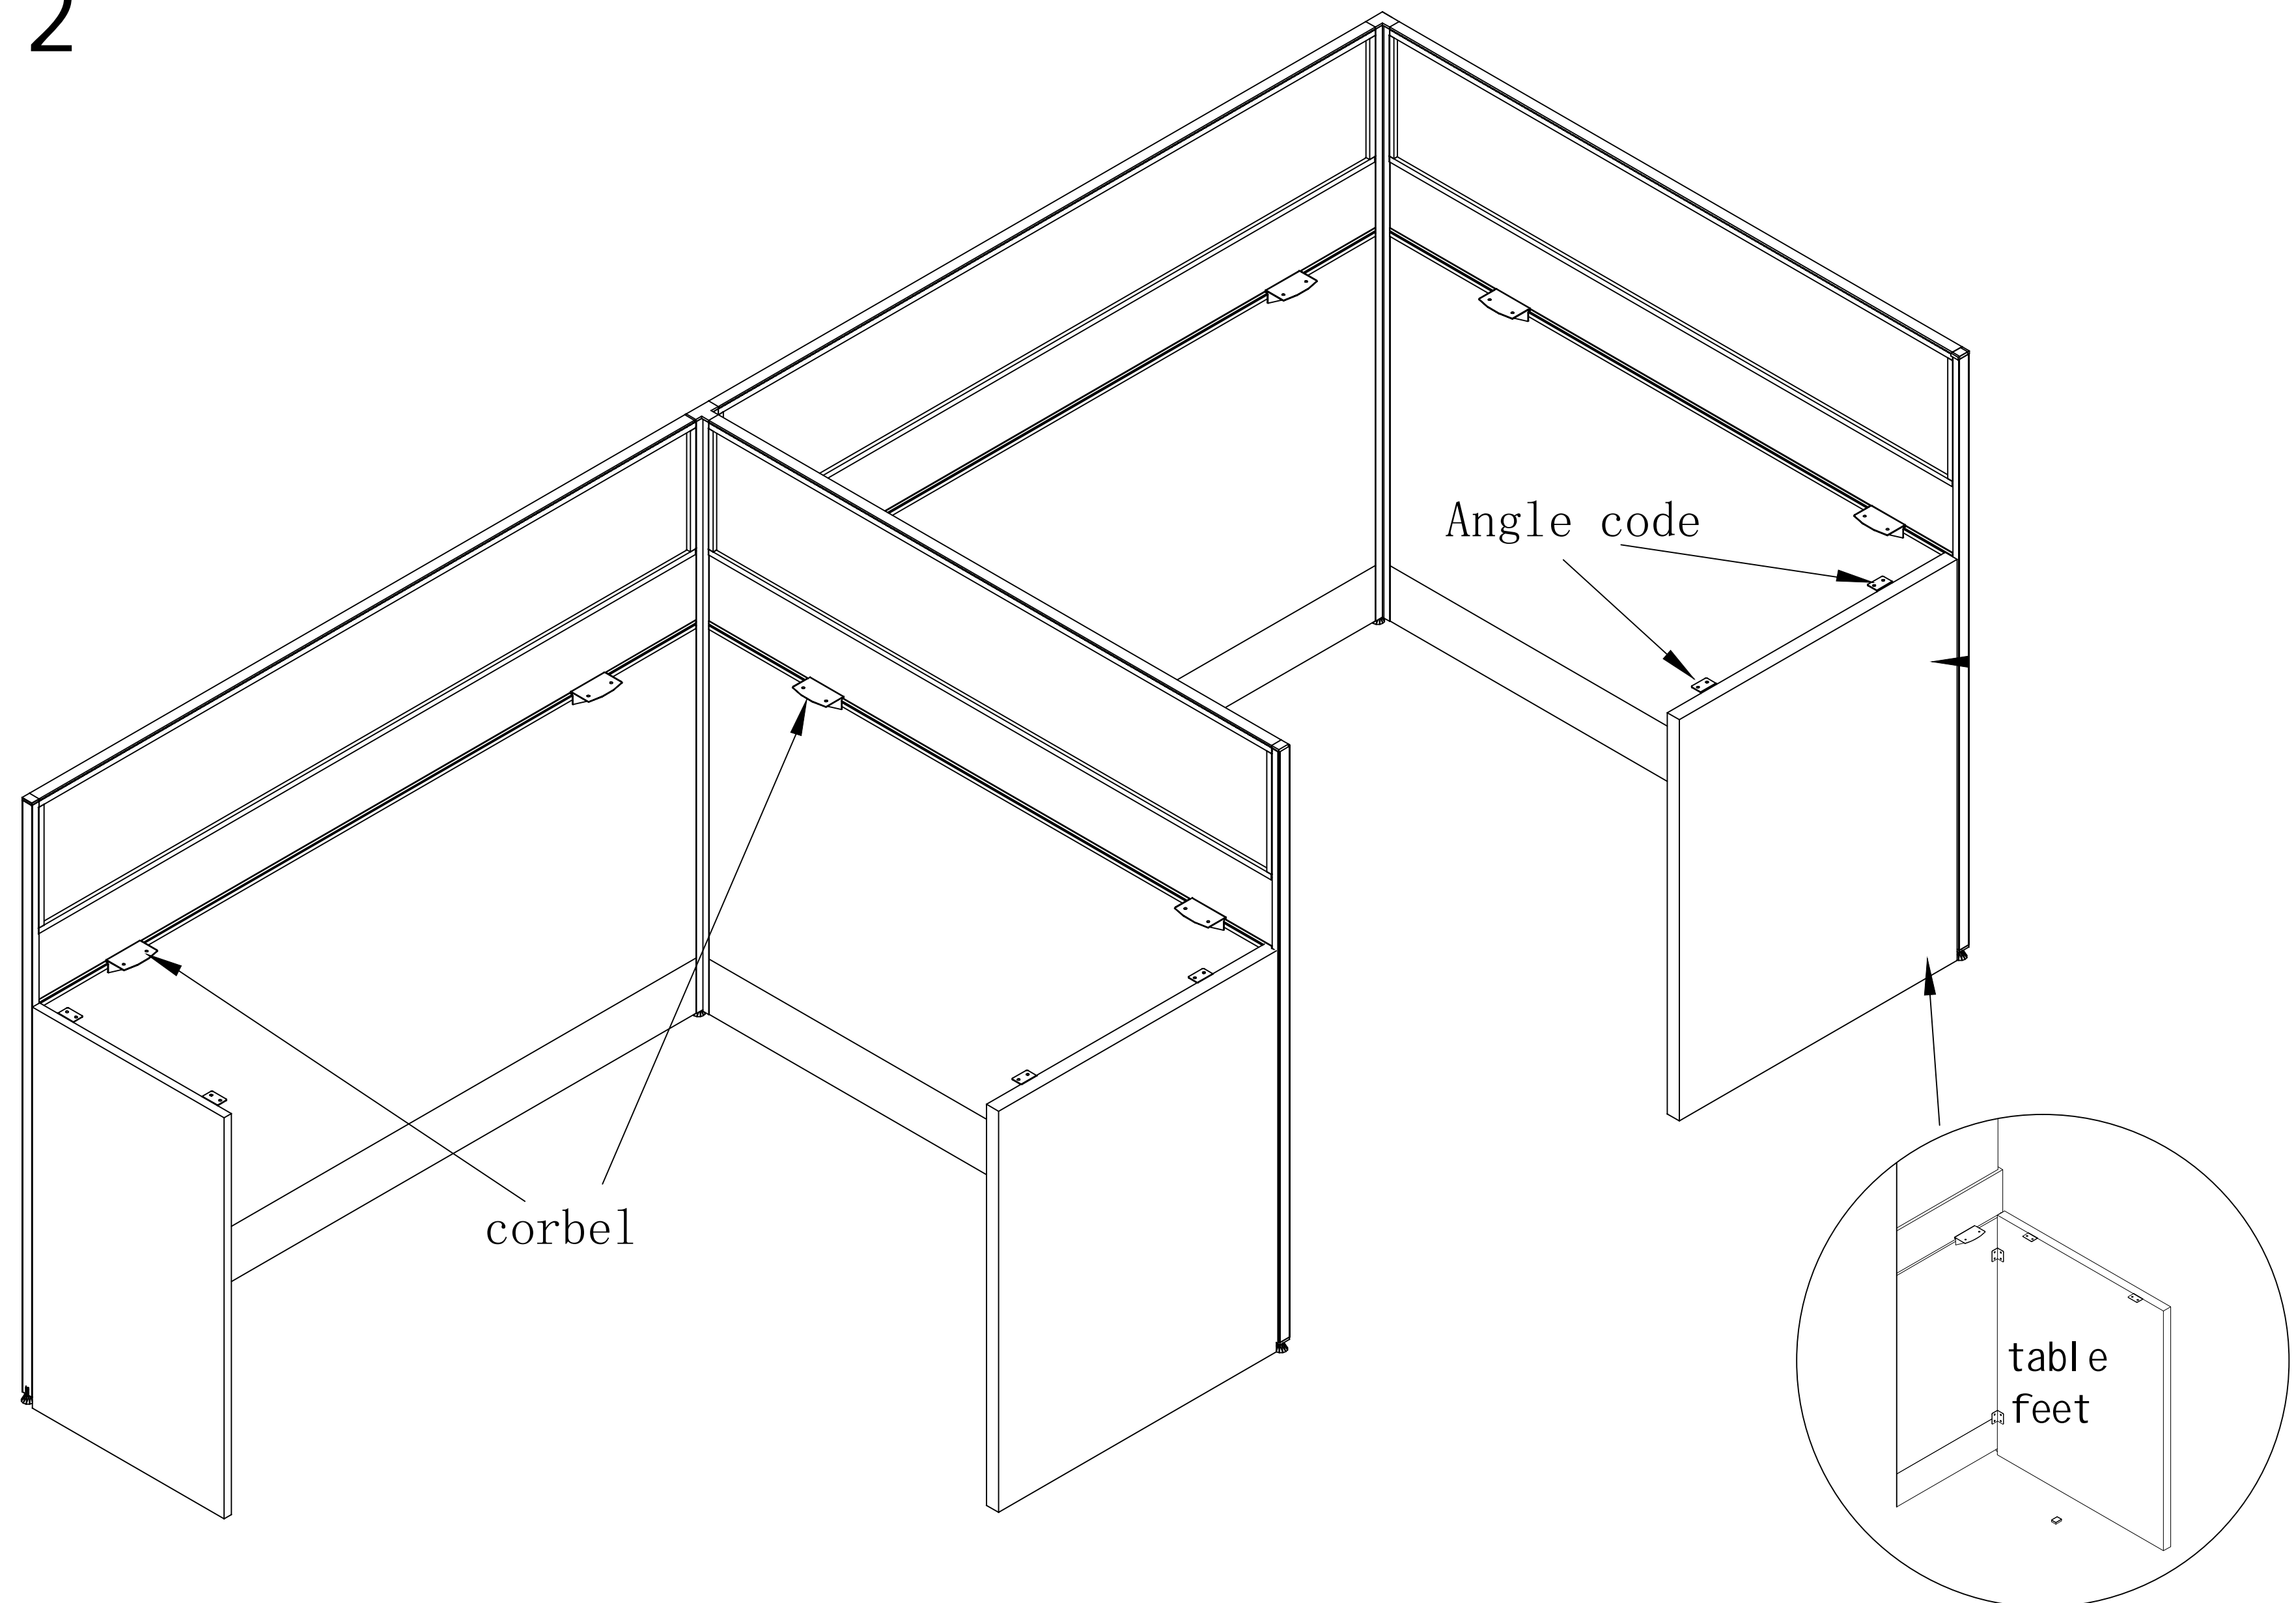

1:
Corner code fixing table feet on the screen plate.

2:
The bracket arm is adjusted and fixed on the screen plate with self-tapping.

Step 3

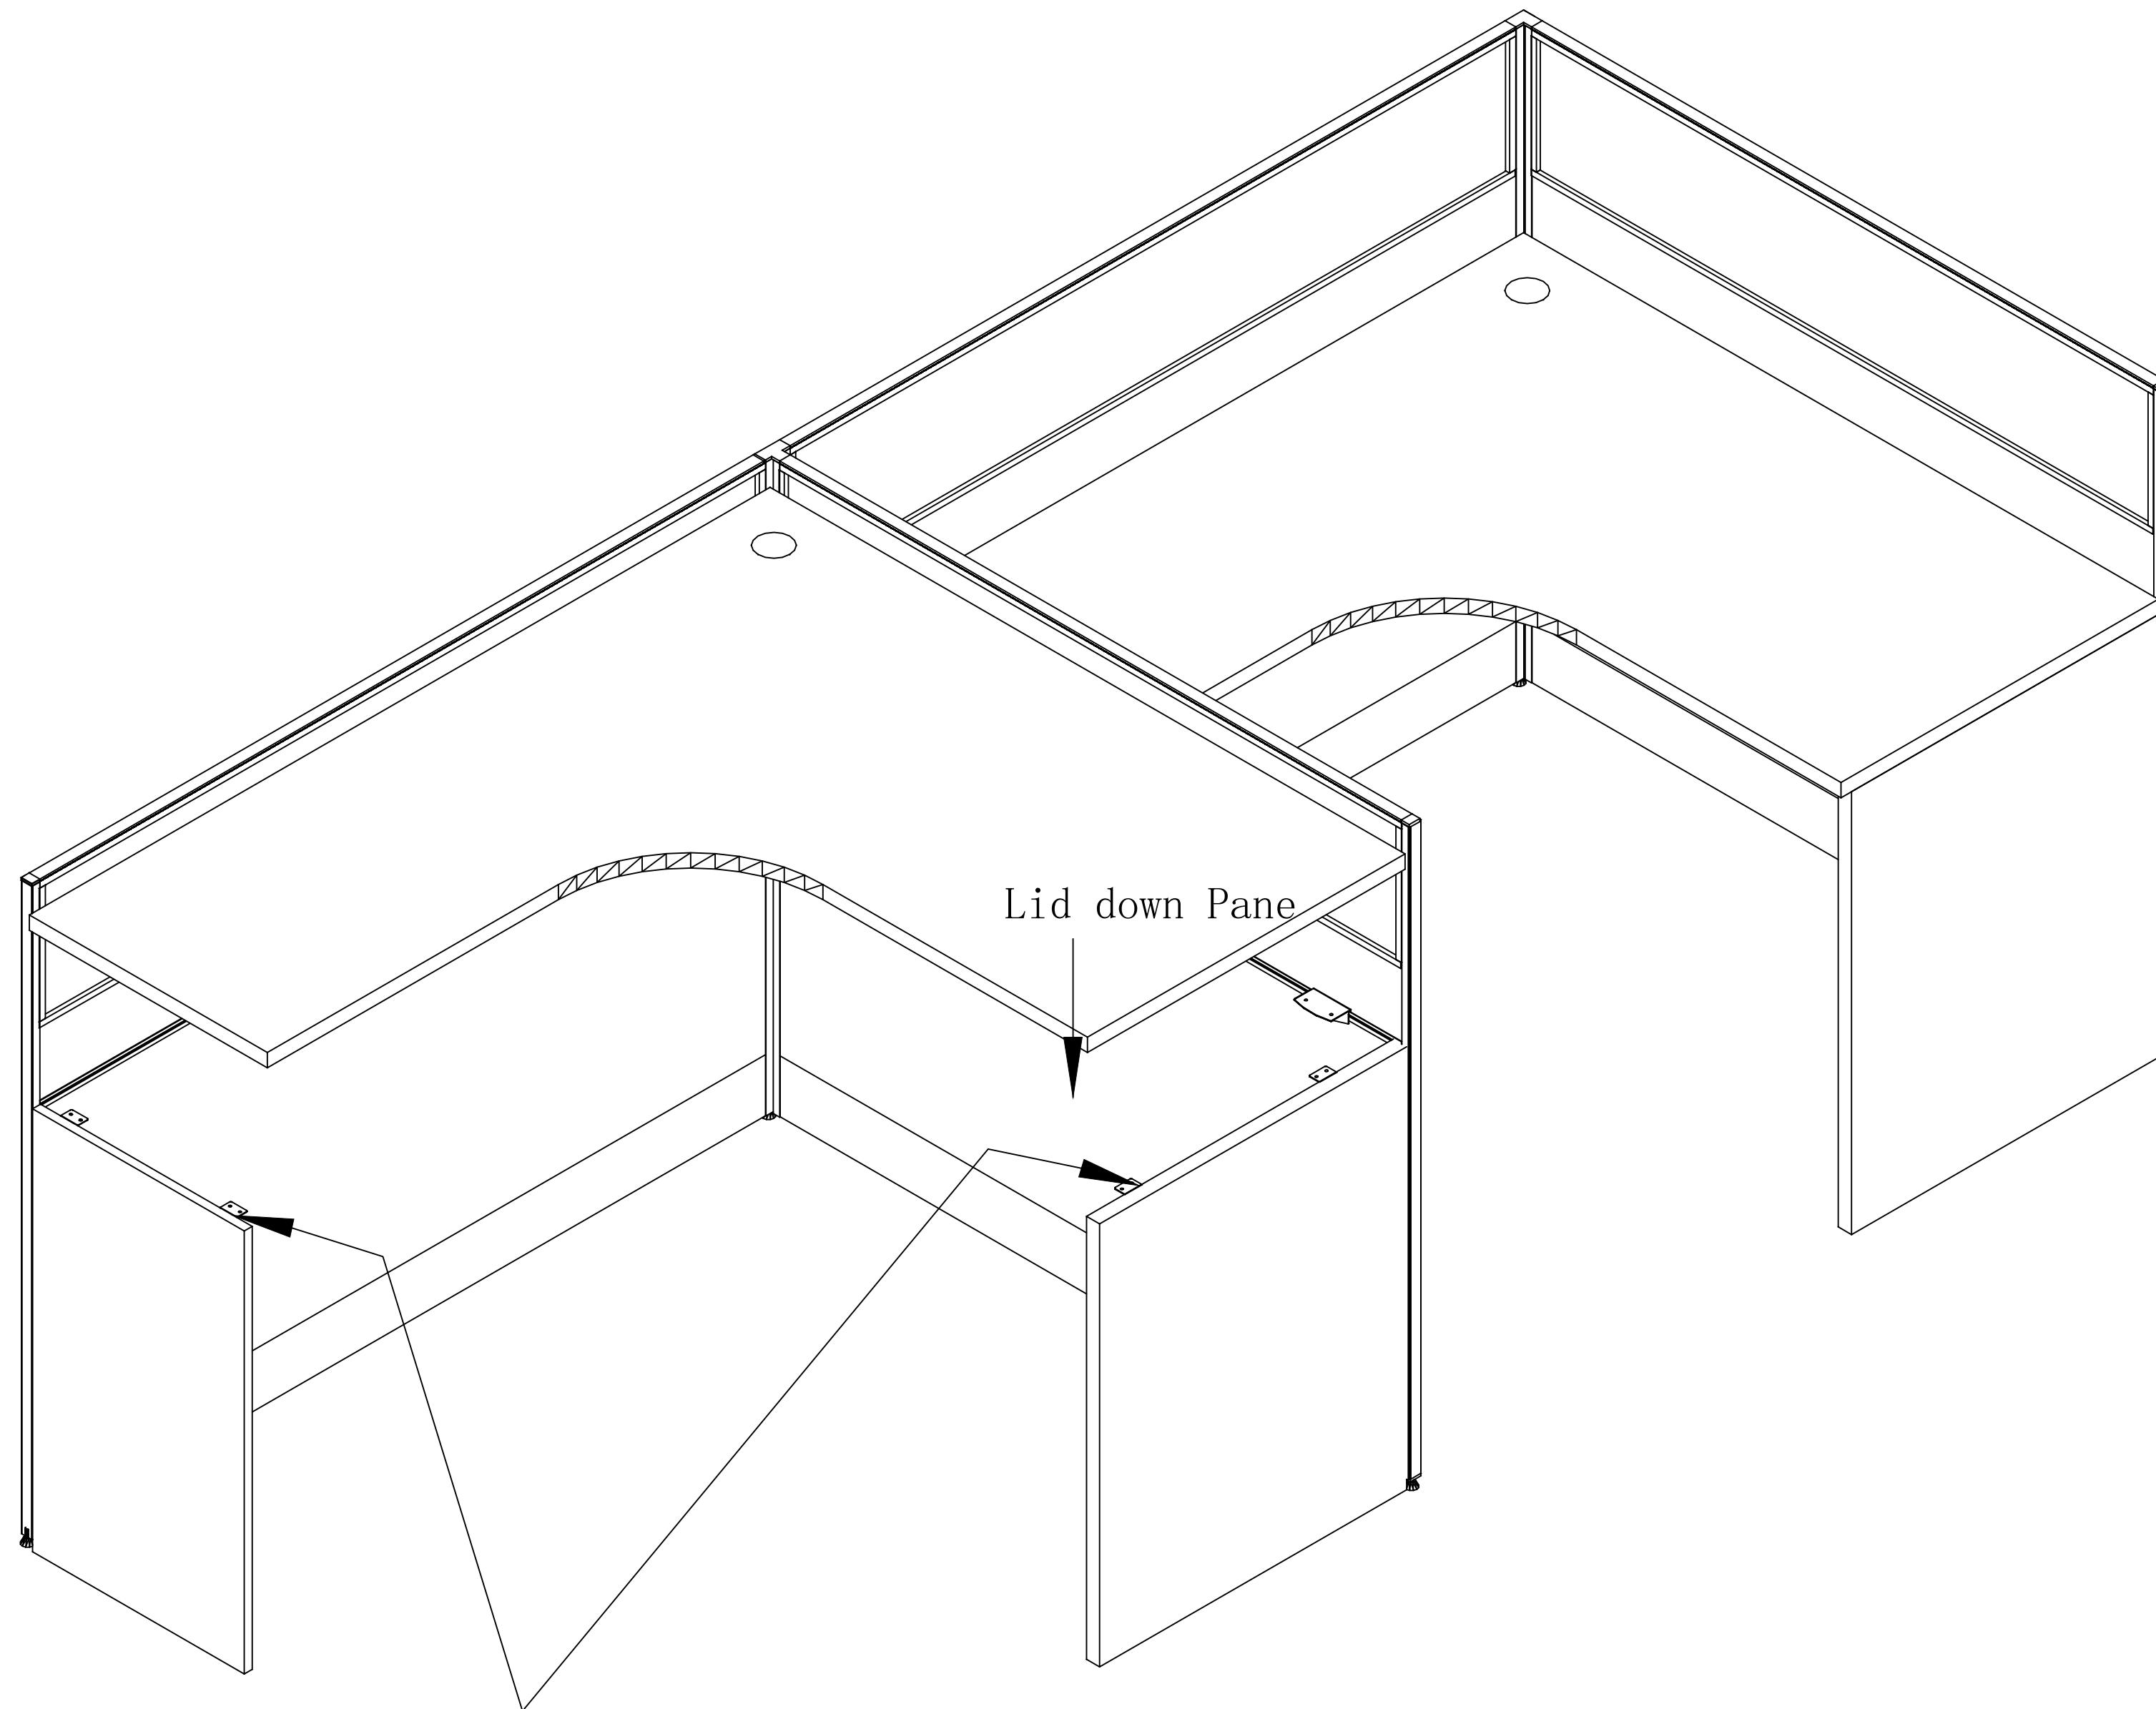

Then cover the table panel and self-tapping screws
to lock the countertop.