

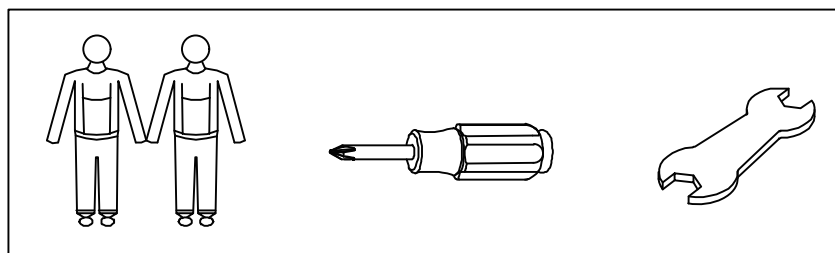



# Coat Rack

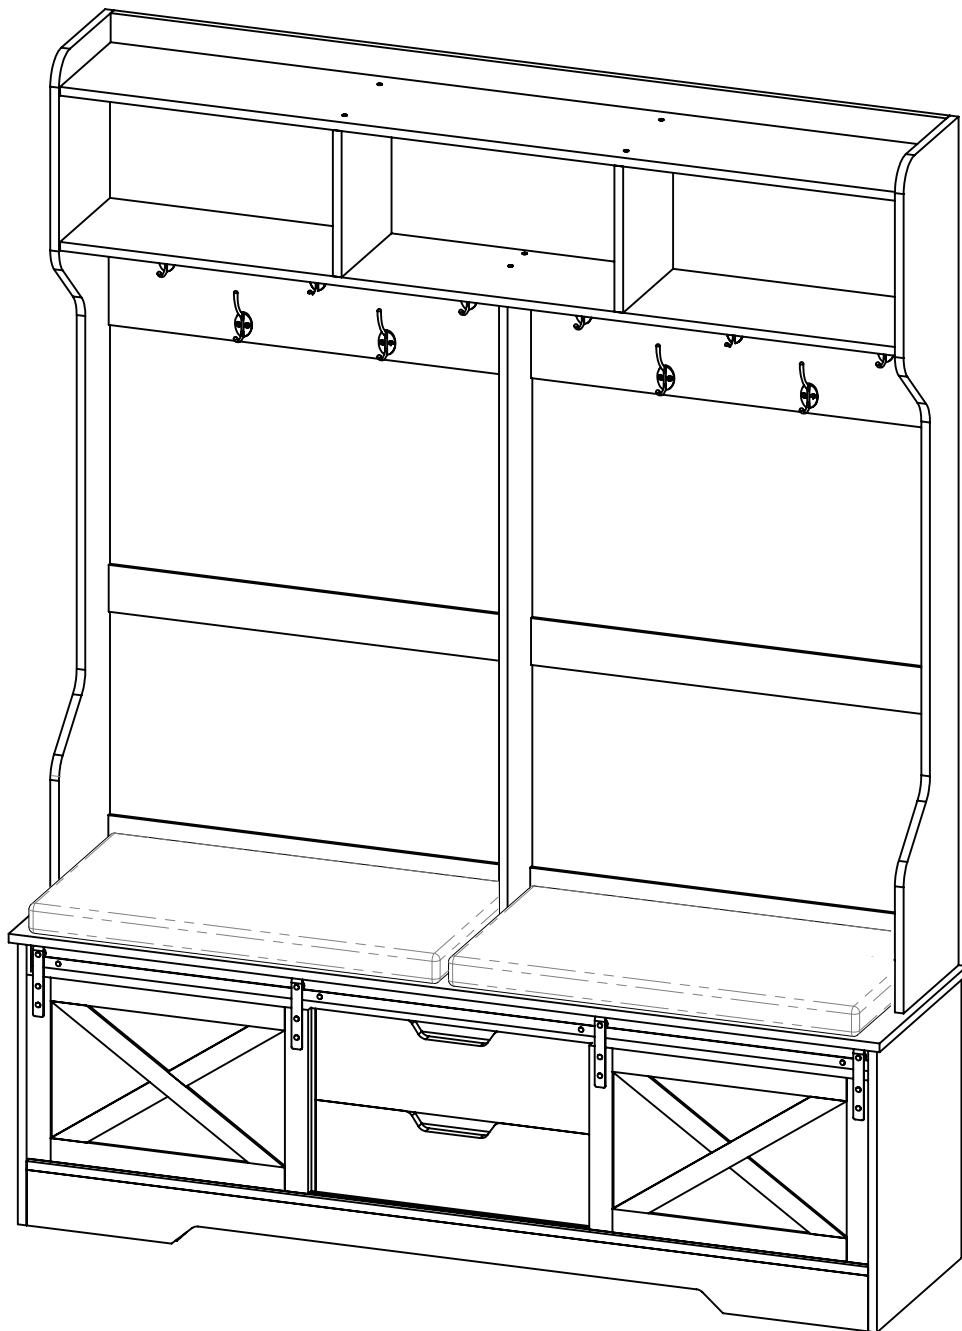

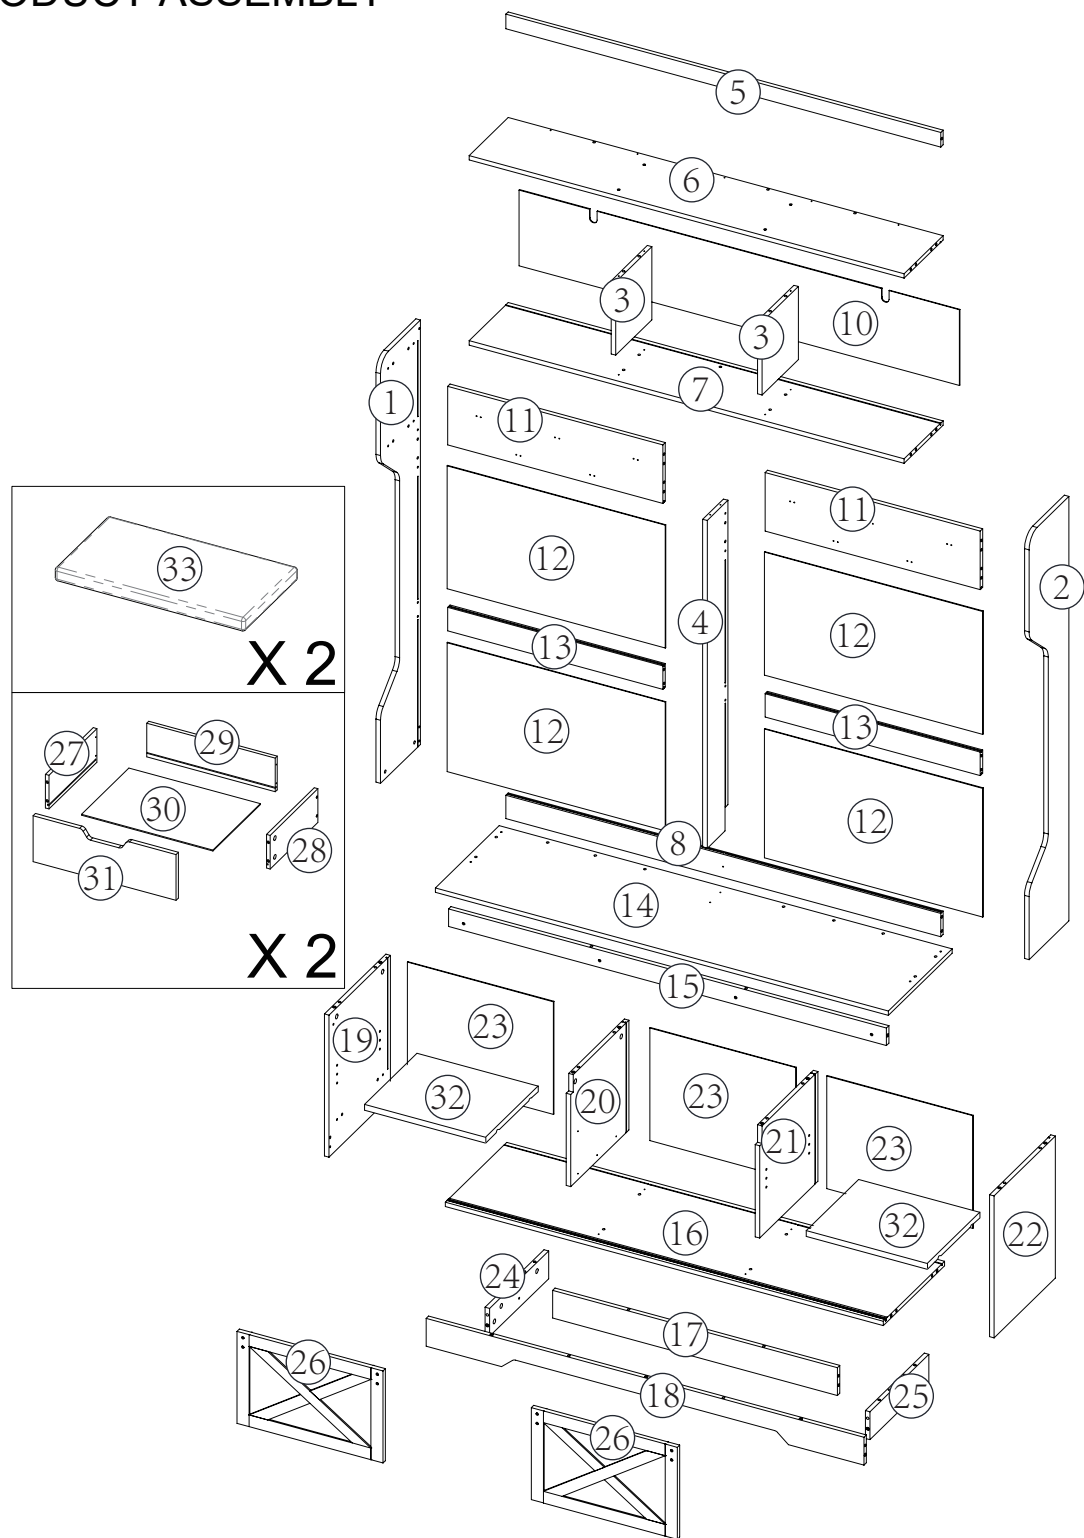

## Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

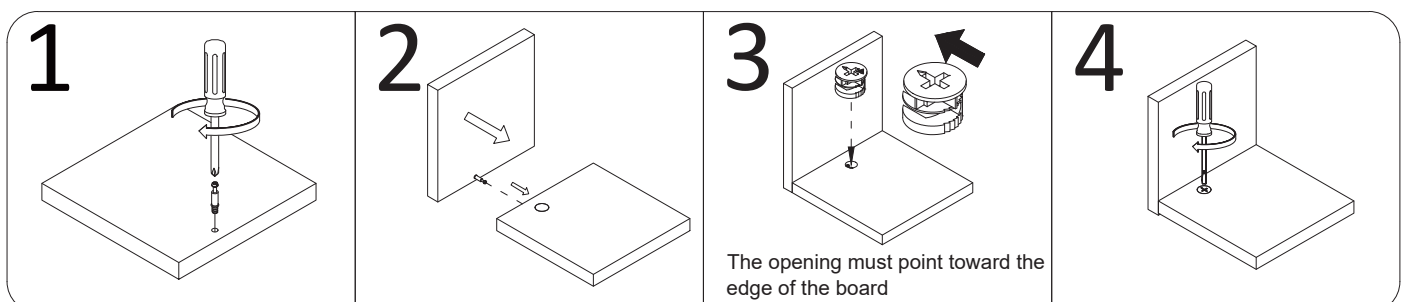

<div data-bbox="108 73 153 120" data-label="Text"> <p>1</p> </div> <div data-bbox="389 62 469 568" data-label="Image"> </div> <div data-bbox="735 80 772 114" data-label="Text"> <p>x1</p> </div>	<div data-bbox="826 73 871 120" data-label="Text"> <p>2</p> </div> <div data-bbox="1126 53 1203 560" data-label="Image"> </div> <div data-bbox="1449 80 1485 114" data-label="Text"> <p>x1</p> </div>
<div data-bbox="108 622 153 669" data-label="Text"> <p>3</p> </div> <div data-bbox="328 707 478 999" data-label="Image"> </div> <div data-bbox="735 629 772 663" data-label="Text"> <p>x2</p> </div>	<div data-bbox="826 622 871 669" data-label="Text"> <p>4</p> </div> <div data-bbox="1161 591 1219 1093" data-label="Image"> </div> <div data-bbox="1449 629 1485 663" data-label="Text"> <p>x1</p> </div>
<div data-bbox="108 1149 153 1196" data-label="Text"> <p>5</p> </div> <div data-bbox="165 1236 647 1532" data-label="Image"> </div> <div data-bbox="735 1155 772 1189" data-label="Text"> <p>x1</p> </div>	<div data-bbox="826 1149 871 1196" data-label="Text"> <p>6</p> </div> <div data-bbox="900 1240 1458 1572" data-label="Image"> </div> <div data-bbox="1449 1155 1485 1189" data-label="Text"> <p>x1</p> </div>
<div data-bbox="108 1675 153 1722" data-label="Text"> <p>7</p> </div> <div data-bbox="159 1778 699 2092" data-label="Image"> </div> <div data-bbox="735 1682 772 1715" data-label="Text"> <p>x1</p> </div>	<div data-bbox="826 1675 871 1722" data-label="Text"> <p>8</p> </div> <div data-bbox="944 1783 1410 2078" data-label="Image"> </div> <div data-bbox="1449 1682 1485 1715" data-label="Text"> <p>x1</p> </div>


10

×1

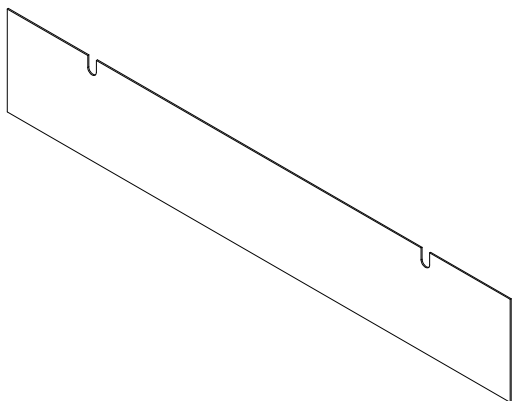


11

×2

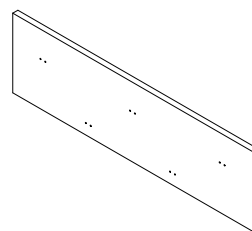


12

×4

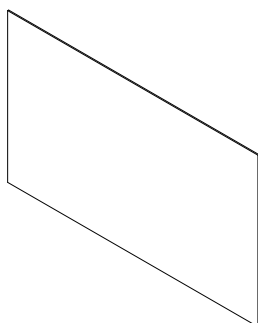


13

×2

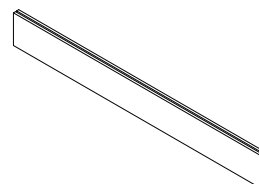


14

×1

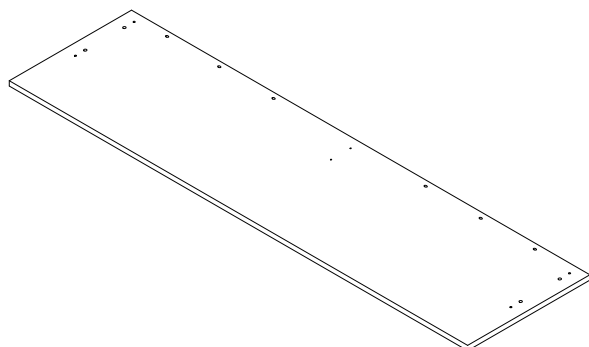


15

×1

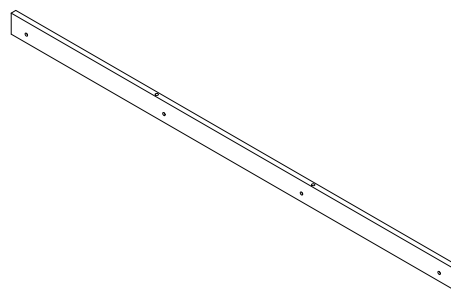


16

×1

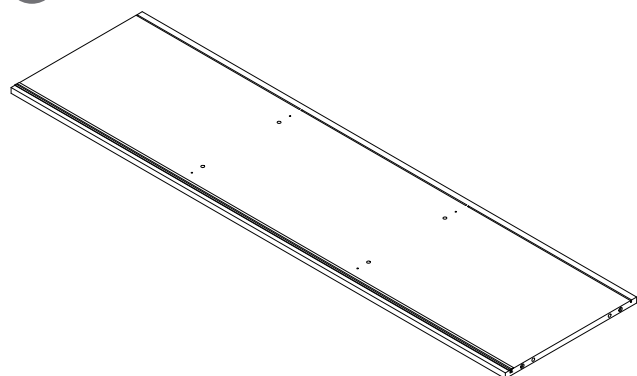


17

×1

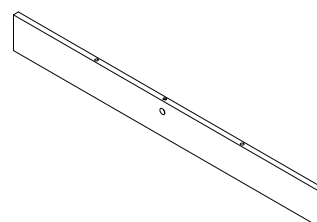


18

×1

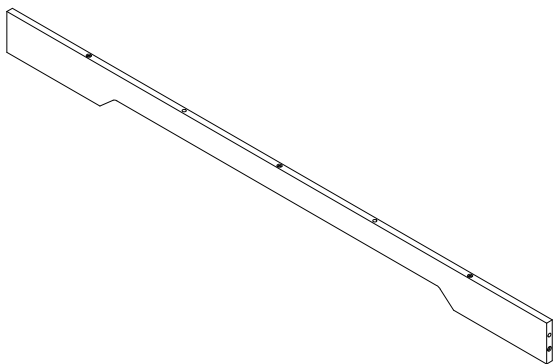


19

×1

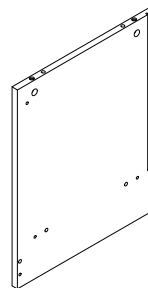


20

×1

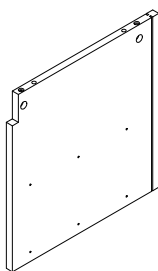


21

×1

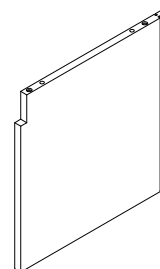


22

×1

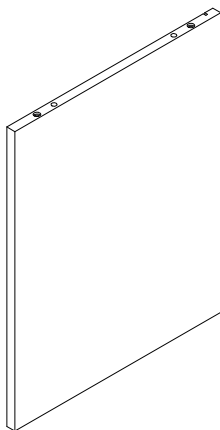


23

×3

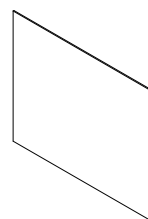


24

×1

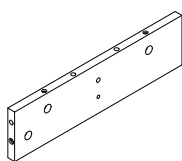


25

×1

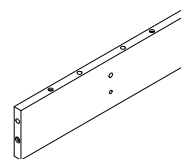


26

×2

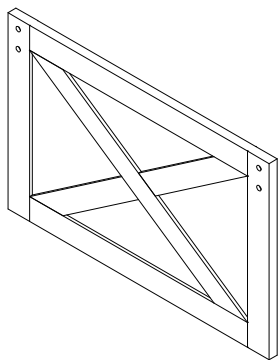


27

×2

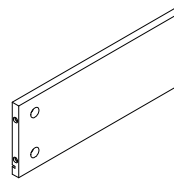


28

×2

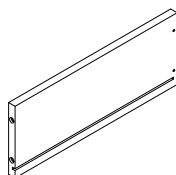


29

×2

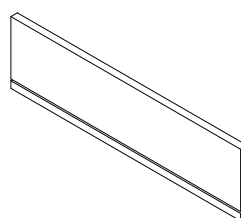


30

×2

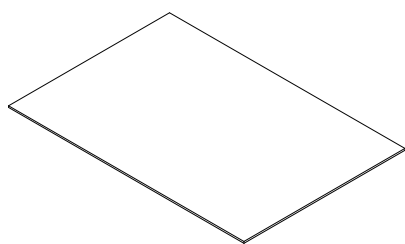


31

×2

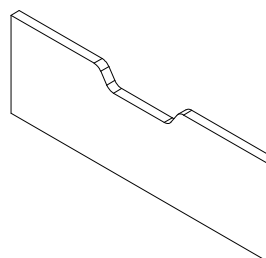


32

×2

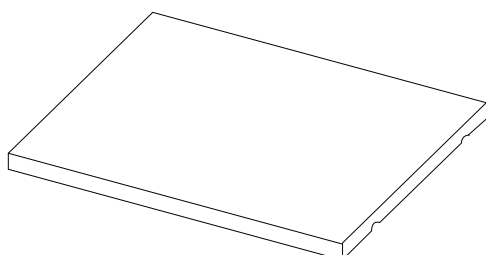

33










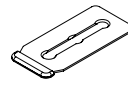
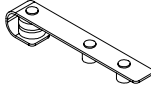
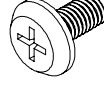
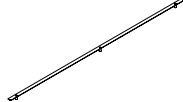

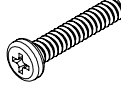

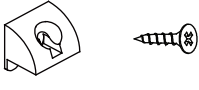
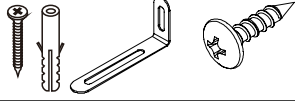
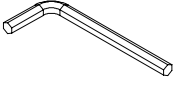
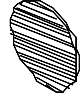
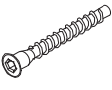
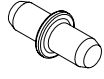
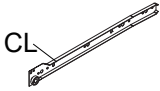
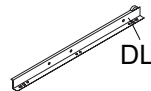
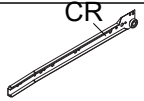
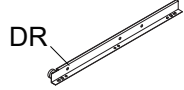
×2

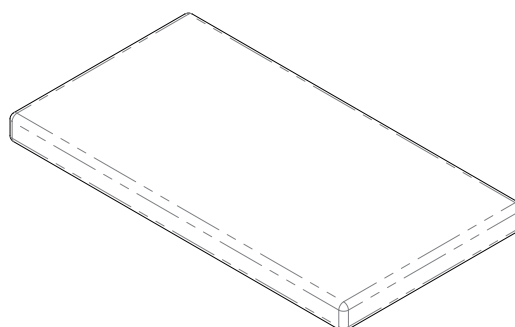

# Components - Fittings


Please check you have all the panels listed below


**Note:** The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

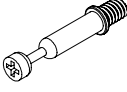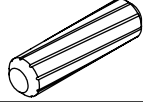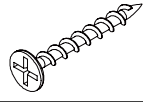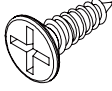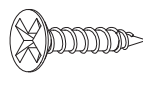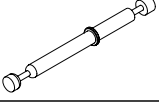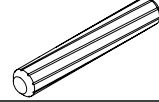A	 Ø 6*35	60 pcs +5 pcs	B		68 pcs +5 pcs
C	 Ø 8*30	60 pcs +5 pcs	D	 Ø 4*12	13 pcs +1 pc
E	 Ø 3*12	20 pcs +2 pcs	F	 Ø 4*12	8 pcs
G	 Ø 8*50	4 pcs	H	 Ø 8*50	2 pcs
I	 2 pcs	10 sets	J		4 pcs
K		4 pcs	L		8 pcs
M		1 pc	N		4 pcs
O	 Ø 6*45	4 pcs	P	 Ø 10*10	4 pcs
Q	 34 sets +3 sets		R	 2 sets	
S		1 pc	T		4 pcs
U		21 pcs +2 pcs	V		8 pcs
CL	 CL	2 pcs	DL	 DL	2 pcs
CR	 CR	2 pcs	DR	 DR	2 pcs



PRODUCT ASSEMBLY


Step 1

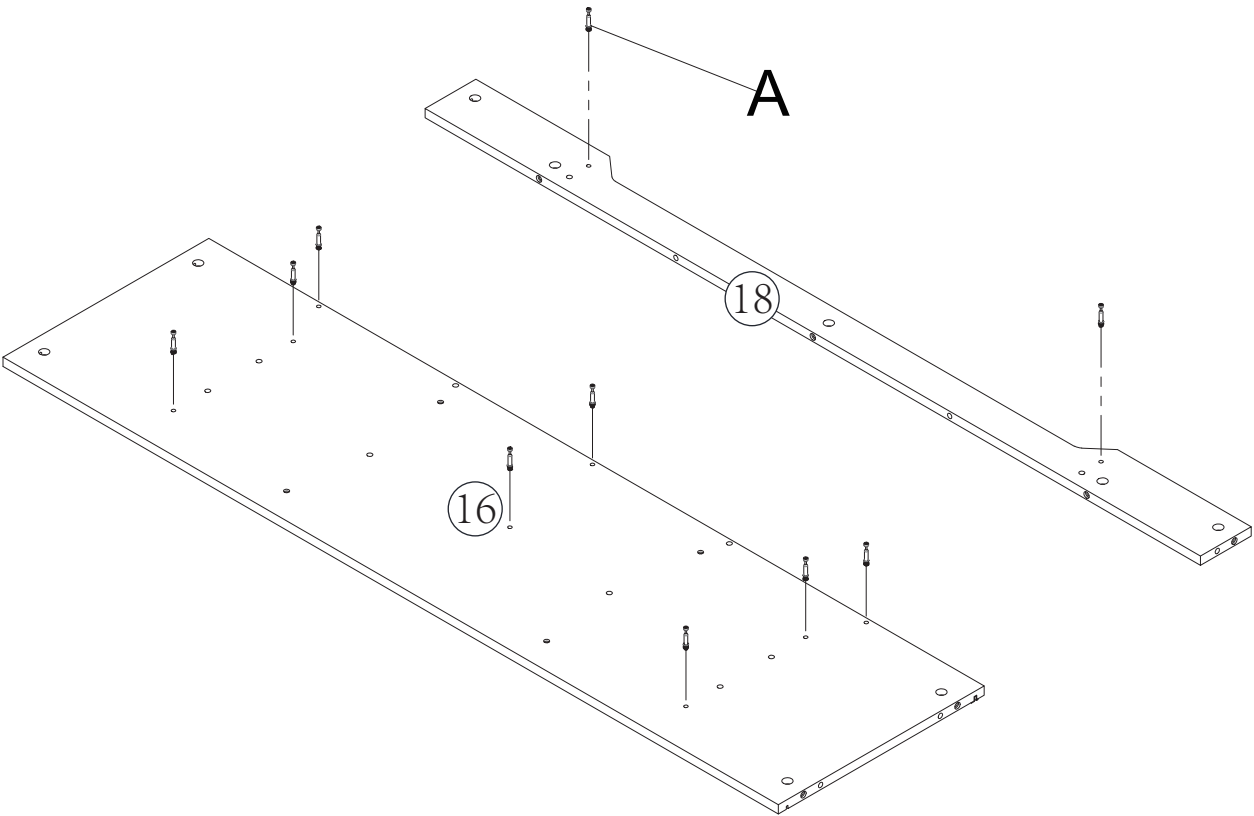A		10 pcs
---	---	--------




Step 2

S		1 pc
U		4 pcs

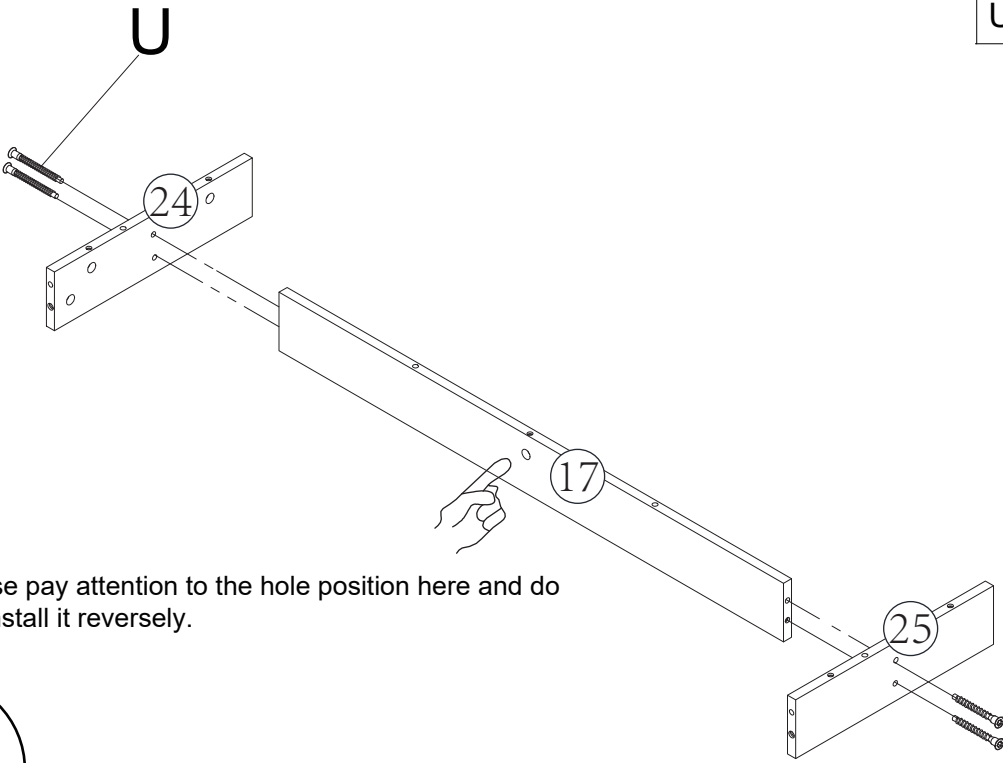

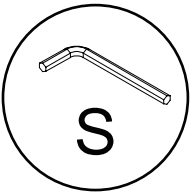

Please pay attention to the hole position here and do not install it reversely.








PRODUCT ASSEMBLY


Step 3

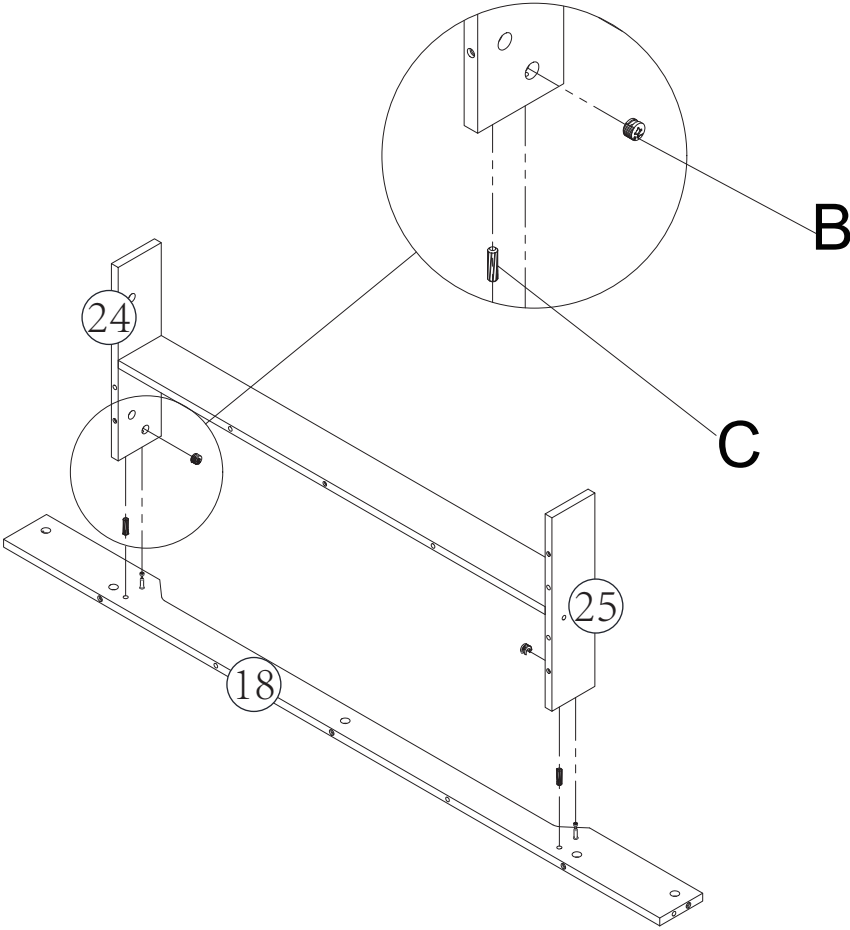B		2 pcs
C		2 pcs




Step 4

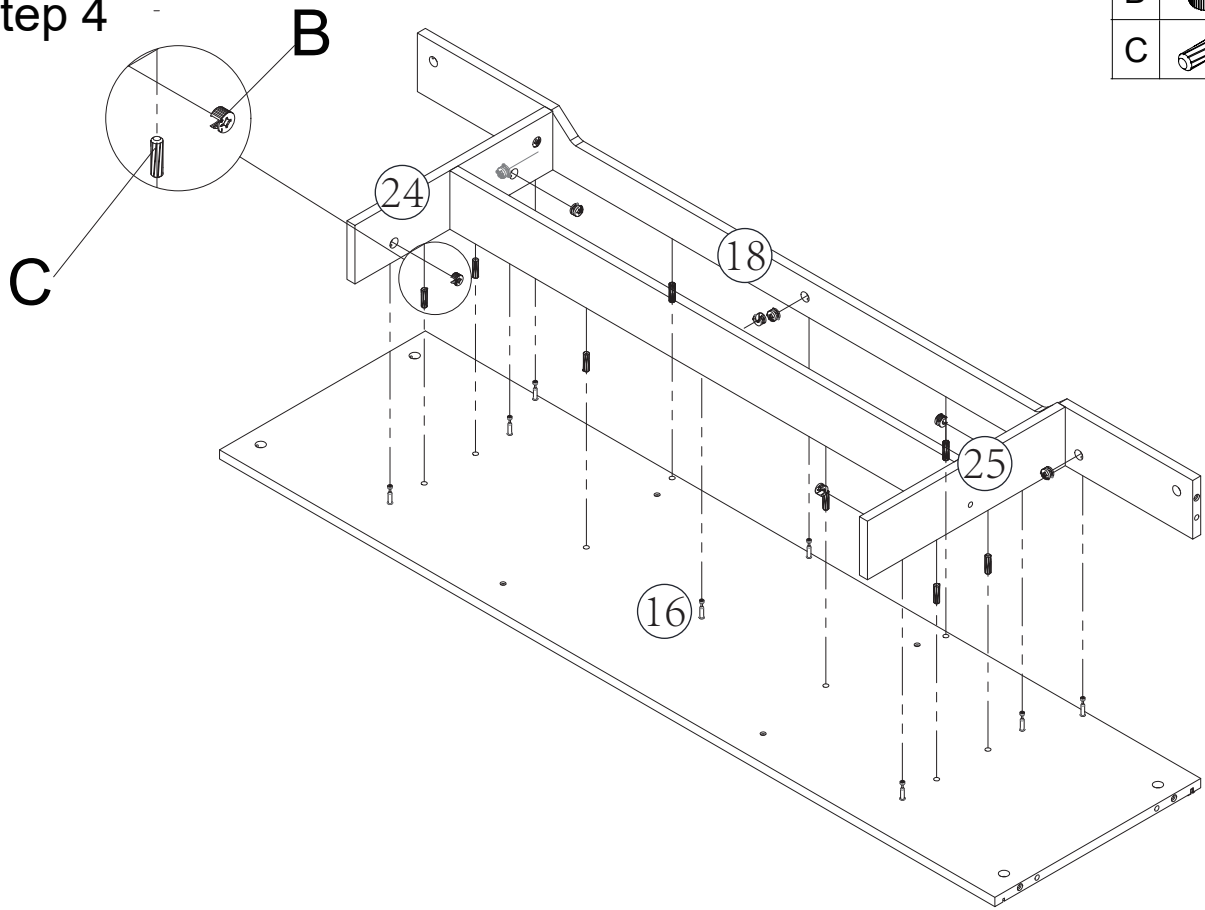


B		8 pcs
C		8 pcs



PRODUCT ASSEMBLY

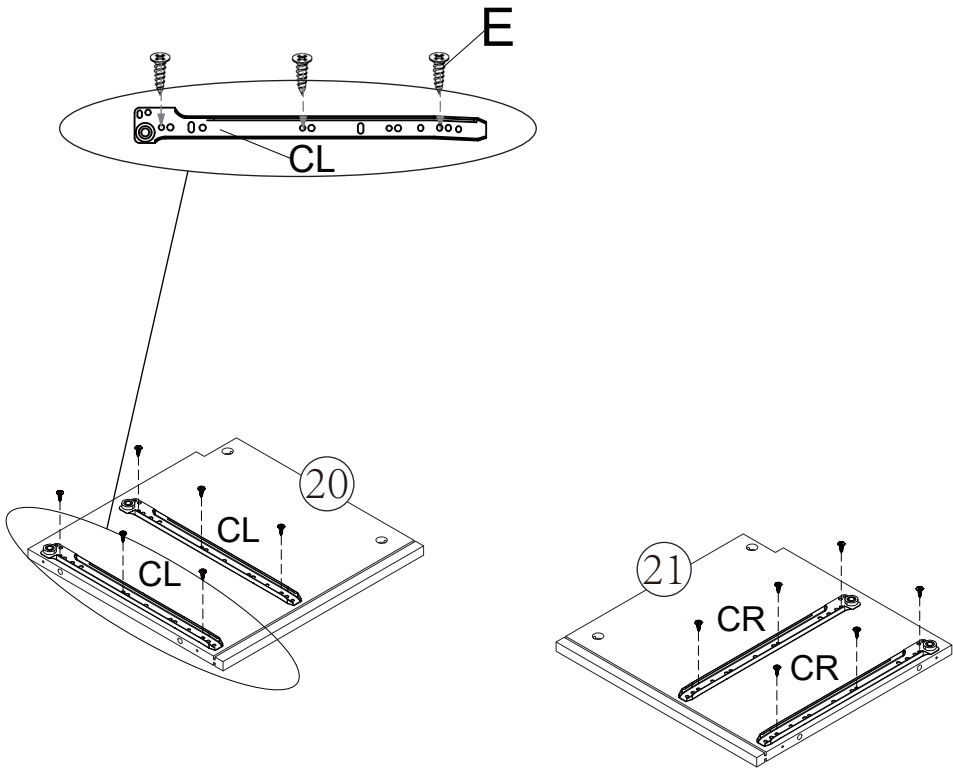
Step 5






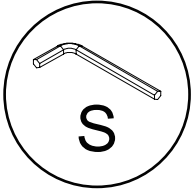
E		12 pcs
CL		2 pcs
CR		2 pcs

Step 6

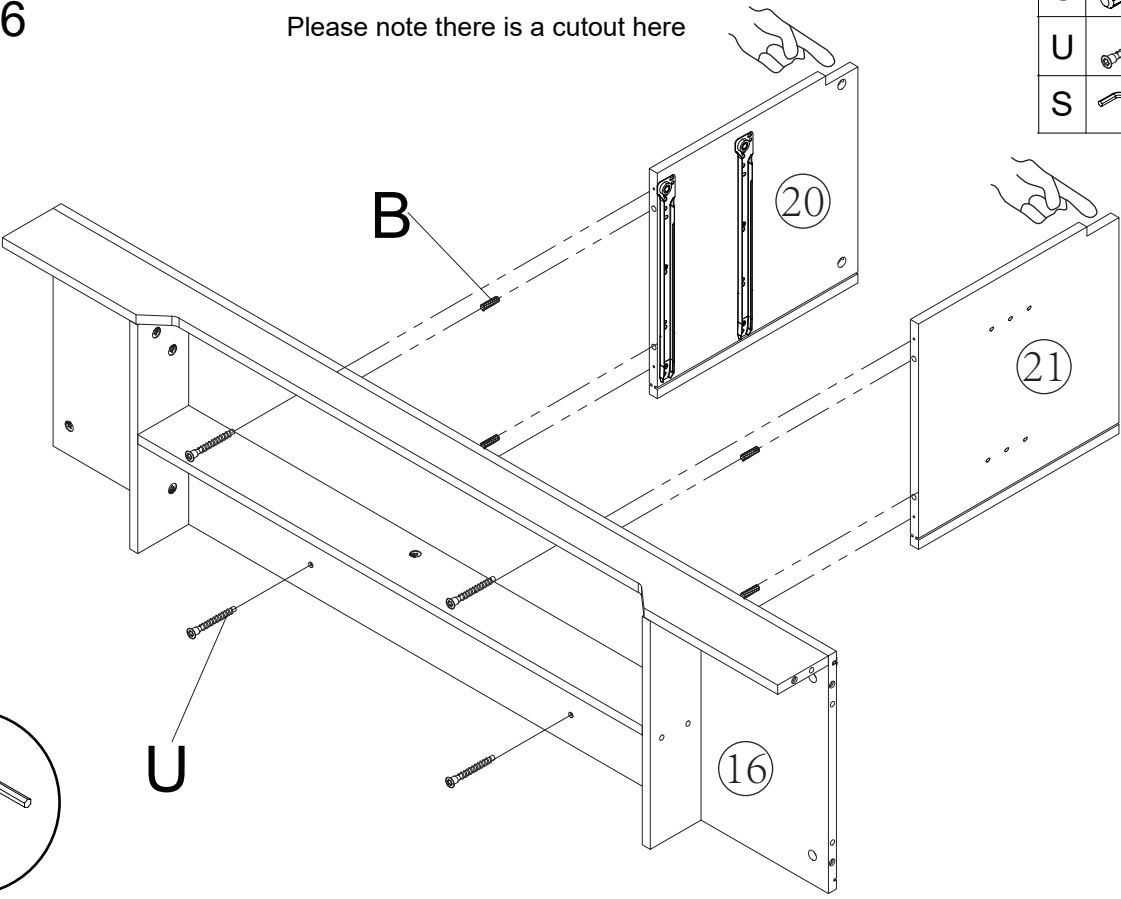Please note there is a cutout here




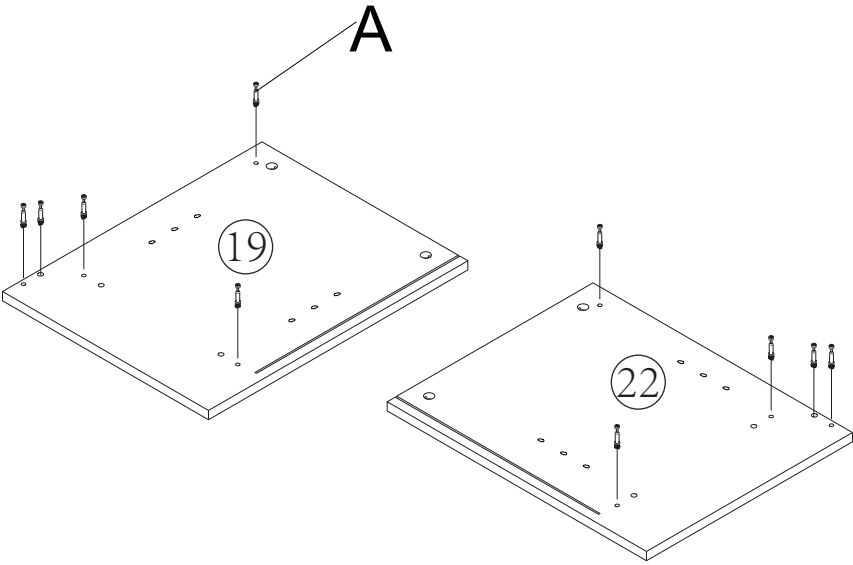
C		4 pcs
U		4 pcs
S		1 pc





PRODUCT ASSEMBLY


Step 7

A		10 pcs
---	---	--------





Step 8


M		1 pc
N		4 pcs

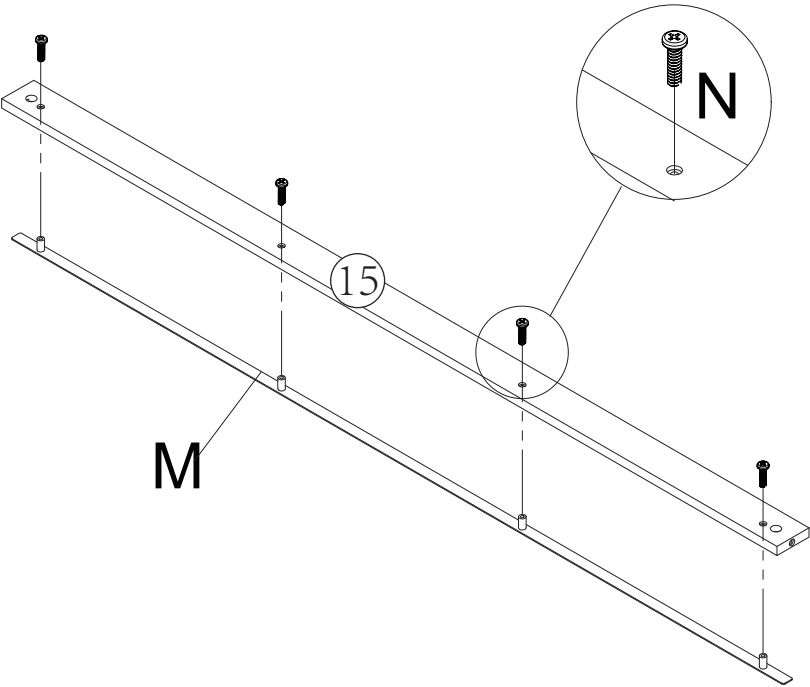


# PRODUCT ASSEMBLY

## Step 9

B		10 pcs
C		4 pcs

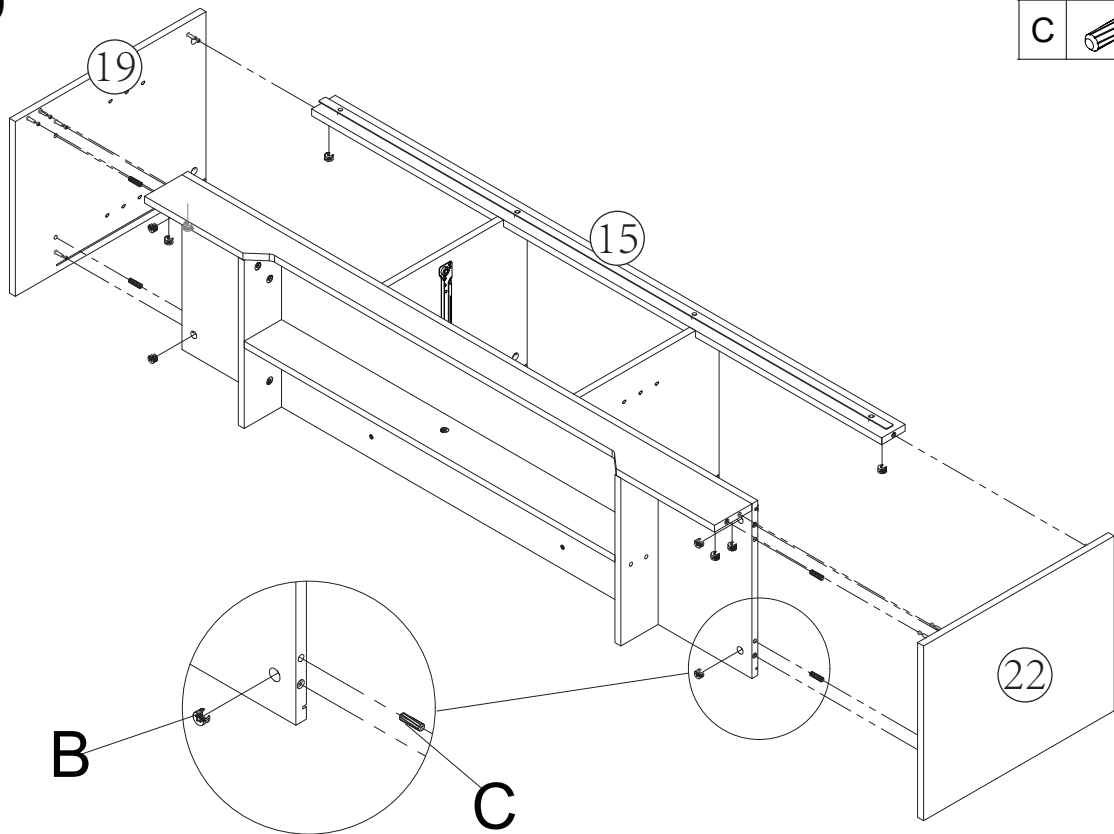


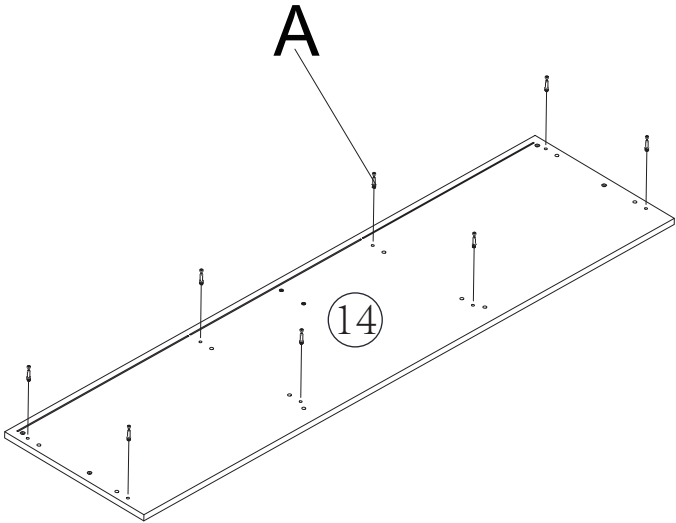
## Step 10

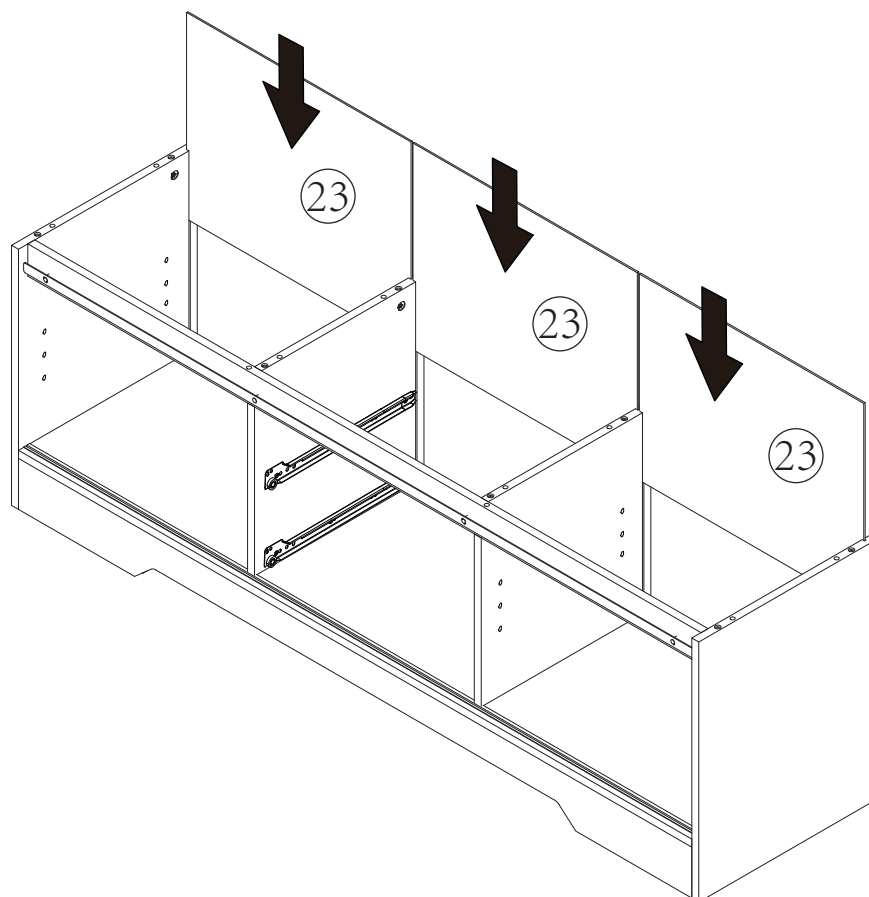




PRODUCT ASSEMBLY


Step 11

A		8 pcs
---	---	-------




Step 12

A		2 pcs
B		8 pcs
C		18 pcs

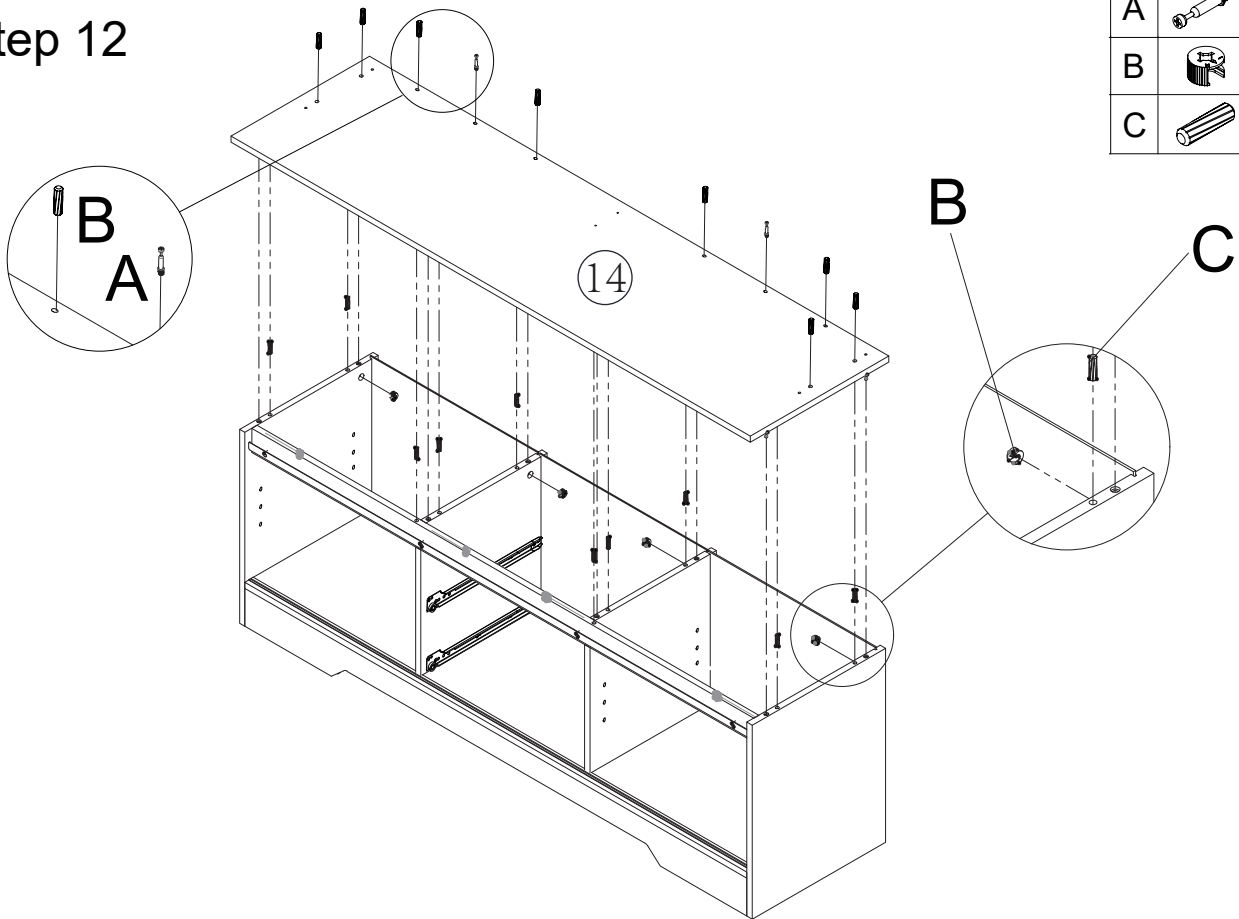




Step 13

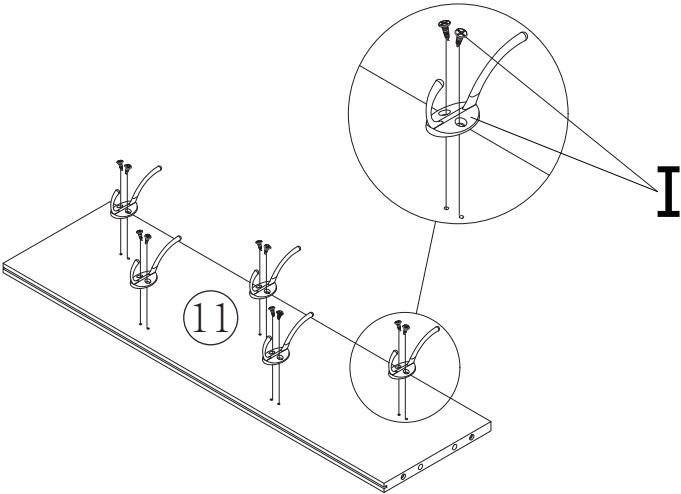I		2 pcs	10 sets
---	---	-------	---------




X 2

Step 14

B		4 pcs
G		4 pcs
H		2 pcs

Please pay attention to the installation direction of part 11

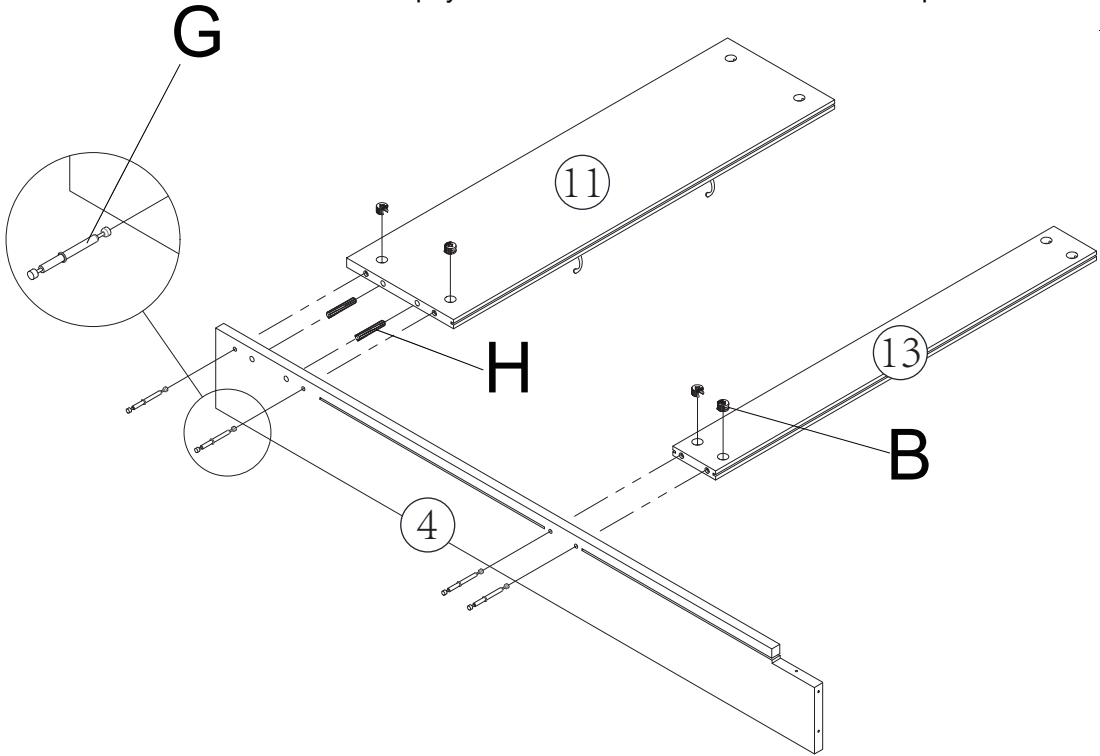


# PRODUCT ASSEMBLY

## Step 15

B



4 pcs

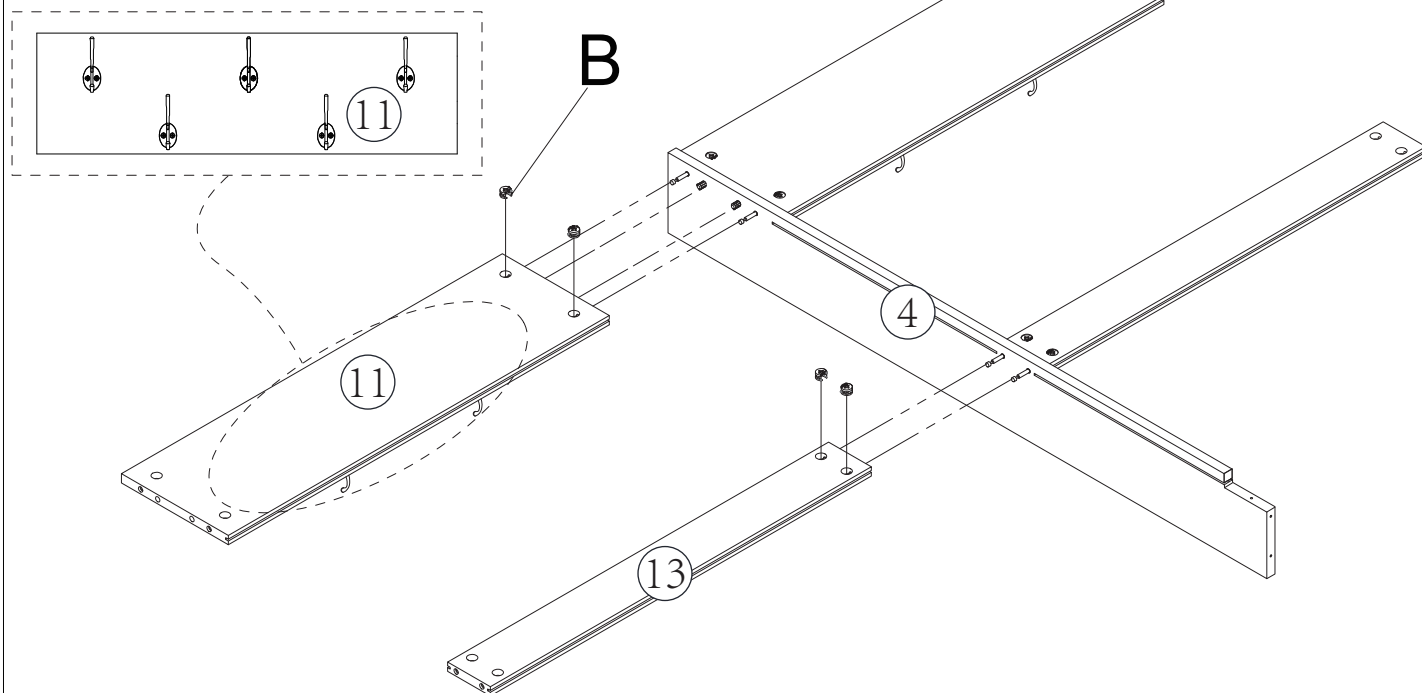


Please pay attention to the installation direction of part 11

## Step 16

U





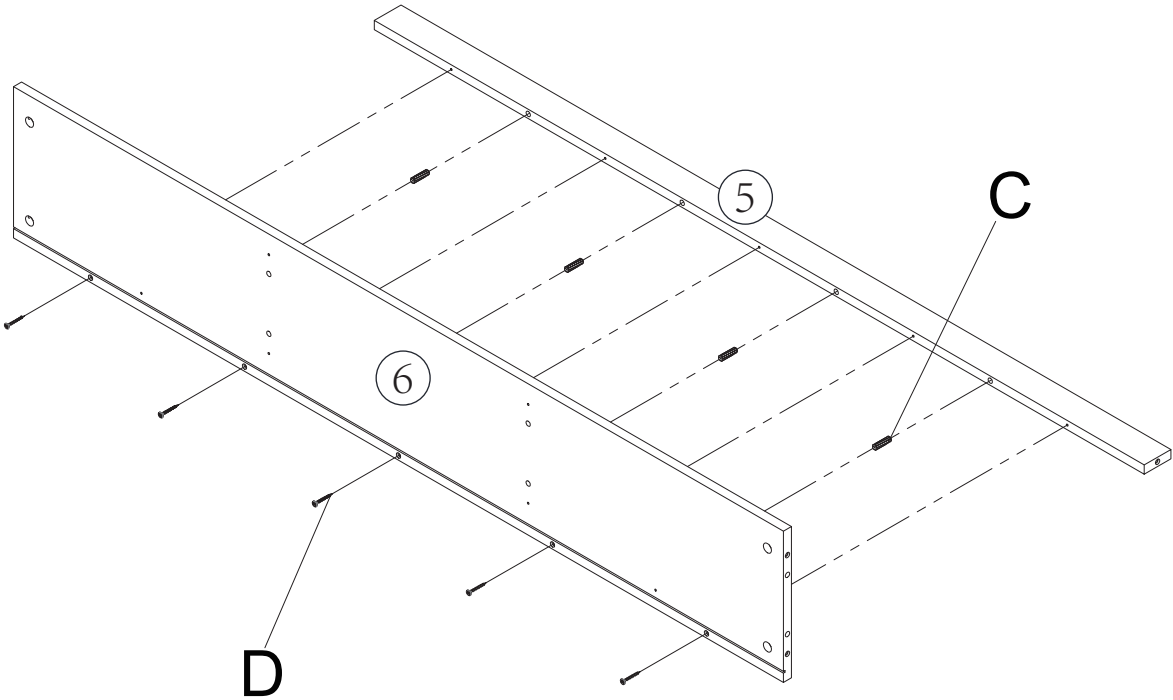
2 pcs

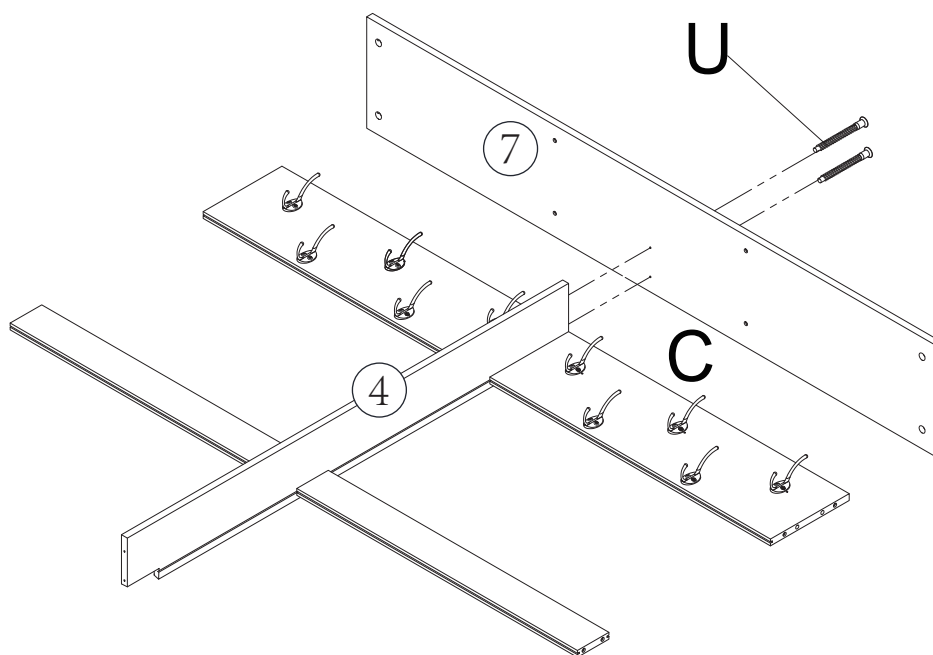



PRODUCT ASSEMBLY



Step 17

C		4 pcs
D		5 pcs



Step 18



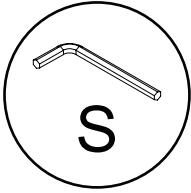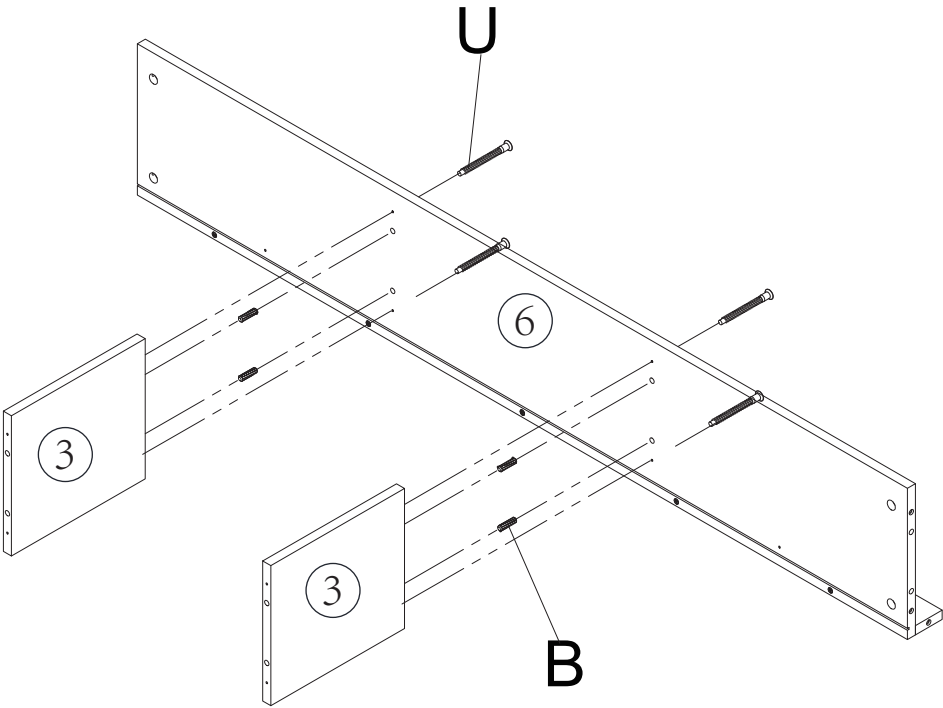C		4 pcs
U		4 pcs






# PRODUCT ASSEMBLY


## Step 19

C		4 pcs
U		4 pcs

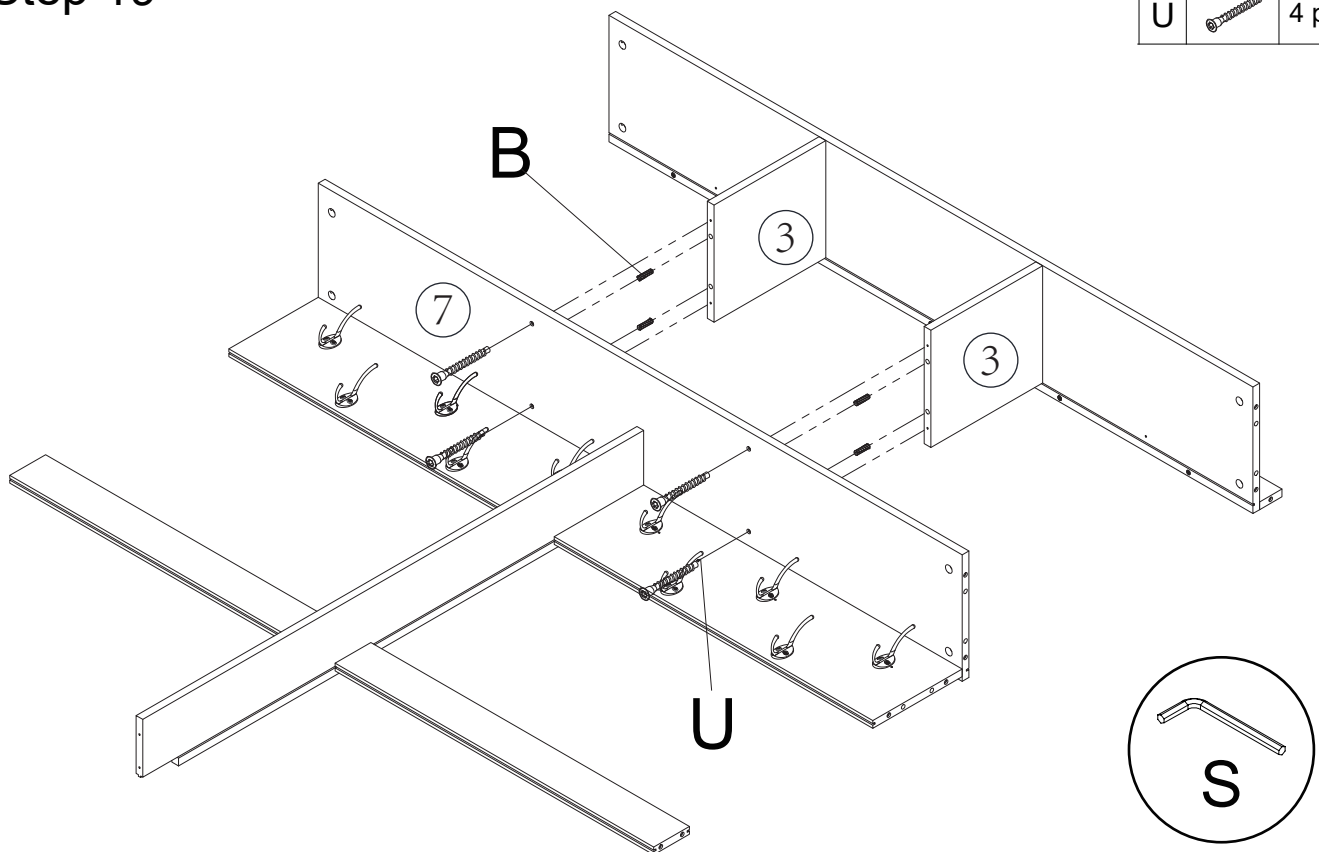

## Step 20


U		1 pc
---	---	------

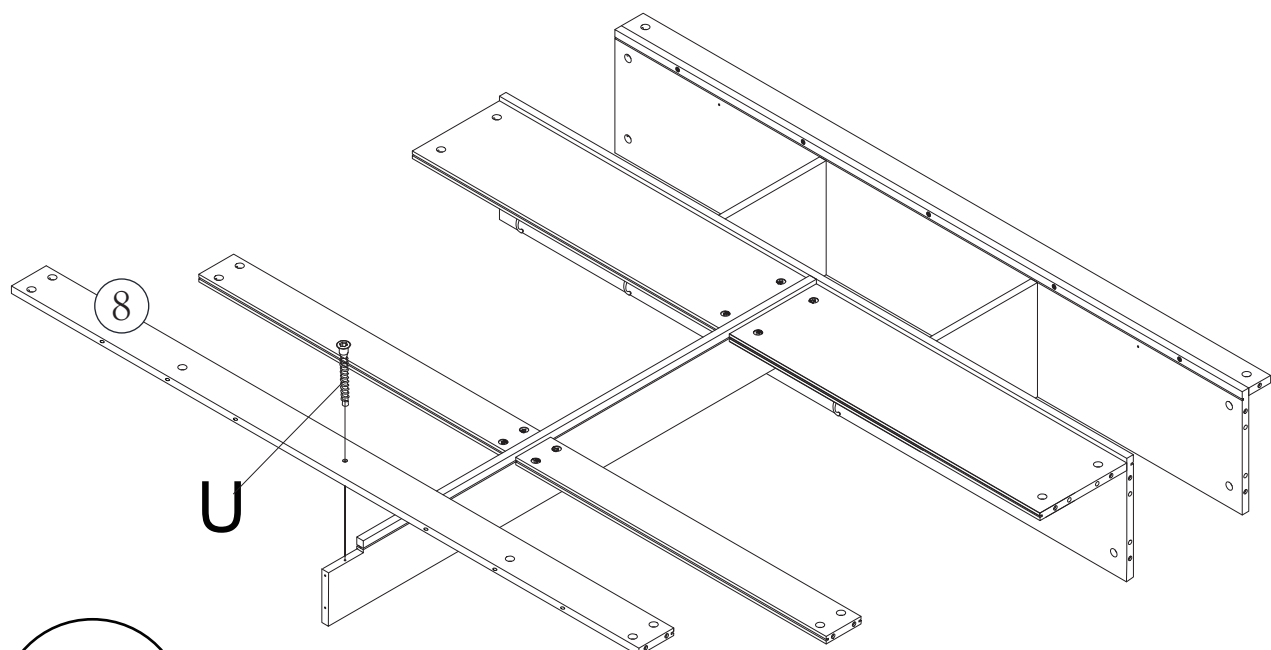


Please pay attention to the direction when installing part 8

# PRODUCT ASSEMBLY

## Step 21

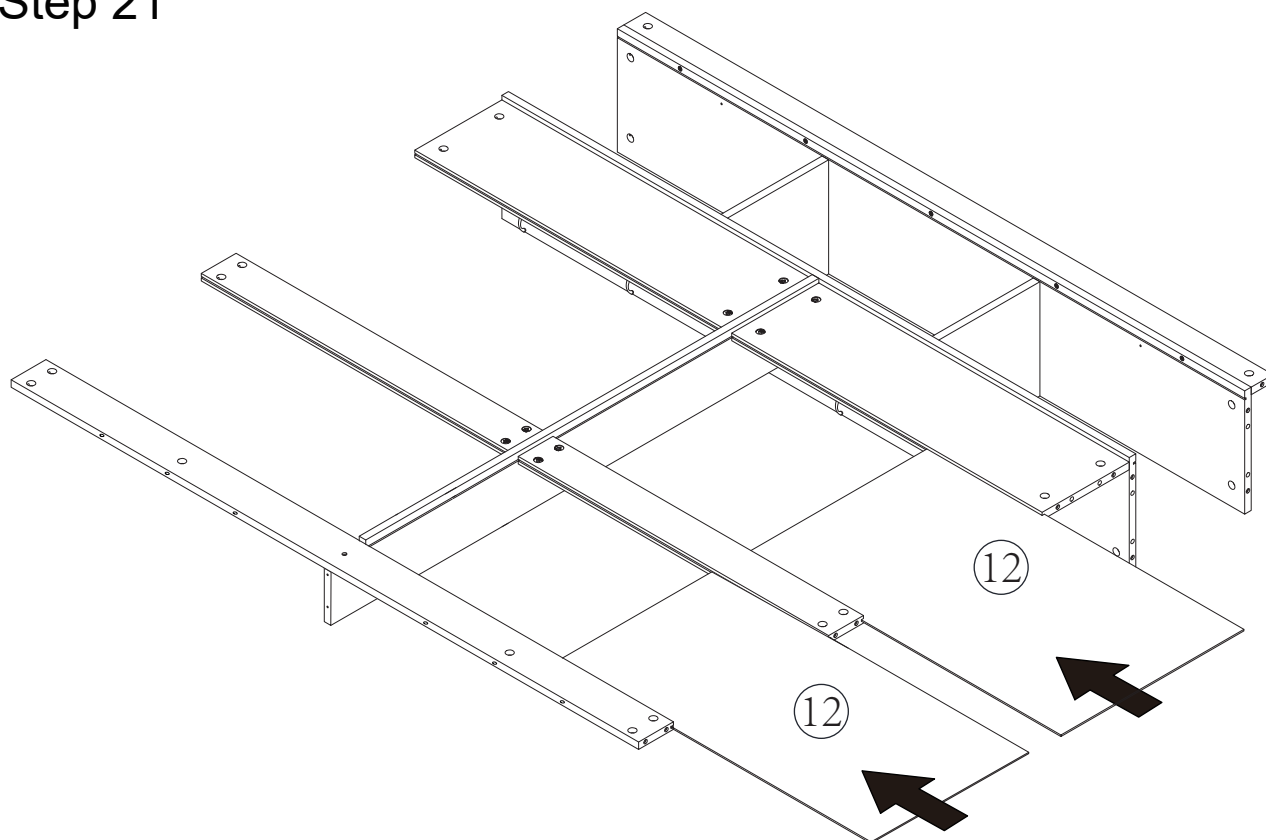



## Step 22

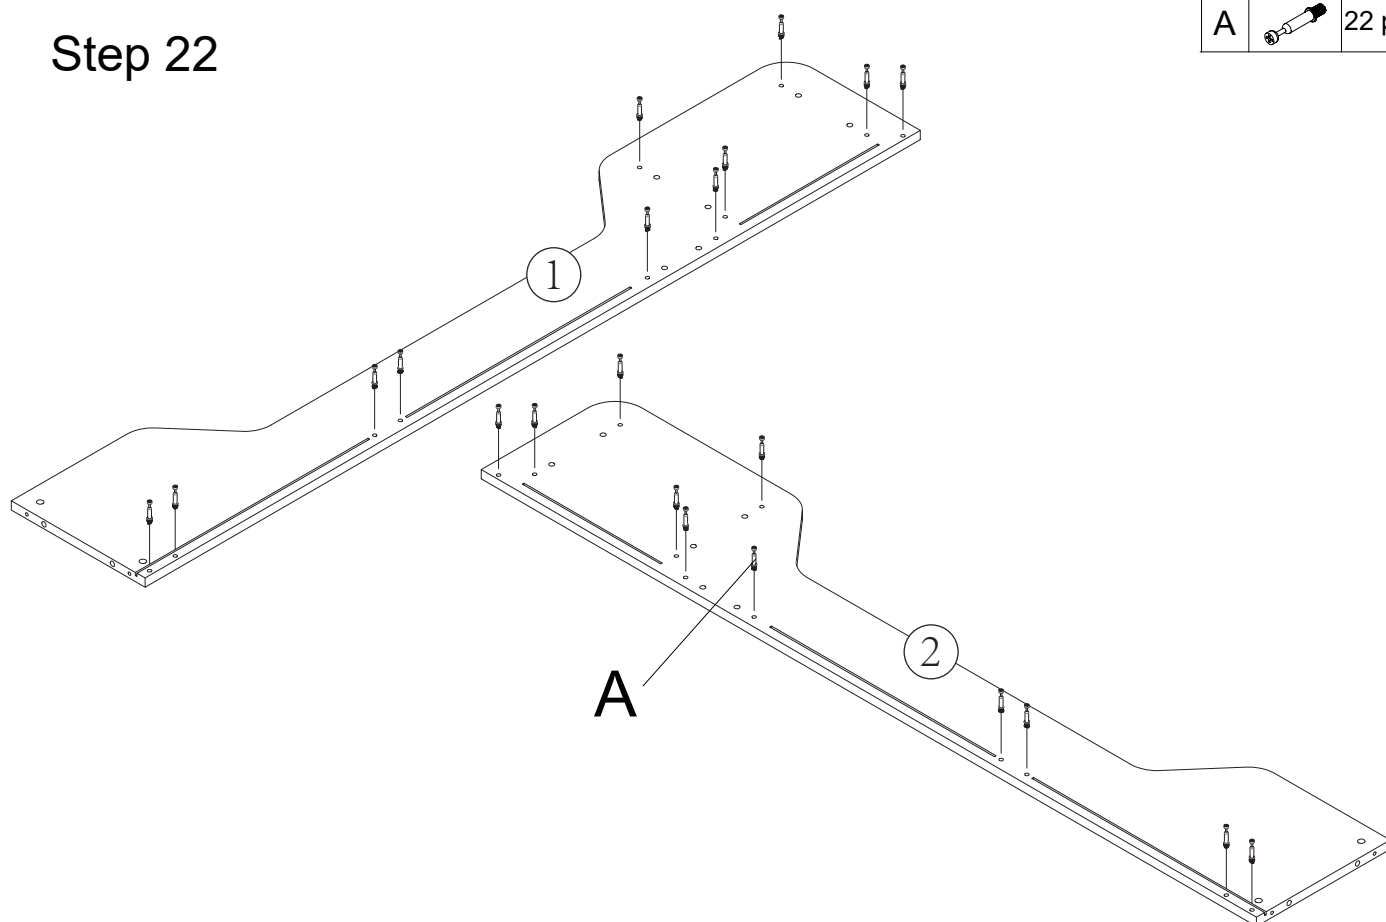


A  22 pcs


PRODUCT ASSEMBLY

Step 23

B		11 pcs
C		6 pcs

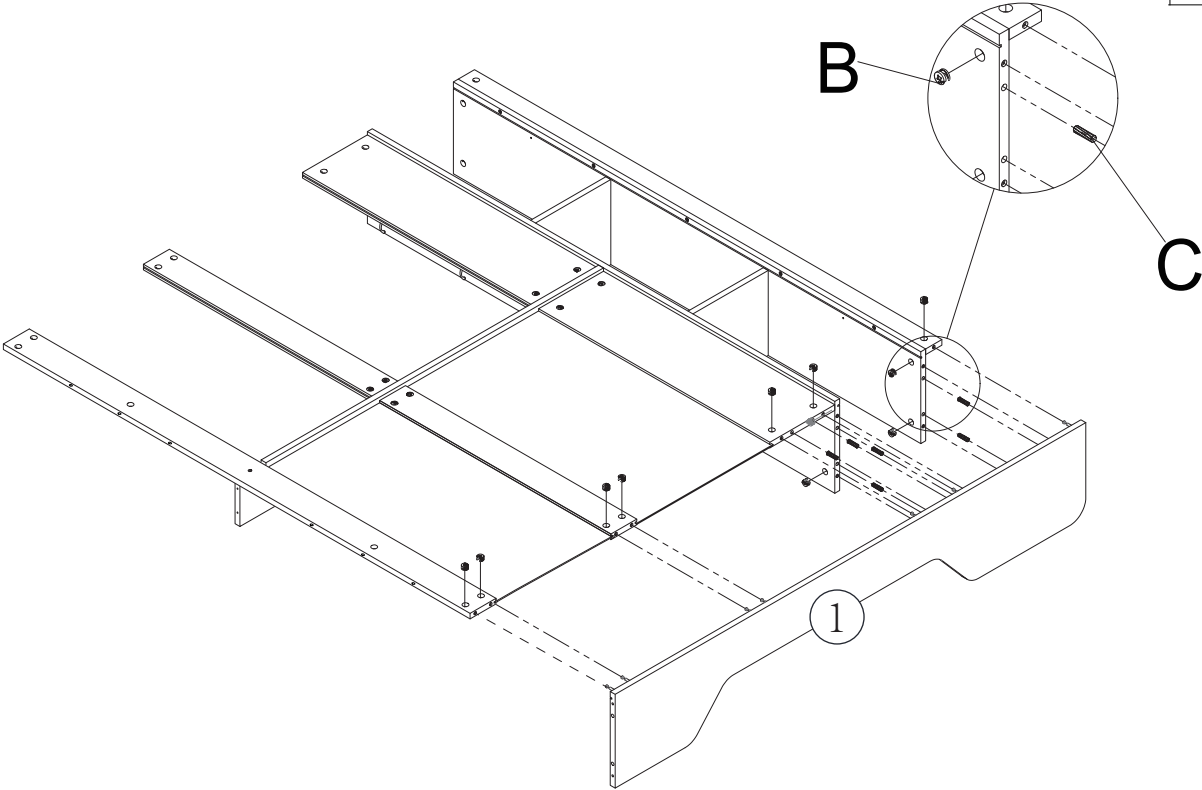

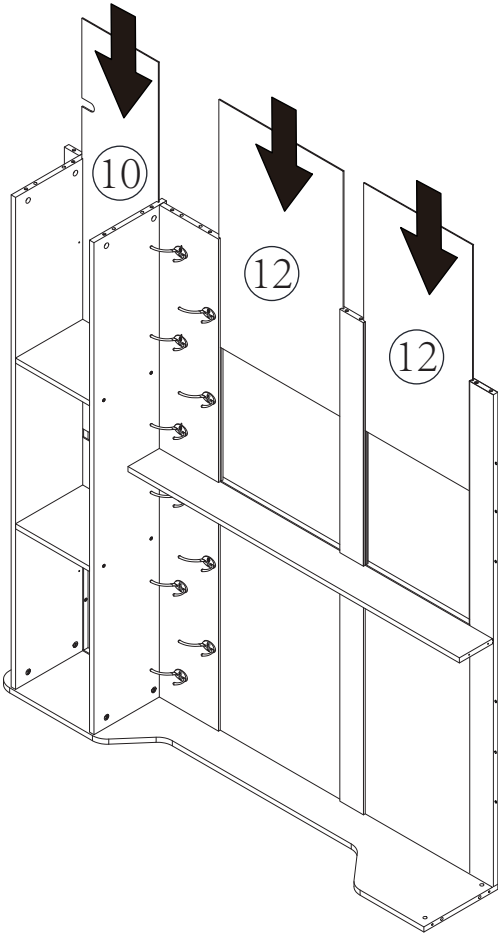


Step 24



## PRODUCT ASSEMBLY


### Step 25

B		11 pcs
C		6 pcs

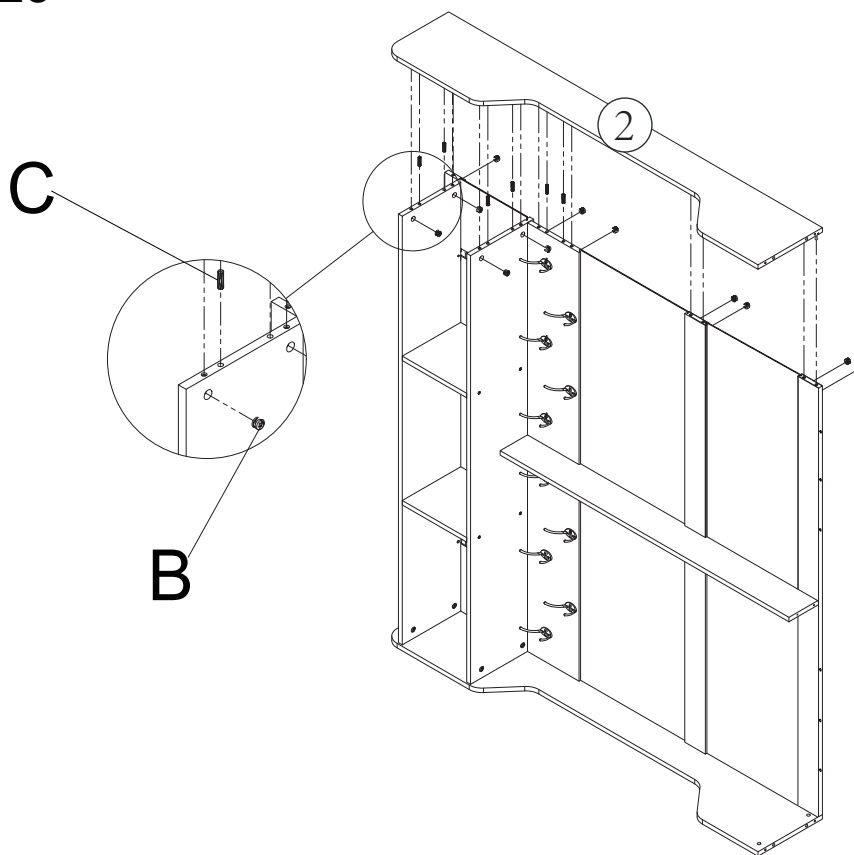

### Step 26

Two people are required for this installation.

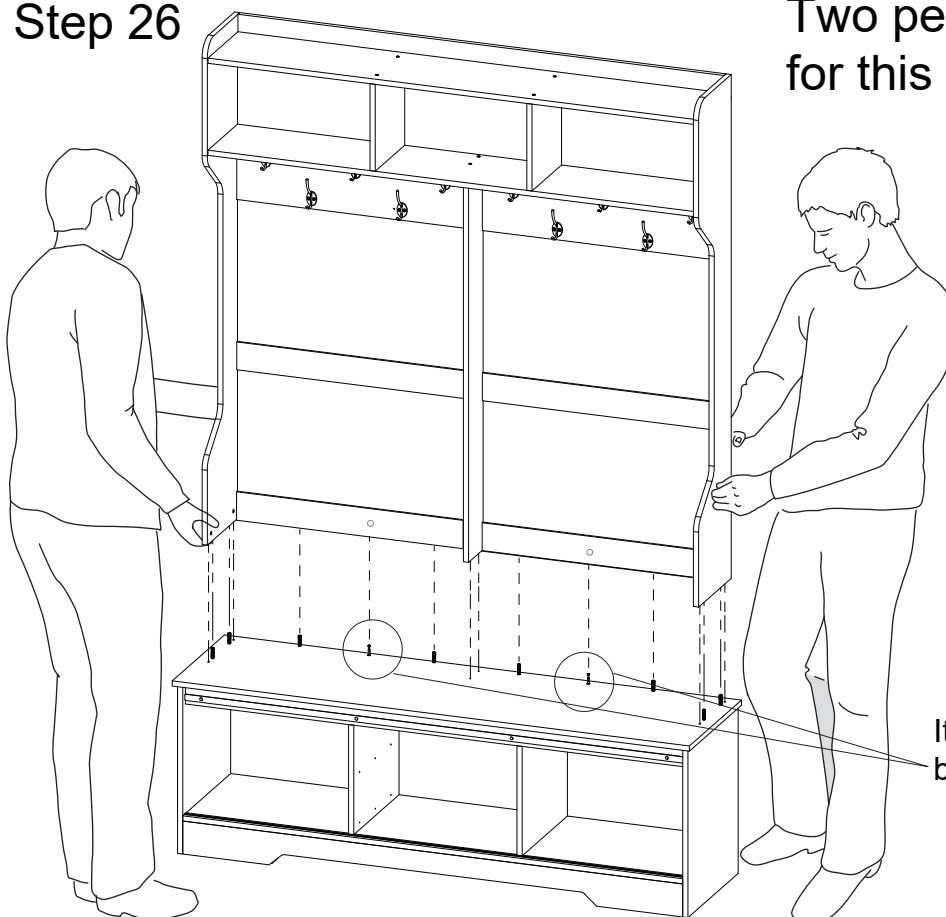


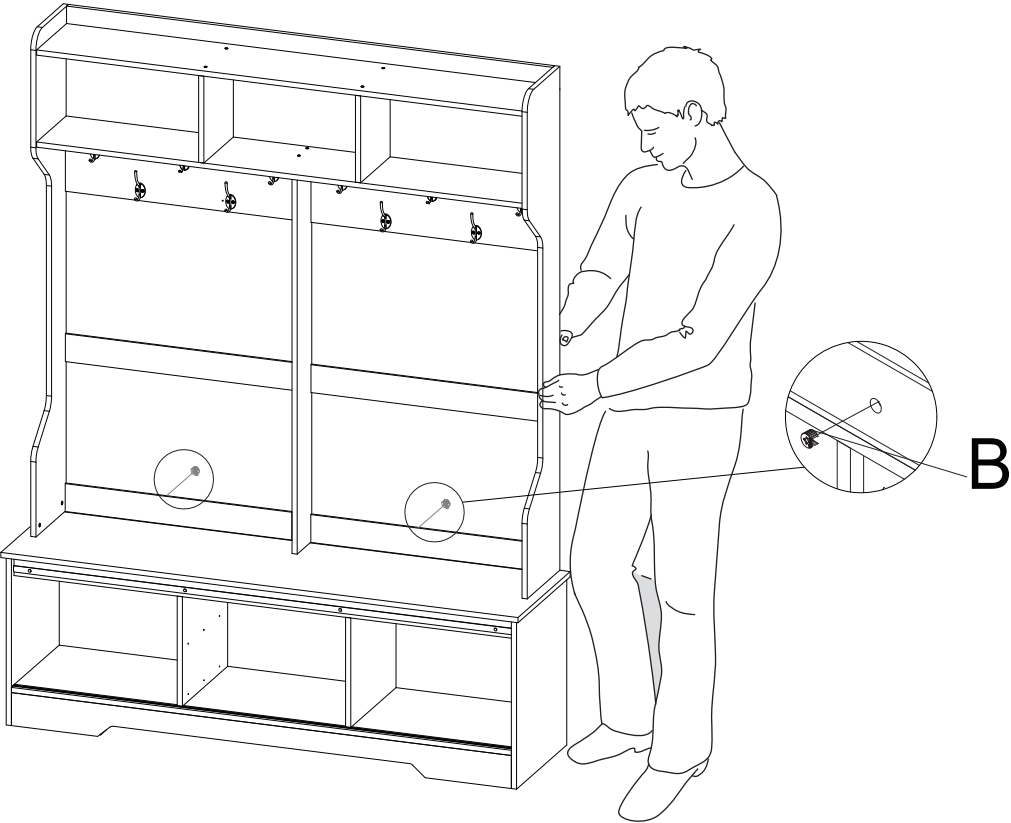
It can be positioned by the hole position in the back

PRODUCT ASSEMBLY

Step 27





When you screw,  
you must have a person to hold the cabinet to avoid tipping;


B		2 pcs
---	---	-------



Step 28



When you screw,  
you must have a person to hold the cabinet to avoid tipping;



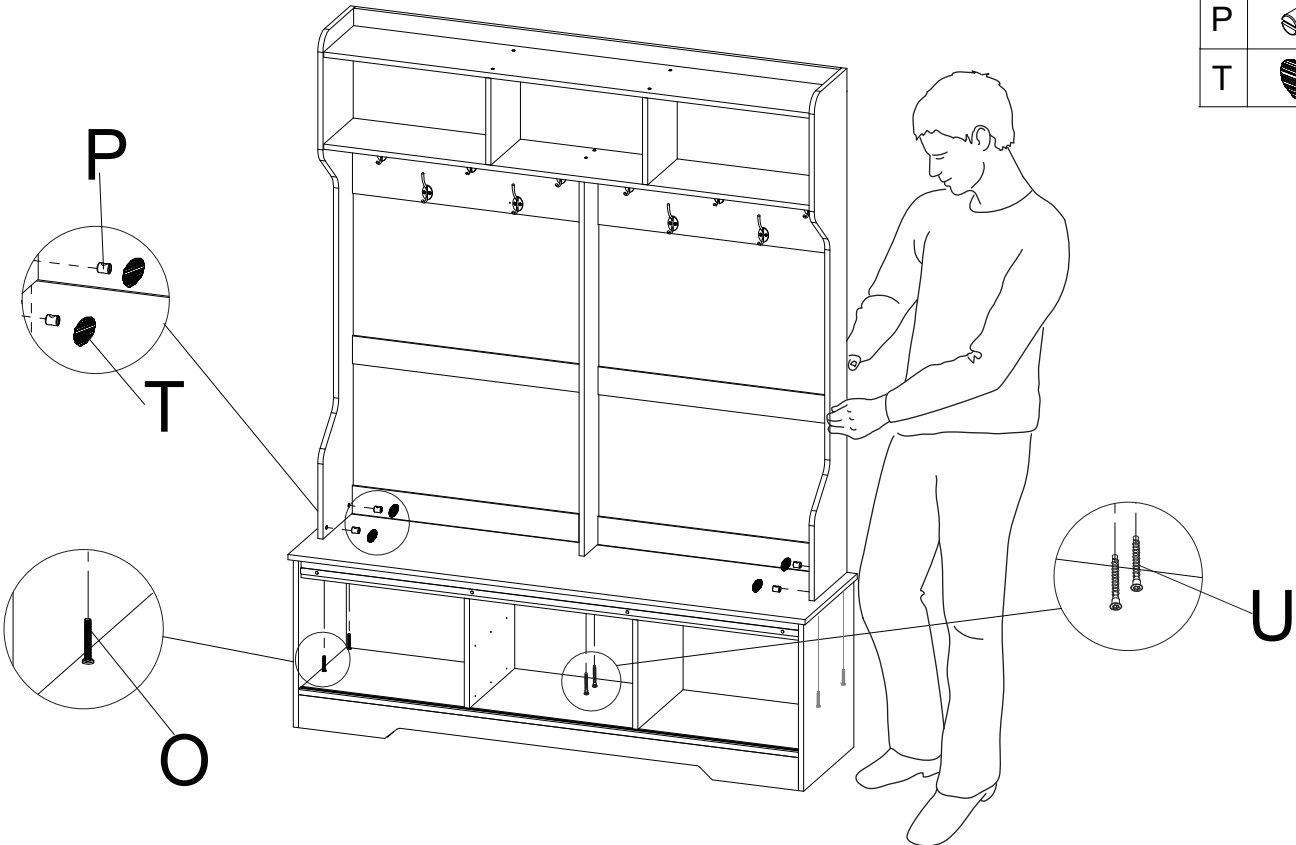
U		2 pcs
O		4 pcs
P		4 pcs
T		4 pcs



# PRODUCT ASSEMBLY

## Step 29



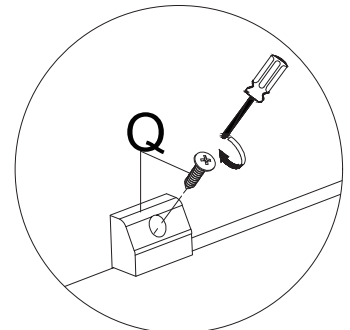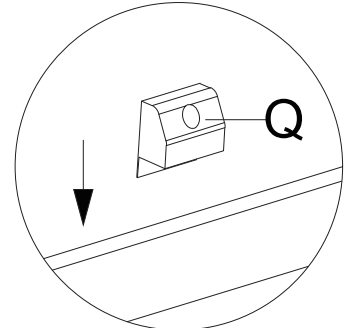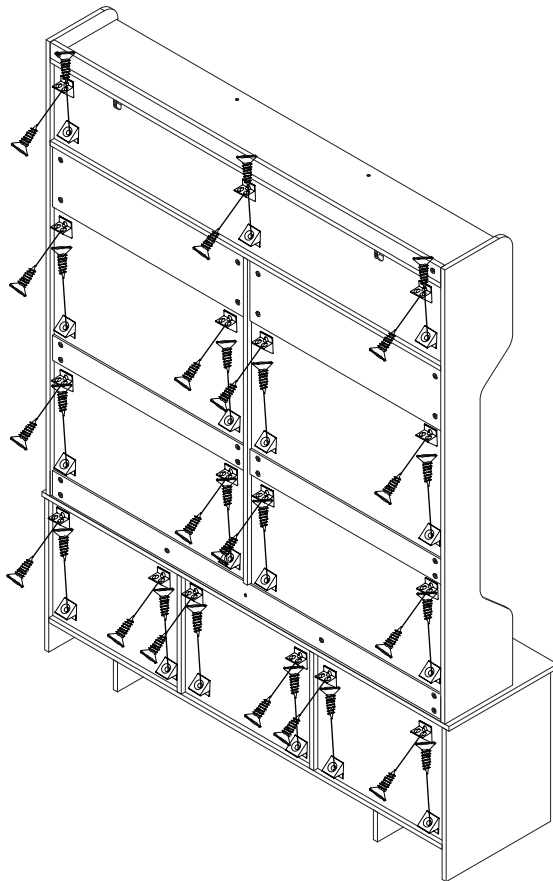

Q			34 sets
---	---	---	---------






## Step 30

### **WARNING!**

IN ORDER TO PREVENT OVERTURNING  
THIS PRODUCT MUST BE USED WITH THE  
WALL ATTACHMENT DEVICE PROVIDED


R			2 sets
V			8 pcs

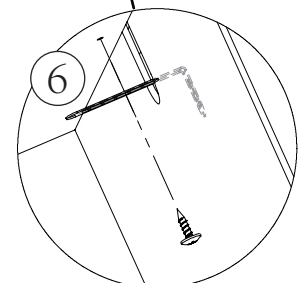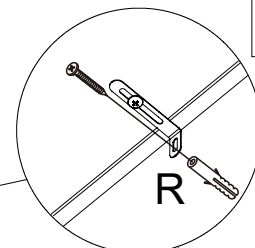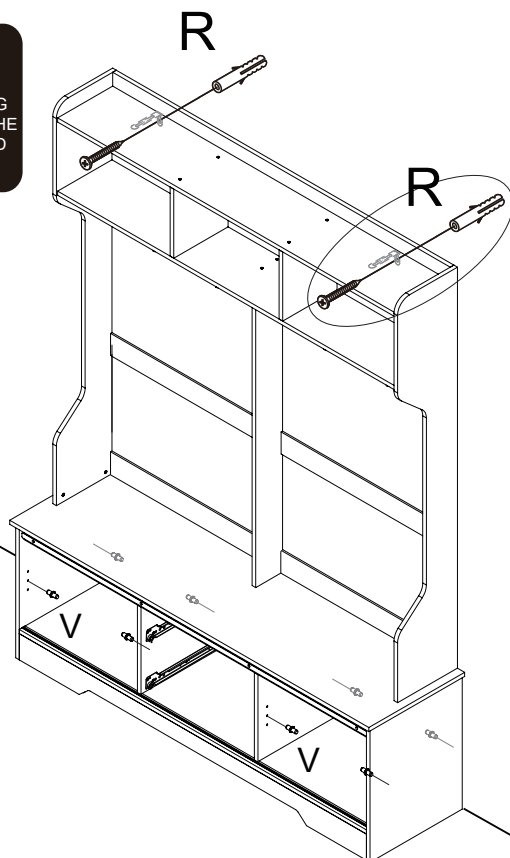


**WARNING:** Before  
drilling, check wall  
for hidden pipes and  
cables

PRODUCT ASSEMBLY


Step 31

D		8 pcs
---	---	-------

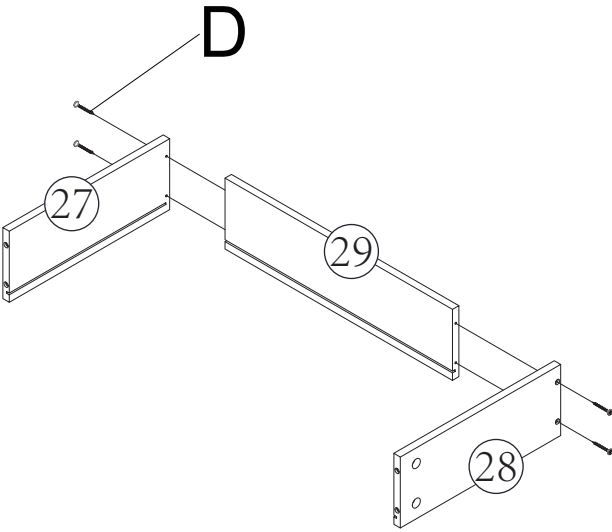



X2

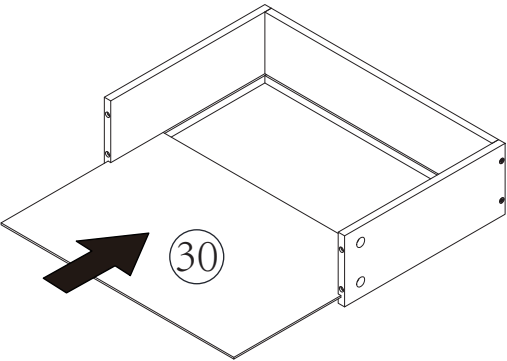
Step 30



X2

Step 32


A		8 pcs
B		8 pcs

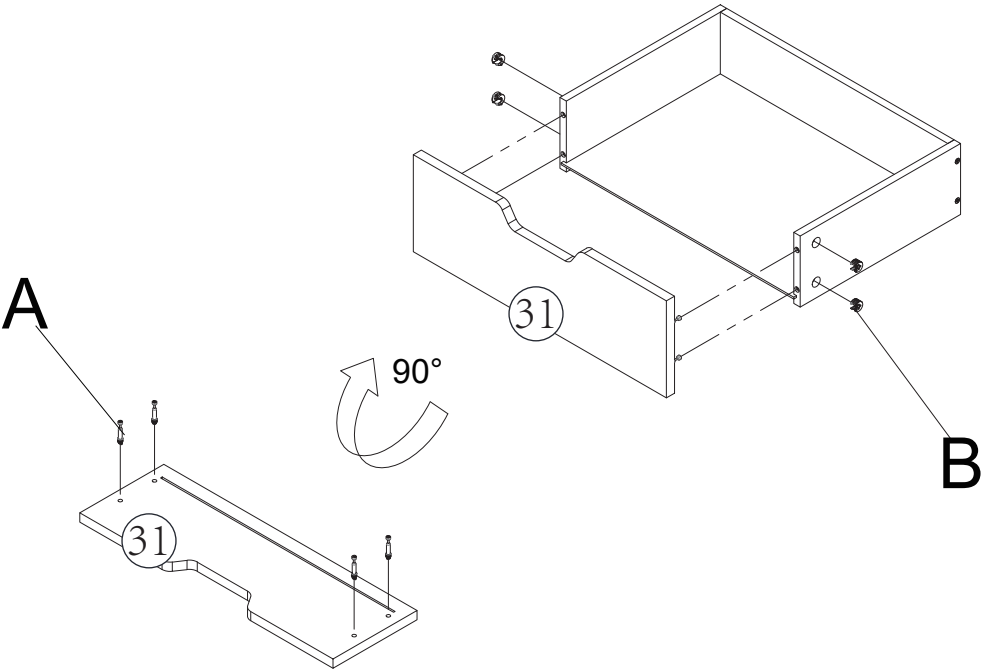




X2

PRODUCT ASSEMBLY

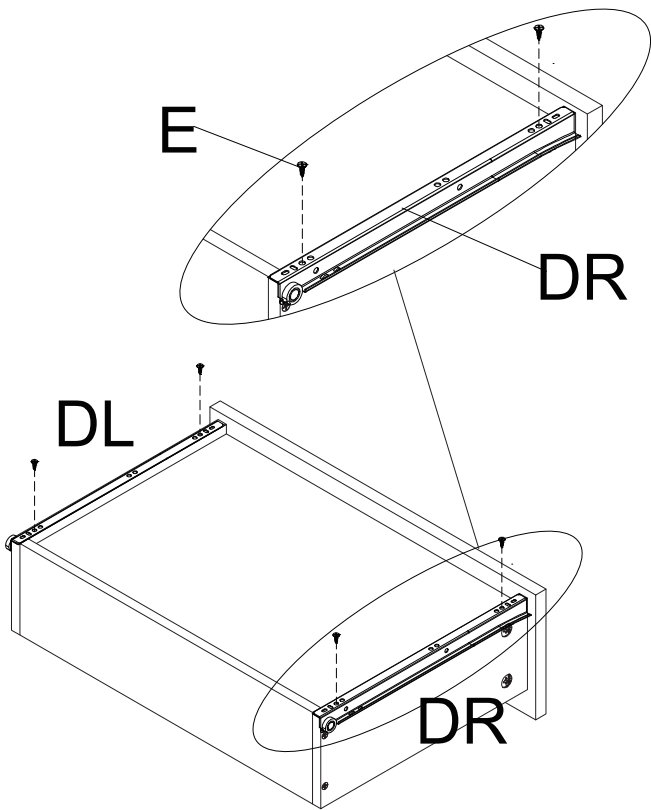
Step 33



E		8 pcs
DL		2 pcs
DR		2 pcs

X2



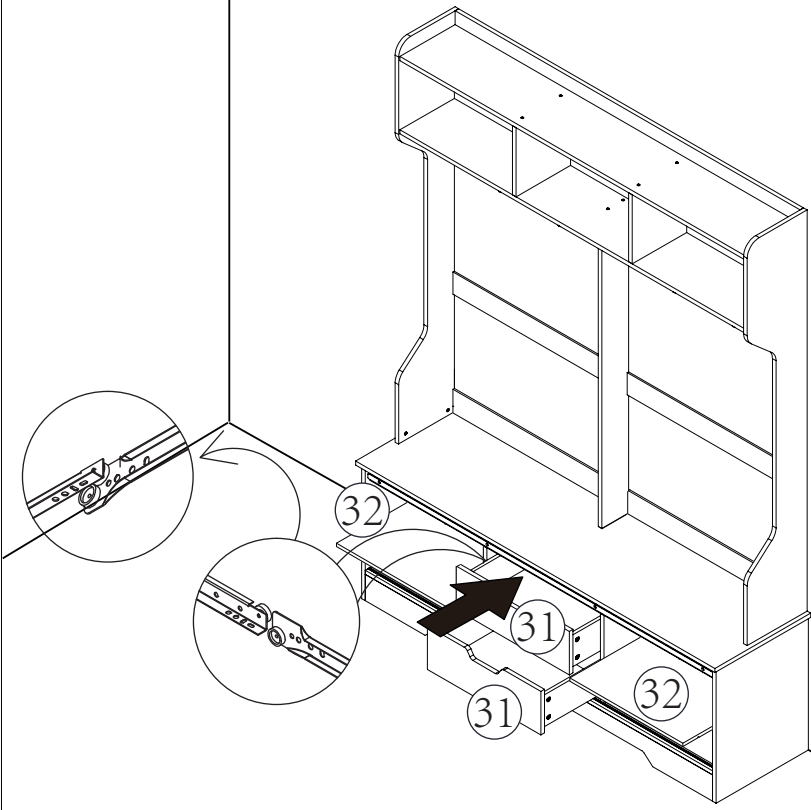

Step 34






PRODUCT ASSEMBLY


Step 35

F		8 pcs
J		4 pcs
K		4 sets
L		8 pcs

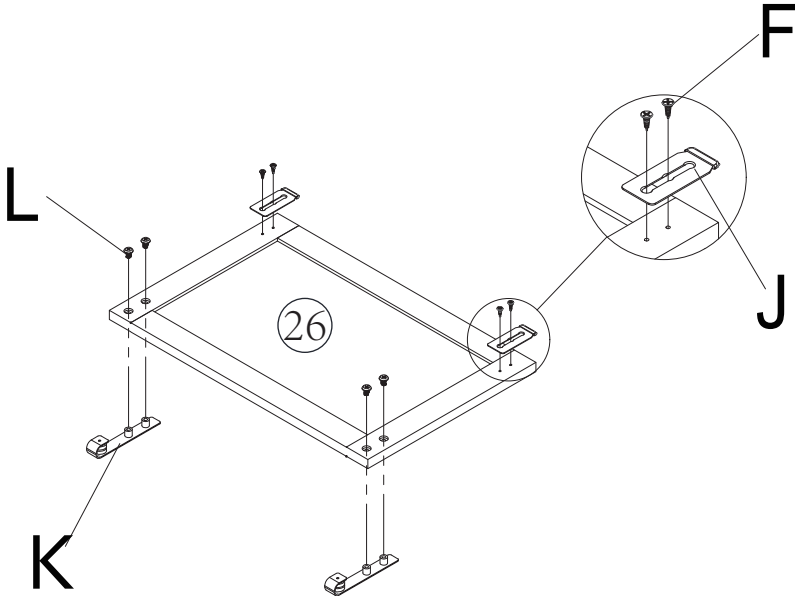


X2

Step 36

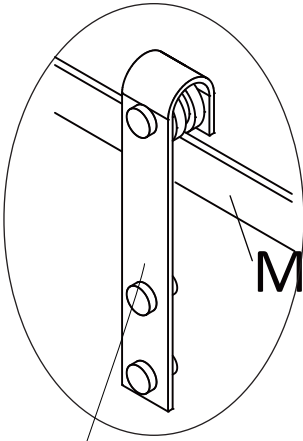

K

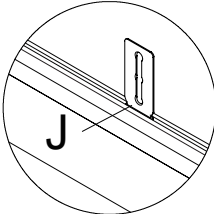

J

