
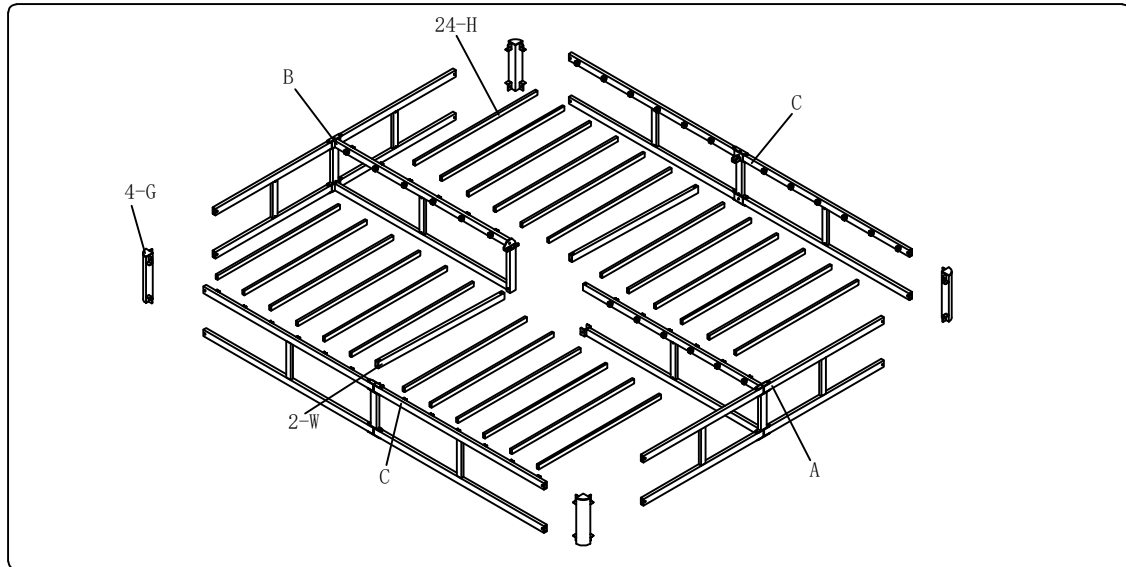






# BOX SPRING

## Set-up Instruction




Size: Full/Queen/ King/ Cal King

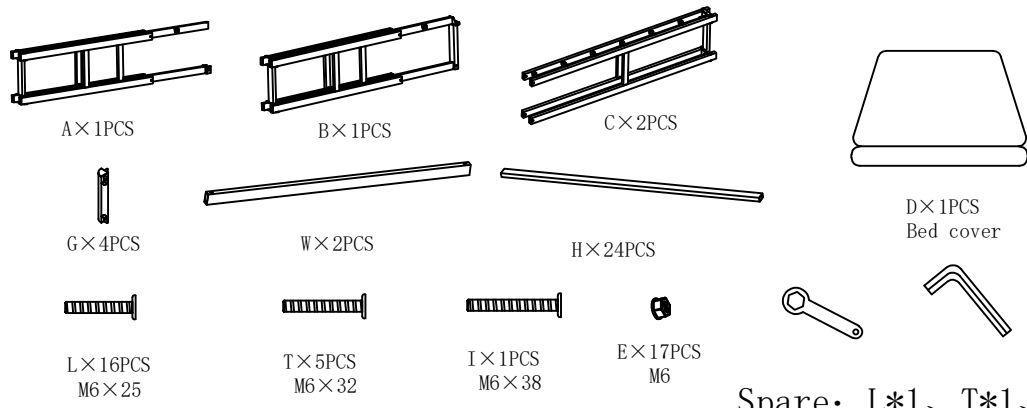



Step1: Unfold and layout parts A&B;  
Joint them with screws as shown

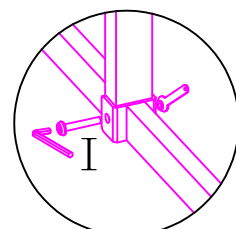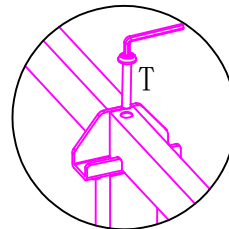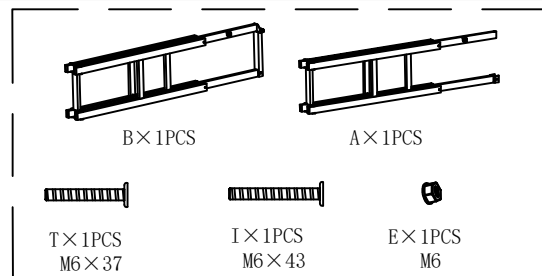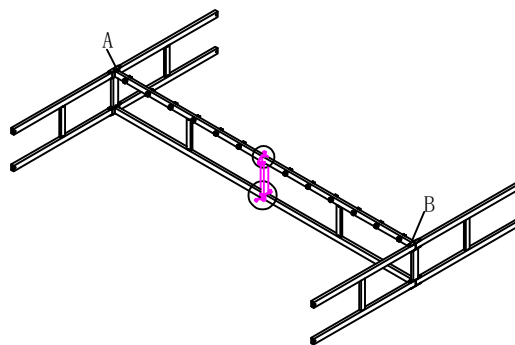



Step2: Joint four corners with screws as shown

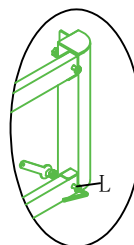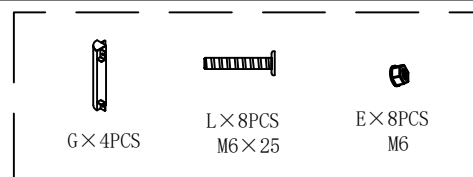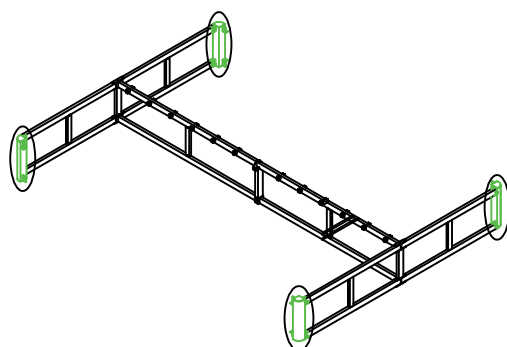



Step3:Joint parts C with screws as shown

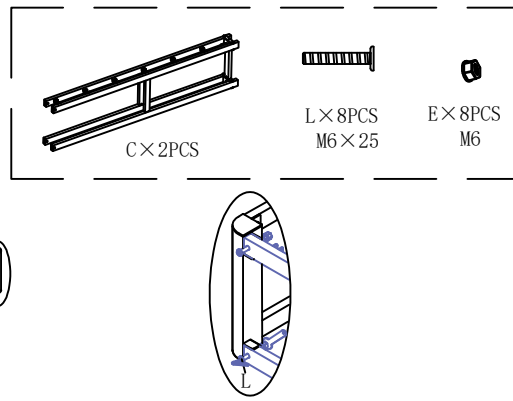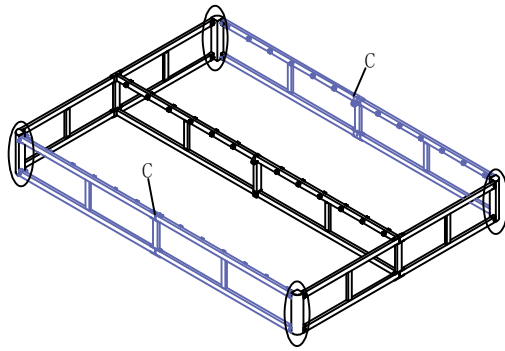



Step4:Joint parts E with screws as shown

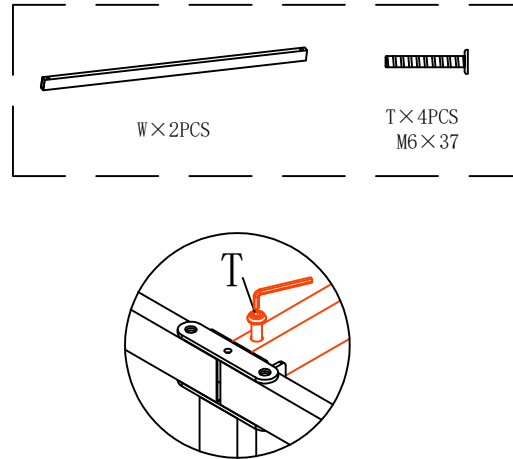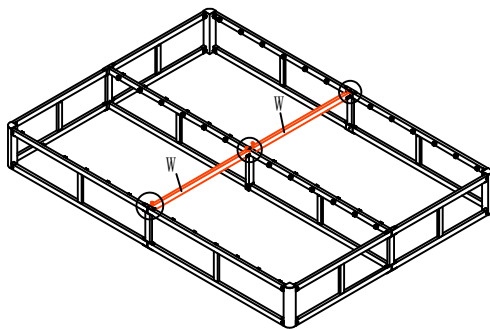

Step5:Insert 24 F slats

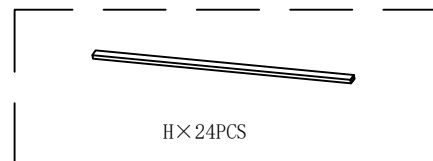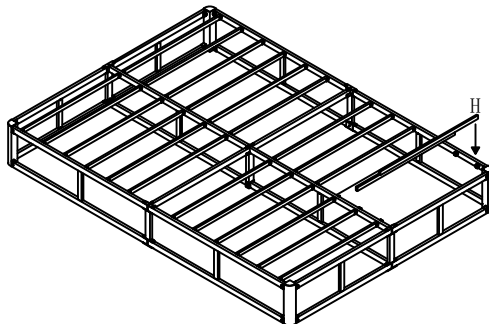

Step 6: Put on the fabric cover-D, completed

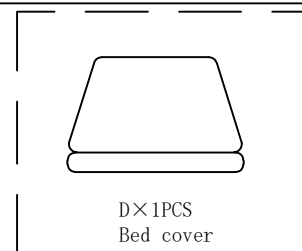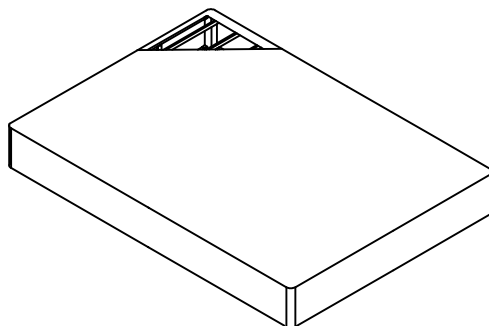

If you have any questions about the product, please don't hesitate to contact us.  
You can reach us through your order. Thanks for your support!