




Loft Bed

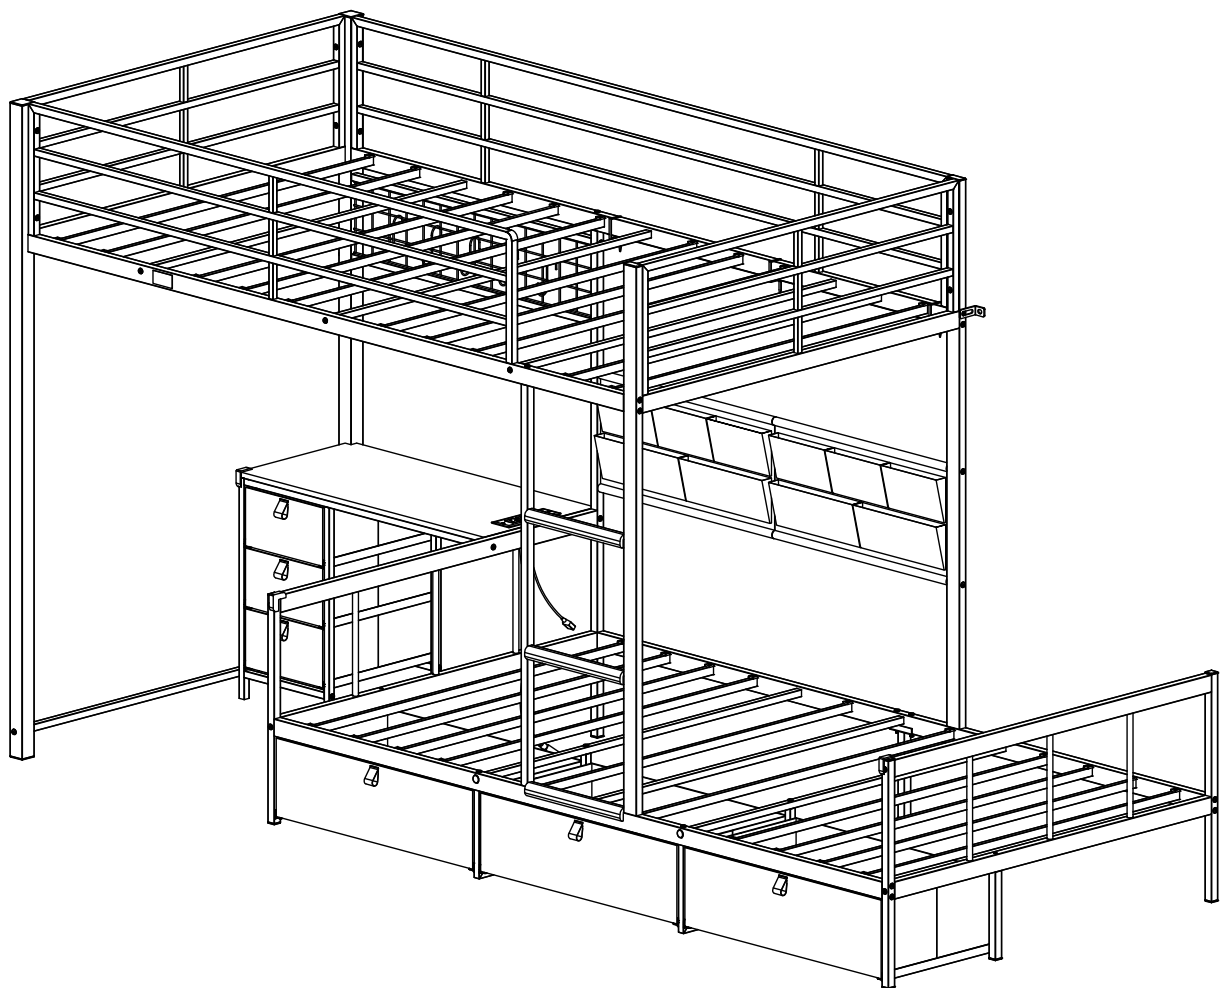

Version 1.0


! IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.

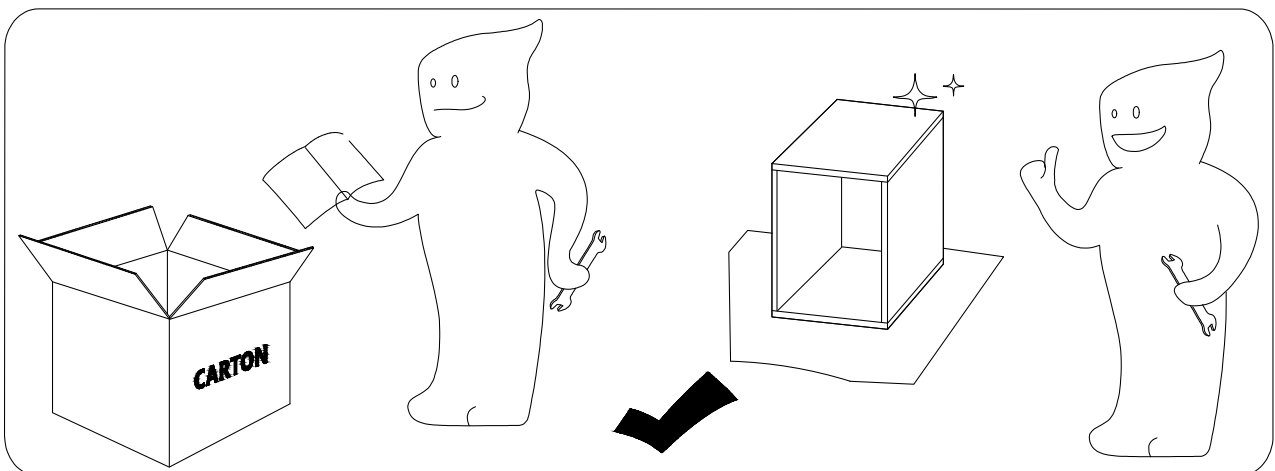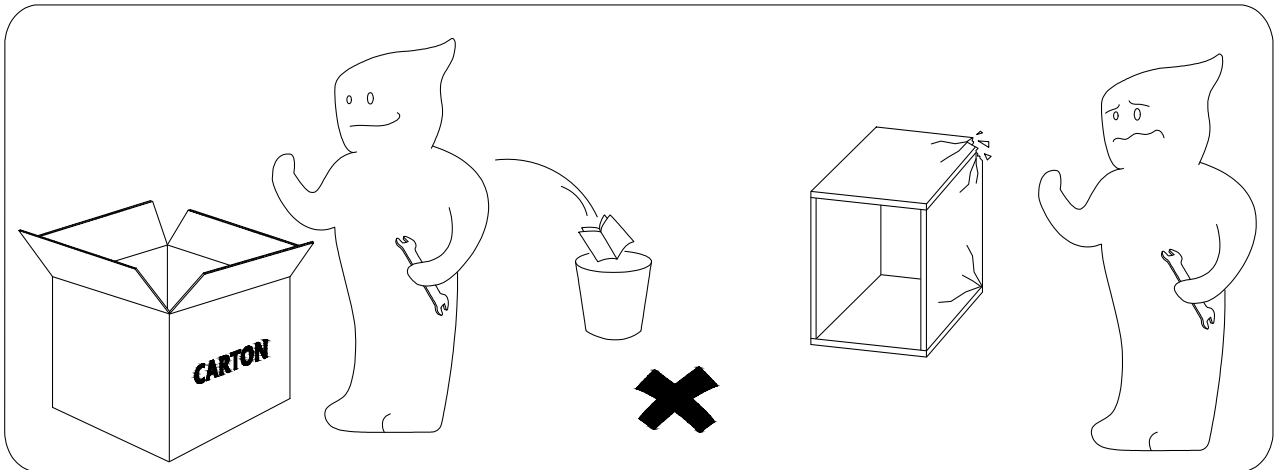


Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

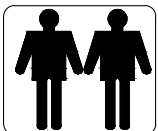


For easier and better assembly, 2 or more adults are required.

PARTS LIST




1 × 1



3 × 1




5 × 2



7 × 1




9 × 20




11 × 1



13 × 2



2 × 1



4 × 1




6 × 1



8 × 4



10 × 1




12 × 1




14 × 2

PARTS LIST



15 × 1




16 × 1



17 × 2




18 × 1




19 × 1




20 × 3




21 × 2



22 × 1



23 × 1



24 × 2




25 × 2




26 × 2



27 × 2




28 × 6



29 × 6



30 × 1




31 × 3




32 × 3


Install parts




33 × 1

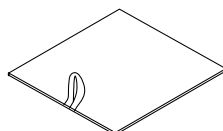


34 × 1




35 × 1

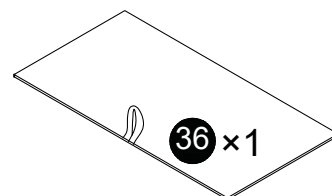


36 × 1



37 × 40



38 × 2

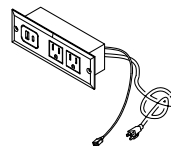


39 × 1




40 × 5




41 × 1




42 × 1




43 × 1

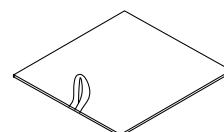


44 × 1




45 × 1

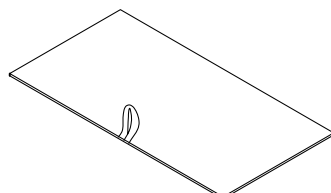


46 × 1




47 × 1

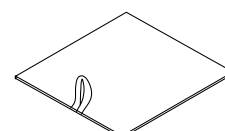


48 × 1



49 × 1

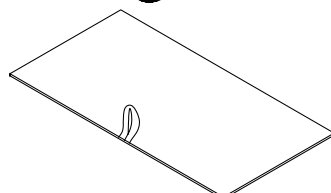

50 × 1



51 × 3

HARDWARE LIST



A

M4*12
x2+1



B

M6*24
x6+1




C

M6*35
x18+1



D

M6*40
x37+3



E

M6*50
x2+1



F

M6*60
x29+2



G

M6 washer
x9+1



H

4#
x1




I

4#
x1



J

10#
x1



K

M6
x2




L

Ø14
x4

Note:

1, Should be assembled on flat ground to keep balance.


2. Before completing the installation, do not tighten the screws.

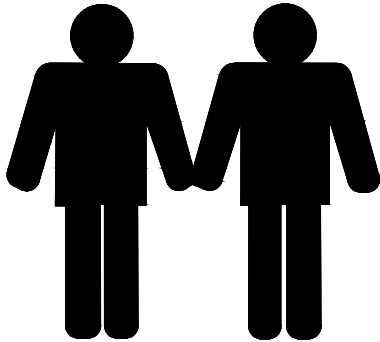


It needs at least two people to install



Before starting the assembly, you must read the whole manual and follow the instructions.

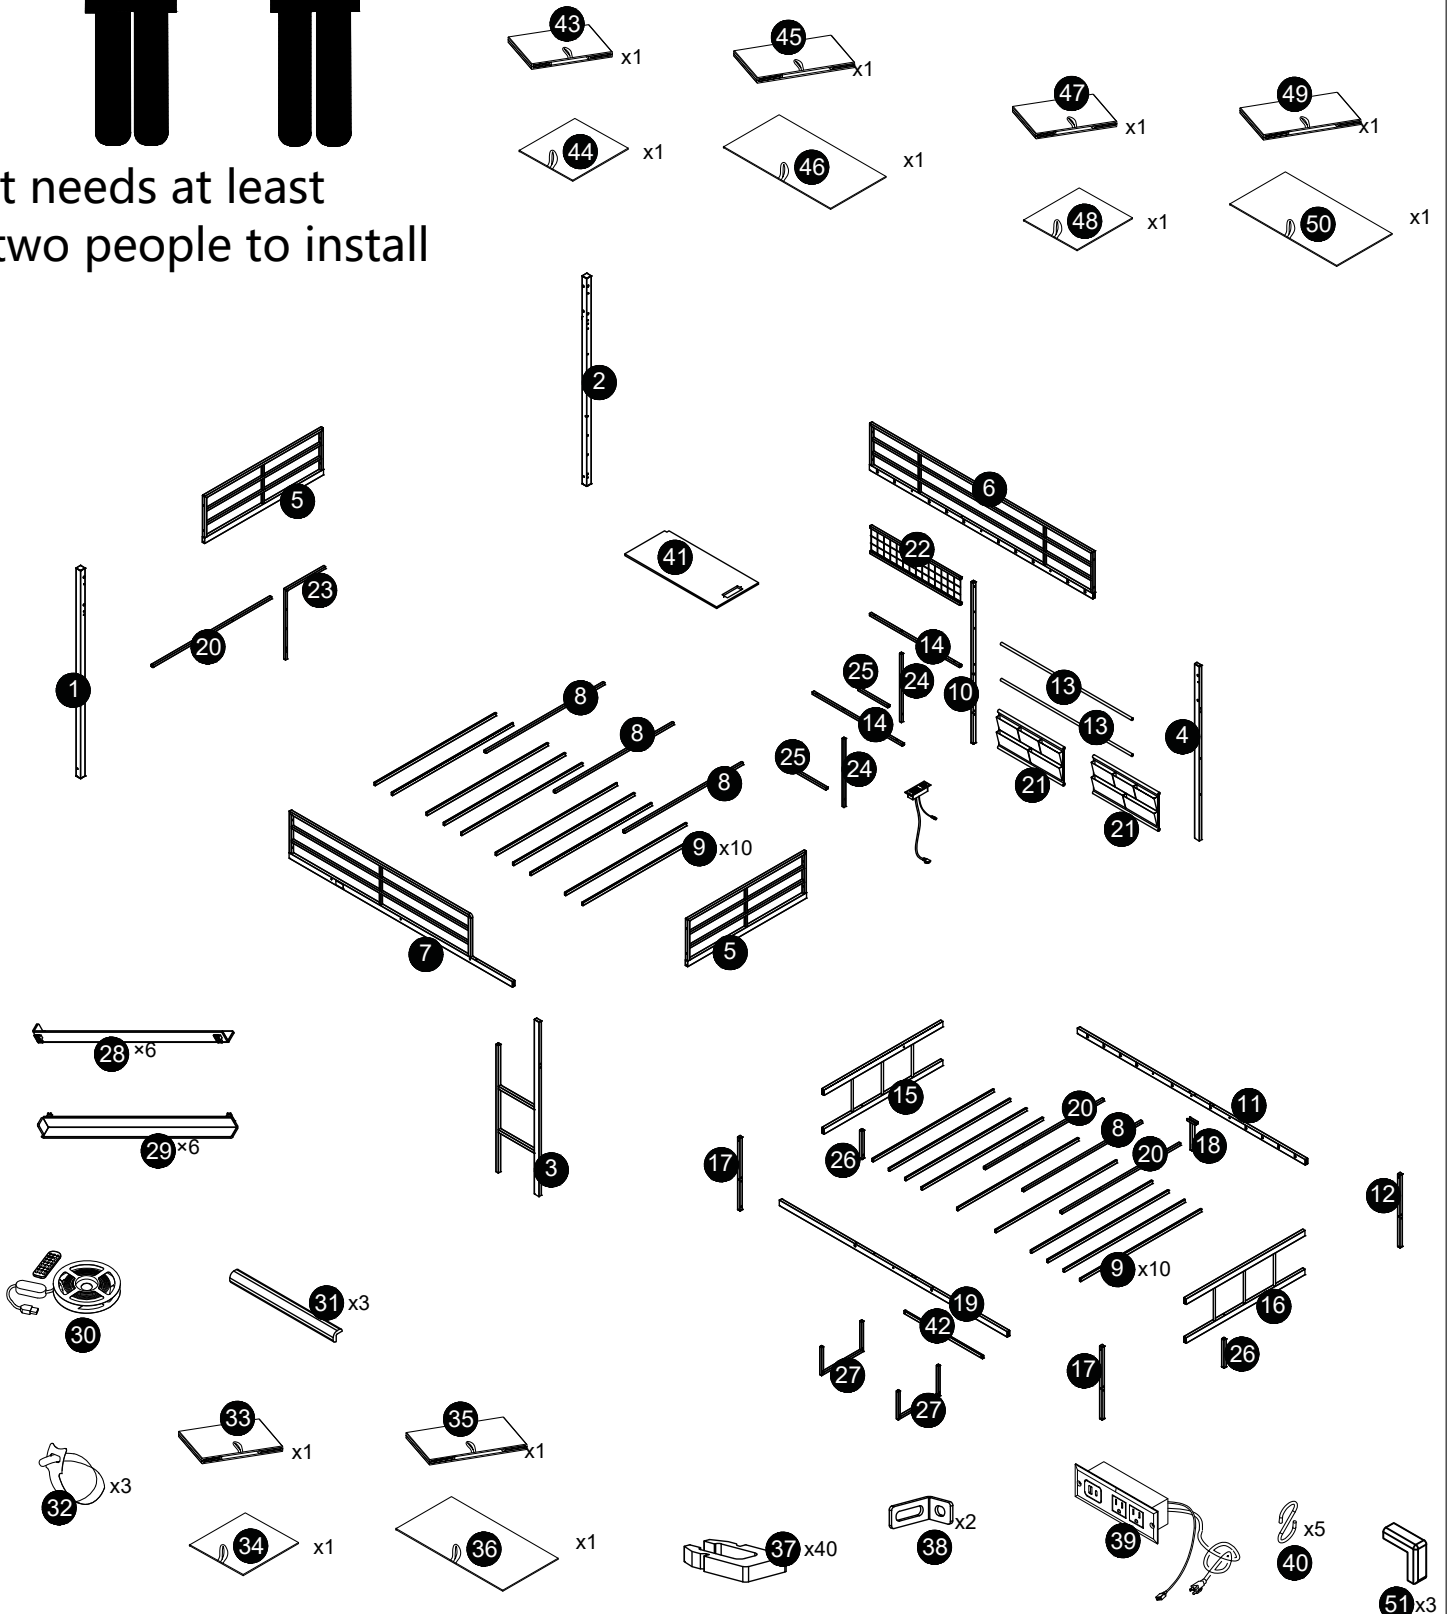


1

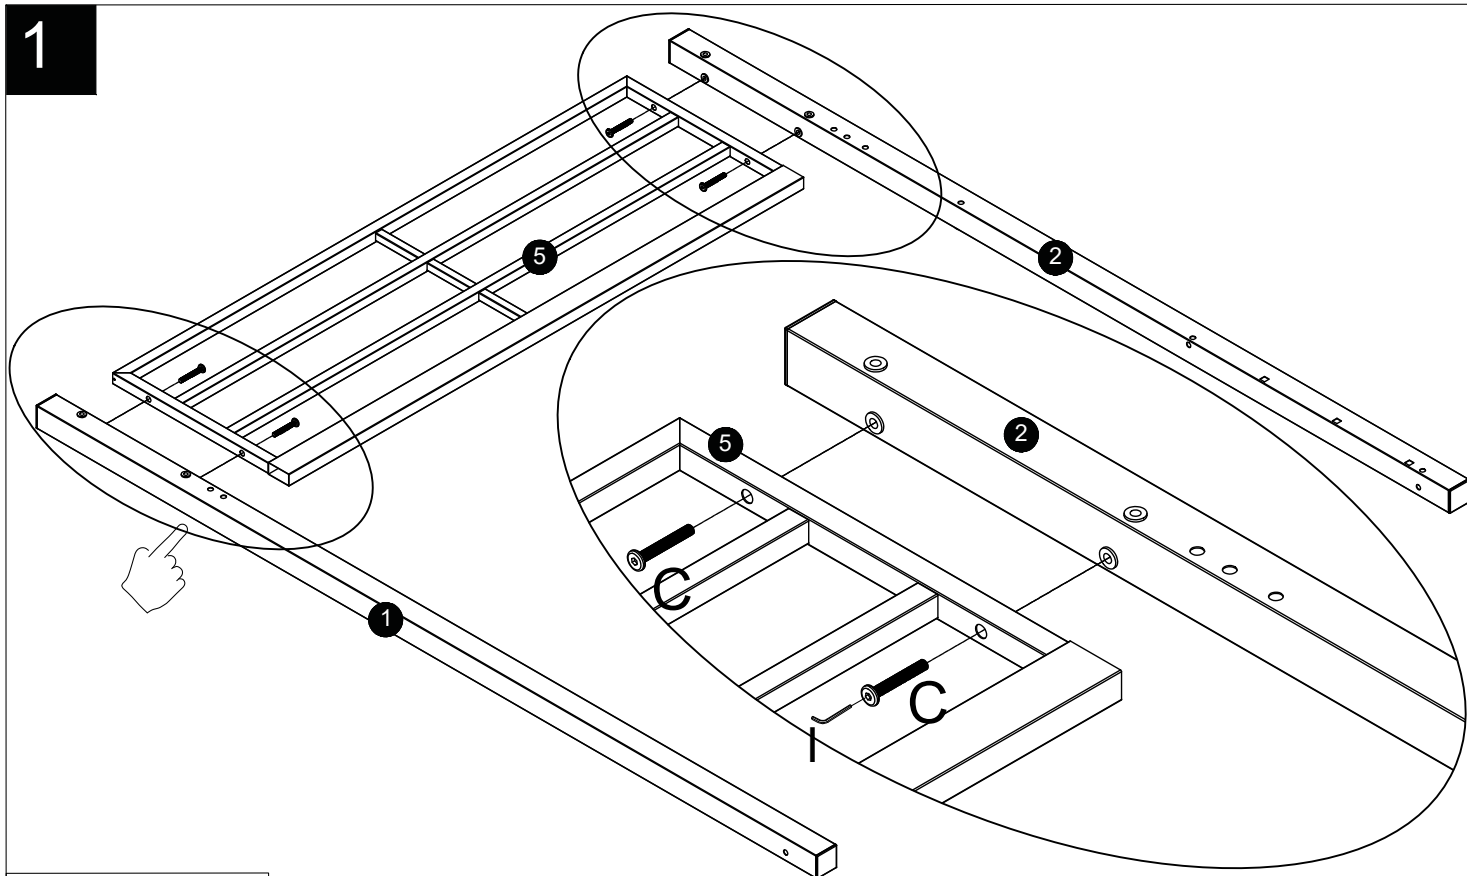


C M6*35
x4



2

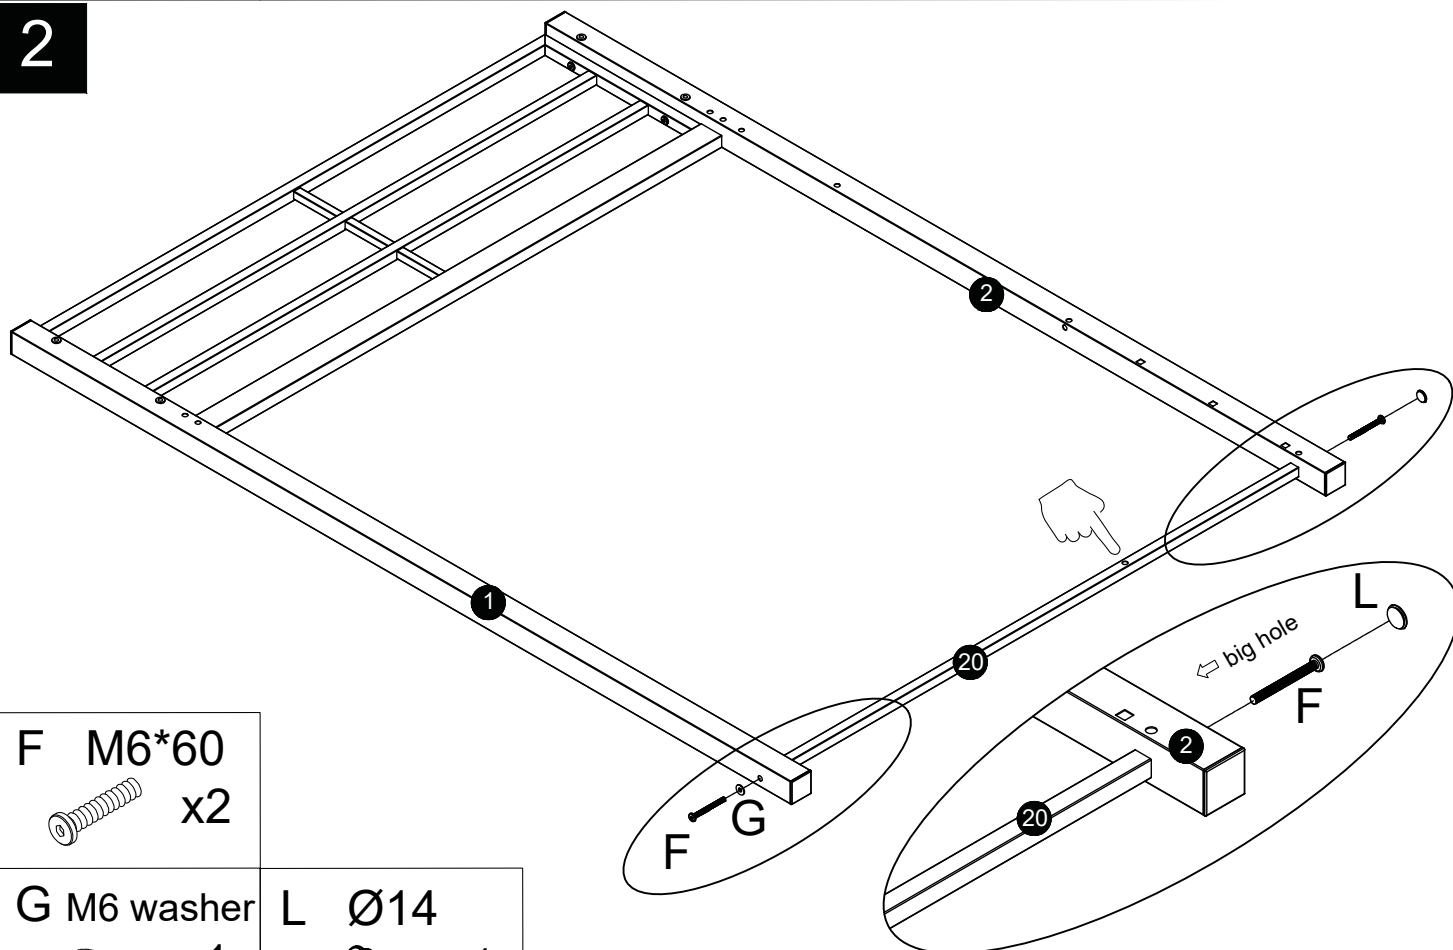

F M6*60
x2




G M6 washer
x1



L Ø14
x1




3

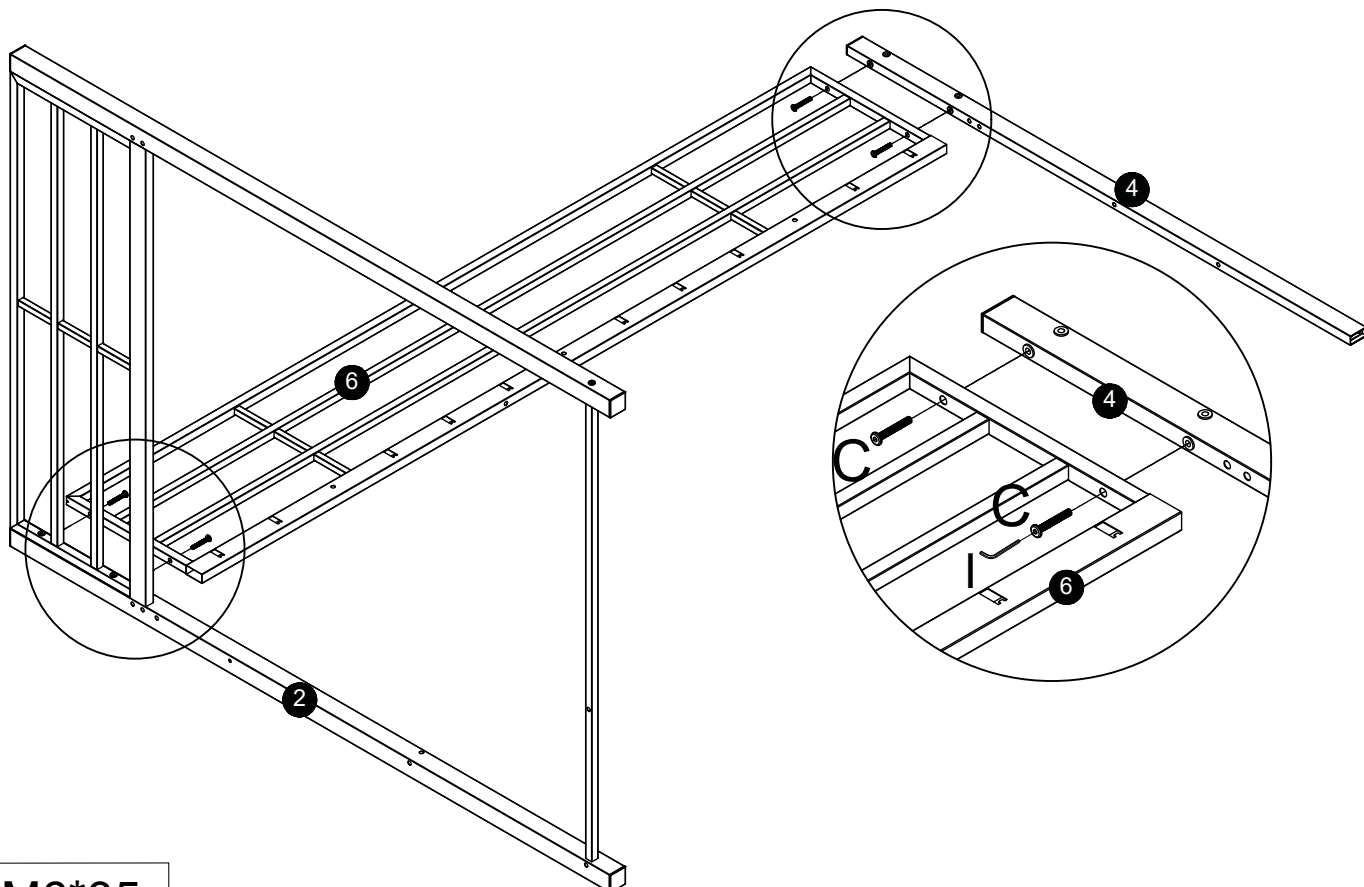


C M6*35
x4



4

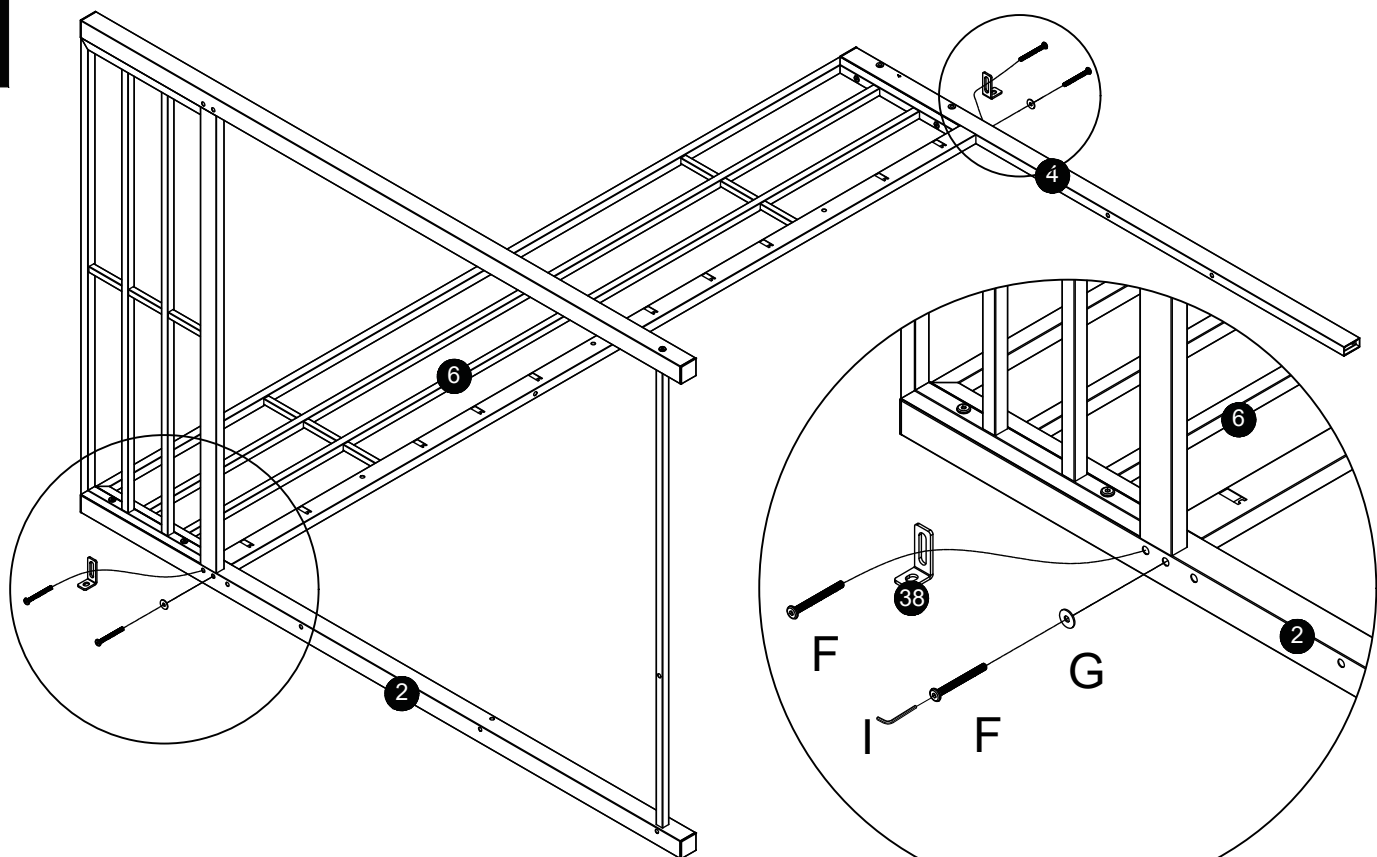


F M6*60
x4



G M6 washer
x2



5

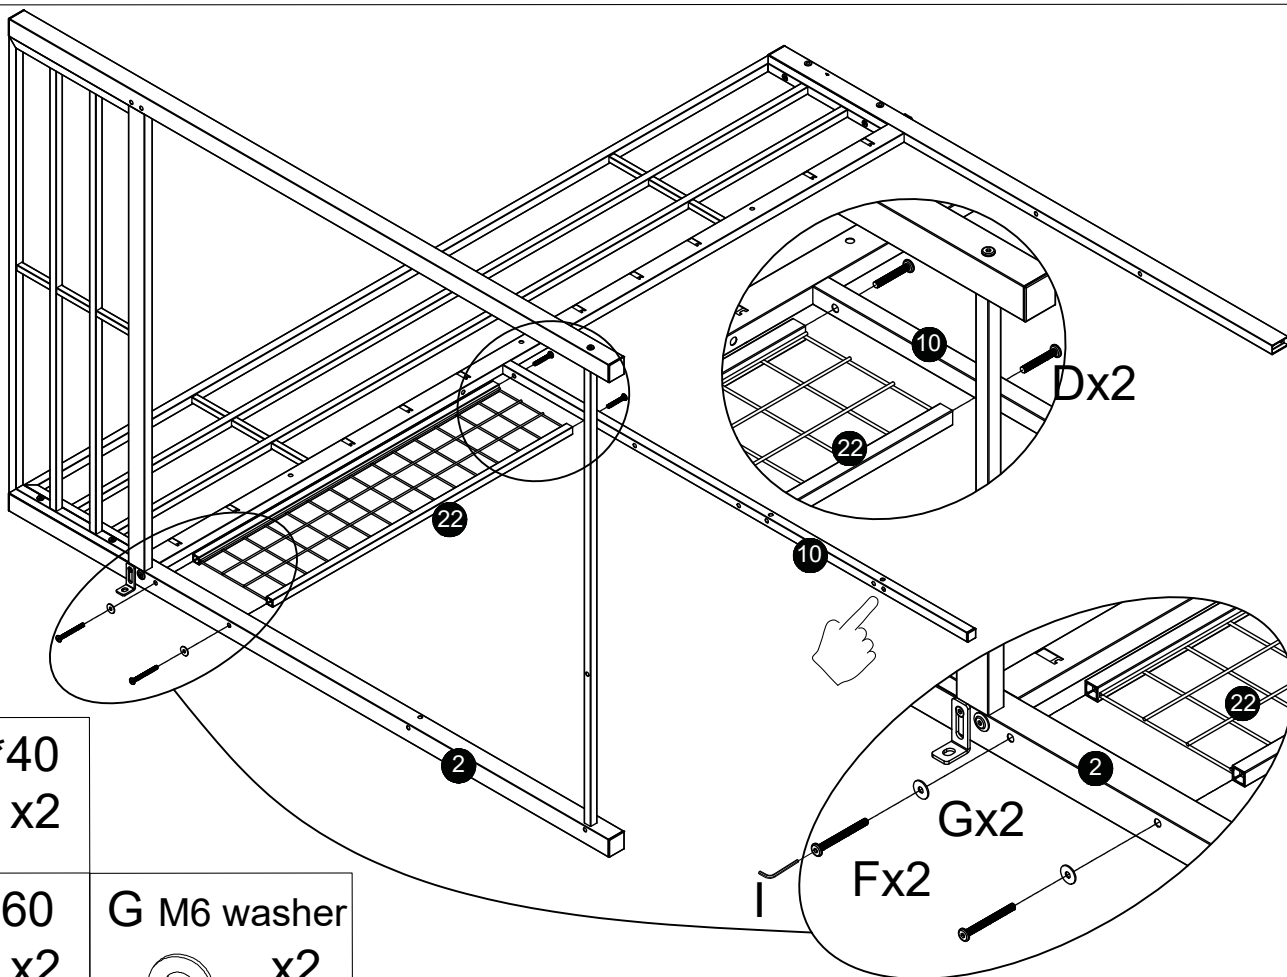


D M6*40
x2

F M6*60
x2


G M6 washer
x2

6

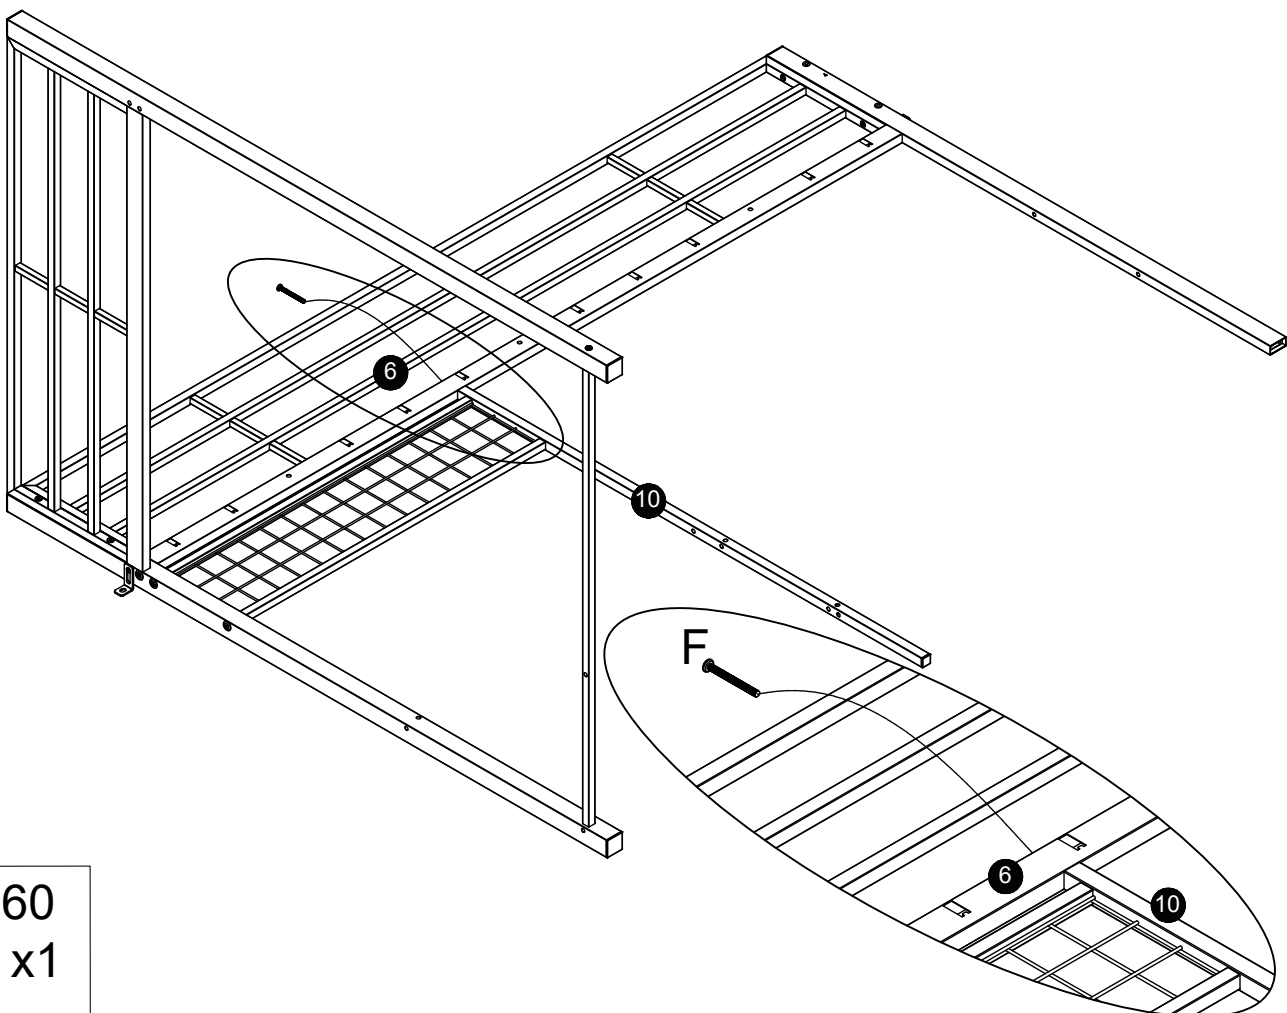


F M6*60
x1

7

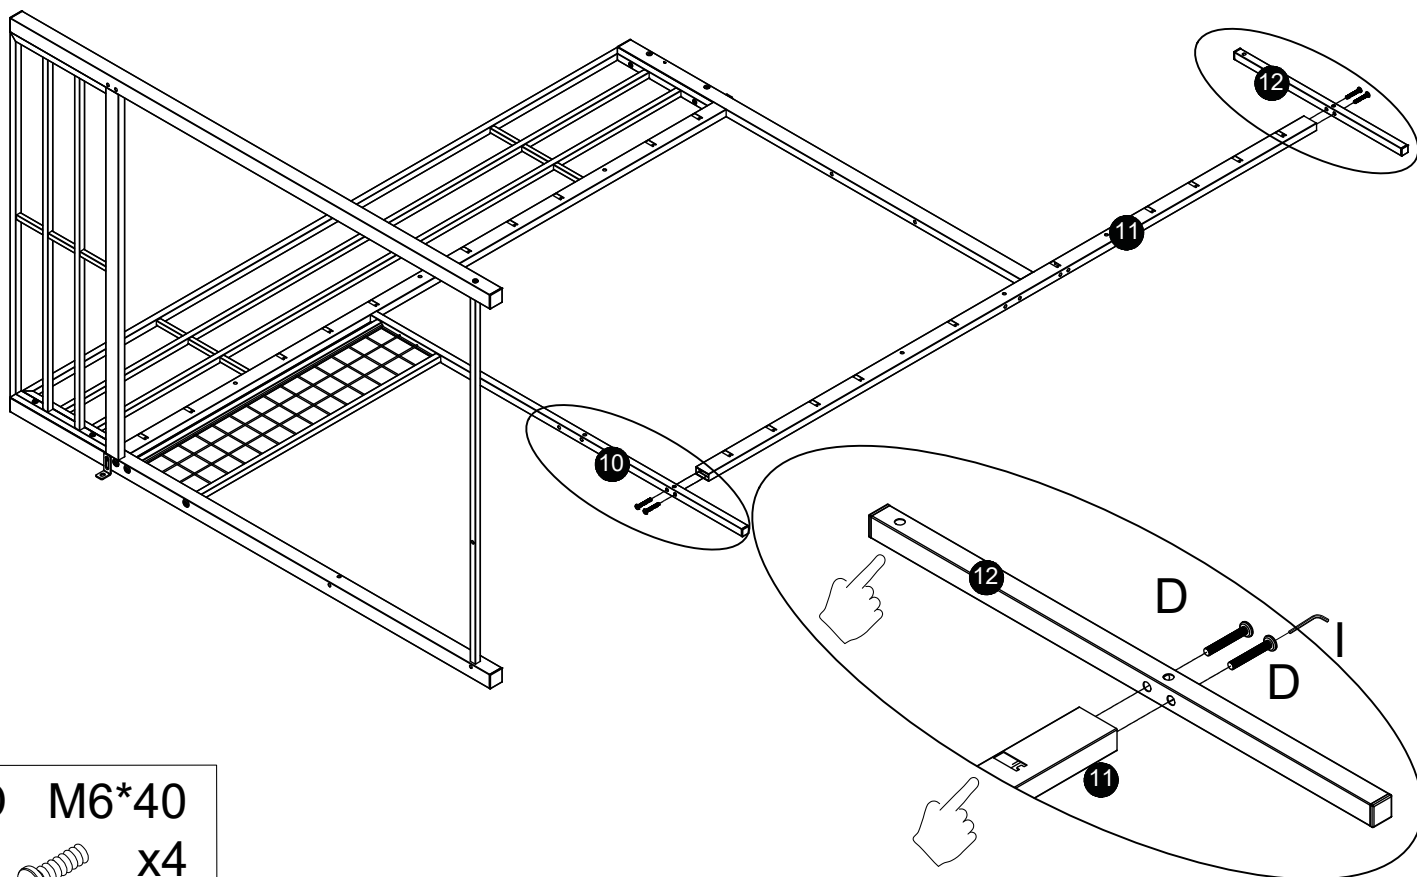

D M6*40
x4


8

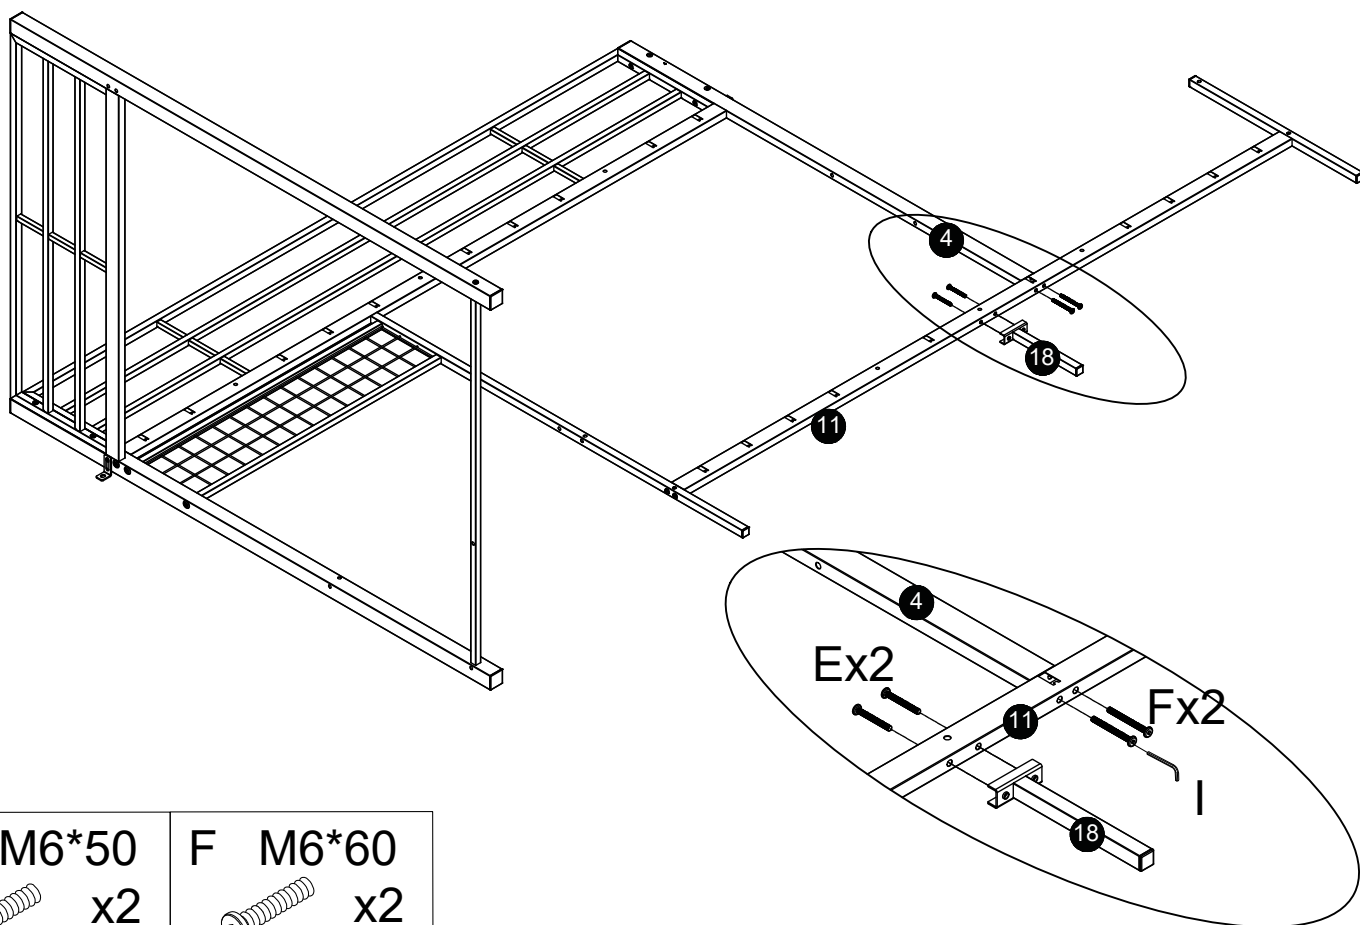

E M6*50
x2

F M6*60
x2

9

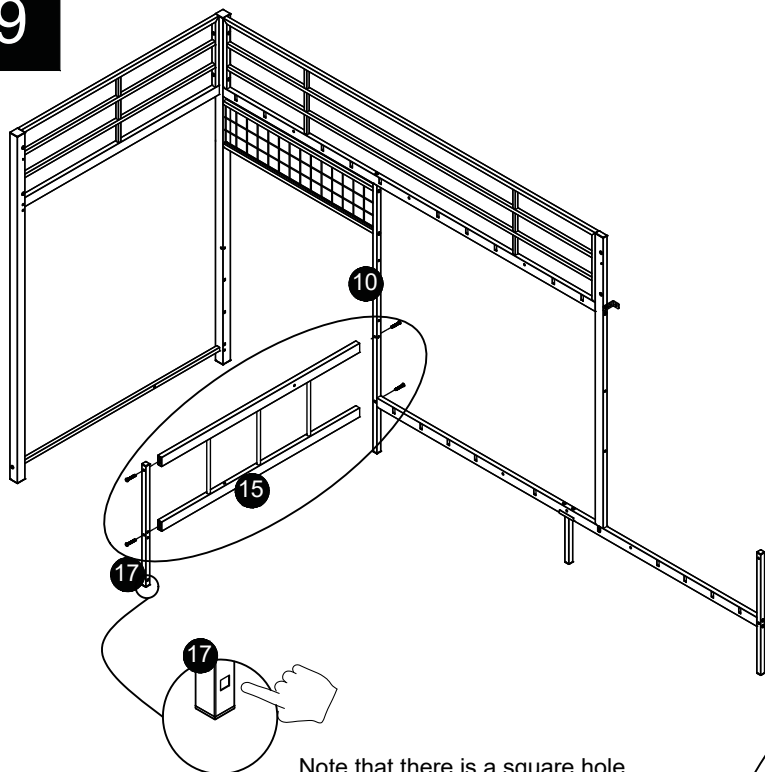


Note that there is a square hole on the right side.


D M6*40



x4

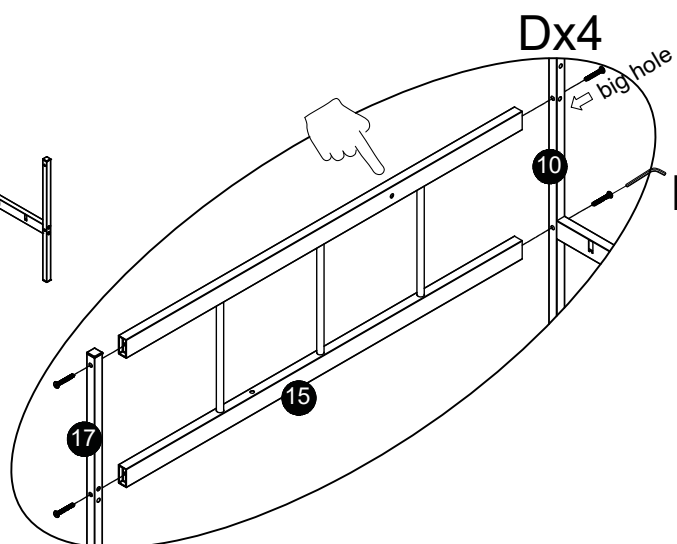

10

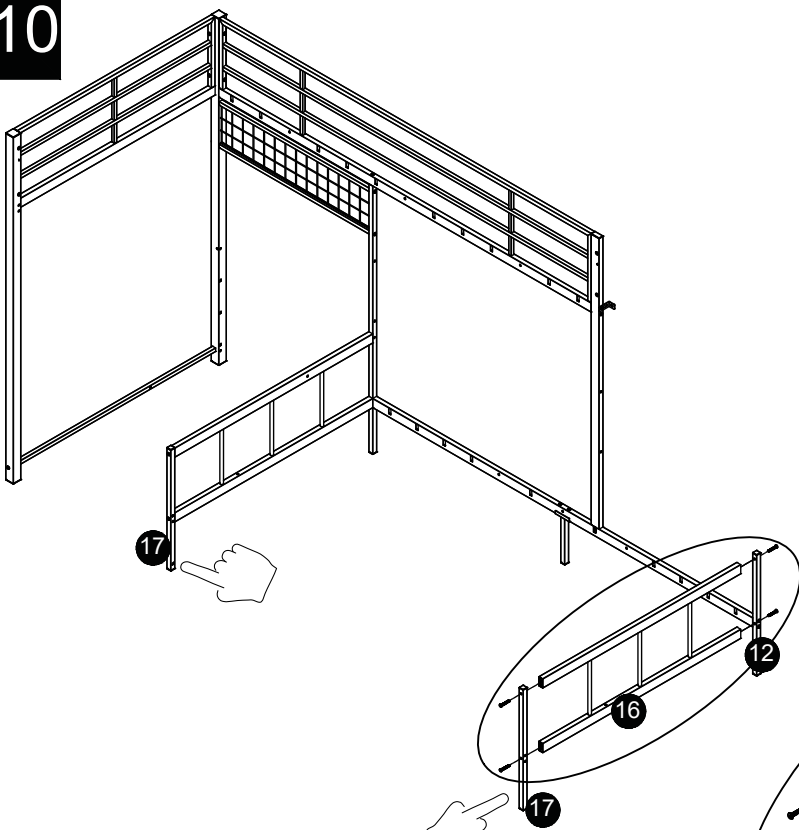


Note that there is a square hole on the left side.



D M6*40



x4


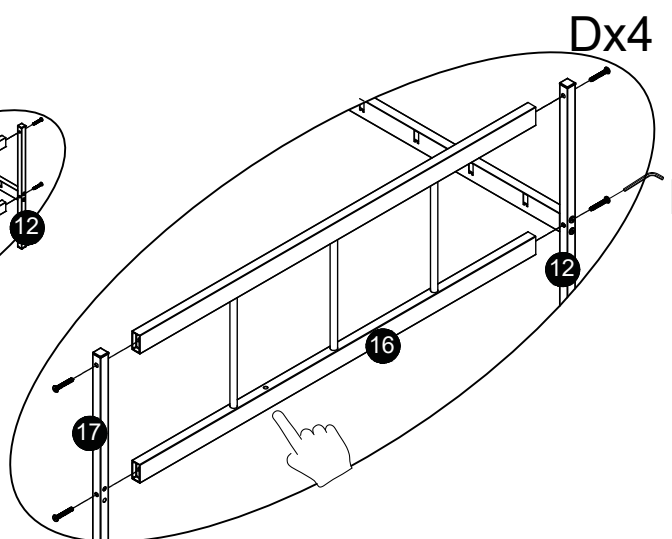


11

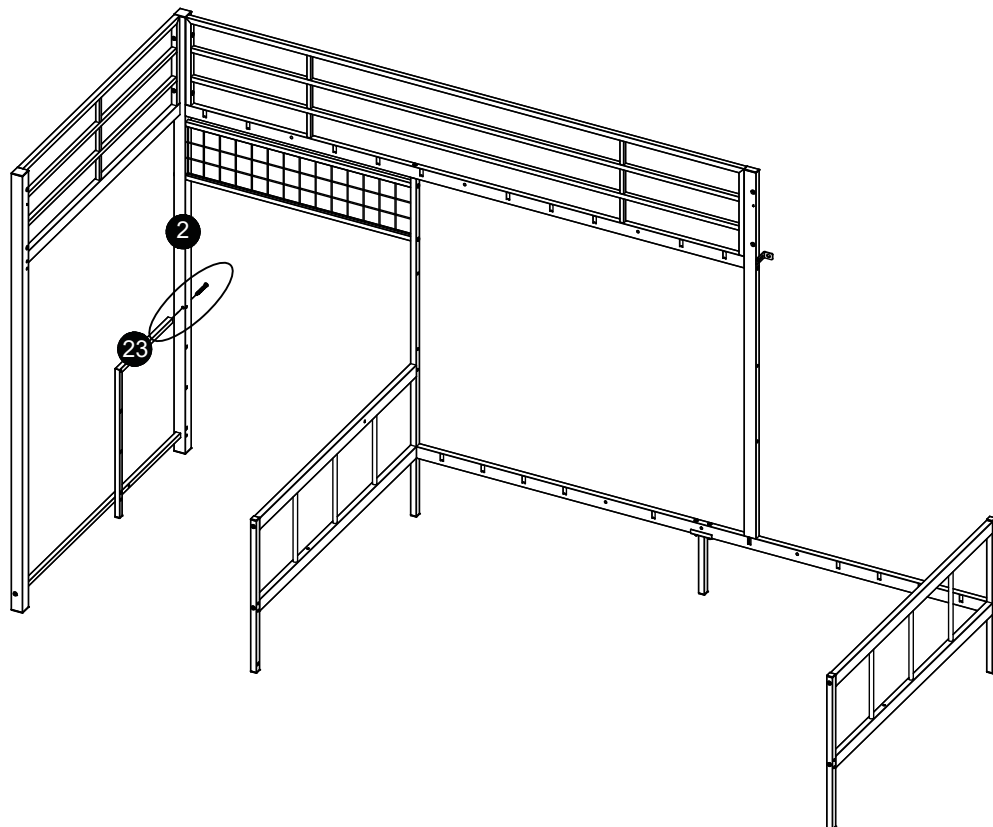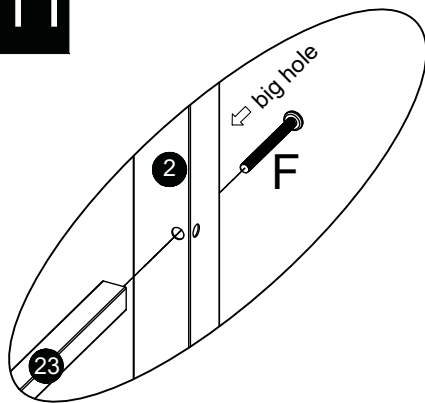

F M6*60
x1



12

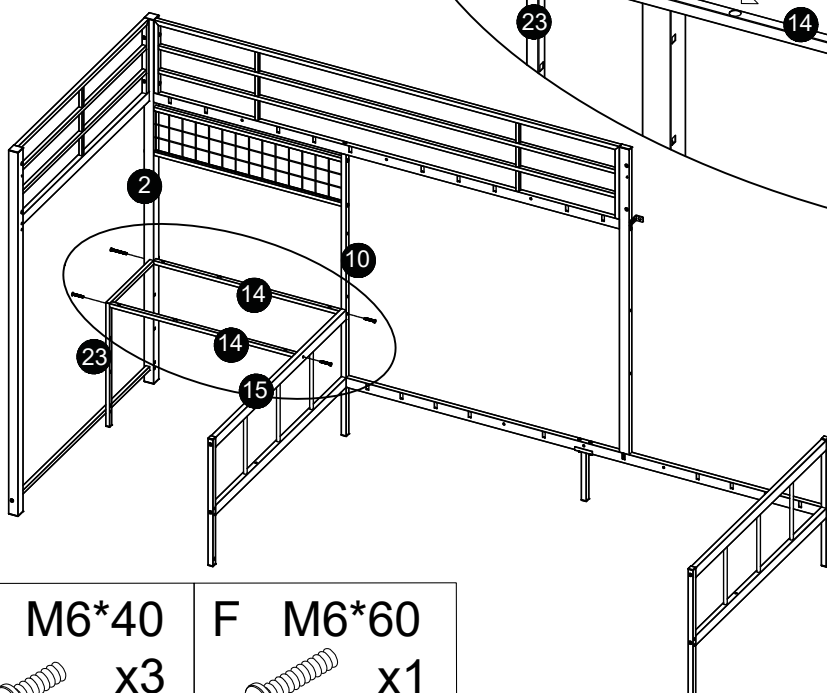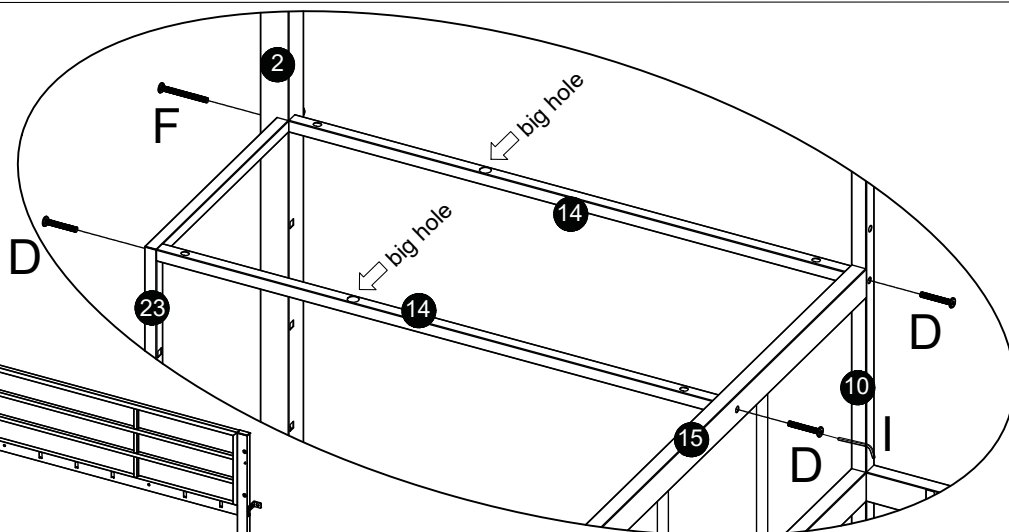

D M6*40
x3

F M6*60
x1



13

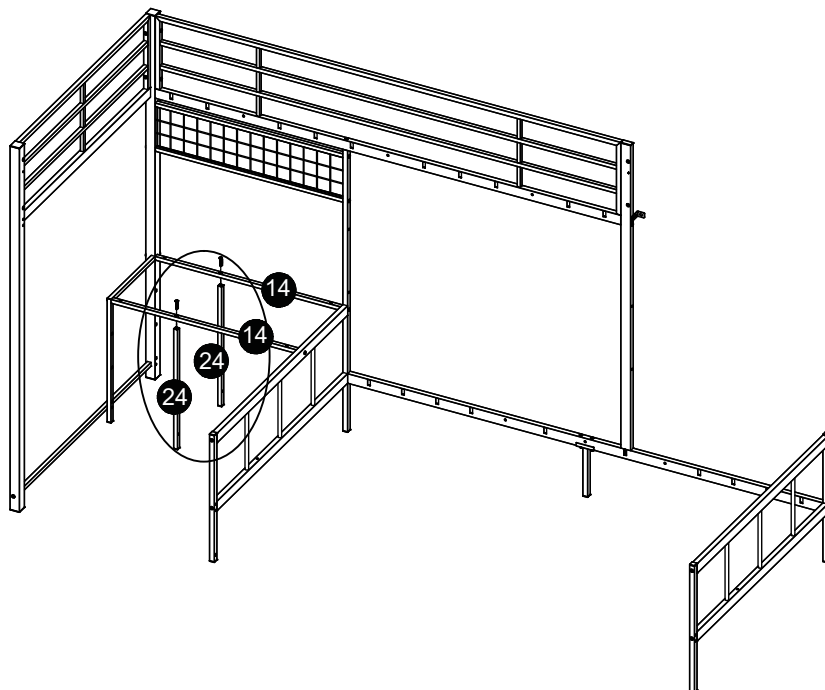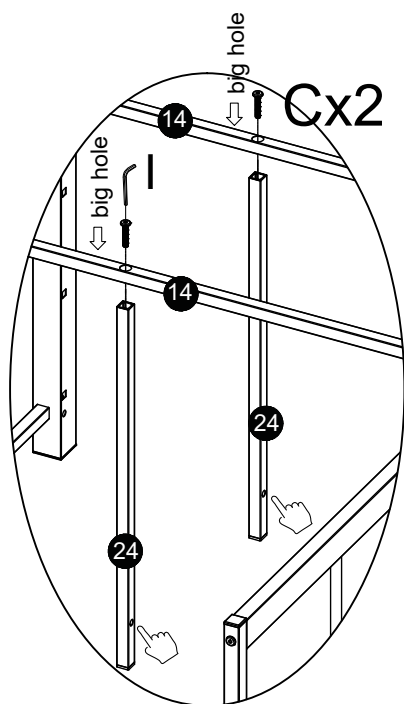

C M6*35
x2




14

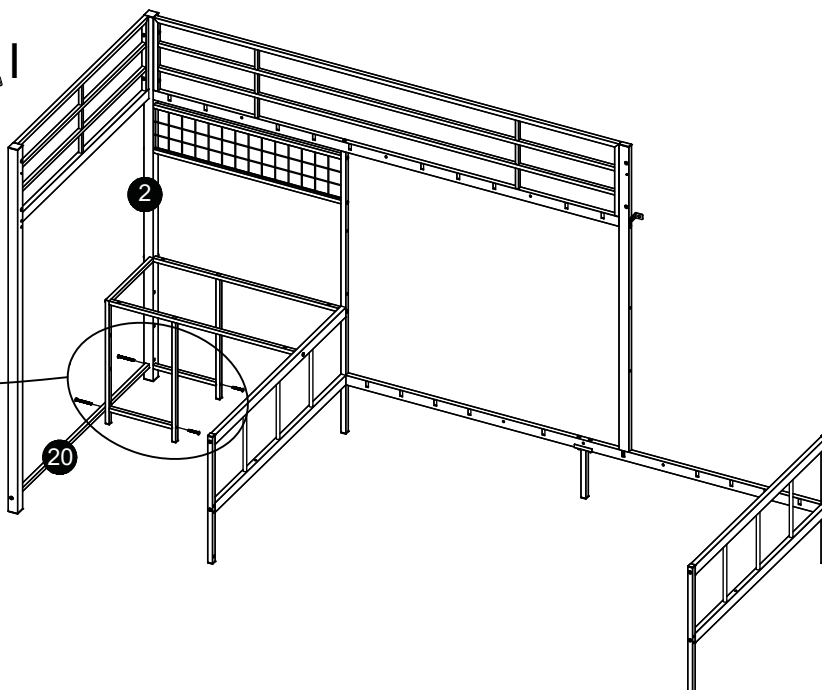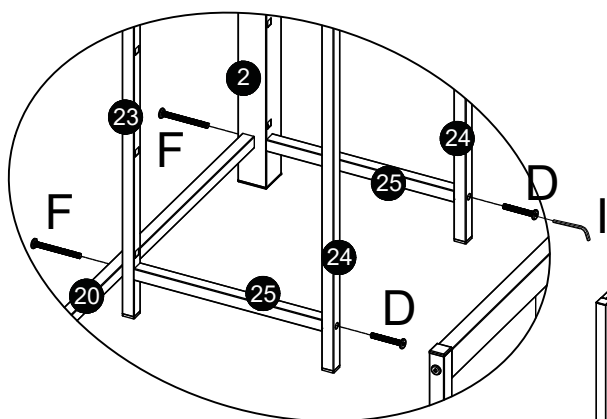


D M6*40
x2




F M6*60
x2





15

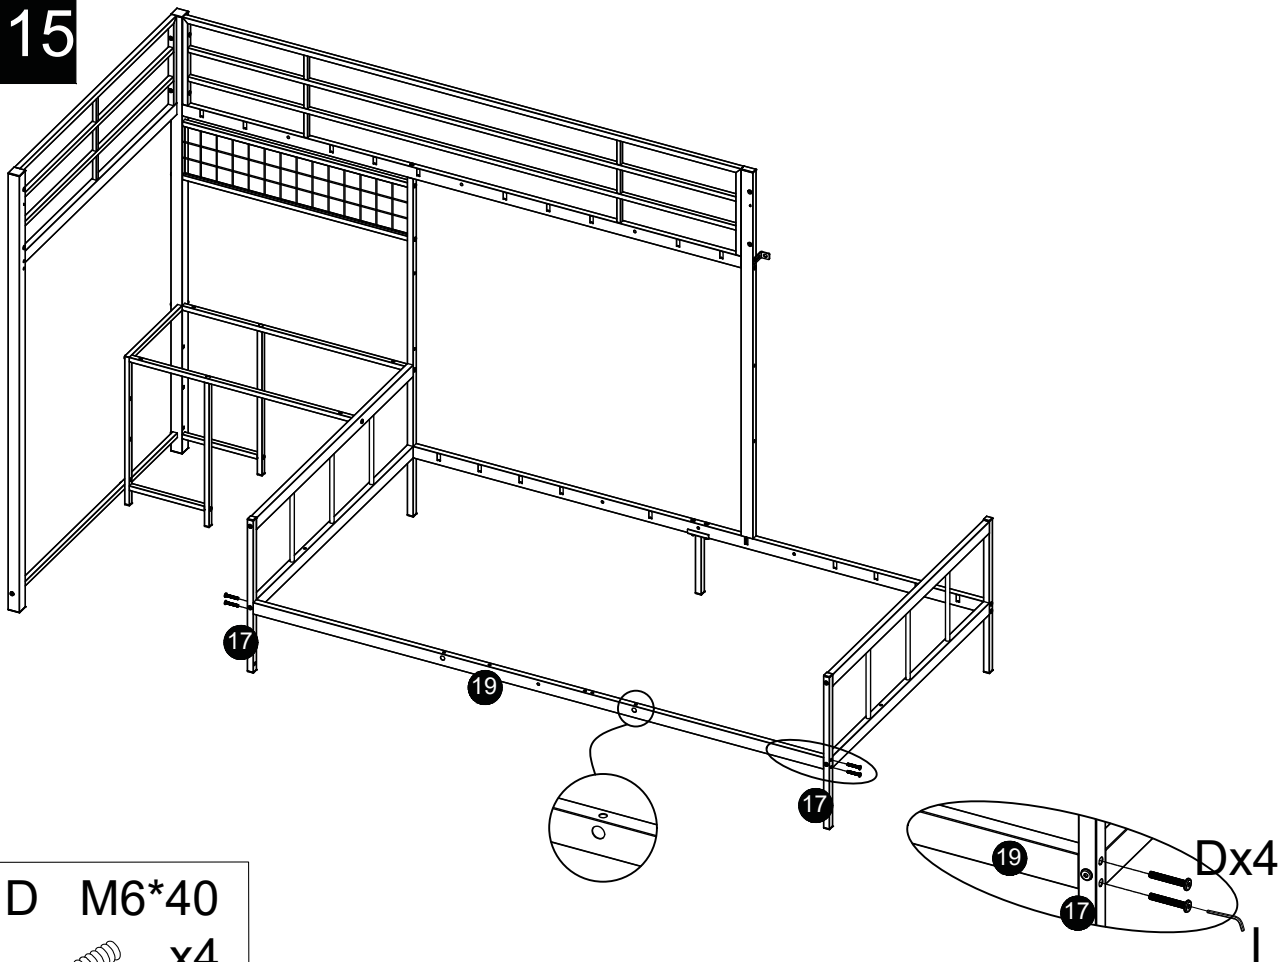

16

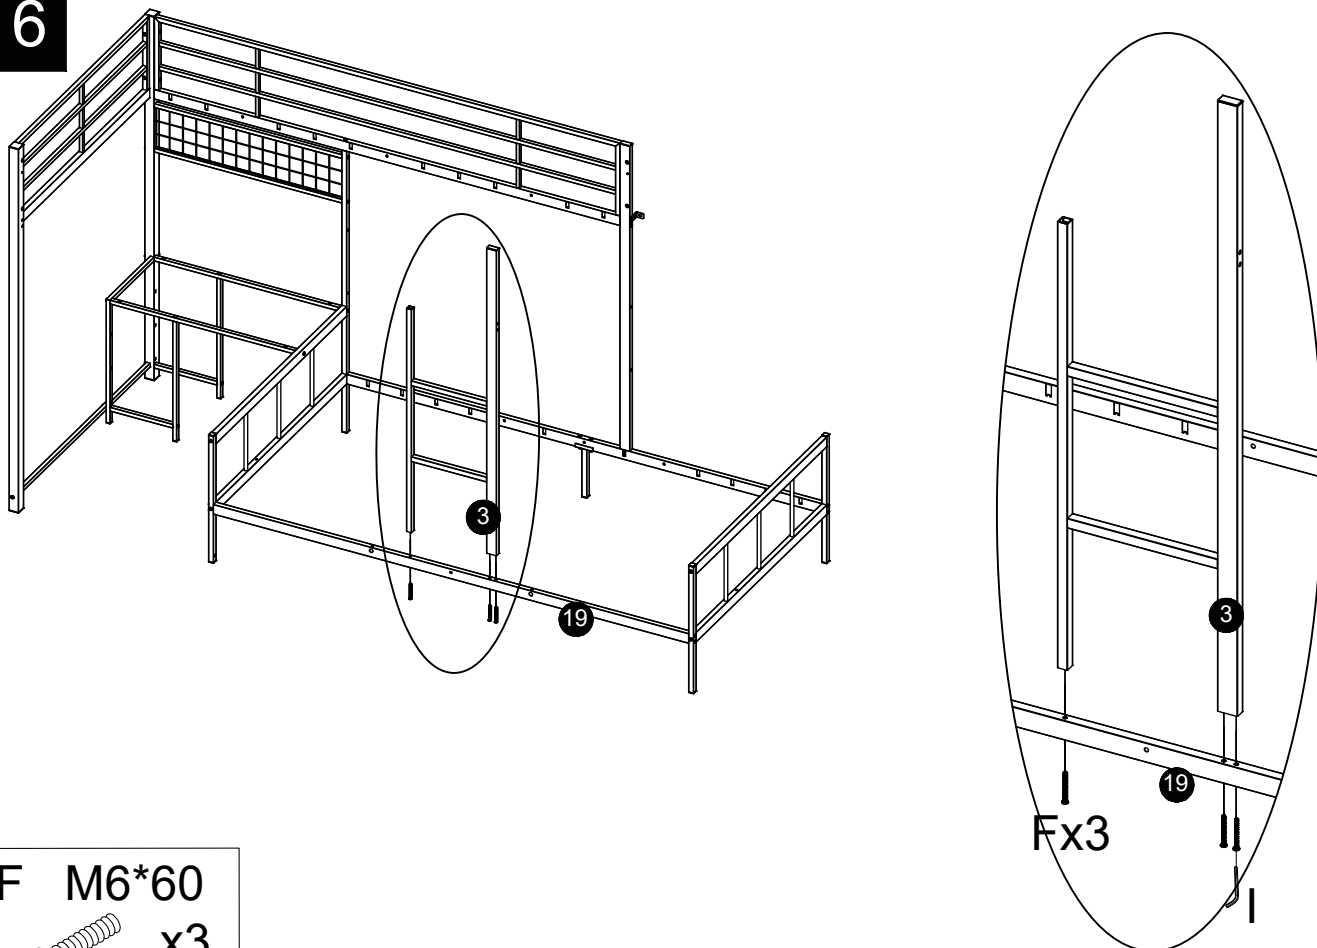

17

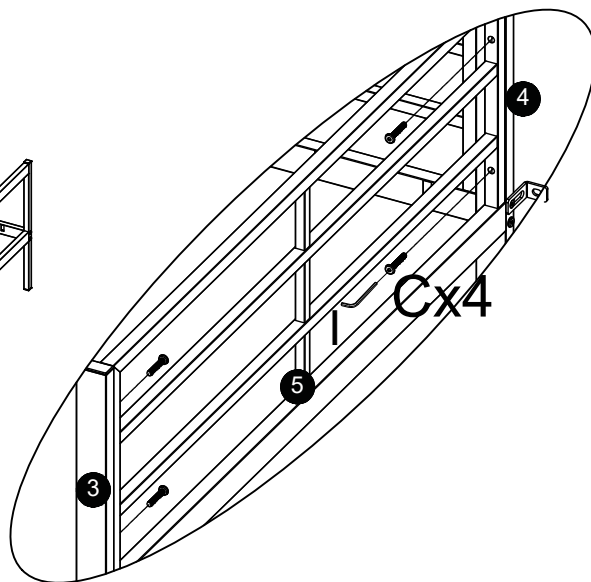
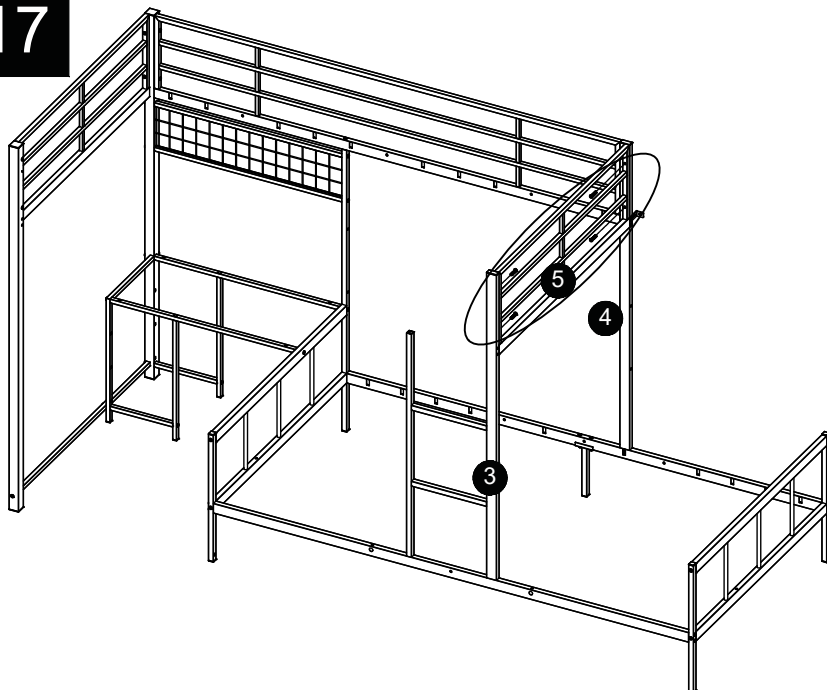


C M6*35



x4

18

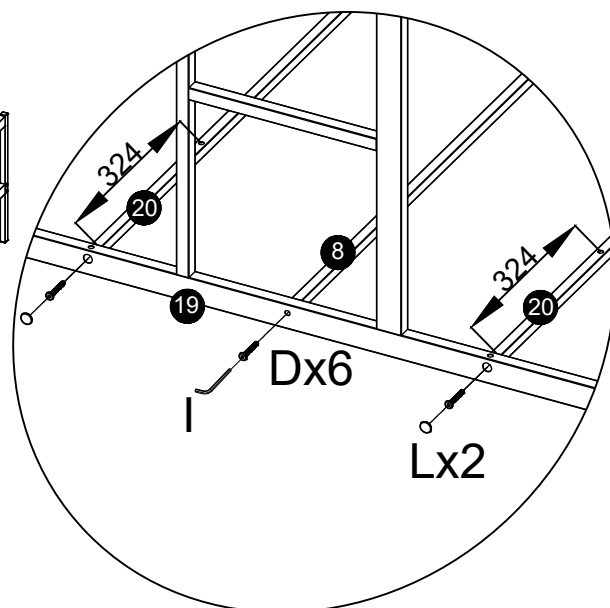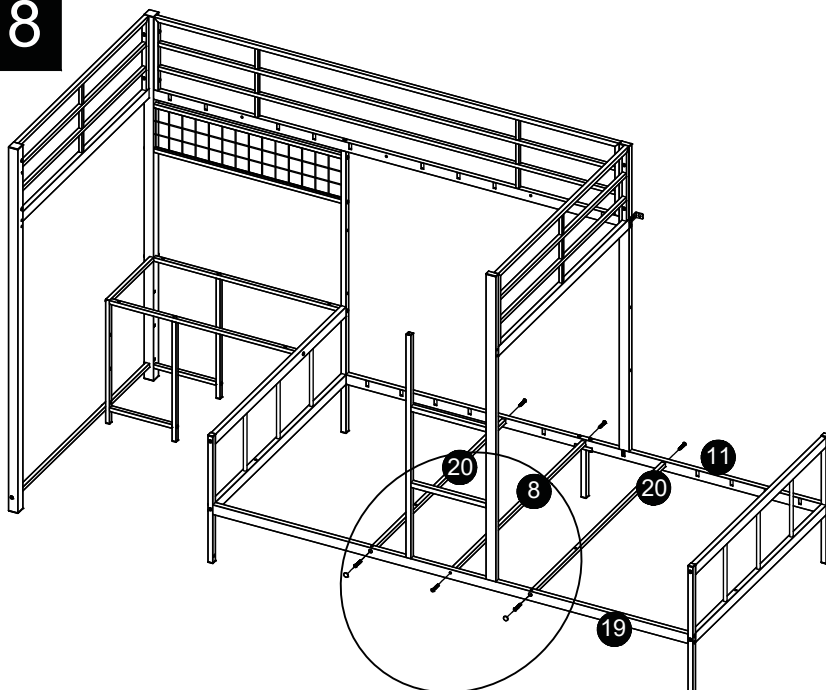

D M6*40




x6

L Ø14




x2

19

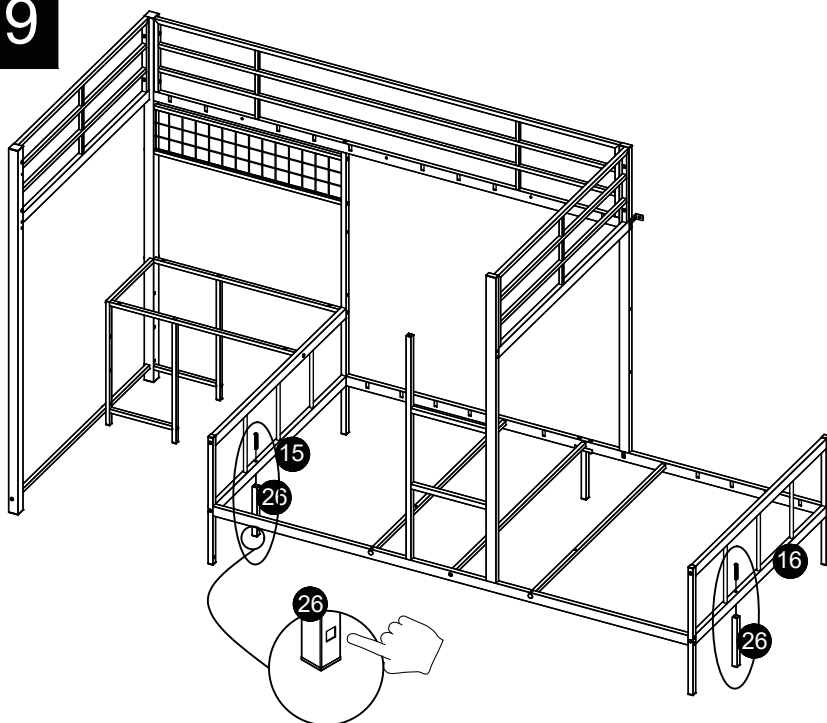


Note that there is a square hole on the right side.

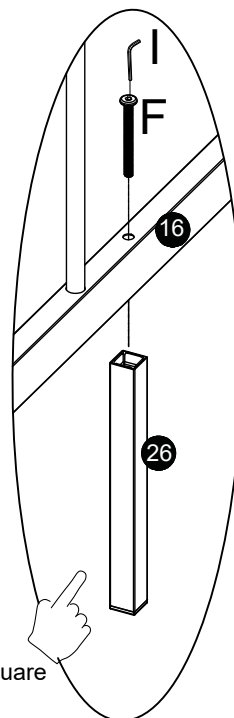


Note that there is a square hole on the left side.


F M6*60
x2




20

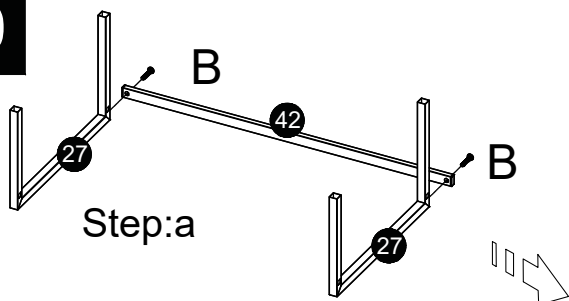

Step:a

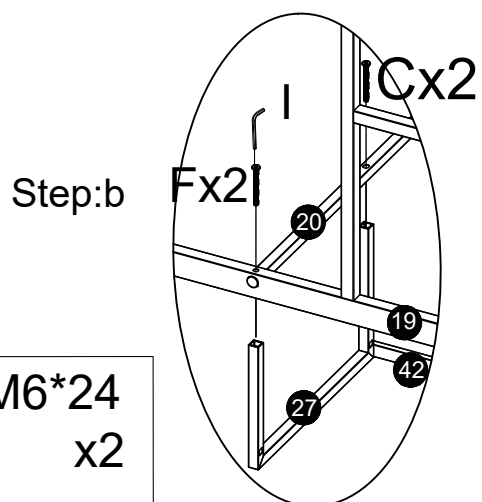

Step:b

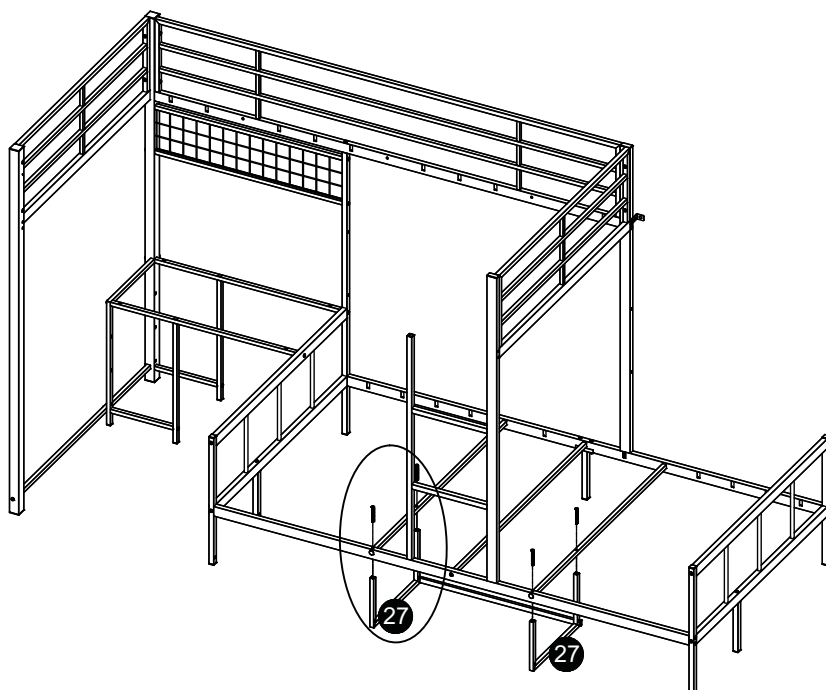


B M6*24
x2





C M6*35
x2



F M6*60
x2




21

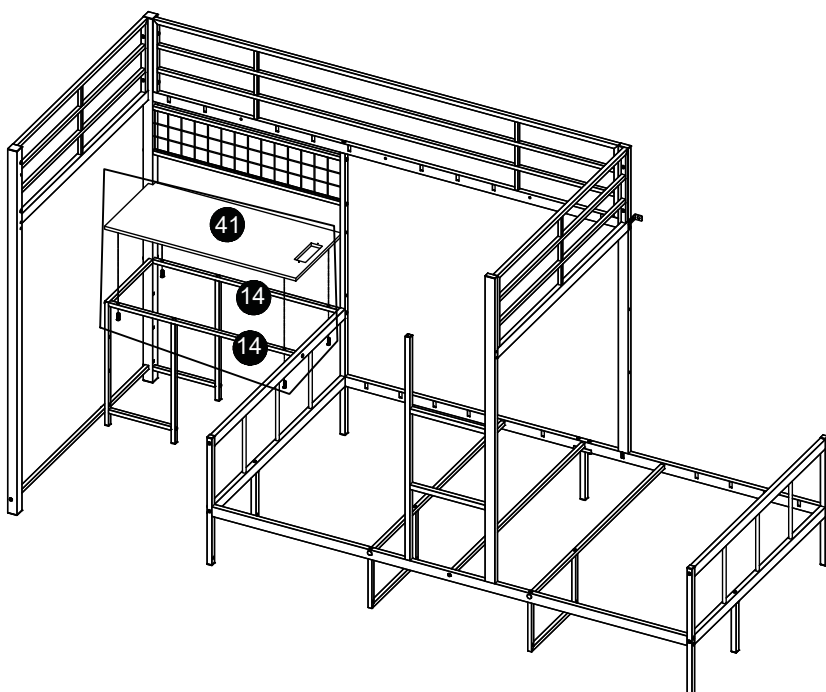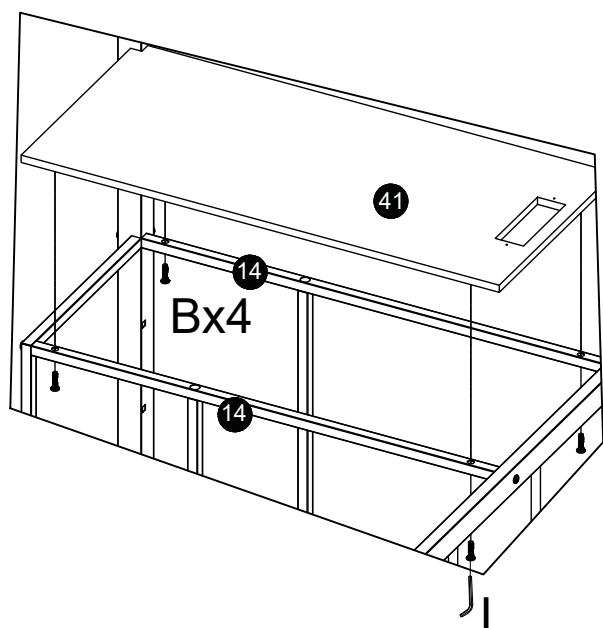



B M6*24
x4



22

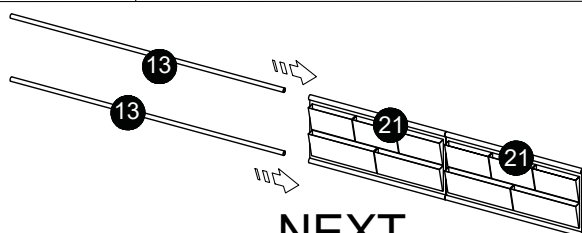


NEXT

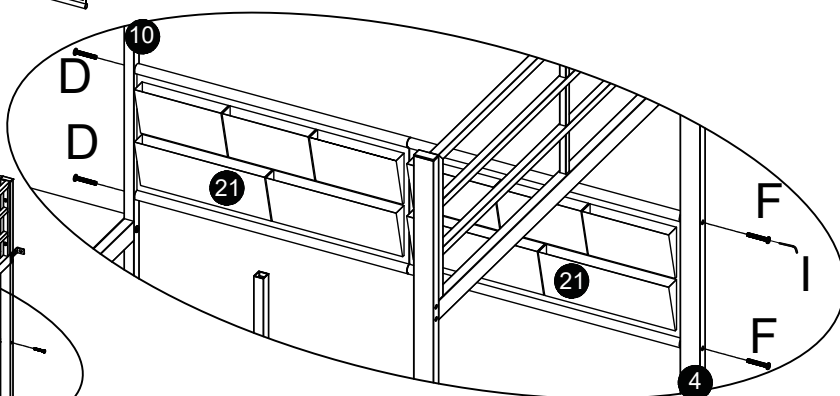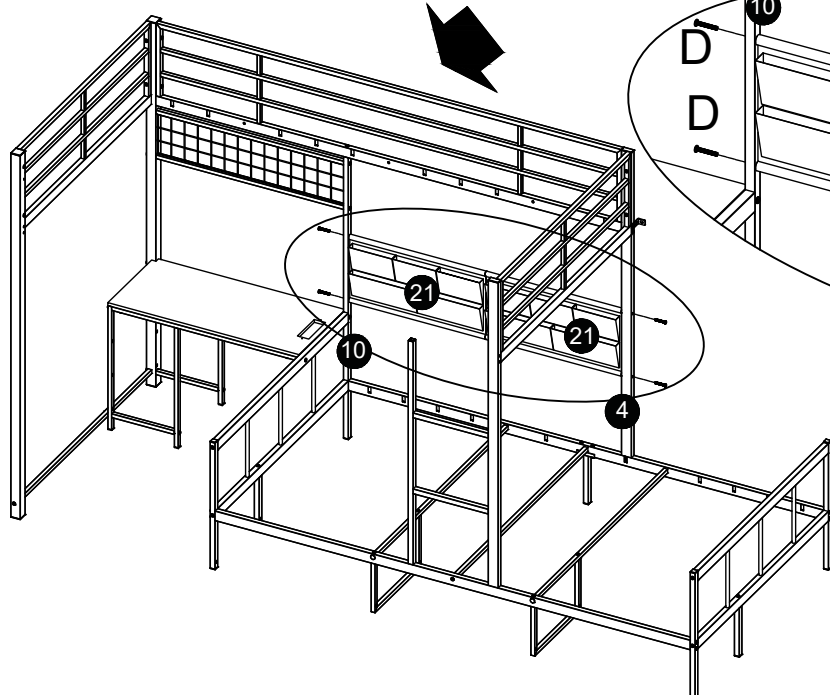


D M6*40
x2





F M6*60
x2



23

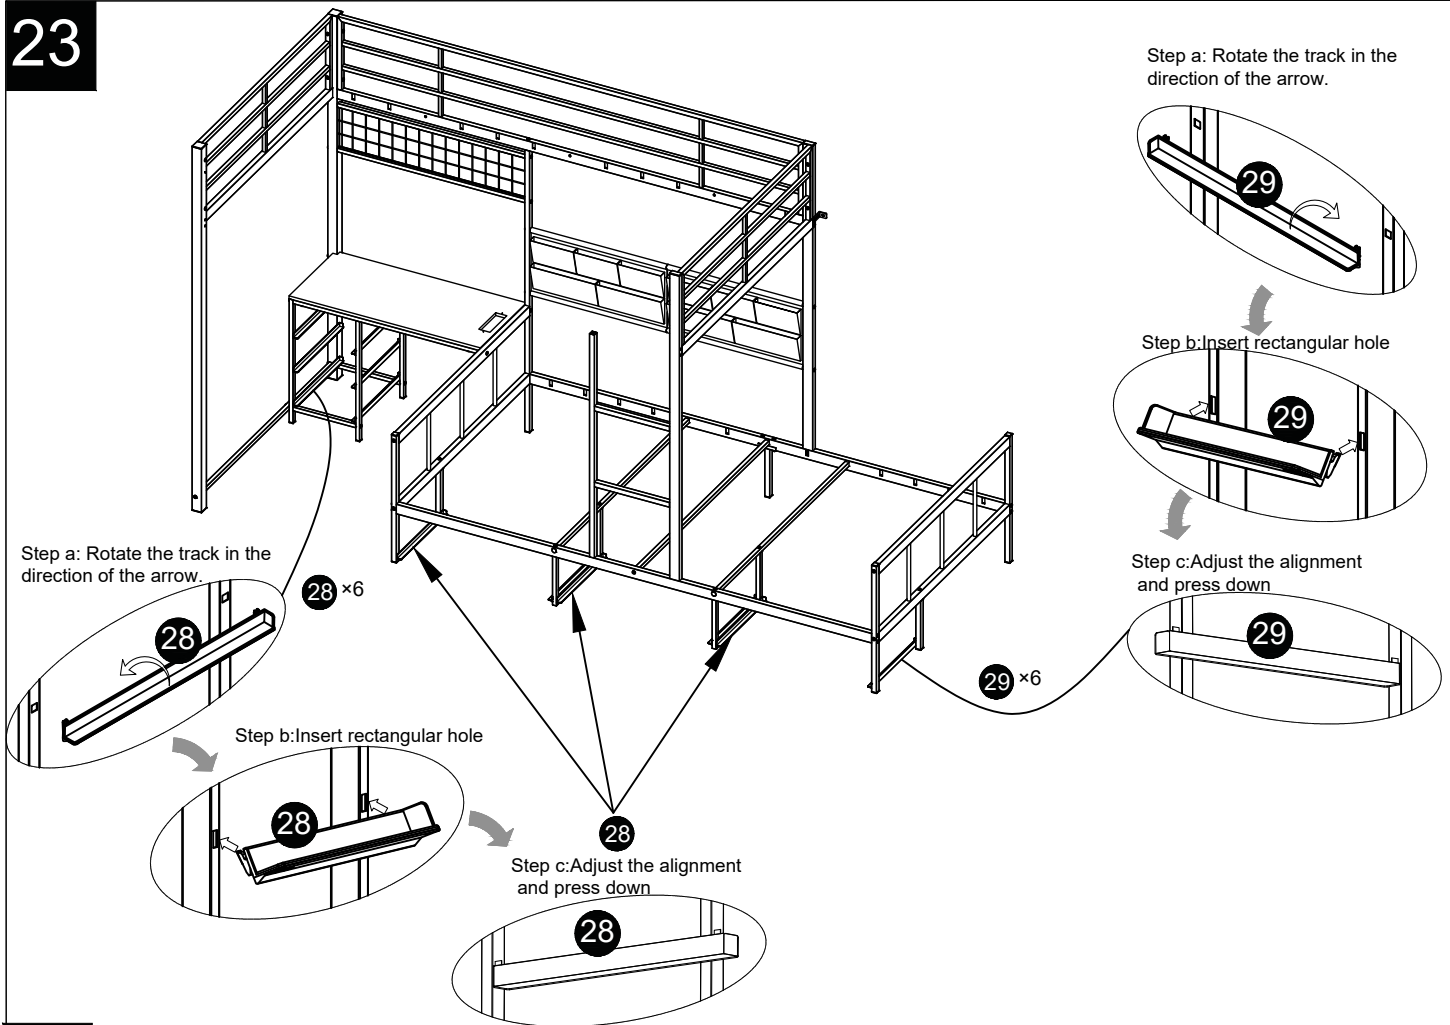

24

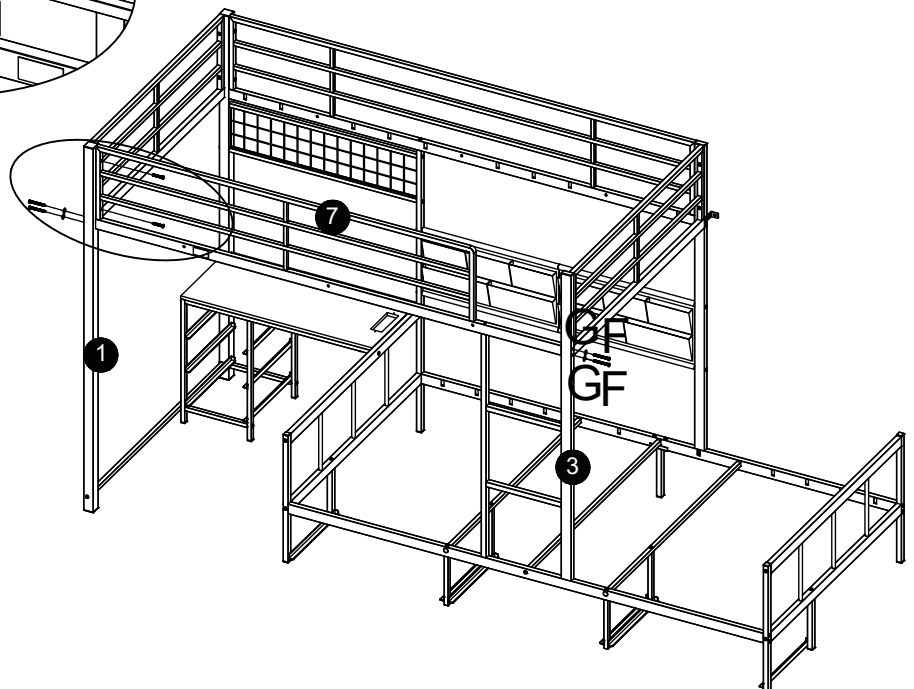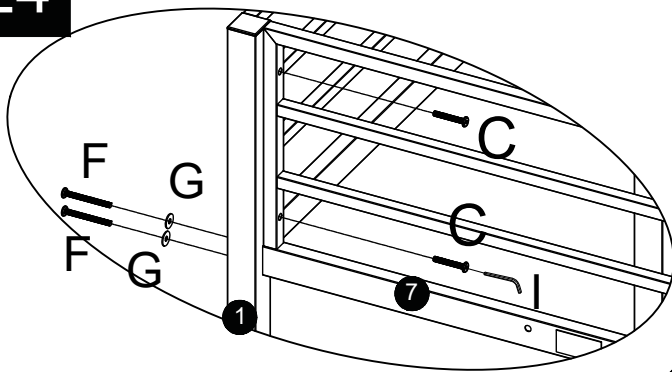


C M6*35



x2

F M6*60




x4

G M6 washer






x4


25

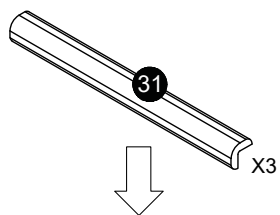


After tearing the tape off the sponge, attach the sponge to the stair tube

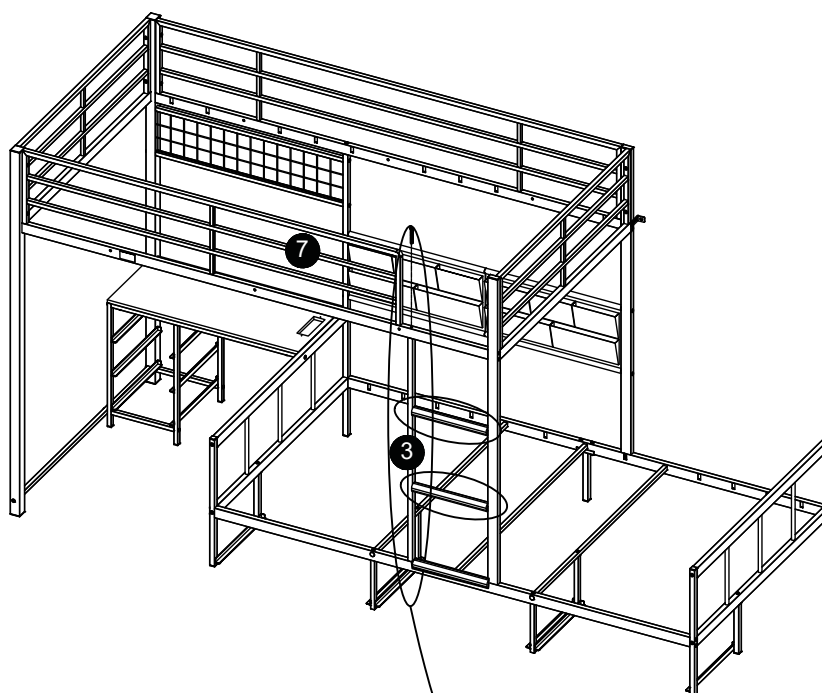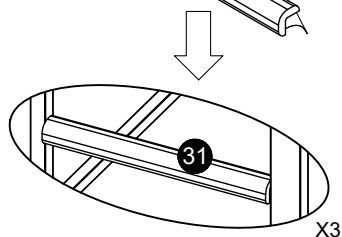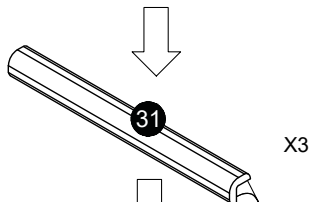


F M6*60
x1





26

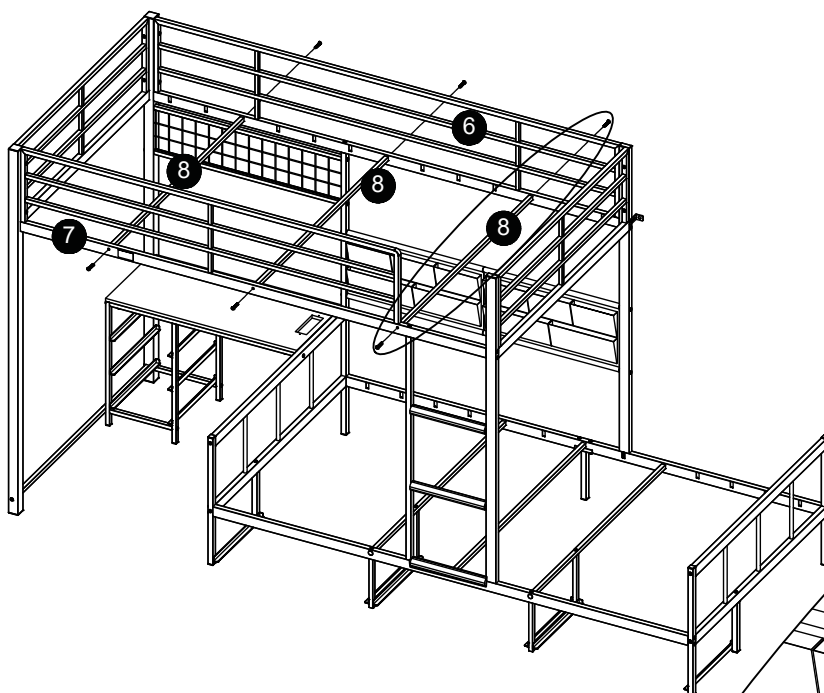


D M6*40
x6

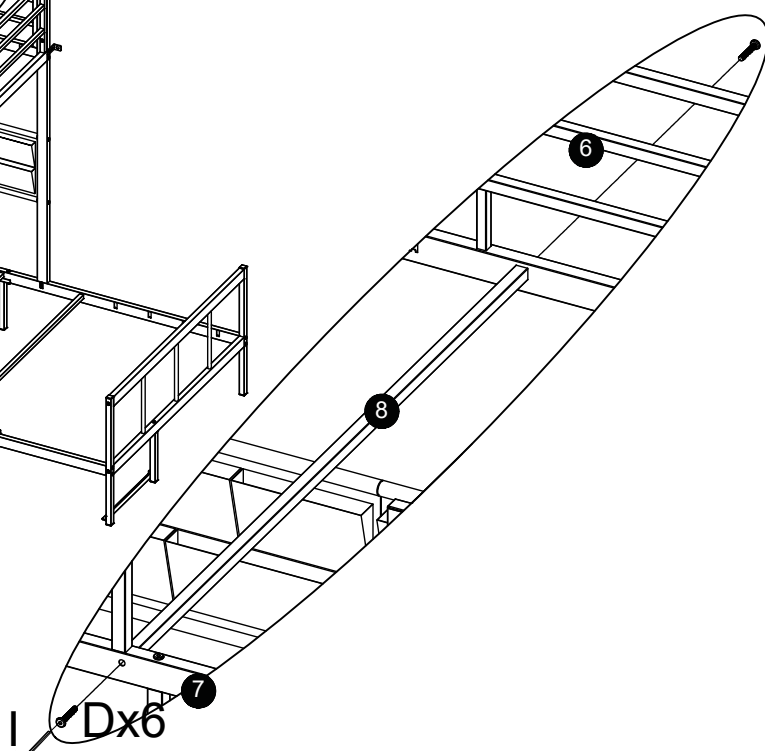


27

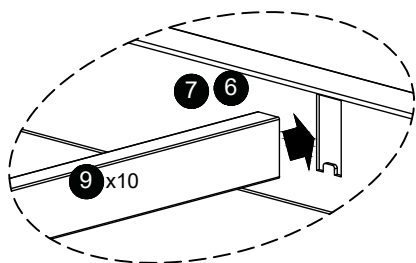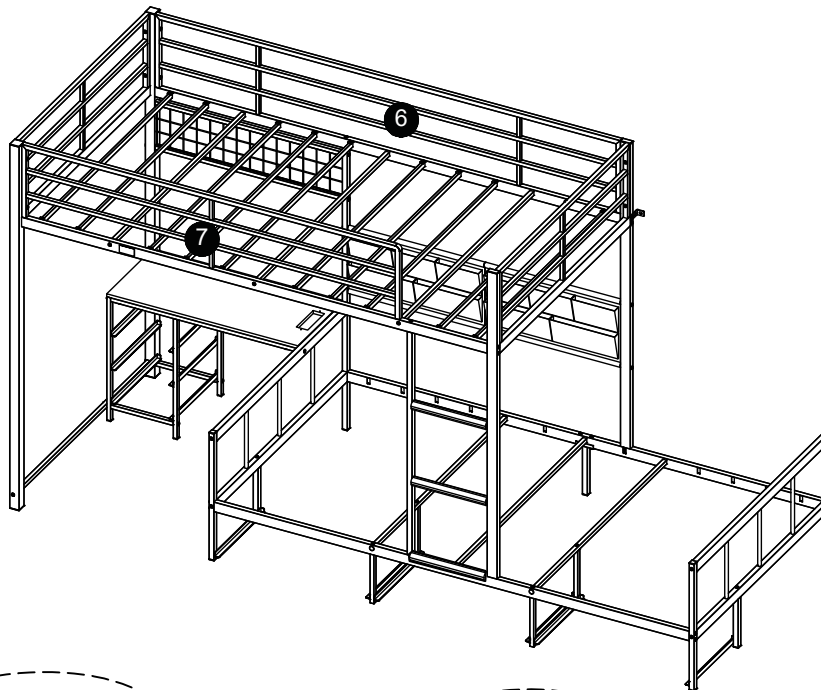



Insert into the snap position

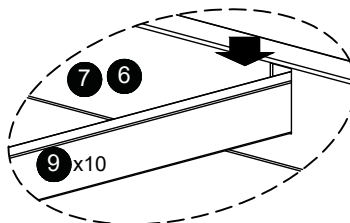


Press down on the gap in the bed slat.

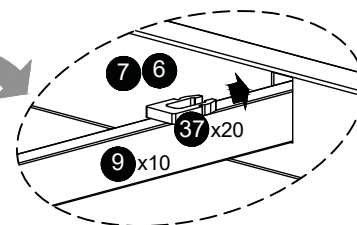


28

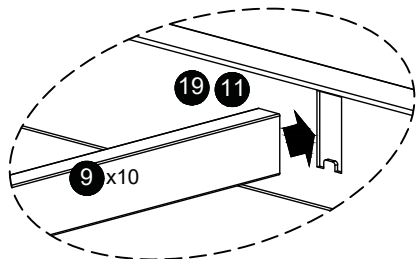
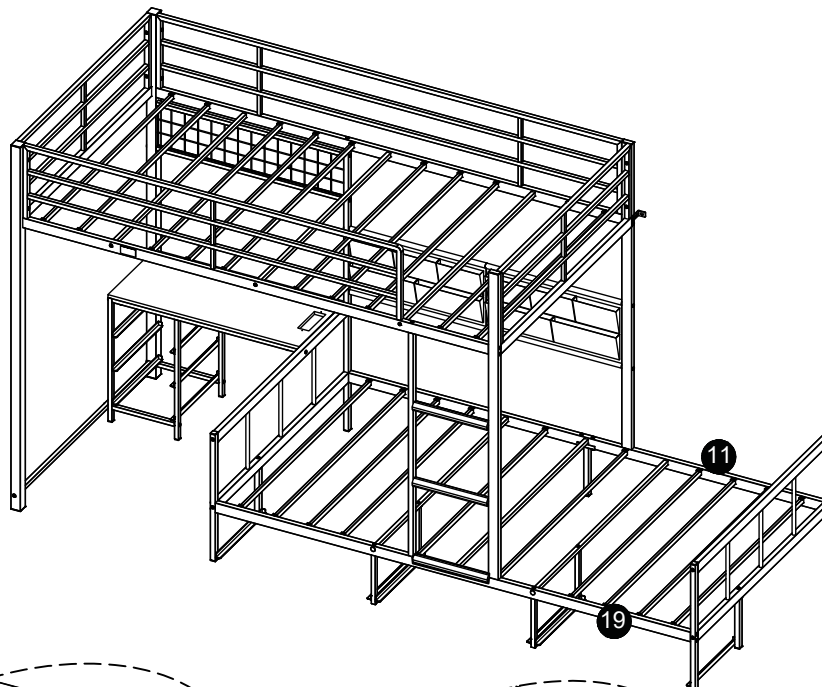


Insert into the snap position


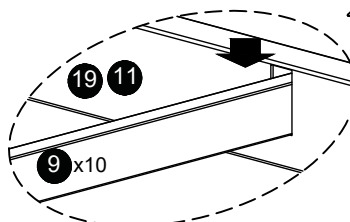


Press down on the gap in the bed slat.

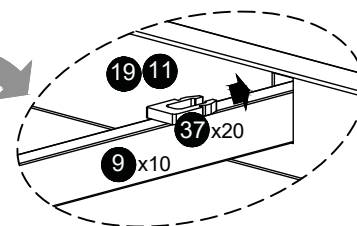


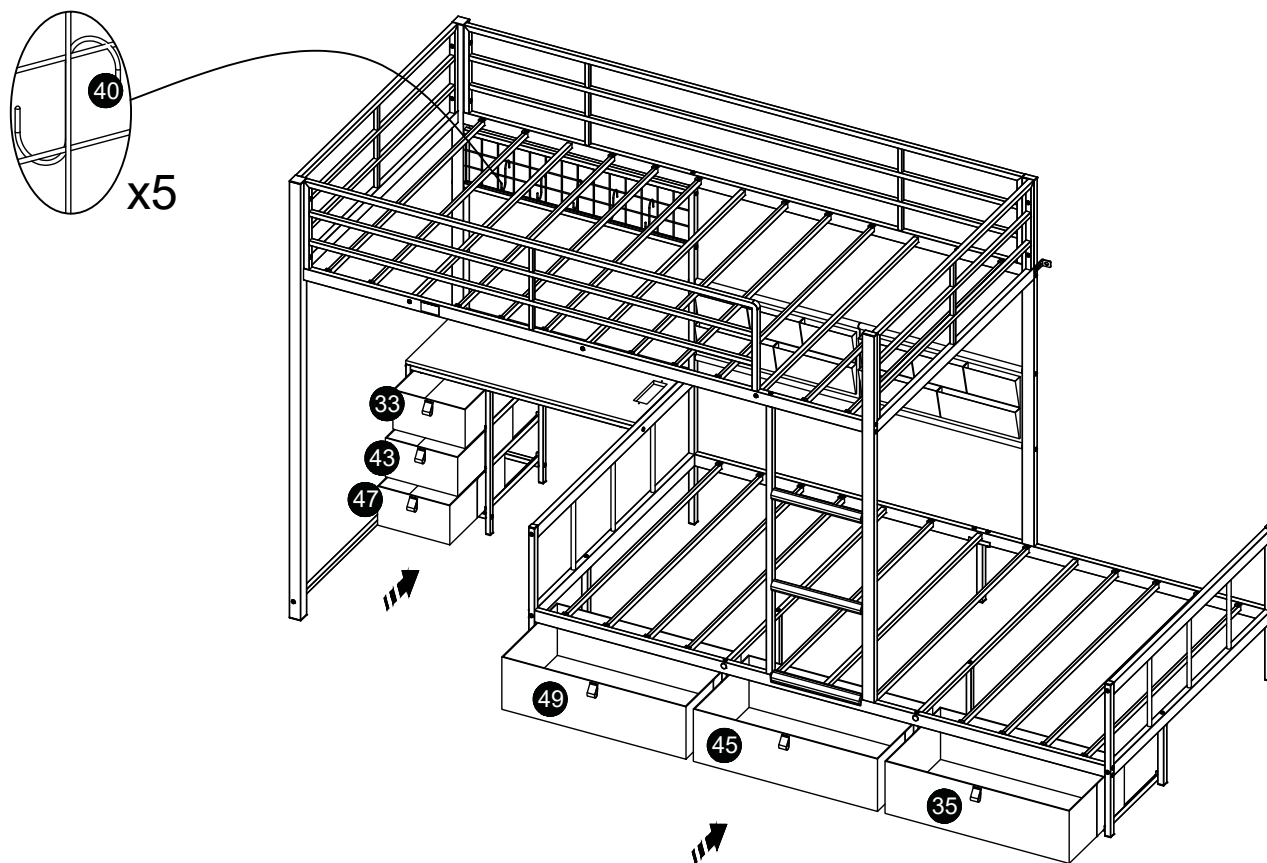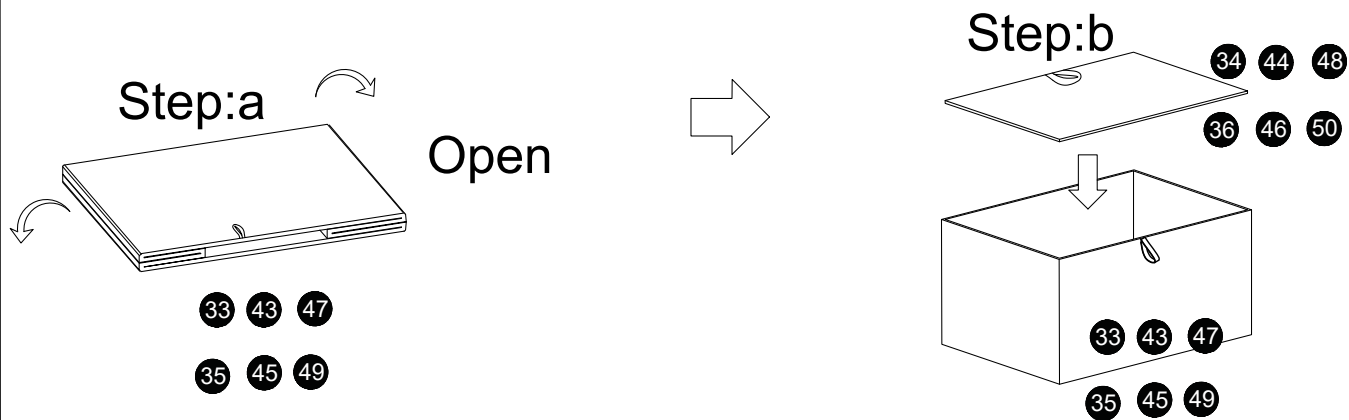


31

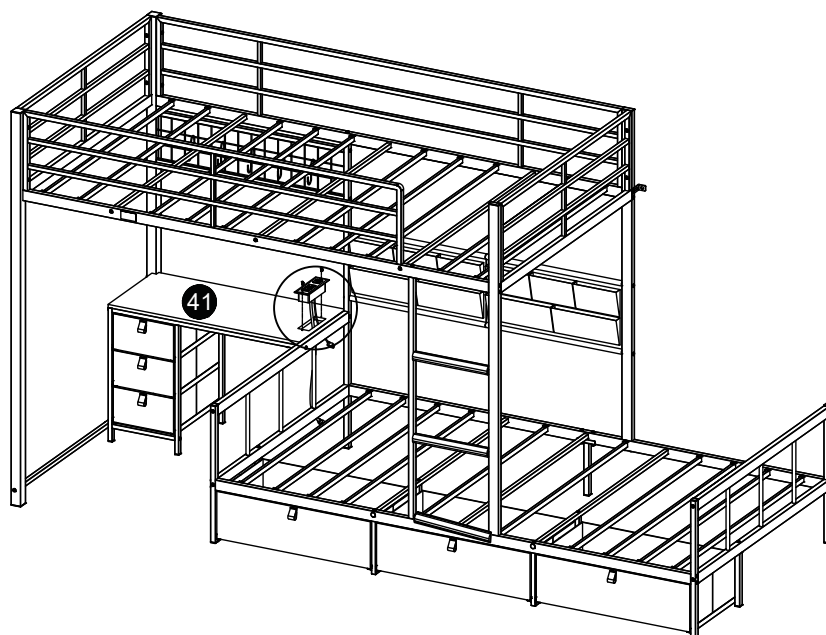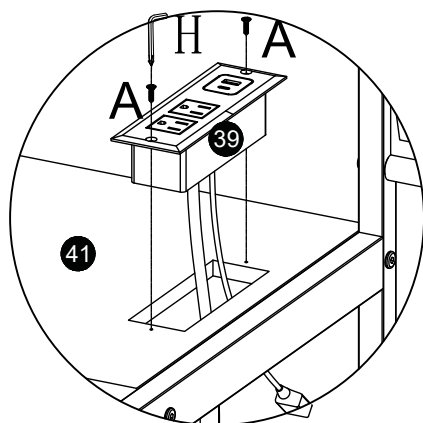


A M4*12
x2

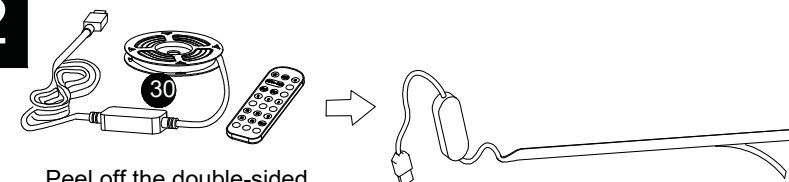


Peel off the double-sided
tape on the light strip

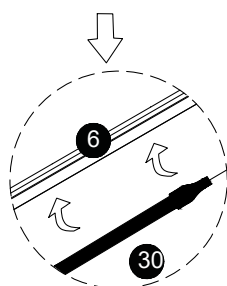



Attach the light strip 30
below the square tube 6.

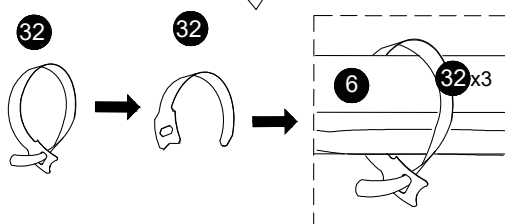

Please loosen the tie and tie it onto
the iron pipe. As shown in the figure.

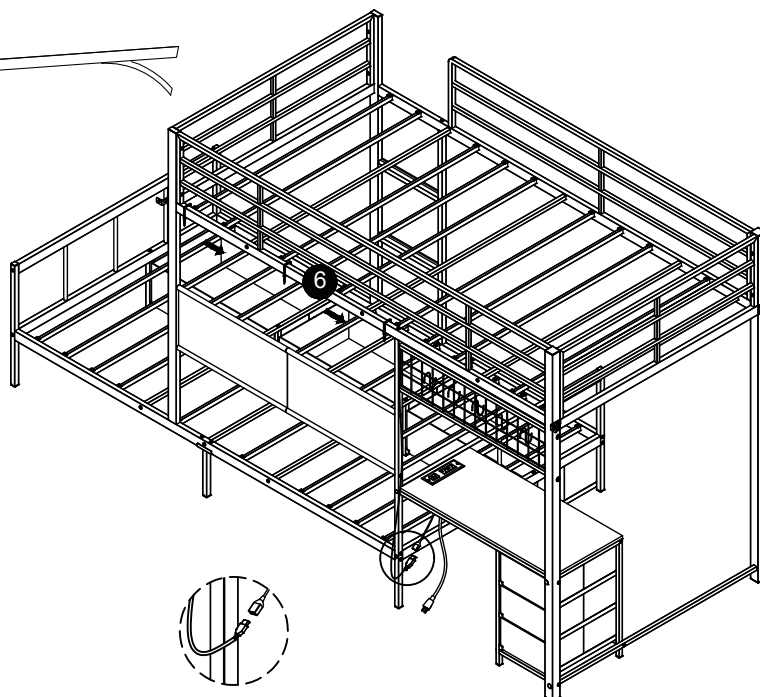


33 Positioning

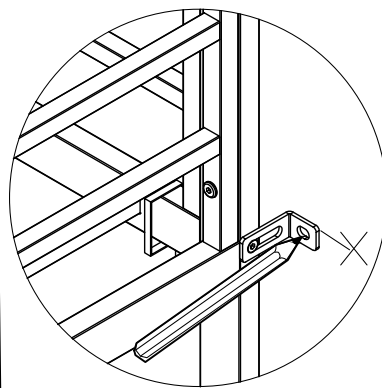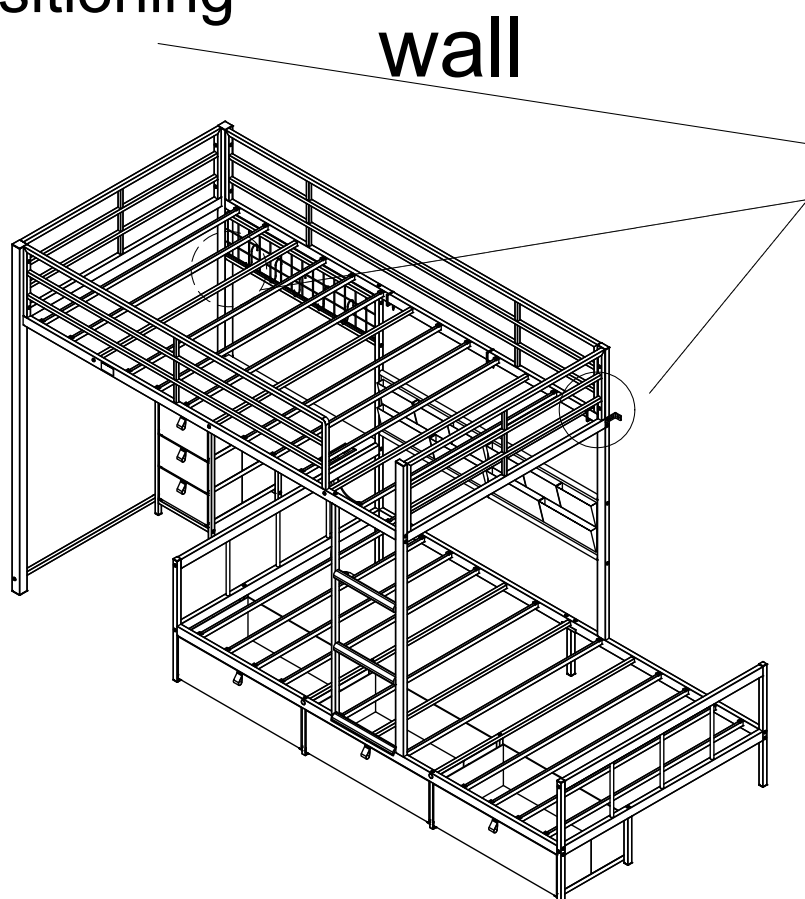


Mark the drilling positions on the wall with a pen.

34 Drilling

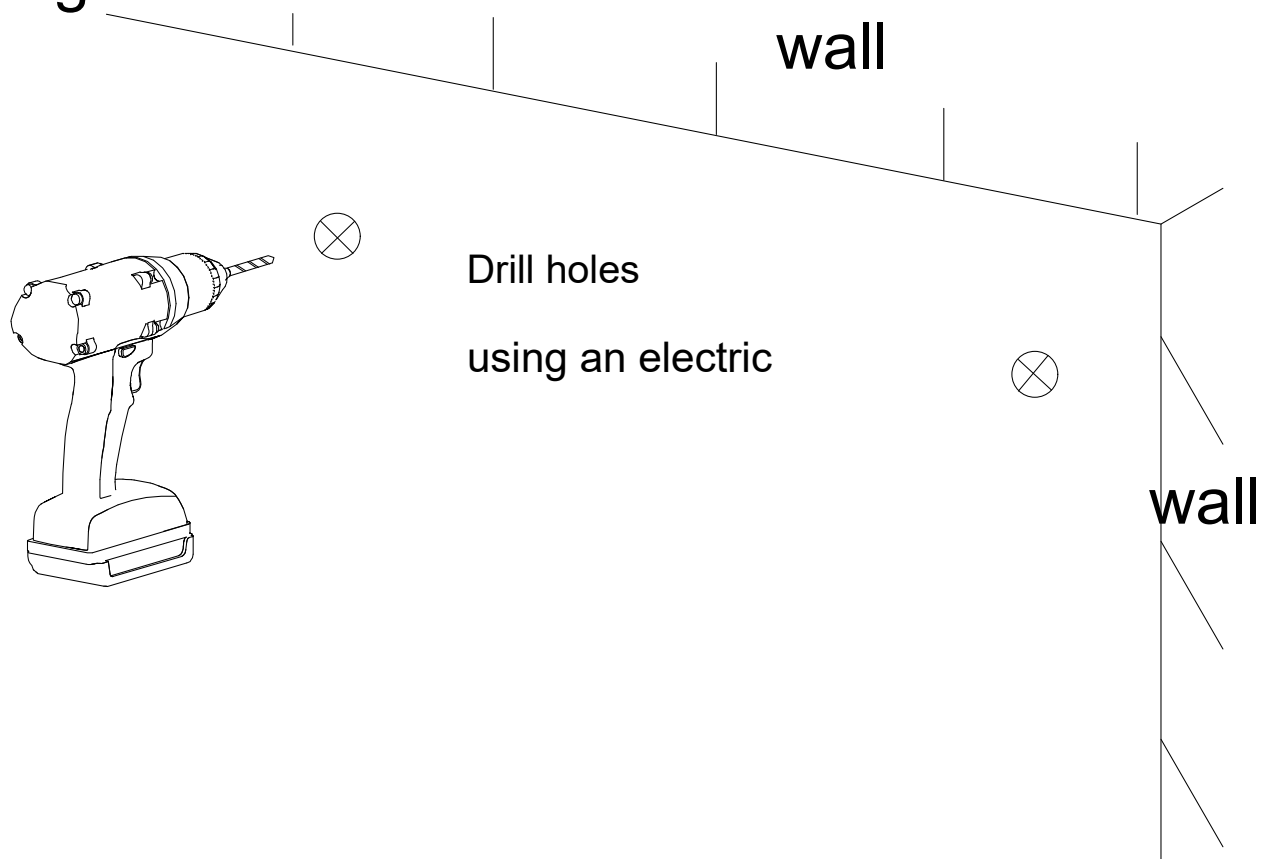

Drill holes
using an electric

35

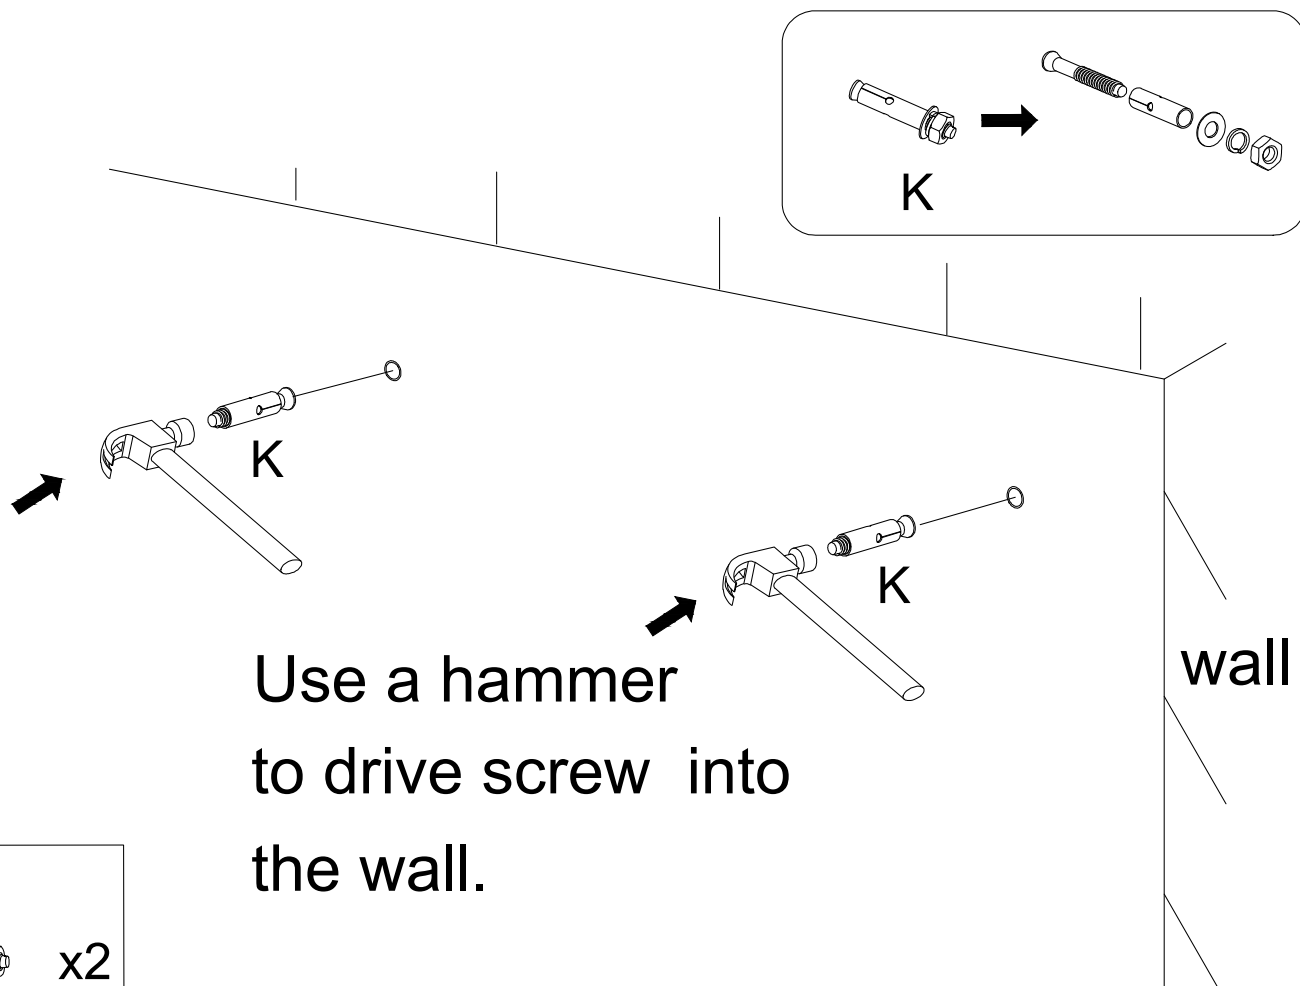

36

