


① arms - 6 pcs





X 1PCS



③ connected thread rod two heads: 3PCS



X 1PCS



⑤ connected thread rod single head 3PCS



X 3PCS


④ hanging tubes short tube:1PCS middle tube:1PCS long tube:1PCS



X 3PCS



X 3PCS



⑦ canopy:1PCS




⑧ locknuts:2PCS




⑨ connectors: 2PCS




X 3PCS

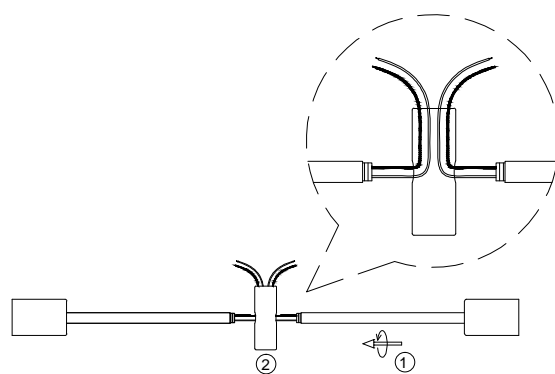

1. Let the wires of the arms ① go through the middle tube ②, turn to fasten the arms on the tube.



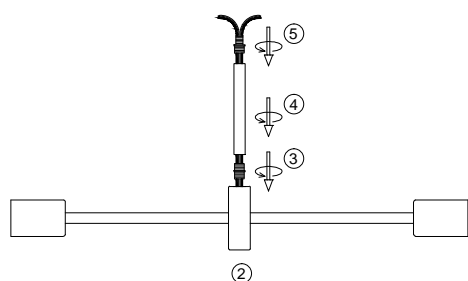


2. Let all wires go through the two heads threat rod ③, install the threat rod ③ on the middle tube, after that wire go through the hanging tube ⑤ and single head threat rod ⑥, connect the hanging tube and the single head threat rod with the fixture.

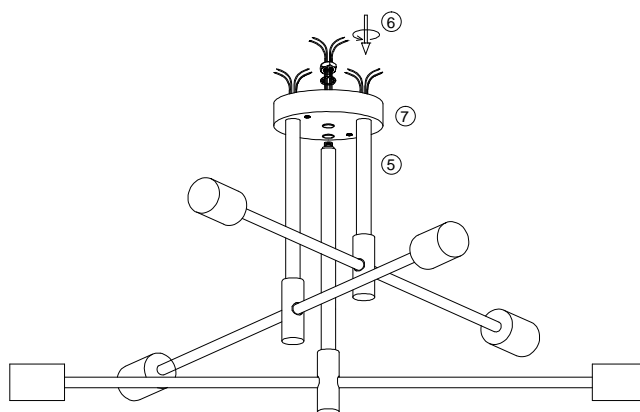


3. Install the hanging tube fixture ⑤ on the canopy ④ with screwing locknuts ⑥.

1. Pull the orange operating handle A to open the inlet hole, insert the wire B.
2. Press the operating handle A to finish wiring. (Note: one inlet hole can put 2 or 3 wires inside)

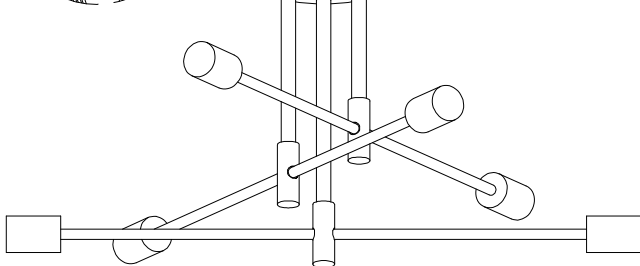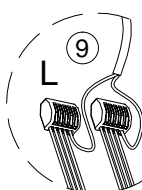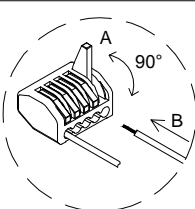

4. Connect all the wires by parallel with connectors ⑨ (all live line-L use one connector, and neutral Line-N use another connector).

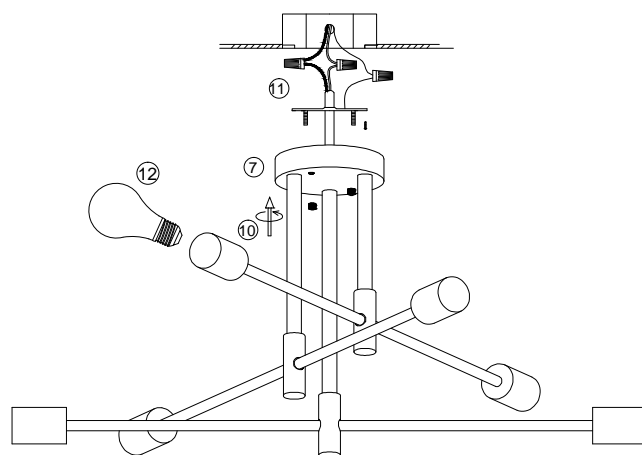

5. Install the bracket on the junction box with screw ⑩.
6. Connect the wire ⑪ to your home line.
7. Install the fixture to the bracket with locknuts ⑧.
8. Install the bulbs ⑫

Please read carefully before installation!!!

Note : Please make sure that the electricity is powered off during installation !

Only a professional electrician should install this kind of product !