


Assembly Manual


Dining Table

DT018








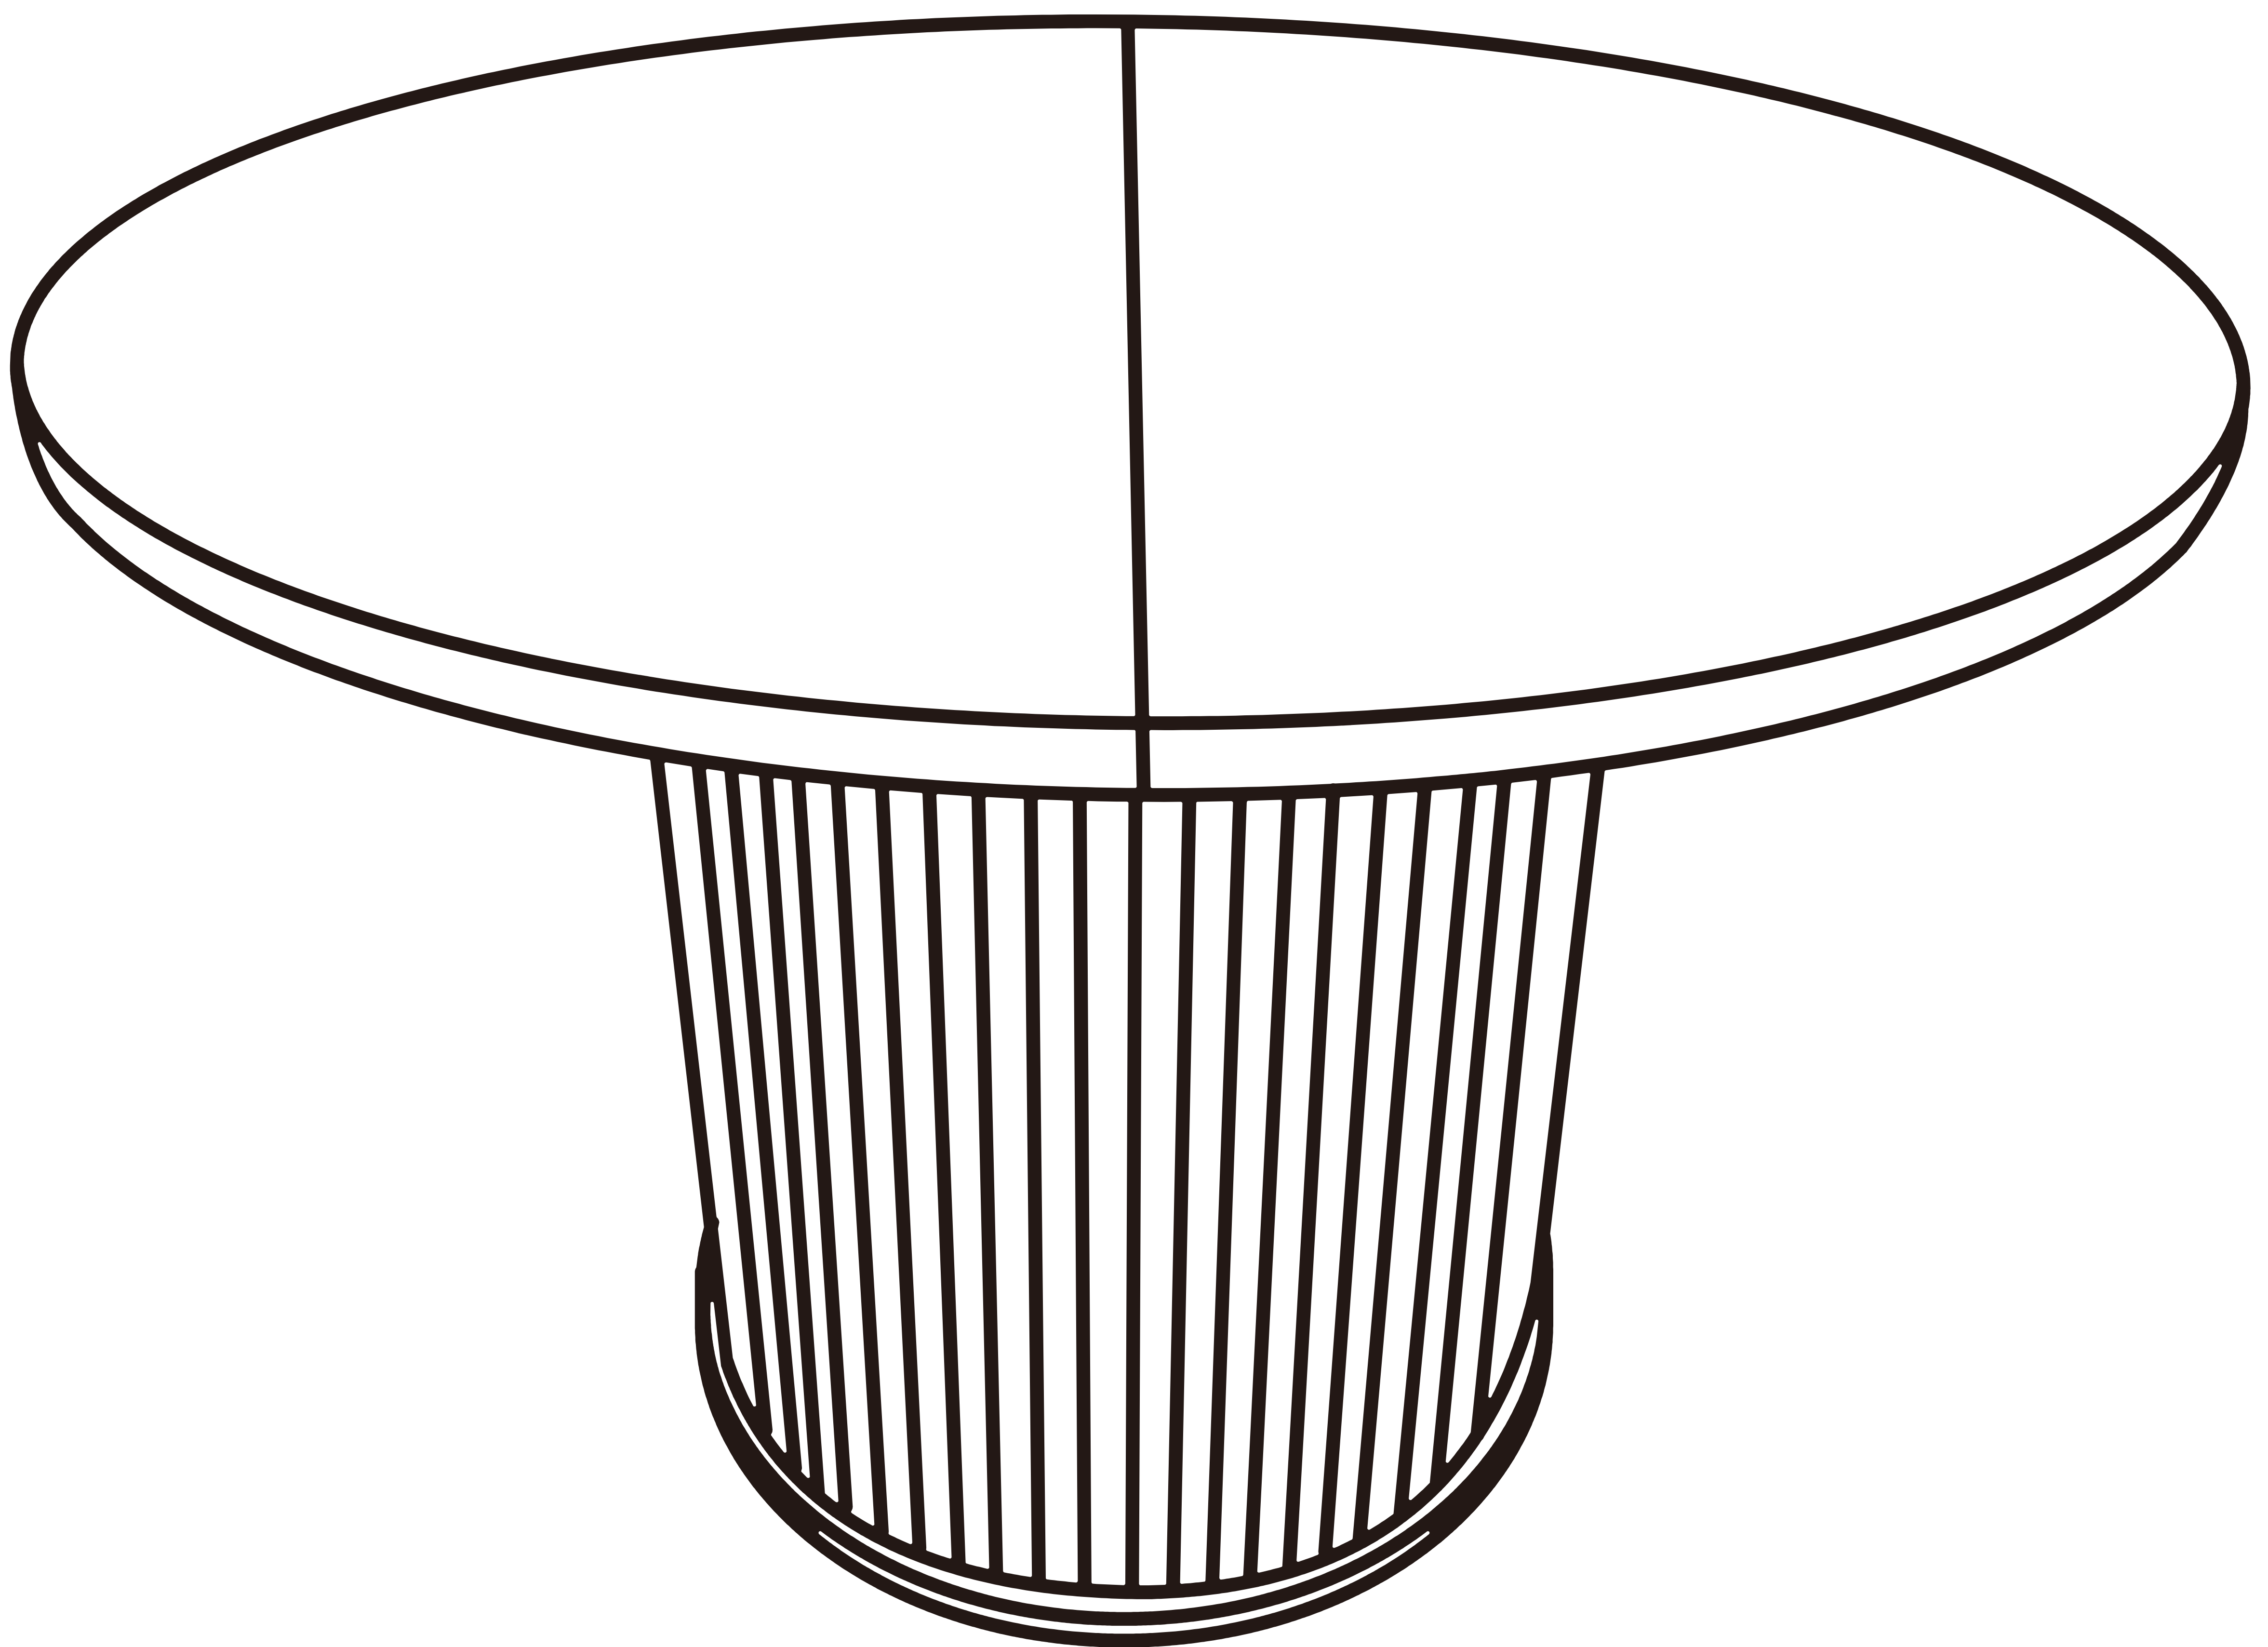







Please read this manual carefully before any operation and keep it properly for future use.
Customer service:ogenaservices@outlook.com .

Exploded View

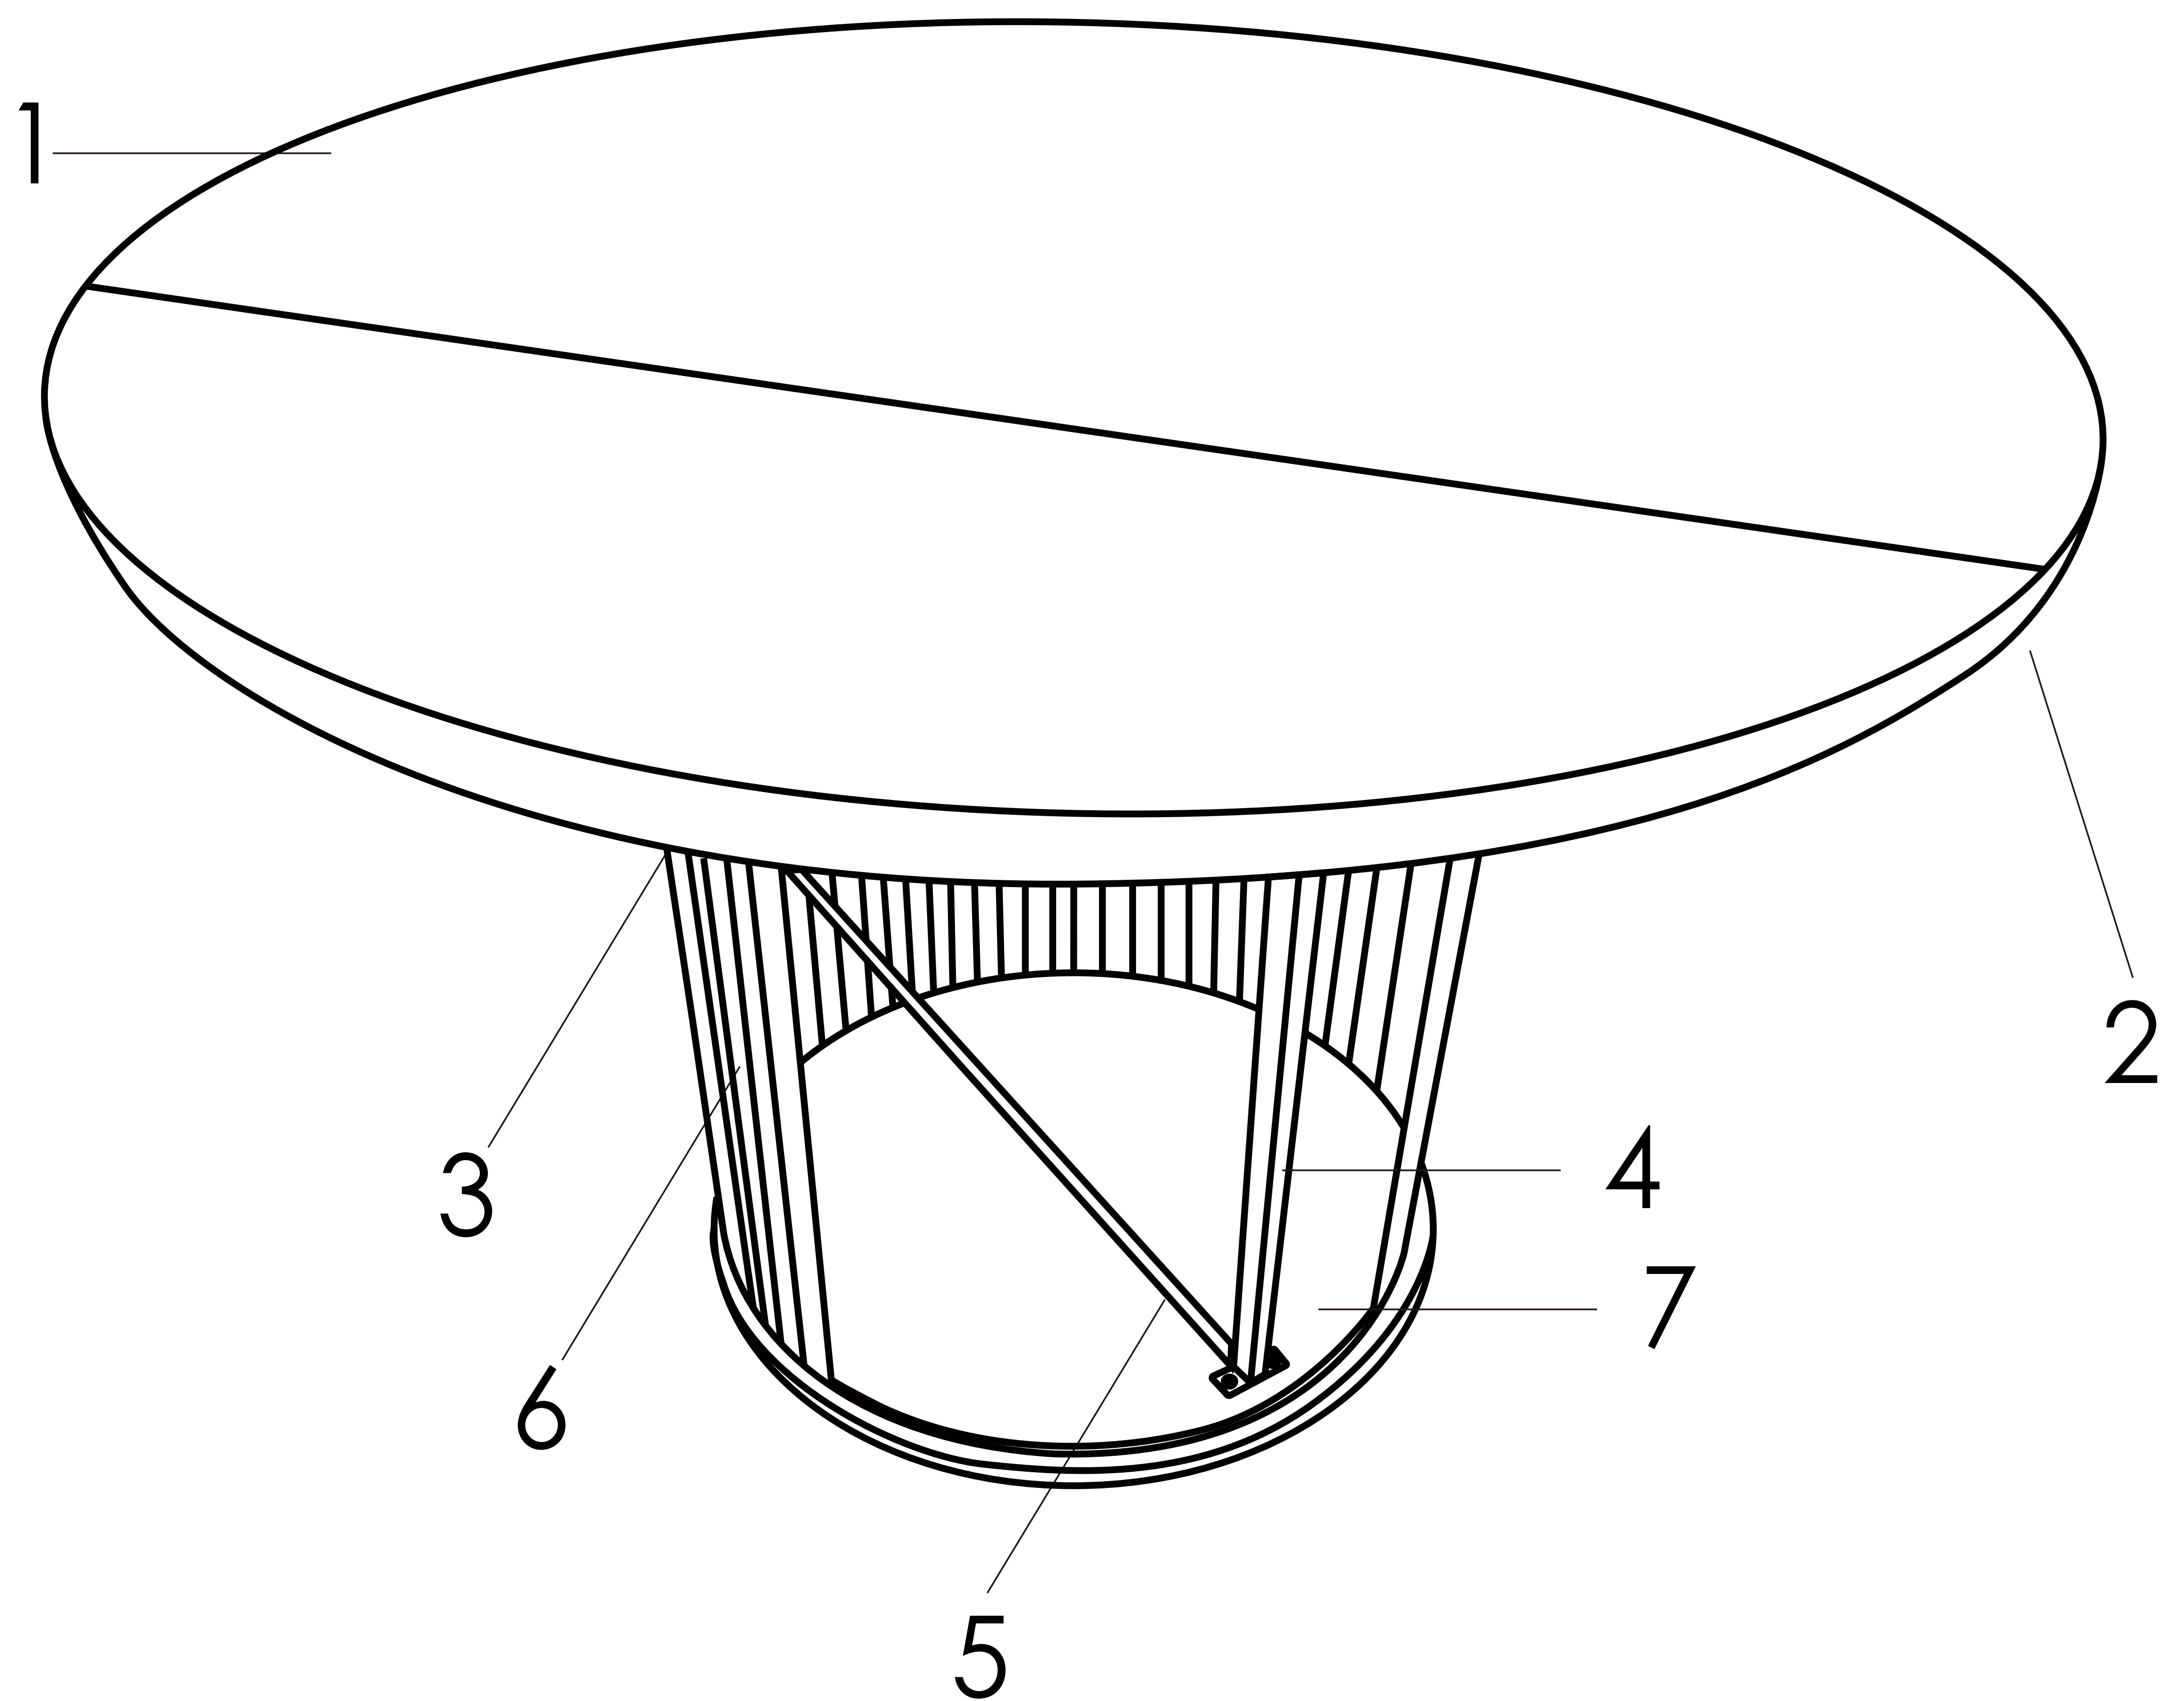

Components List

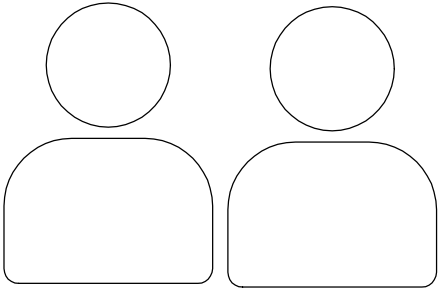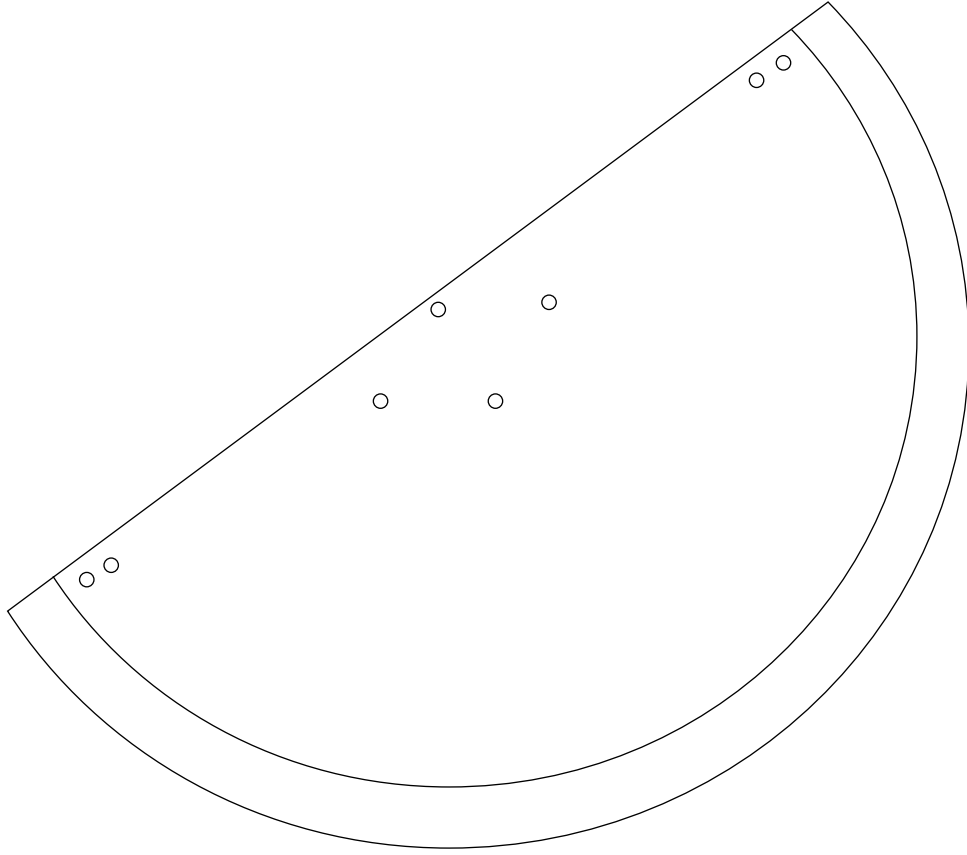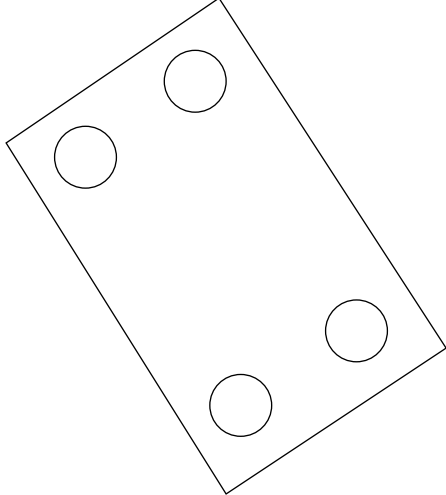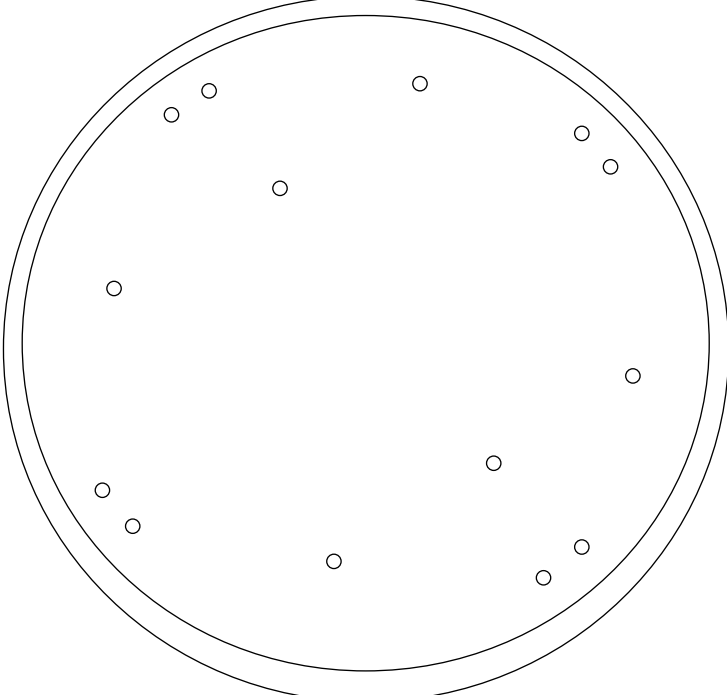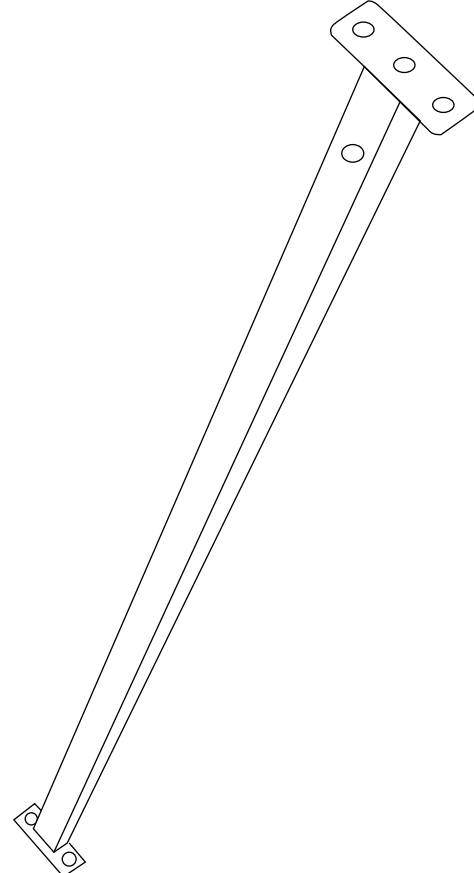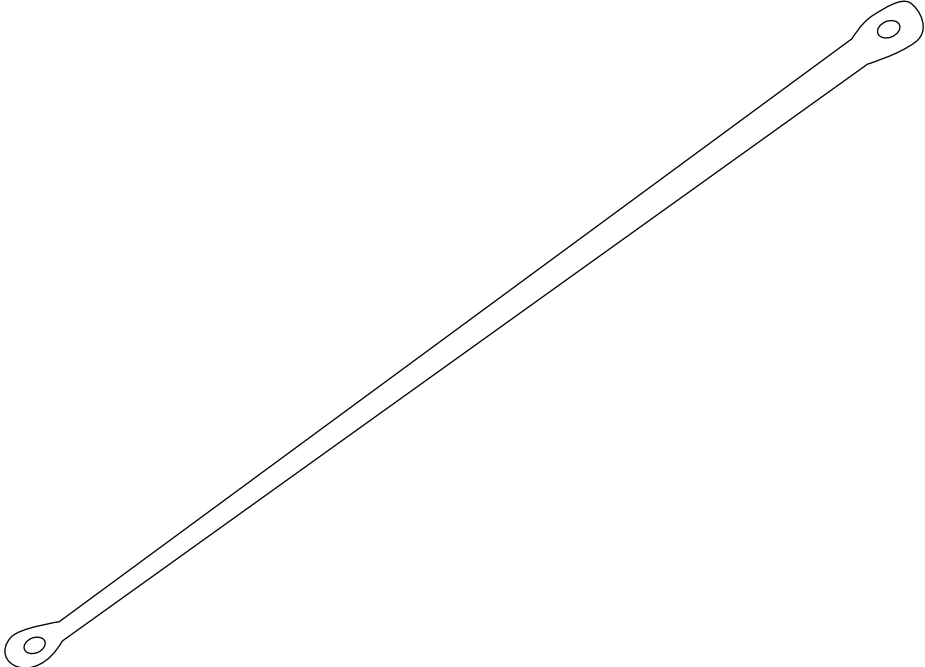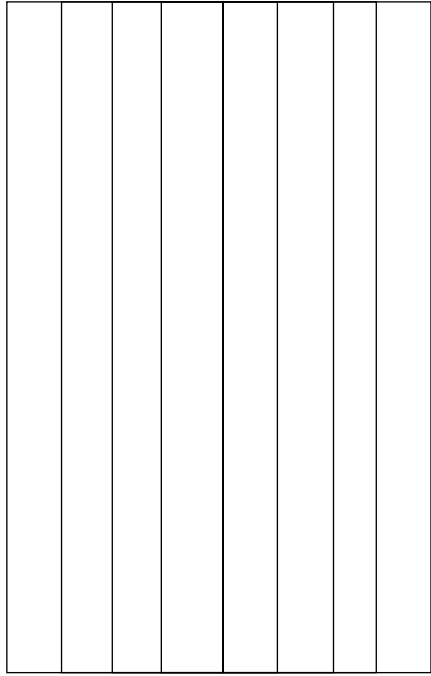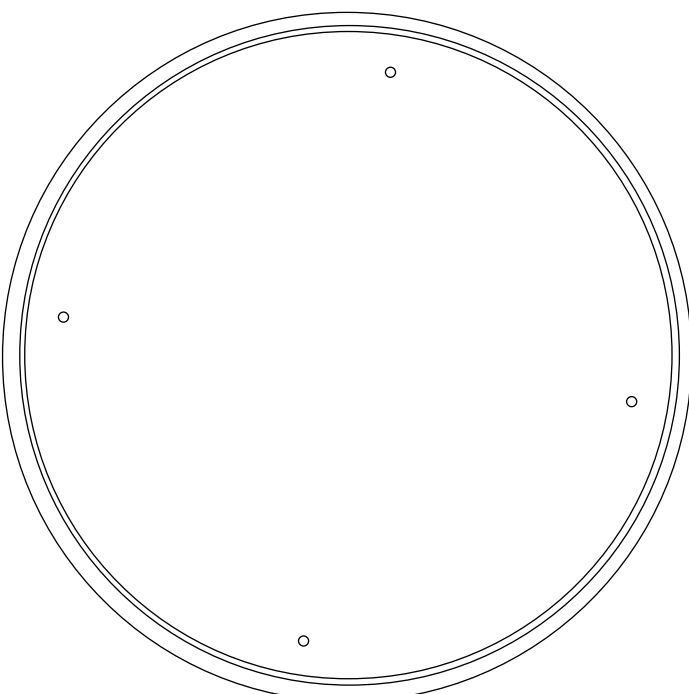
30 min Assembly Time		 Two people		Note:The number after "+" sign indicates the extra piece(s).	
					
1 Desktop*2		2 connector*2		3 Plate*1	
					
4 leg*4		5 Iron Rod*4		6 Enclosure Plate*3	
					
7 Base*1					

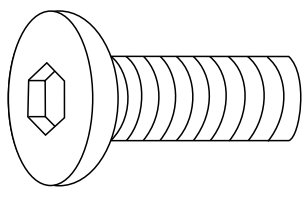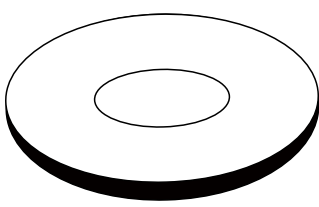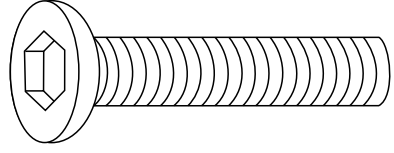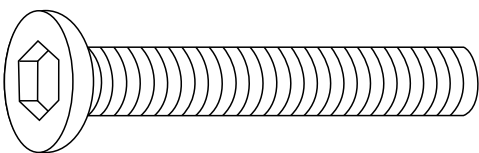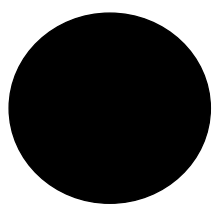A			B			C			D			E		
														
Bolt	M6x13mm	24+2	Allen wrench	#5	1	Washer	M6x20x1.5mm	8+1	Bolt	M6x25mm	8+1	Bolt	M6x40mm	4+1
F														
														
Felt Pad		12+1												

Assembly Instruction

STEP 1


Connect the desktop(1) using the square connector (2), and use Allen wrench(B) to tighten all the bolts (A) and connectors (2). Do NOT fully tighten the bolts until all of them are in the correct holes. This will allow you slight adjustments during the assembly.

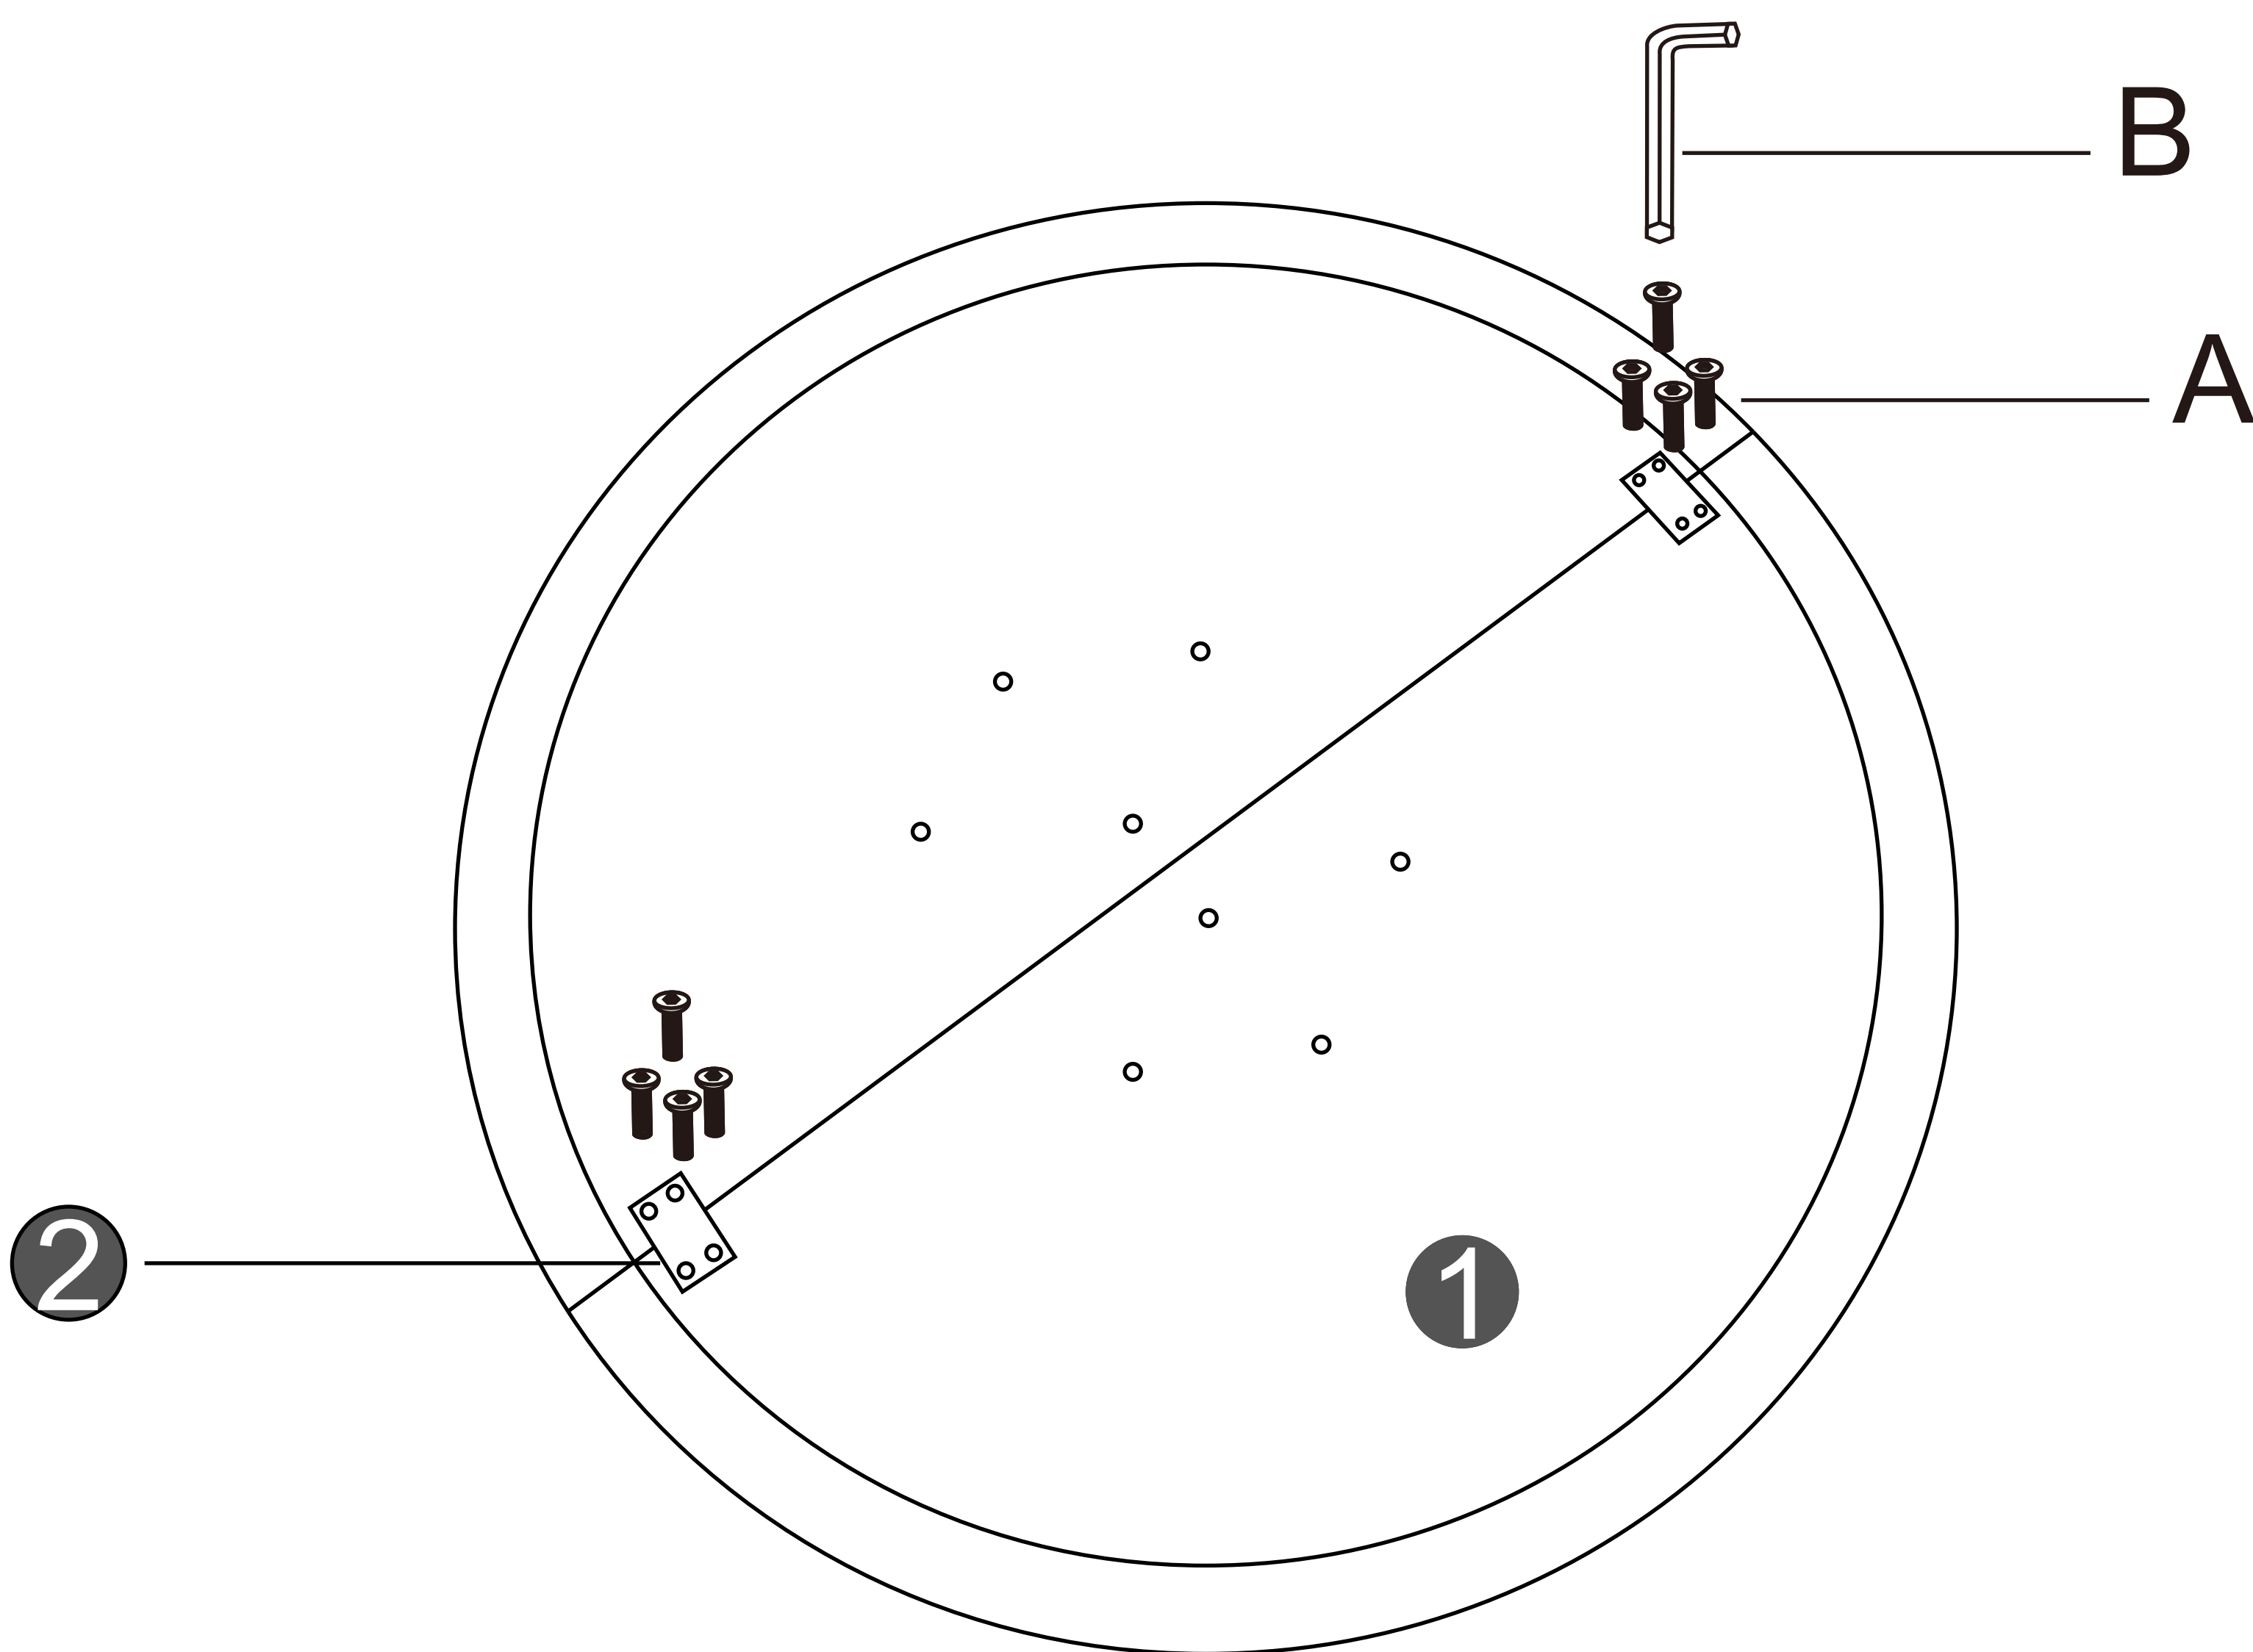

- 1*2
- 2*2
- A*8
- B*1

STEP 2

Connect desktop(1) with Plate(3), and use wrench(B) to tighten all the bolts (D) and washers (C). Do NOT fully tighten the bolts until all of them are in the correct holes. This will allow you slight adjustments during the assembly.




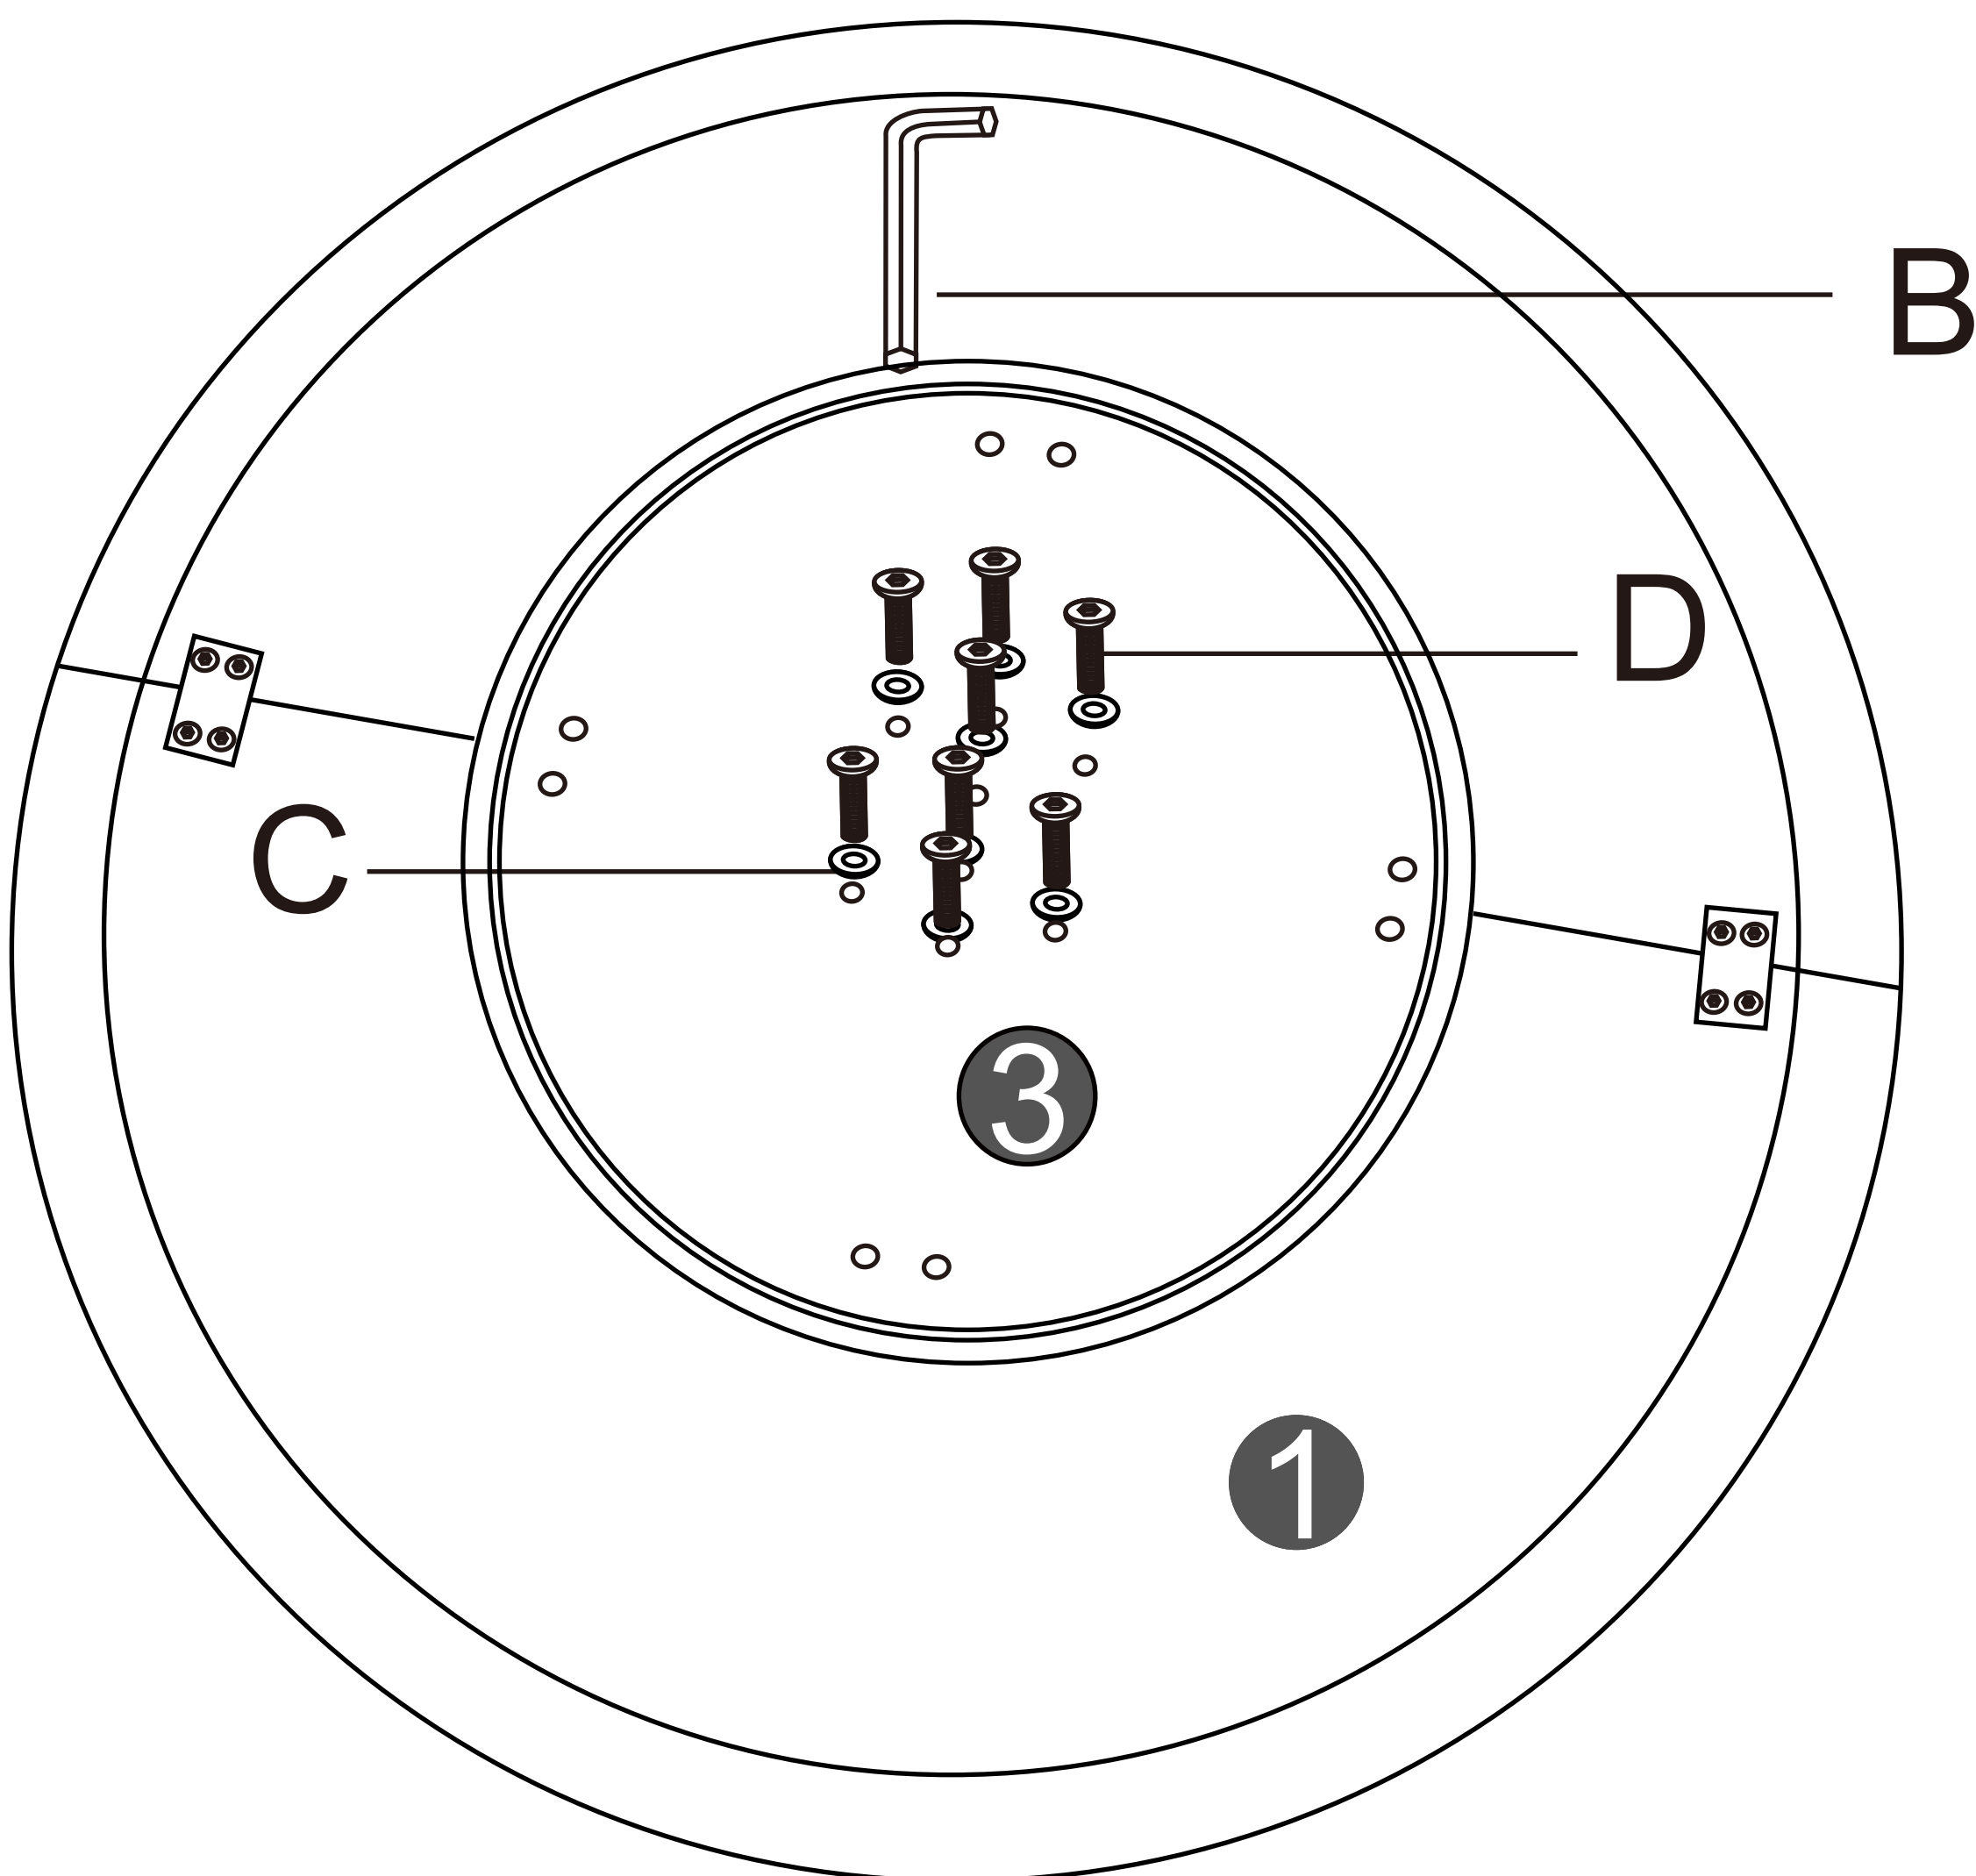


- 3*1
- B*1
- C*8
- D*8

Assembly Instruction





STEP 3

Connect legs(4) with plate (3), and use the wrench (B) to tighten all the bolts (A) and washers (C). Do NOT fully tighten the bolts until all of them are in the correct holes. This will allow you slight adjustments during the assembly.

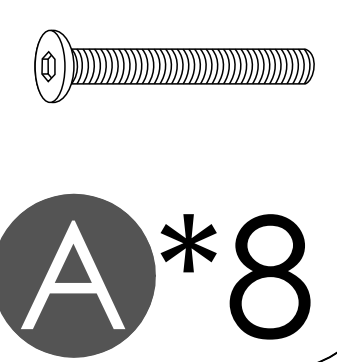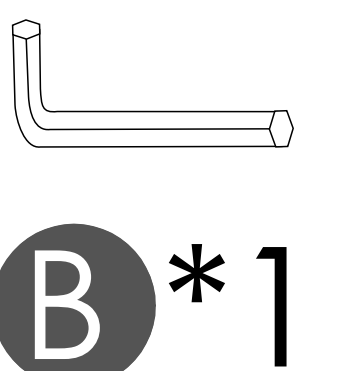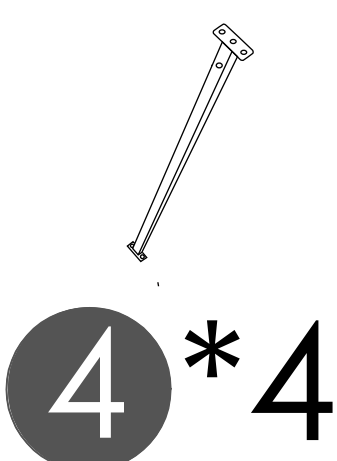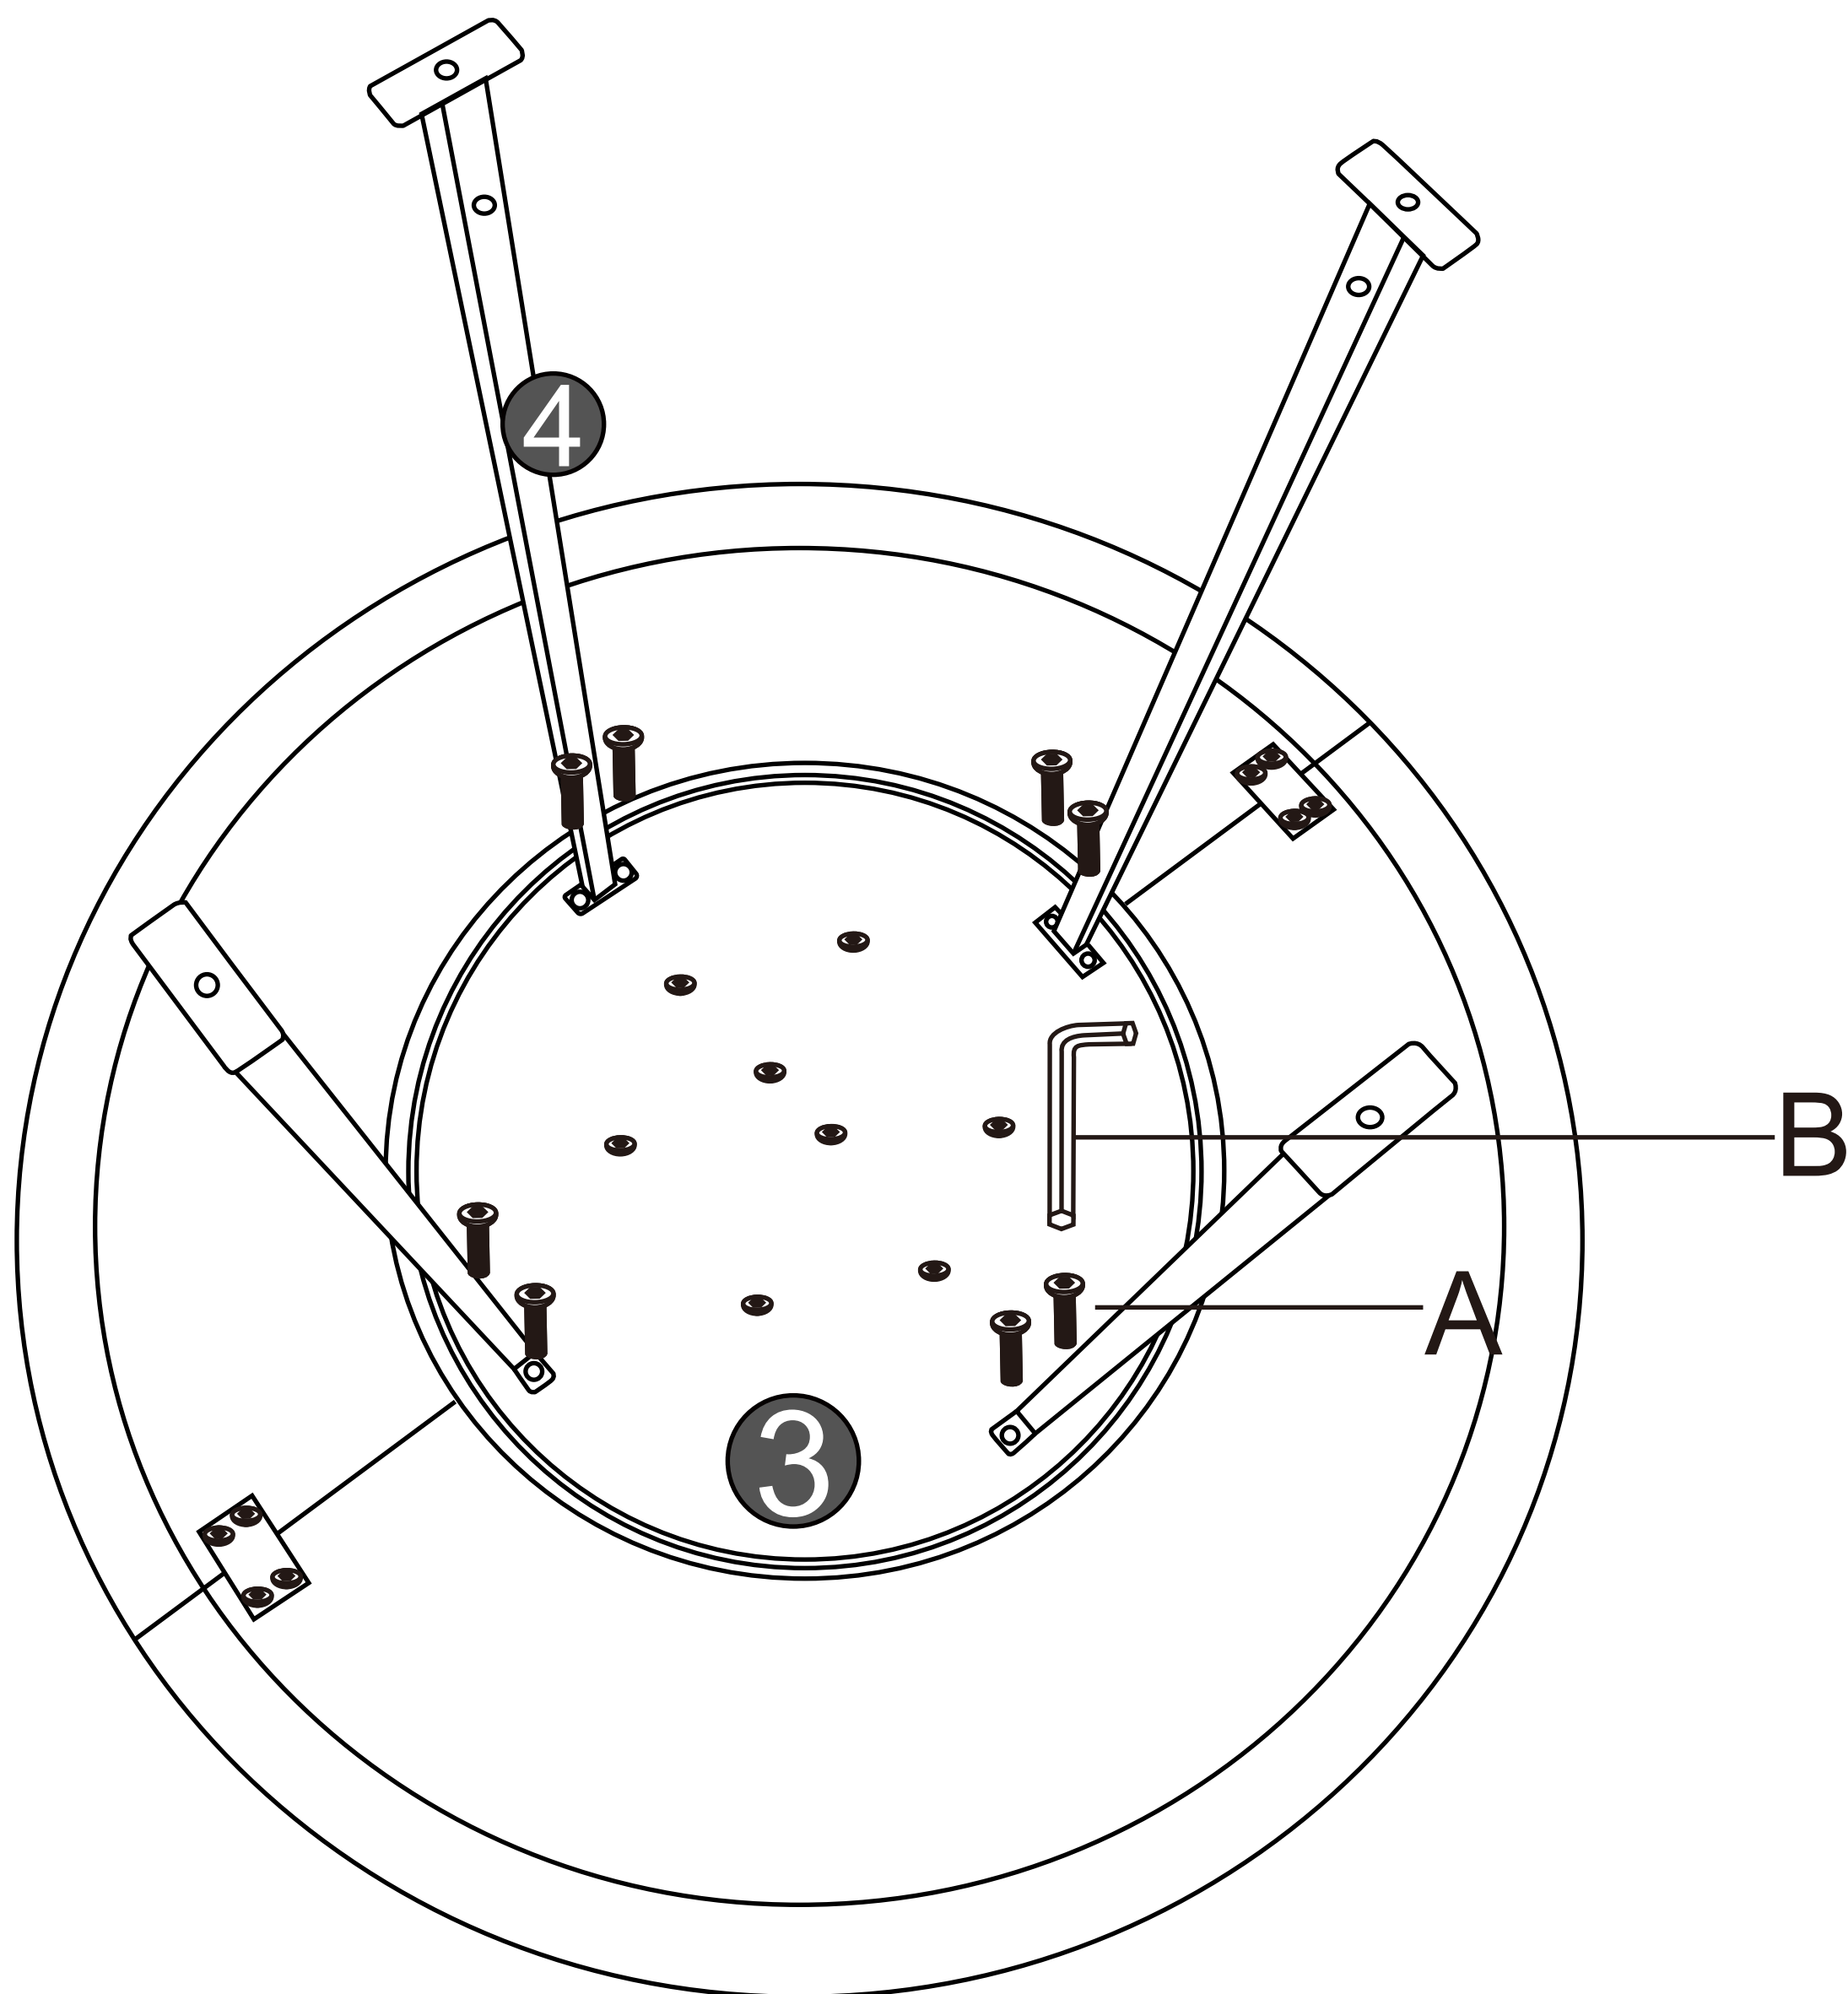

STEP 4



Connect the iron rod(5) and legs(4), and use the wrench (B) to tighten the bolts (A) halfway.

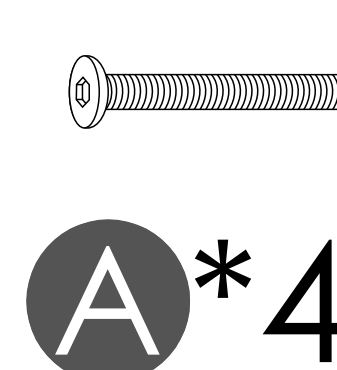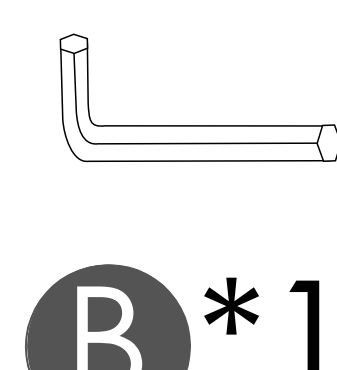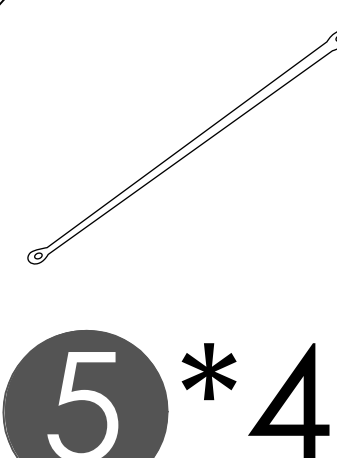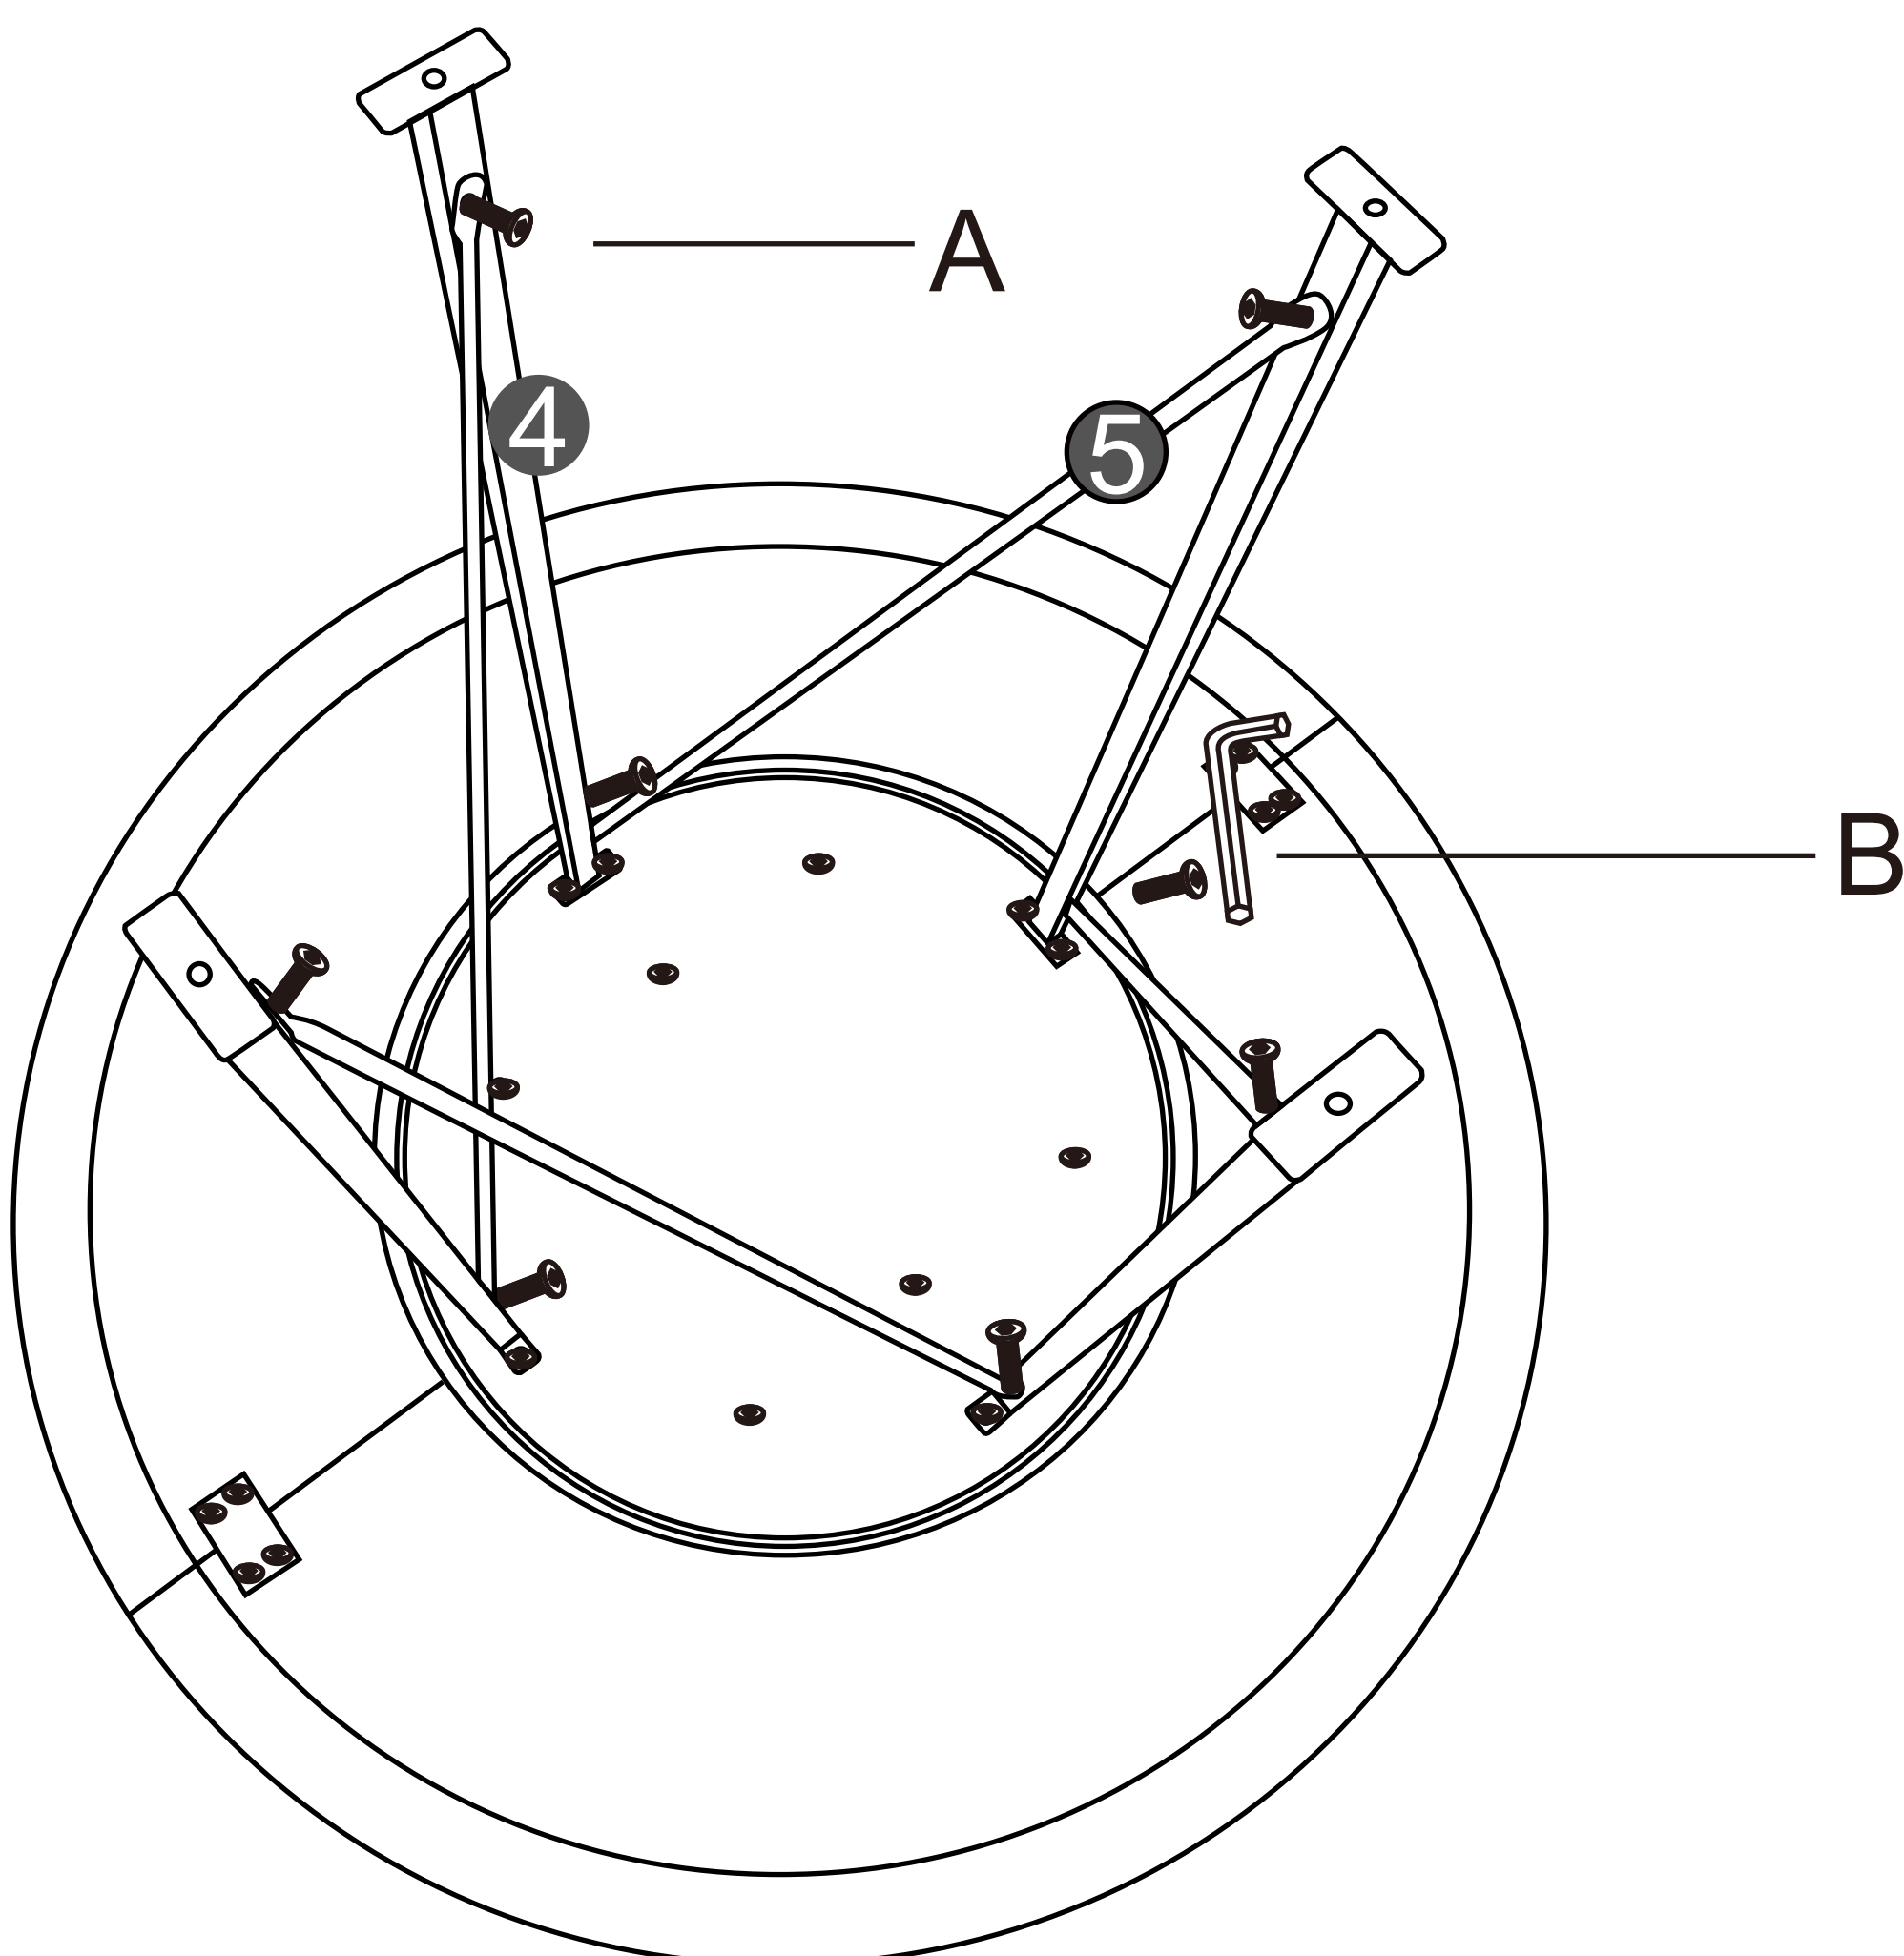

Assembly Instruction


STEP 5

Connect base(7) and legs(4), and use the wrench (B) to turn the bolts (E) 3 turns, leaving them loose for now. Fully tighten the bolts (A) on the iron rod (5).

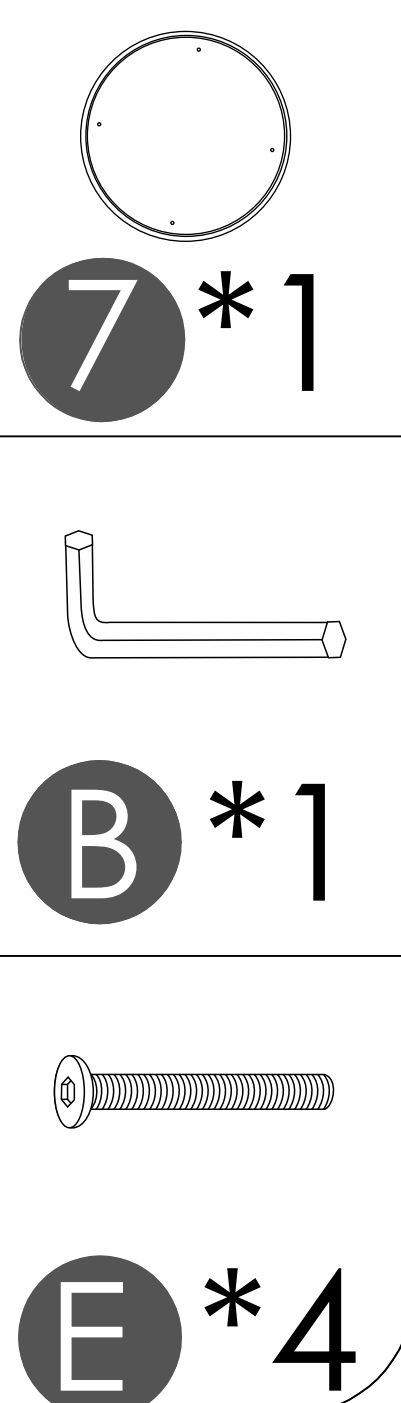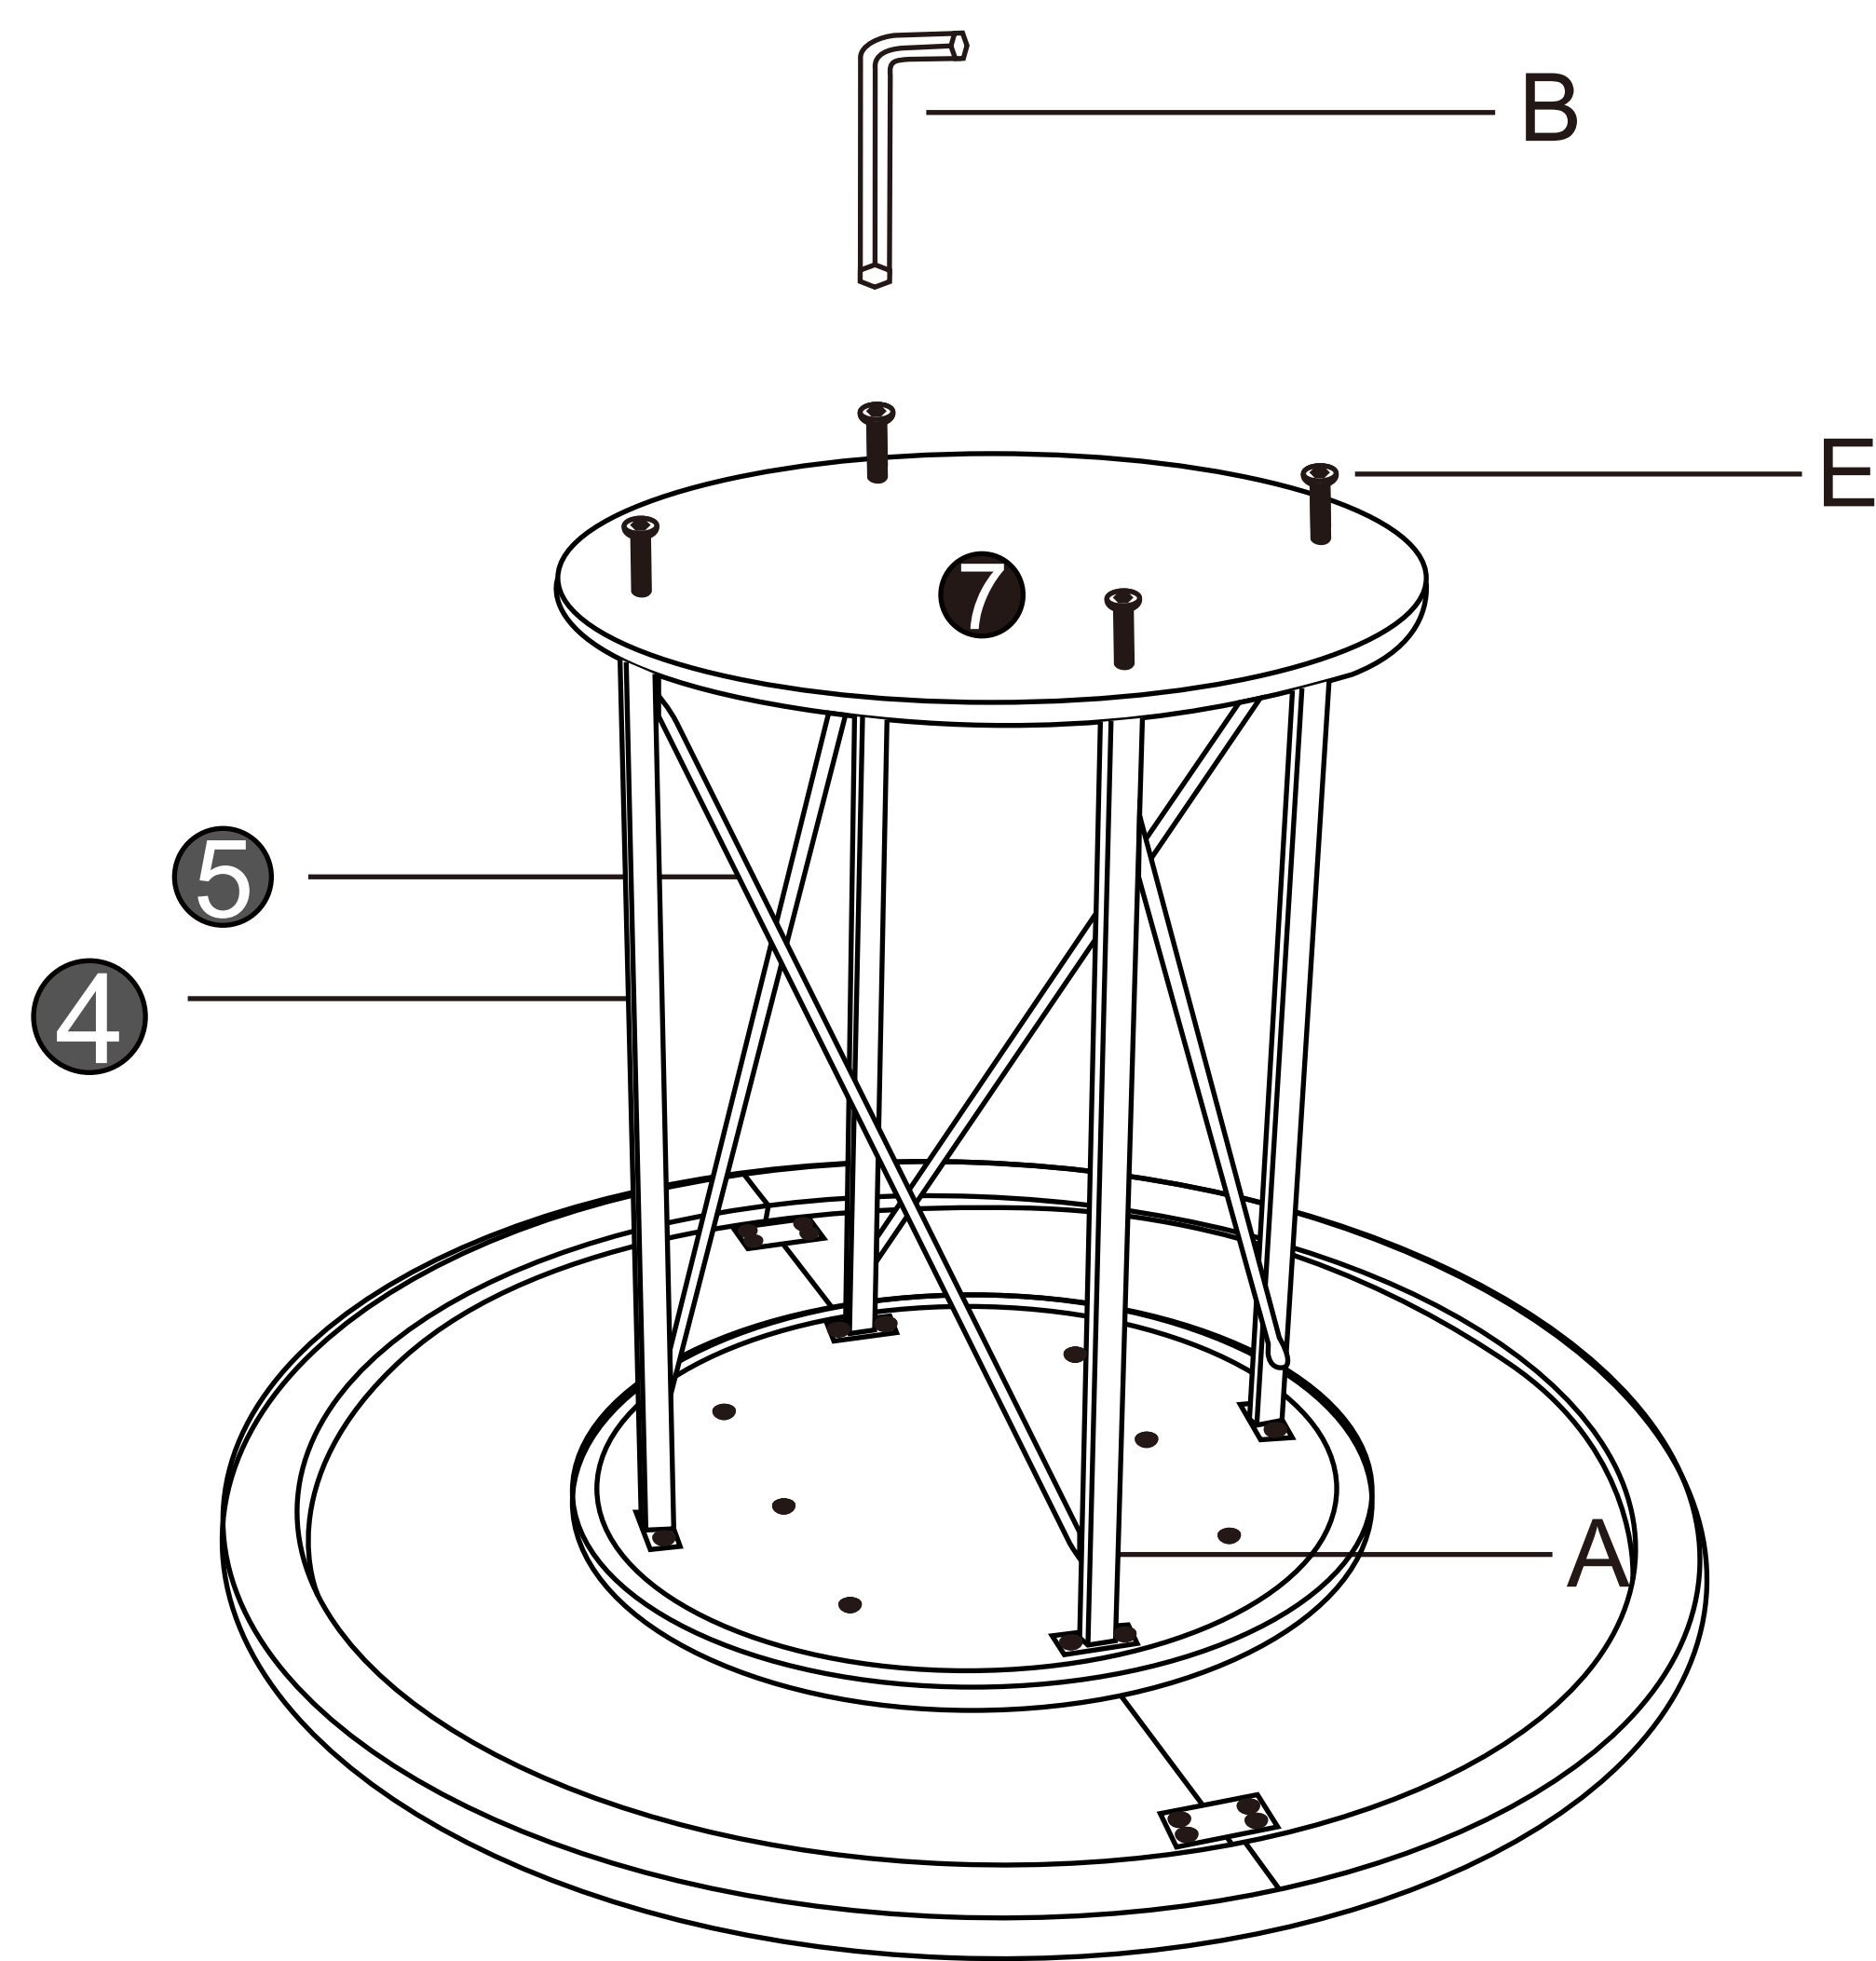

STEP 6


Lift base(7) upward to the highest position.

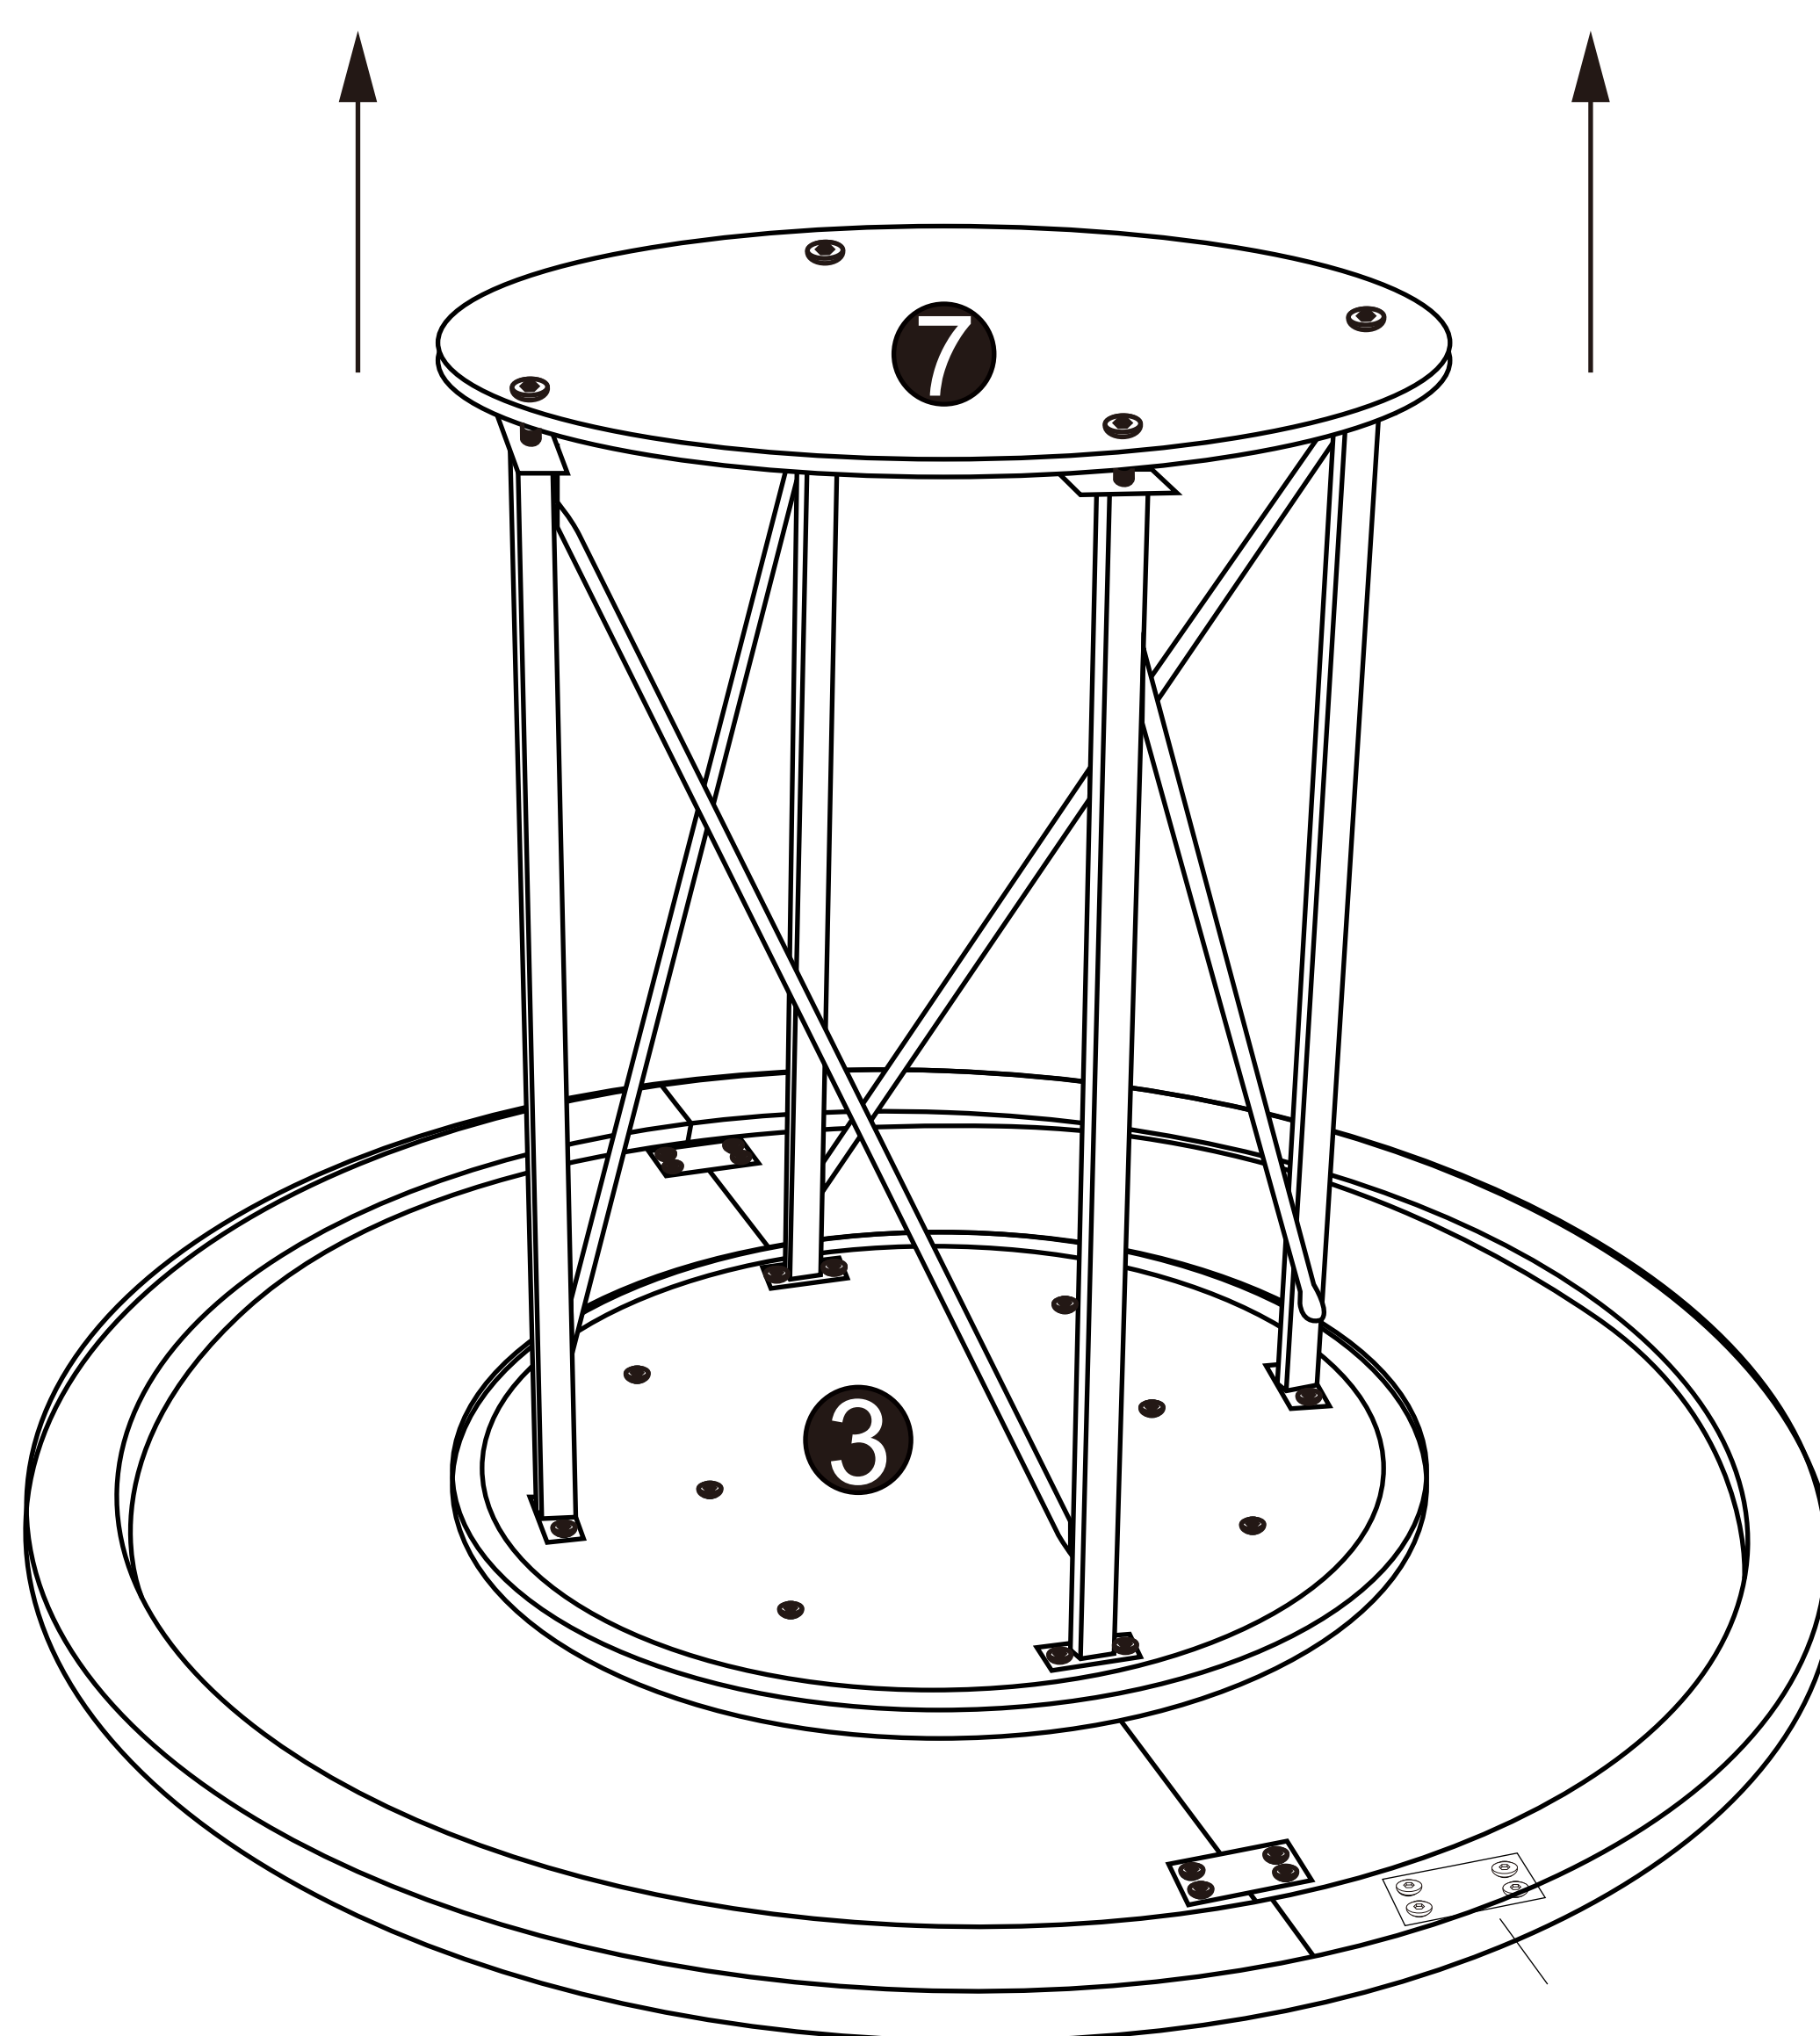

Assembly Instruction

STEP 7


Connect enclosure plate (6) with plate (3). ⚠ After inserting enclosure plate (6) completely into slot of plate (3), press down base (7). When installing base (7) and plate (6), pat plate (6) to ensure that it is fully inserted into the slot.

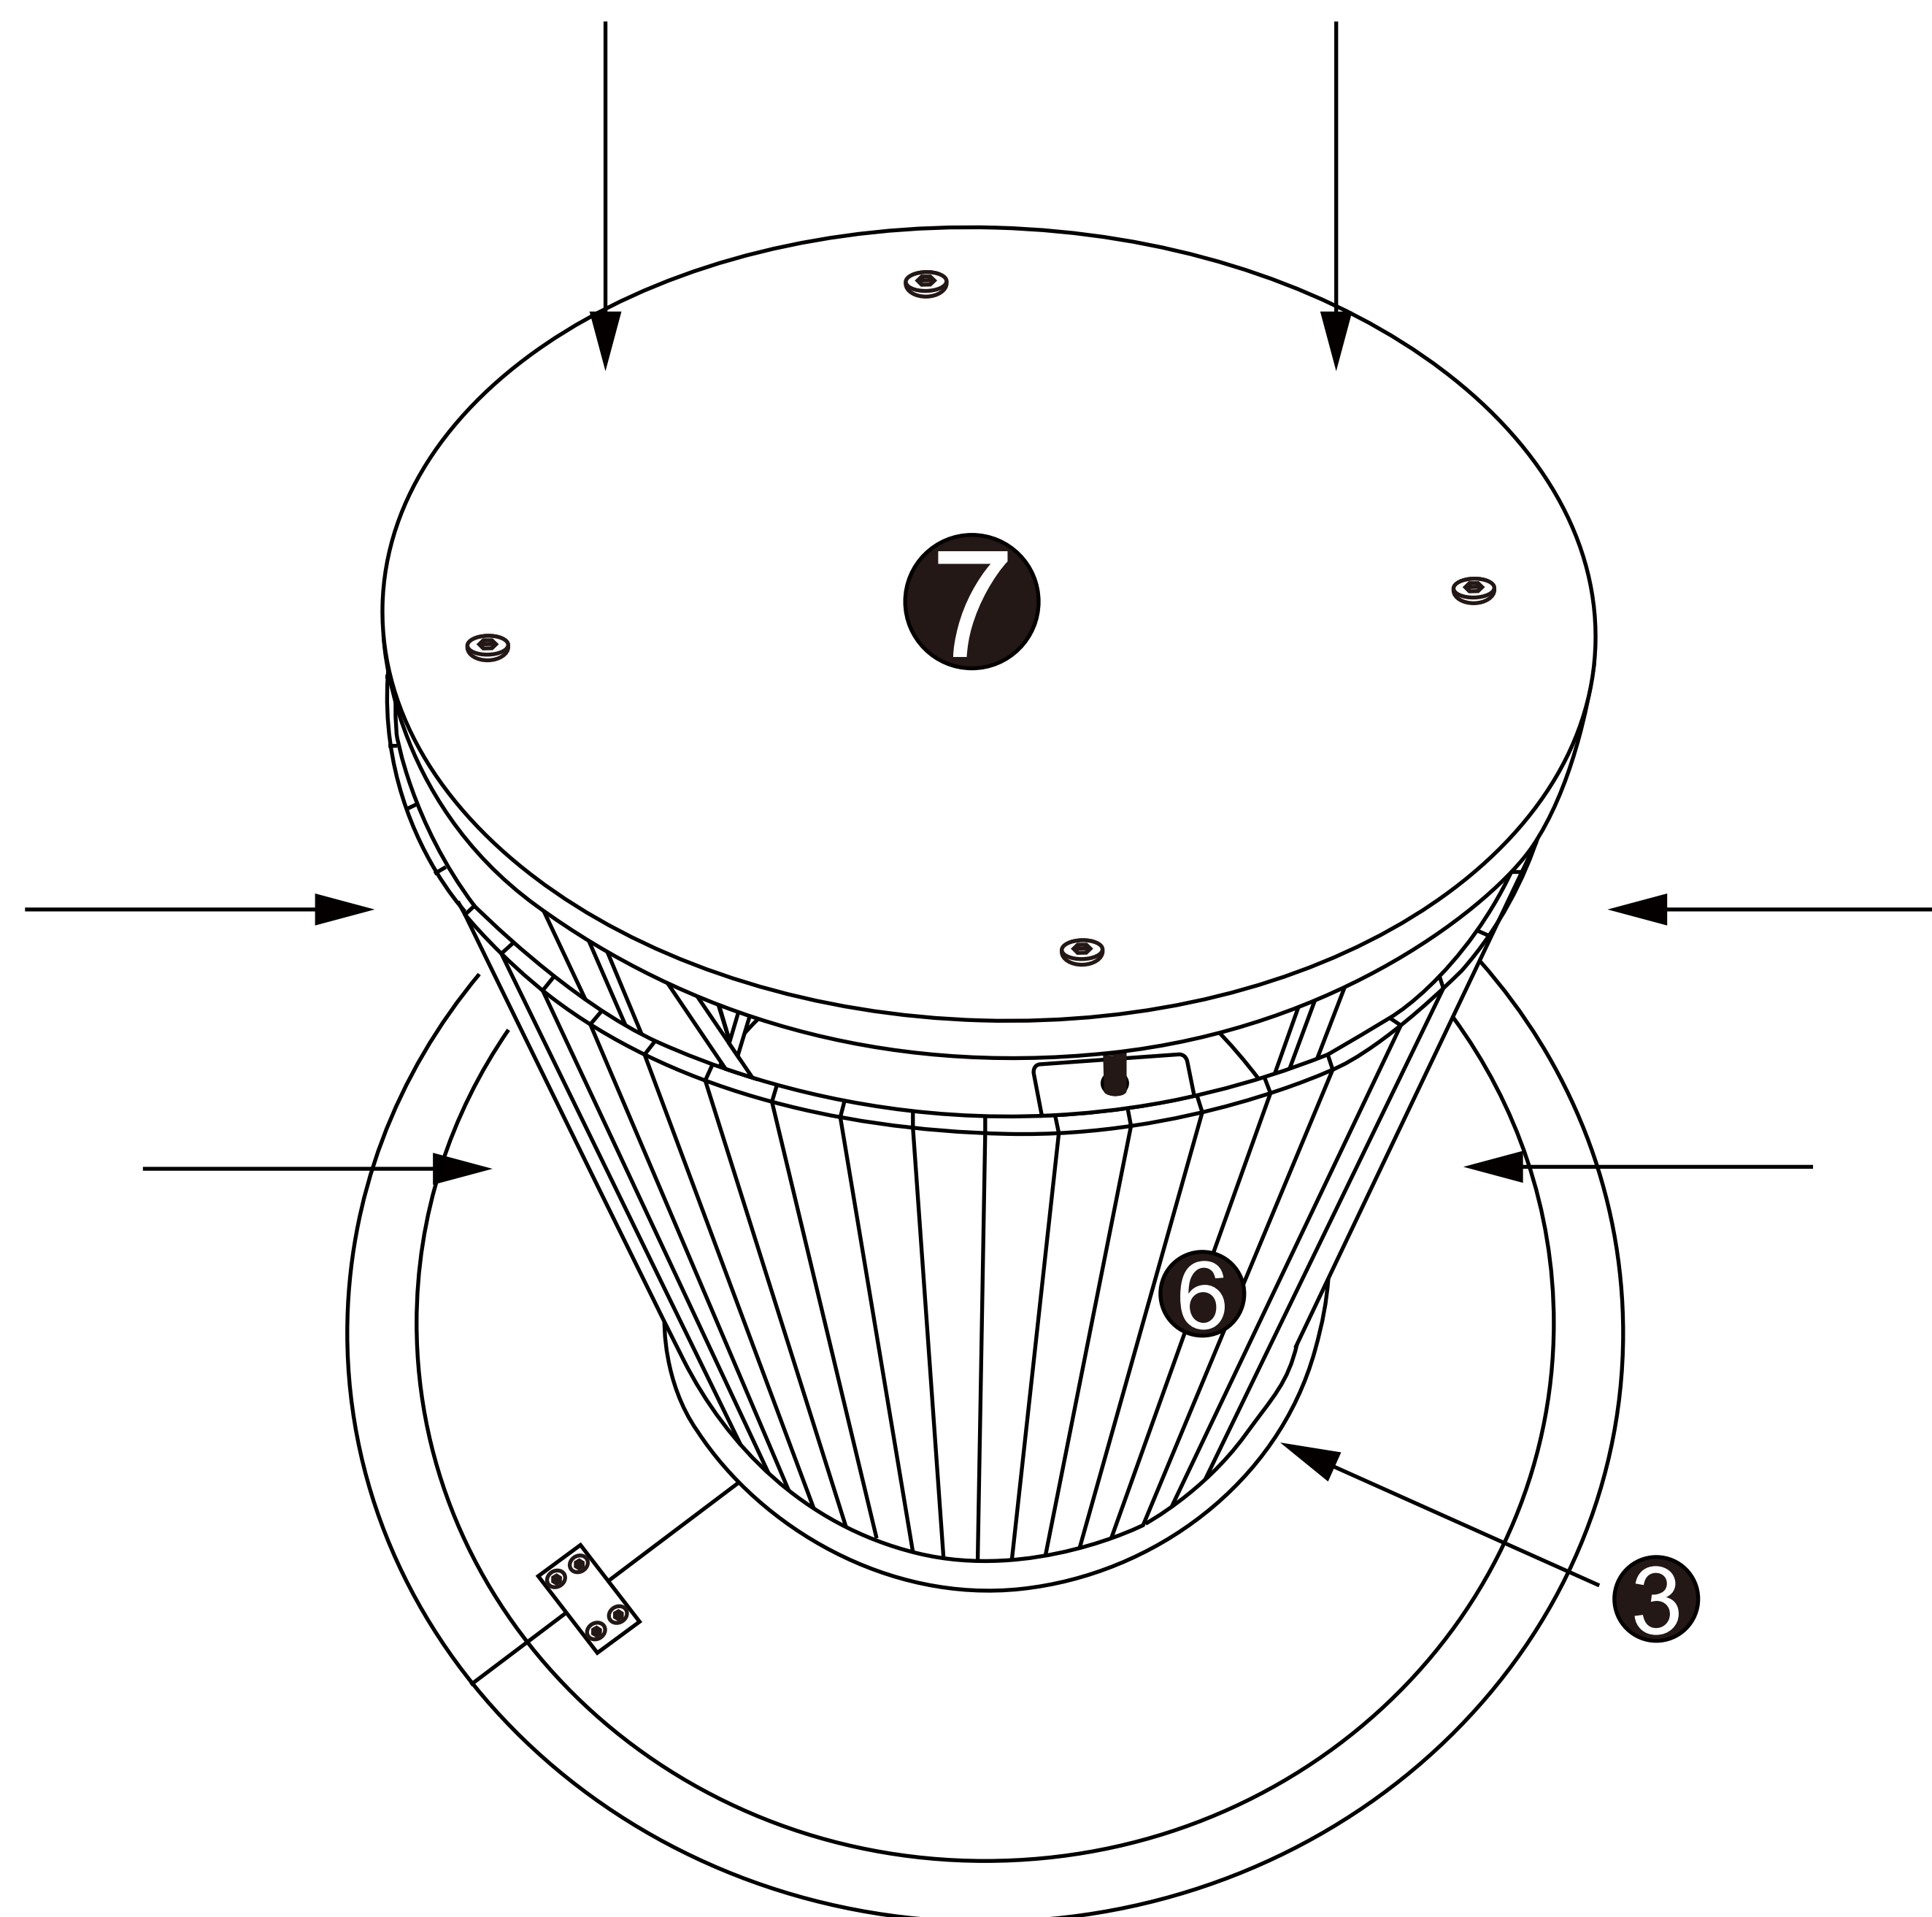

6*3

STEP 8


Use the wrench (B) to fully tighten all the bolts (E) on the base (7).

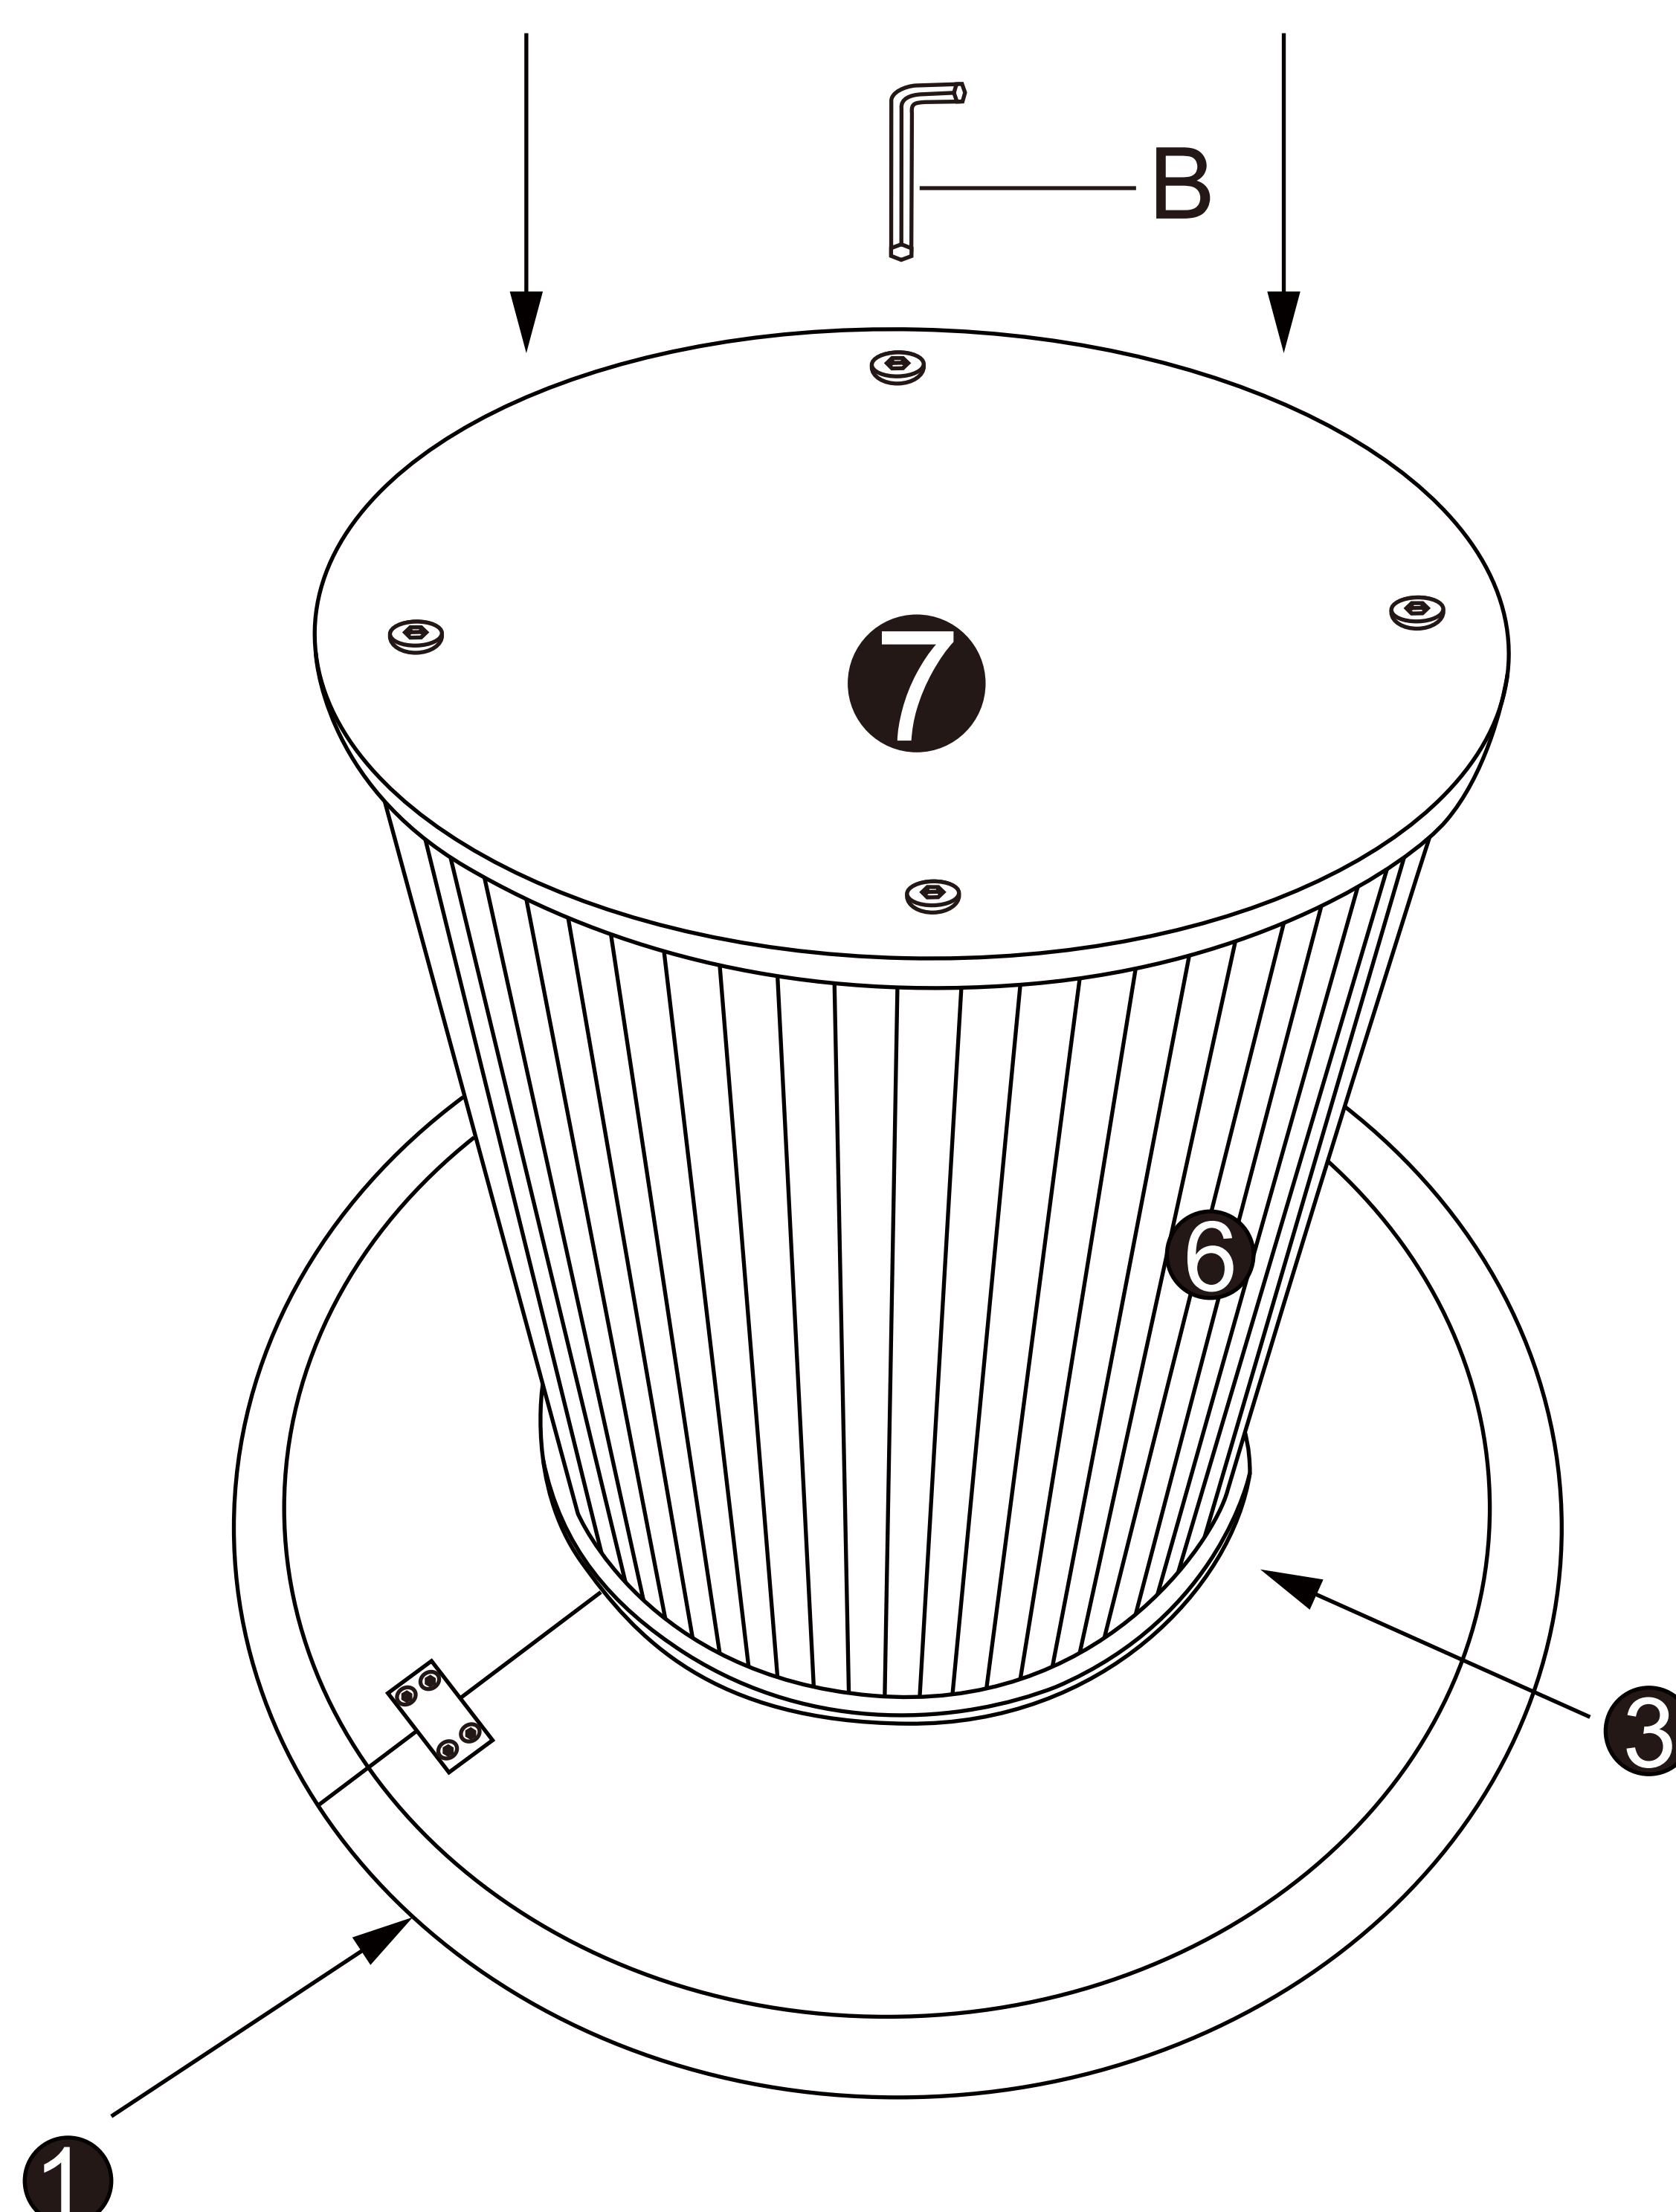

Assembly Instruction

STEP 9


Stick the felt pad (F) to the bottom of base (7) as shown in the figure.

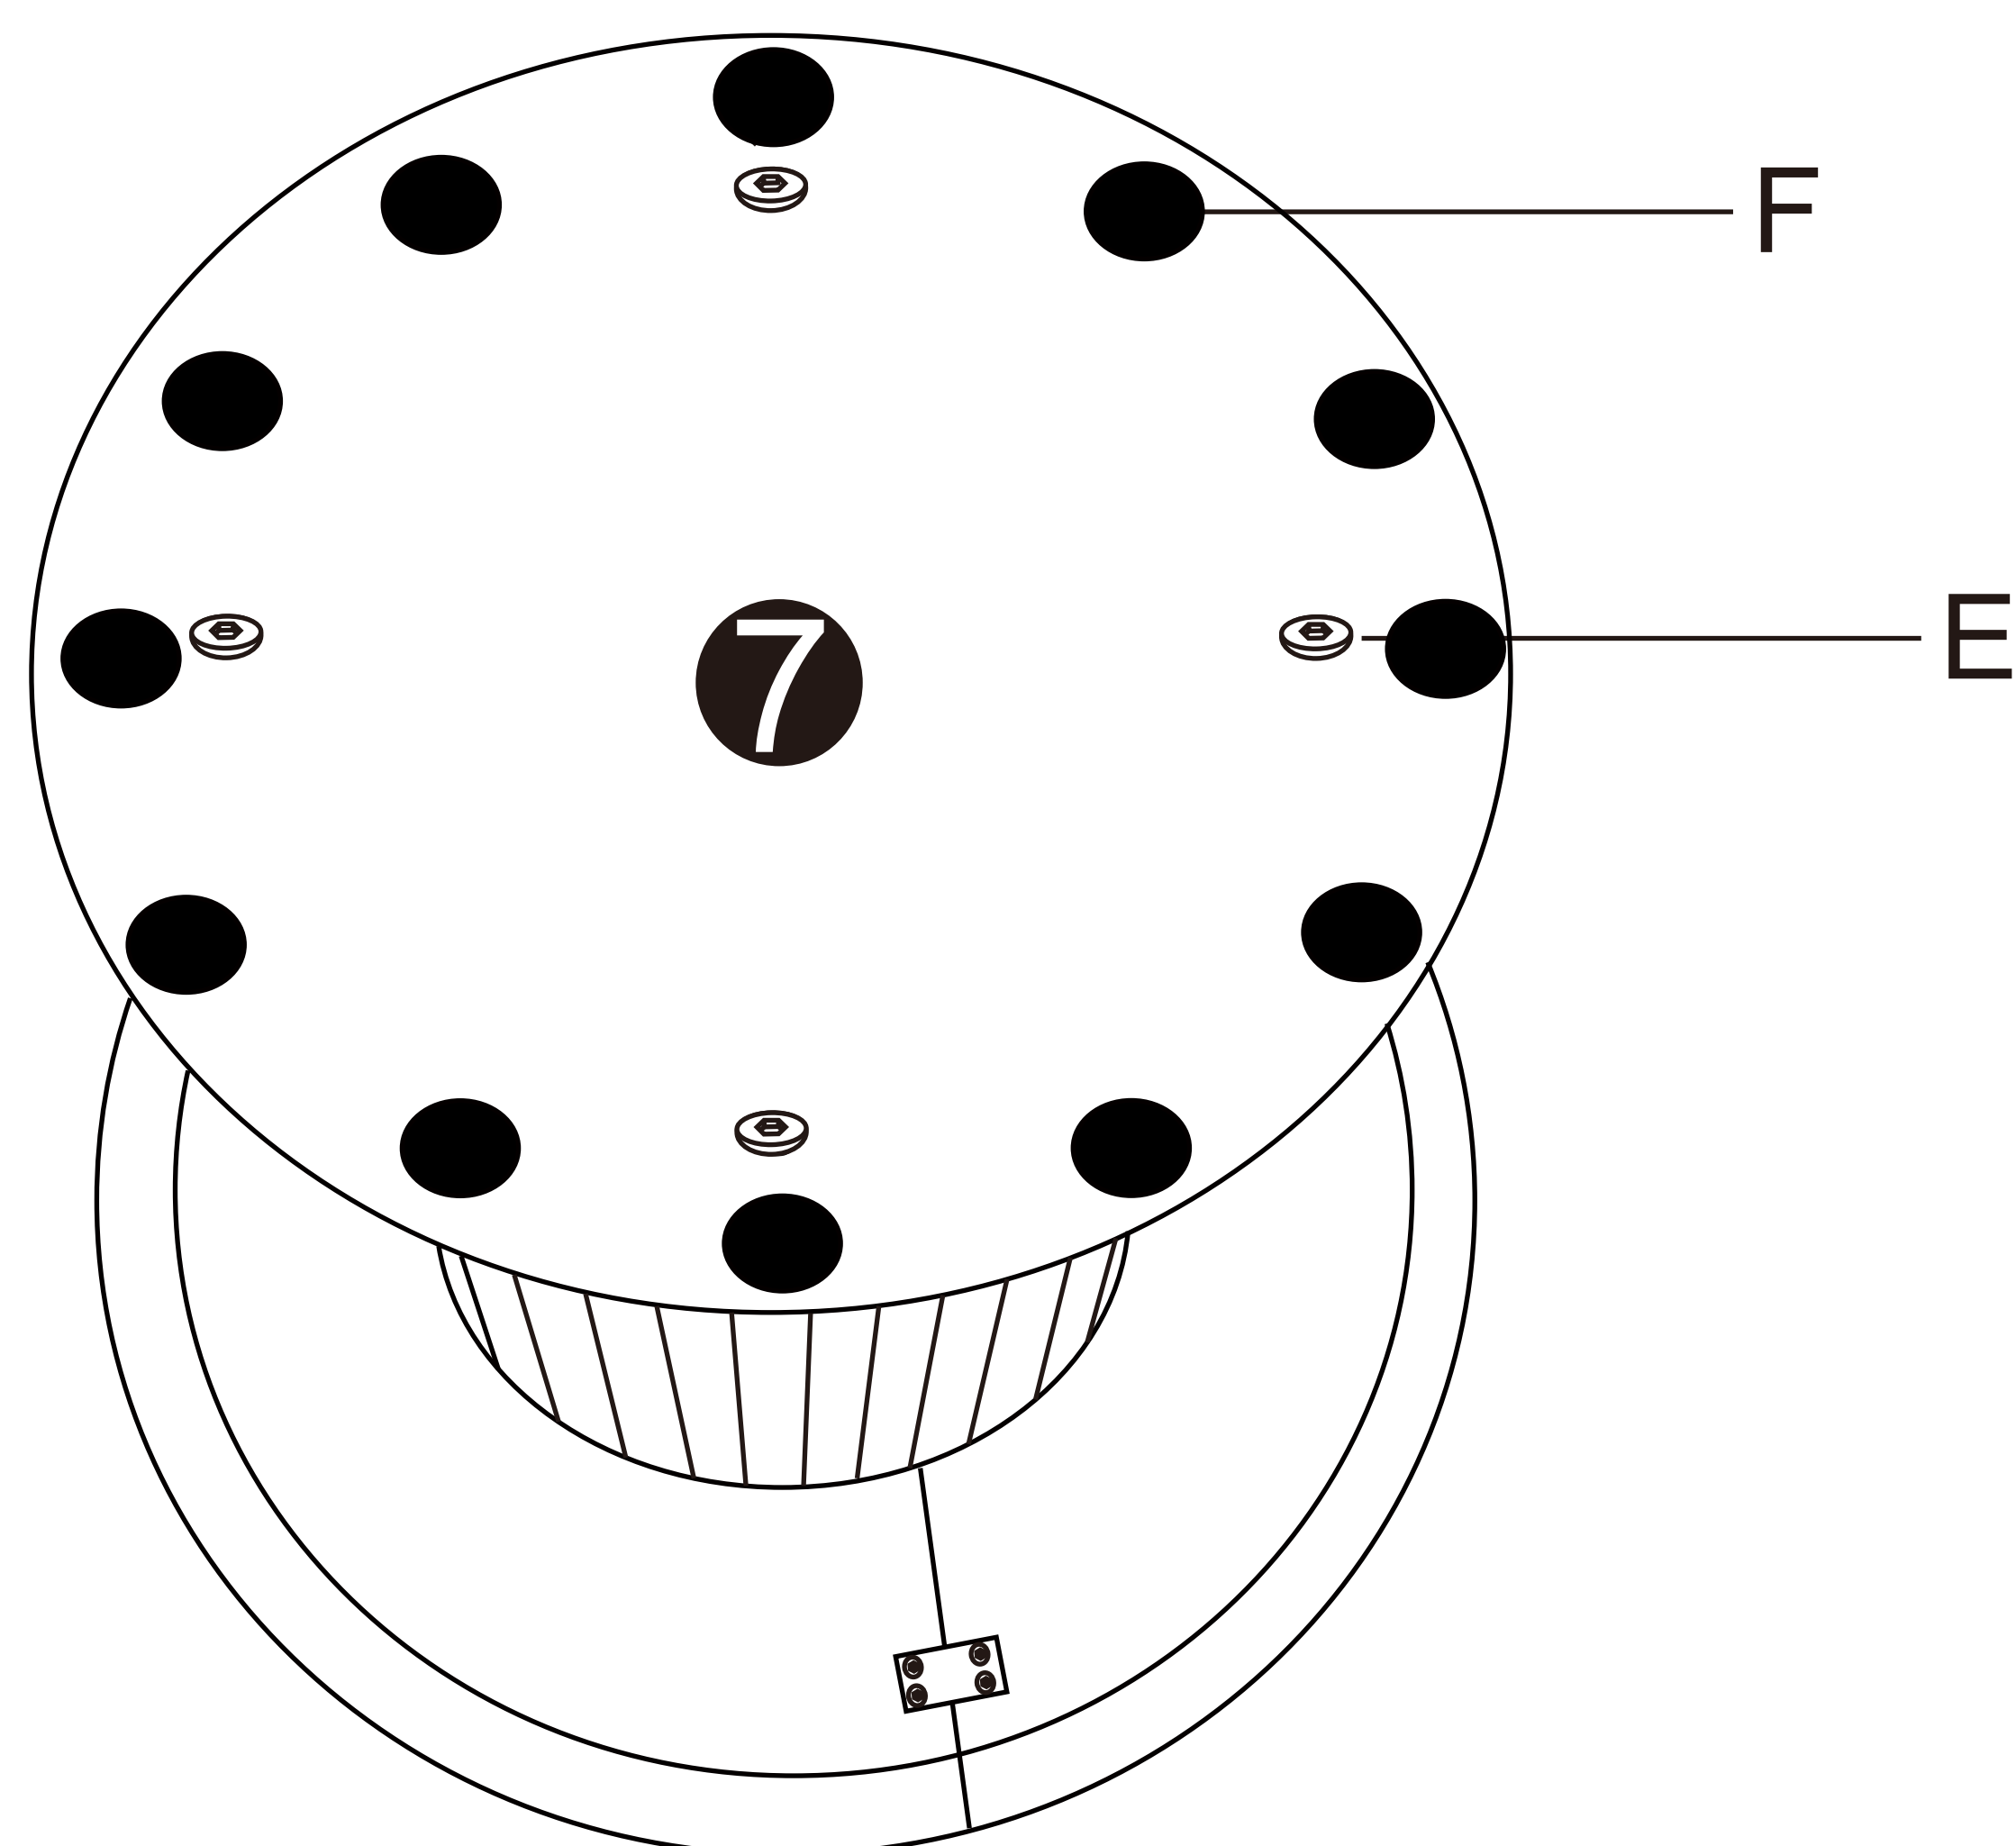

F*12

STEP 10

The assembly is done

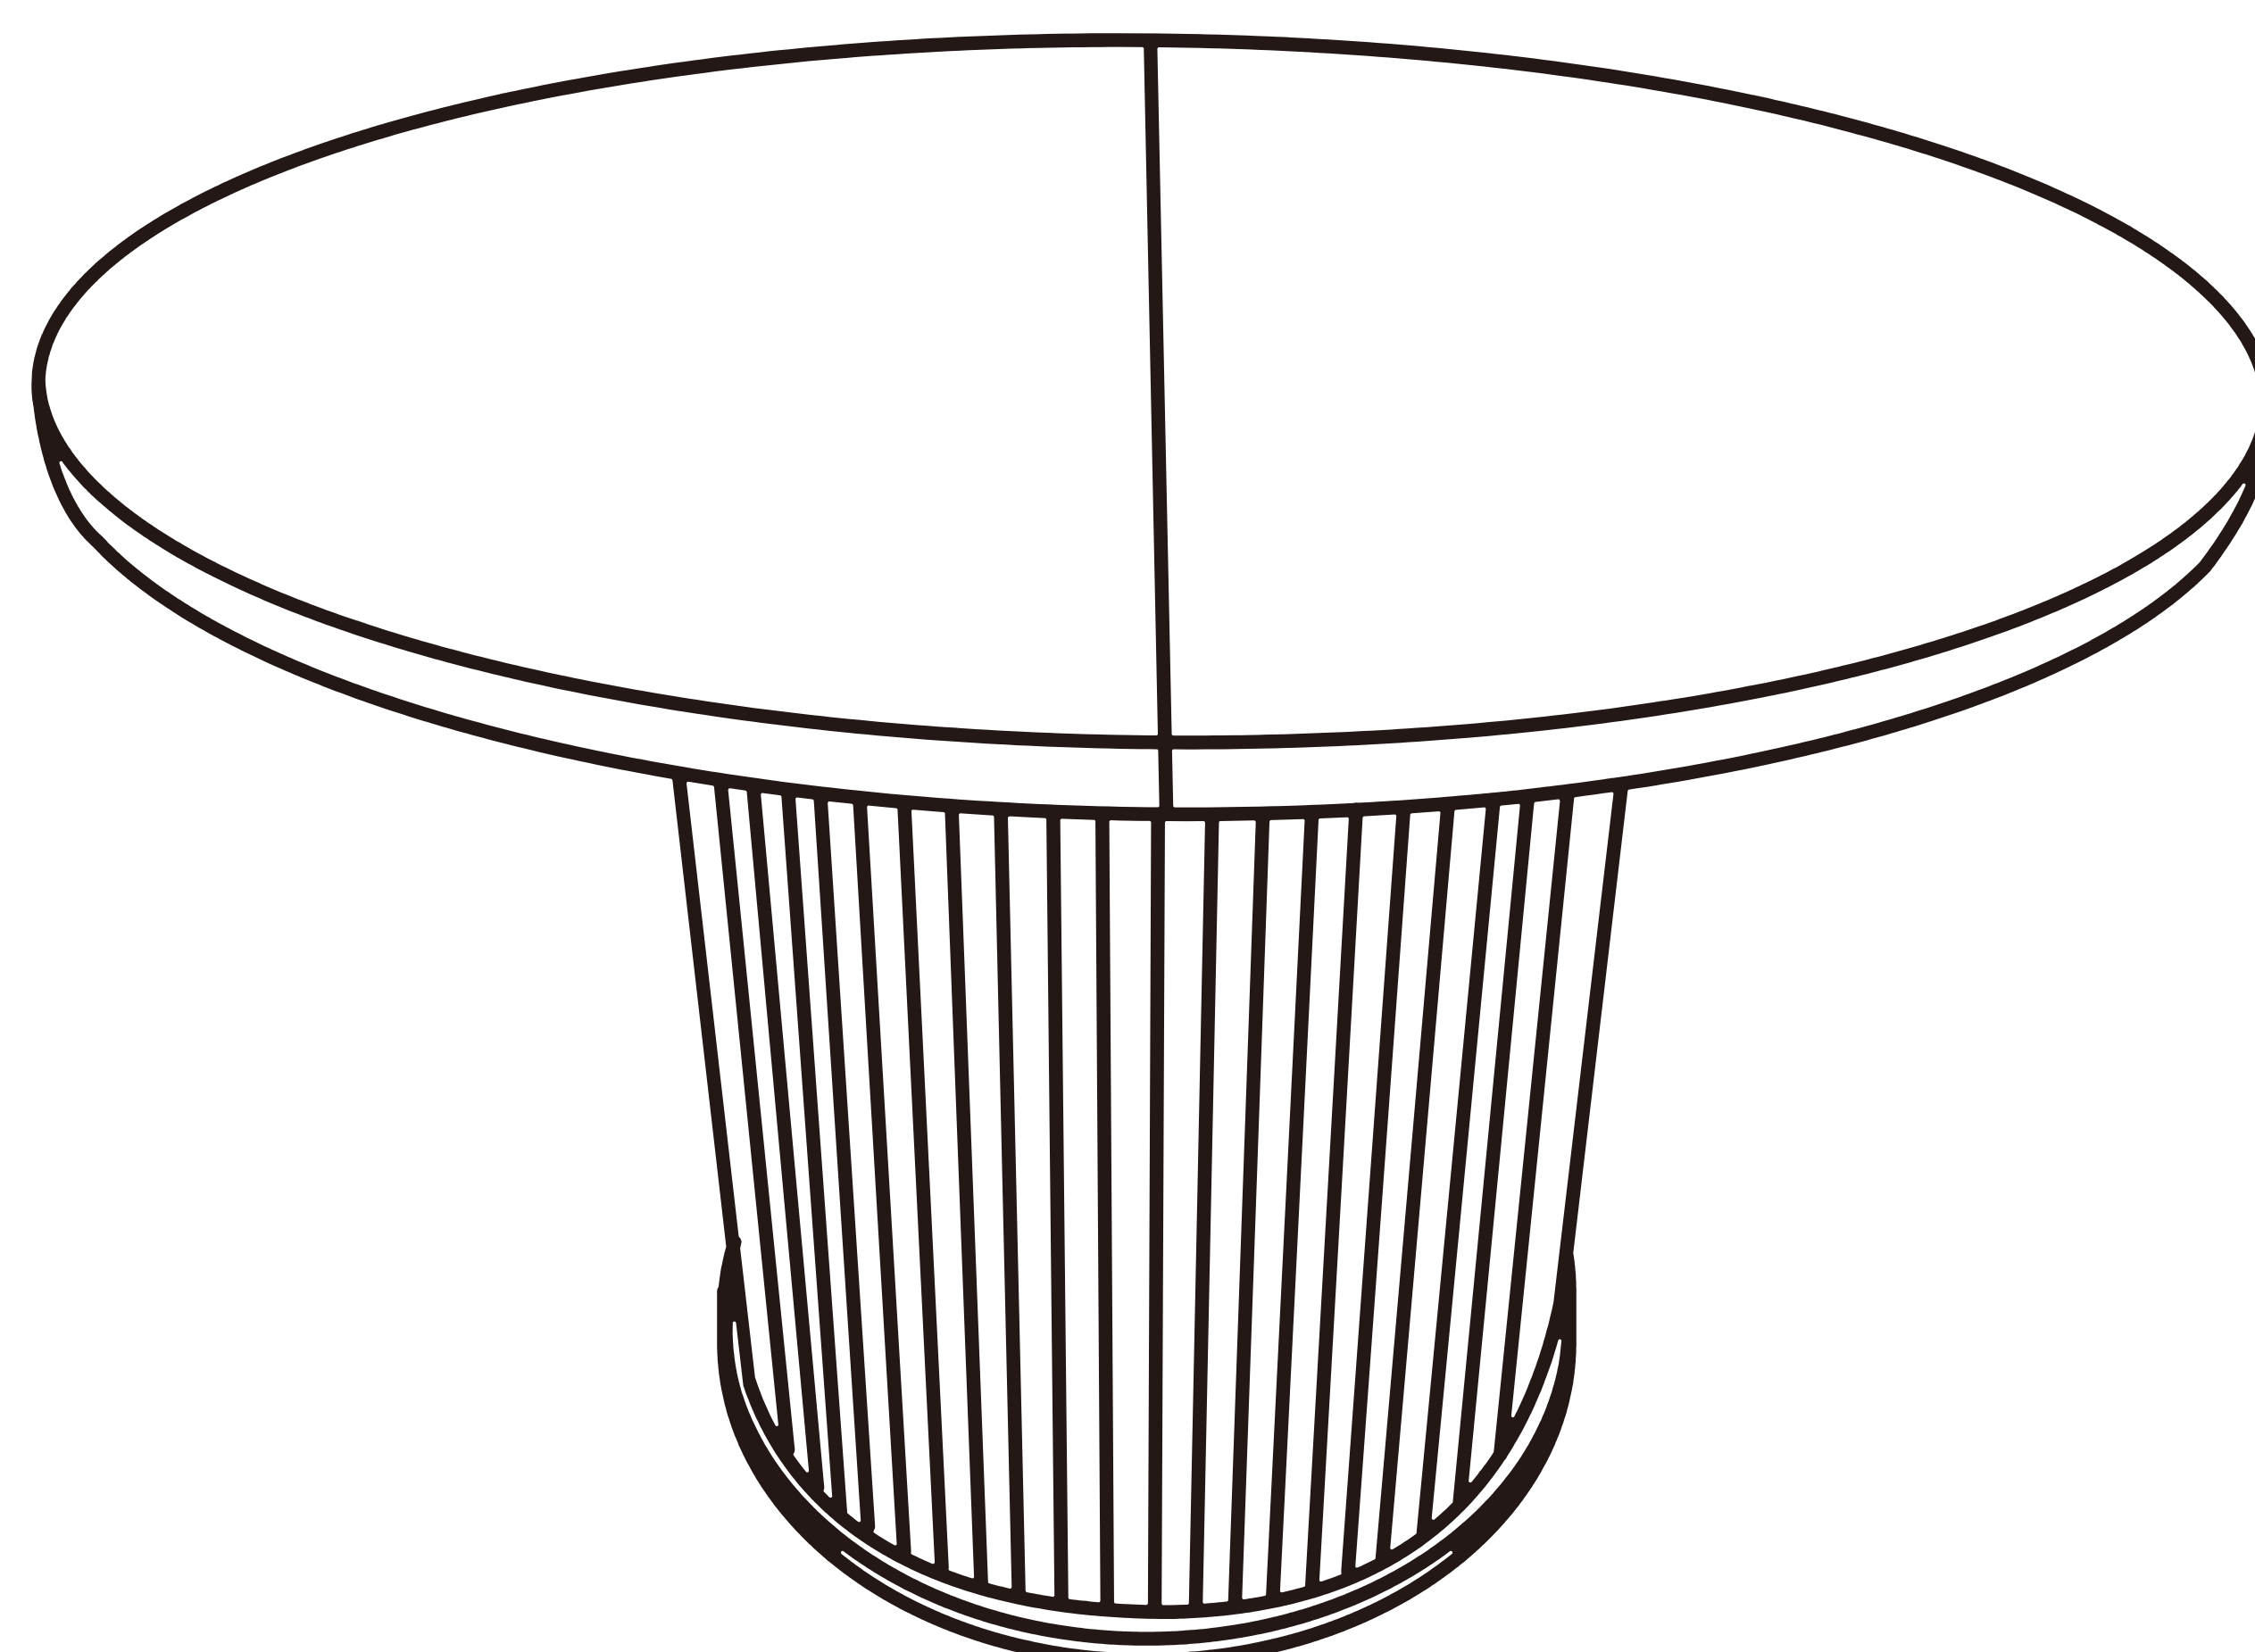

DONE