


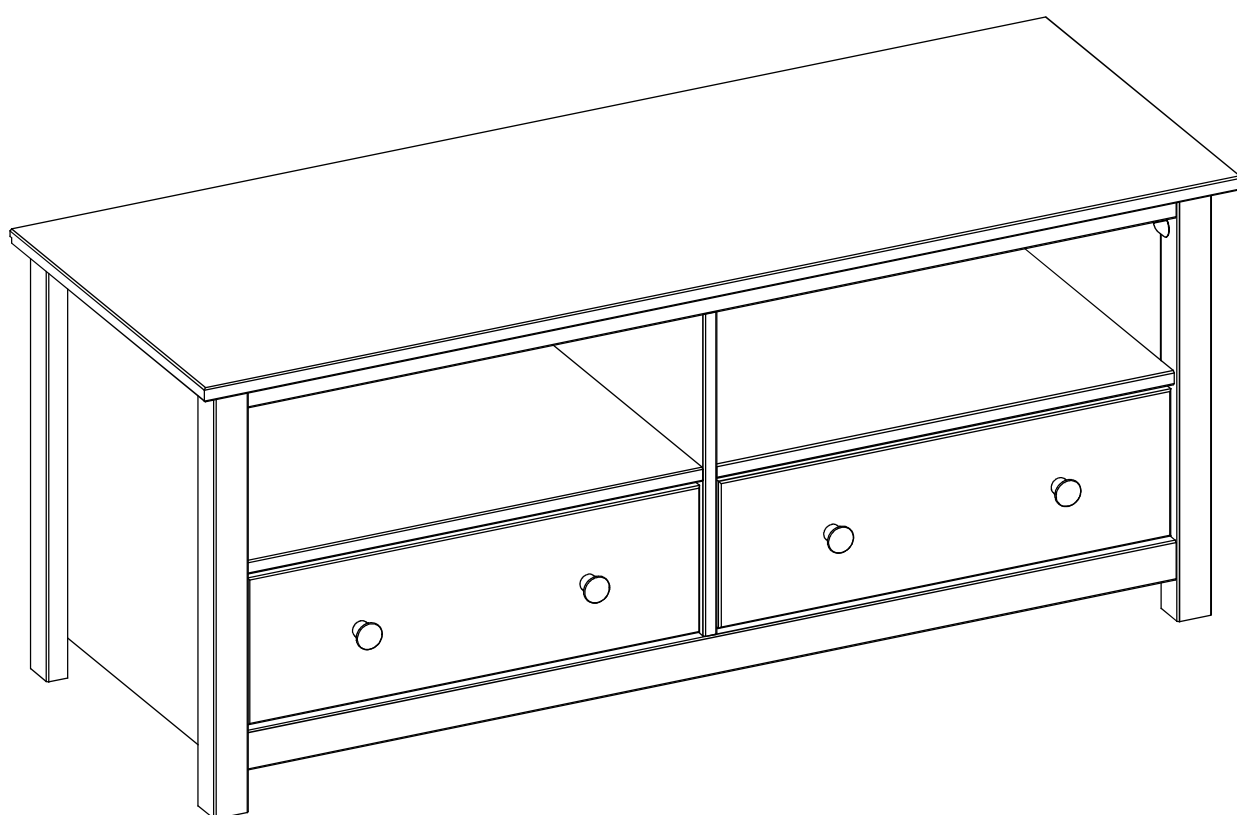
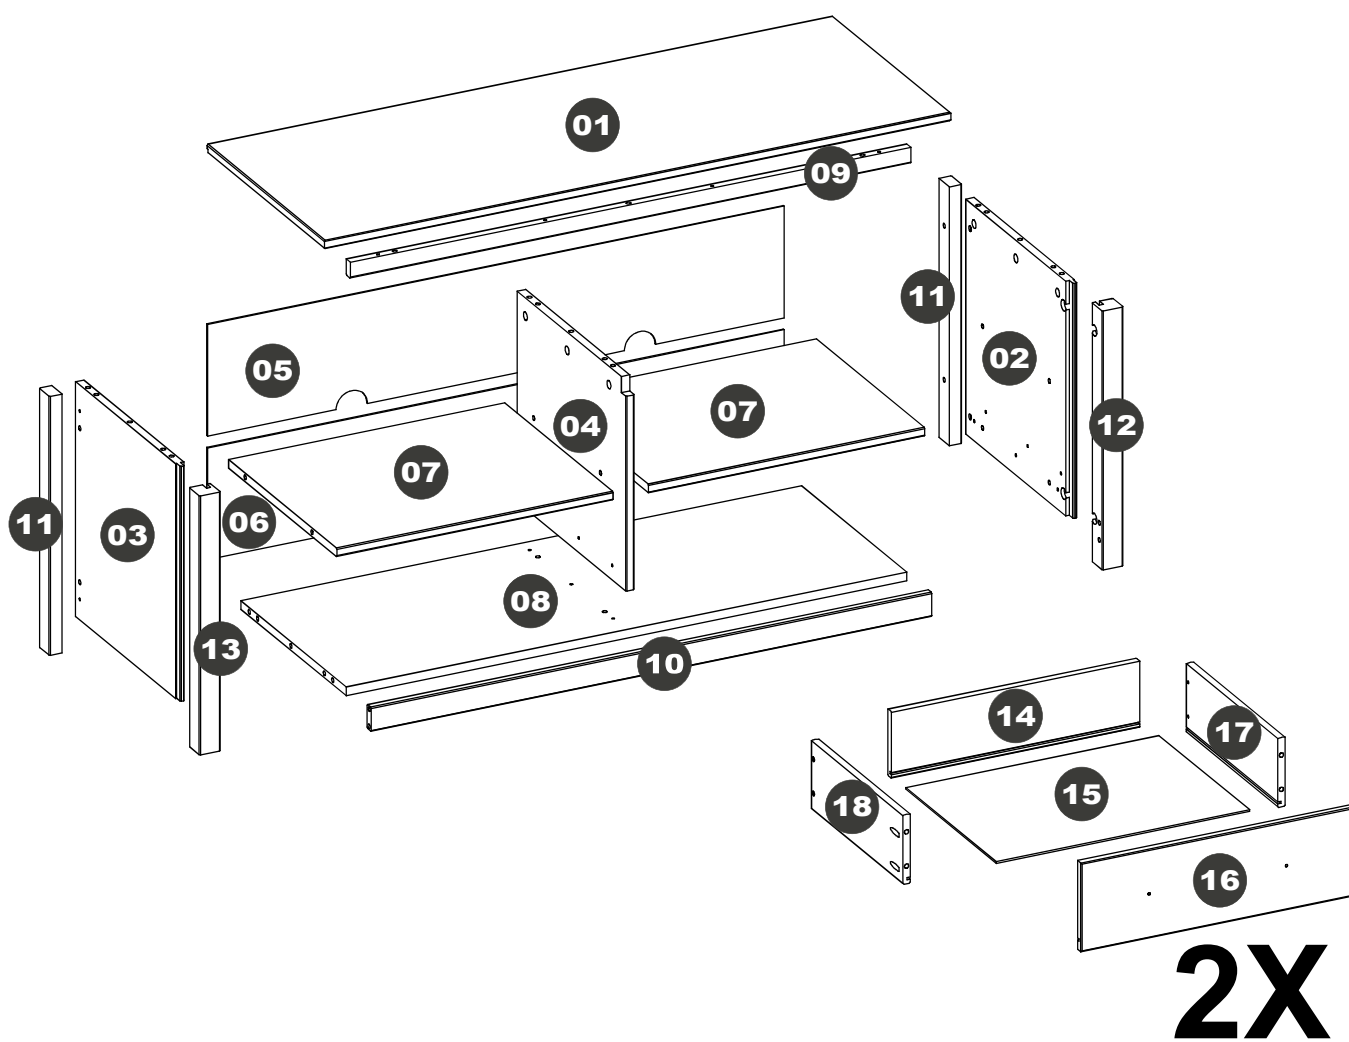



TV STAND

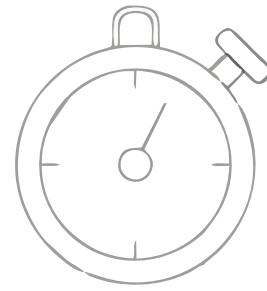


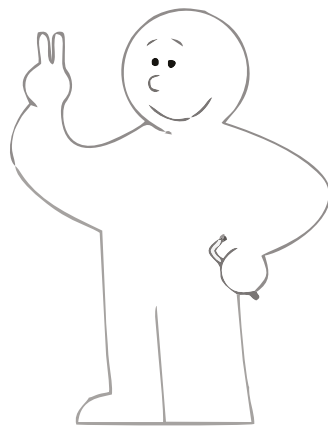


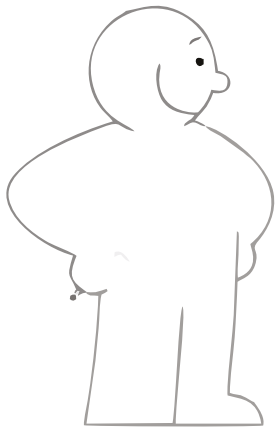


60 Min

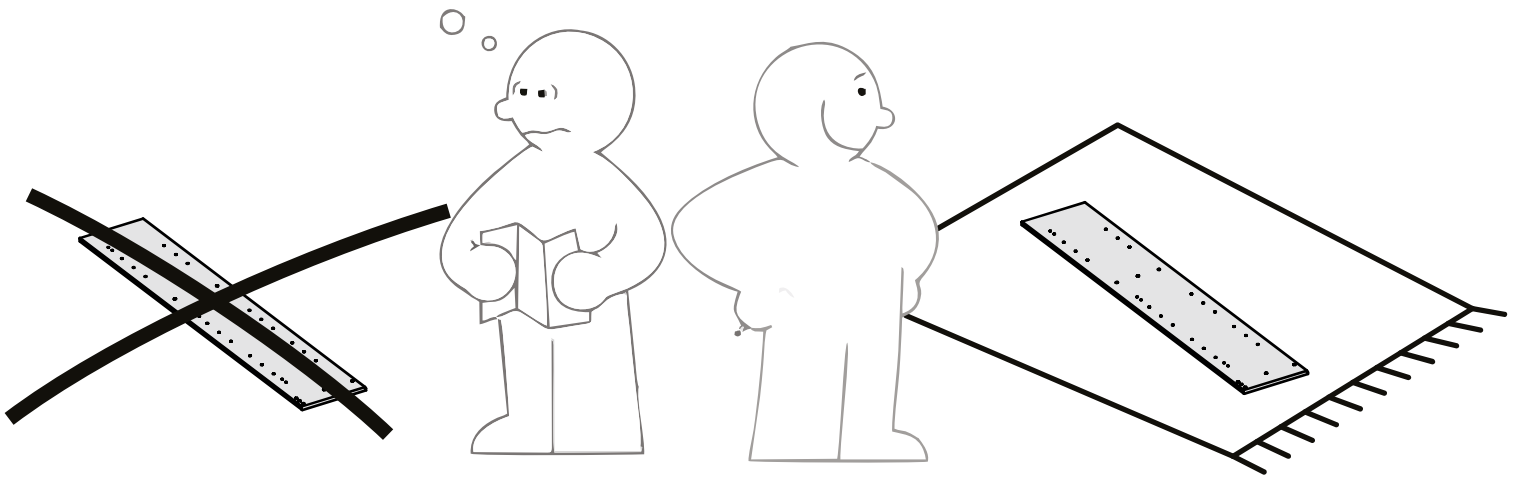

Tools required

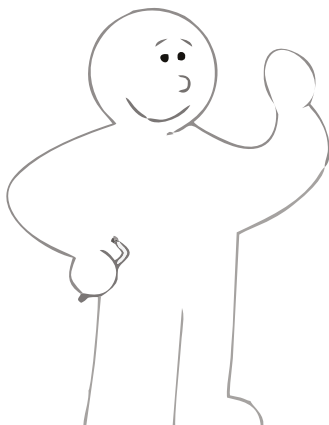

Phillips screwdriver
(medium & large)

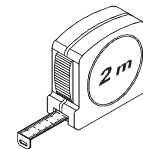











Ruler/tape
measure












Small
hammer



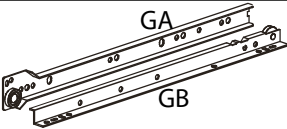Eye protection
(when using a
hammer or glue)


A	 8x30mm	39
C	 3,0x16mm	16
E	 6,0x10mm	12
G	 LEFT SET 350mm	02
I		02
K		15
M		04
O	 4,0x12mm	04
Q		04
S		01

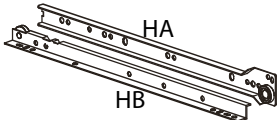B	 3,5x30mm	24
D	 4,0x40mm	08
F	 4,0x40mm	03
H	 350mm RIGHT SET	02
J		04
L	 OR	15
N		04
P	 4,0x30mm	04
R		24







HARDWARE IS LOCATED INSIDE A CARDBOARD BOX ! CHECK FOR IT BEFORE DISPOSING PACKAGING

Ruler - Use this ruler to help correctly identify the screws






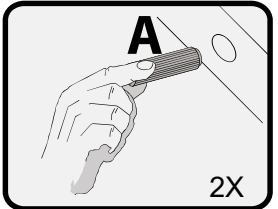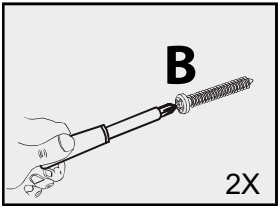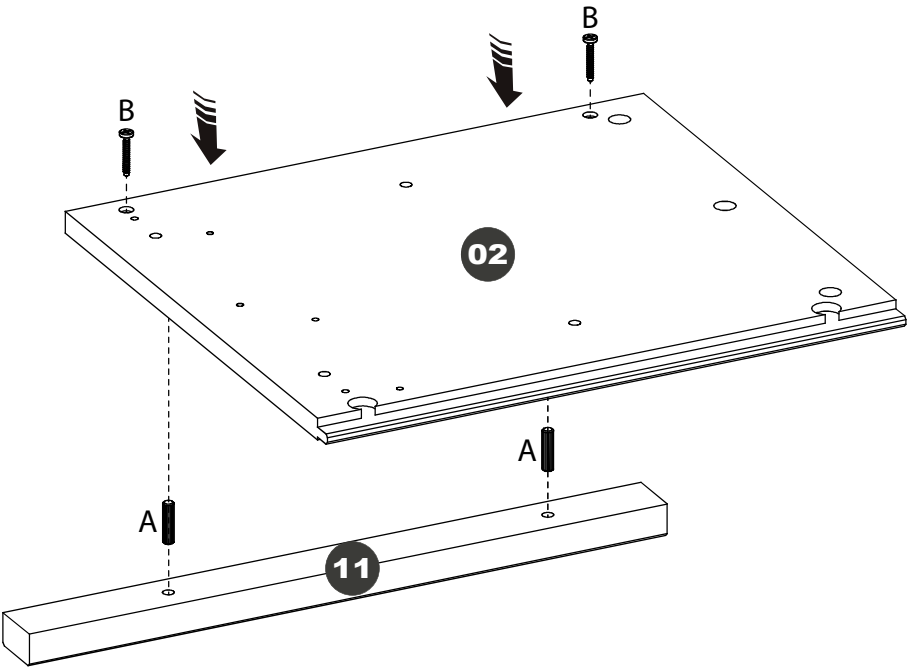


01




A		02	B		02
---	--	----	---	---	----

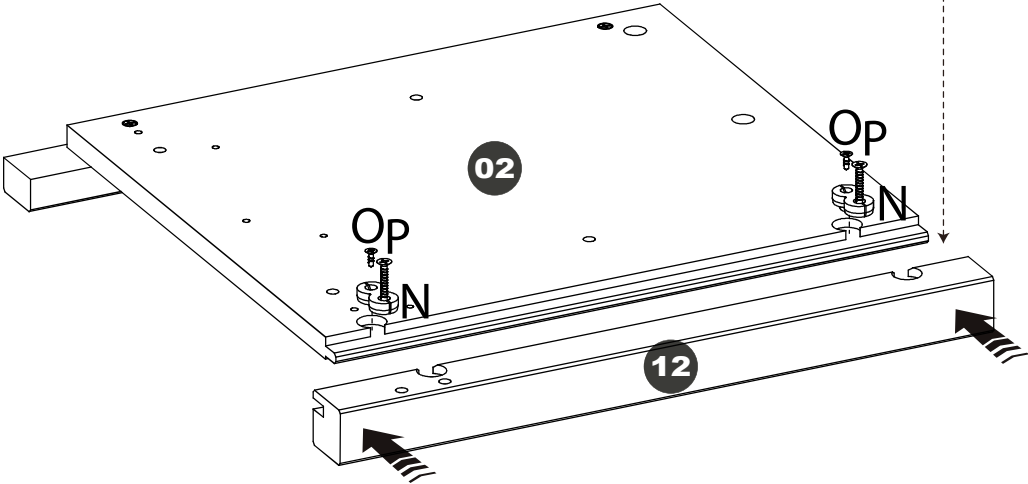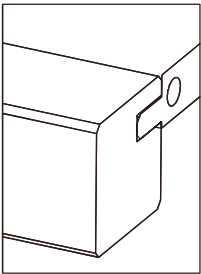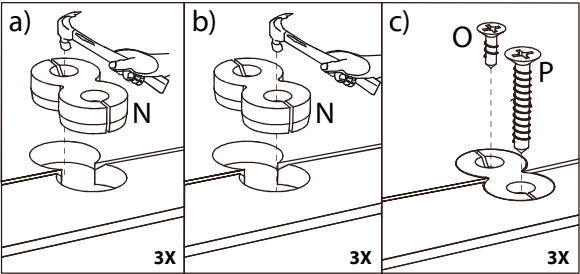02




N		02	O		02	P		02
---	---	----	---	--	----	---	---	----



03

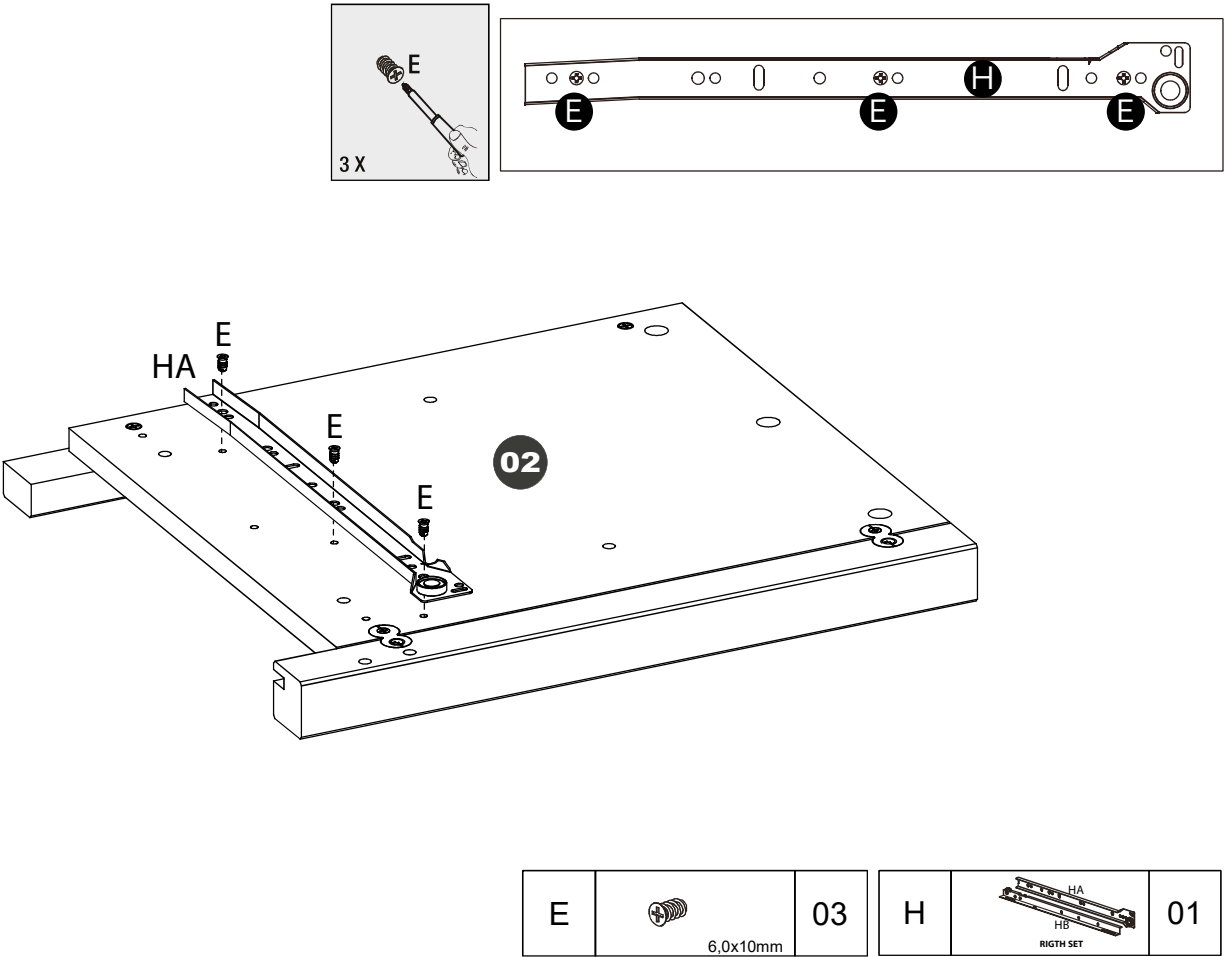


04



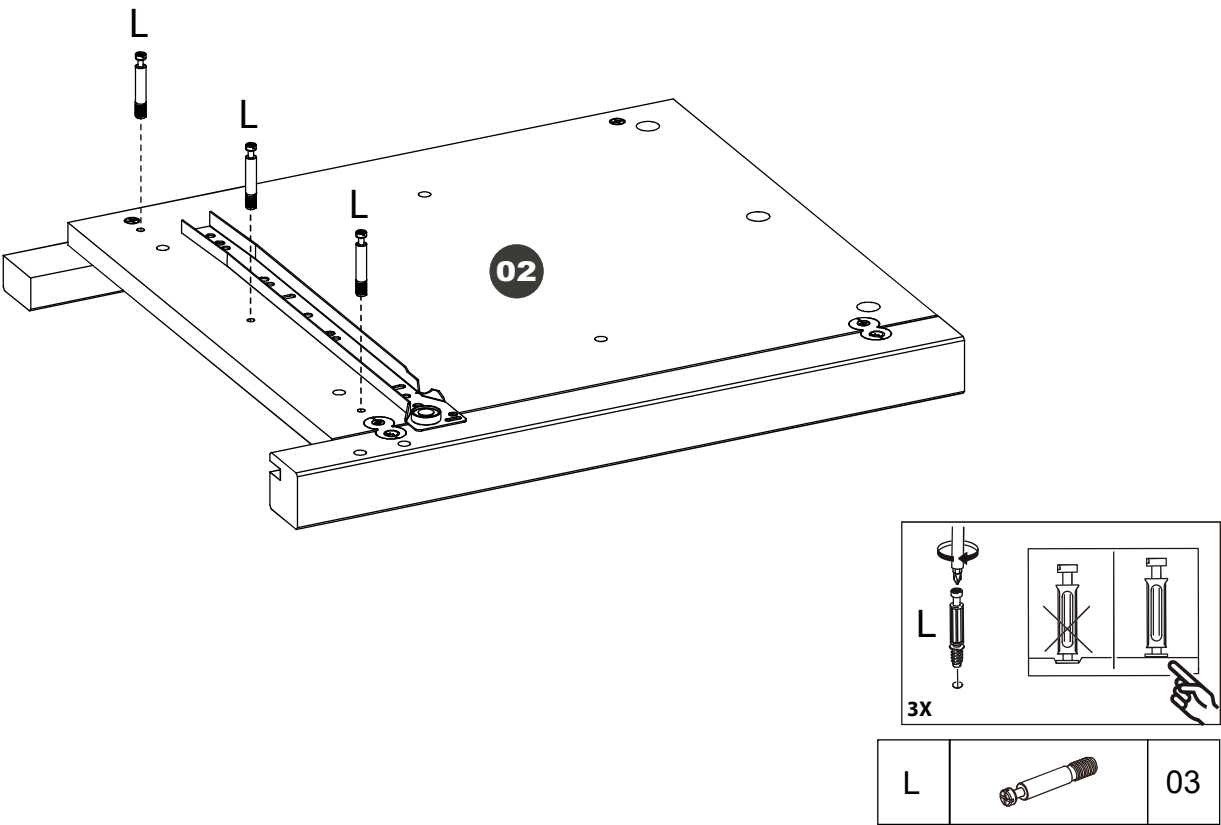



05

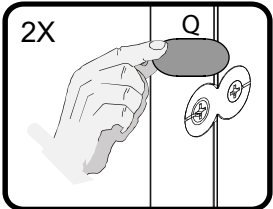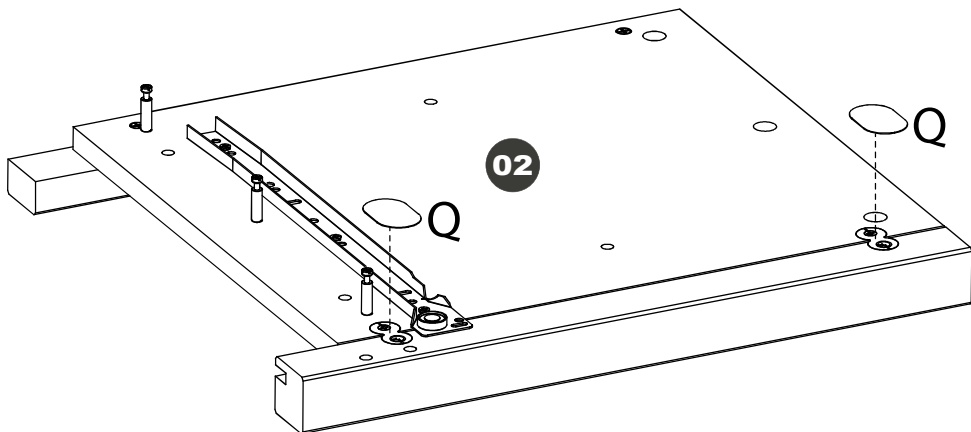


Q		02
---	--	----



06

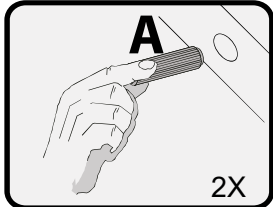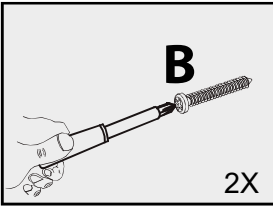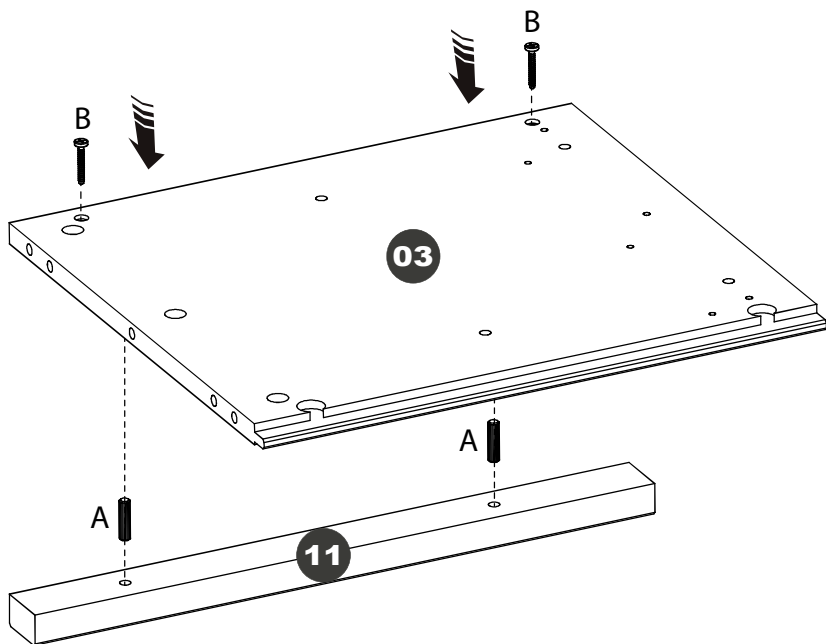


A		02
8x30mm		

B		02
3,5x30mm		


07

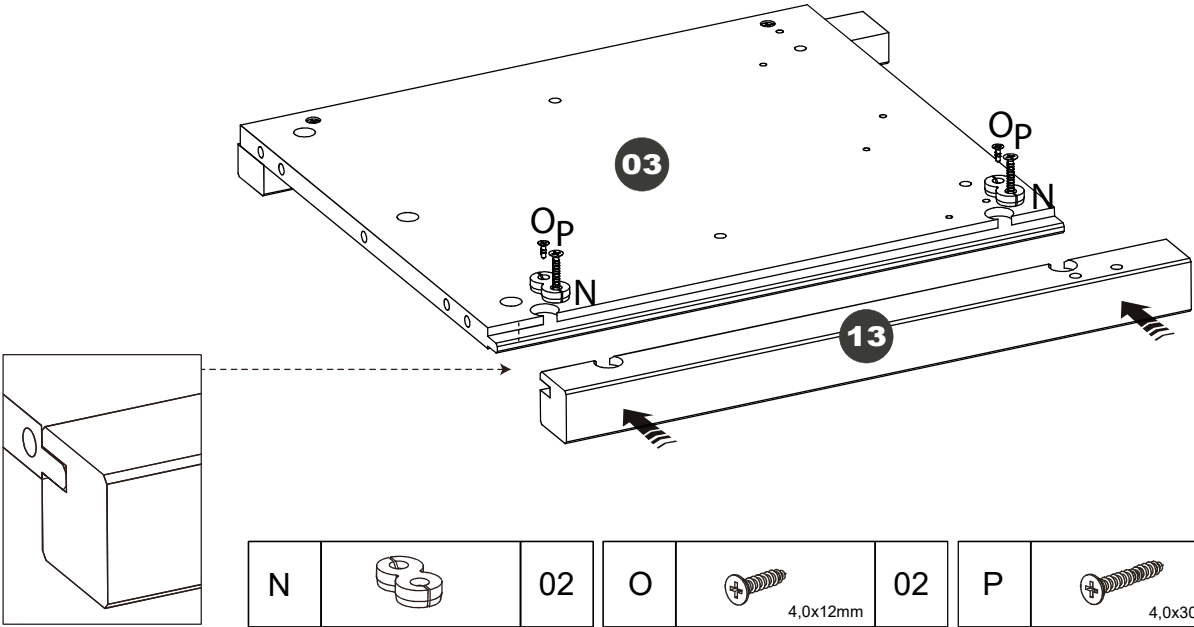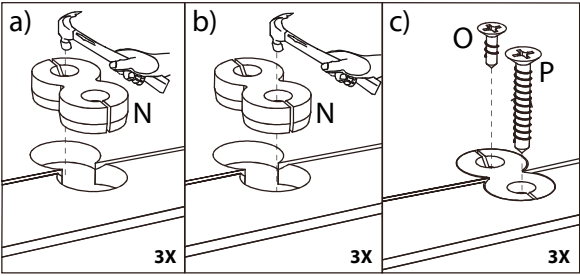


08

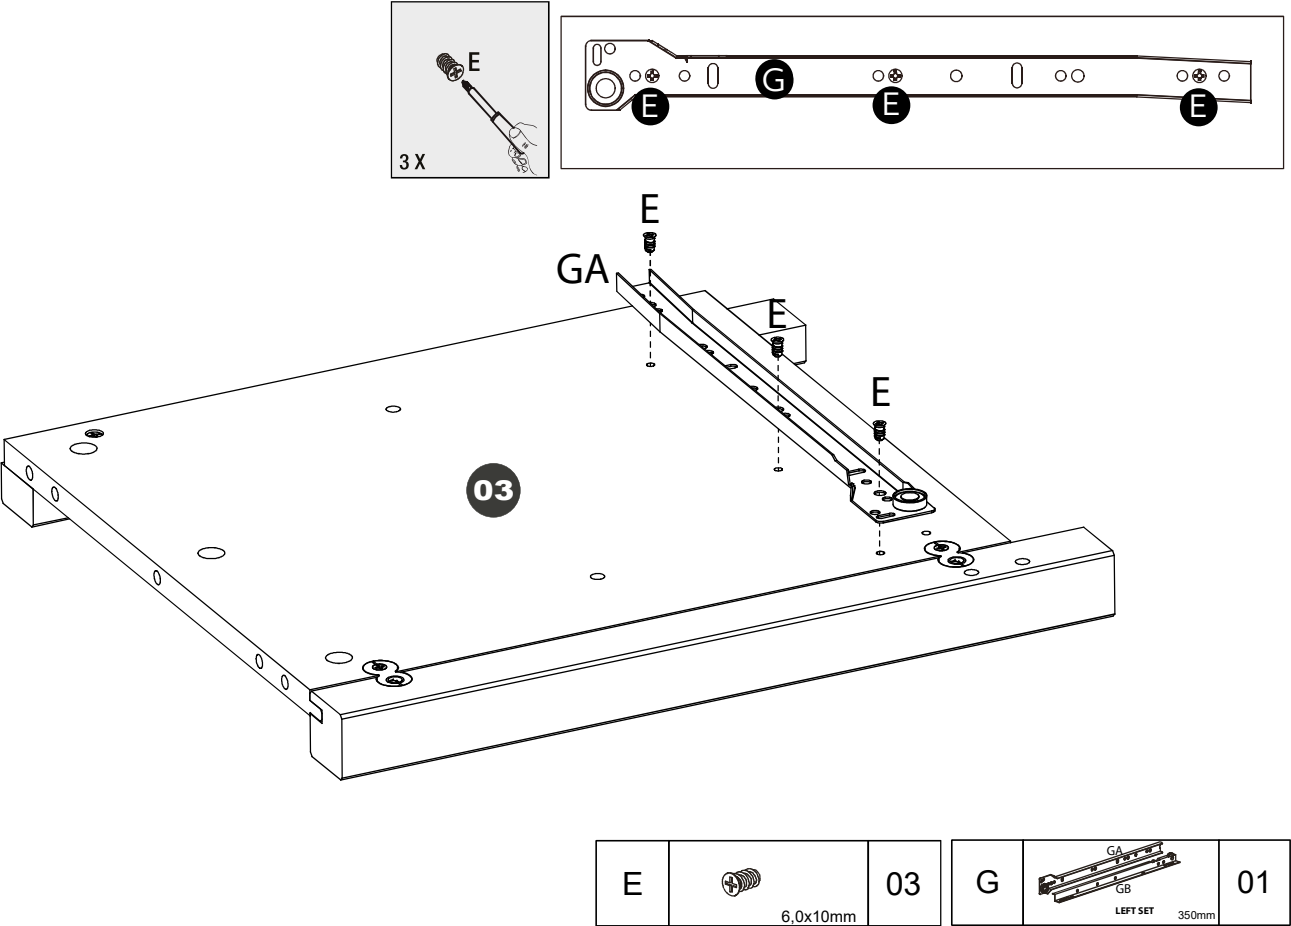



09

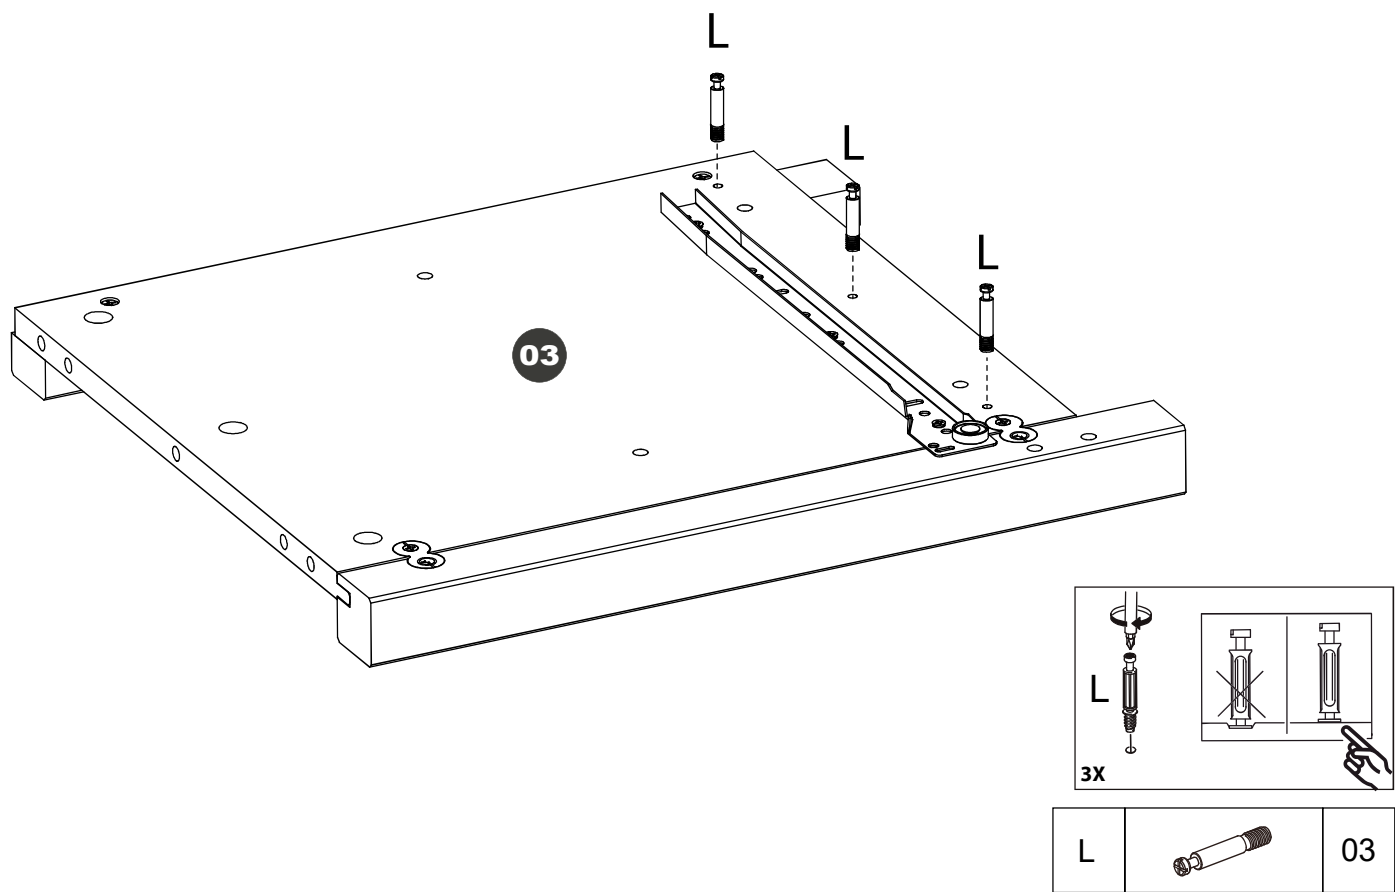

10



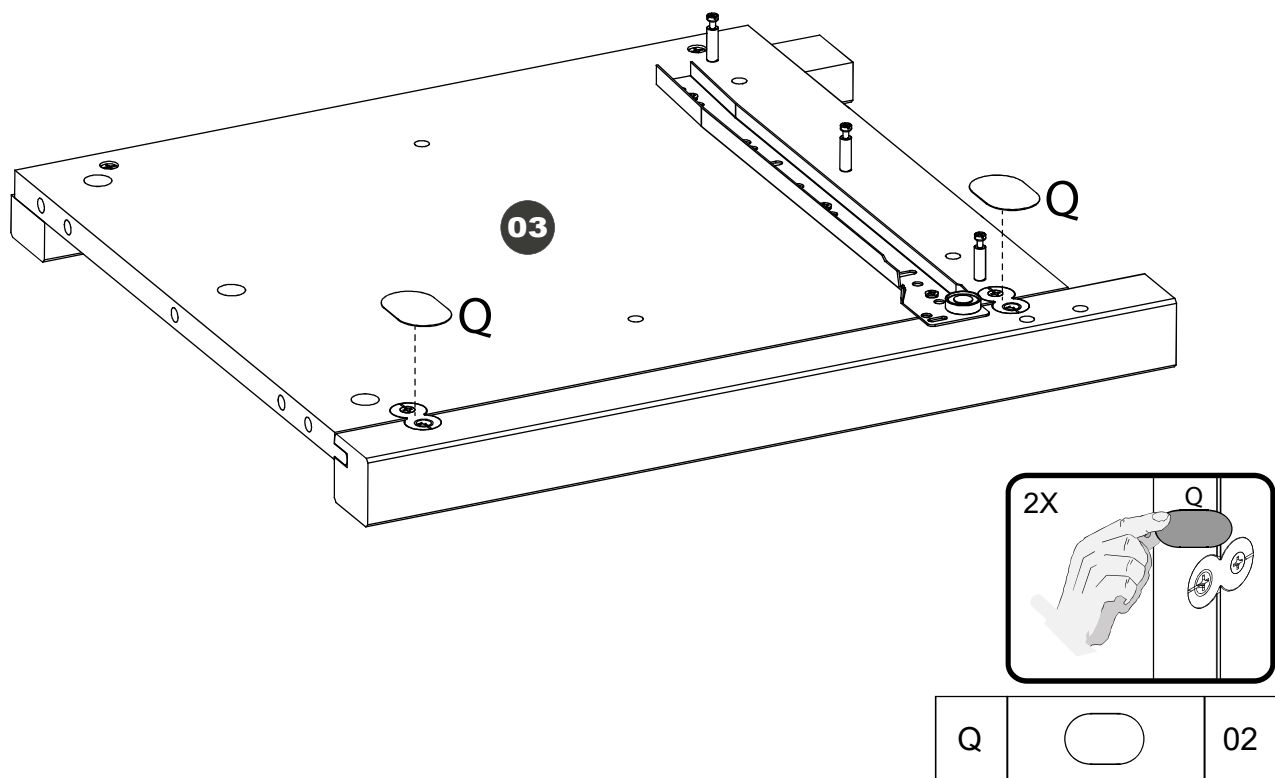


11

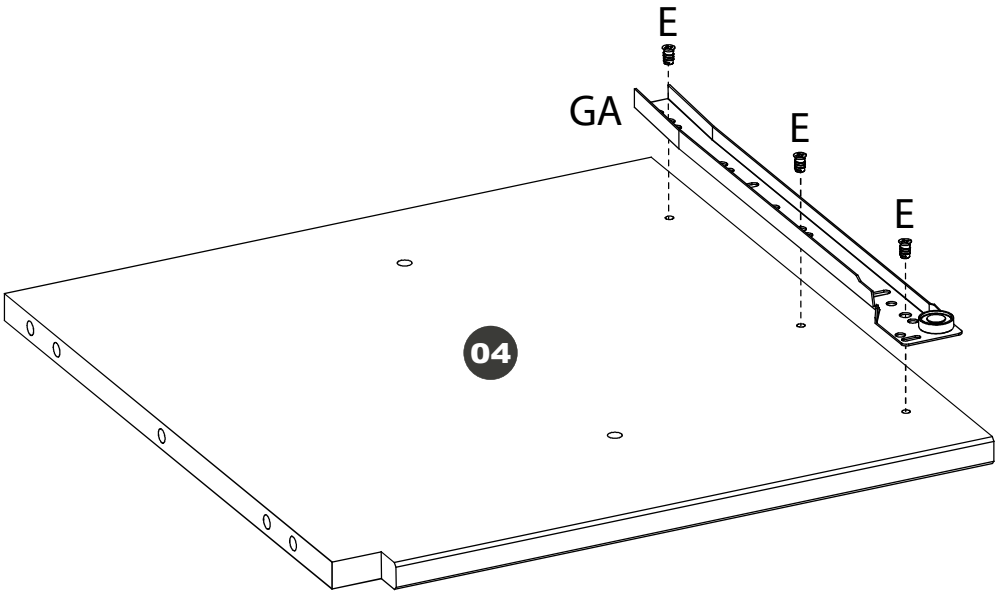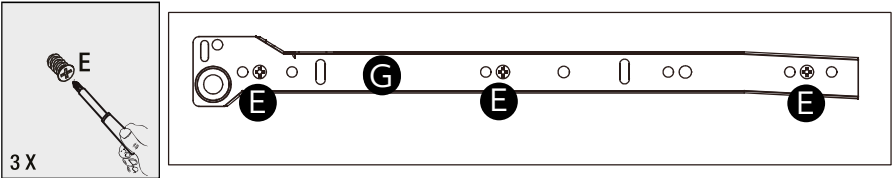


E		03	G		01
6,0x10mm			LEFT SET 350mm		

12

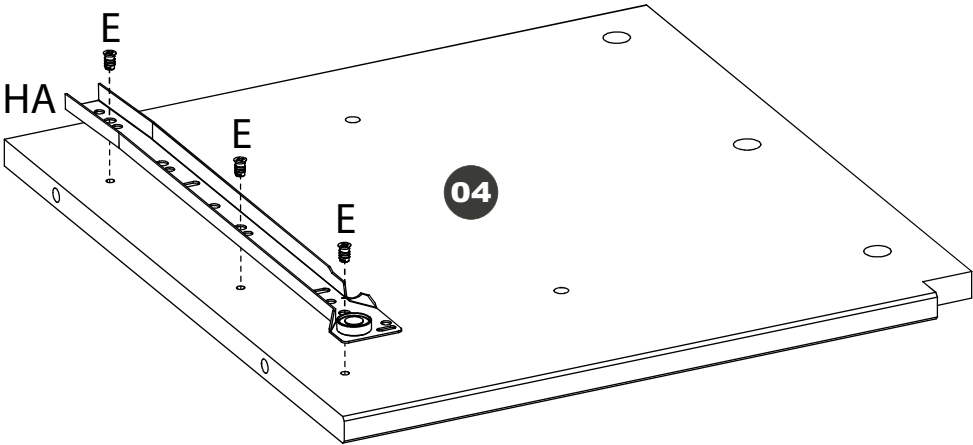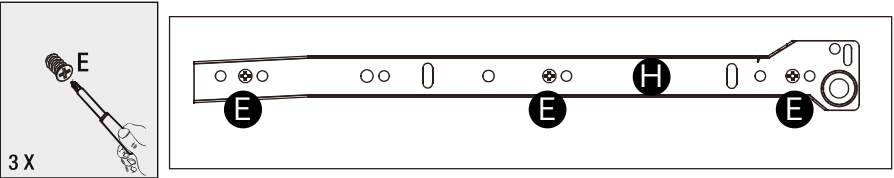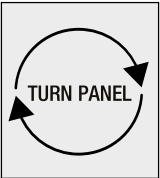


E		03	H		01
6,0x10mm			RIGHT SET		


13

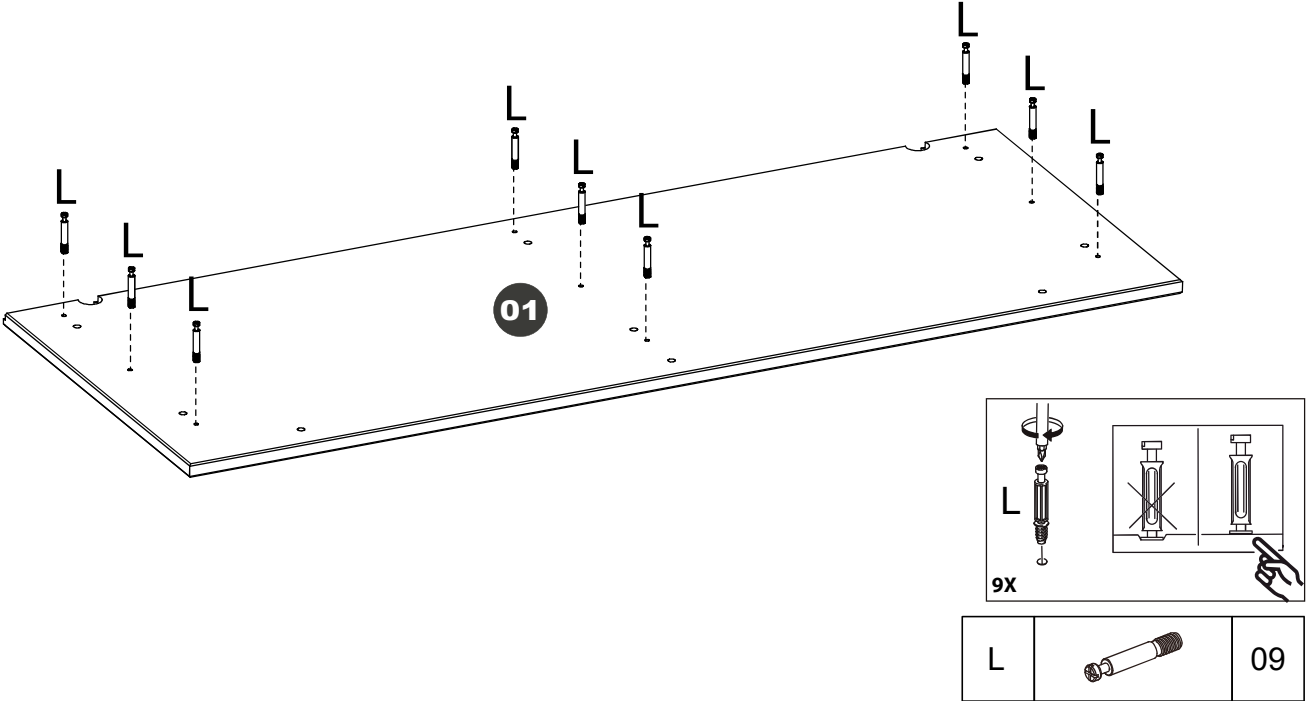


14

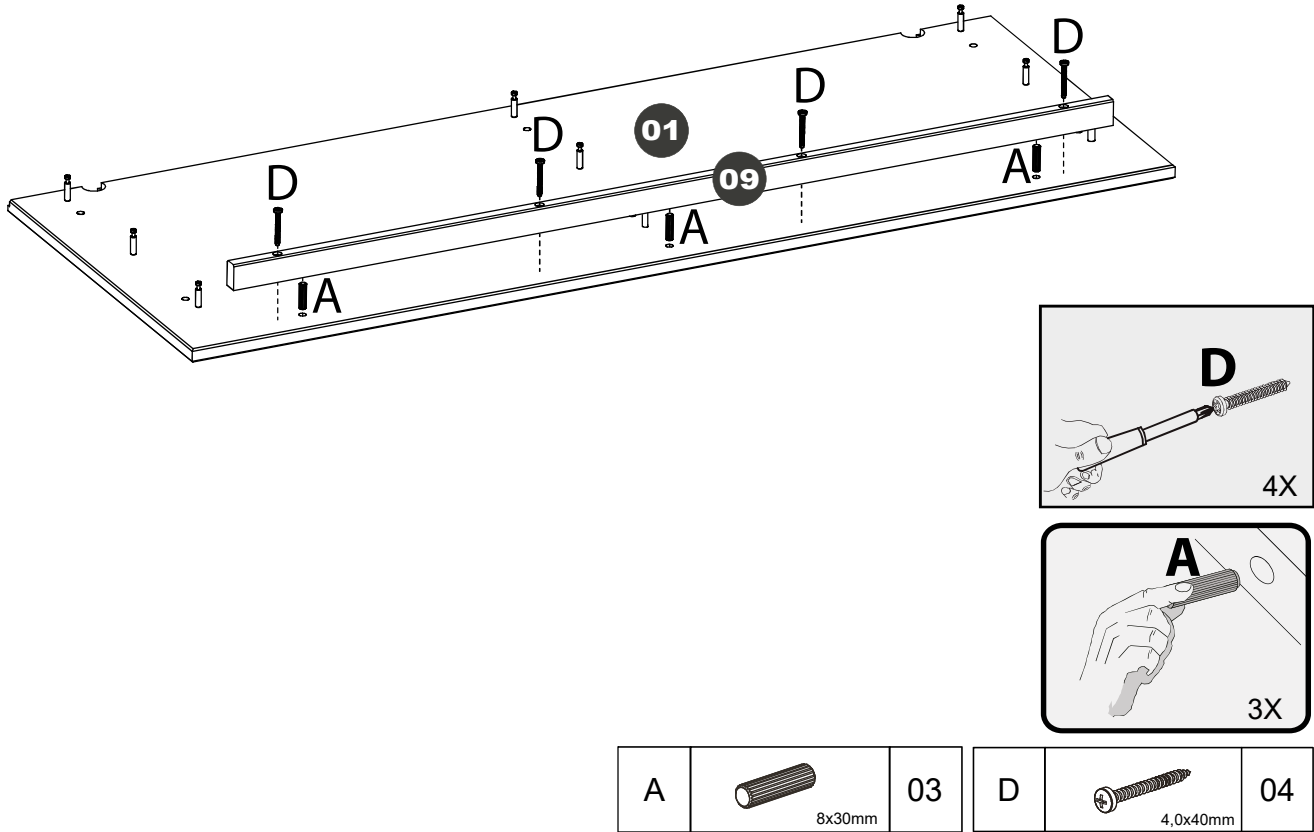




15

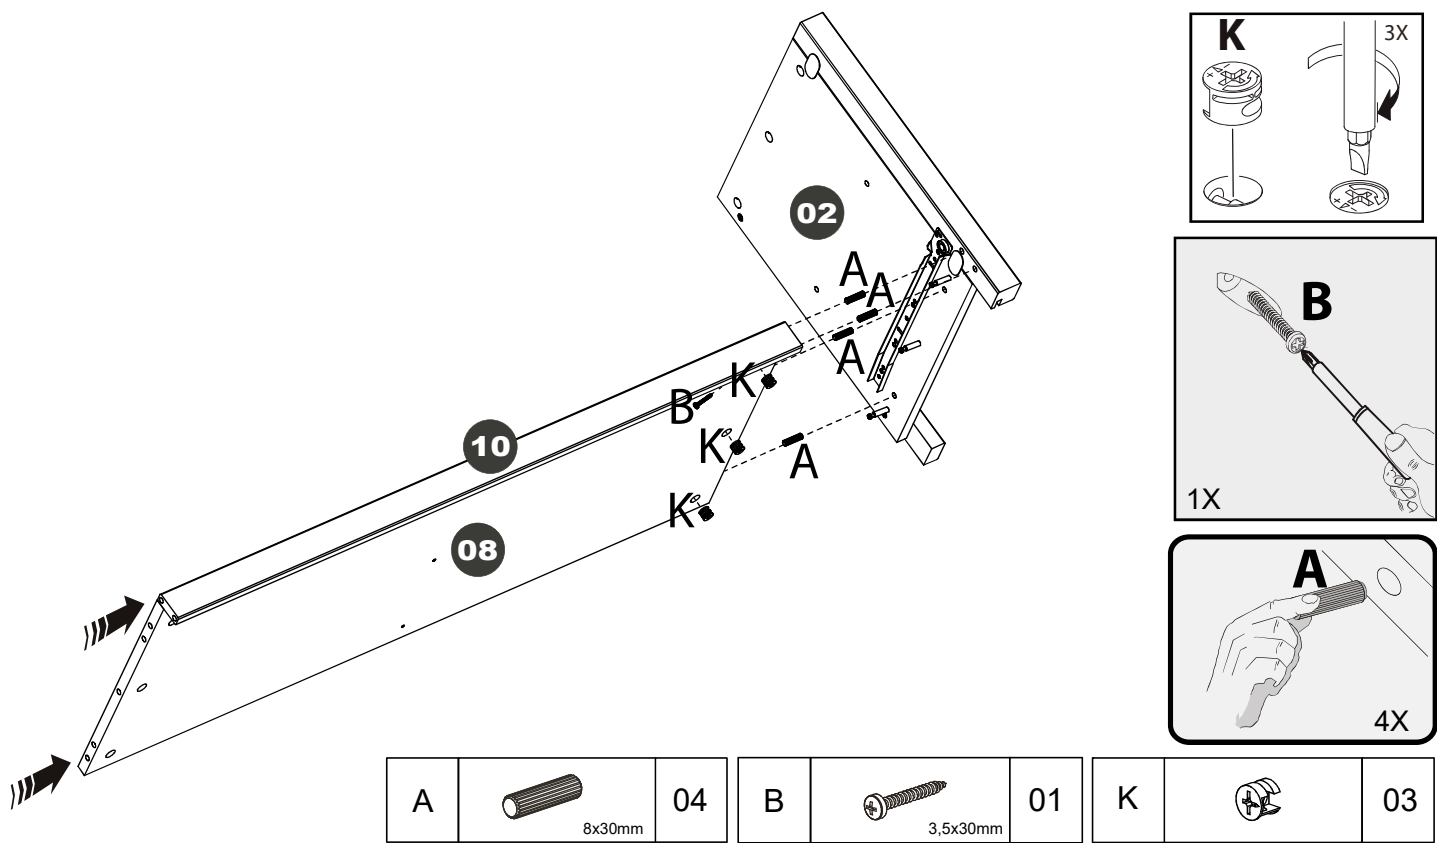

16


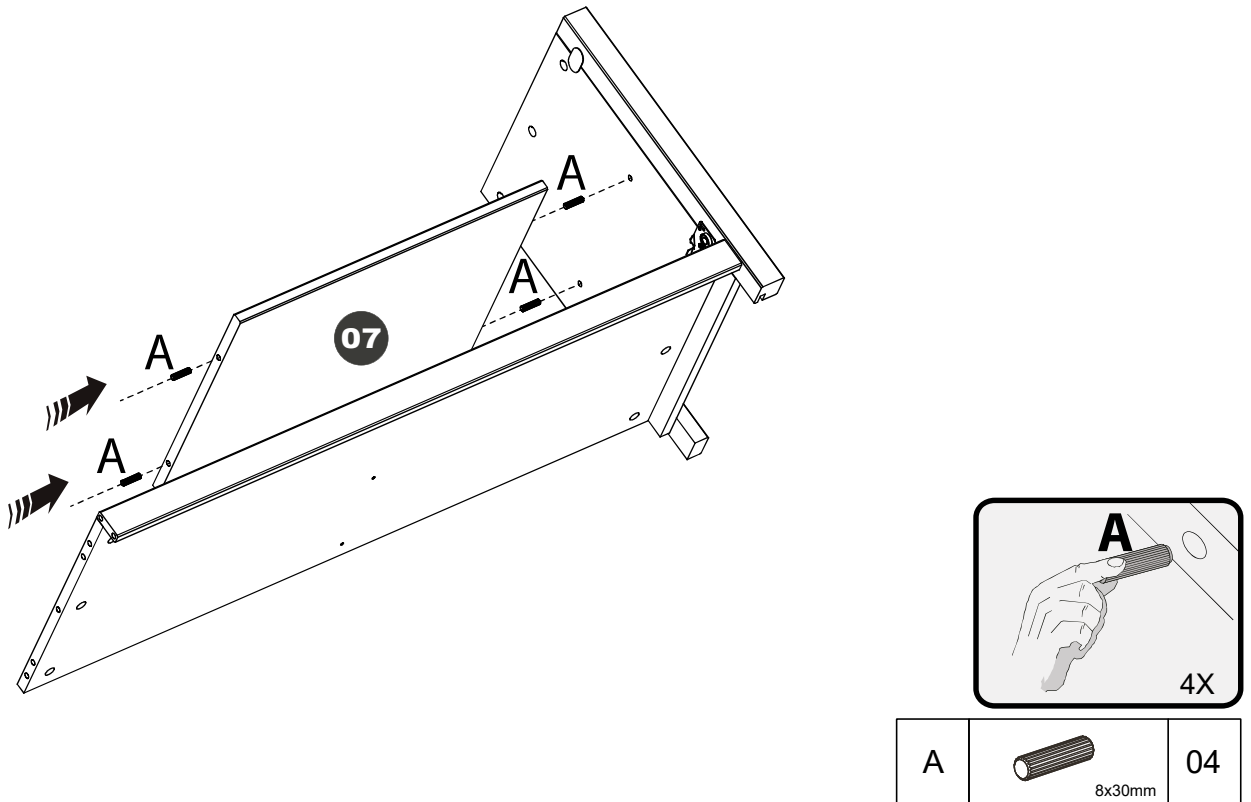



17

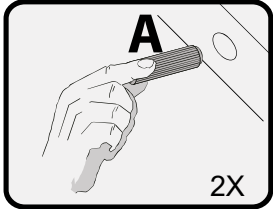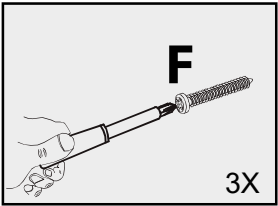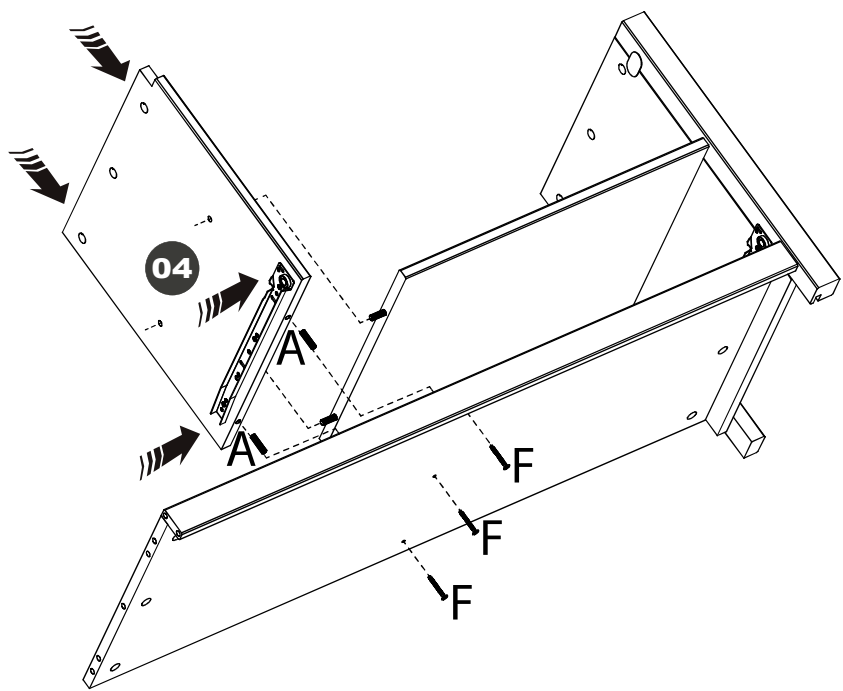



A		02	F		03
8x30mm			4,0x40mm		

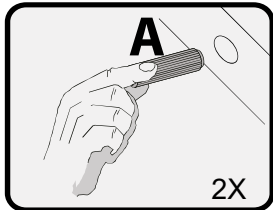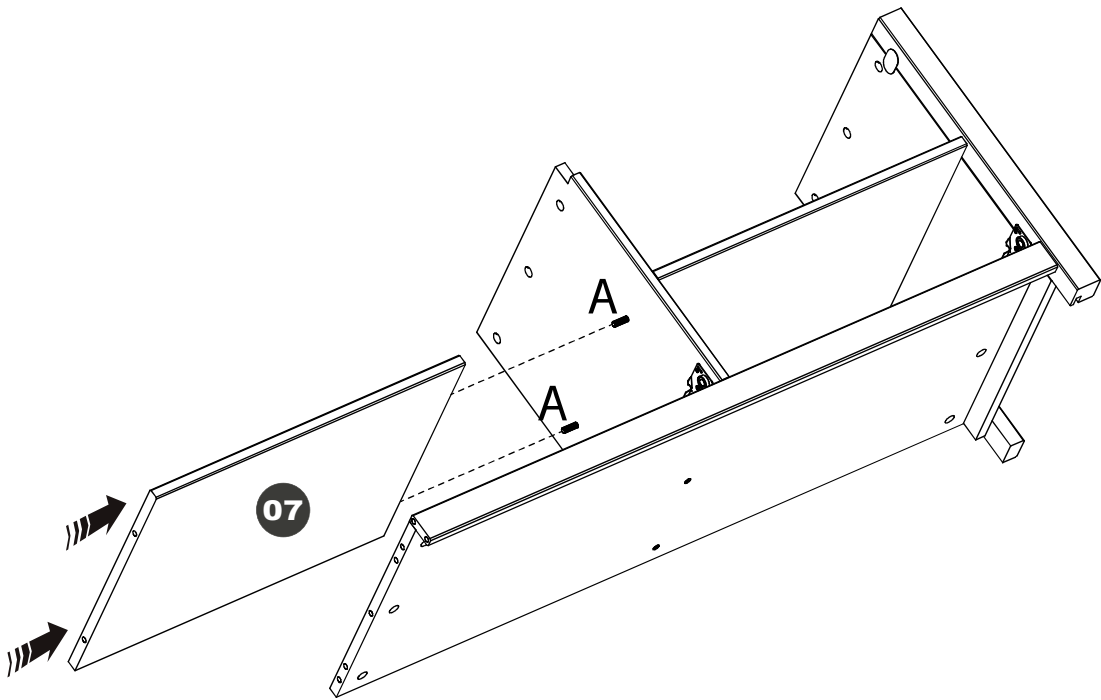


18





A		02
8x30mm		

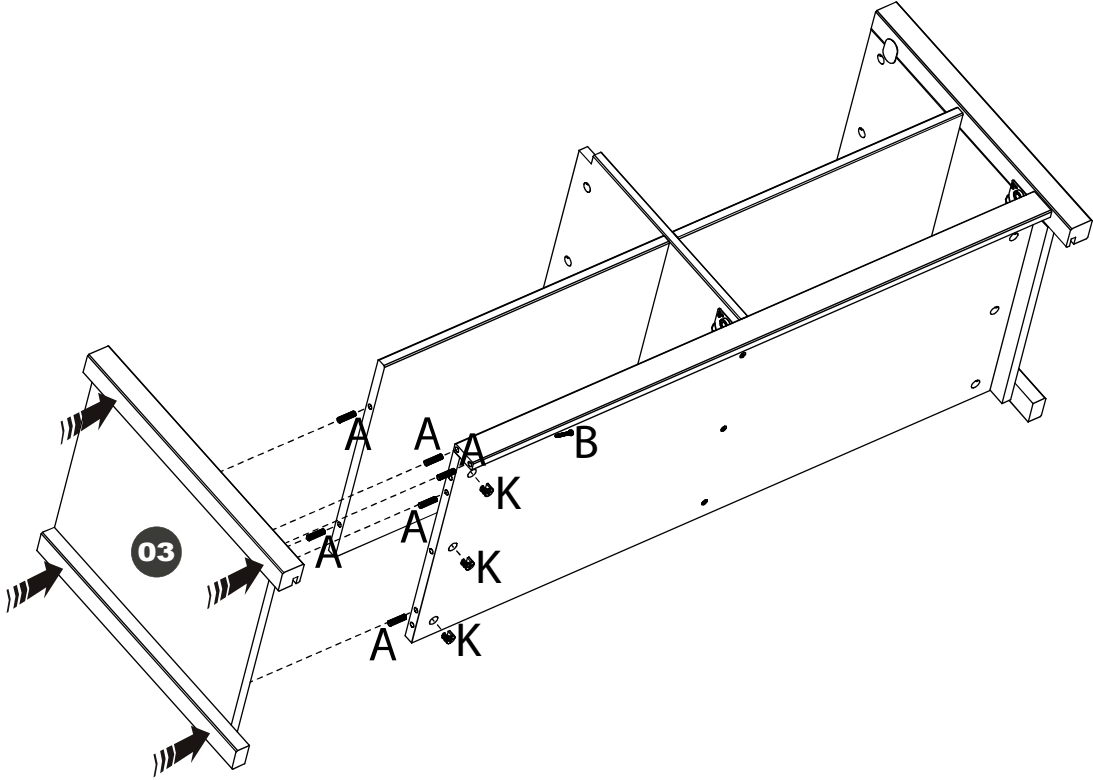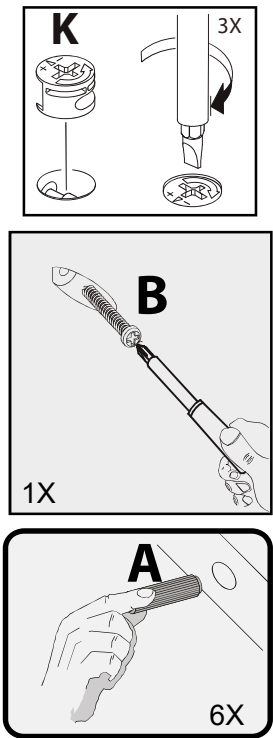

19






A	 8x30mm	06	B	 3,5x30mm	01	K		03
---	---	----	---	--	----	---	---	----

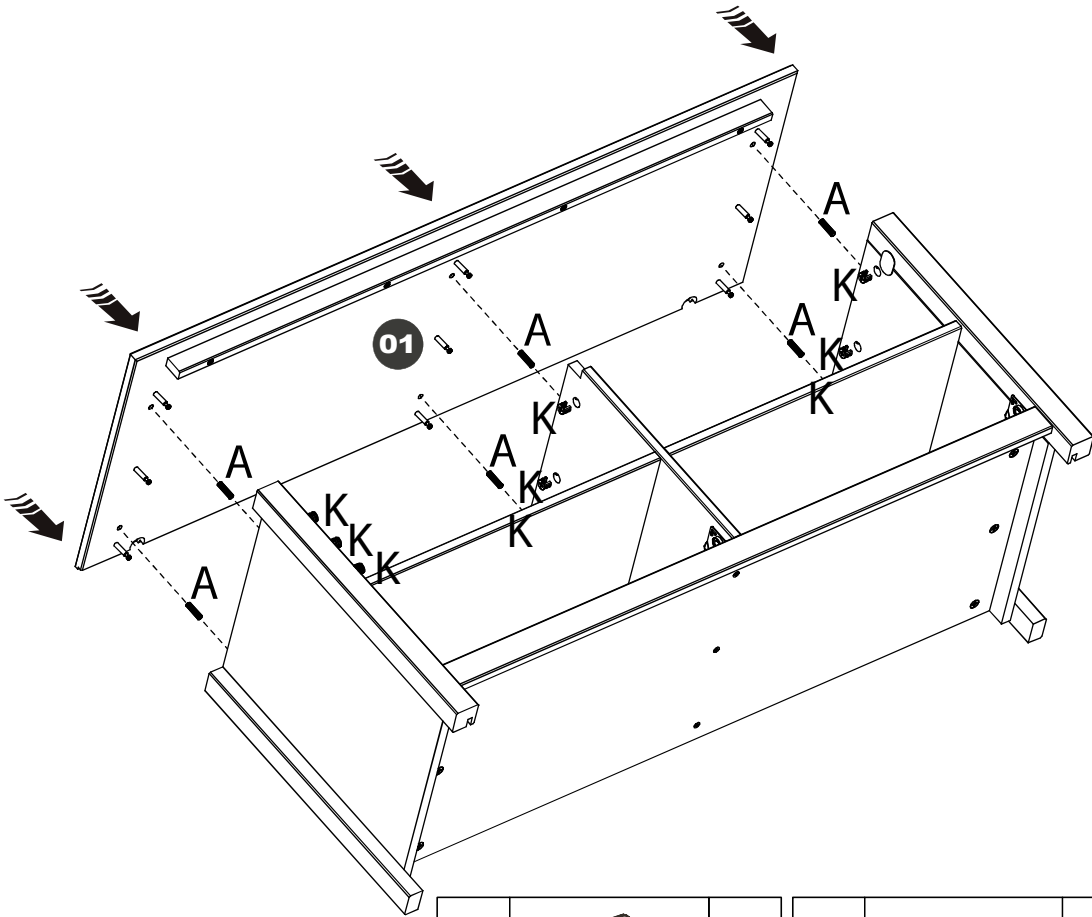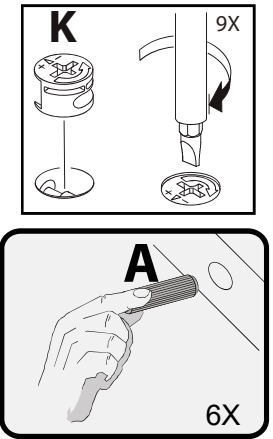

20



A	 8x30mm	06	K		09
---	--	----	---	---	----

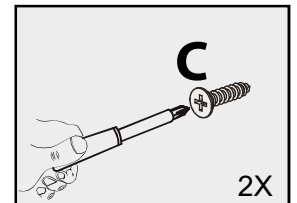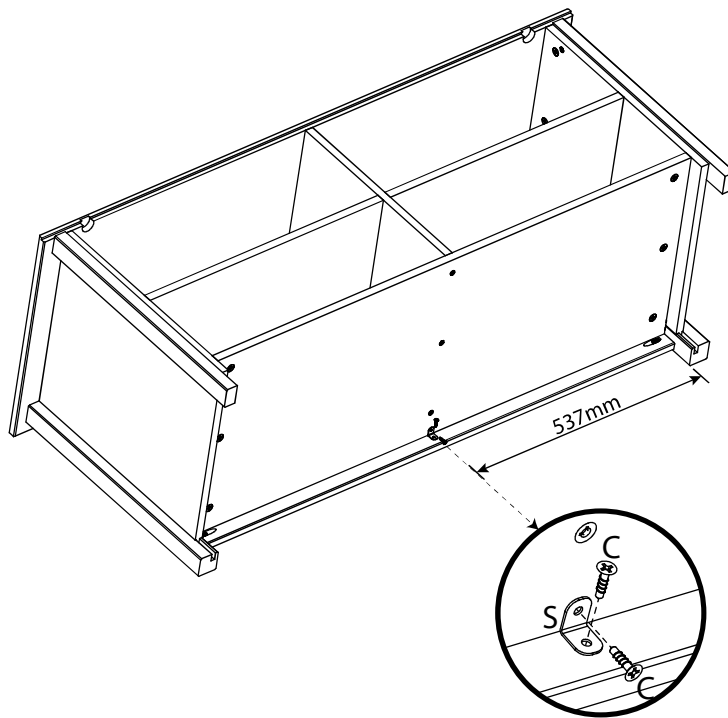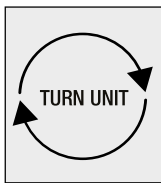21








C	 3,0x16mm	02	S	 01
---	---	----	---	--


22



Use all back panels nails.
Evenly spaced, they help
make the unit strong.

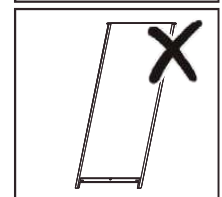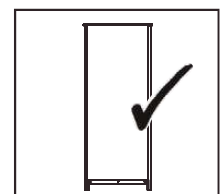
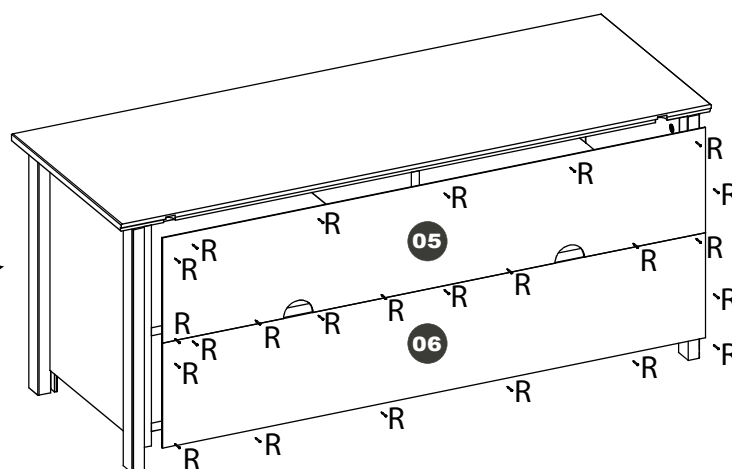
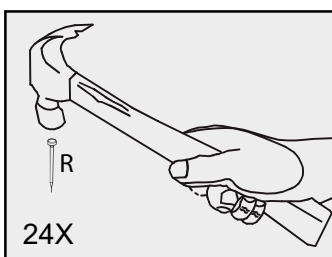
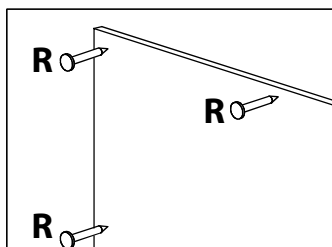






Important:
The unit **MUST** be
'square' when back panel
is attached.


R		24
---	---	----

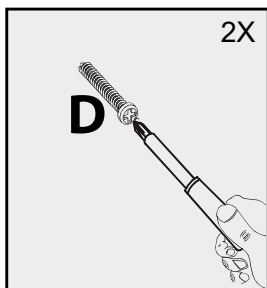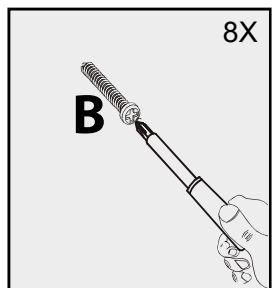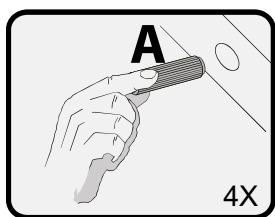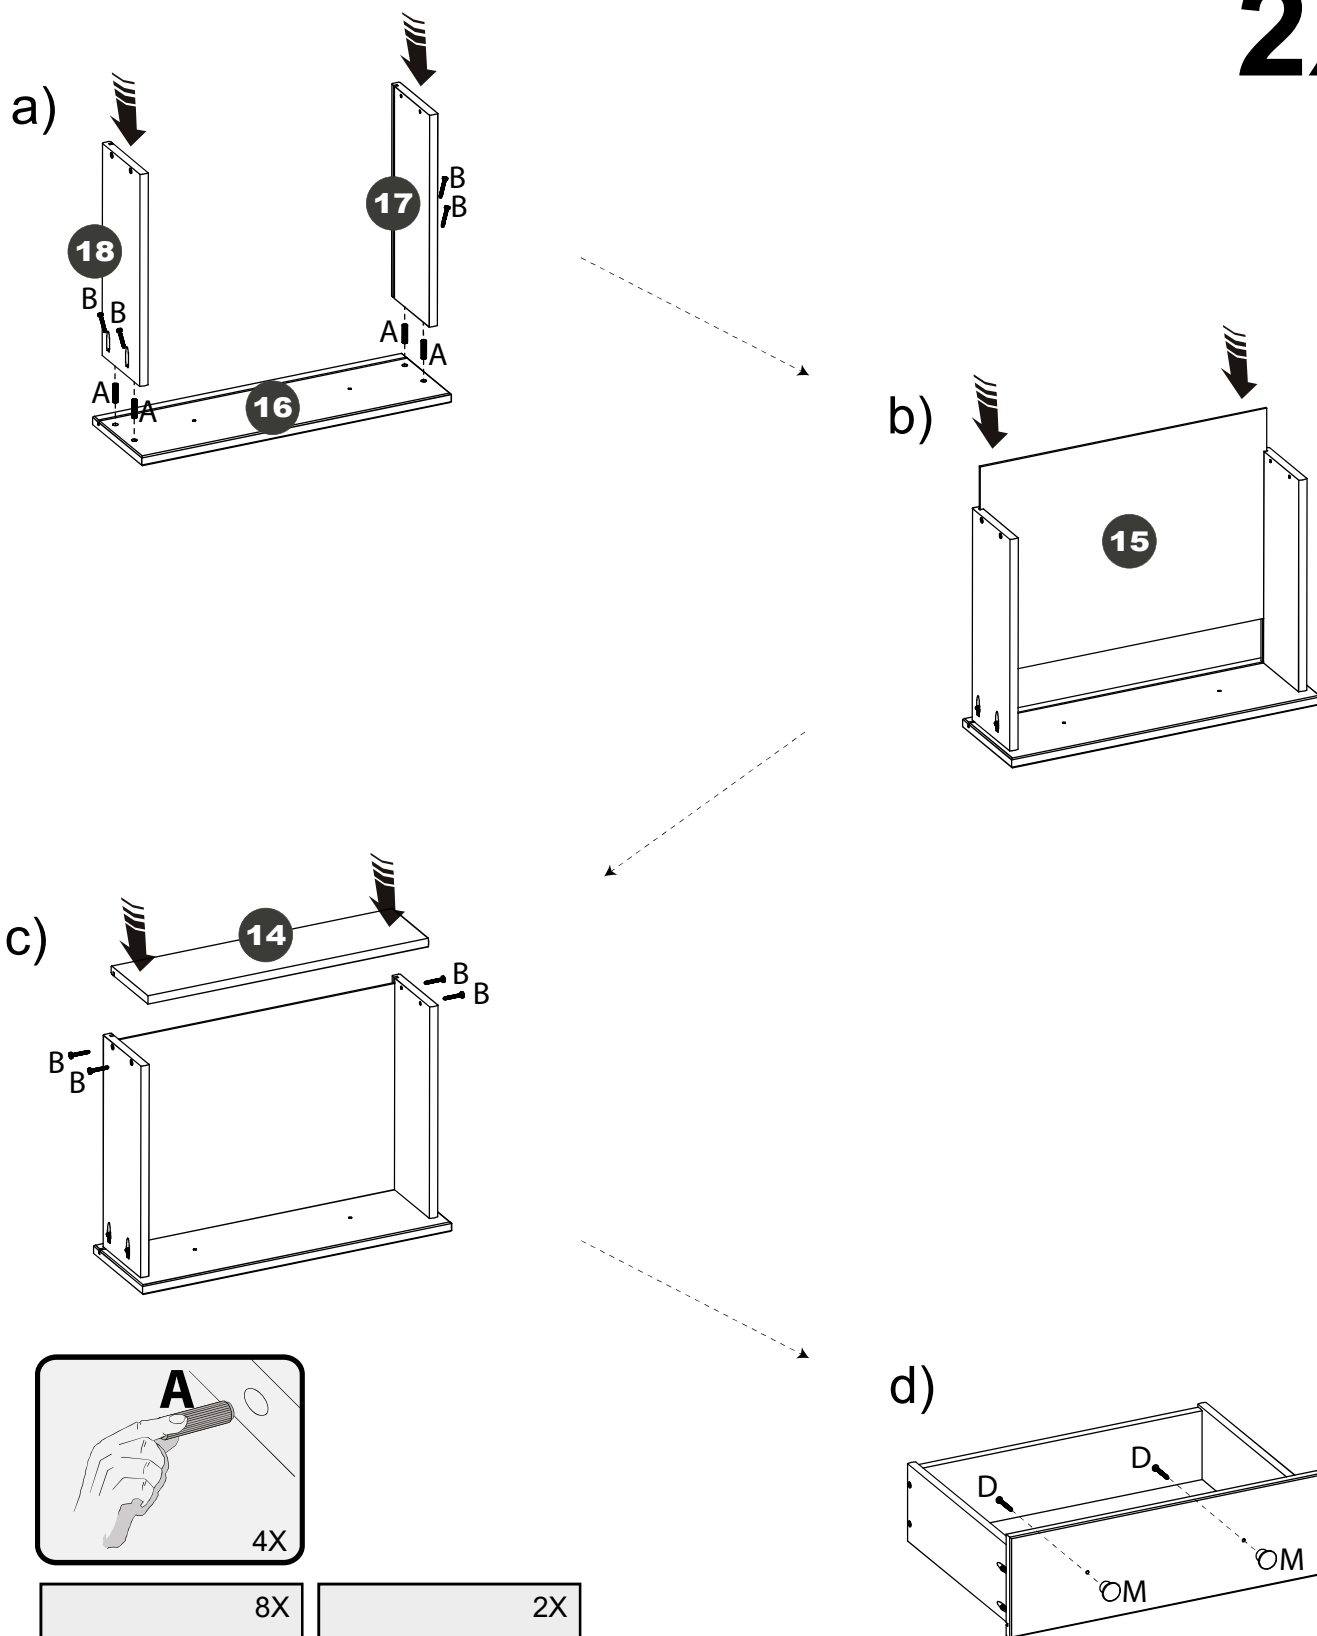


23



2X



A		08	B		16	D		04	M		04
	8x30mm			3,5x30mm			4,0x40mm				

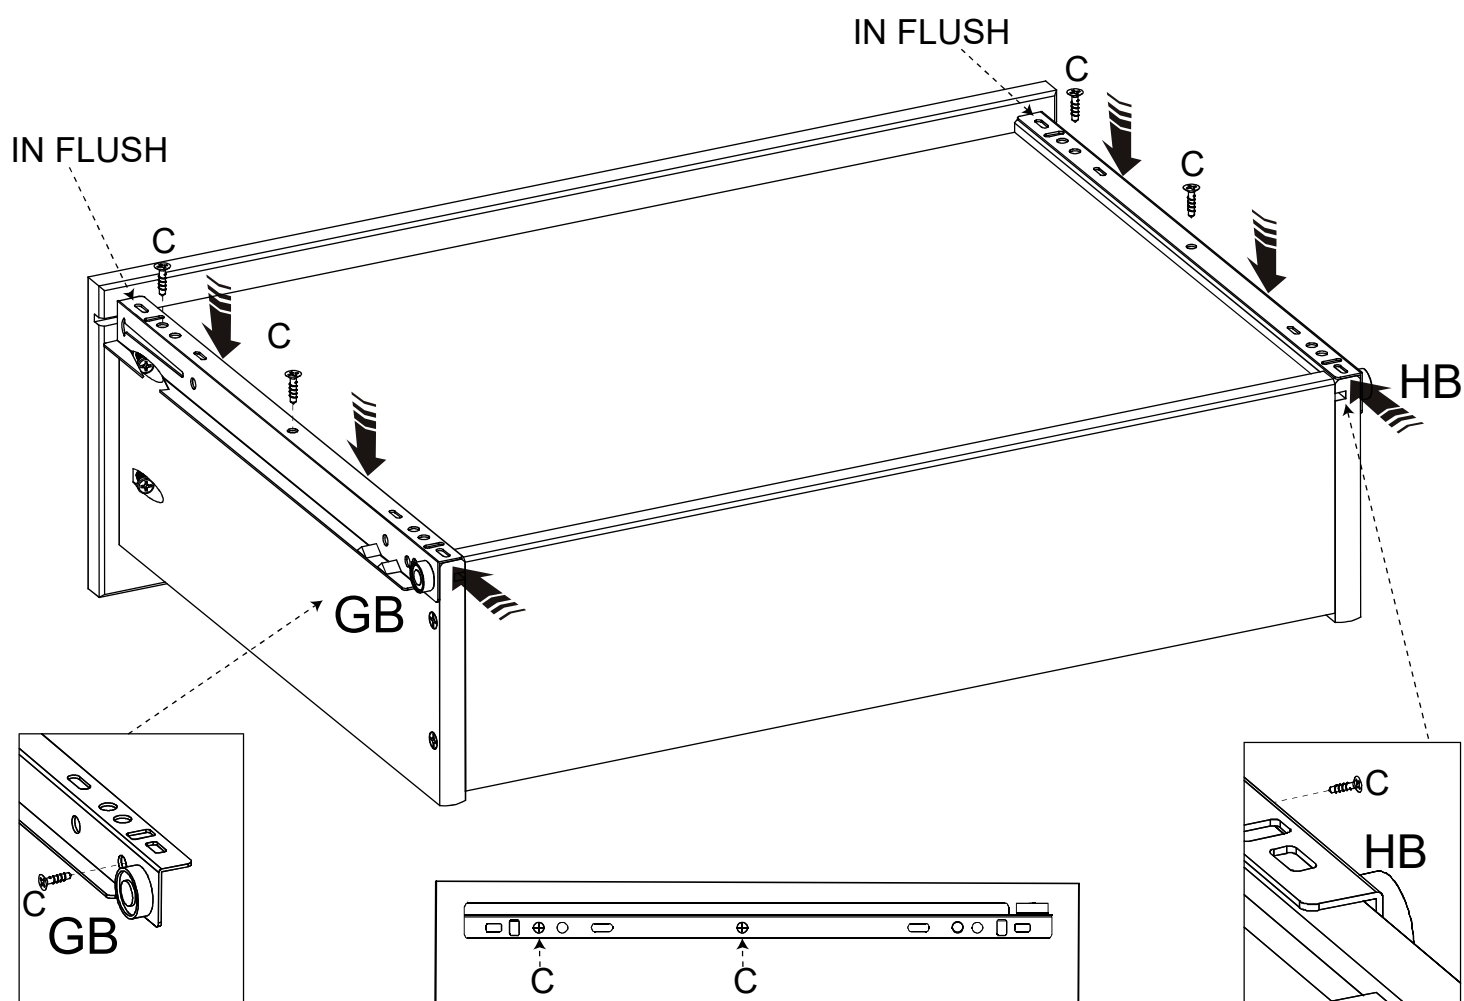


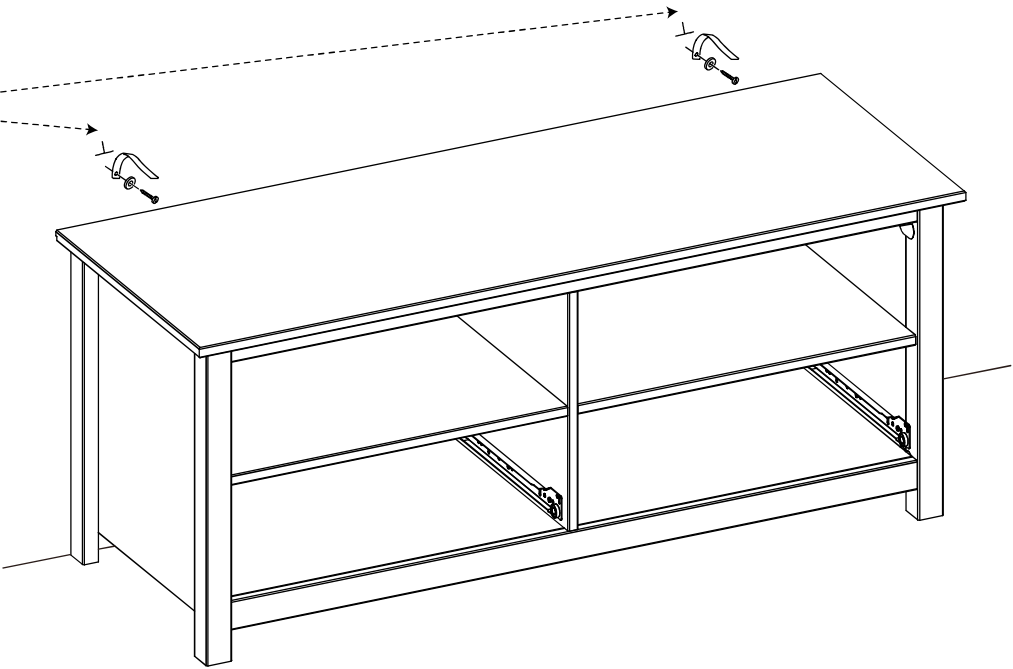
C		12	G		02	H		02
	3,0x16mm			LEFT SET			RIGHT SET	

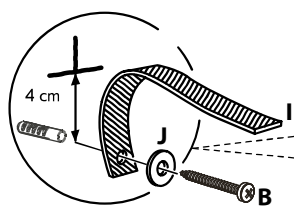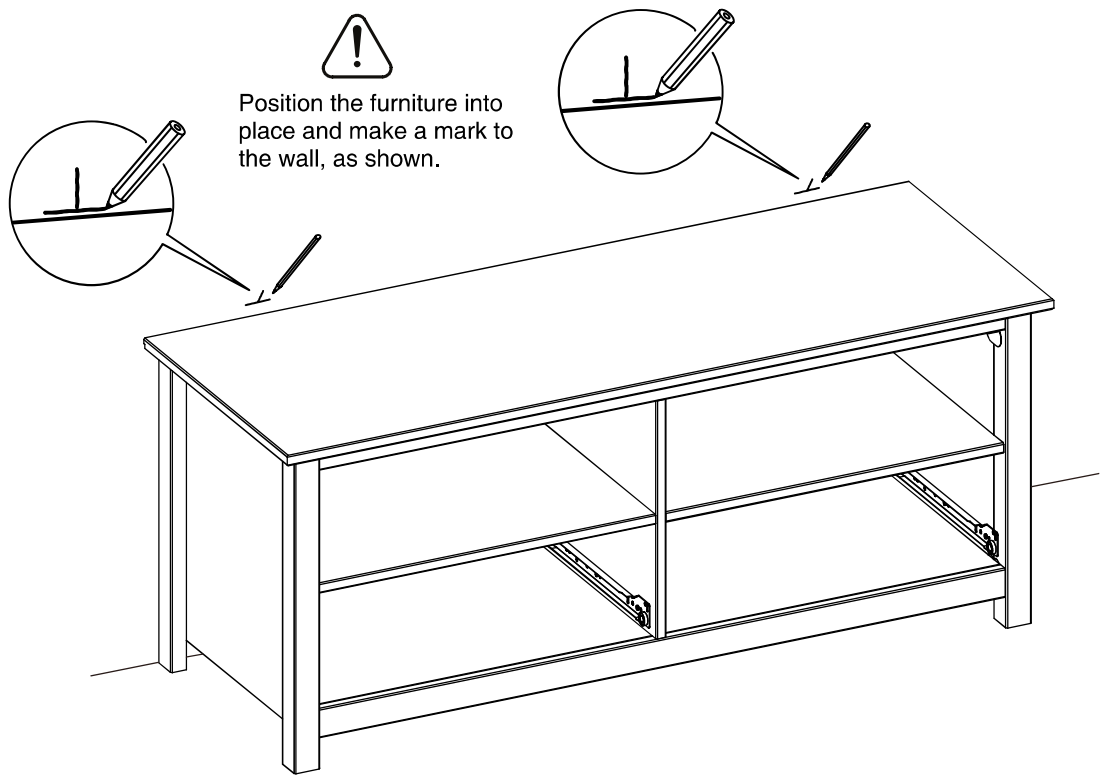




With help, carefully move the furniture away to access the mark in the wall.


Drill hole on wall 4cm bellow the mark, as shown in the diagram.

 Before drilling, check wall for hidden pipes and cables.






B		02	I		02	J		02
	3,5x30mm							

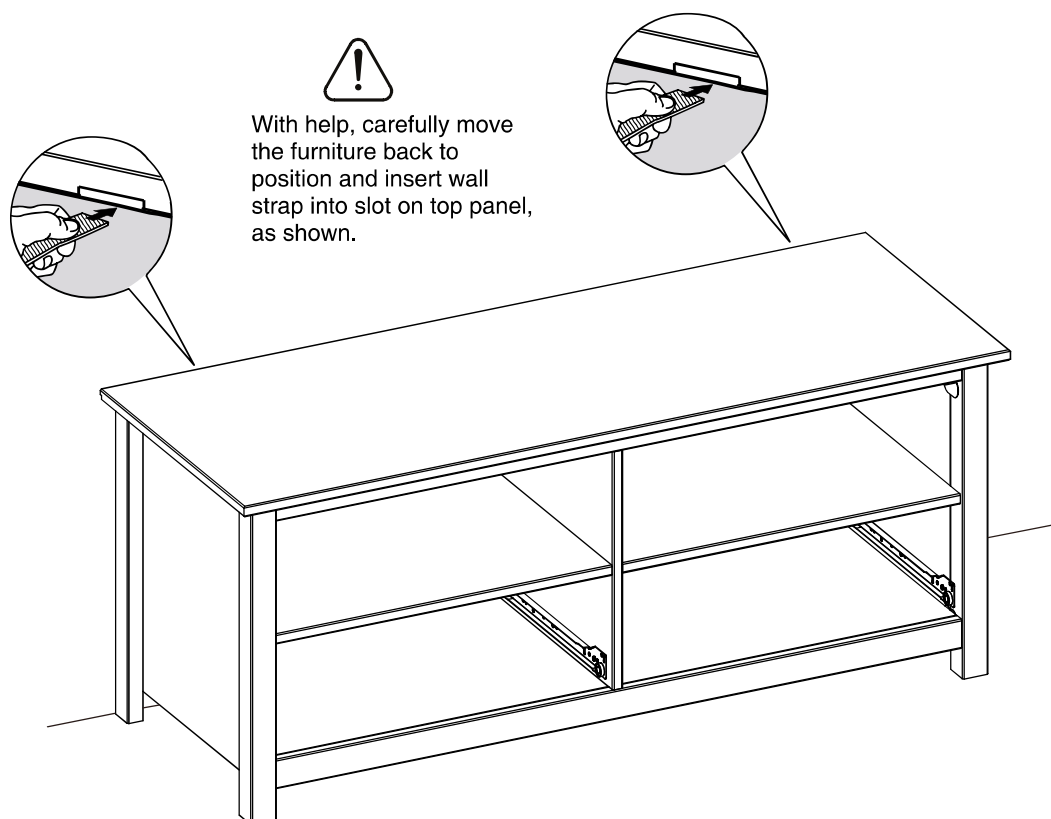27

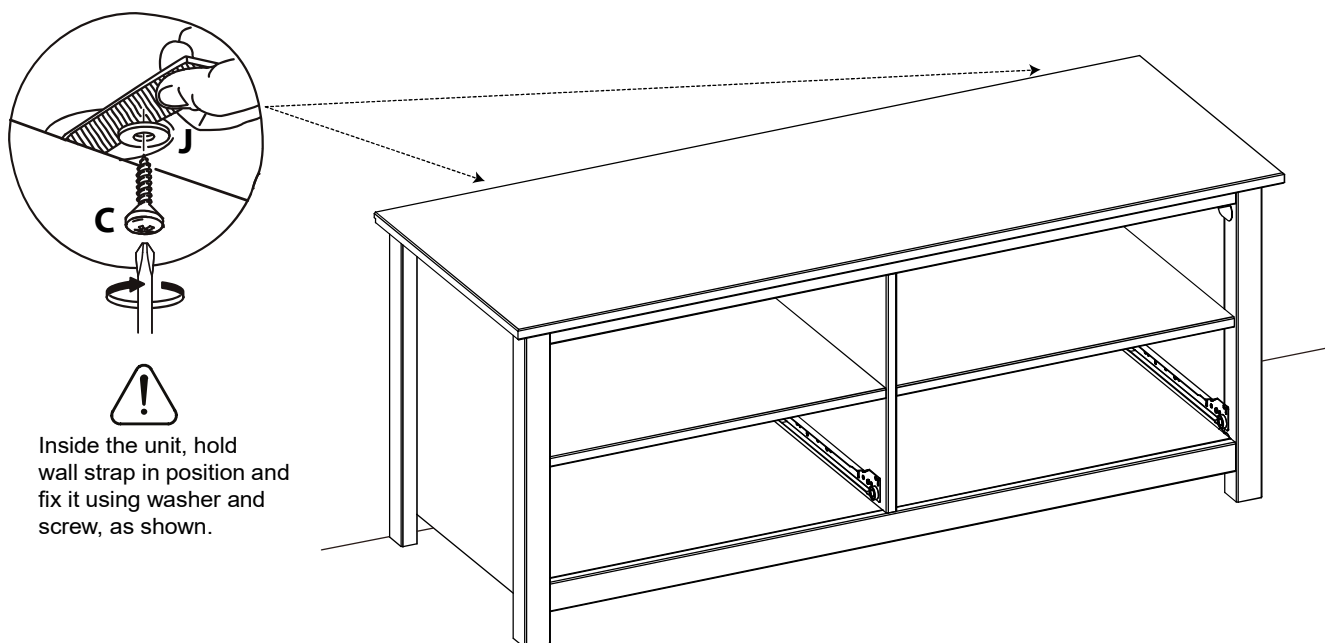

28



C		02	J		02
3,0x16mm					

