


Installation & Assembly

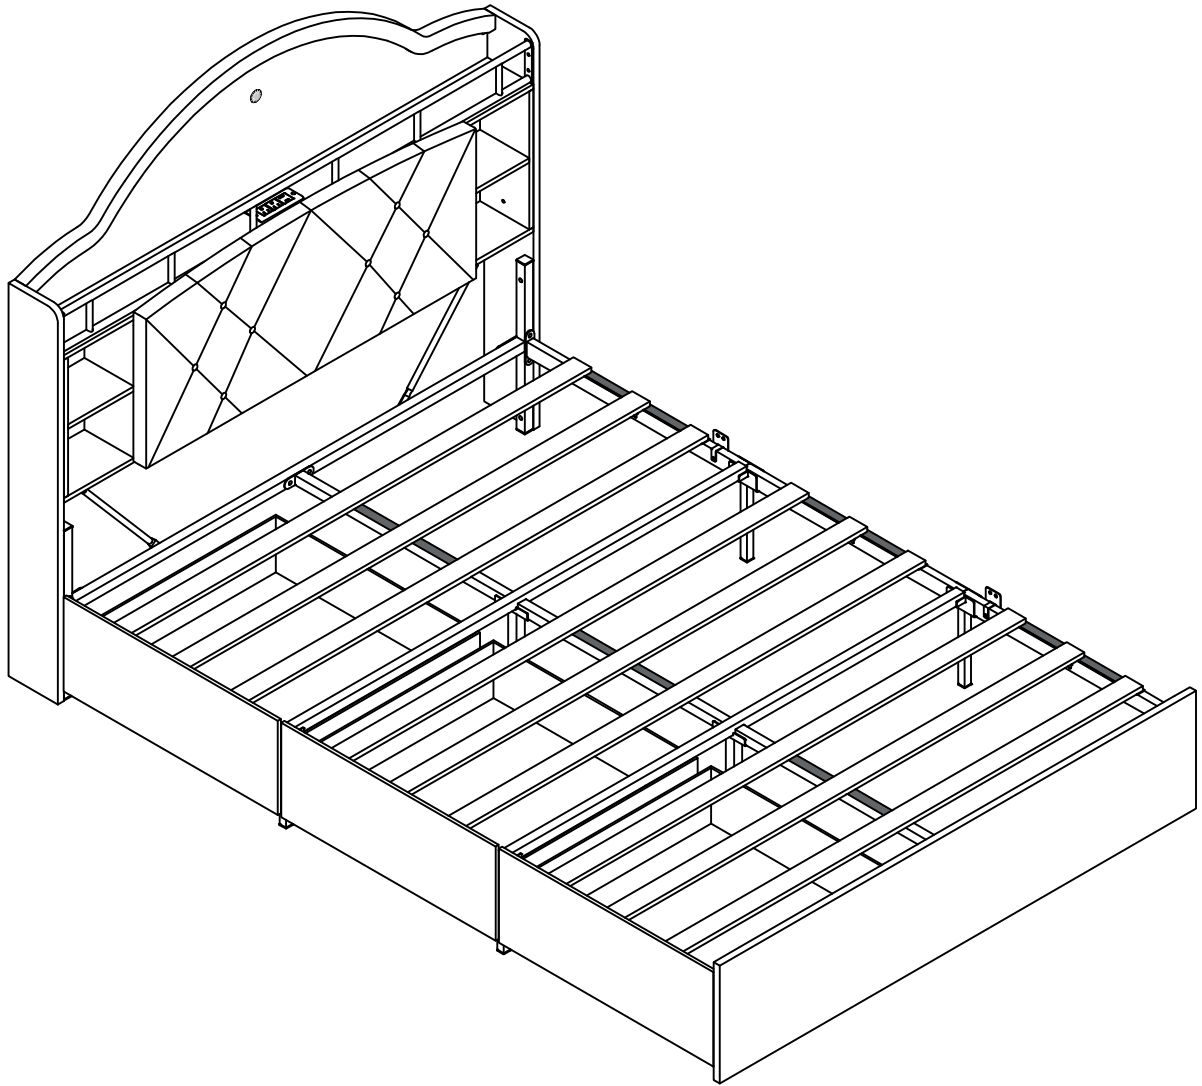


Note:
























Should be assembled on flat ground to keep balance.












It needs at least two people to install.



Before starting the assembly, you must read the whole manual and follow the instructions.

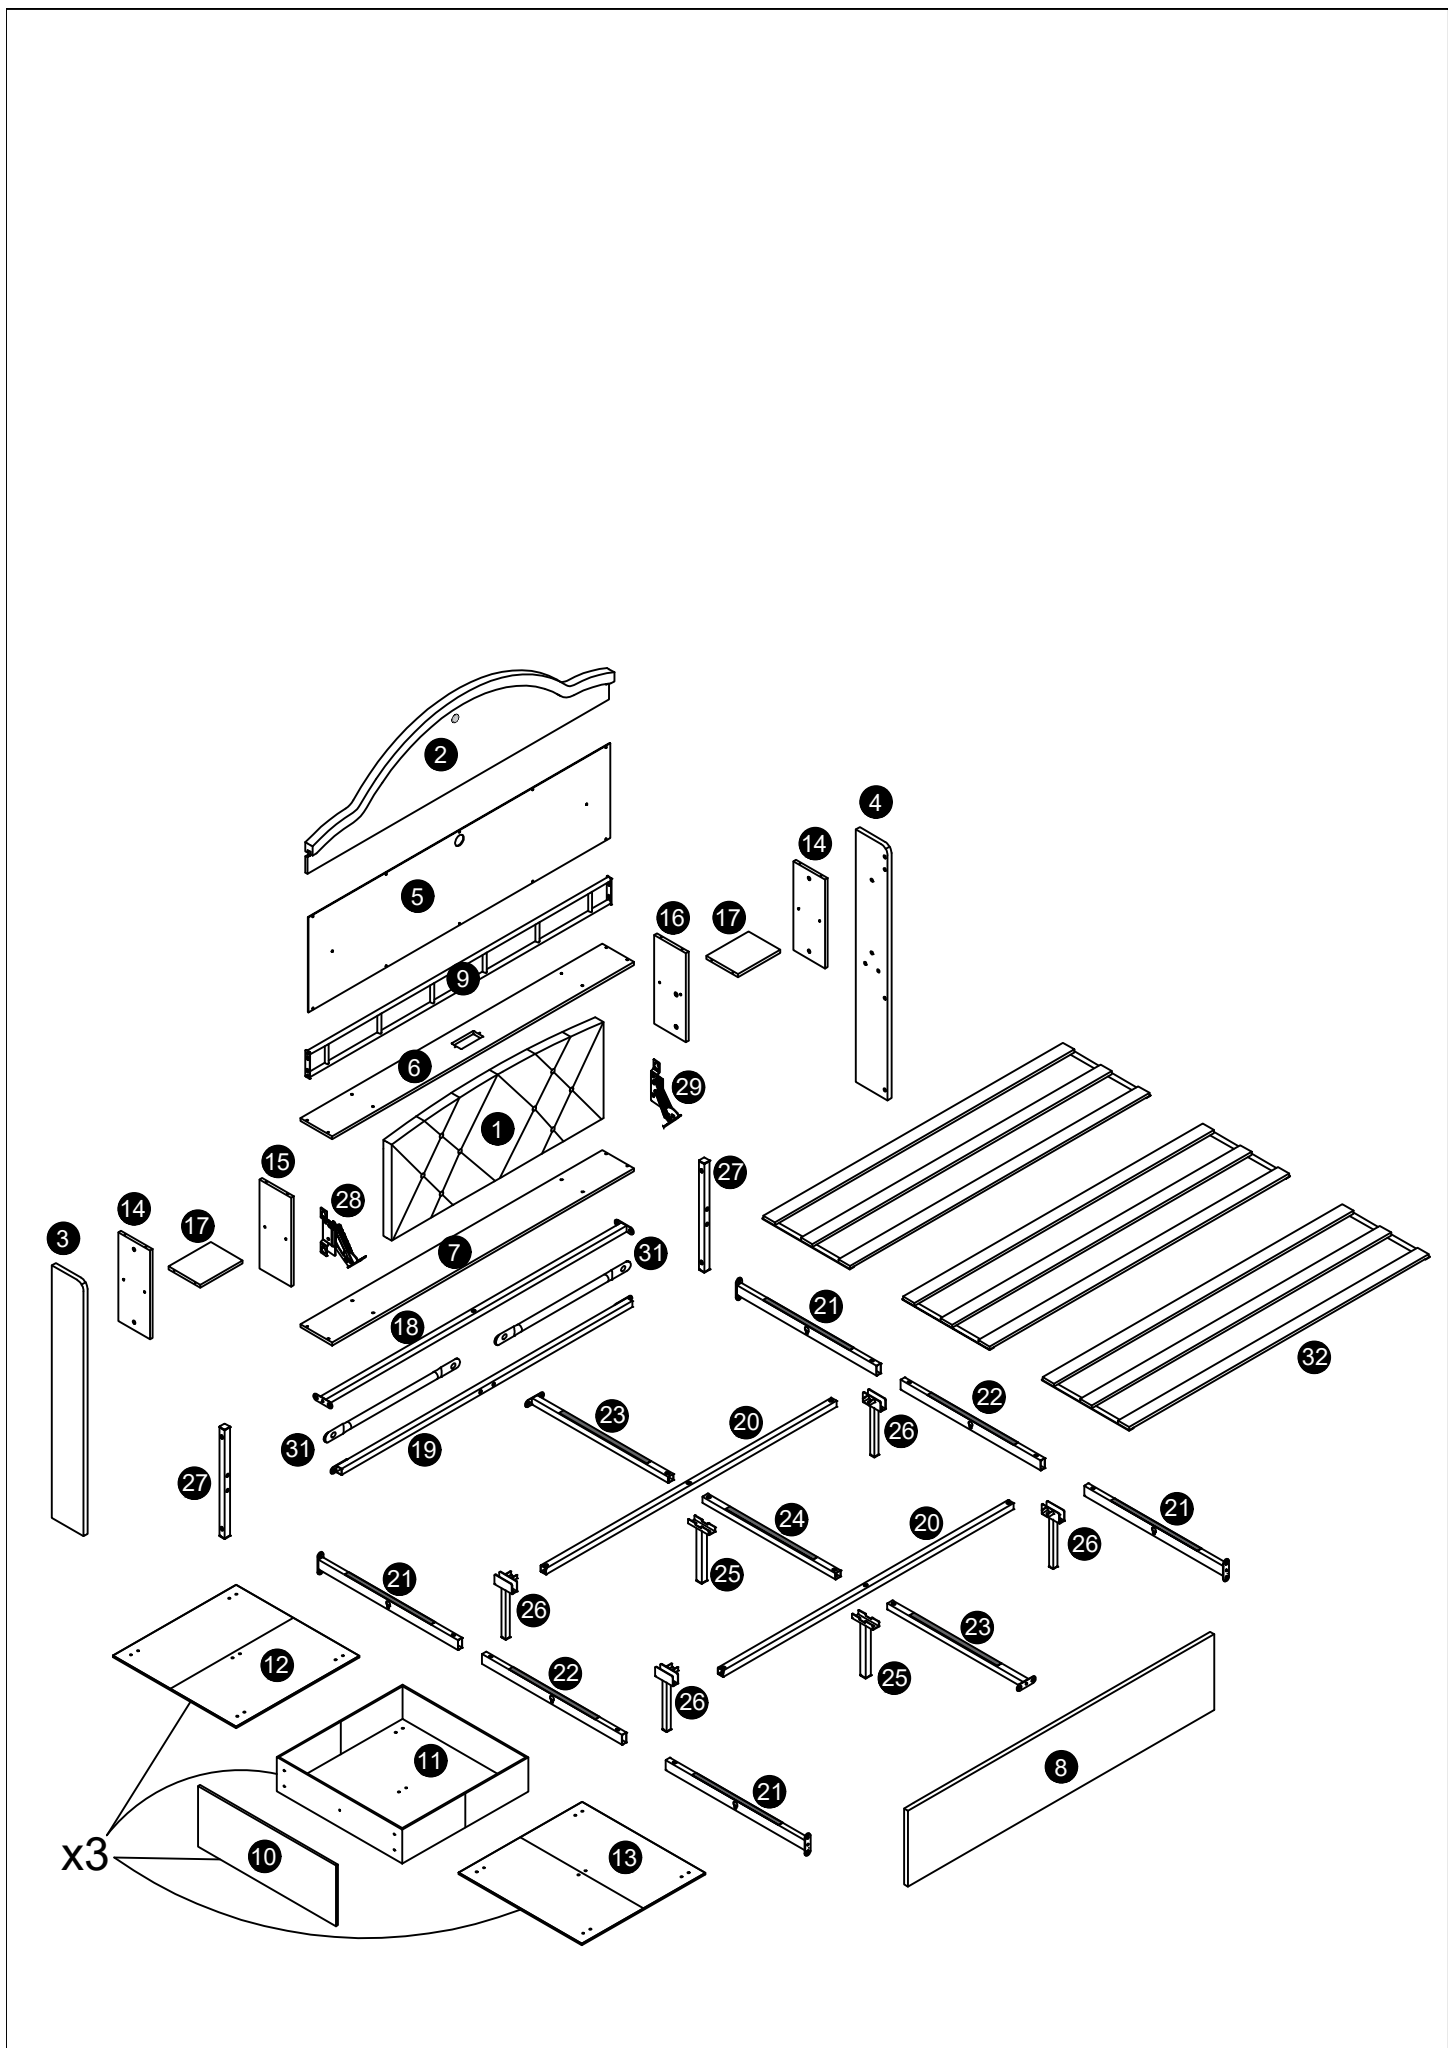







Part list

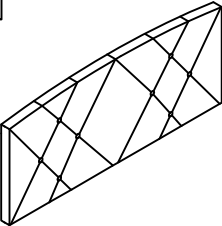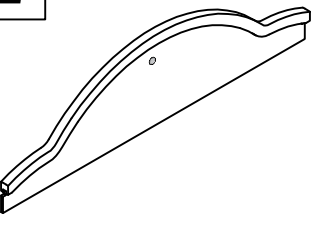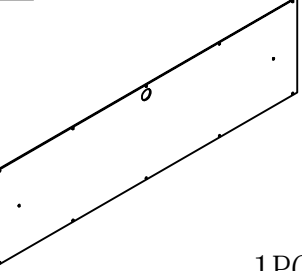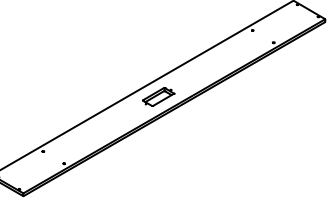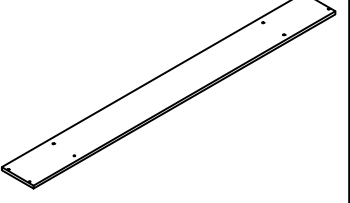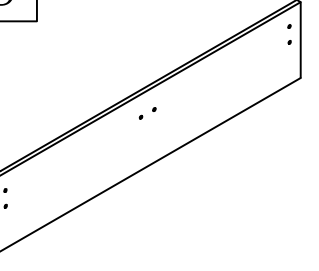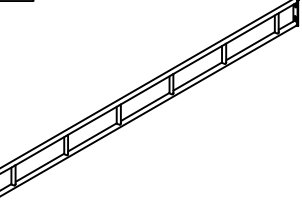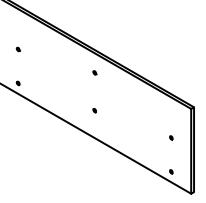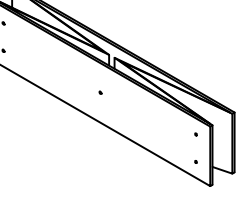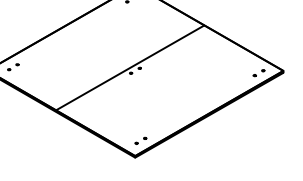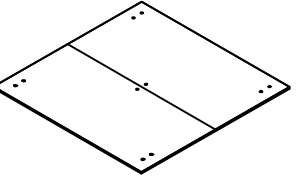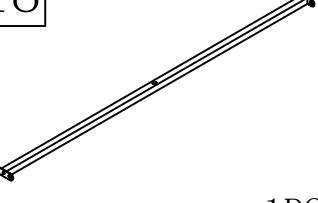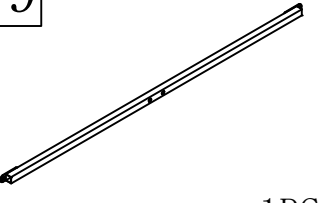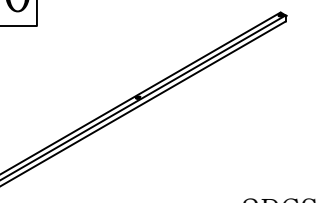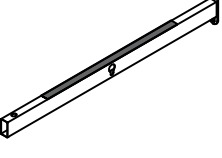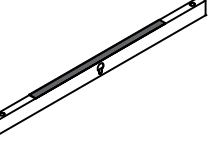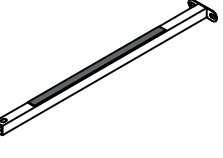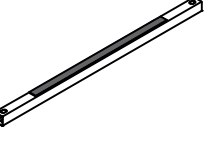1		1PC
2		1PC
3		1PC
4		1PC
5		1PC
6		1PC
7		1PC
8		1PC
9		1PC
10		3PCS
11		3PCS
12		3PCS
13		3PCS
14		2PCS
15		1PC
16		1PC
17		2PCS
18		1PC
19		1PC
20		2PCS
21		4PCS
22		2PCS
23		2PCS
24		1PC

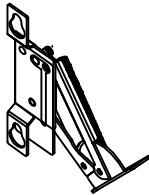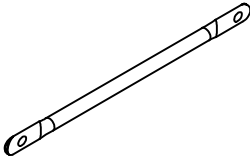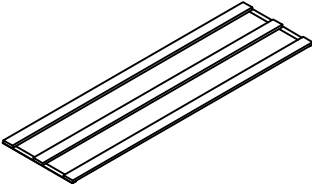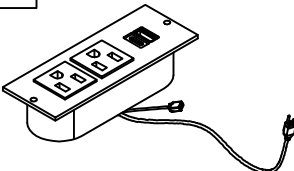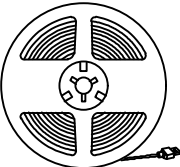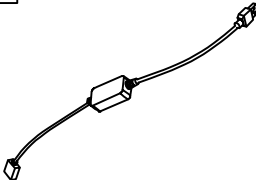Part list			
25		26	
	2PCS		4PCS
27		28	
	2PCS	R	1PC
29		31	
L	1PC		2PCS
32		33	
	3PCS		5PCS
34		35	
	1PC		1PC
36		37	
	1PC		1PC
38			
	2PCS		

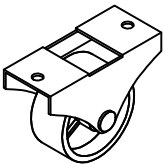
Hardware list	
30	J
	
15PCS	M4*12mm 32PCS

Hardware list

A		B		C		D		E	
M8*50mm 11PCS		M8*35mm 14PCS		M8*25mm 4PCS		M8*20mm 17PCS		M8*15mm 15PCS	
F		G		H		I		K	
M8*10mm 4PCS		M6*20mm 3PCS		M6*12mm 26PCS		M4*12mm 3PCS		M5*30mm 38PCS	
L		M		N		O		P	
M3*65MM 1PC		M4*65MM 1PC		M5*65MM 1PC		Ø18*5*1.5 1PC		Ø20*10*2.0 1PC	


Step1

I		M4*12mm	2pcs
N		M5*65	1pc

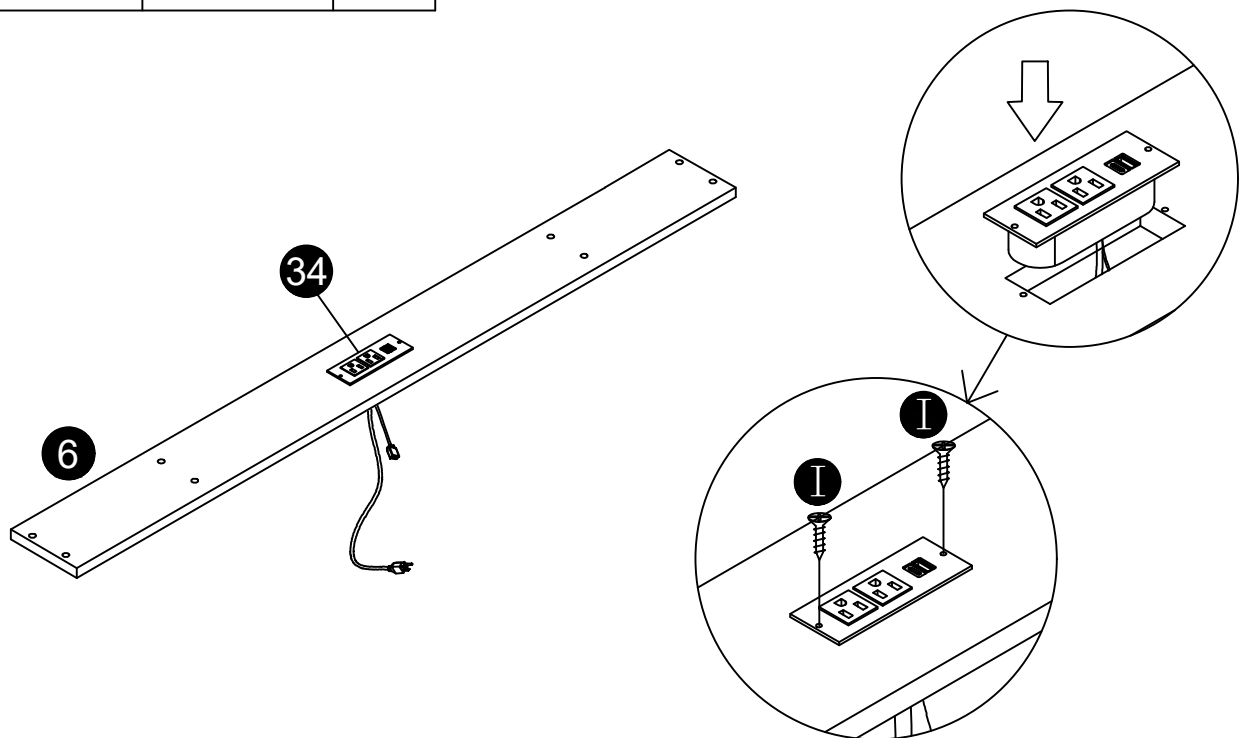



Step2

K		M5x30mm	4pcs
L		M3*65mm	1pc

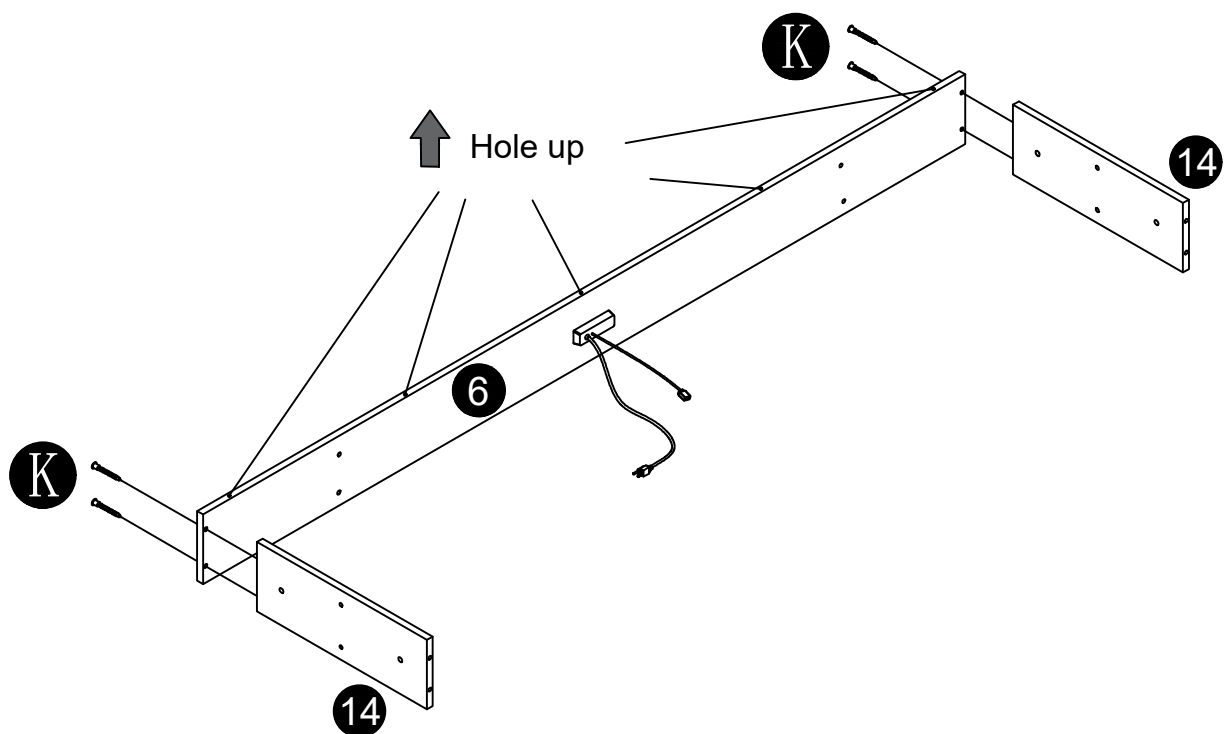


Step3

K		M5x30mm	4pcs
L		M3*65mm	1pc

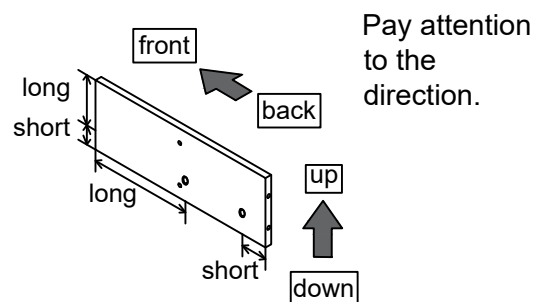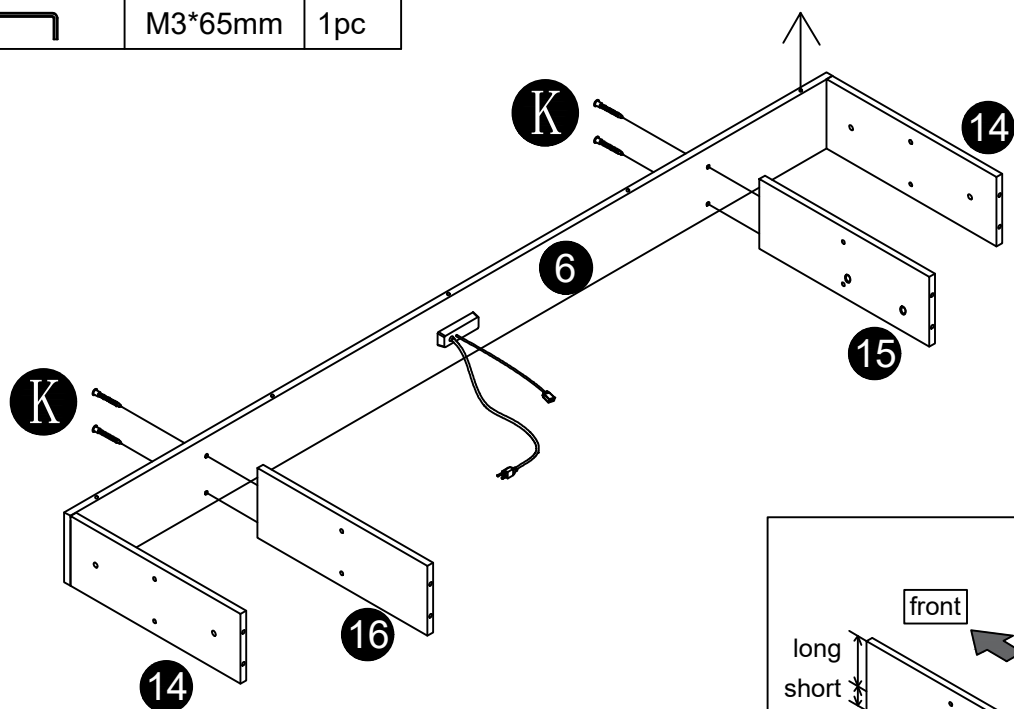


Step4

K		M5x30mm	8pcs
L		M3*65mm	1pc

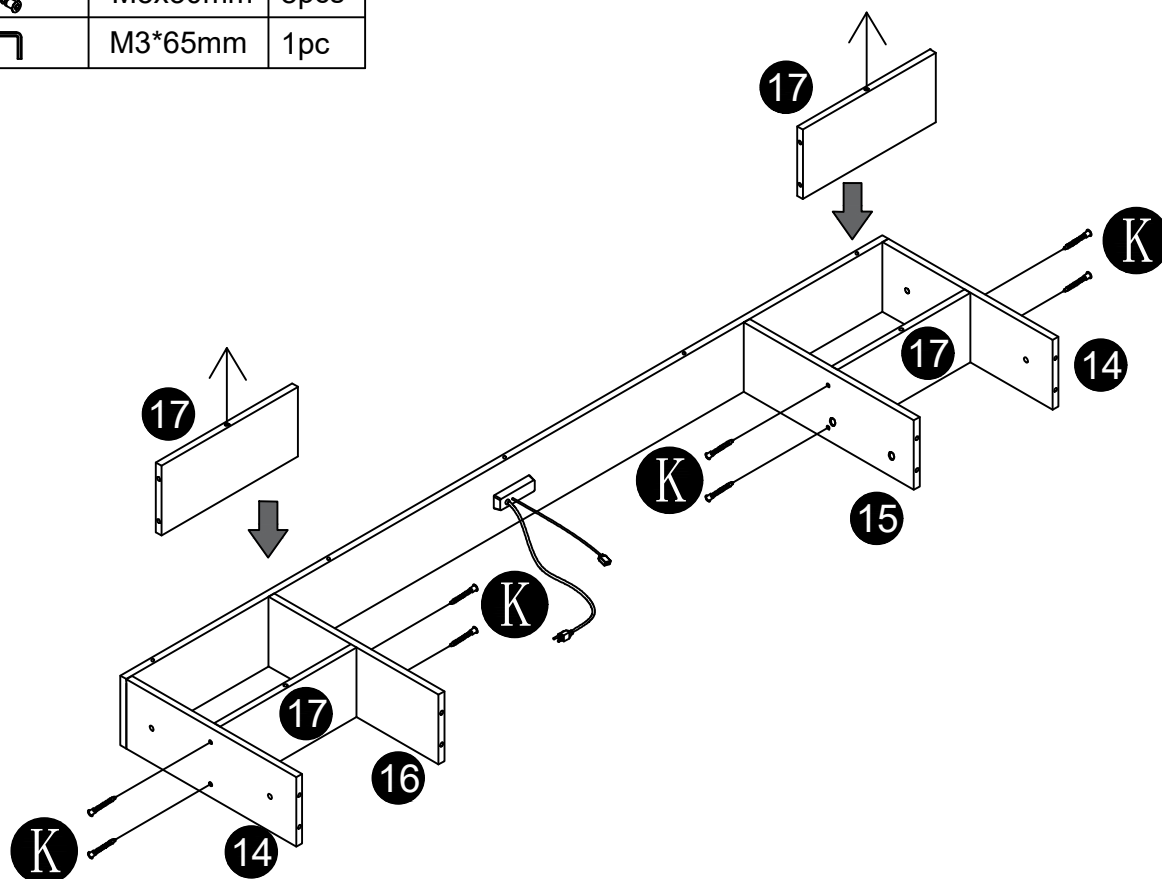


Step5

K		M5x30mm	8pcs
L		M3*65mm	1pc

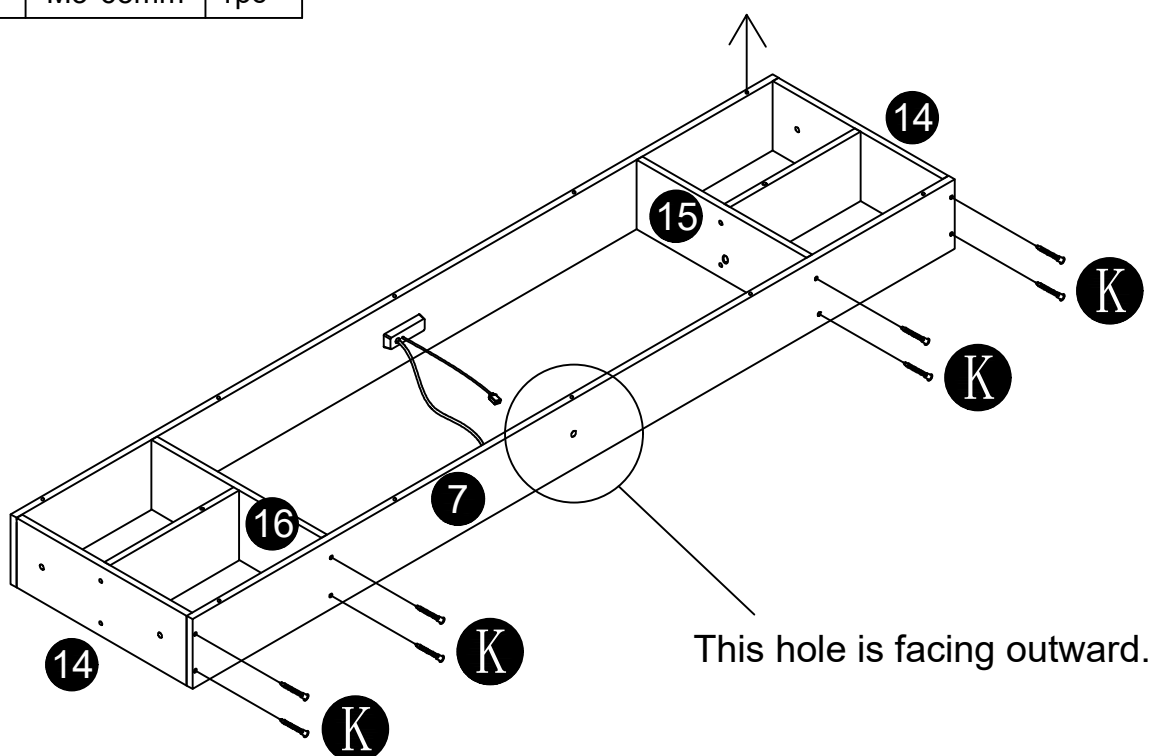


Step6

K		M5x30mm	11pcs
L		M3*65mm	1pc

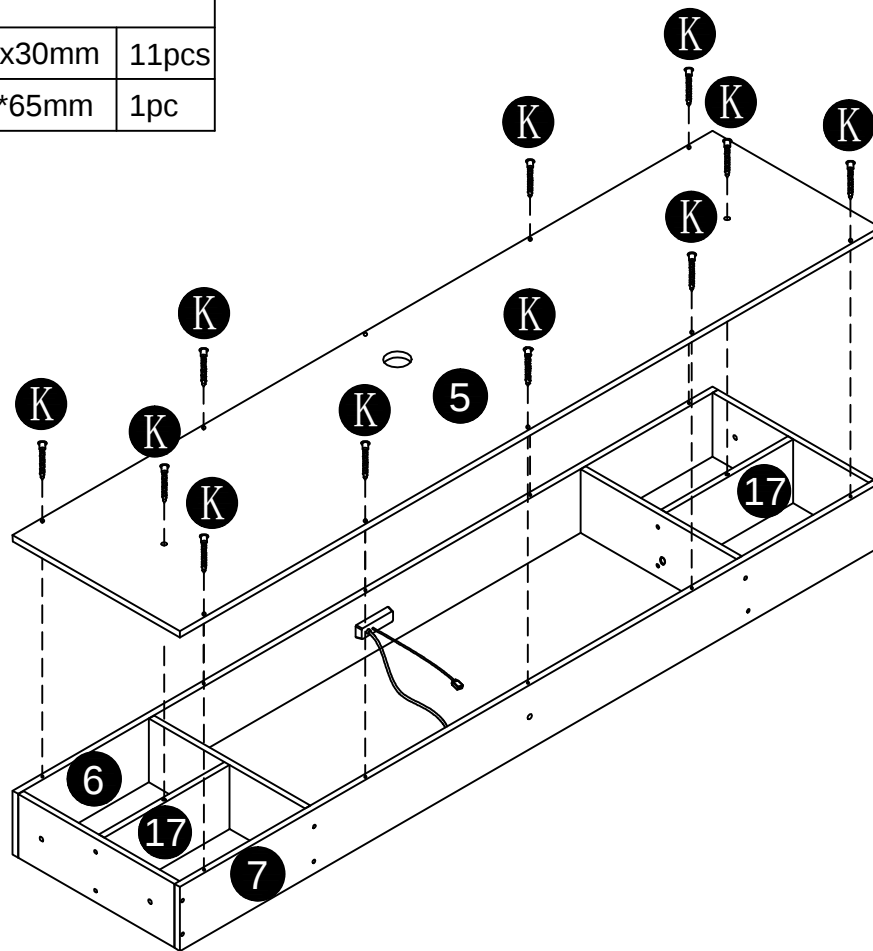


Step7


C		M8x25mm	4pcs
N		M5*65mm	1pc

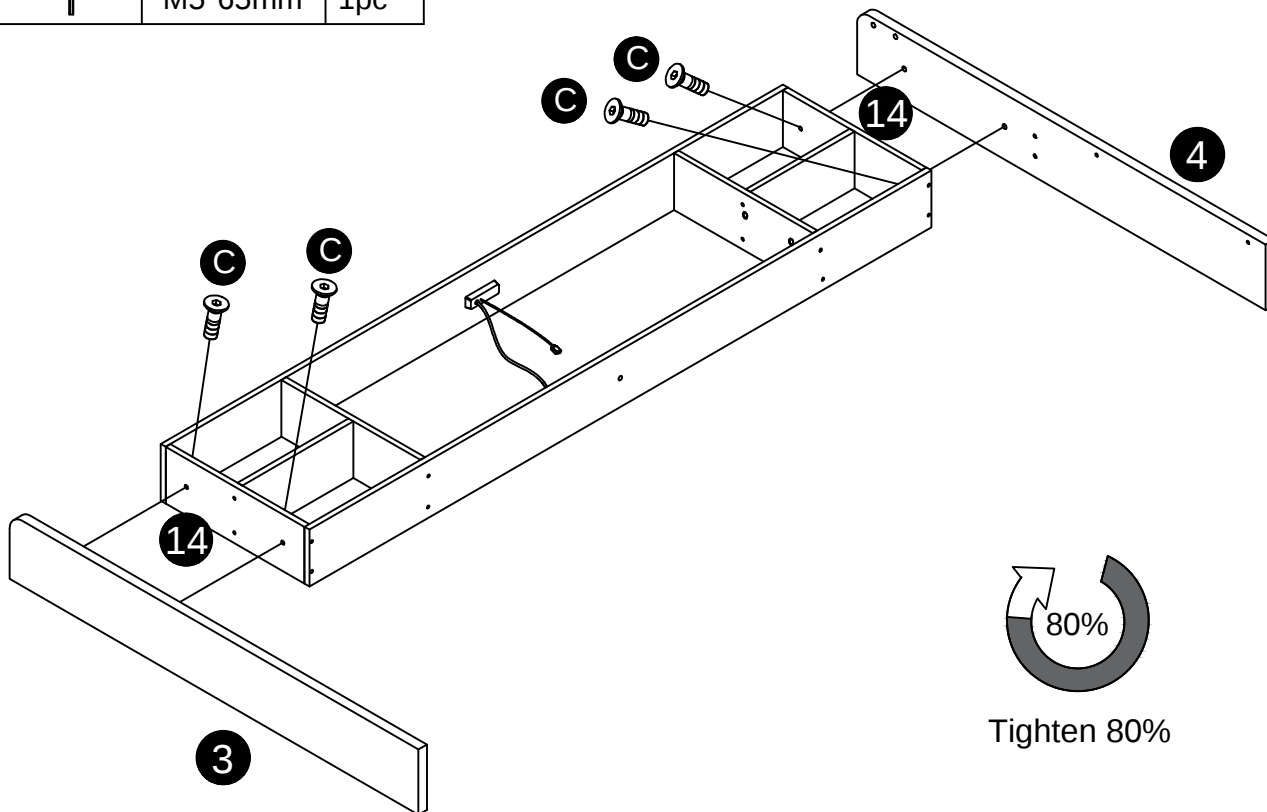

Step8

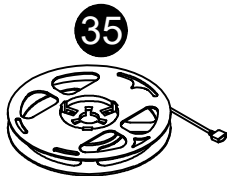


Unfold the light strip and secure it

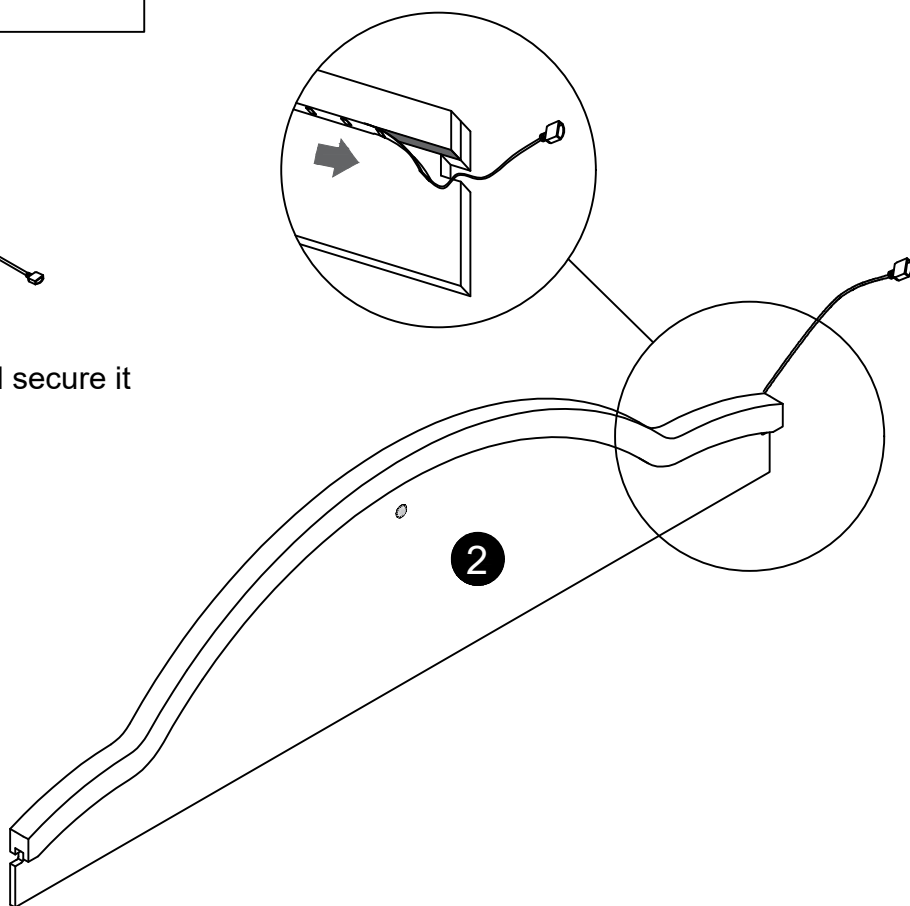

Step9


H		M6x12mm	5pcs
M		M4*65mm	1pc

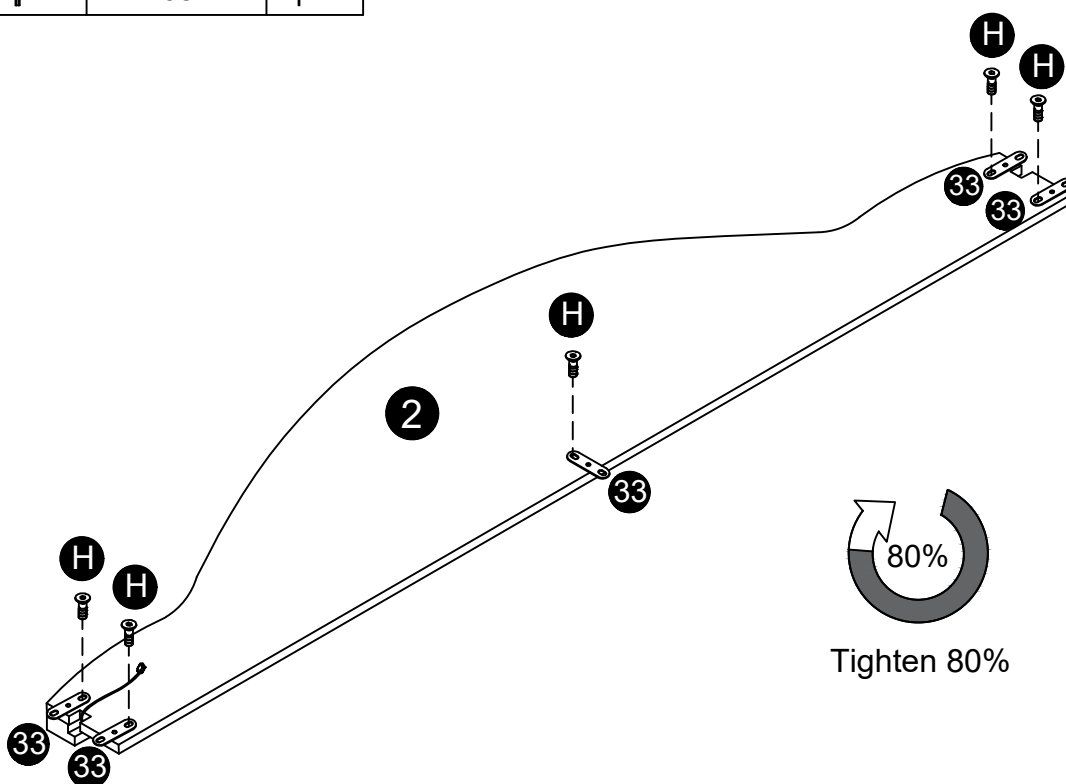

80%
Tighten 80%


Step10

H		M6x12mm	4pcs
K		M5x30mm	1pc
L		M3*65mm	1pc
M		M4*65mm	1pc
O		Ø18*5*1.5	1pc

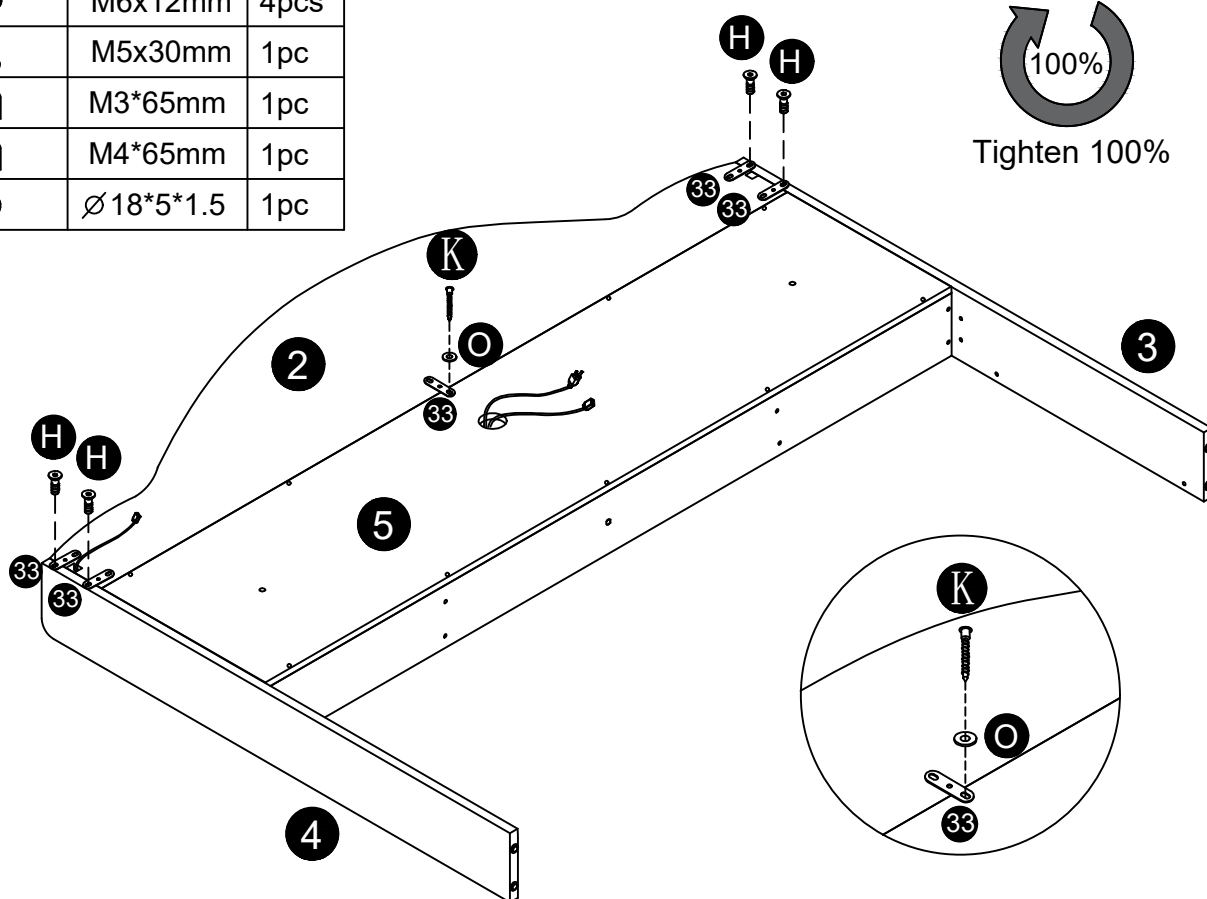


Step11

B		M8x35mm	1pc
E		M8x15mm	4pcs
N		M5*65mm	1pc
P		Ø20*10*2.0	1pc

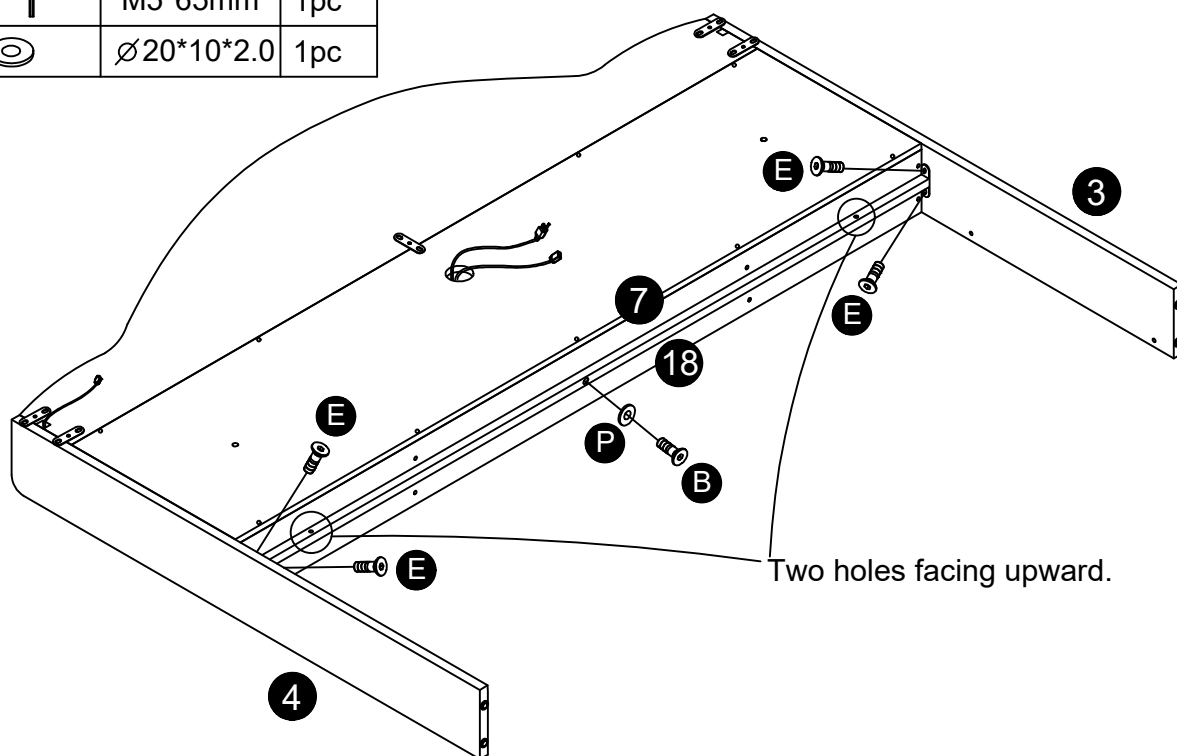


Step12

E		M8x15mm	4pcs
N		M5*65mm	1pc

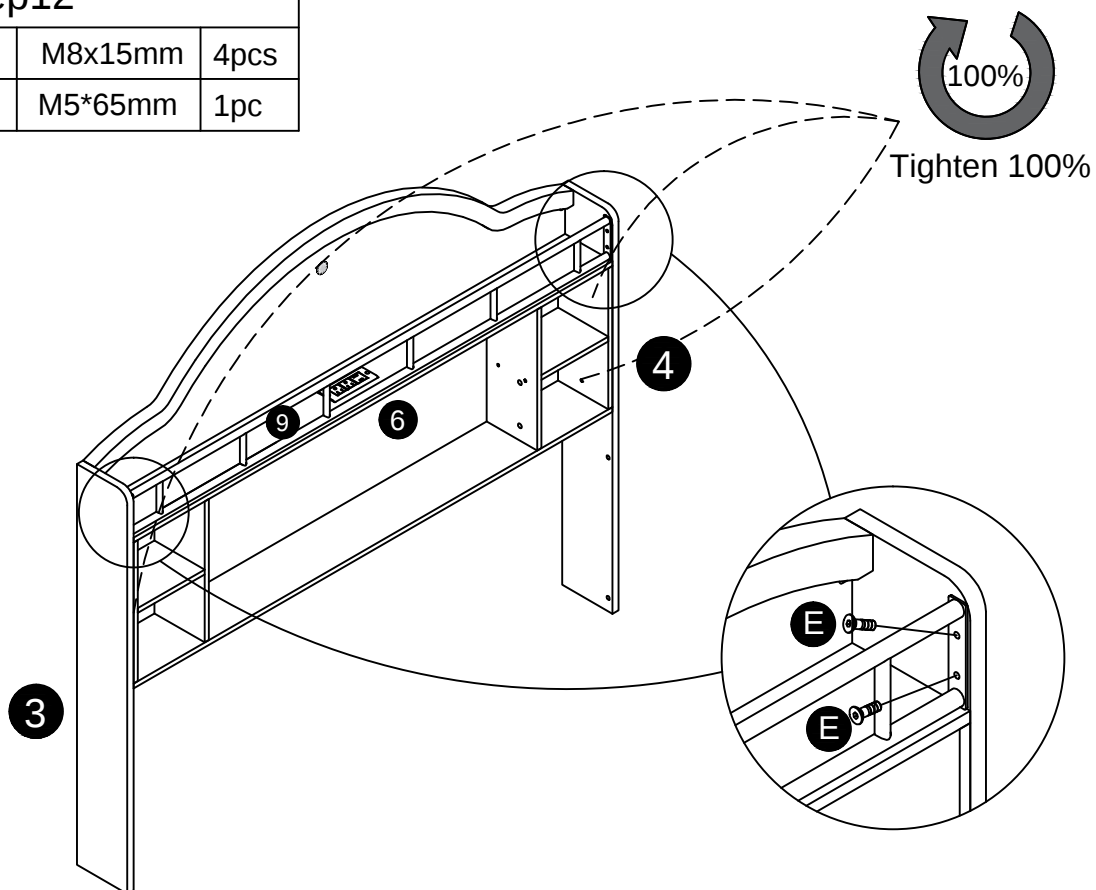


Step13

B		M8x35mm	4pcs
N		M5*65mm	1pc

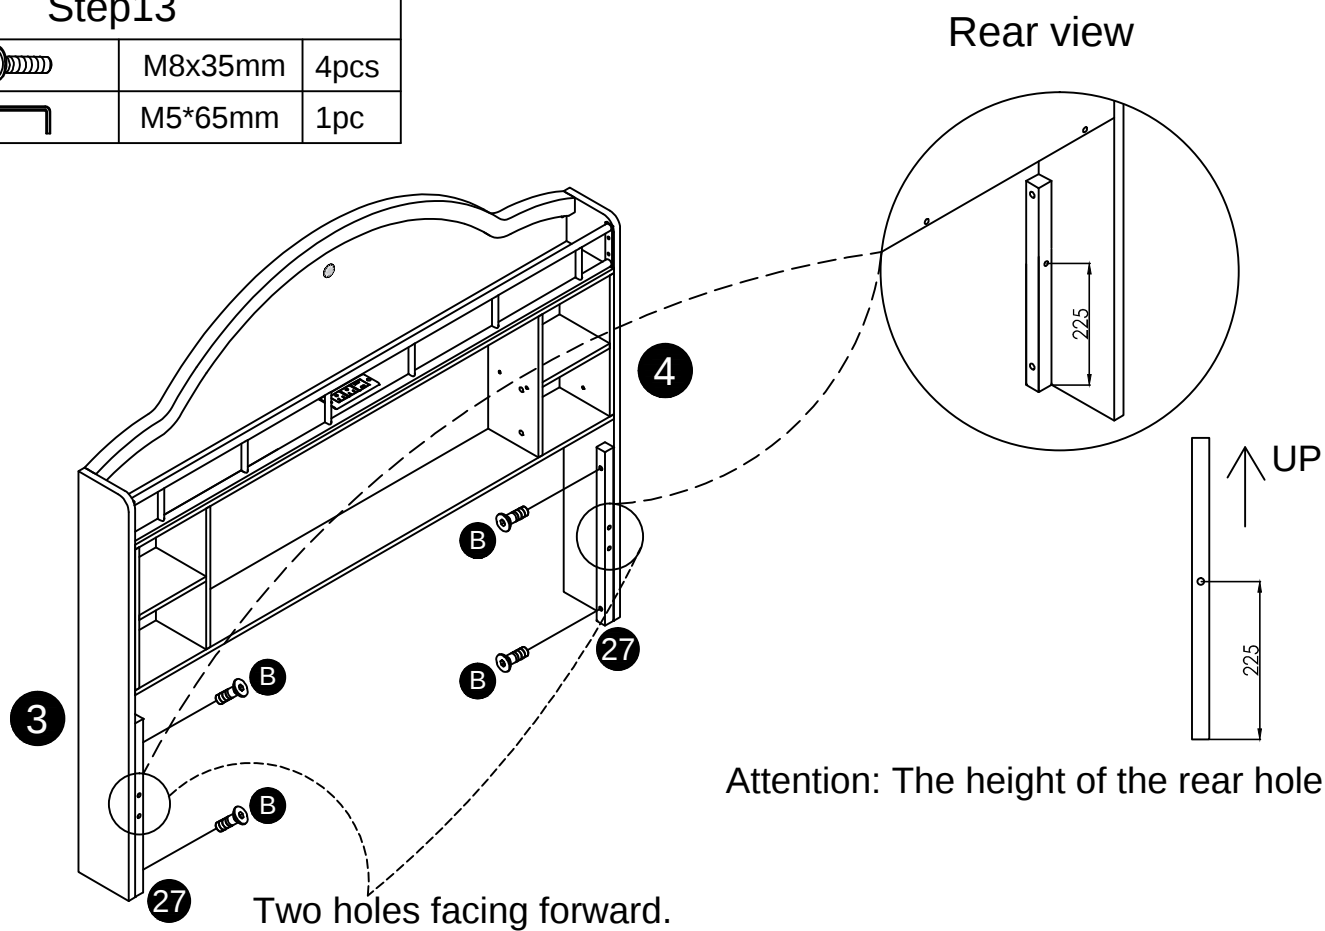


Step14

D		M8x20mm	2pcs
N		M5*65mm	1pc

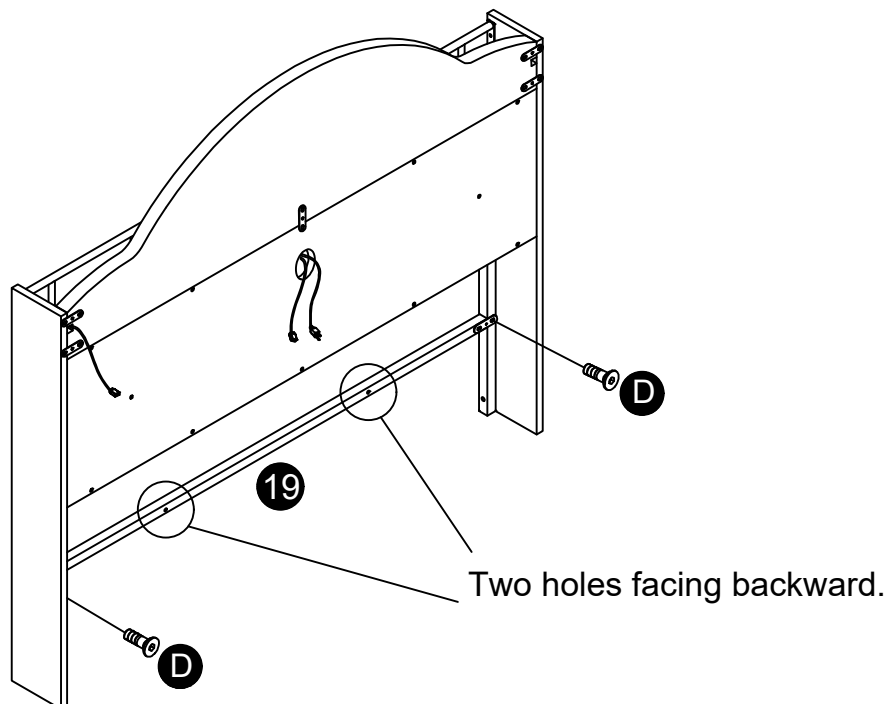



Step15

D		M8x20mm	4pcs
N		M5*65mm	1pc

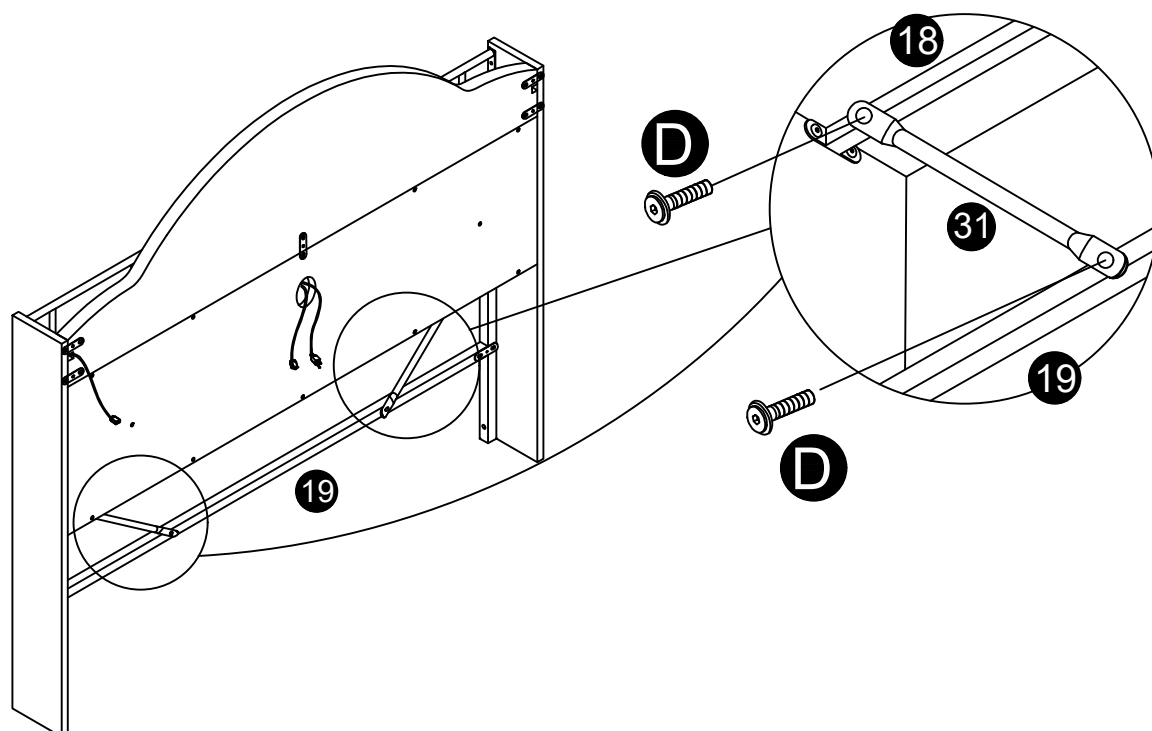

Step16

D		M8x20mm	4pcs
N		M5*65mm	1pc

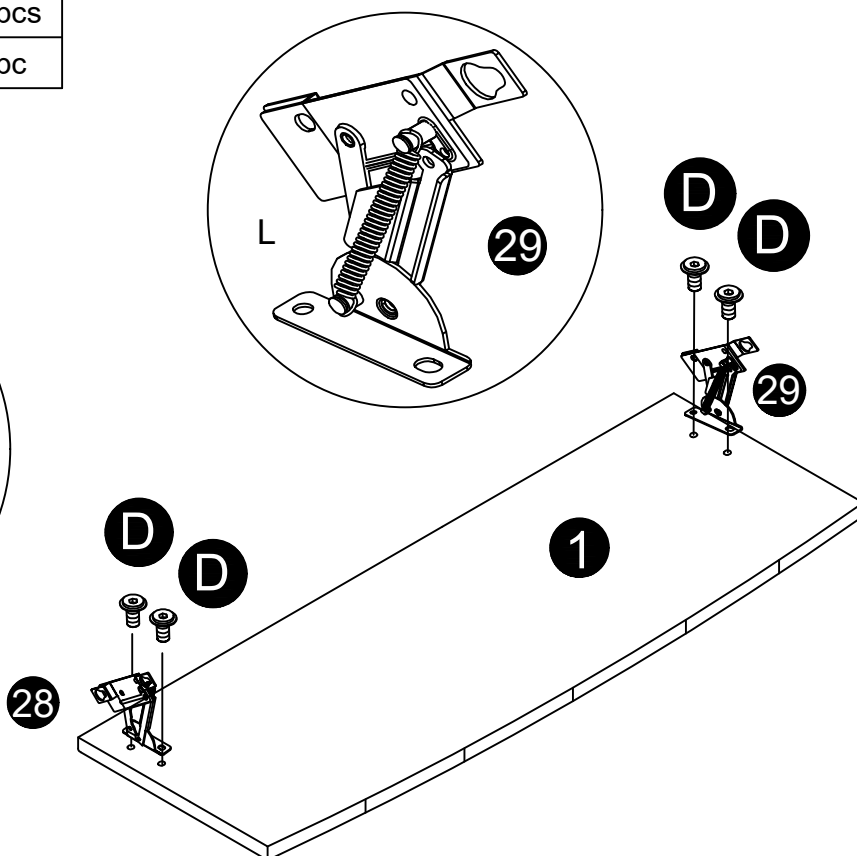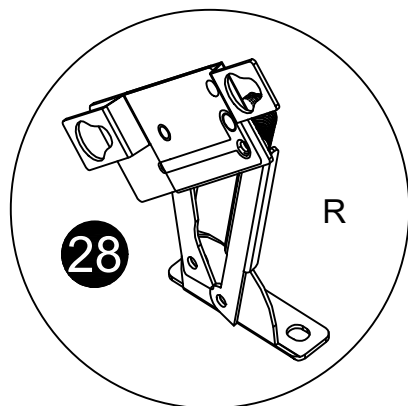


Step17


F		M8x10mm	4pcs
N		M5*65mm	1pc




RECOMMEND 2 OR MORE
ADULTS FOR QUICKER
ASSEMBLY

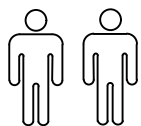


2PERS

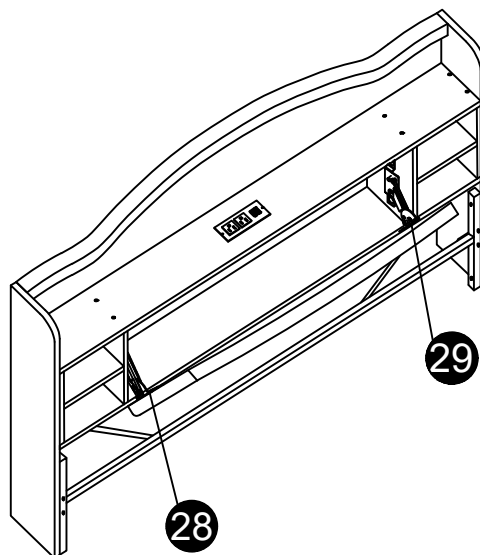


Tighten 50%

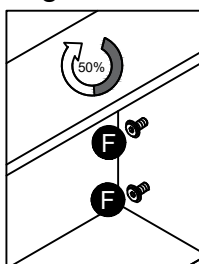

hang up

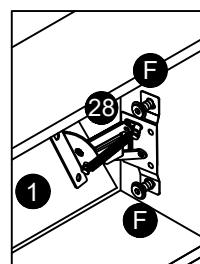


Tighten 100%

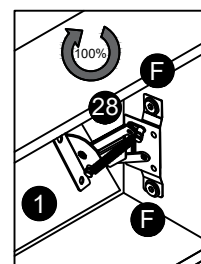

Step18


A		M8x50mm	8pcs
N		M5*65mm	1pc

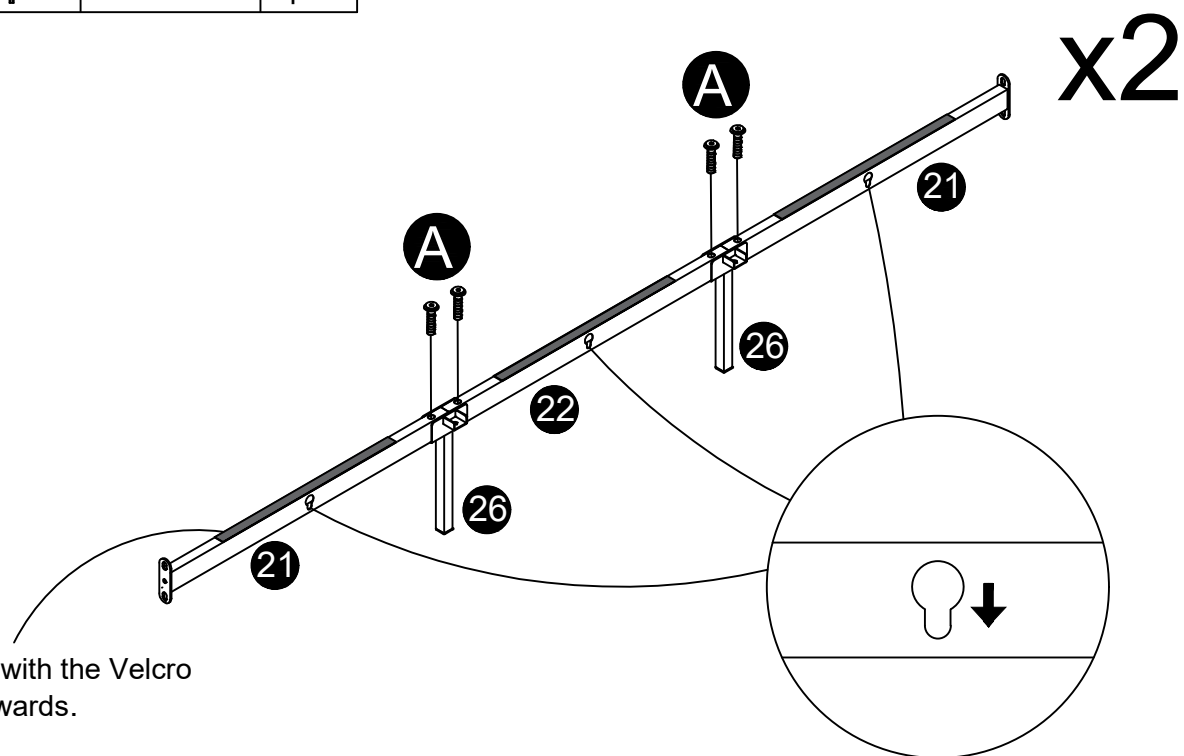

The side with the Velcro faces upwards.

Step19


B		M8*35mm	4pcs
N		M5*65MM	1pc

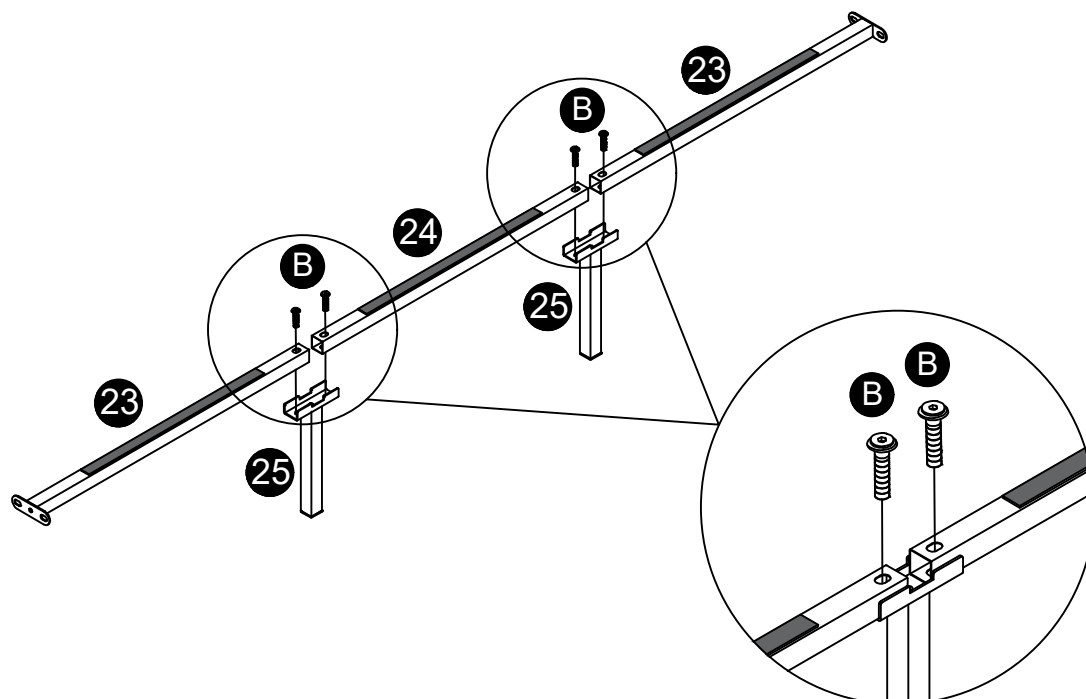

Step20


E		M8x15mm	6pcs
N		M5*65mm	1pc

Iron groove facing inward.

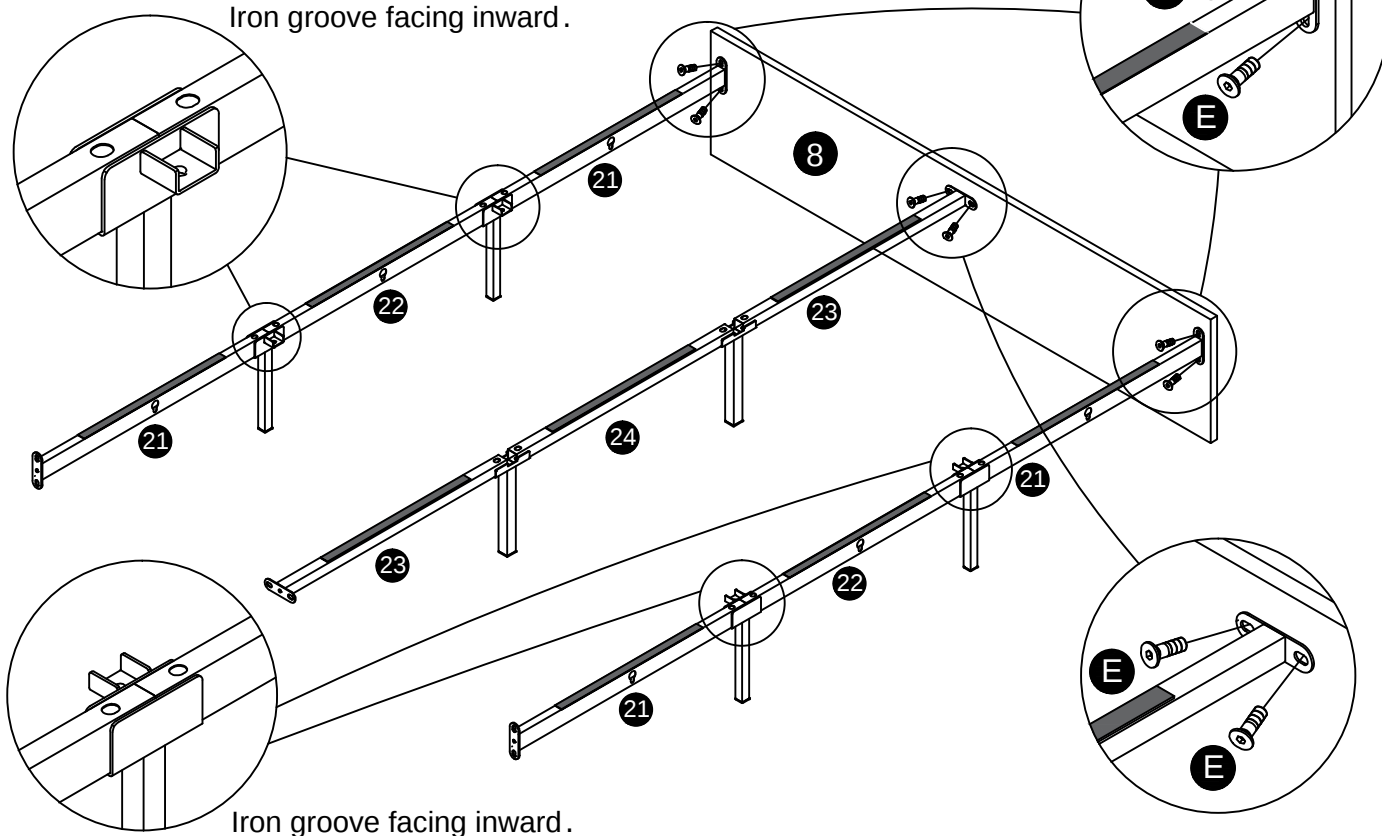


Step21

D		M8x20mm	6pcs
N		M5*65mm	1pc

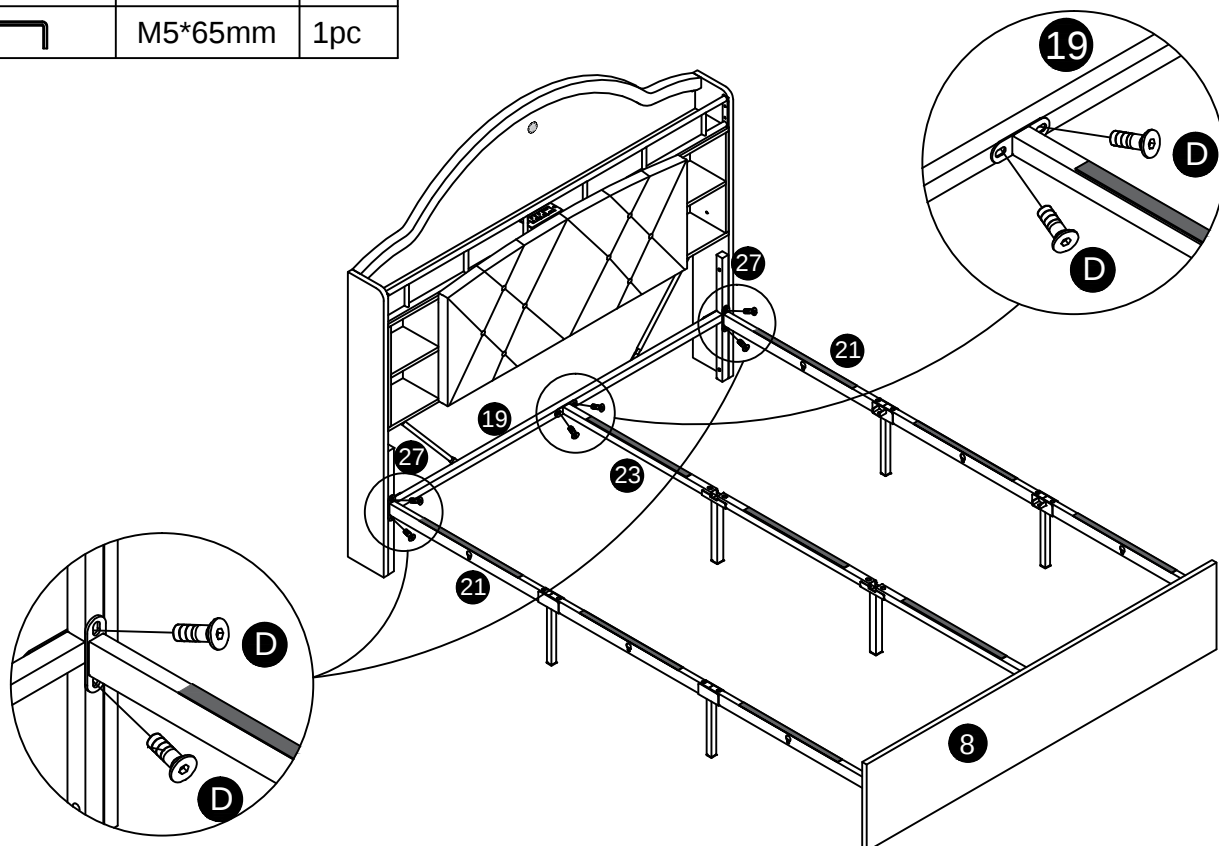


Step22


A		M8*50mm	2pcs
B		M8*35mm	4pcs
N		M5*65MM	1pc

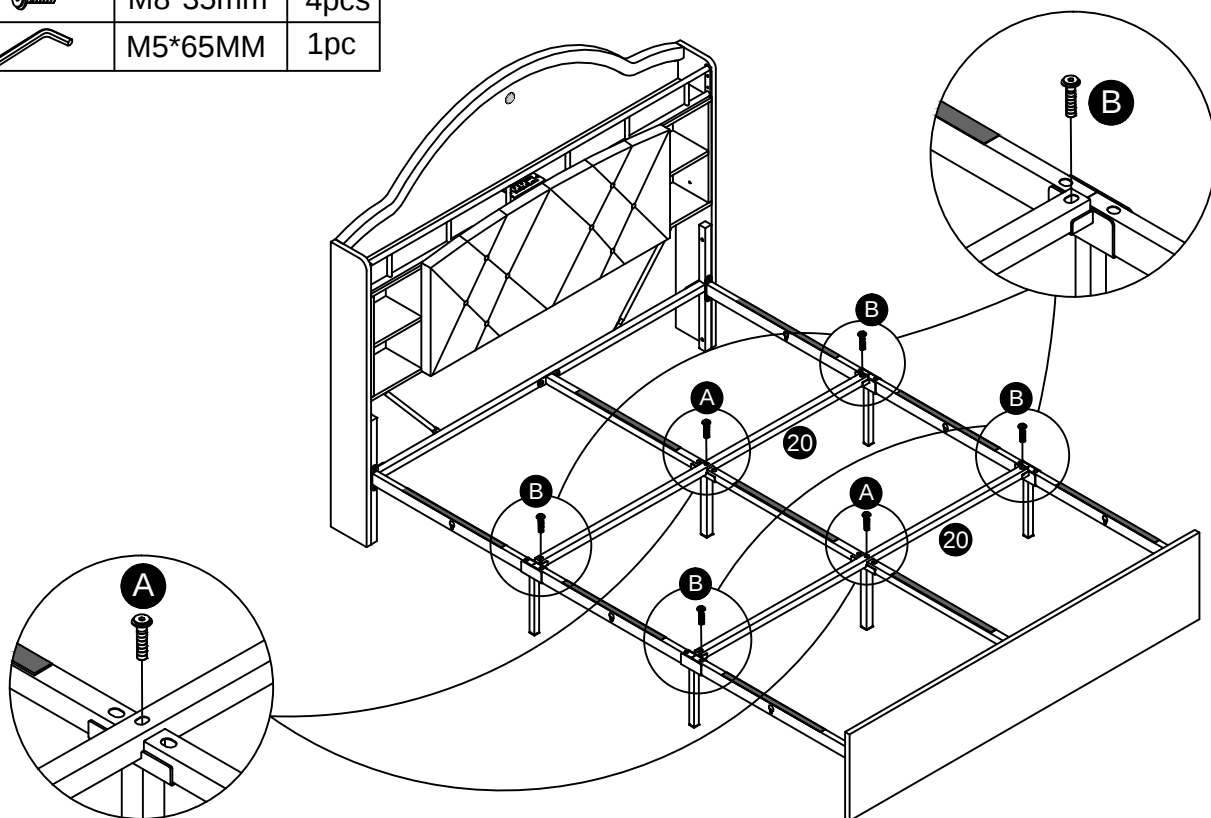


Step23

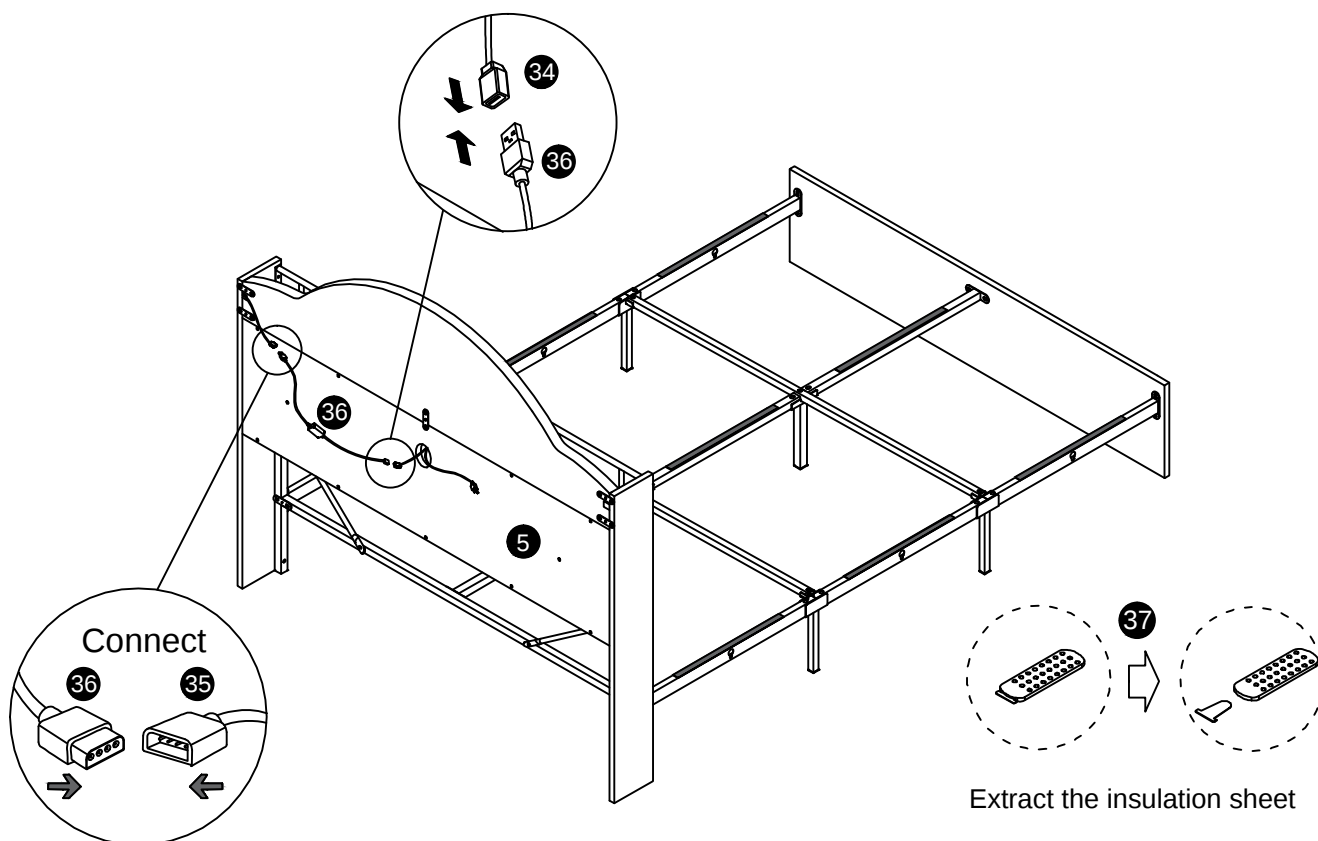



Step24

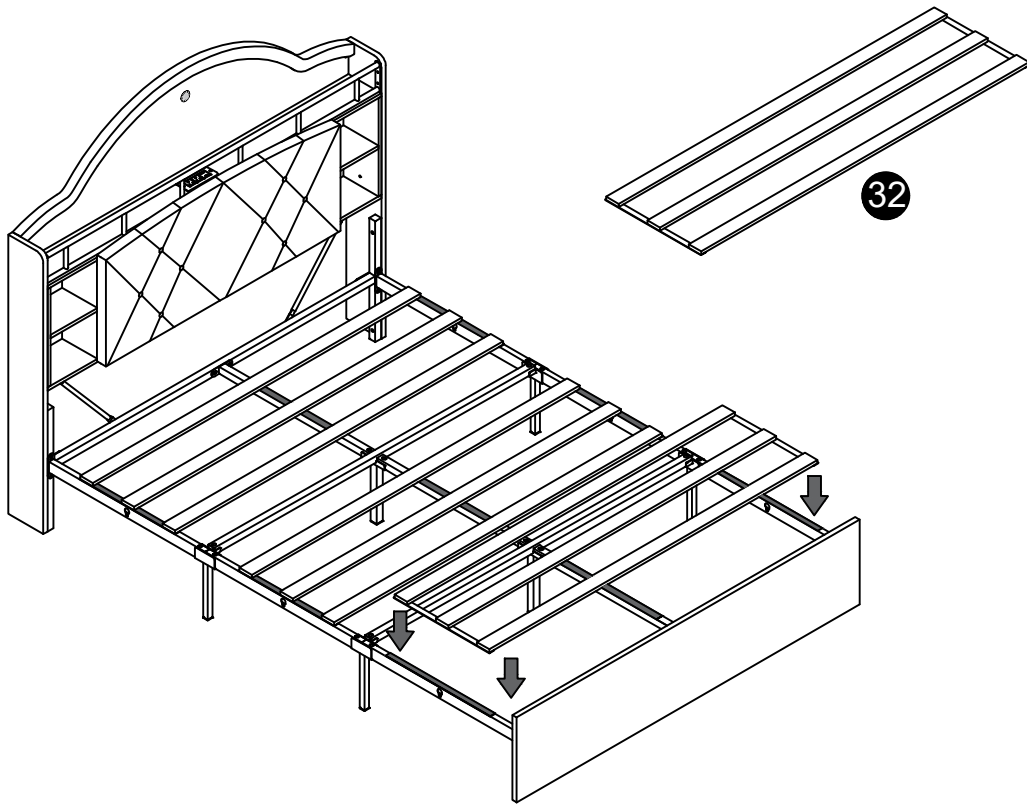

Step25

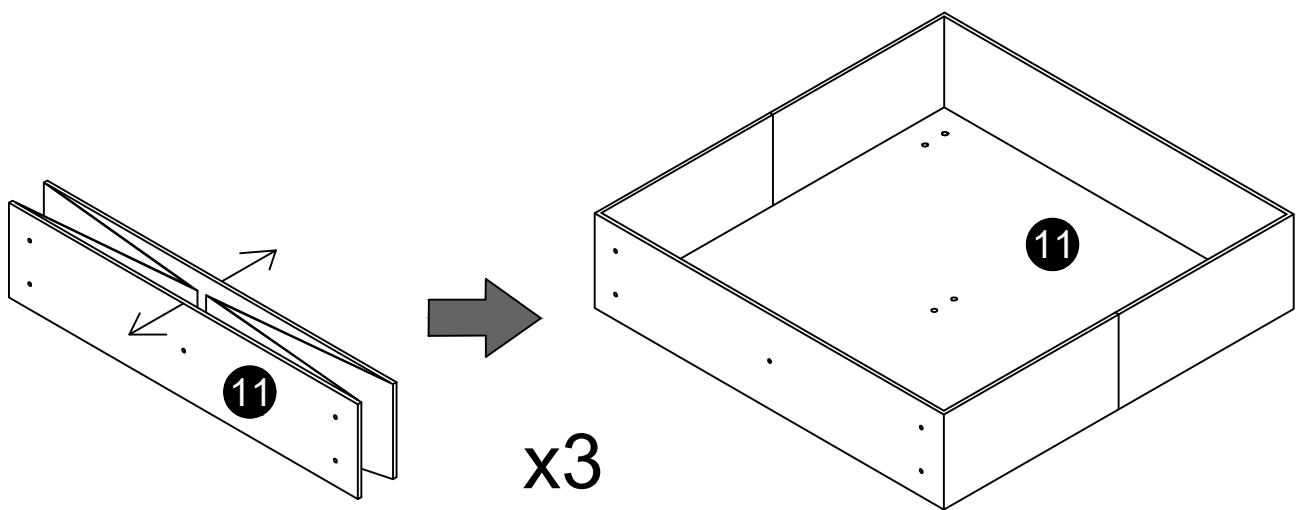


Step26

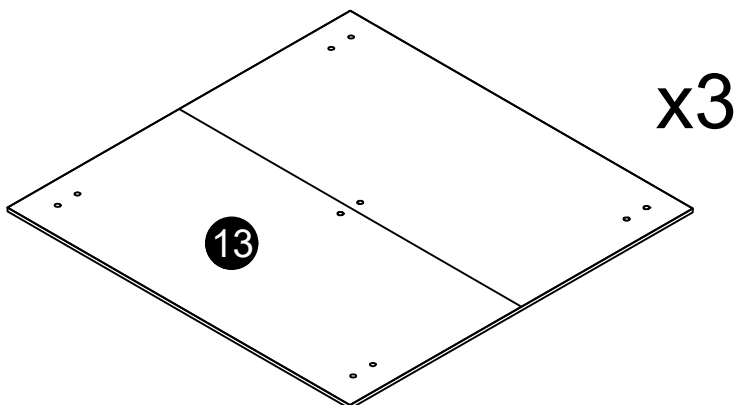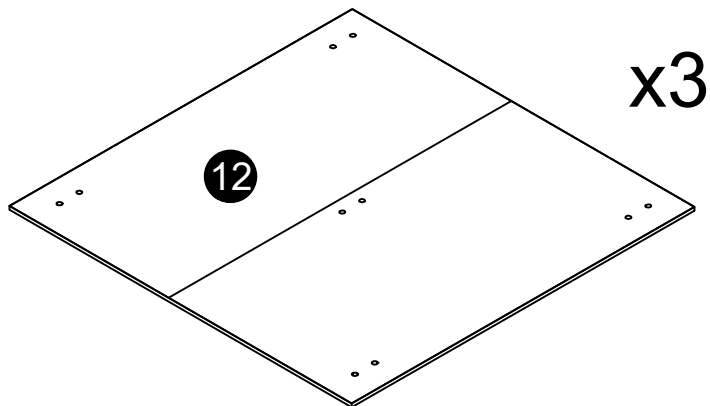

Unfold board 12 and board 13. Pay attention to the difference and direction between these two boards.

Step27

Board 12 is on top, board 13 is below. Merge two boards and drawers in the direction and order shown in the diagram.

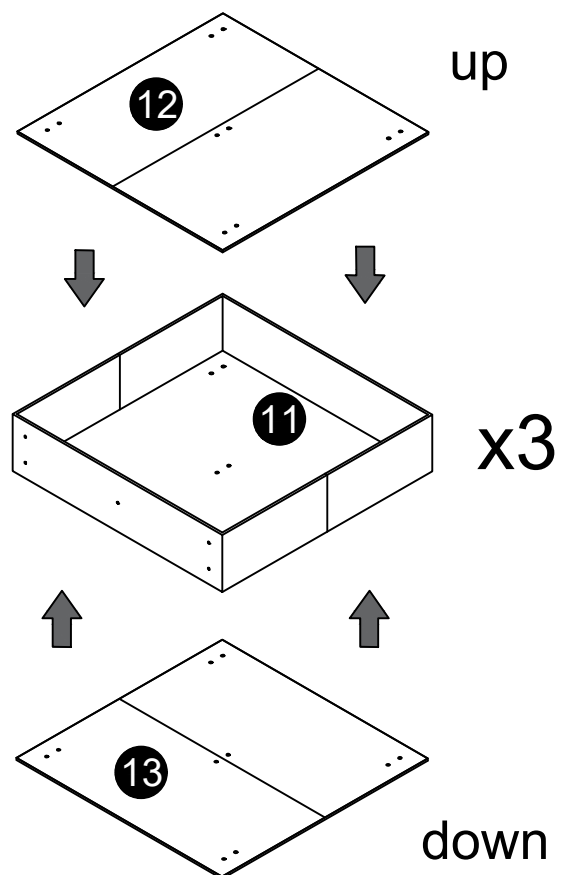


Step28


J		M4x12mm	30pcs
N		M5*65mm	1pc

Step-A

Lock the middle wheel first

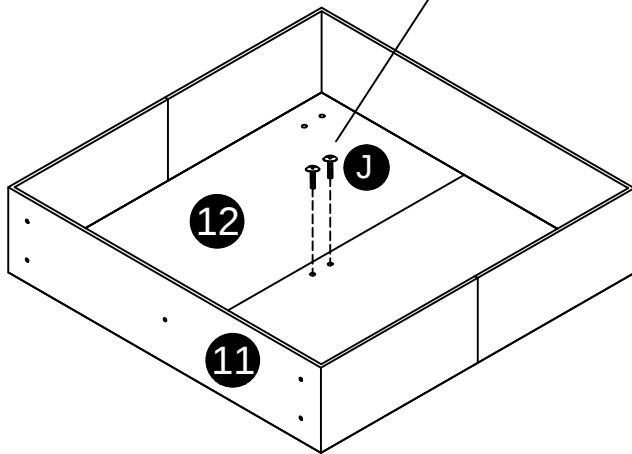

front view

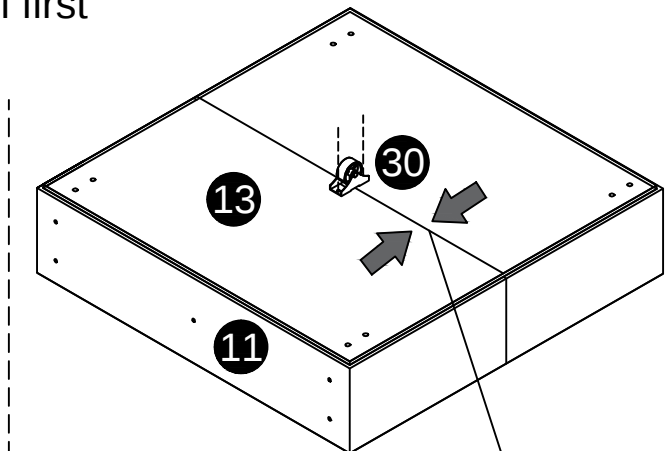


bottom view

x3


Tighten slightly towards the center during installation

Step-B

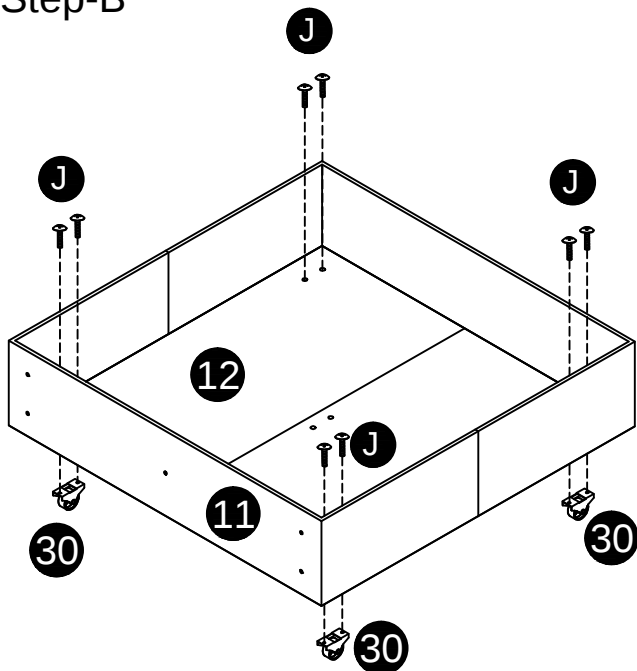

front view


x3

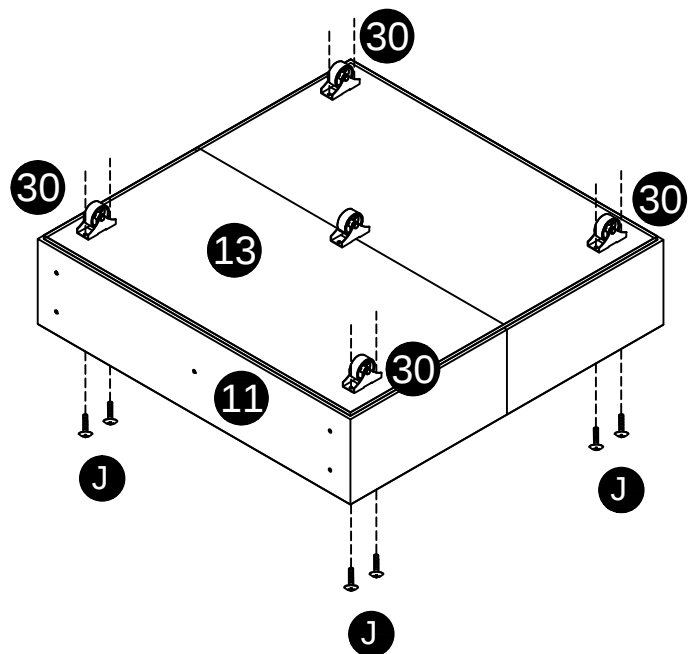


bottom view

Align the screws first. Tighten the screws simultaneously

Step 29			
G		M6x20mm	3pcs
H		M6x12mm	15pcs
M		M4x65mm	1pc

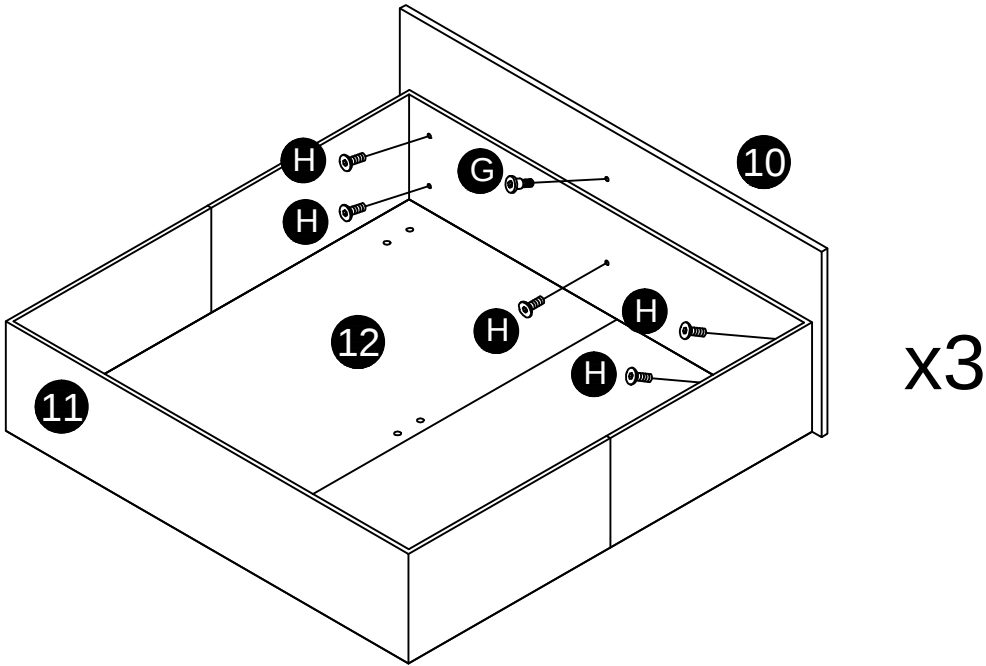


Step30

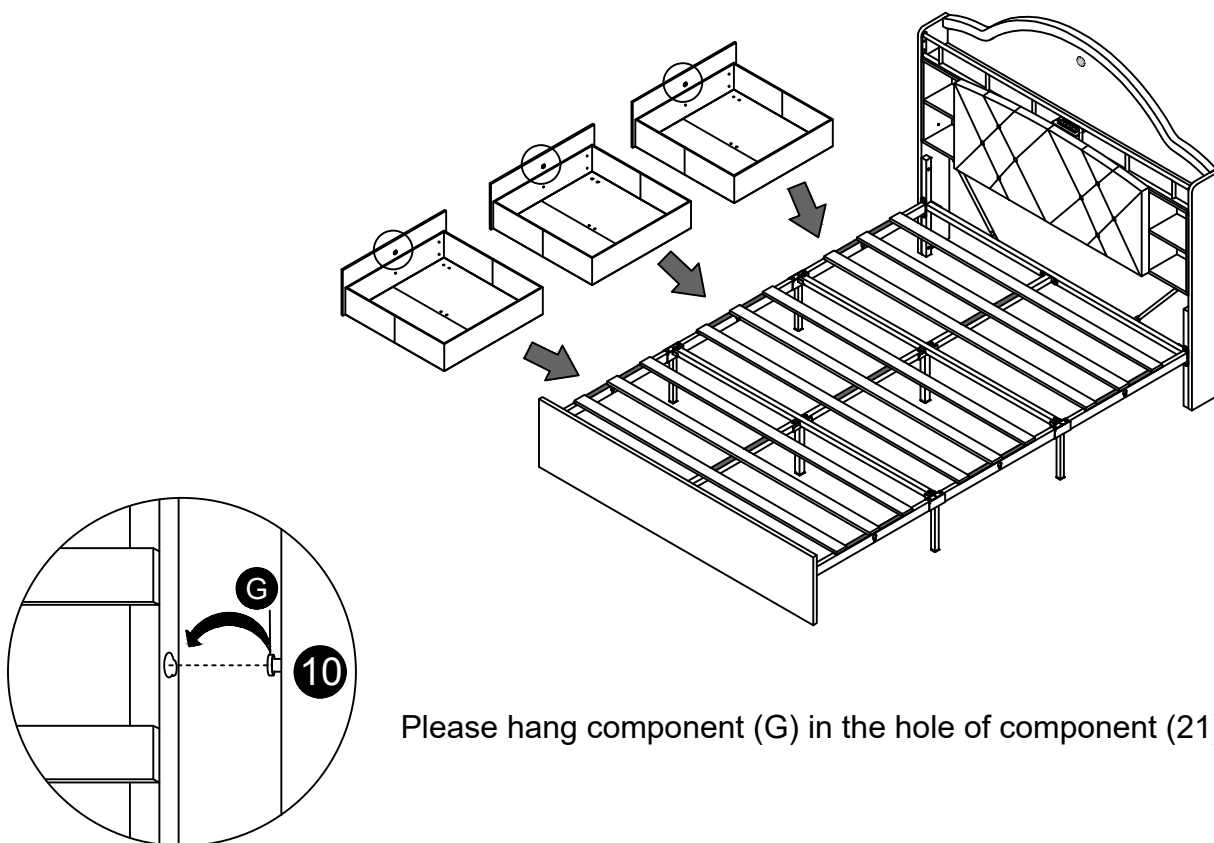


Please hang component (G) in the hole of component (21)(22).

Step31

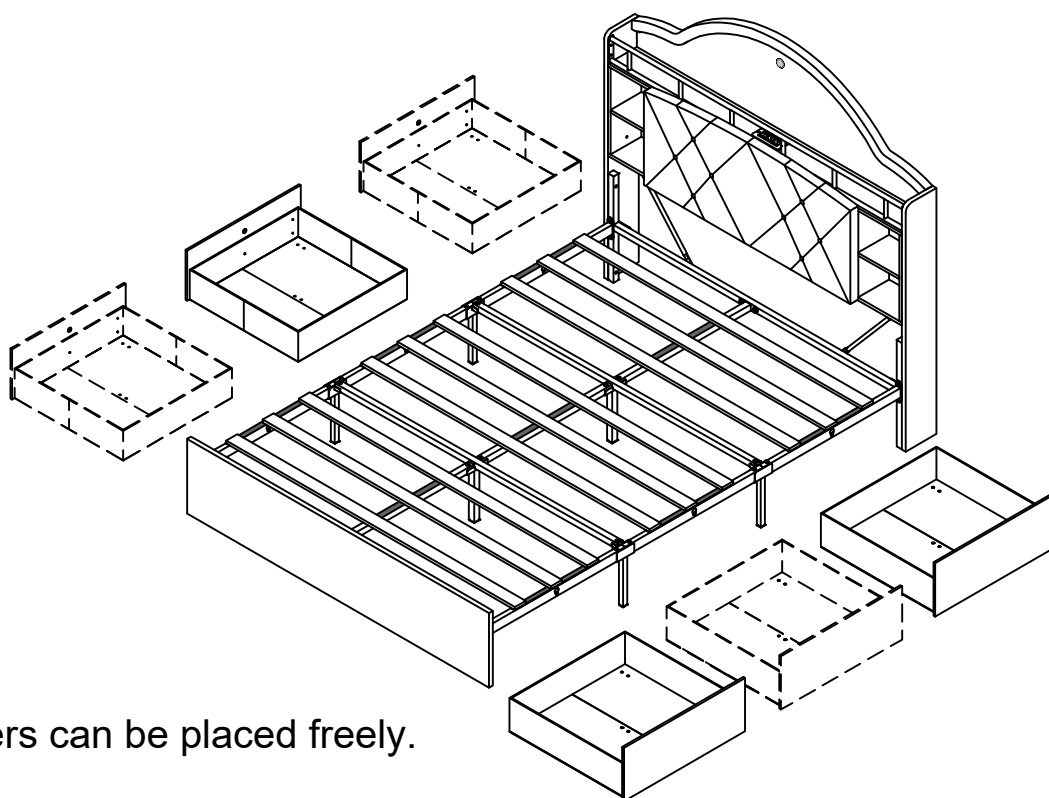

The side drawers can be placed freely.

Step32

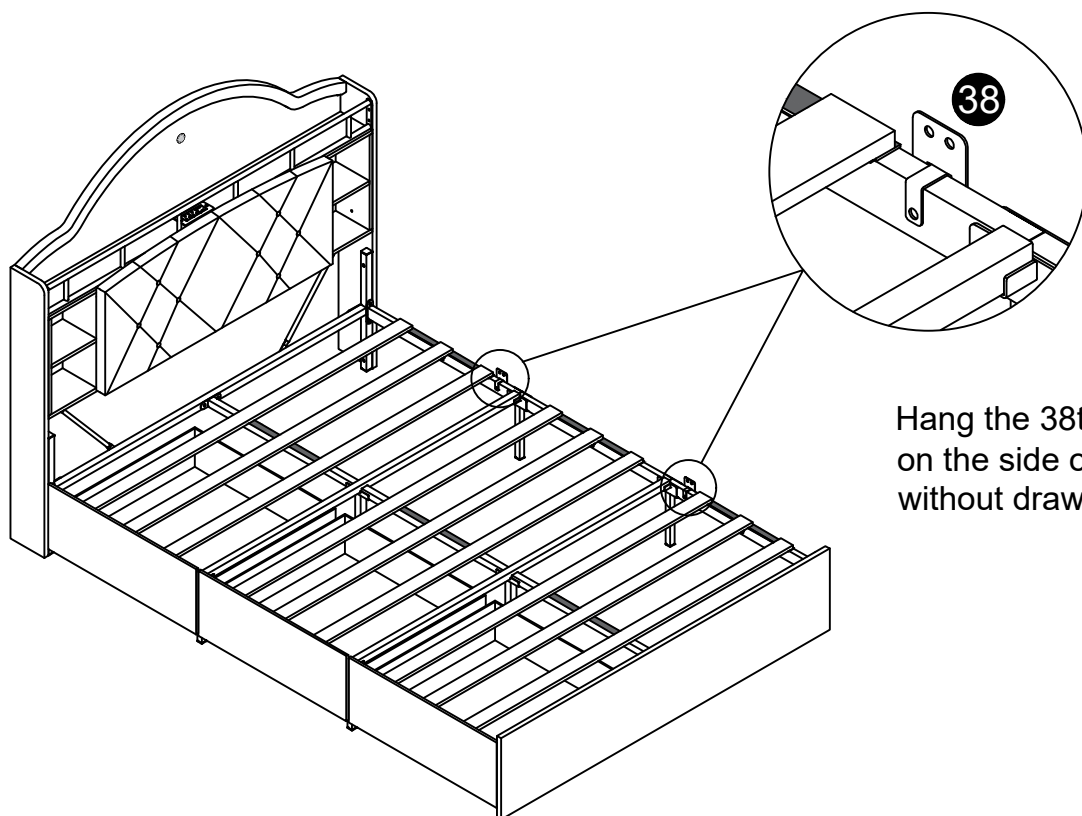

Hang the 38th hanging piece on the side of the bed without drawers.

Step33

