


CollaredEagle

Dressing table

VD009

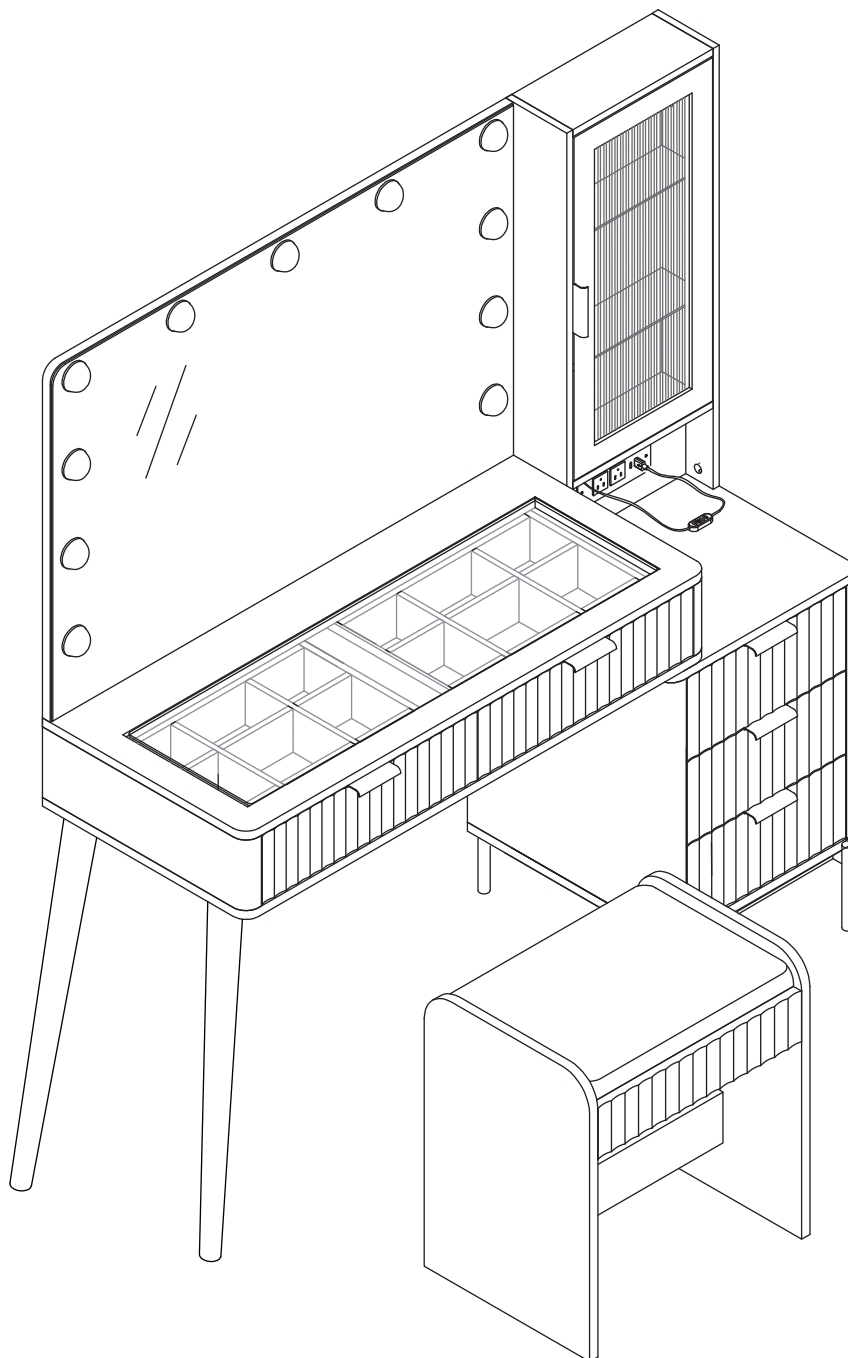

Suggestion: To make the installation process easier and faster, we recommend that two people work together to install the Dressing table.

Helpful Hints


1. We recommend two people to assemble the product easier and faster.
2. Please DO NOT tighten the screws deeply during assembling avoiding that metal frame can be bent and plank will crack.
3. We recommend that all screws should not be tightened over during assembling to make it easy to adjust. When it is adjusted to proper station all screws should be tightened.
4. Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

Customer Service

As this item contains many parts, please read the installation instruction carefully before installation and complete the installation with the cooperation of your partner. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us freely.  **CollaredEagle@163.com**







EXPLODED

INSTALLATION
INSTRUCTIONS

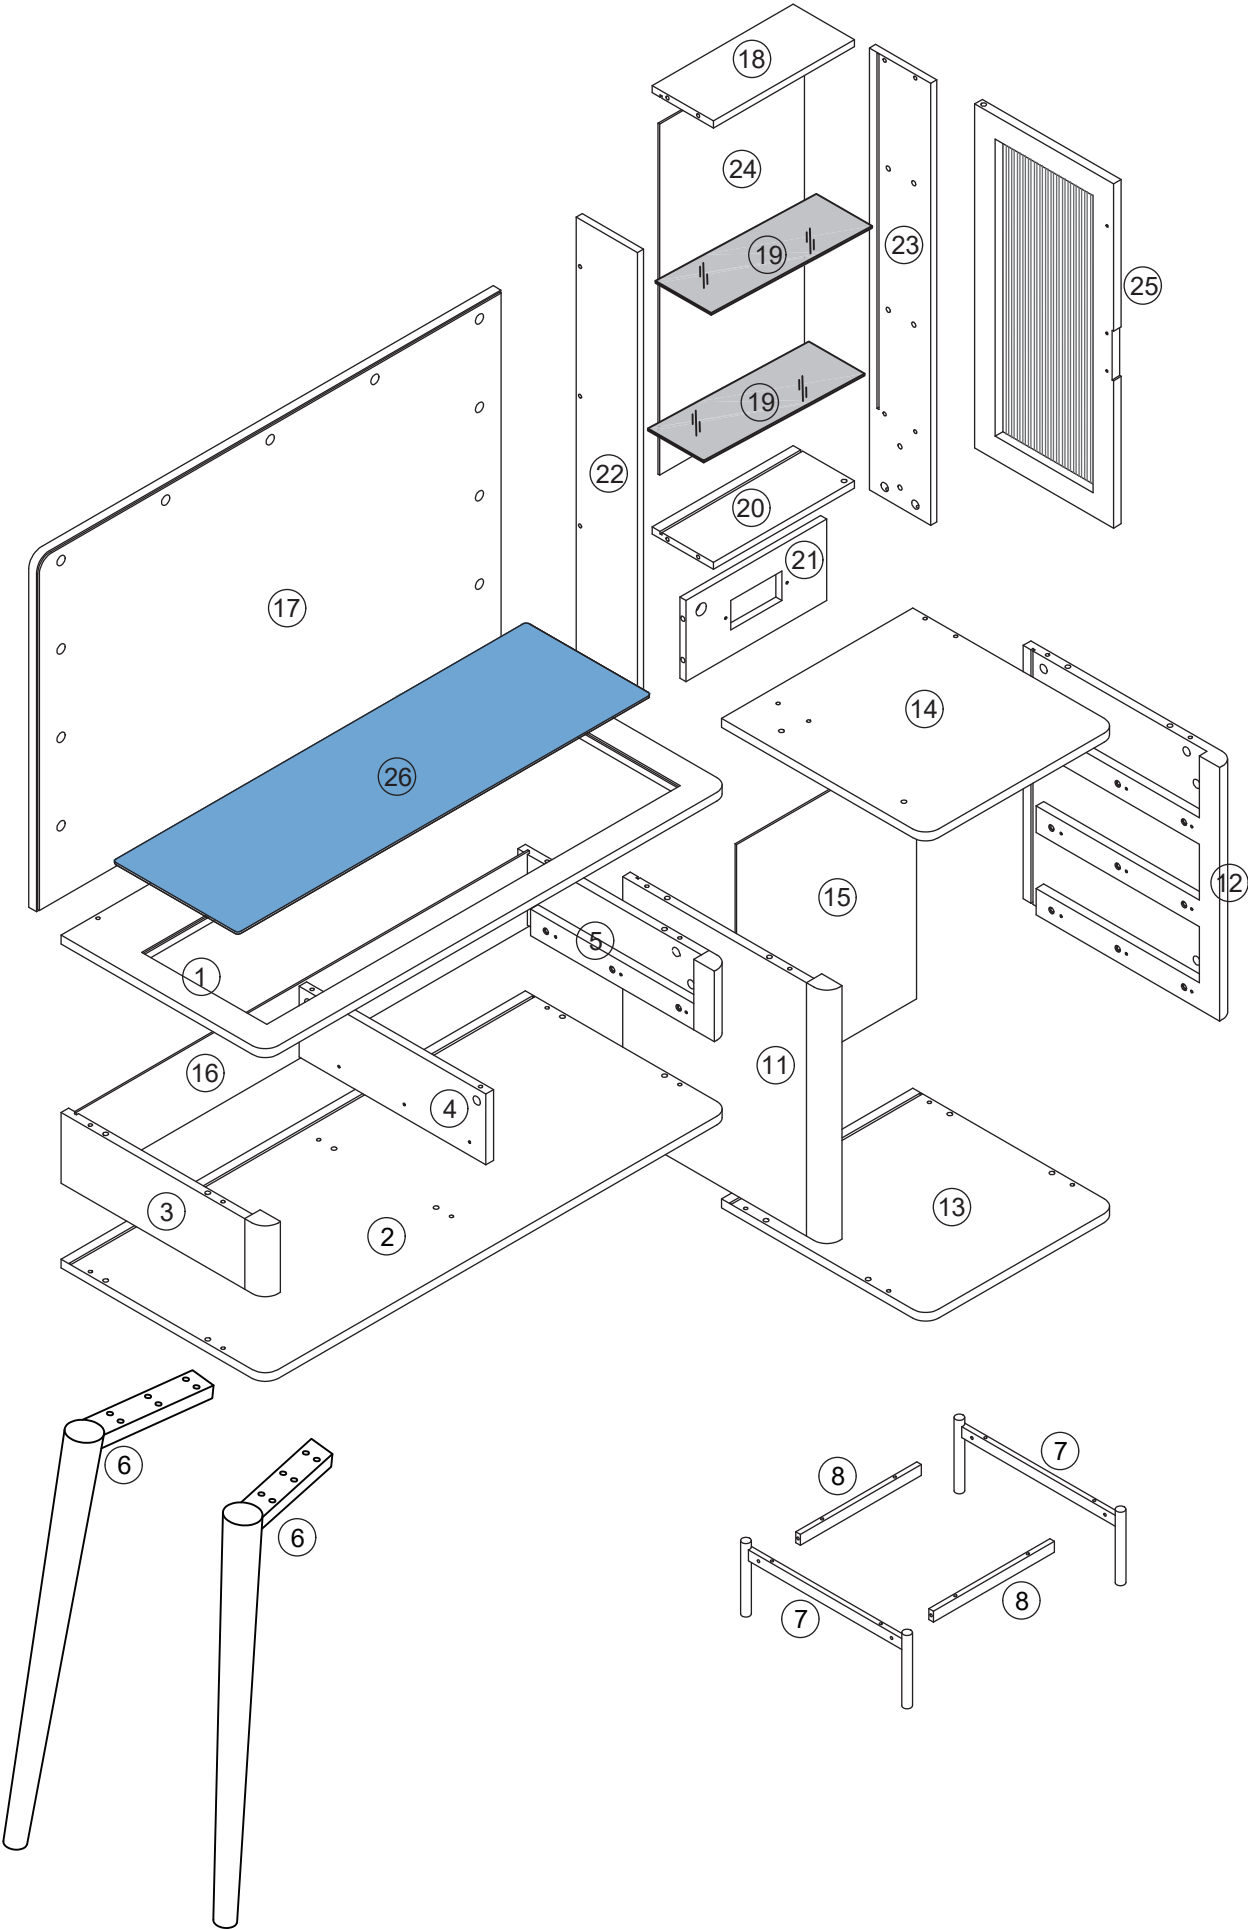


EXPLODED

INSTALLATION
INSTRUCTIONS

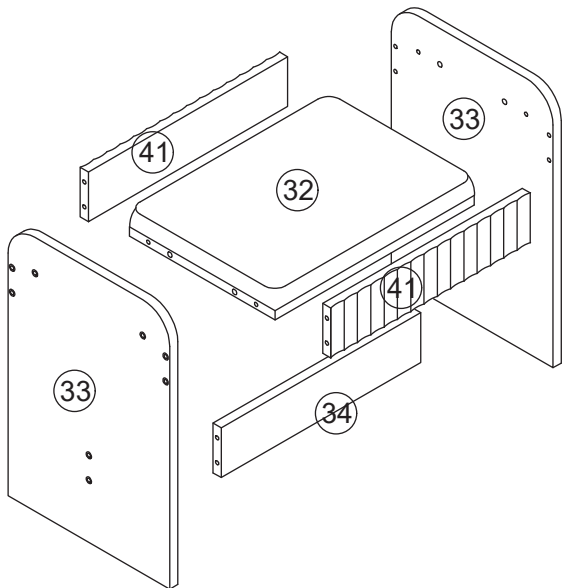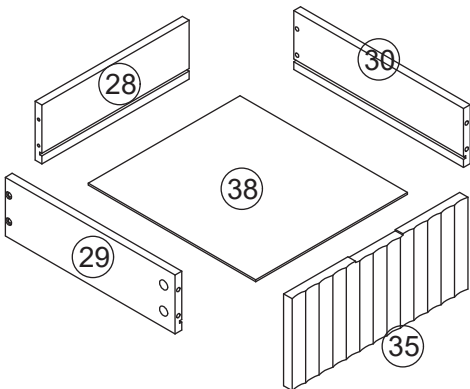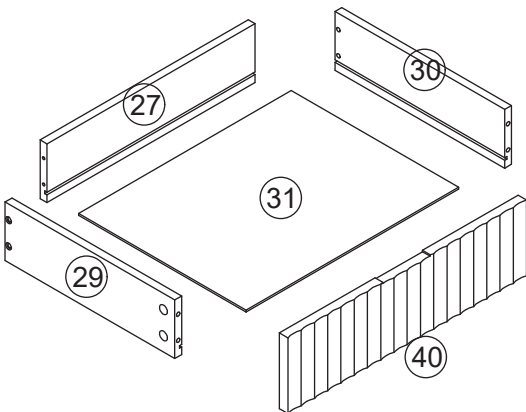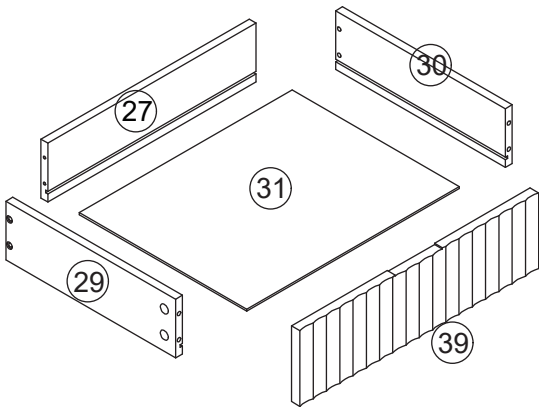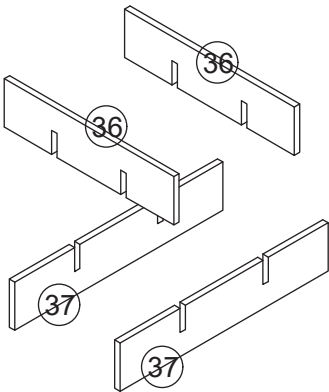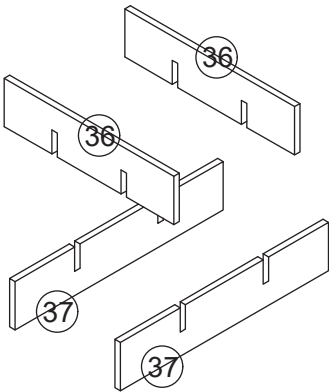


X3


Accessories list

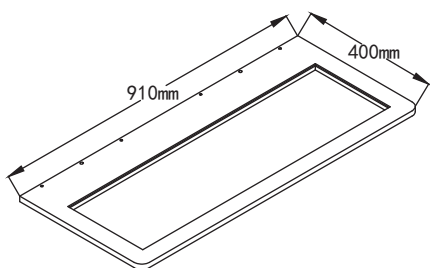


①
Qty: 1

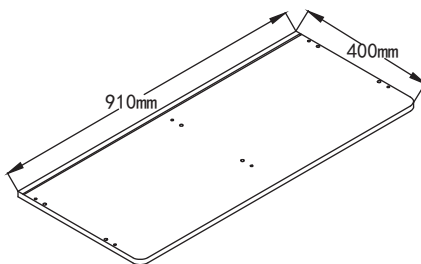


②
Qty: 1

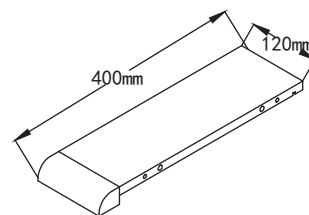


③
Qty: 1

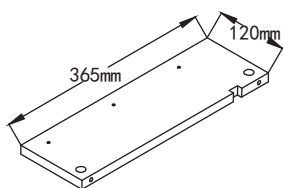


④
Qty: 1

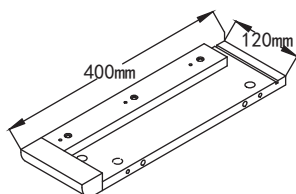


⑤
Qty: 1

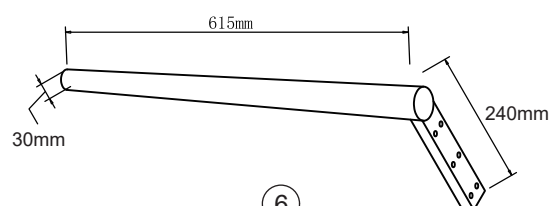


⑥
Qty: 2

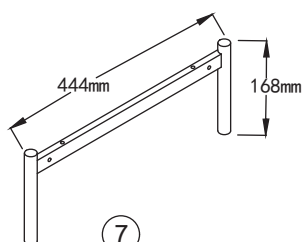


⑦
Qty: 2

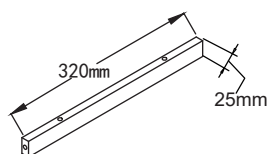


⑧
Qty: 2

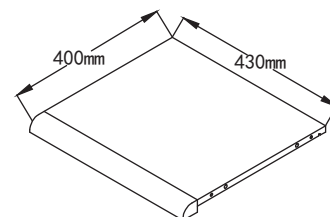


⑪
Qty: 1

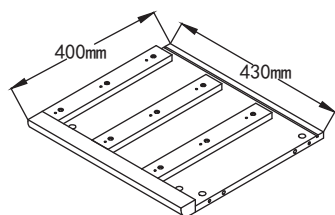


⑫
Qty: 1

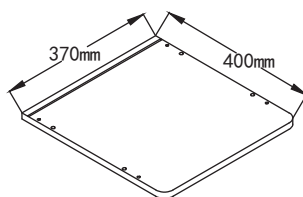


⑬
Qty: 1

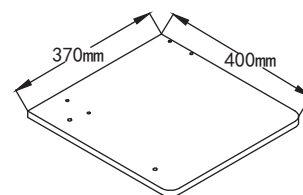


⑭
Qty: 1

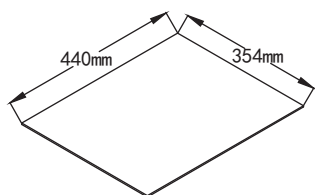

⑮
Qty: 1

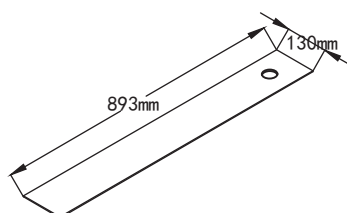


⑯
Qty: 1

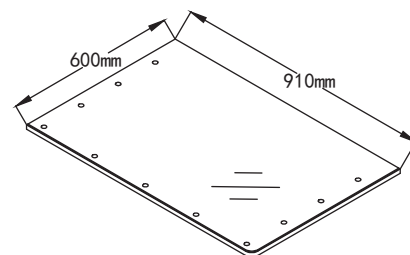


⑰
Qty: 1

In many cases, we include additional hardware. Therefore, after following the assembly instructions, do not worry if there are any extra parts - they are provided as a precautionary measure for convenience.


Accessories list

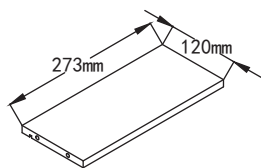


⑱
Qty: 1

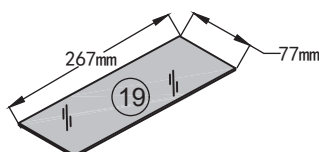


⑲
Qty: 2

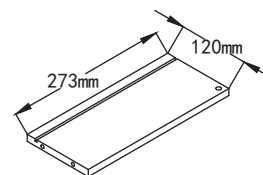


⑳
Qty: 1

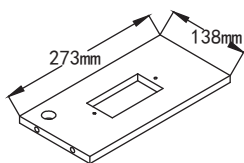


㉑
Qty: 1

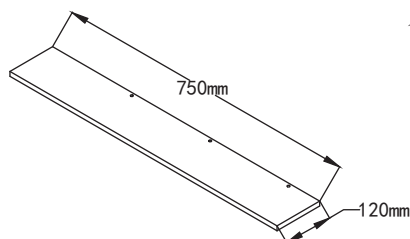


㉒
Qty: 1

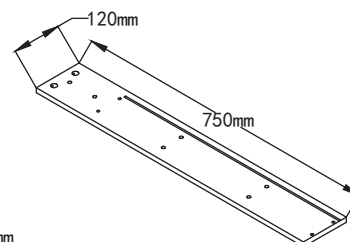


㉓
Qty: 1

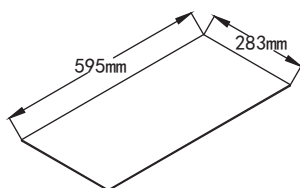


㉔
Qty: 1

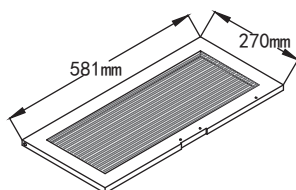


㉕
Qty: 1

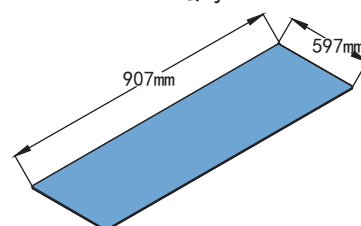


㉖
Qty: 1

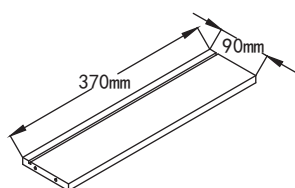


㉗
Qty: 2

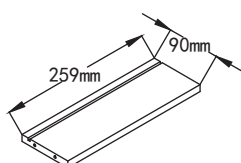


㉘
Qty: 3

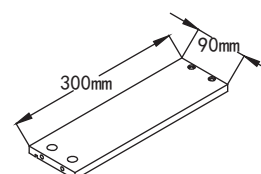


㉙
Qty: 5

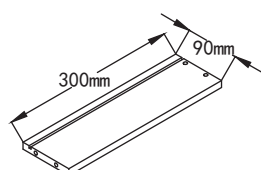

㉚
Qty: 5

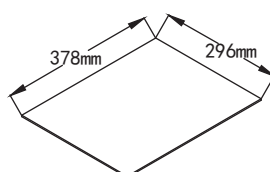


㉛
Qty: 2

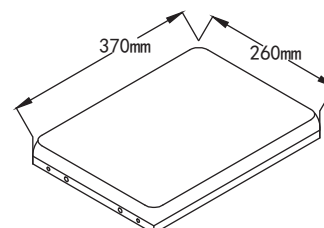


㉜
Qty: 1

In many cases, we include additional hardware. Therefore, after following the assembly instructions, do not worry if there are any extra parts - they are provided as a precautionary measure for convenience.


Accessories list

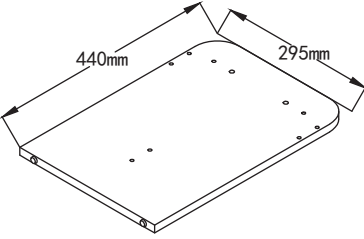


③③
Qty: 2

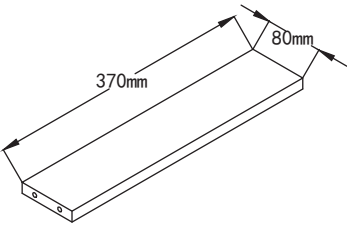


③④
Qty: 1

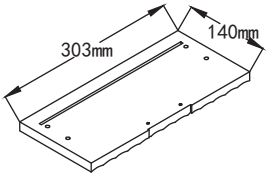


③⑤
Qty: 3

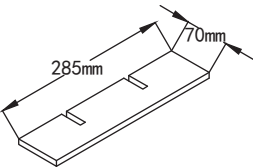


③⑥
Qty: 4

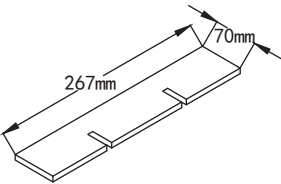


③⑦
Qty: 4

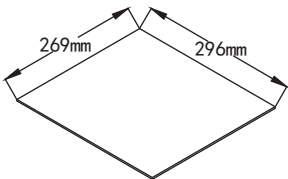


③⑧
Qty: 3

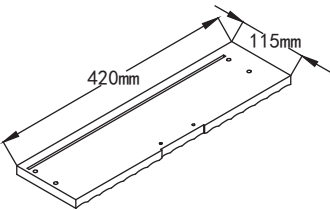

③⑨
Qty: 1

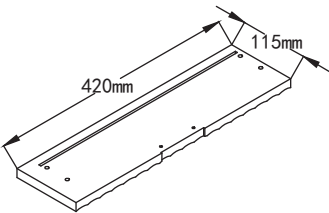


④①
Qty: 1

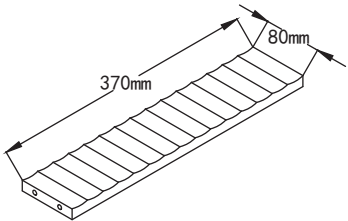

④②
Qty: 2

In many cases, we include additional hardware. Therefore, after following the assembly instructions, do not worry if there are any extra parts - they are provided as a precautionary measure for convenience.








Accessories list

 X48+2 (A) M6.5X35mm	 X48+2 (B) Ø15X9.5mm	 X26+2 (C) M6X30mm	 X23+2 (D) M4X40mm	 X10+1 (E) M5X40mm
 X1 (F) M3mm	 X4 (G) M4X35mm	 X6 (H)	 X1 (I)	 X2 (J)
 X1 (K) M35X12mm	 X16+1 (L)	 X18+1 (M) M3X14mm	 X16+1 (N) M6X35mm	 X14+1 (O) M3X12mm
 X62+1 (P) M3.5X12mm	 X1 (Q)	 X2 (R) M6X25mm	 X2 (S)	 X4 (T) M6X45mm
 X1 (U)	 X8 (V)	 X16+1 (W) Ø20mm	 X1 (X)	 X1 (Y) M4mm
 X2 (Z) M4X12mm	 X2 (a) M3.5X12mm	 X16+1 (c) M5X40mm	 X10 X1 X11 X1 (d)	 X1 (f)
 X1 (g)	 X5 (h)	 X5 (CL) 300mm	 X5 (CR) 300mm	 X5 (DR) 300mm
 X5 (DL) 300mm				

In many cases, we include additional hardware. Therefore, after following the assembly instructions, do not worry if there are any extra parts - they are provided as a precautionary measure for convenience.





step 1

INSTALLATION INSTRUCTIONS

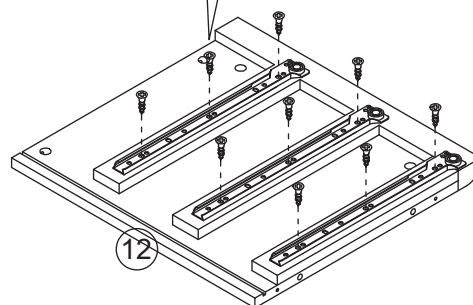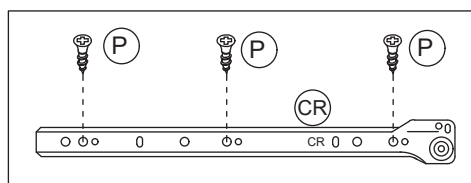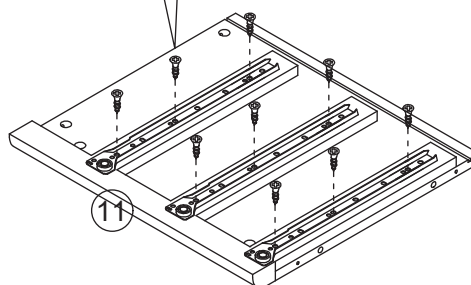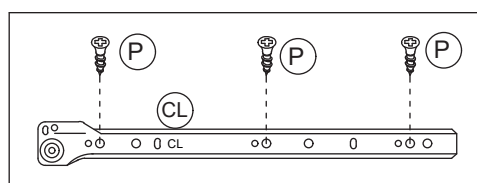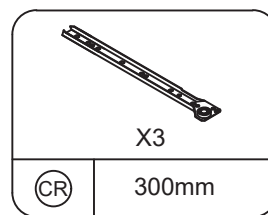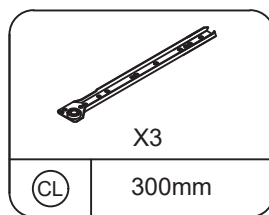
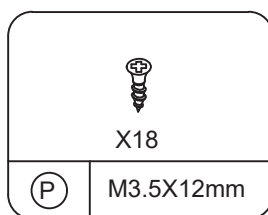


step 2



INSTALLATION INSTRUCTIONS

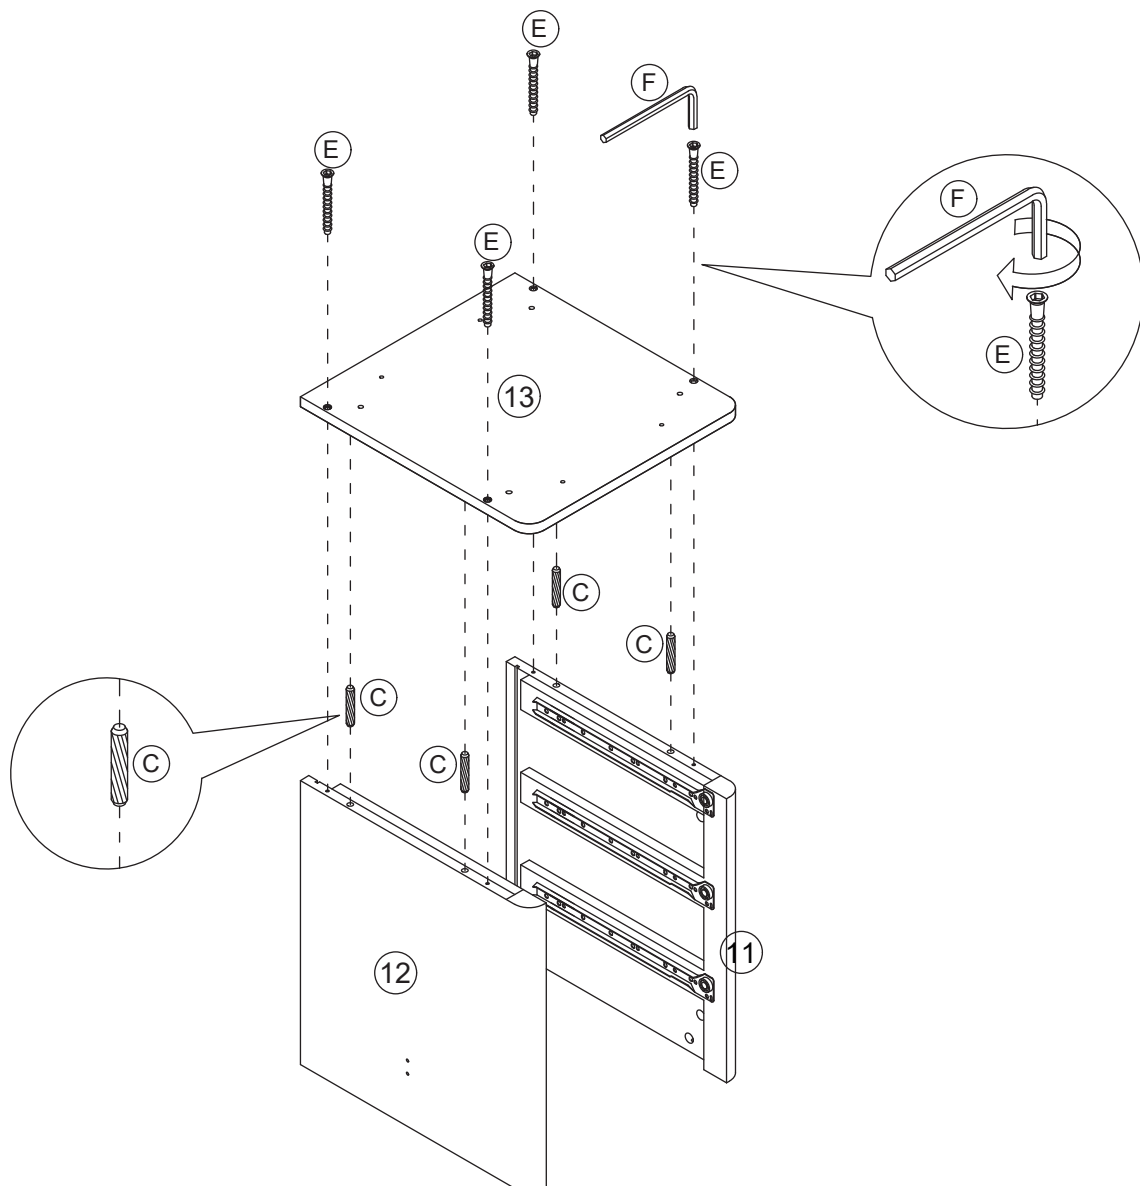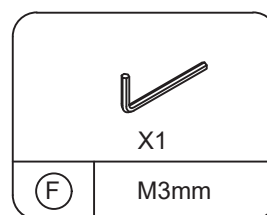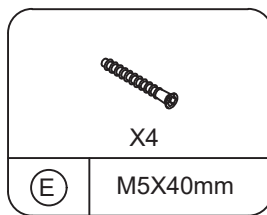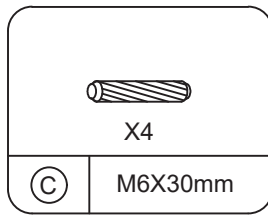



step 4

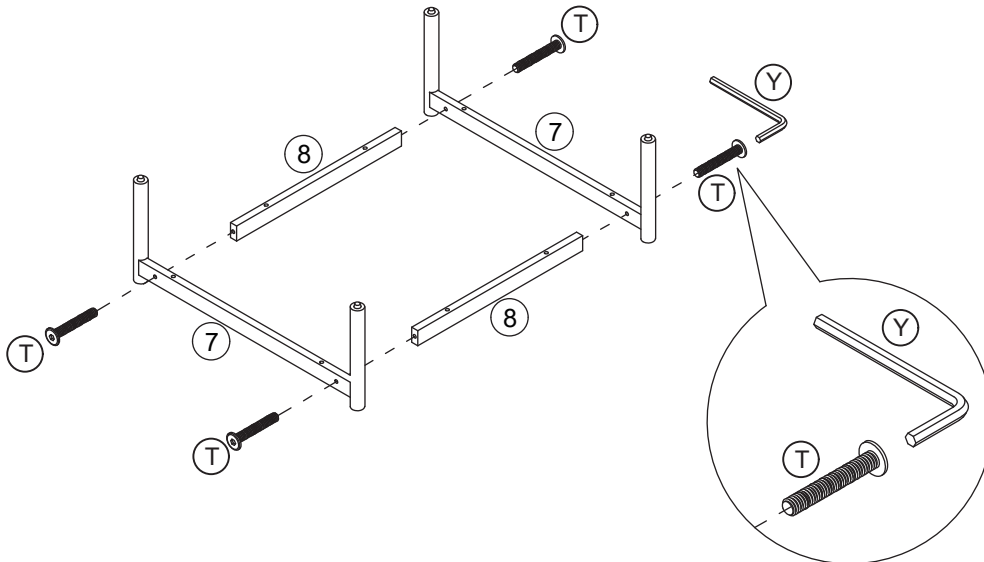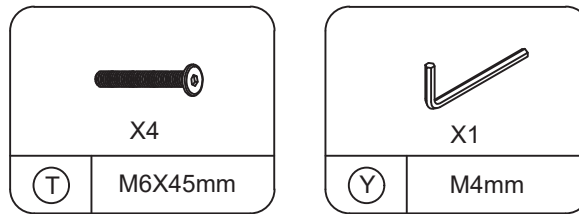




step 5

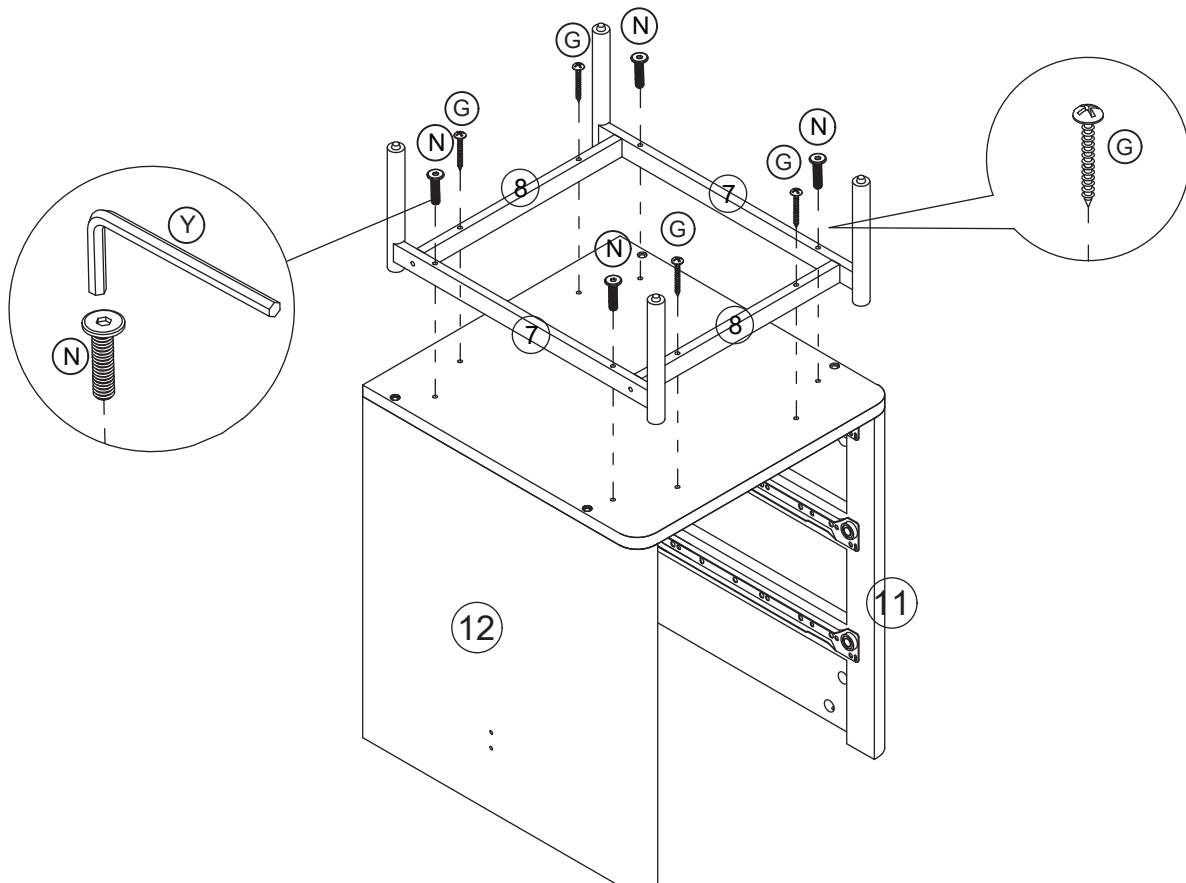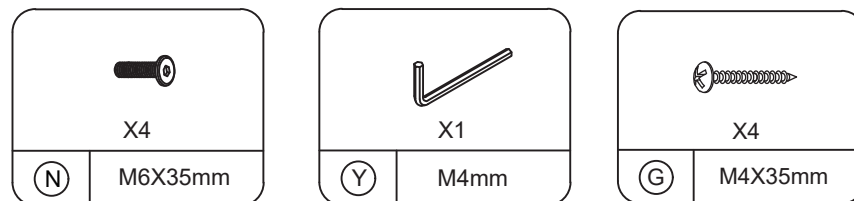


step 6

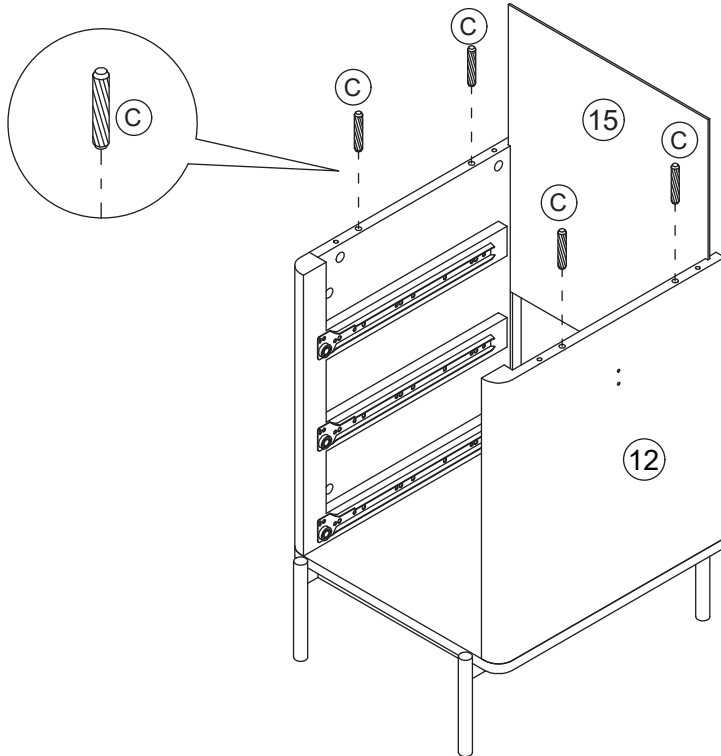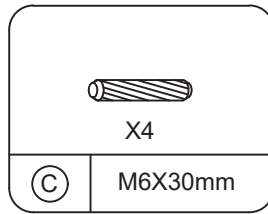


step 7

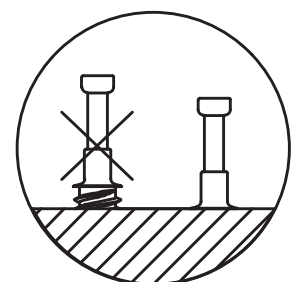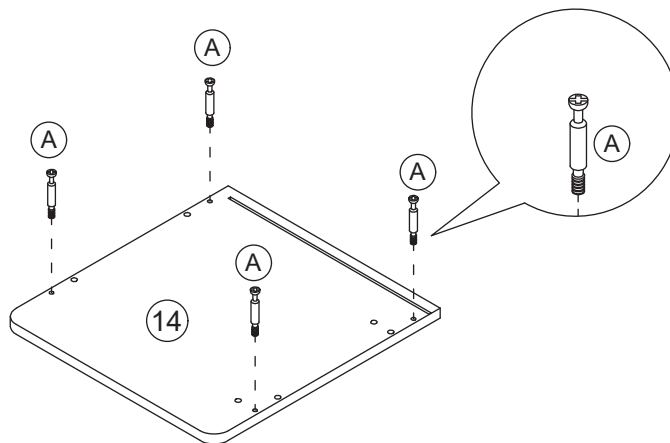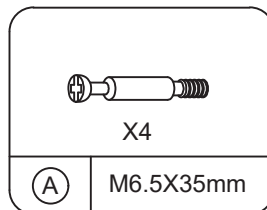

step 8


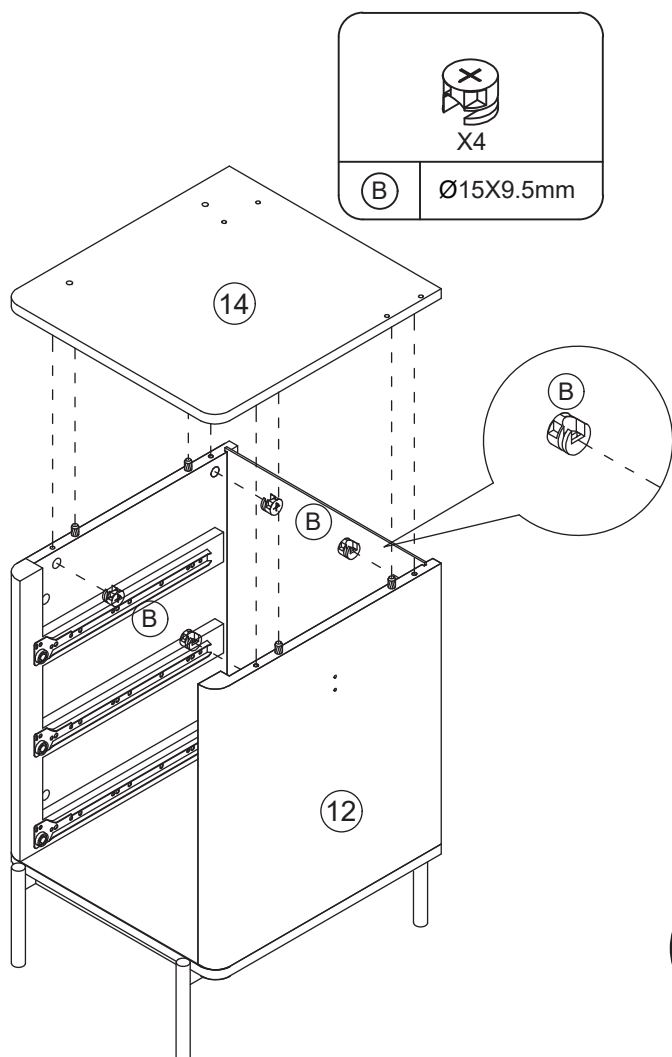


Insert the cam bolt into the hole first, then insert the cam lock and lock it.





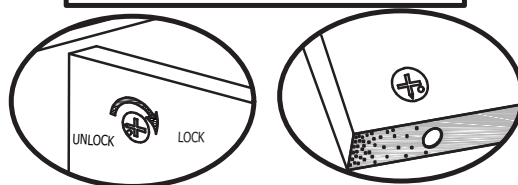


Proper orientation of CAM LOCK


step 9

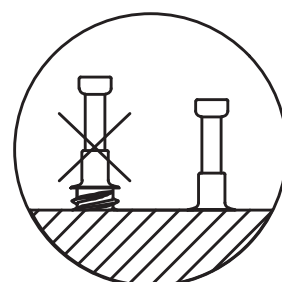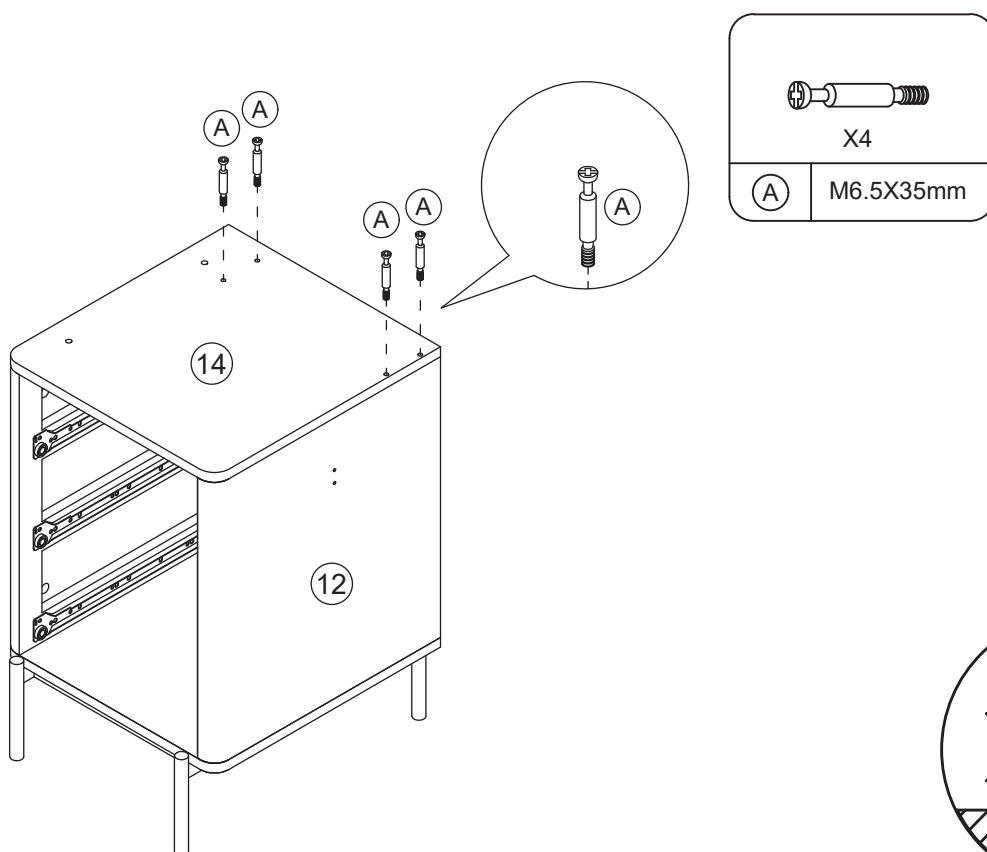


step 10

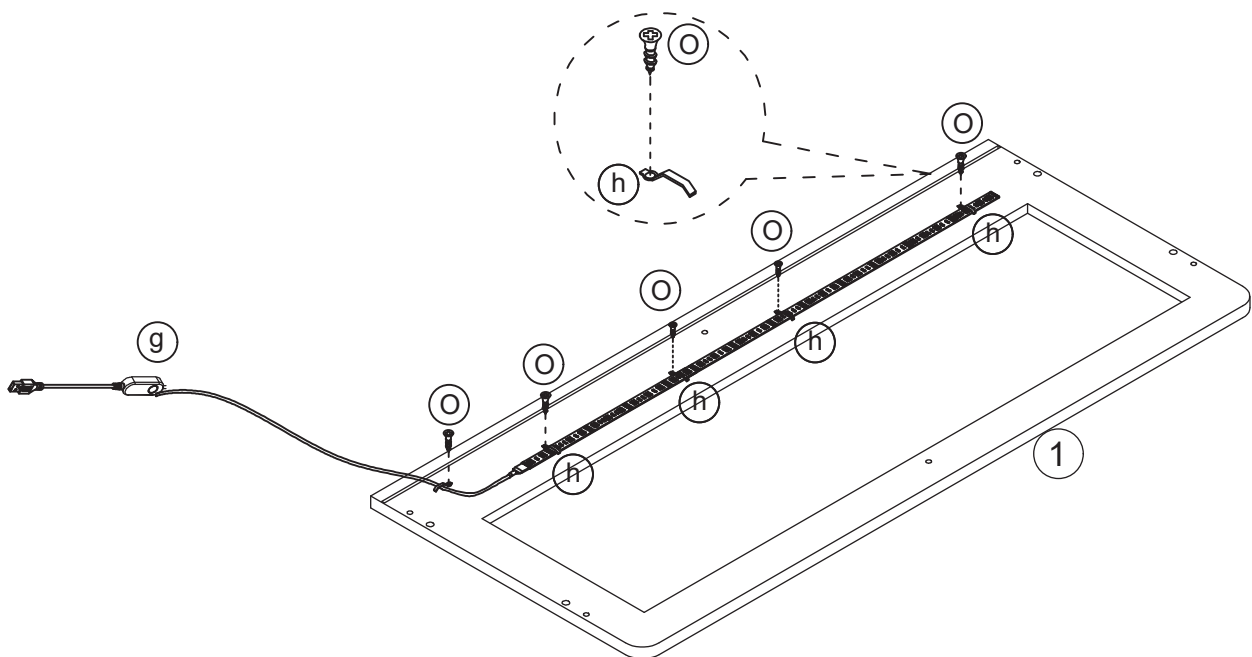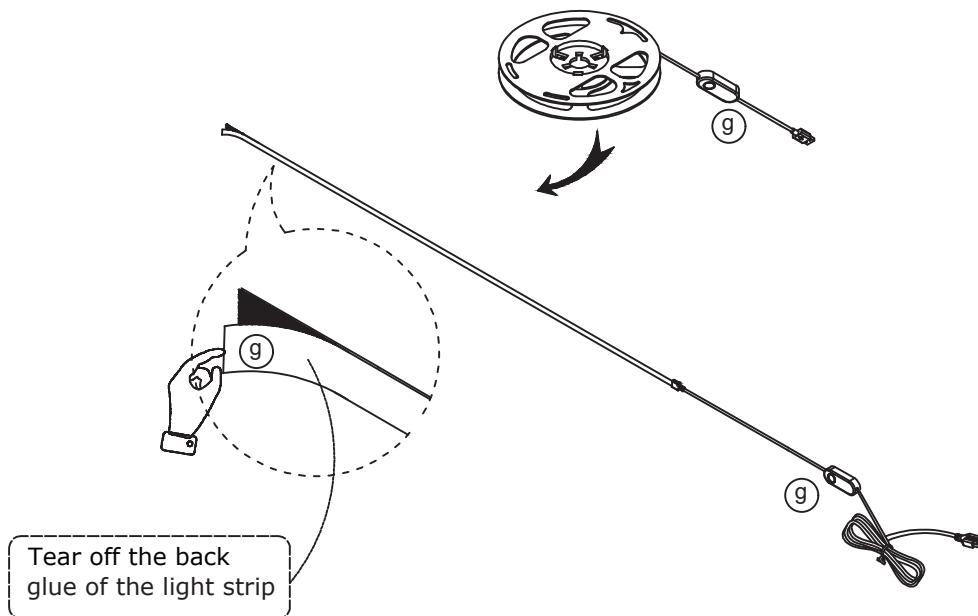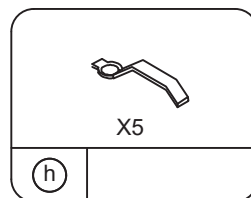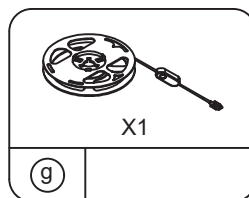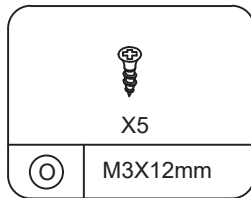








step 10

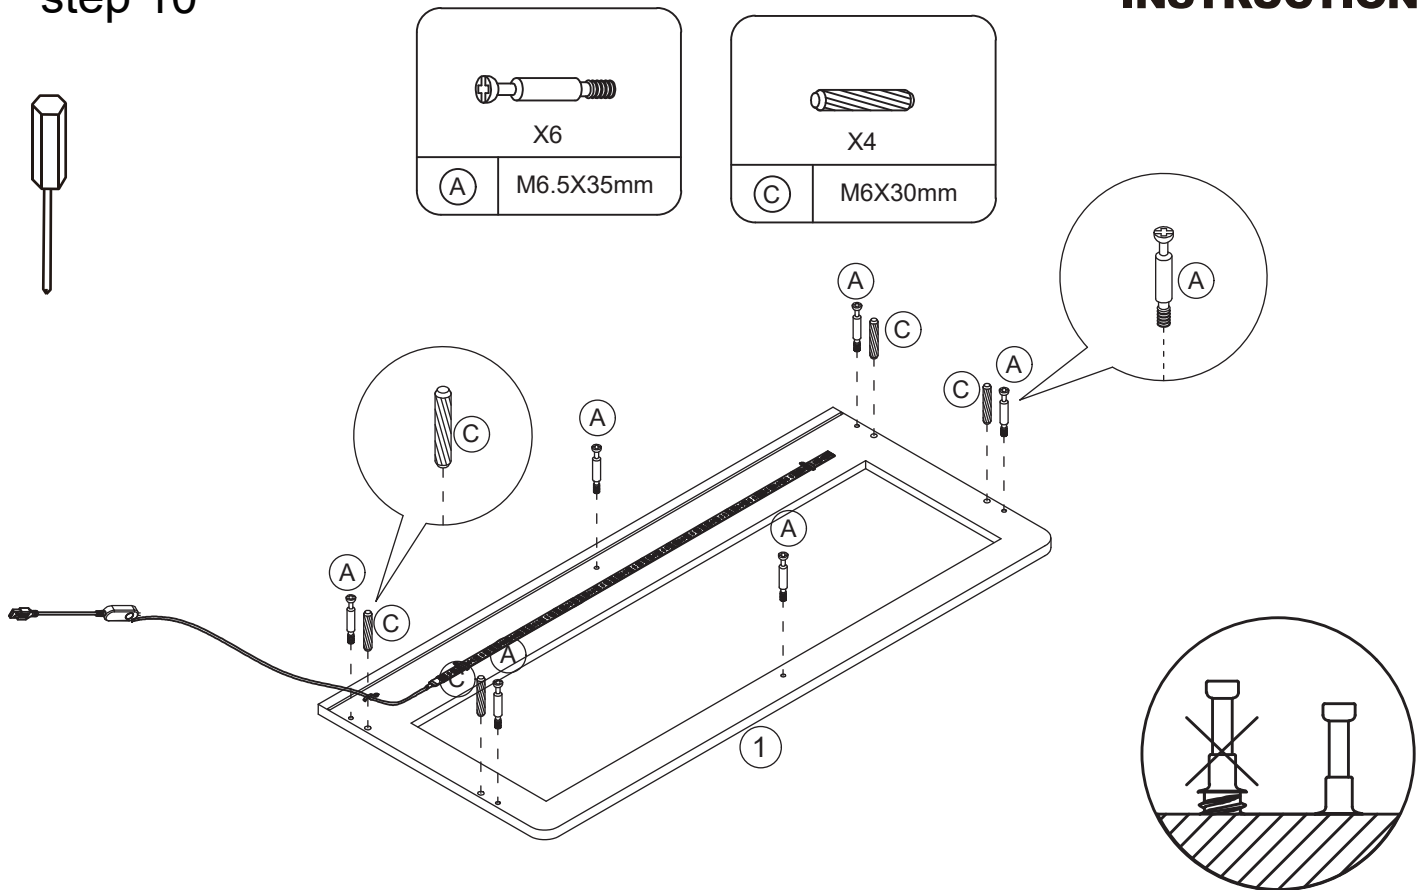



step 11

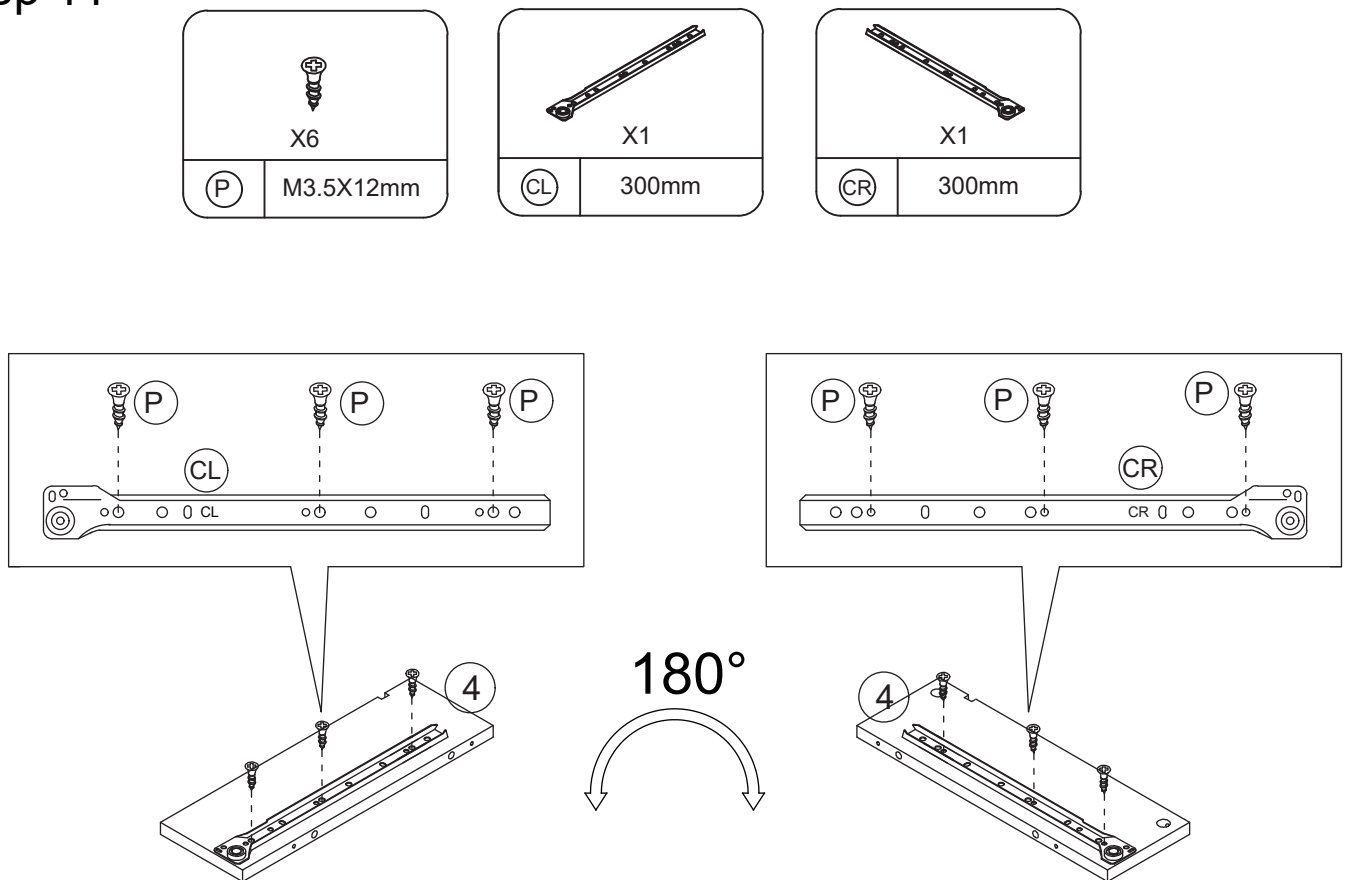



step 12

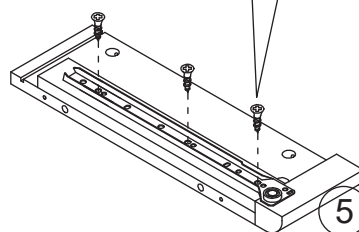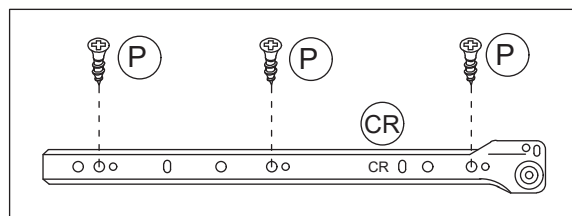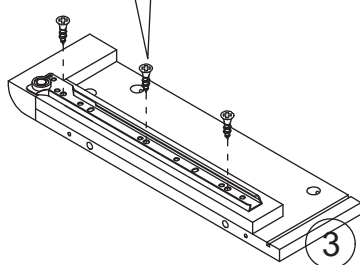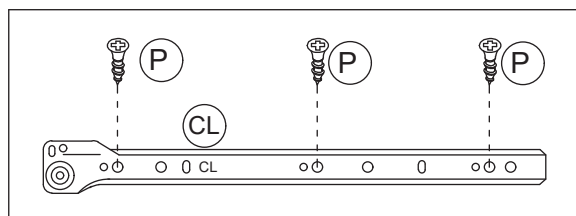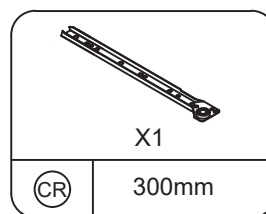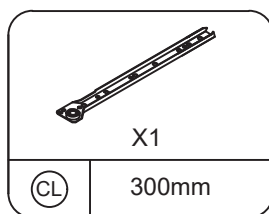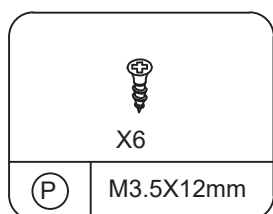

step 13

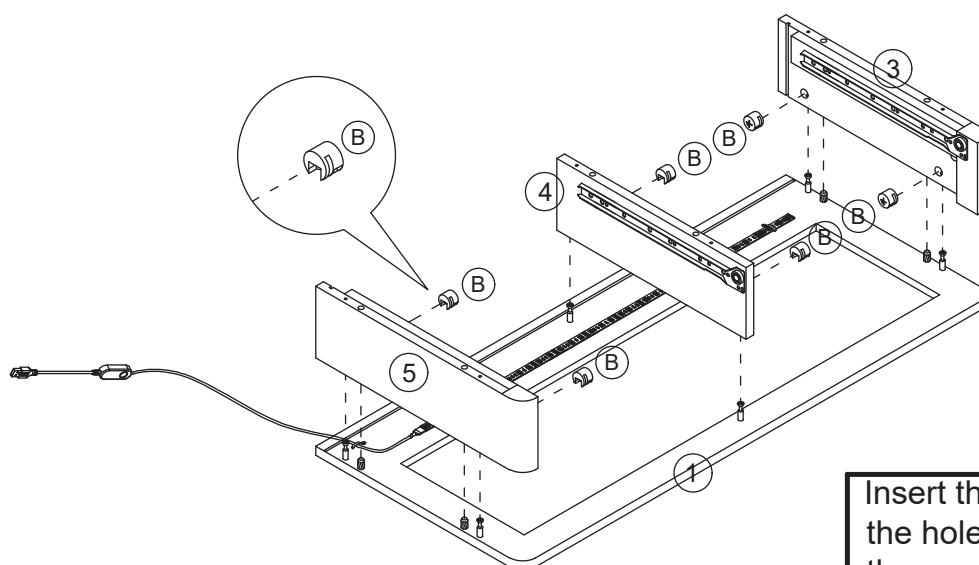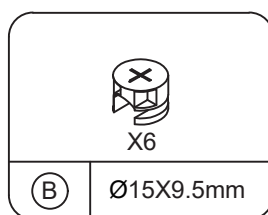


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

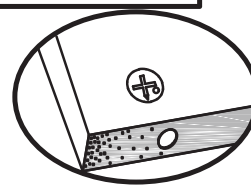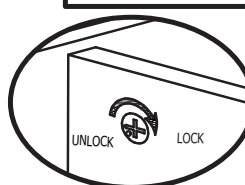


Proper orientation of CAM LOCK

step 14



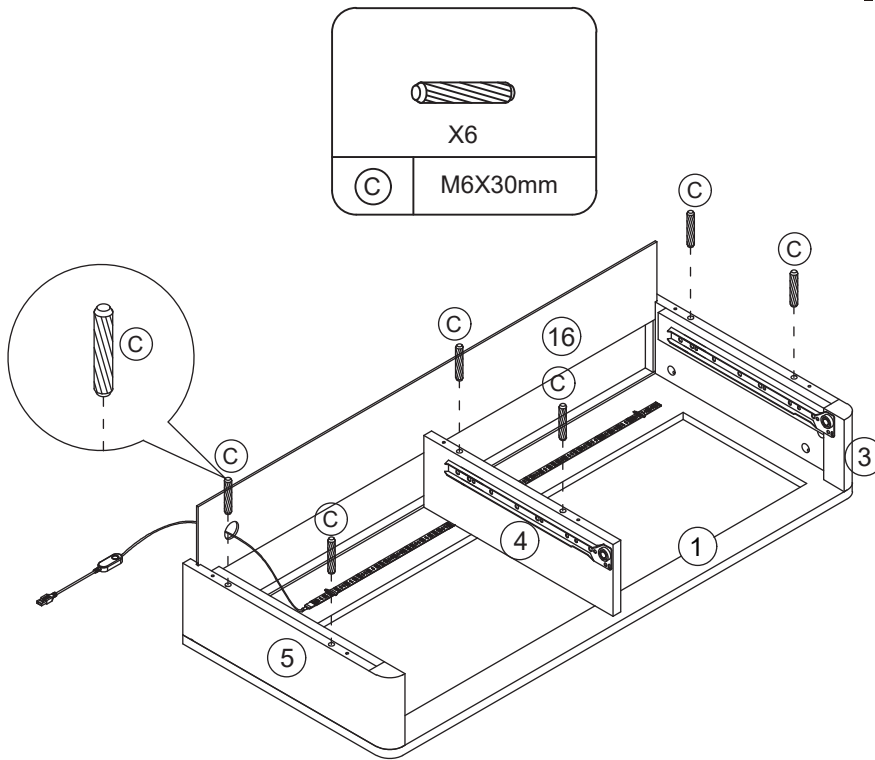




step 15

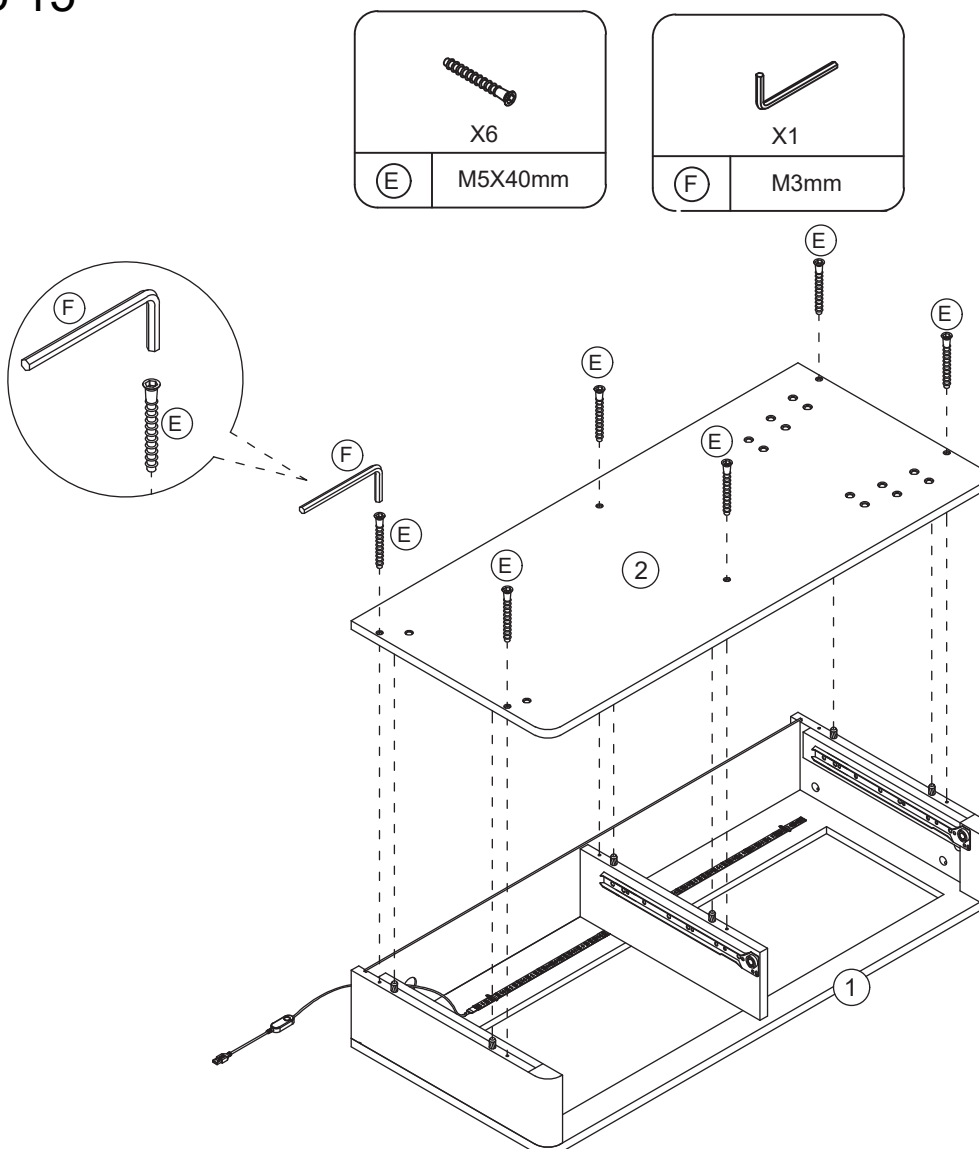








step 16

INSTALLATION INSTRUCTIONS

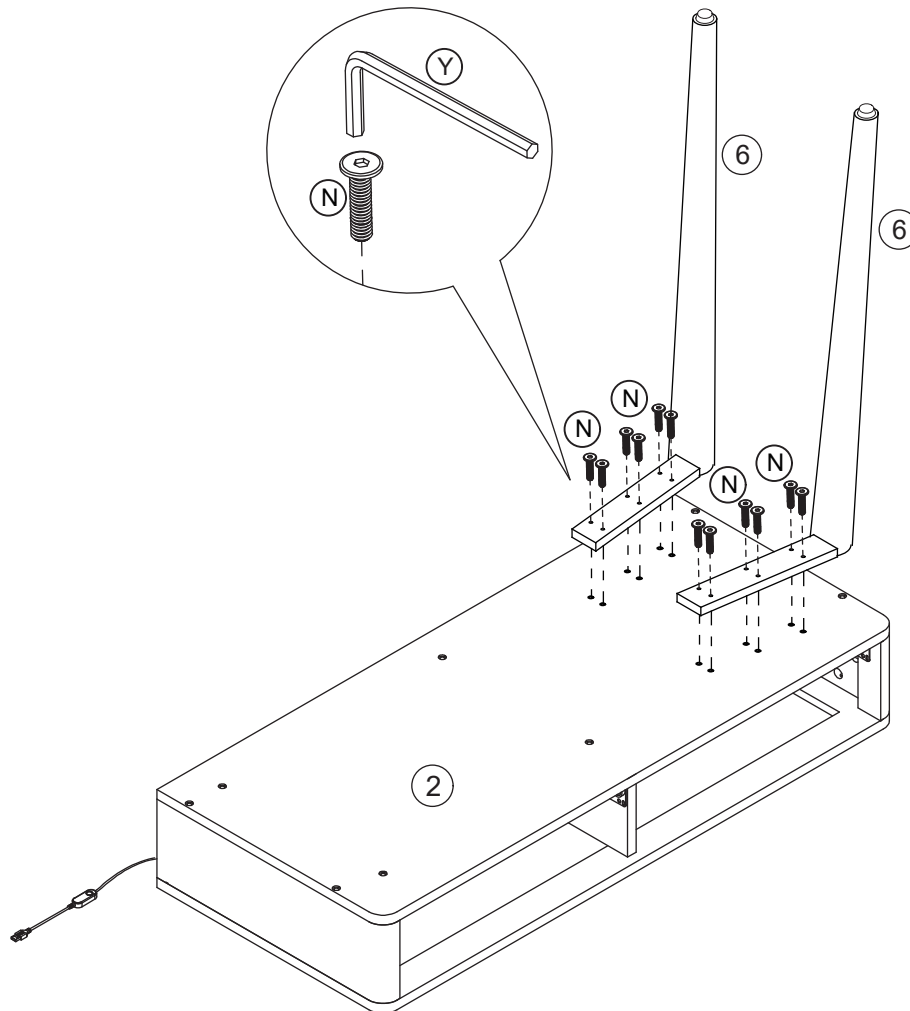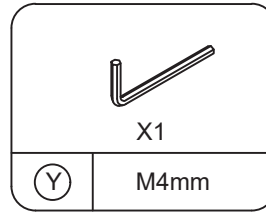
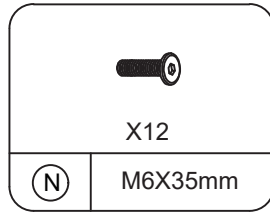


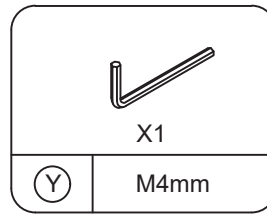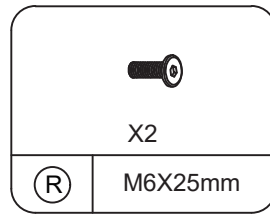


step 18

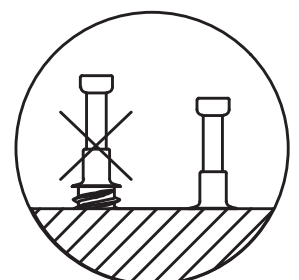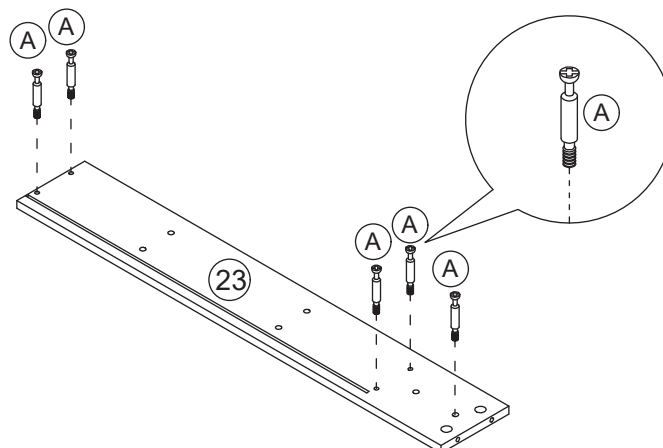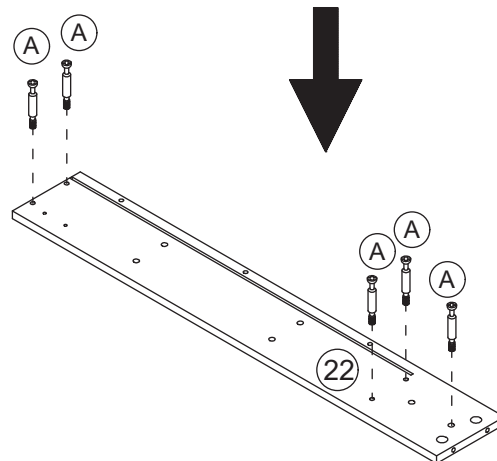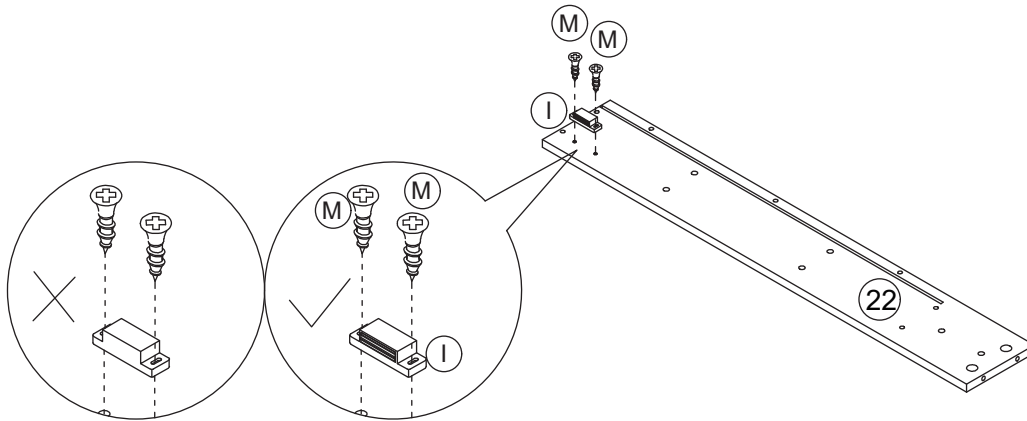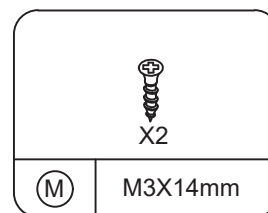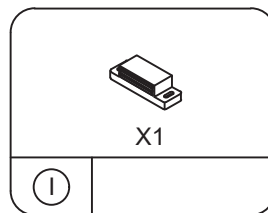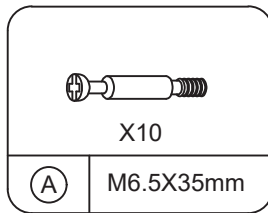

step 19



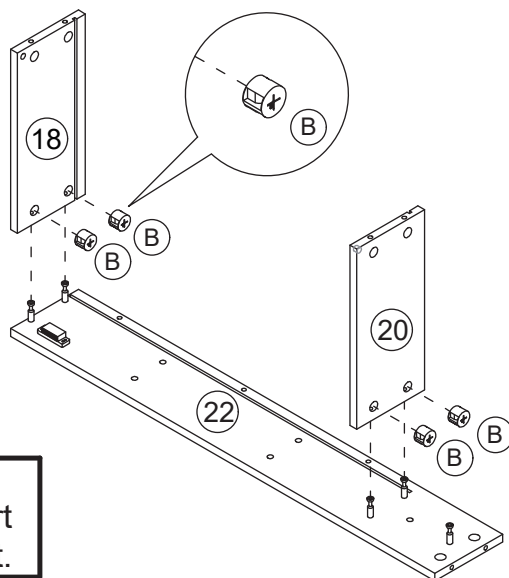
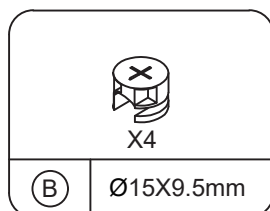


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


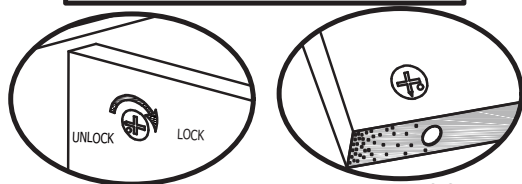


Proper orientation of CAM LOCK


step 20

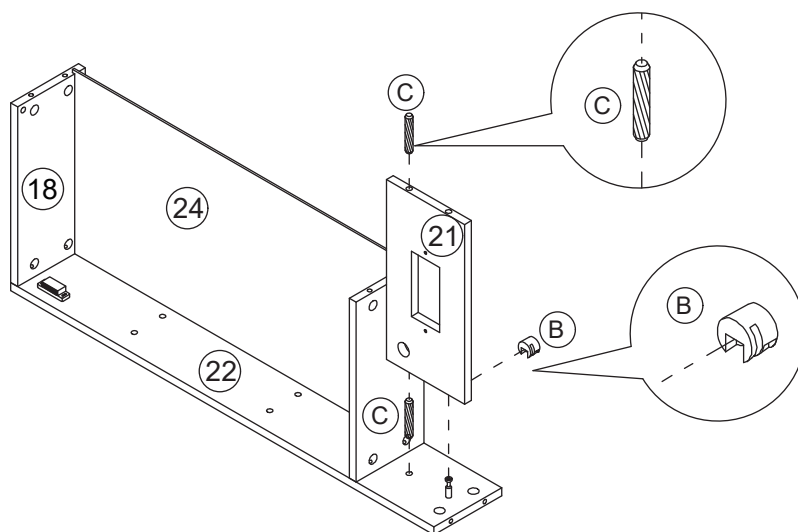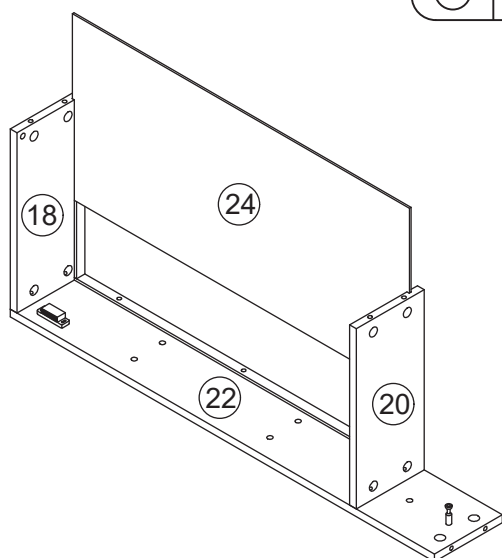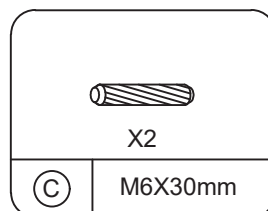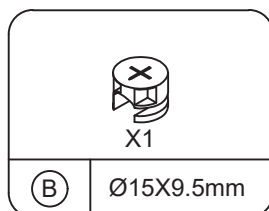


step 21

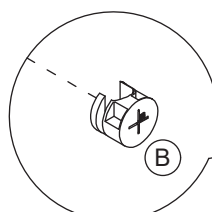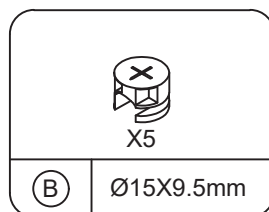




Insert the cam bolt into the hole first, then insert the cam lock and lock it.


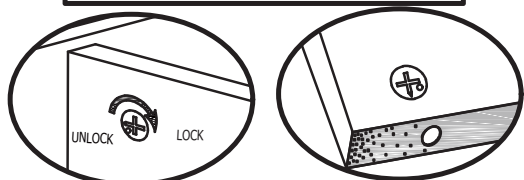


Proper orientation of CAM LOCK


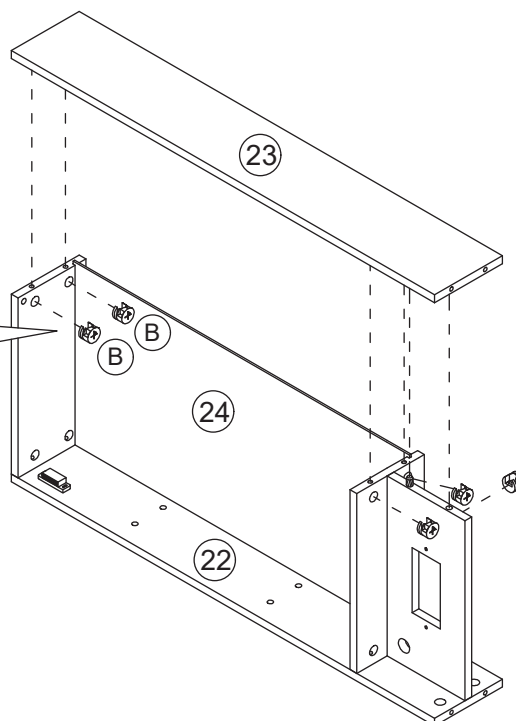


step 22

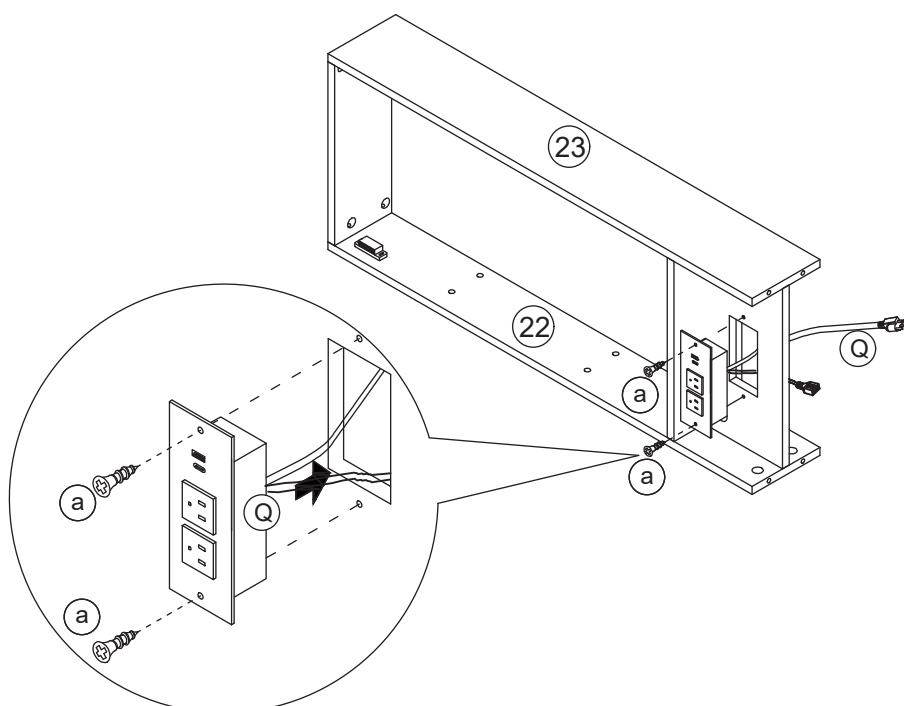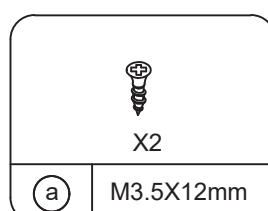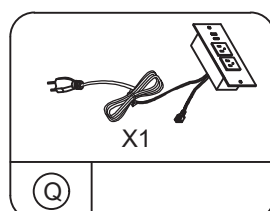

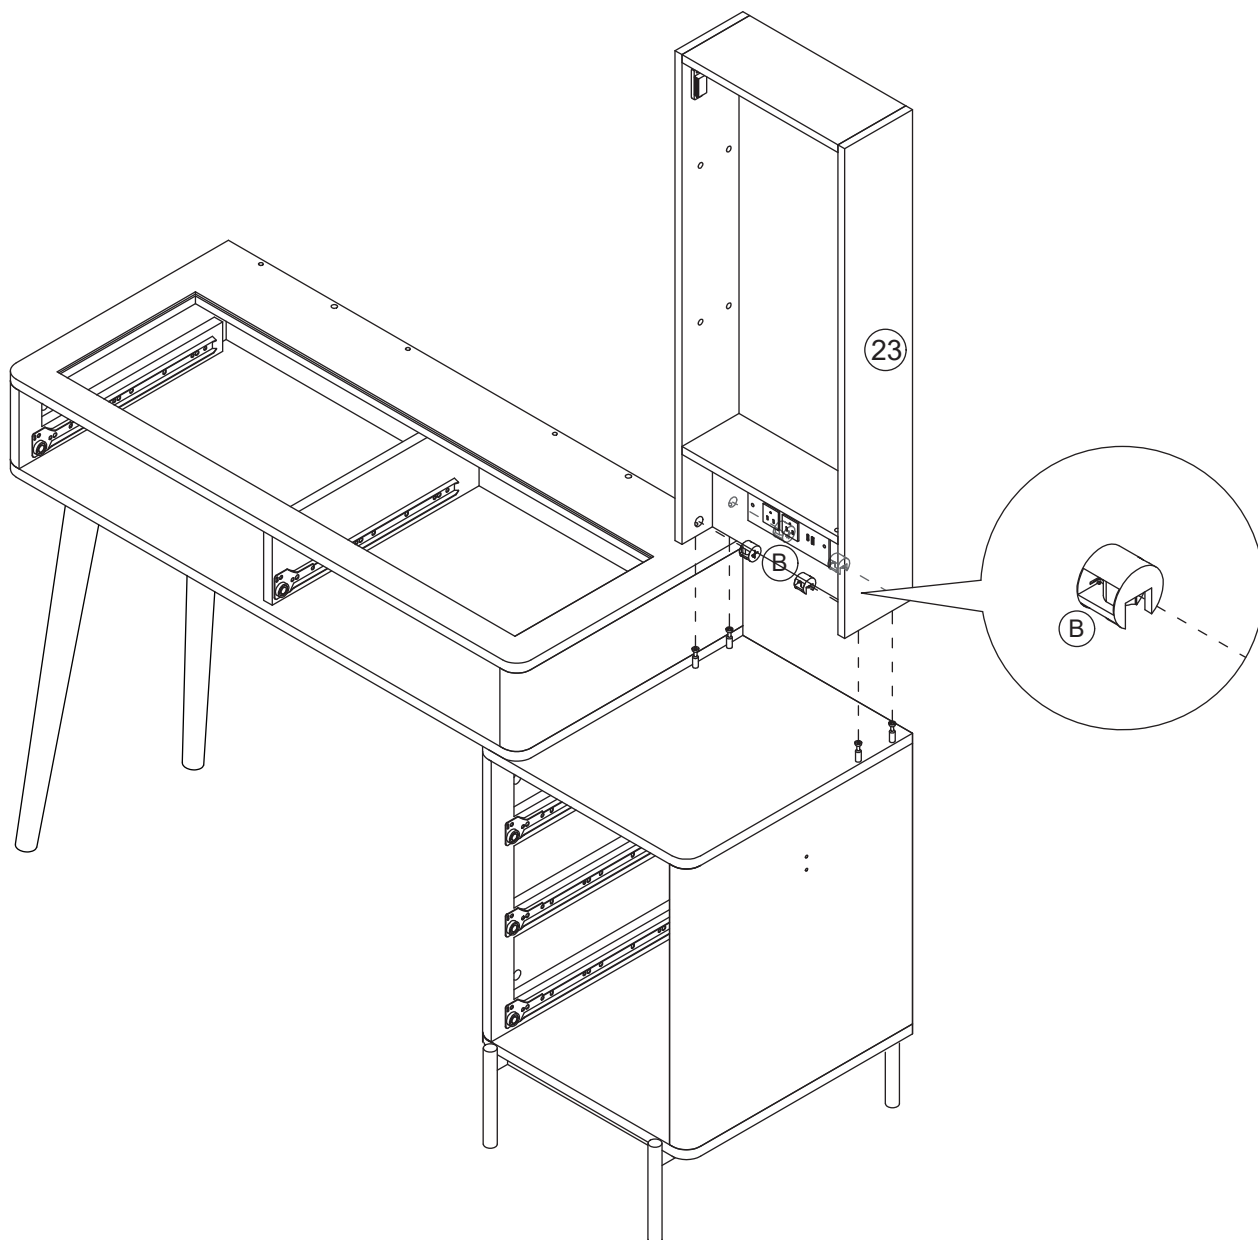
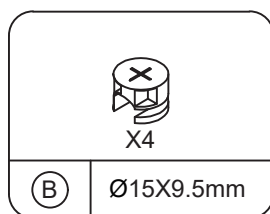


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

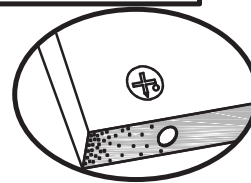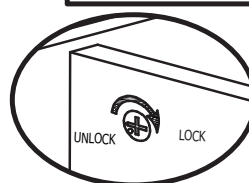


Proper orientation of CAM LOCK

step 24

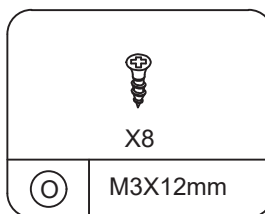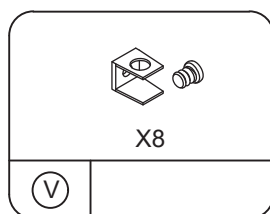


Step 1

Fix 12# with 7# Screw

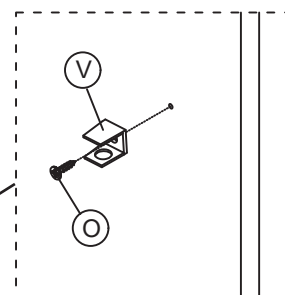



Step 2

Put the W part
into 12# slot

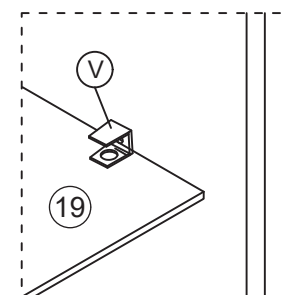







Step 3


Rotate 12# to secure
the W part



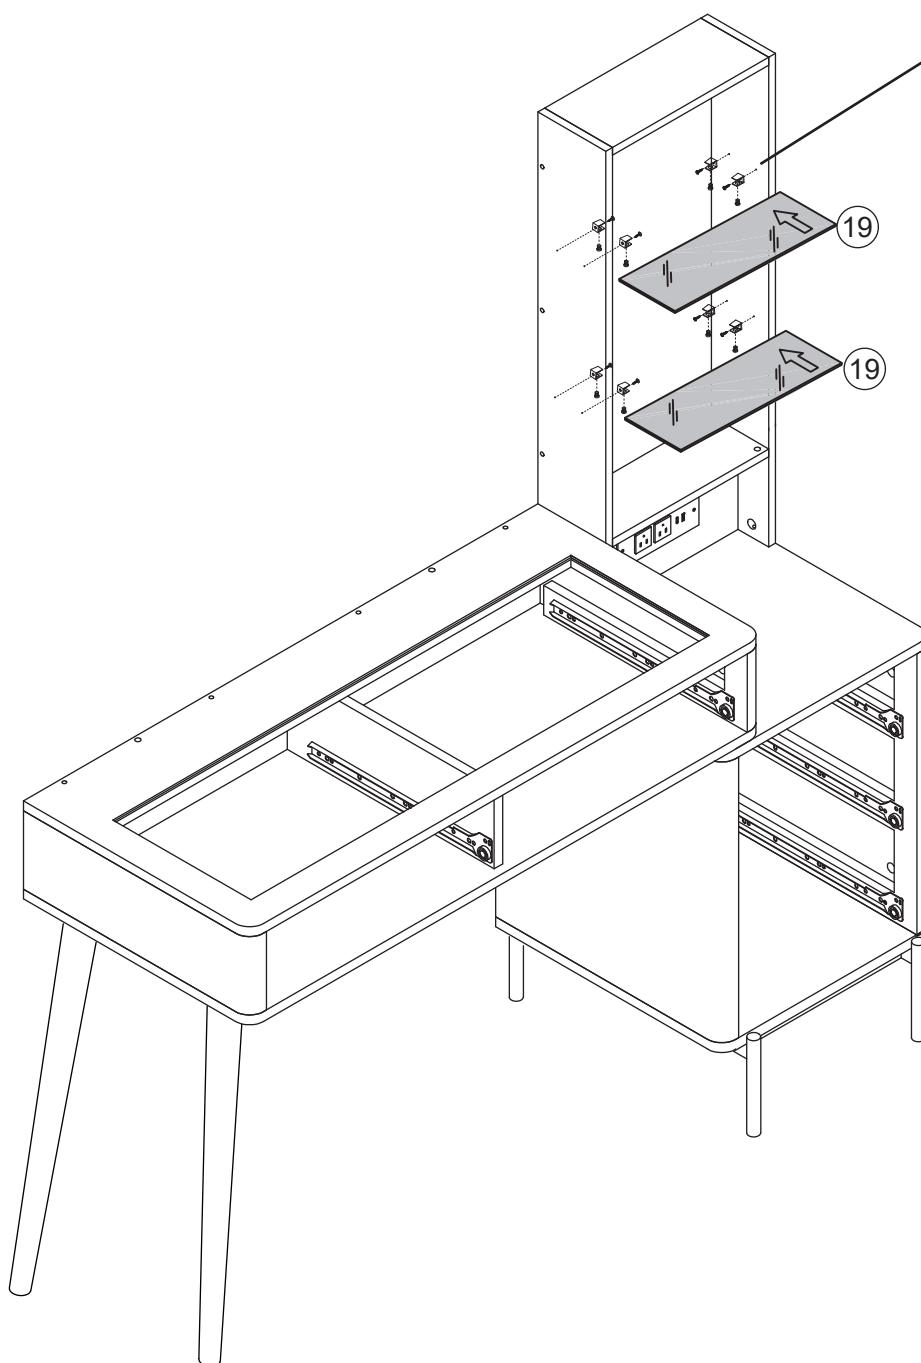
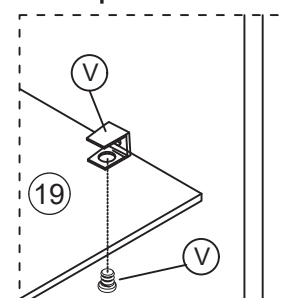




step 25

INSTALLATION INSTRUCTIONS

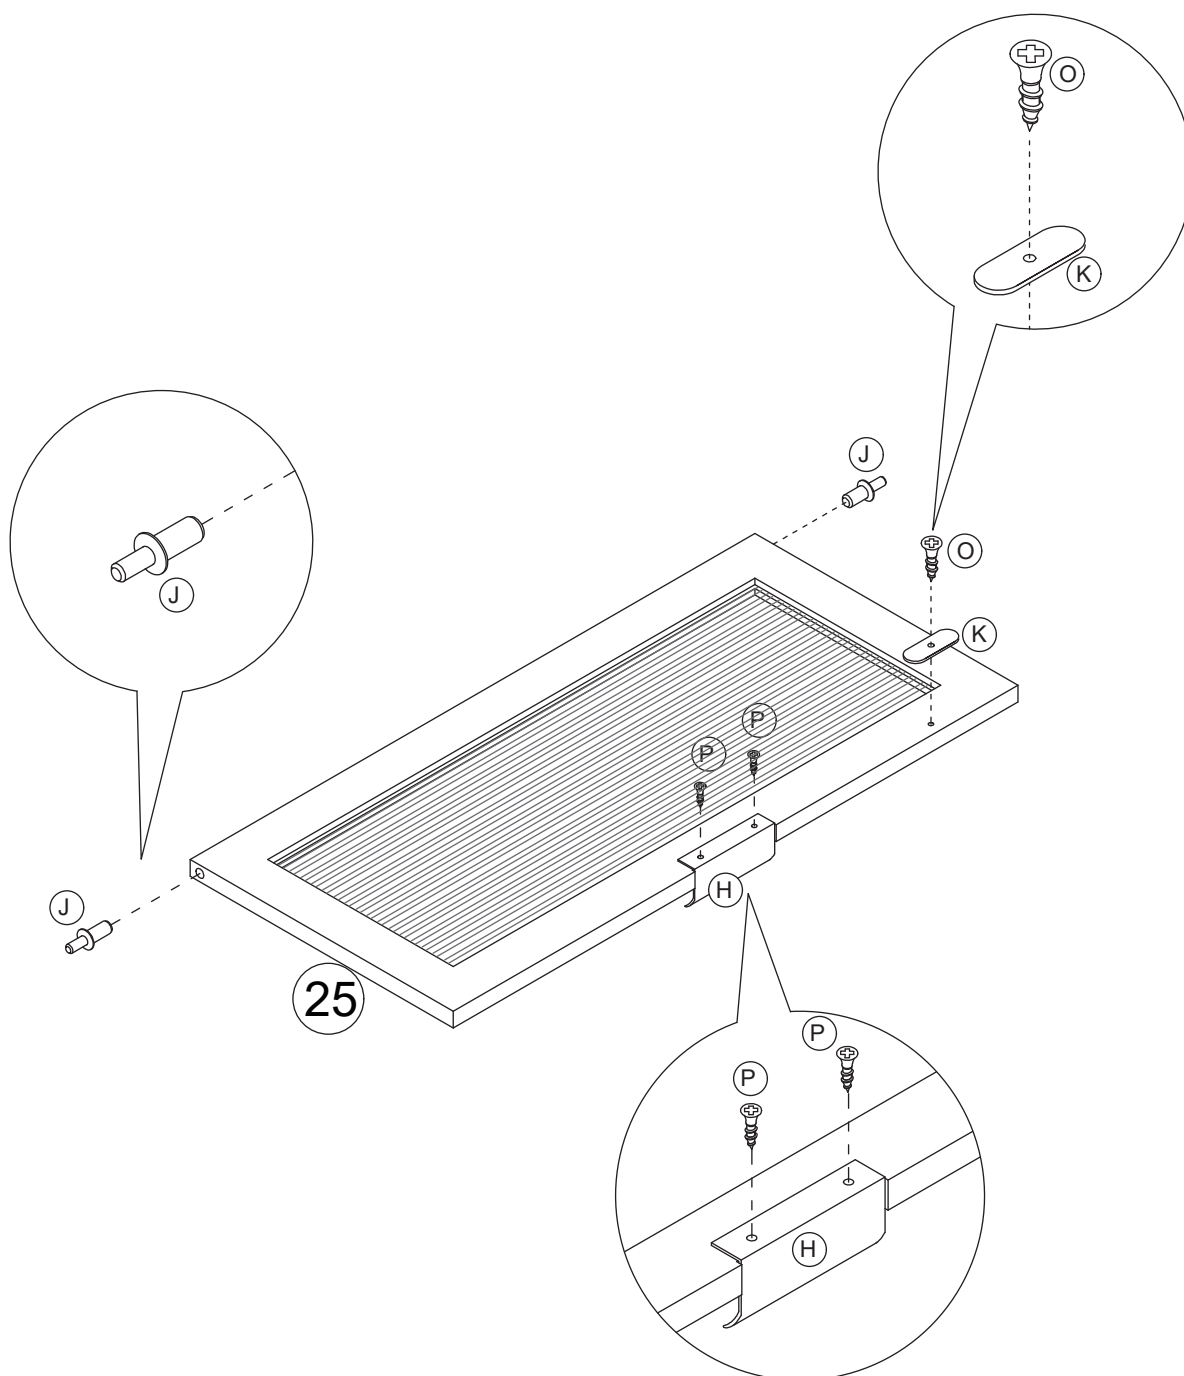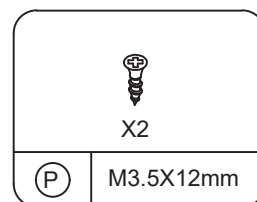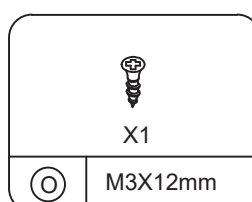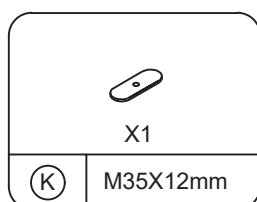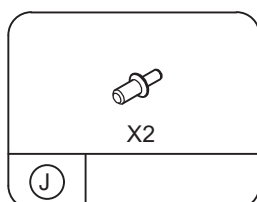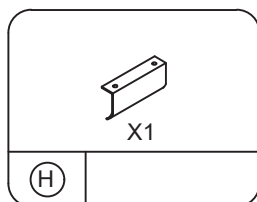


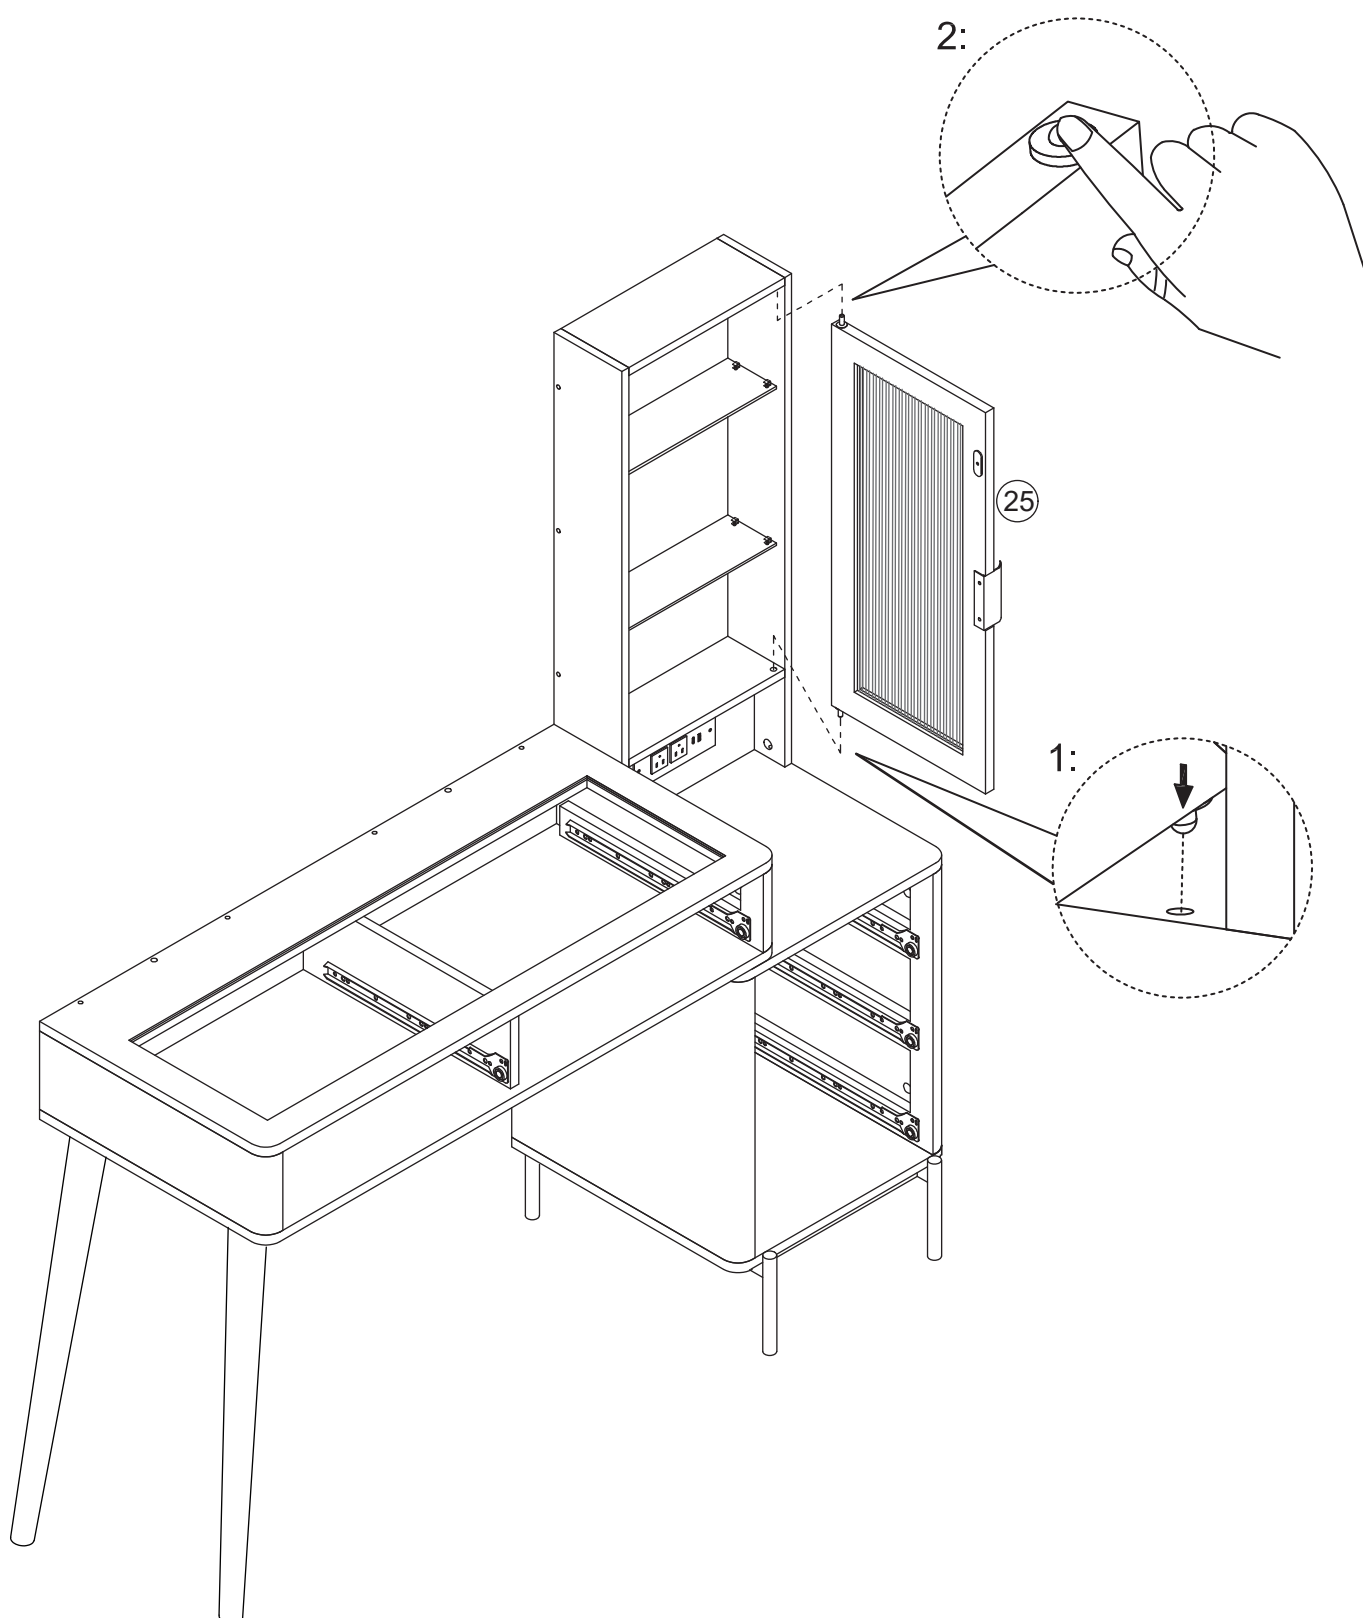

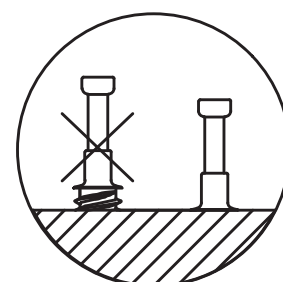
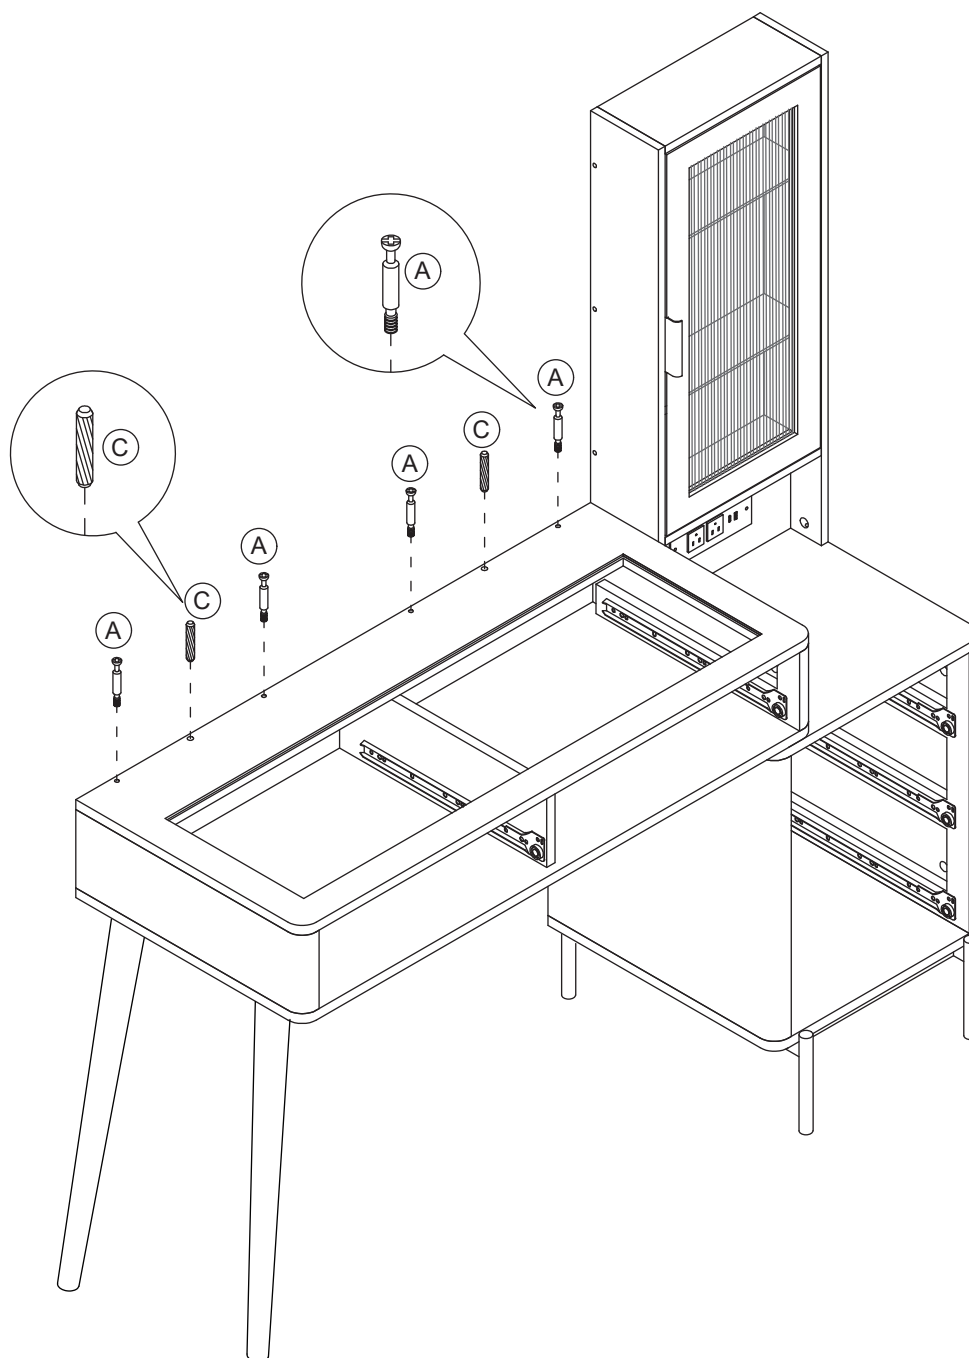
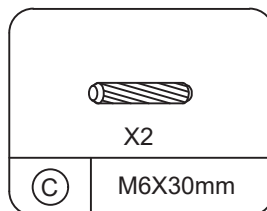
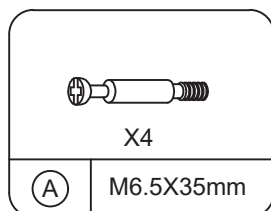


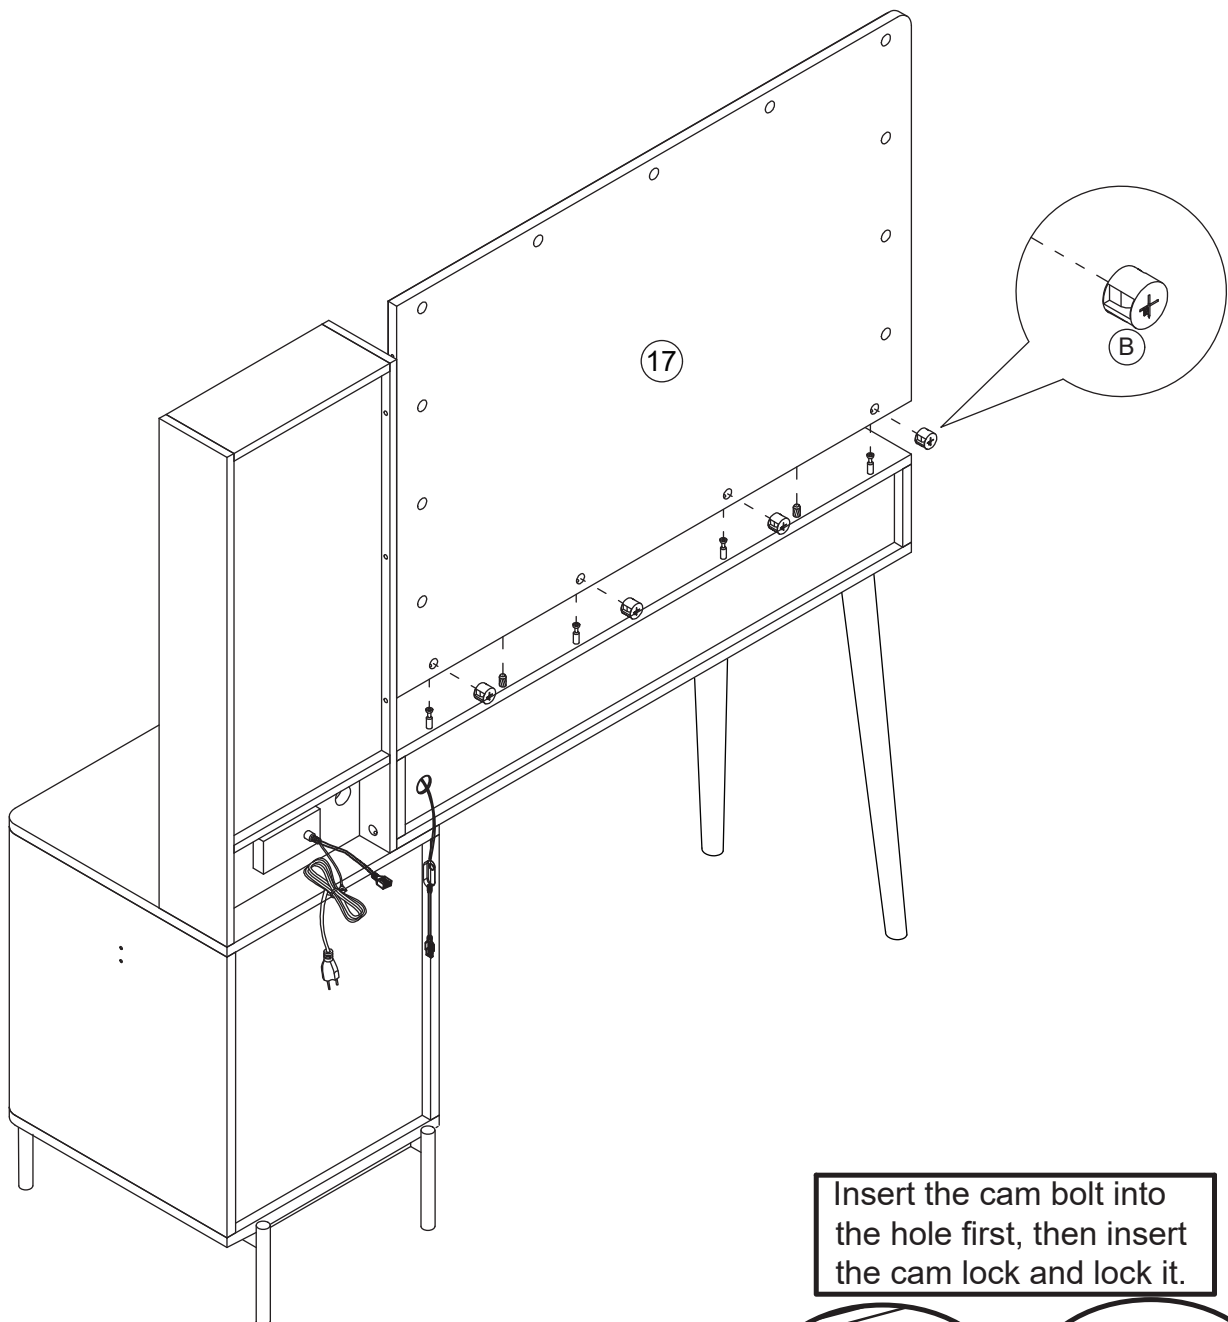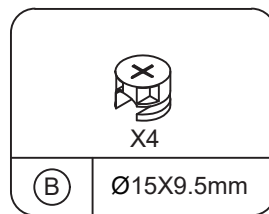


Insert the cam bolt into the hole first, then insert the cam lock and lock it.




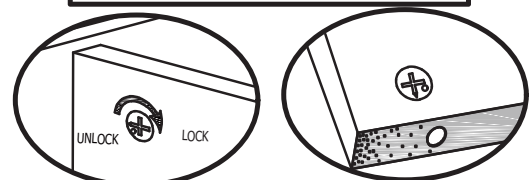


Proper orientation of CAM LOCK

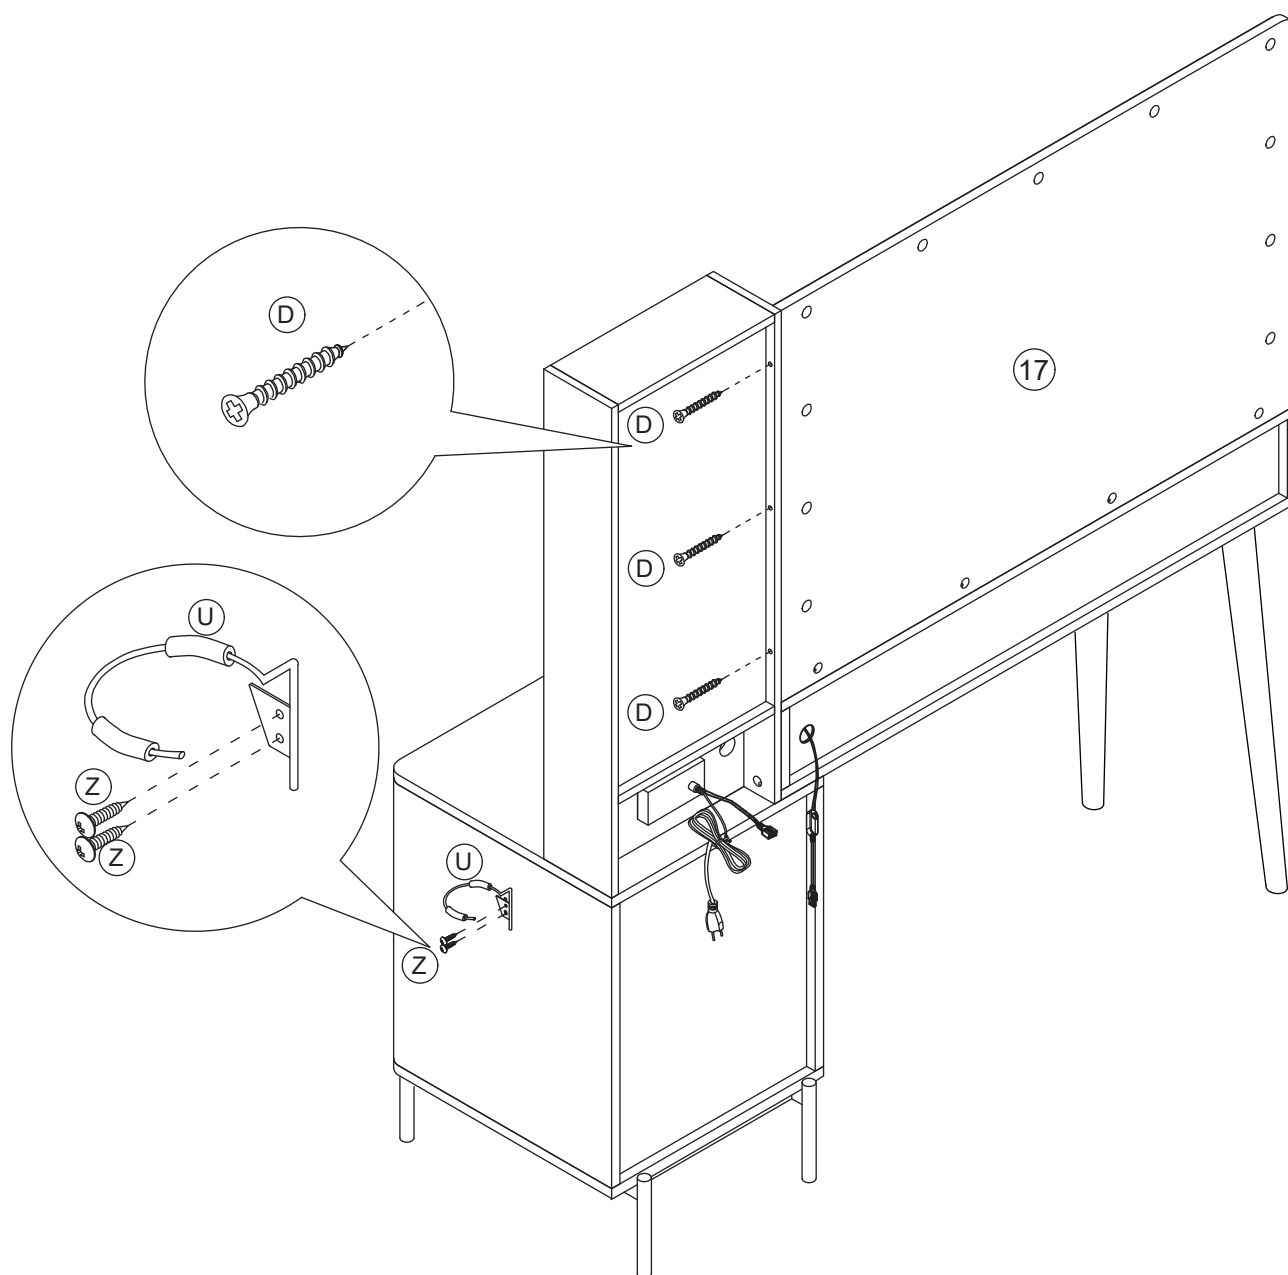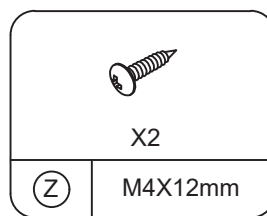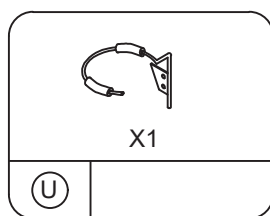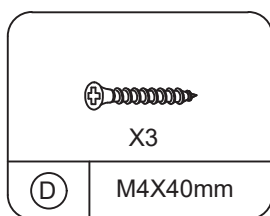


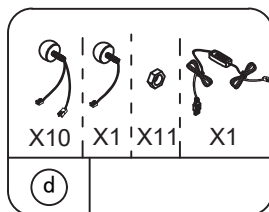



Connection method of light wires

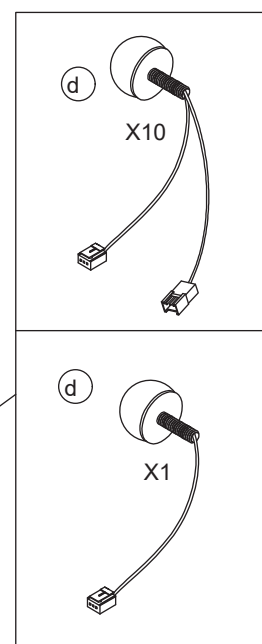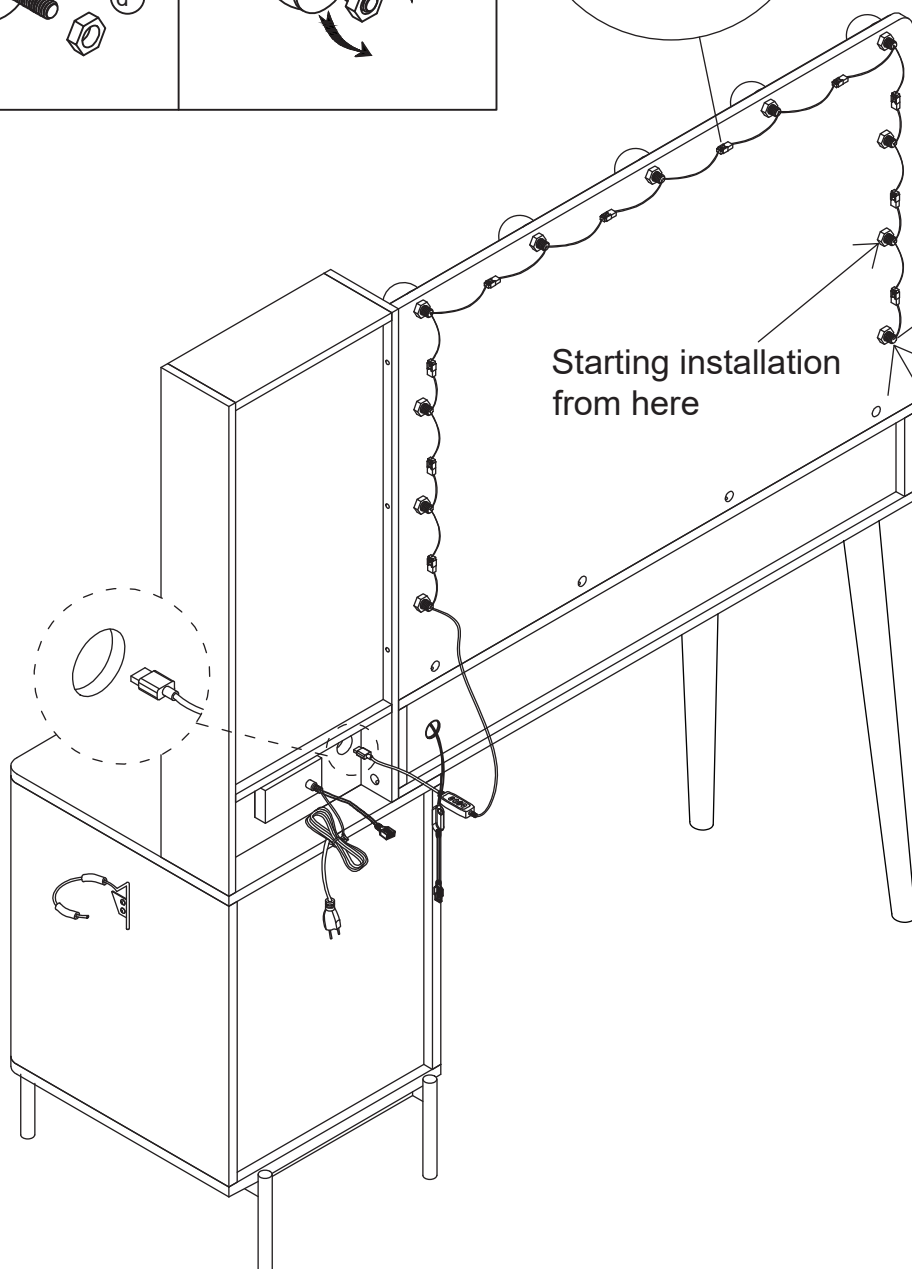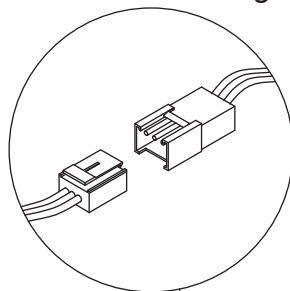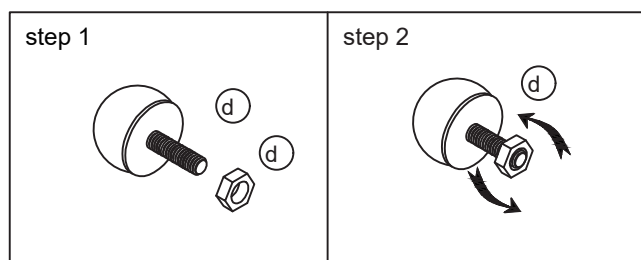

step 31



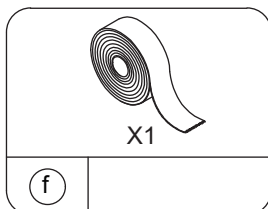



The loose lamp bulb connection wires are secured with self-adhesive tape to prevent the wires from extending beyond the product edges and affecting its appearance.

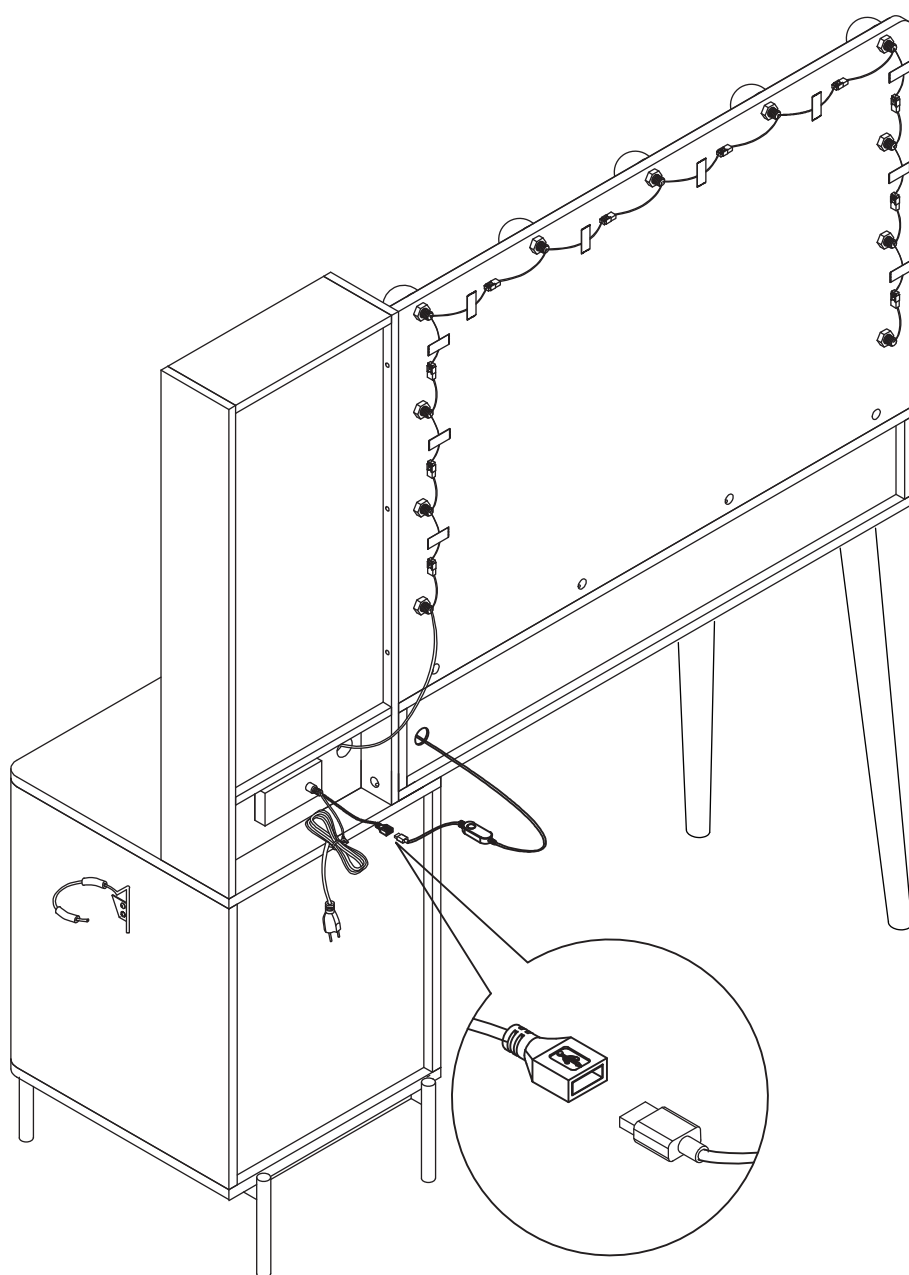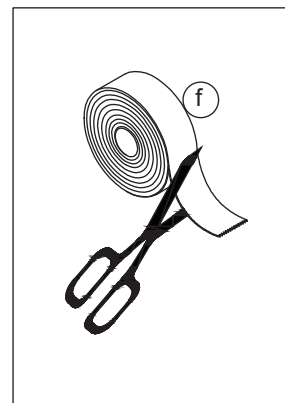



step 32

INSTALLATION INSTRUCTIONS

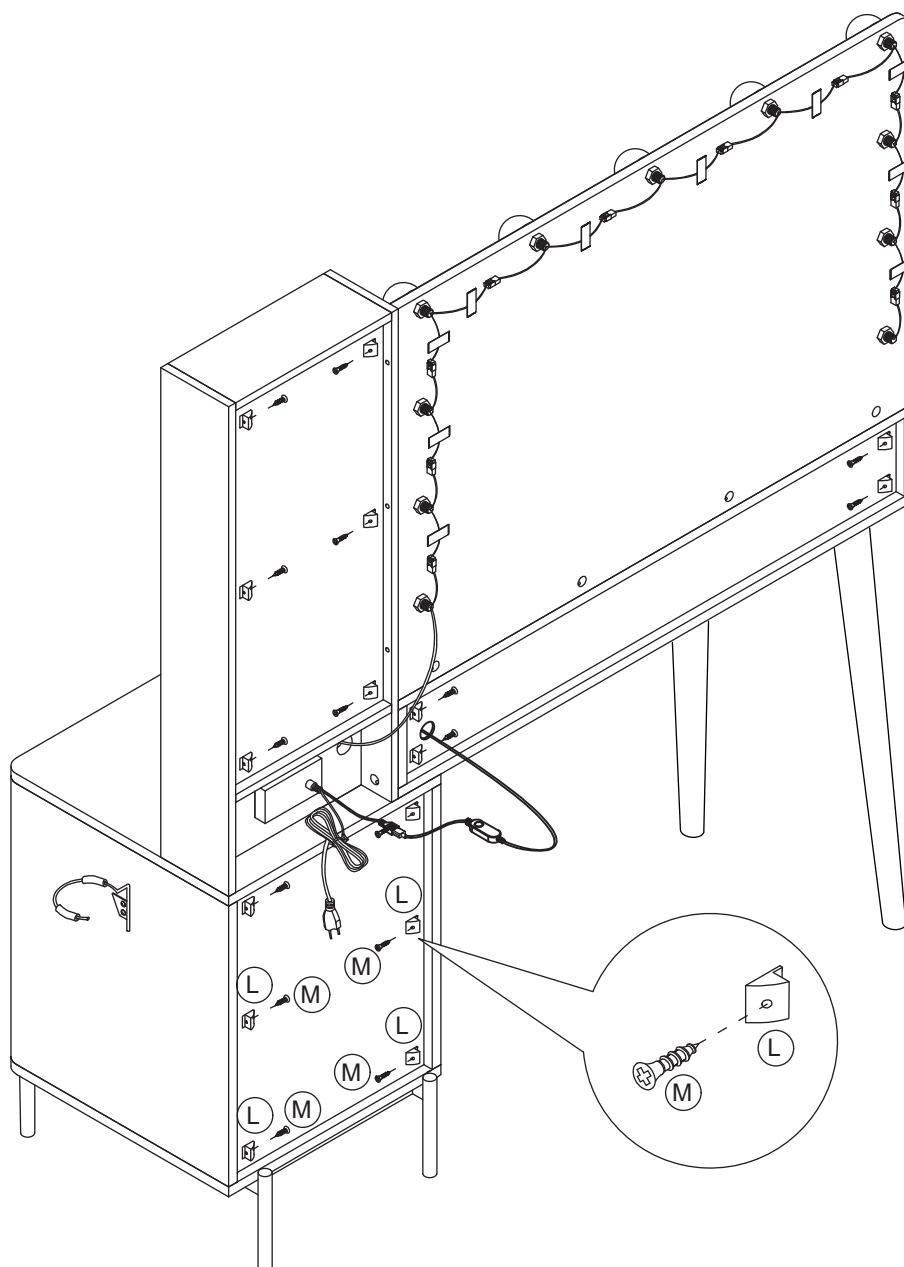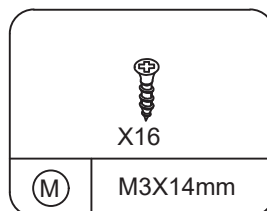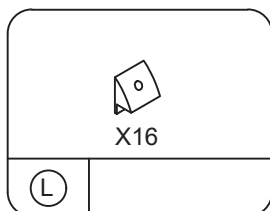









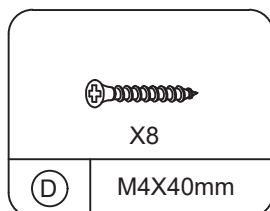


X2

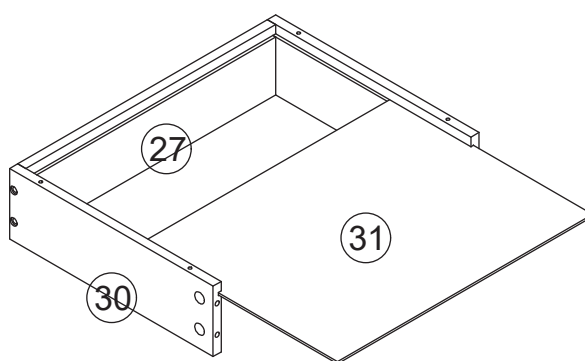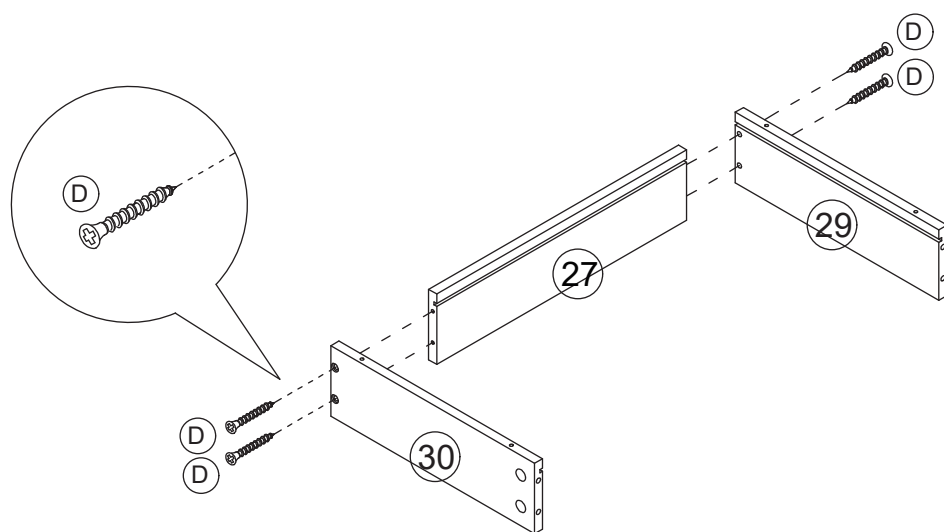


step 34






INSTALLATION INSTRUCTIONS

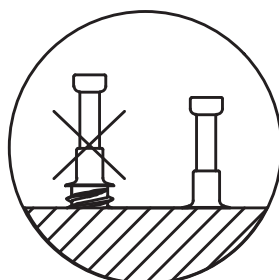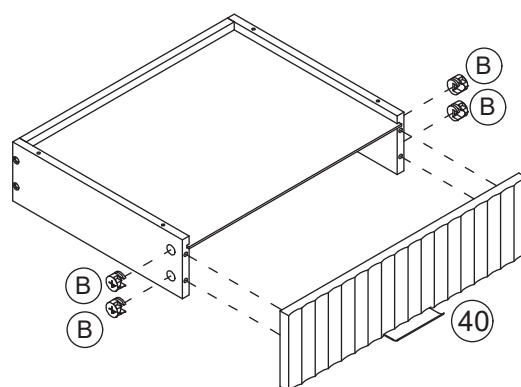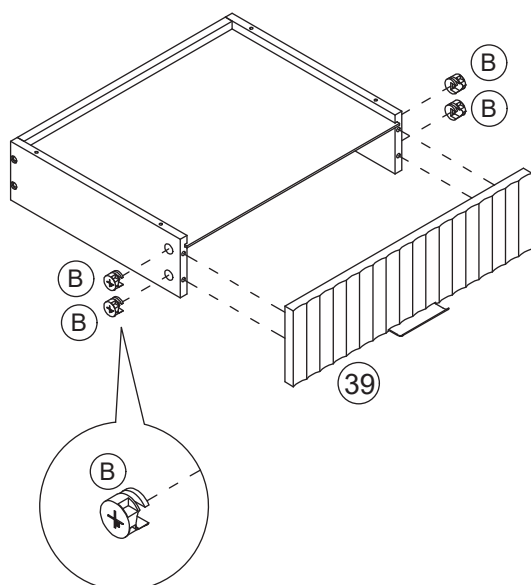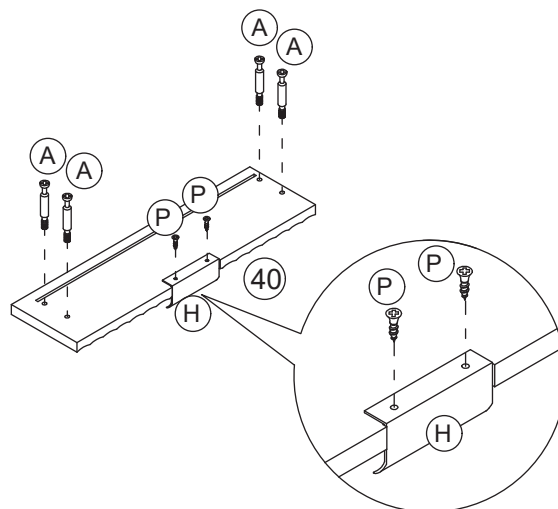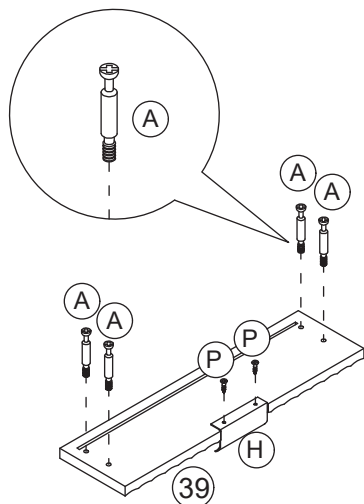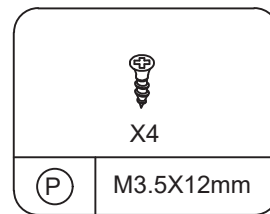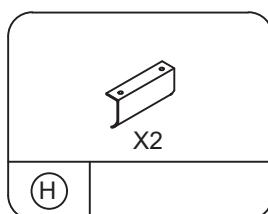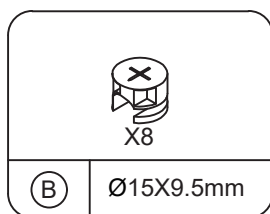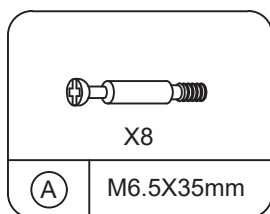


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


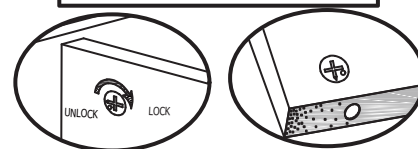






Proper orientation of CAM LOCK

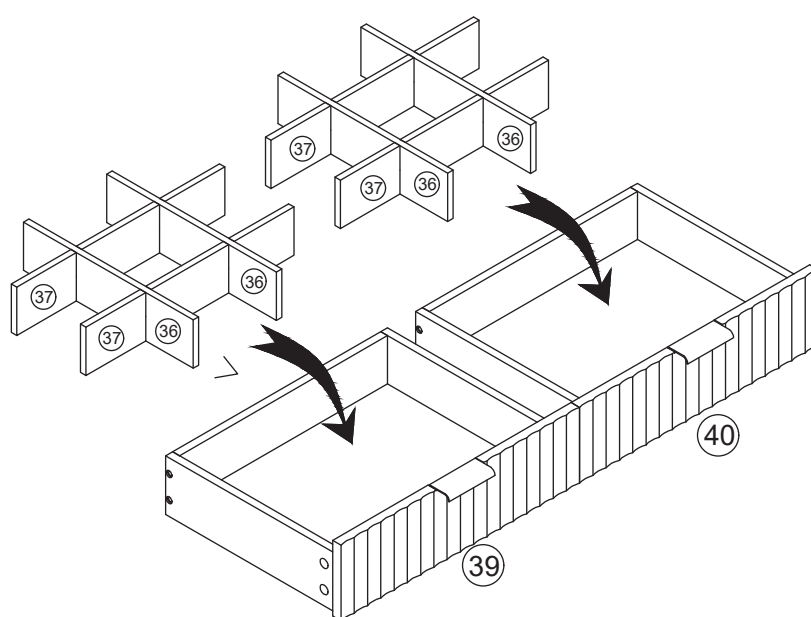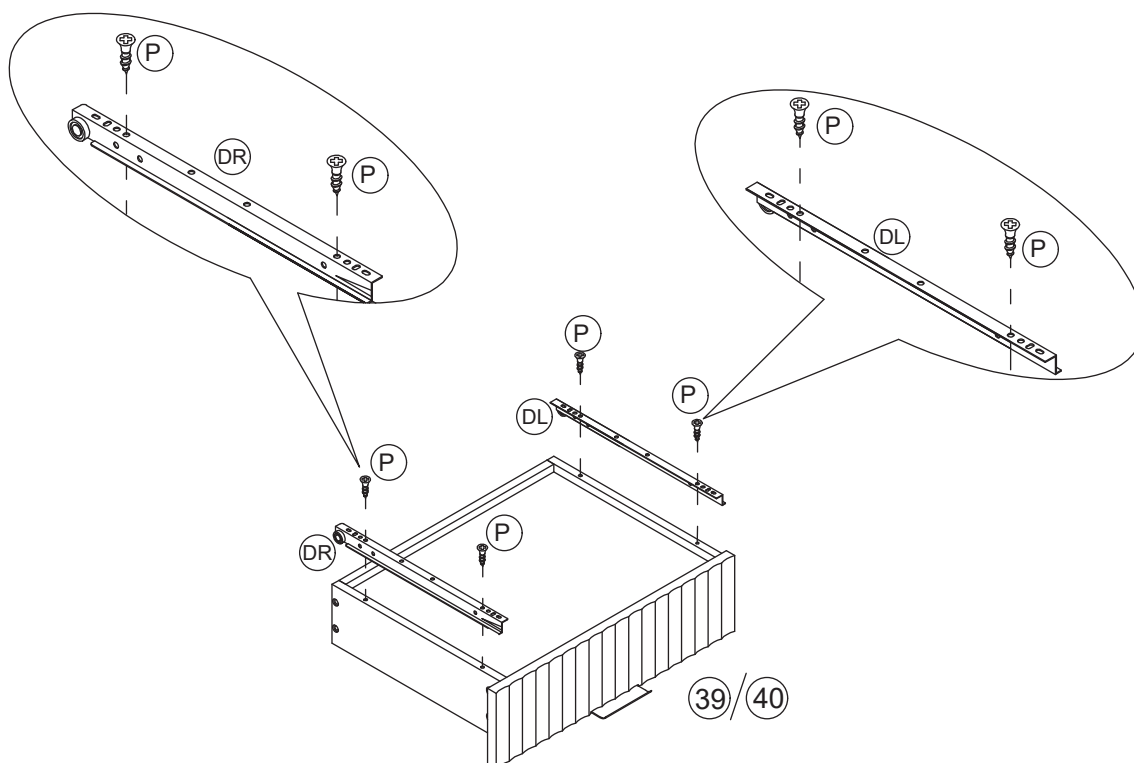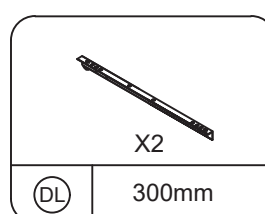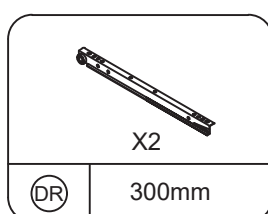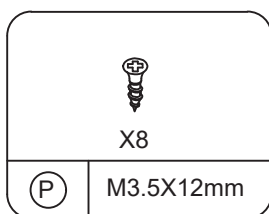


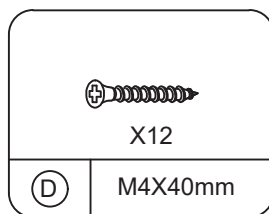


X3

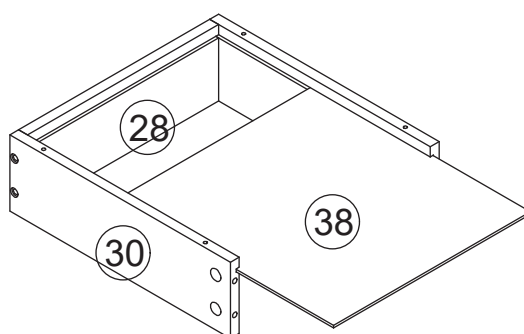
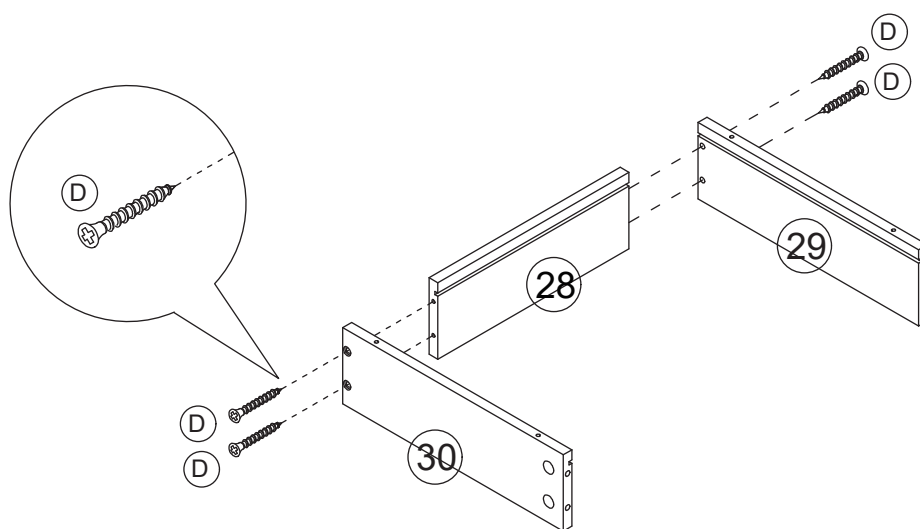


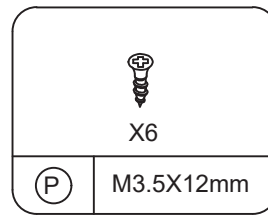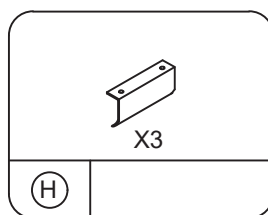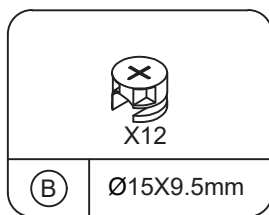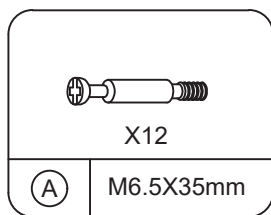




X3

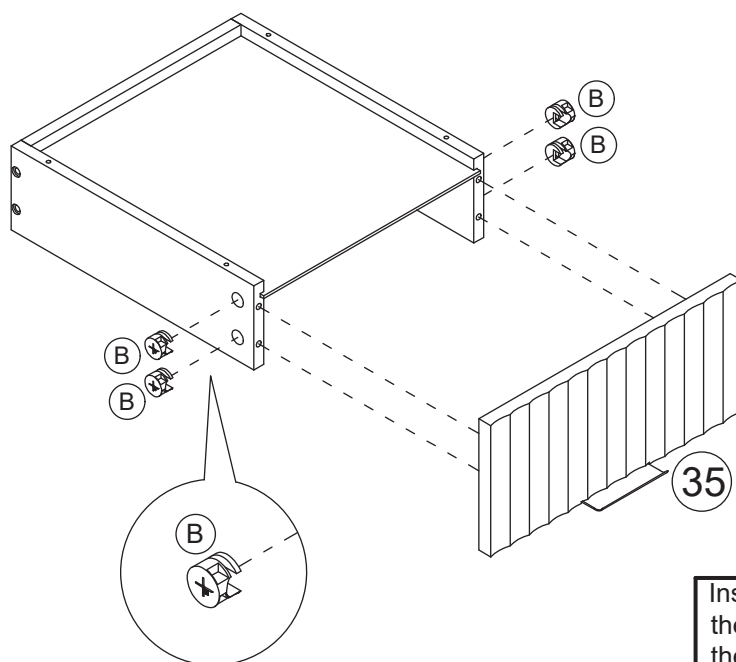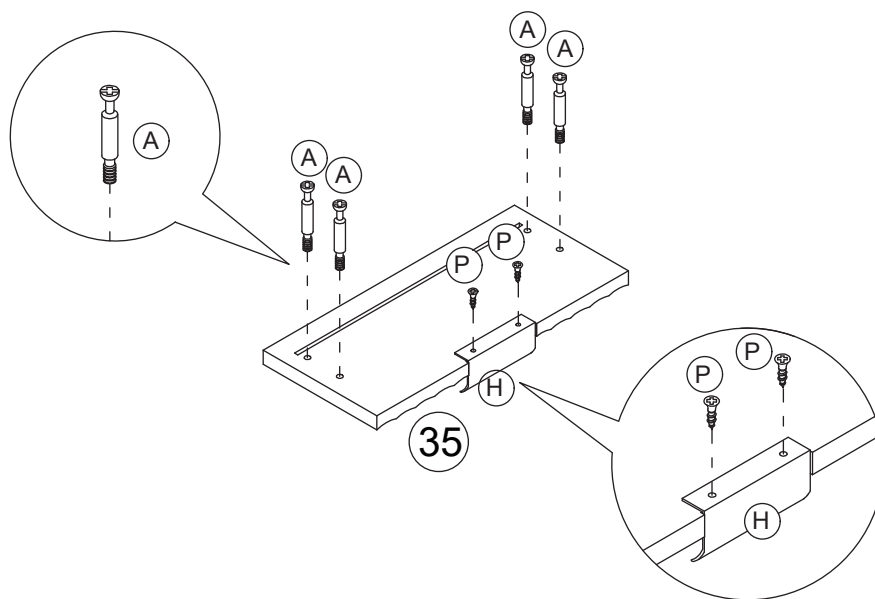


Insert the cam bolt into
the hole first, then insert
the cam lock and lock it.


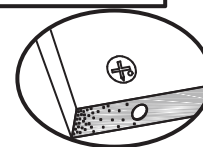
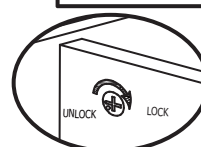



Proper orientation of CAM LOCK

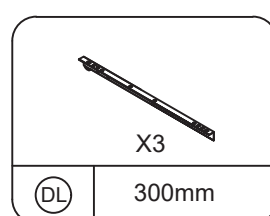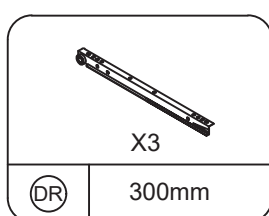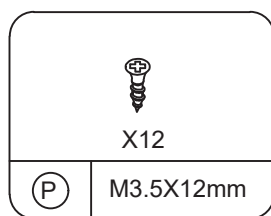



X3

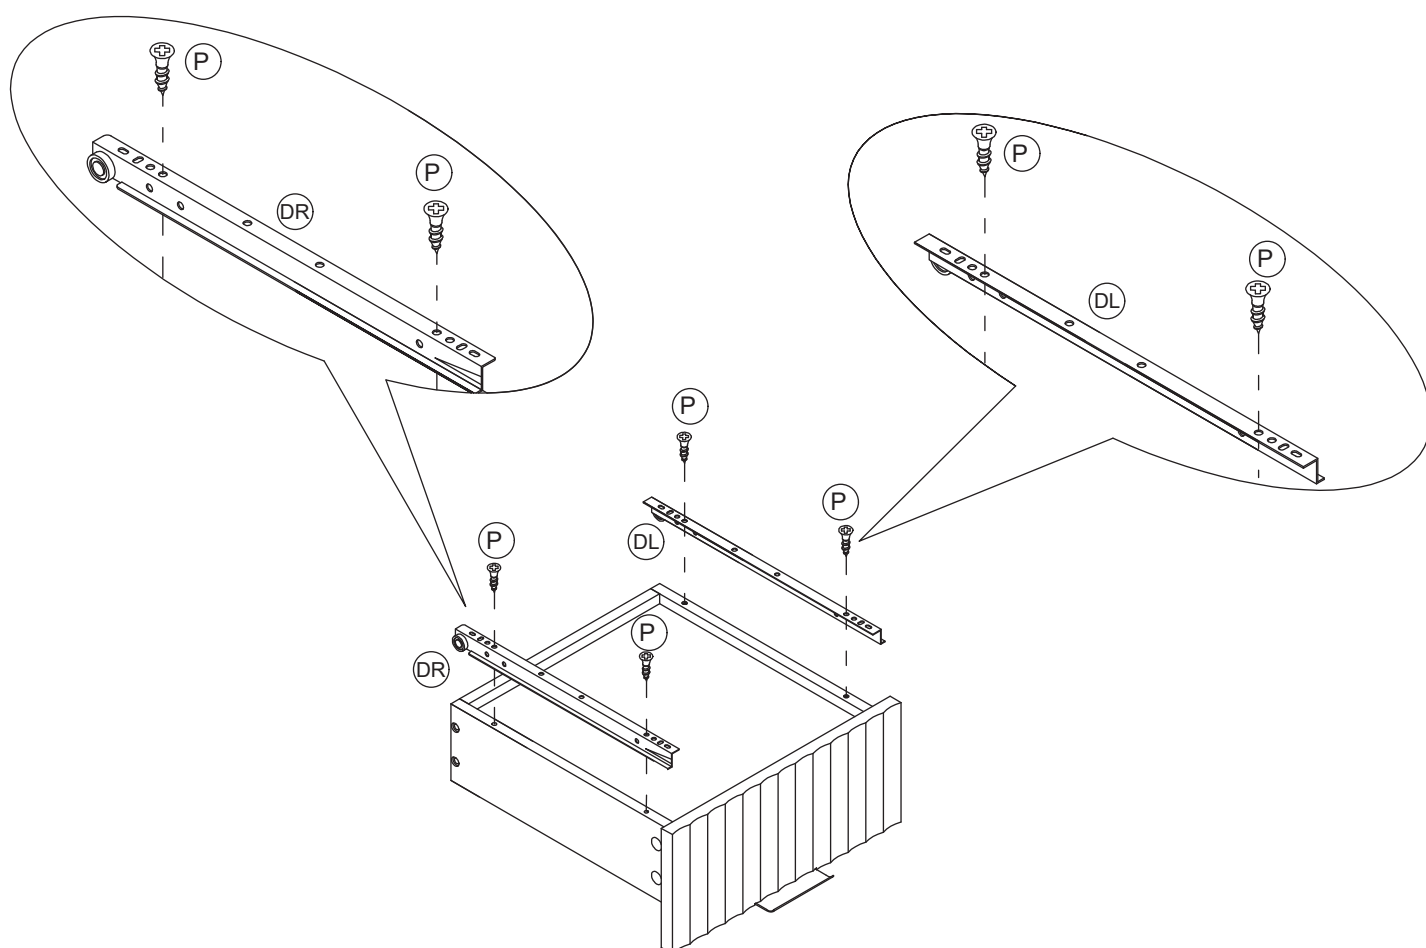

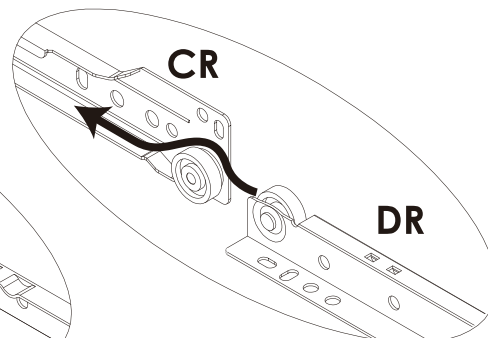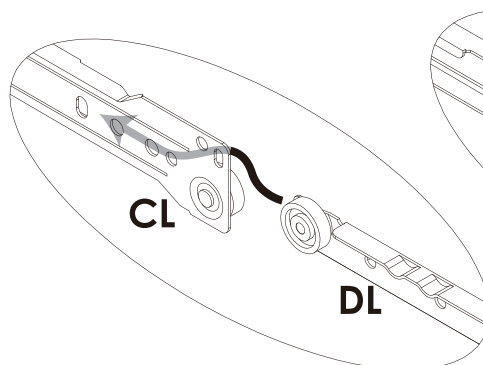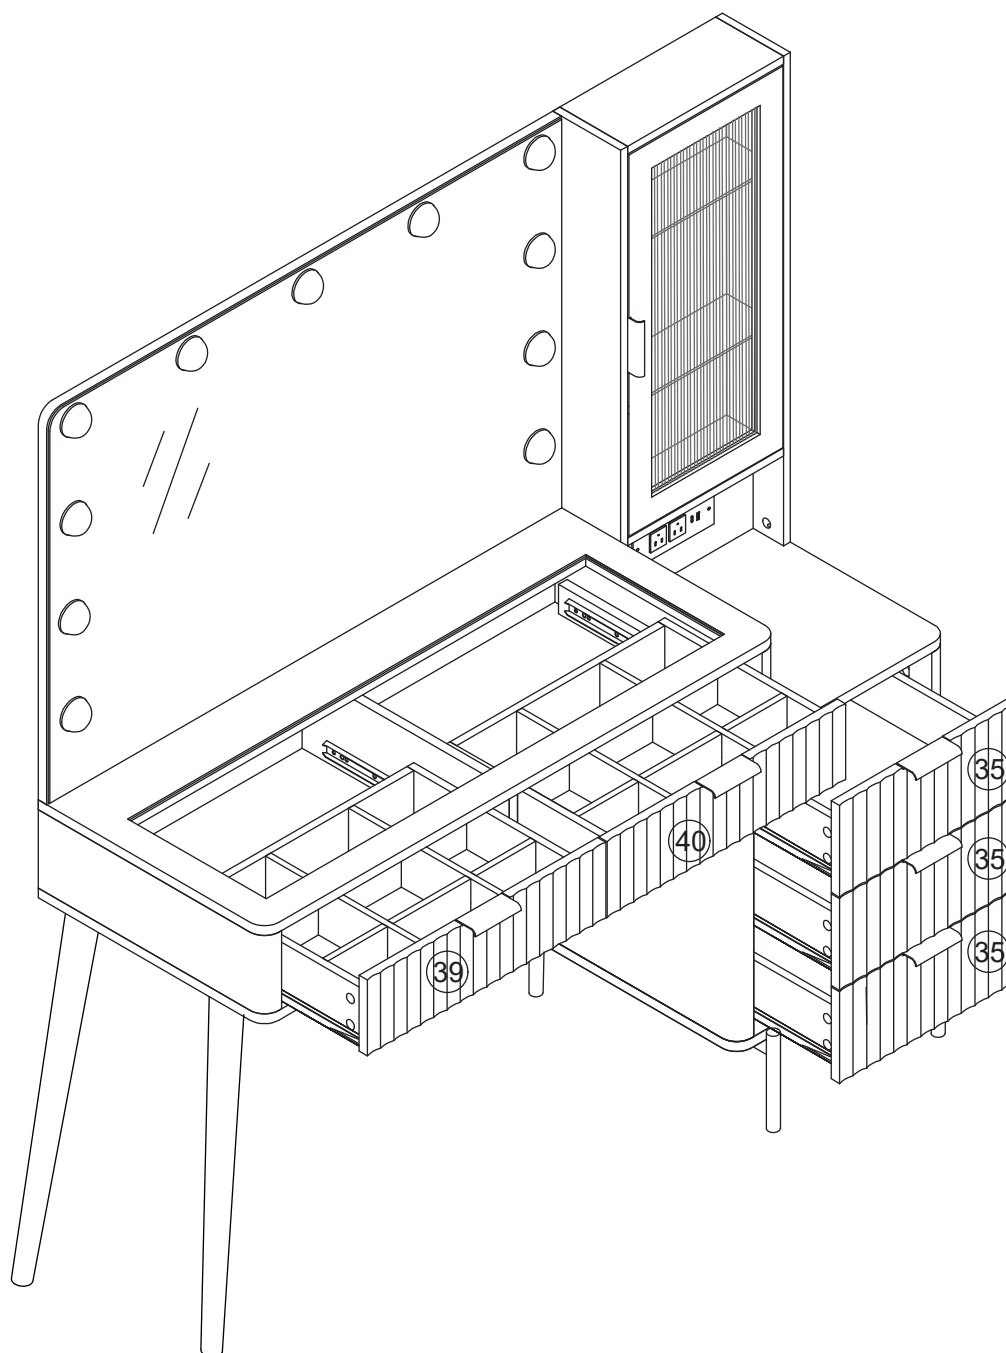

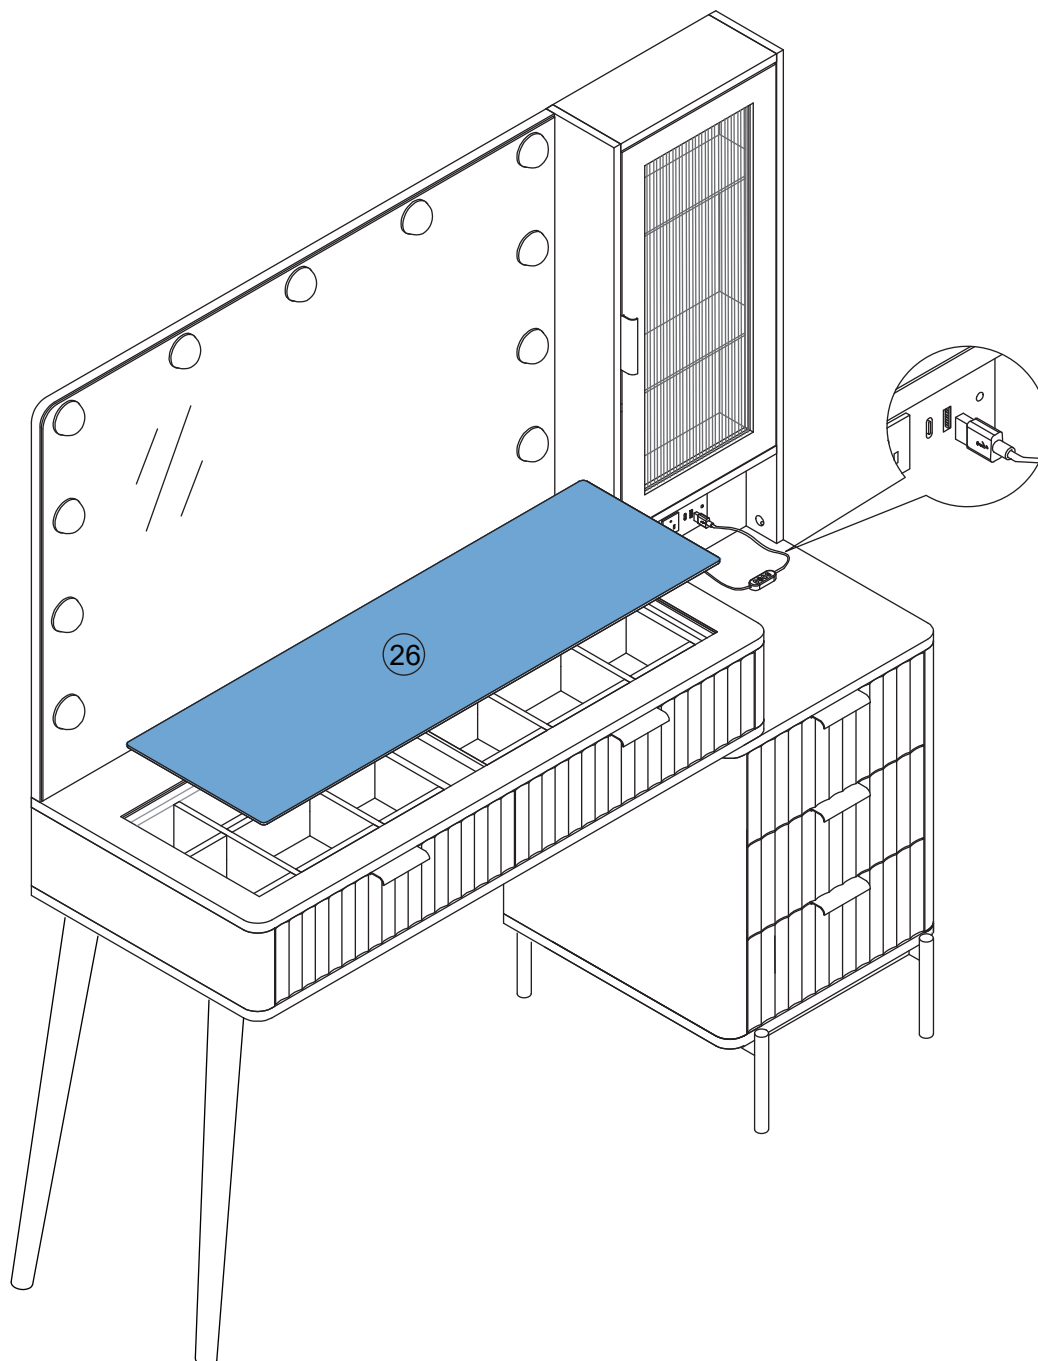

step 41

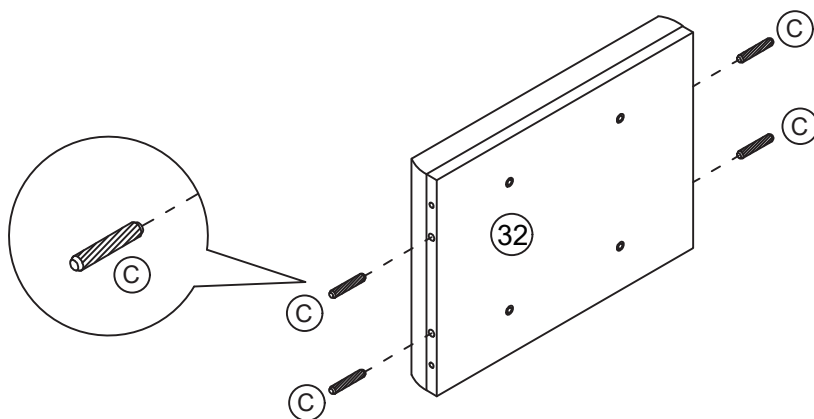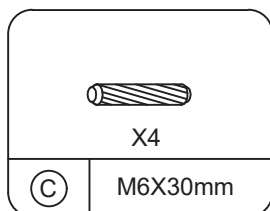

step 42

