


44mm 12x10

Offset Ap x 44mm

Base and Floor


Component list 12x10 Base

- (2x) TANBAT-2800
- (10x) TANBAT-3312

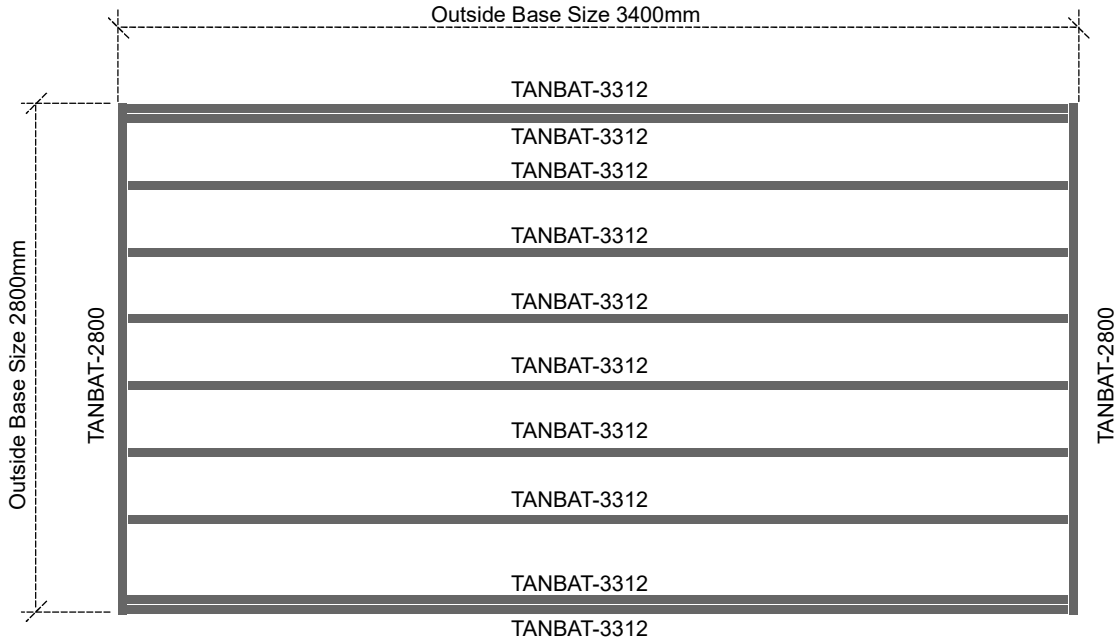


Component list for 12x10 Floor


- (30x) 19FB-2707
- (2x) SB-3312
- (2x) SB-2712

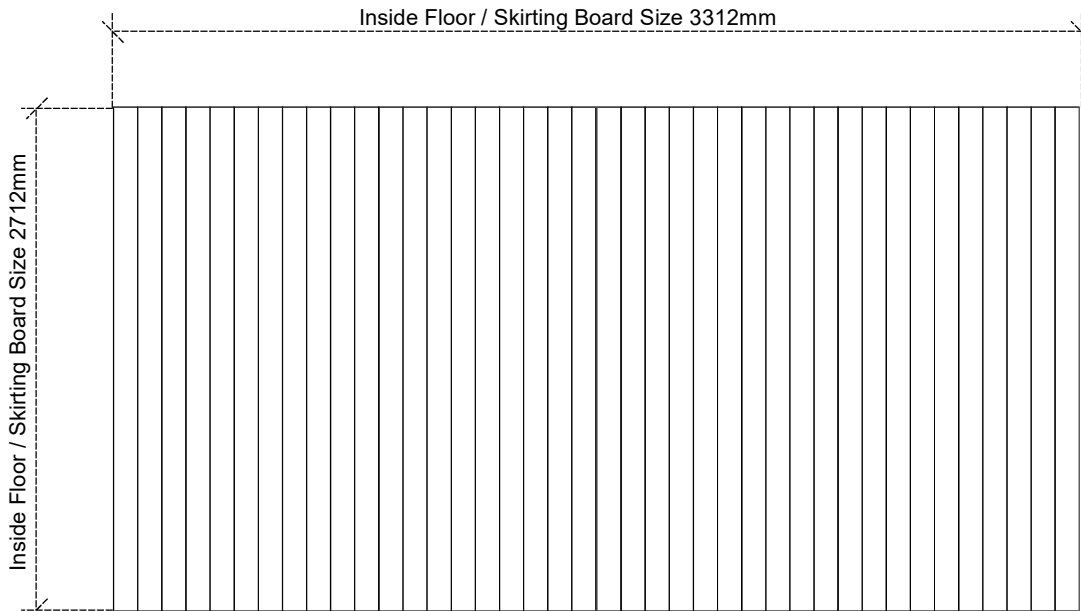


10' Blank Gable

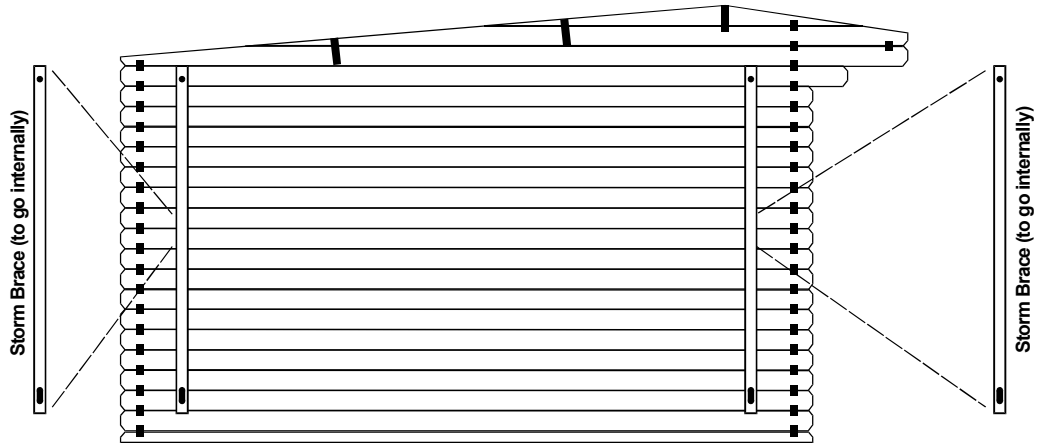


Build Diagram Order:-

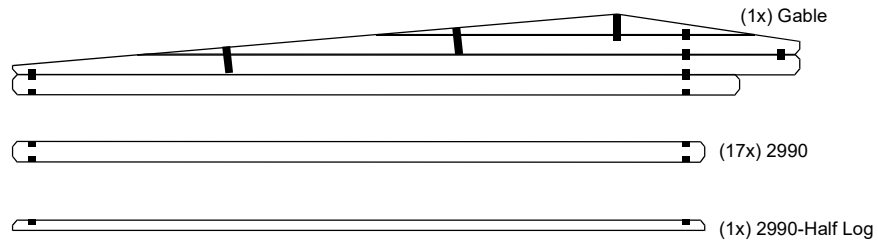


10' Window Gable

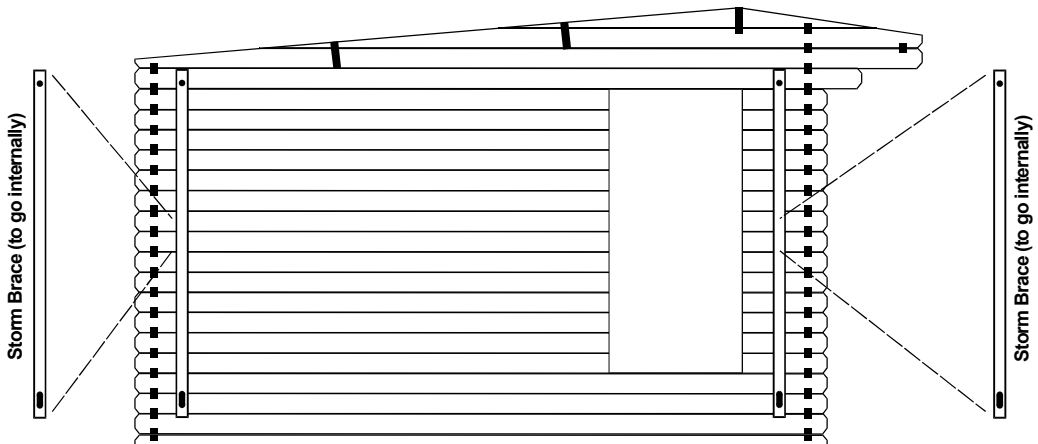

Build Diagram Order:-

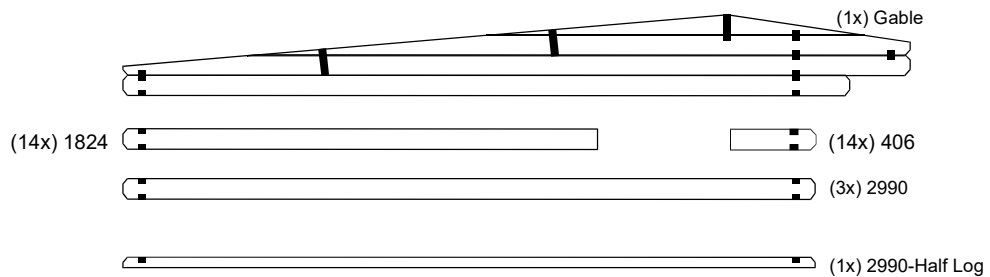


12' Window Double Door Side

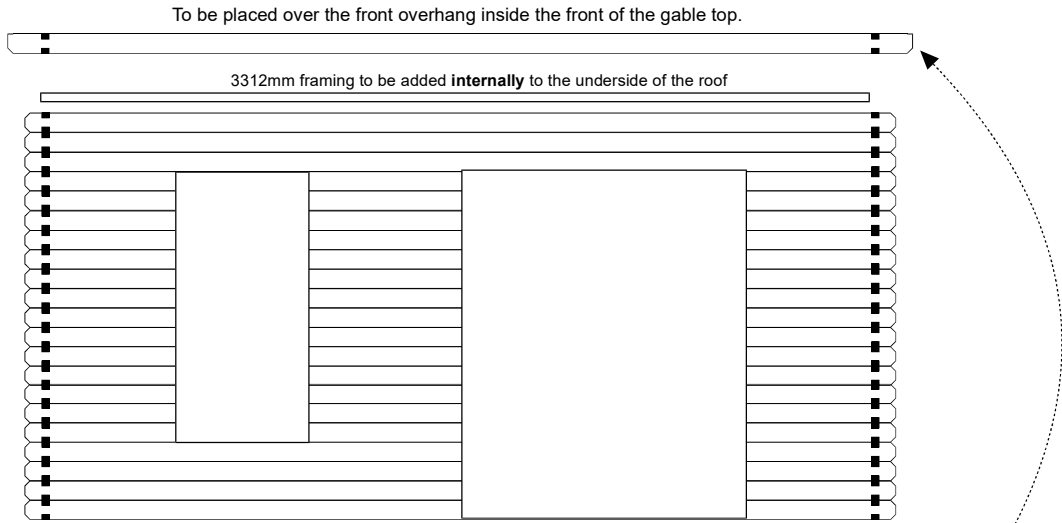

Build Diagram Order:-

- (1x) 3790
- (3x) 3590
- (14x) 406
- (14x) 406
- (18x) 406
- (4x) 1574

12' Blank Side

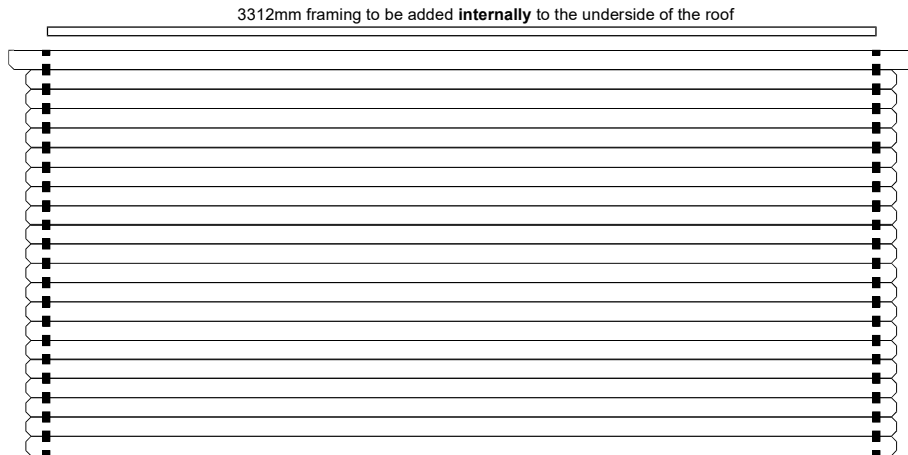


Build Diagram Order:-

- (1x) 3790
- (18x) 3590

12x10

Offs t Ap x 44mm

- 1 Roof Purlin = (3x) 3790mm
- 2 Roof Framing = (2x) 3790mm
- 3 Roof Boards = (34x) 2707mm
- 4 Roof Boards = (34x) 1040mm
- 5 (2x) 10' Offset Roof Fascia A
- 6 (2x) 10' Offset Roof Fascia B
- 7 (2x) Peak

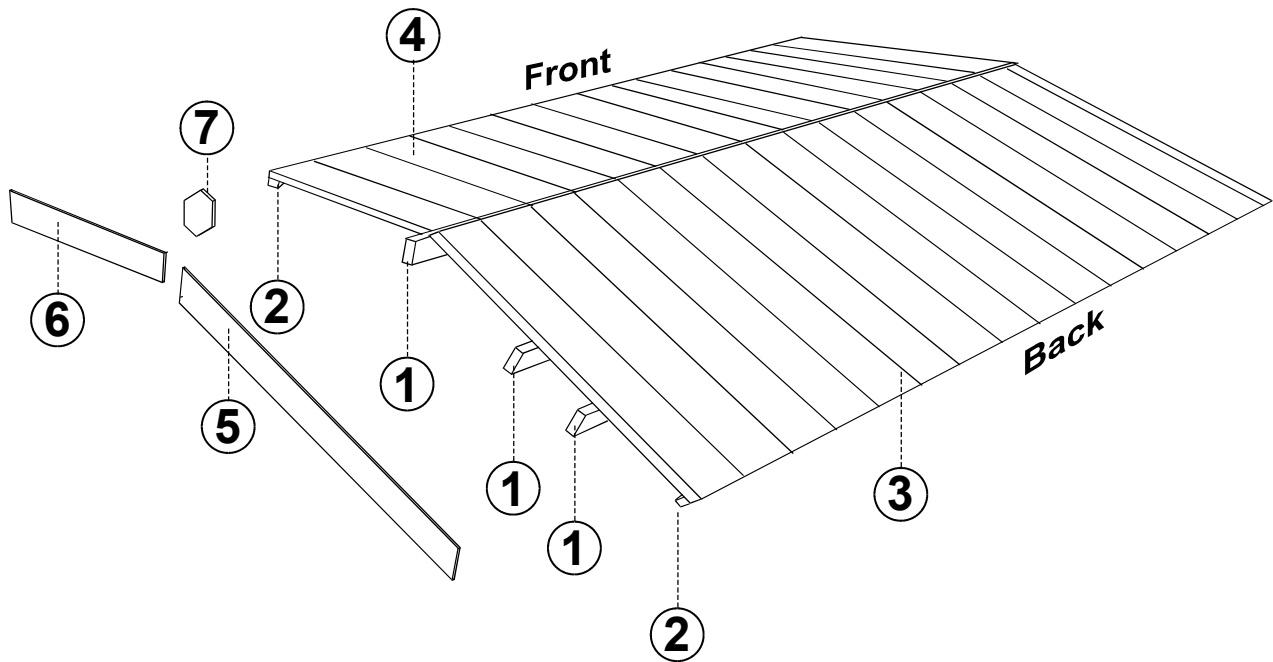

Important:

Please follow the log cabin instruction manual to assemble your log cabin. This construct plan is to be used as a guide to go alongside the instructions.