



# ASSEMBLY INSTRUCTIONS

## Floor Lamp

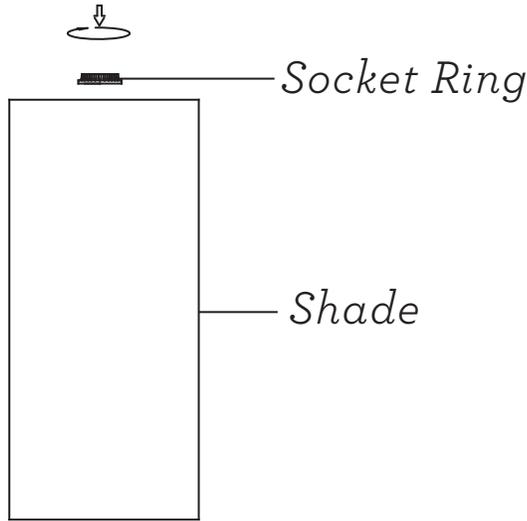

1. Remove all parts and lay on a flat surface.
2. Screw Pole 1 clockwise into Base to tighten.
3. Screw Pole 2 clockwise into Pole 1 to tighten.
4. Screw Pole 3 clockwise into Pole 2 to tighten.
5. Set shade onto socket and tighten clockwise with socket ring.

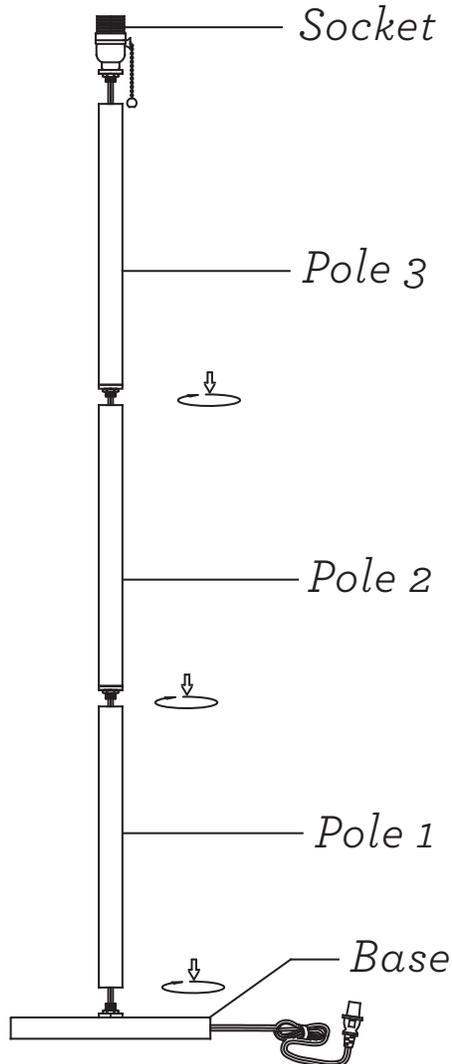

### GENERAL PRODUCT INFORMATION:

This product is suitable for dry locations only.



### IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. **DO NOT ALTER THE PLUG.**

BULB TYPE: (1) 100 watt incandescent or 26 watt CFL equivalent. (not included)