

I870100960A1 I870100960A2
I870100960A3 I870100960A4

Start furnishing your dreams !

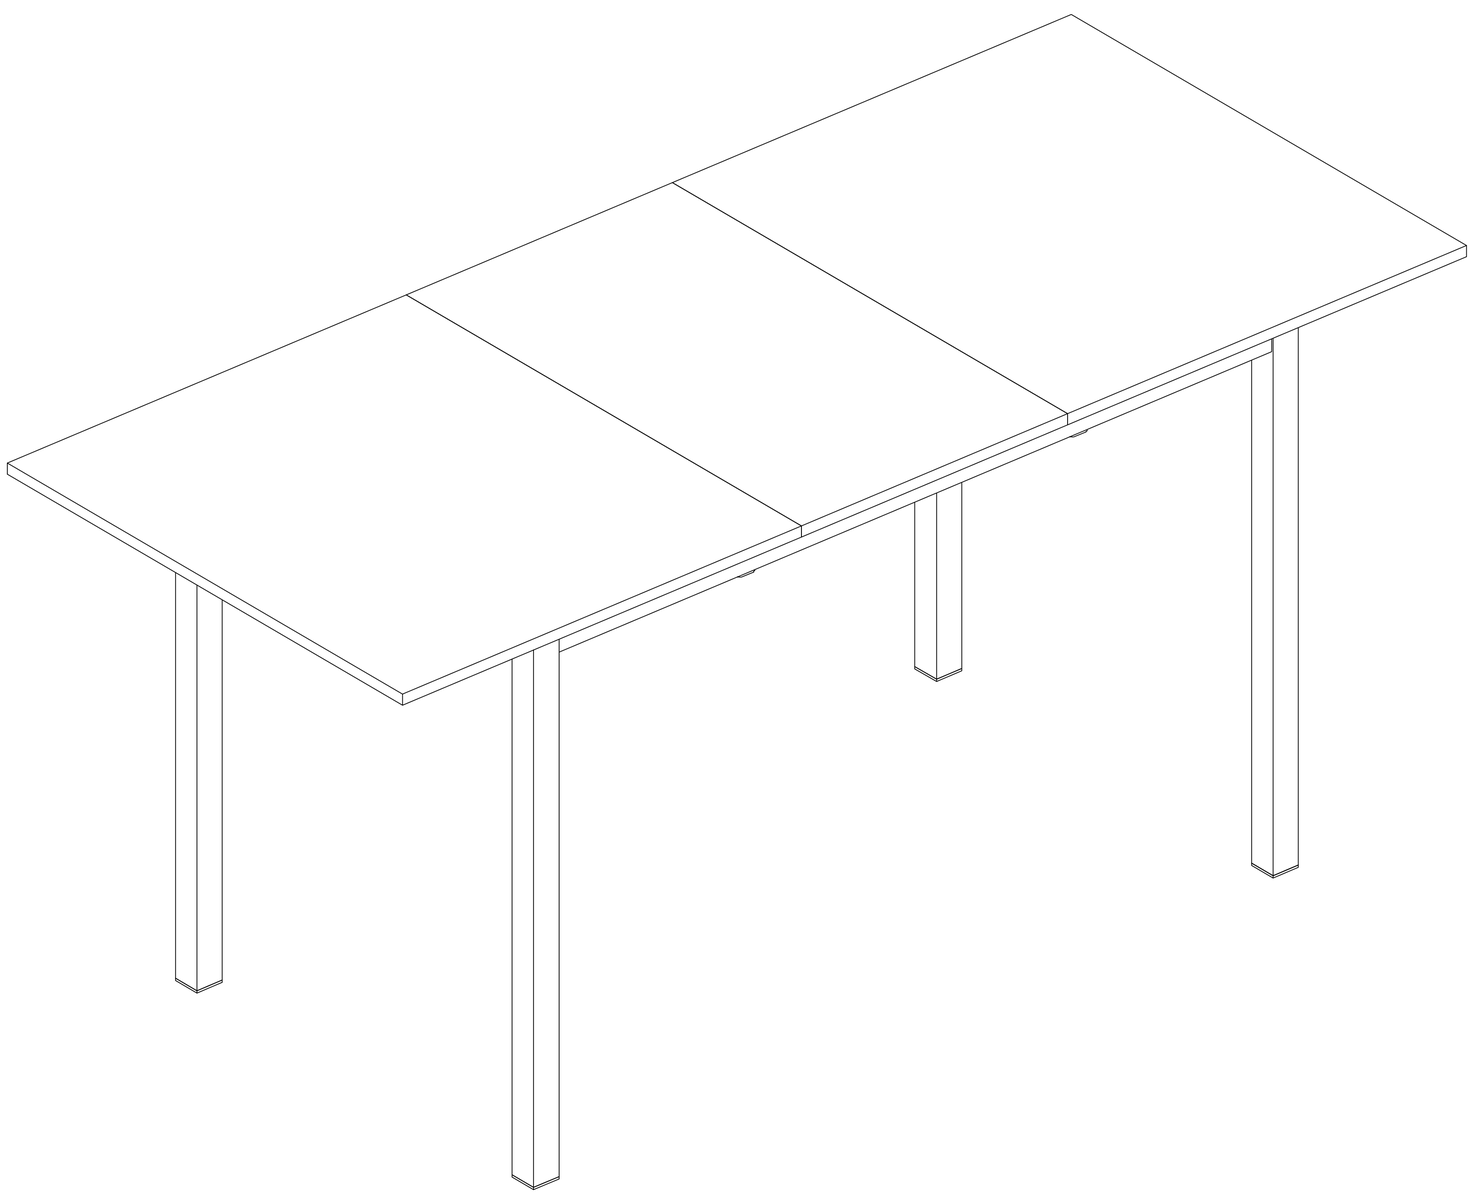

Please check that you have all the parts listed
before you start assembling,if you do find that something is
missing,do not continue assembly.Please contact us immediately.
NOTE:Please do not completely tighten
all the hardware until the entire assembly is complete!

Part list

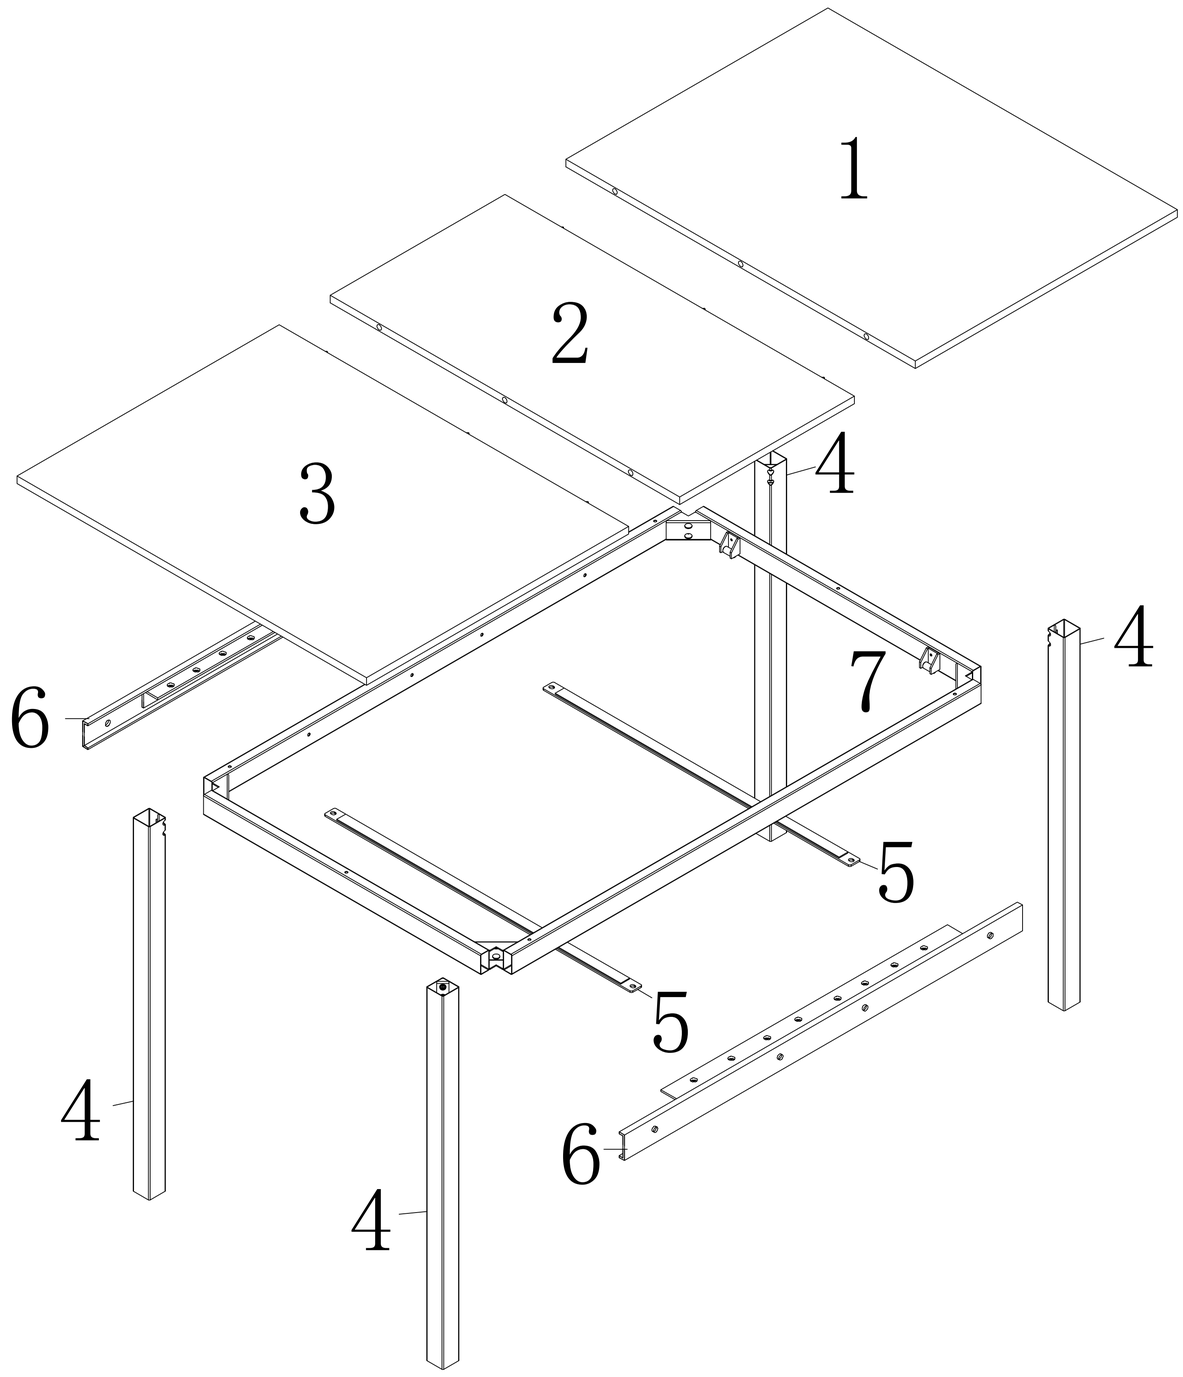


Hardware list

M6 x 12mm

A x 24+2


M8 x 40mm

Bx8+1

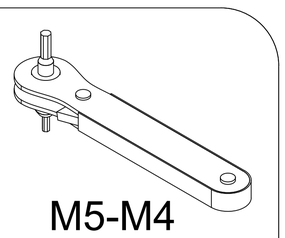


M5-M4

Cx1

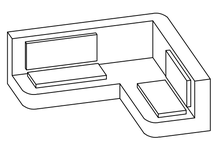

D x4




M6 x 18mm


E x4+1

1

during use:you need to lightly dial the rotary knob to adjust the direction, positive and negative adjustment.
M6 and M8 are locked in the same way.

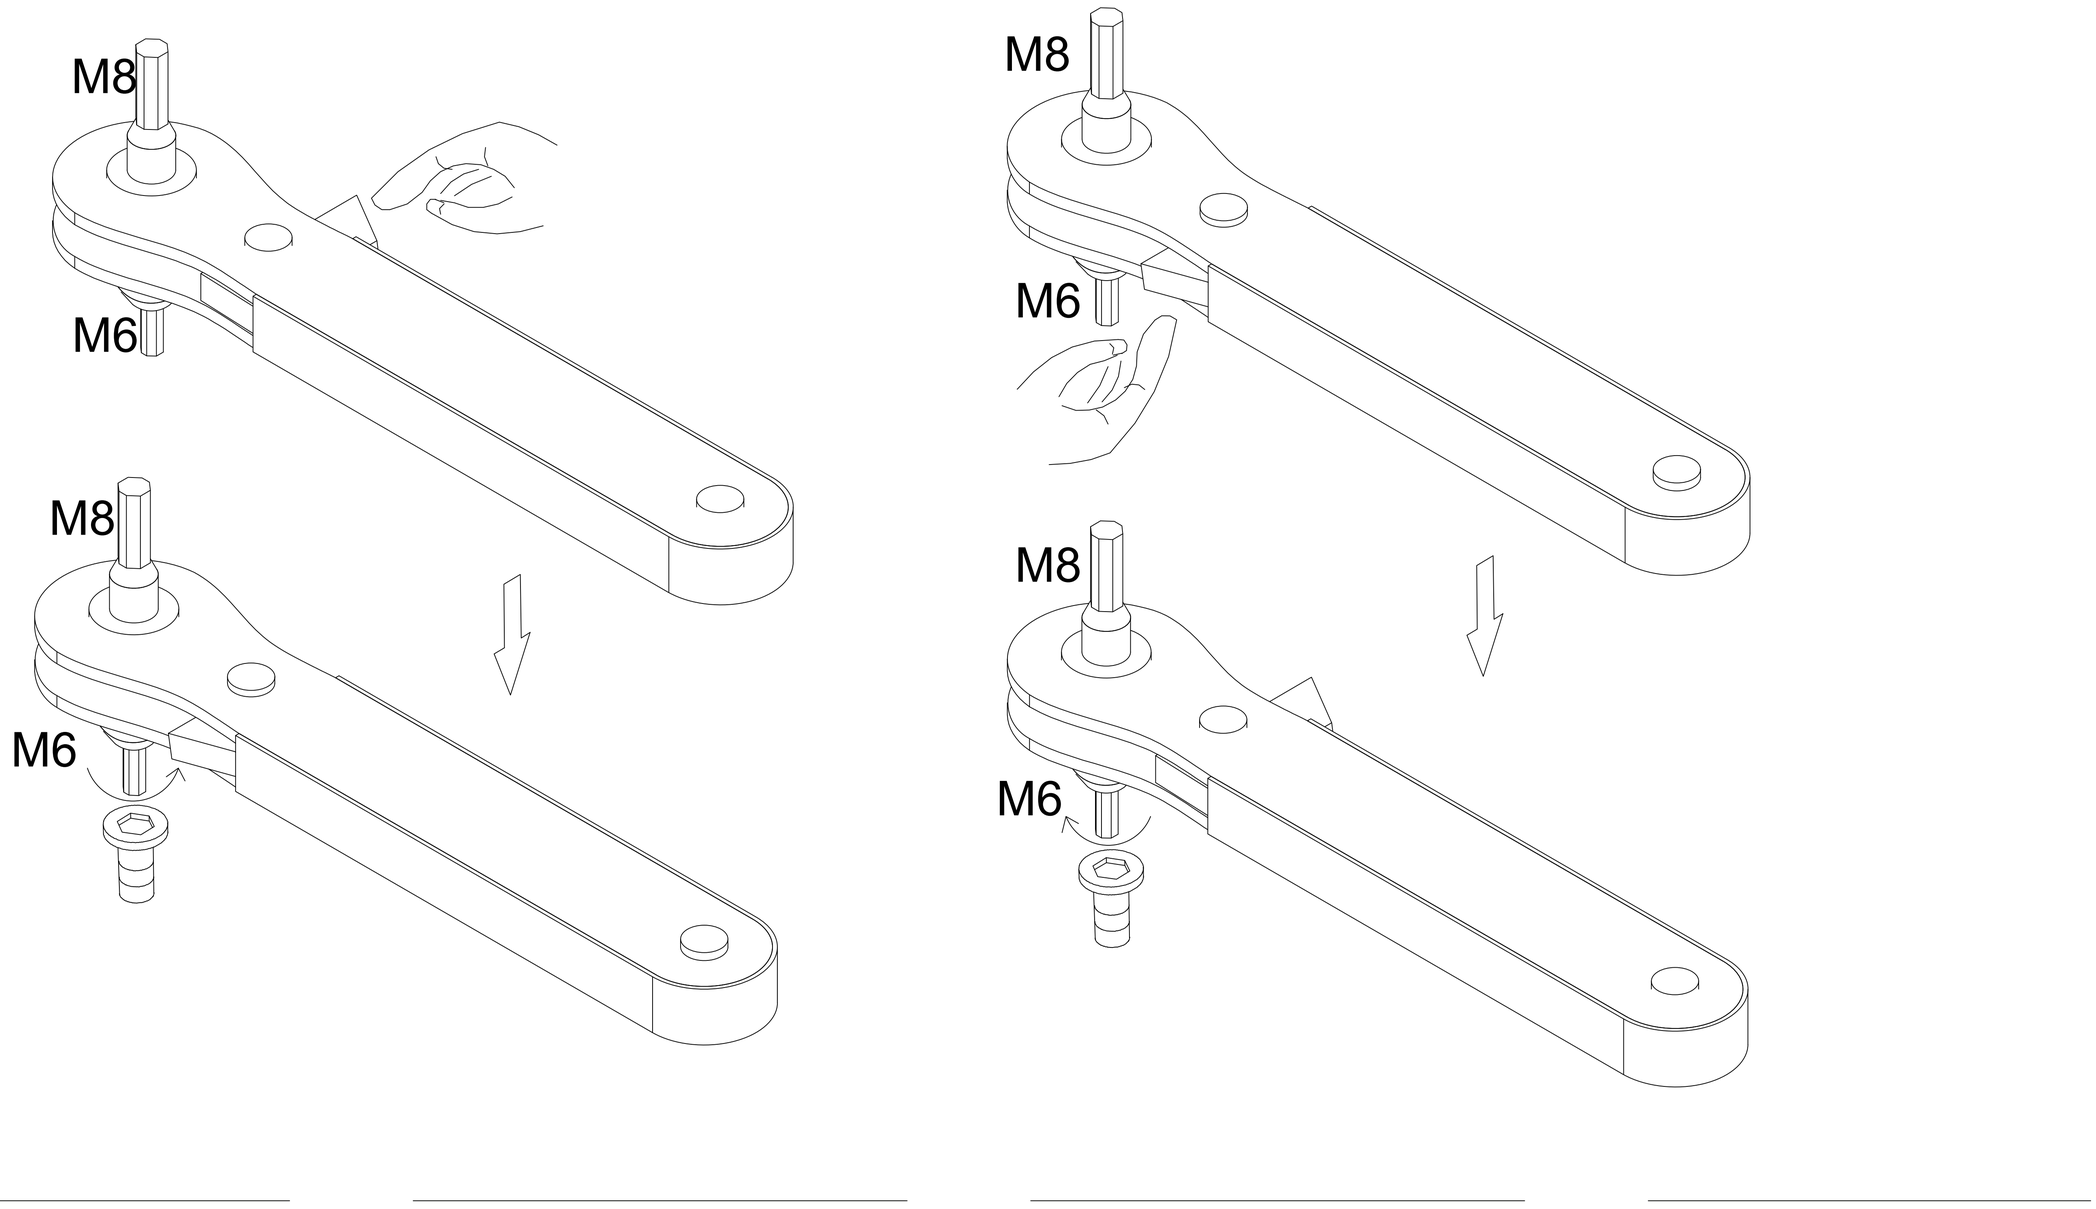



2

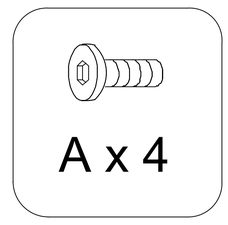



3

Open the slide rail lock

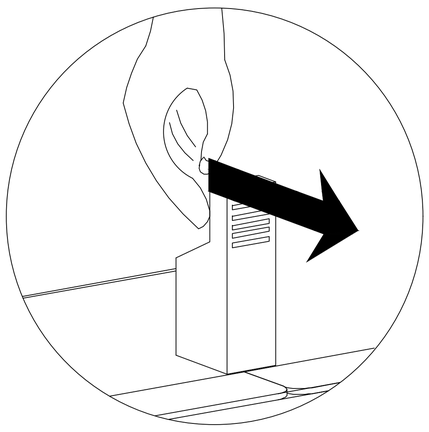


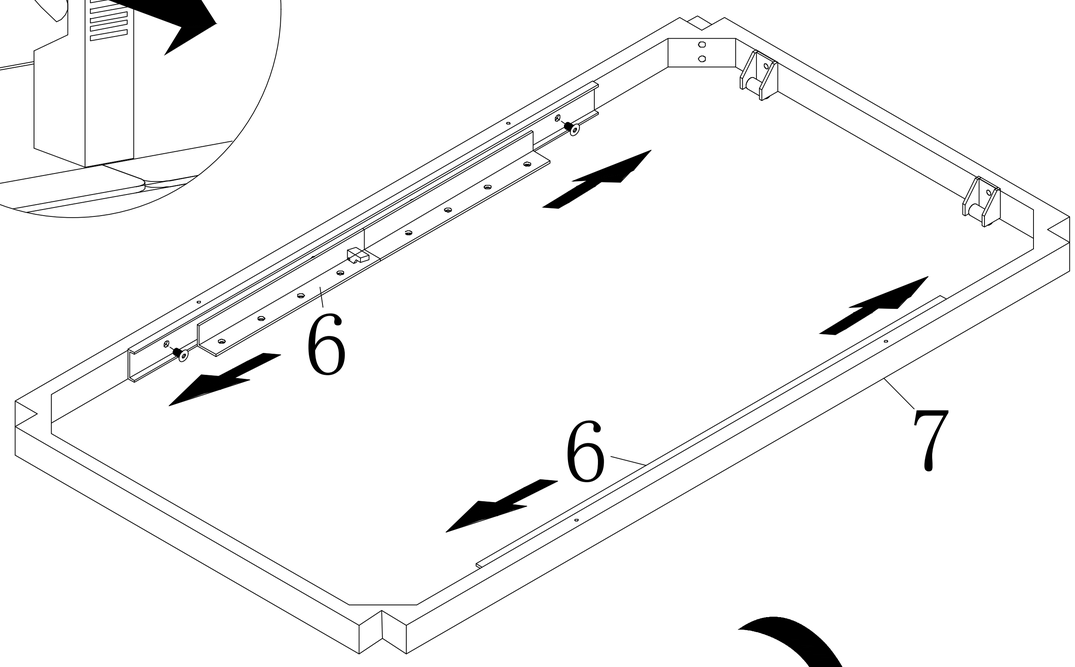


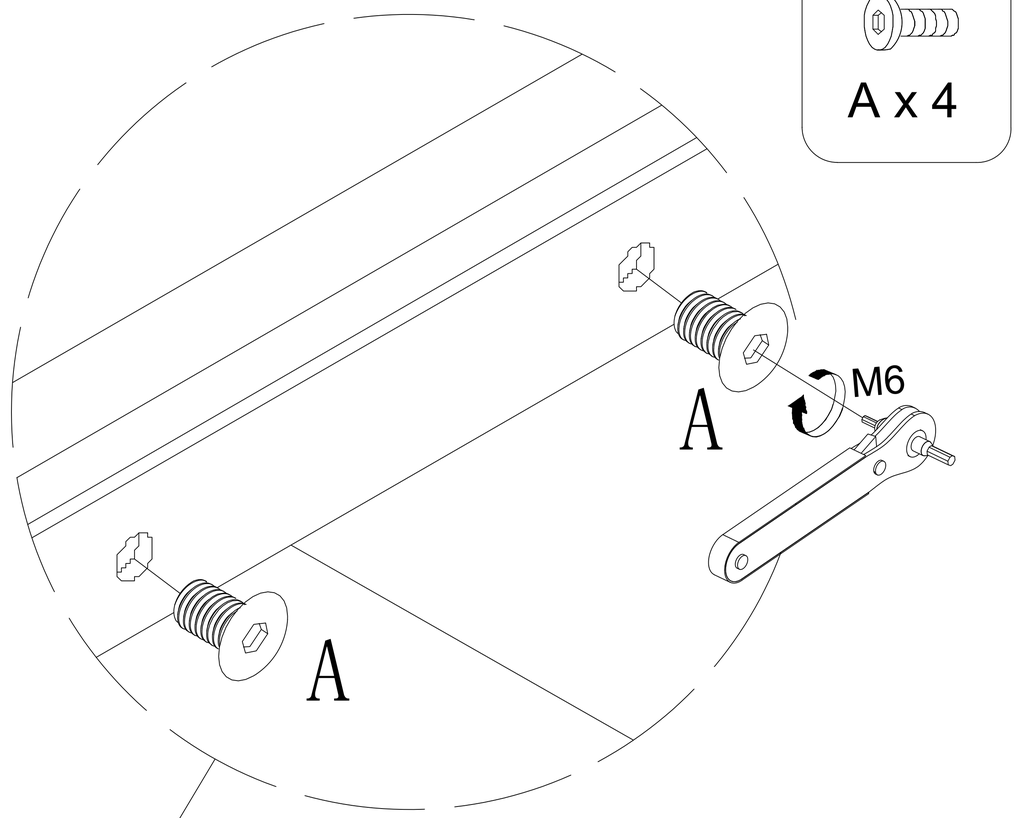

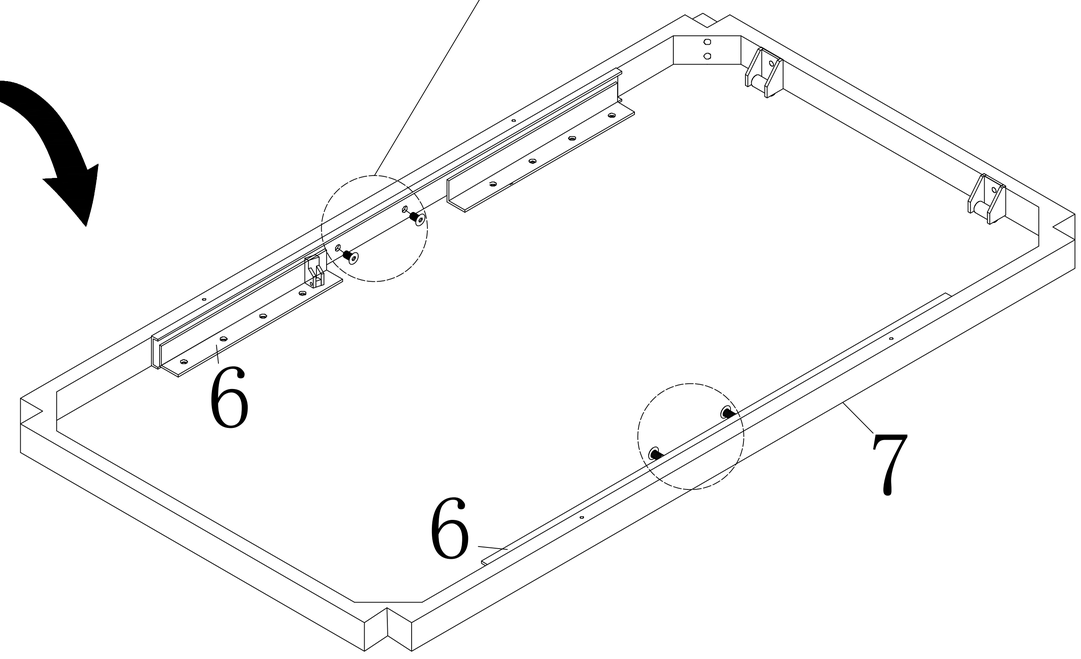



4

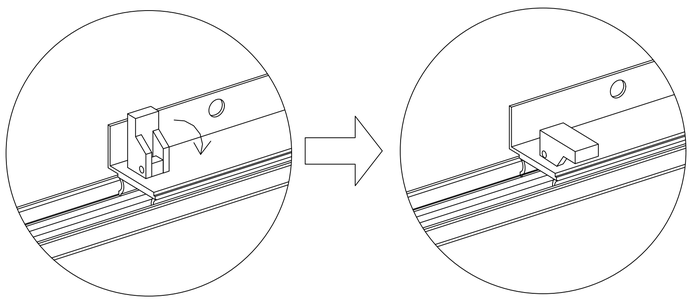


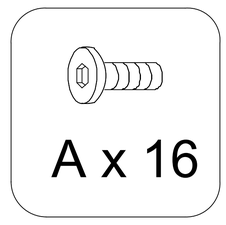



Close the slide rail lock

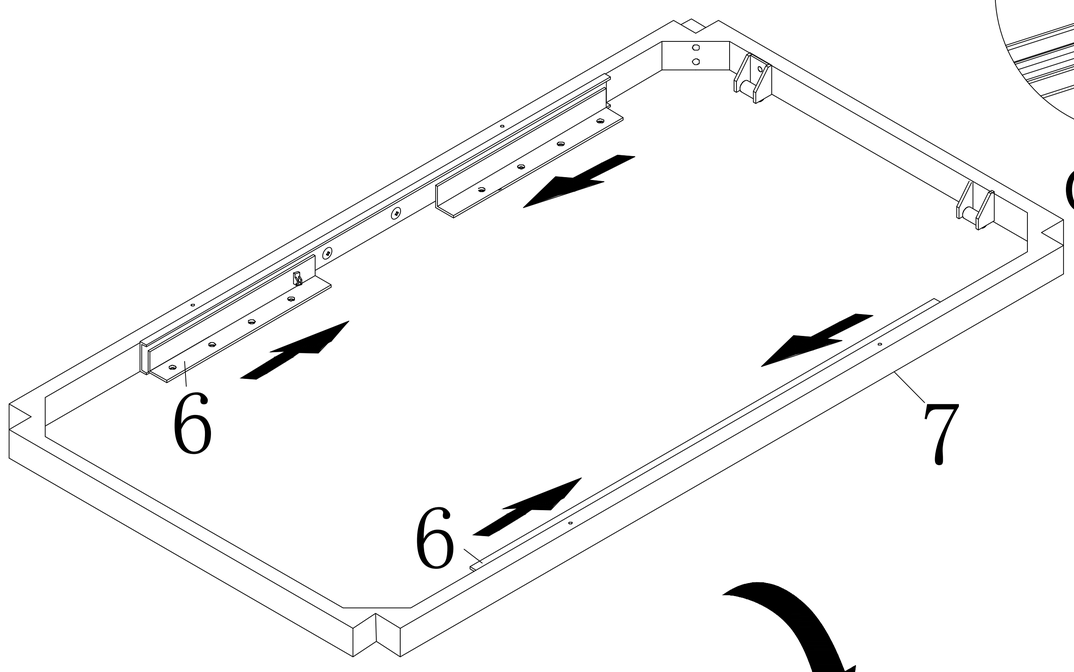

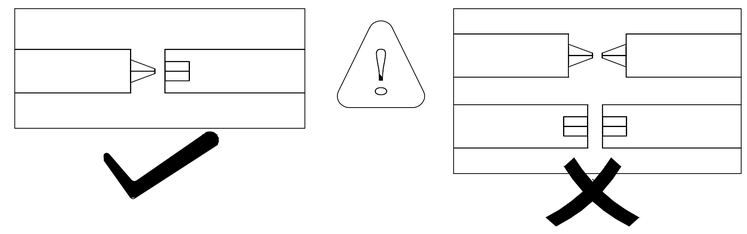

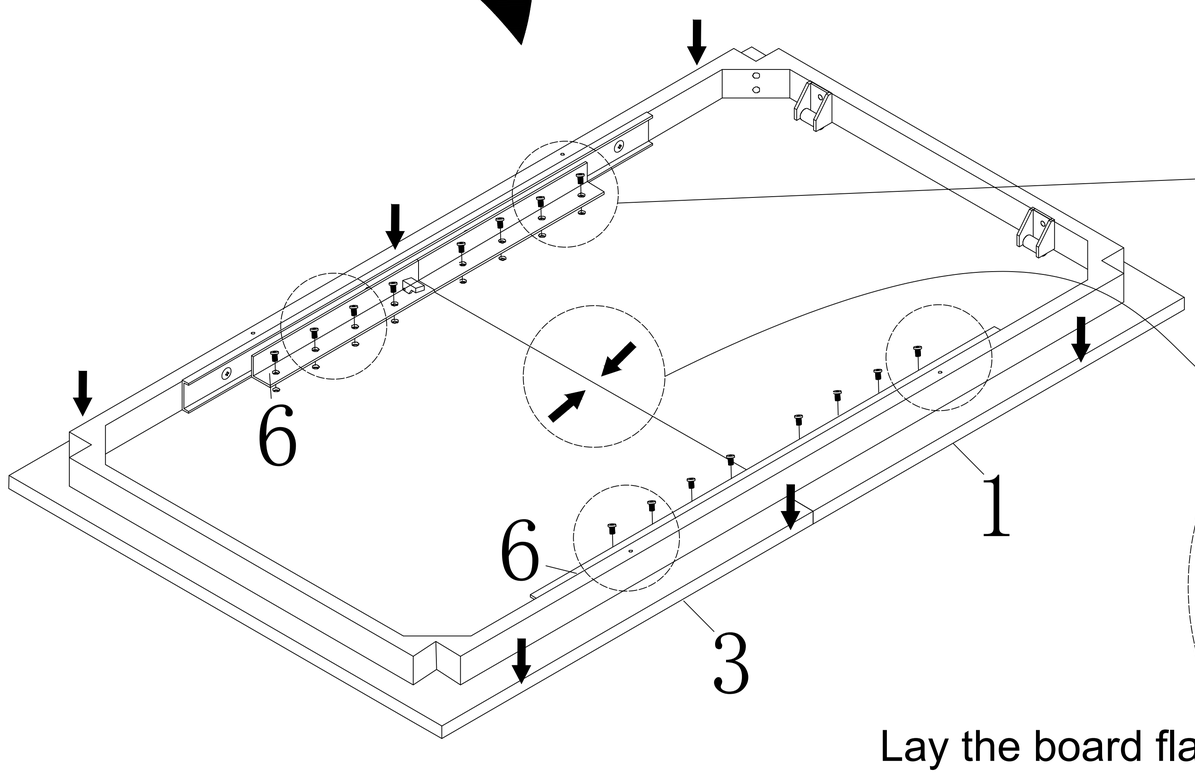


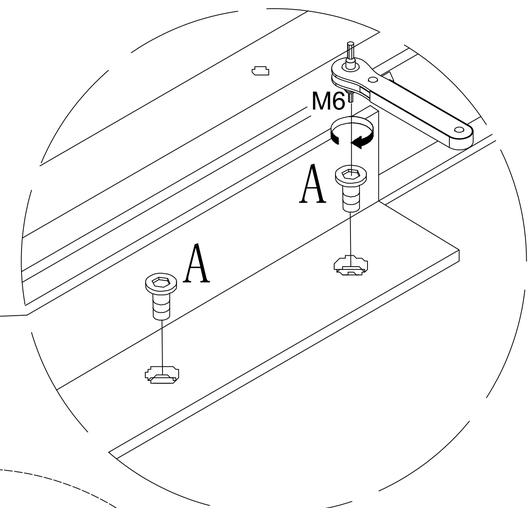


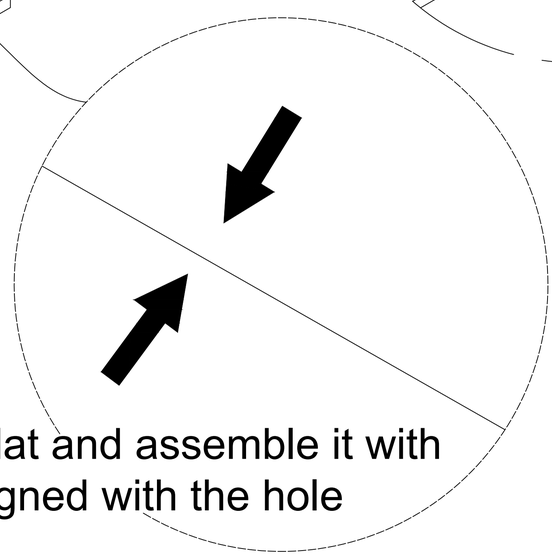



Lay the board flat and assemble it with the slide rail aligned with the hole

5

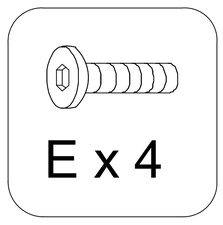


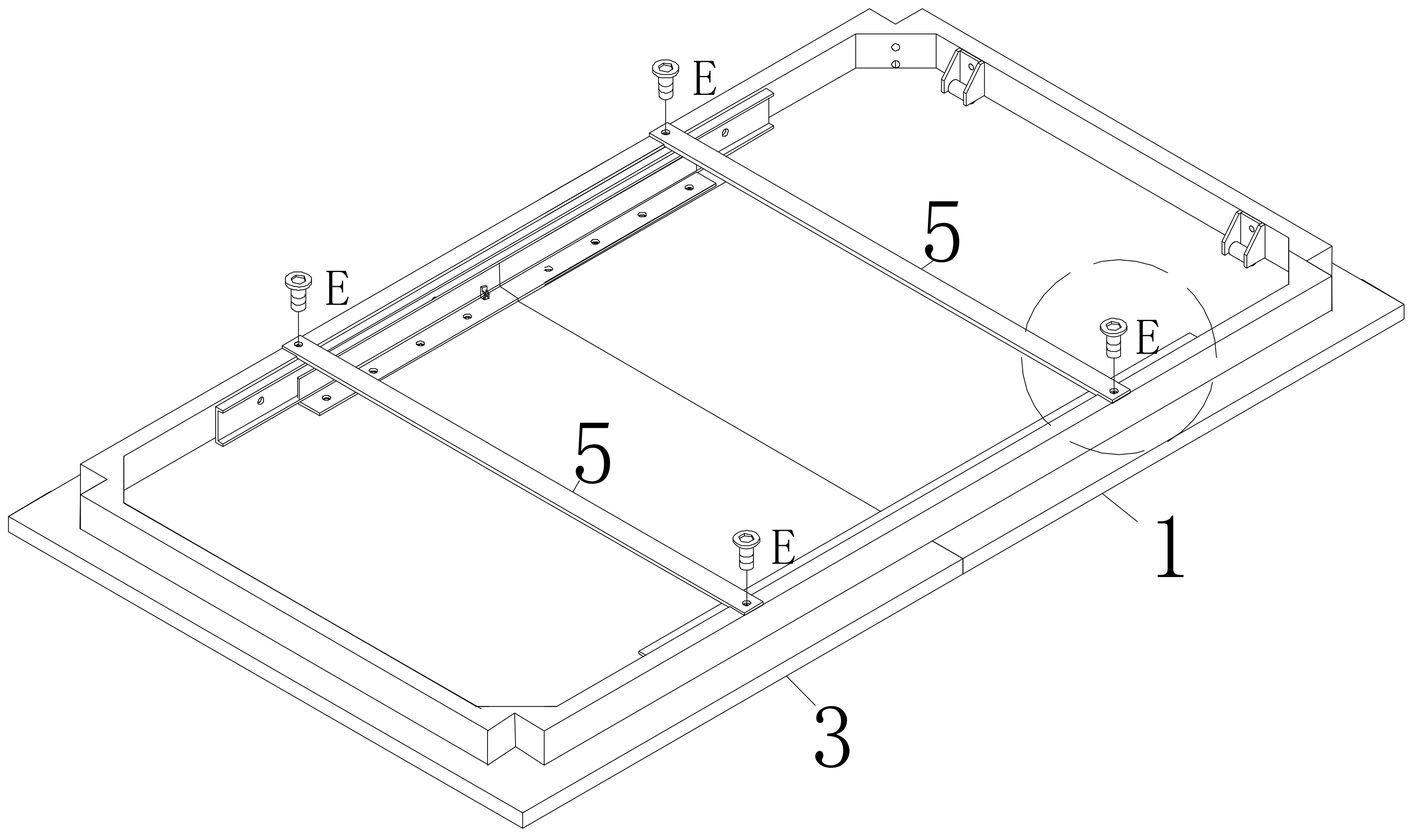


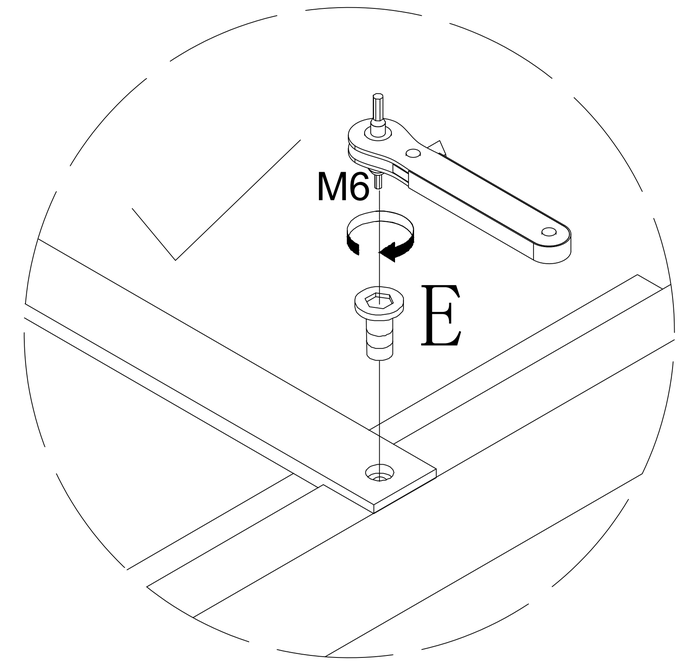


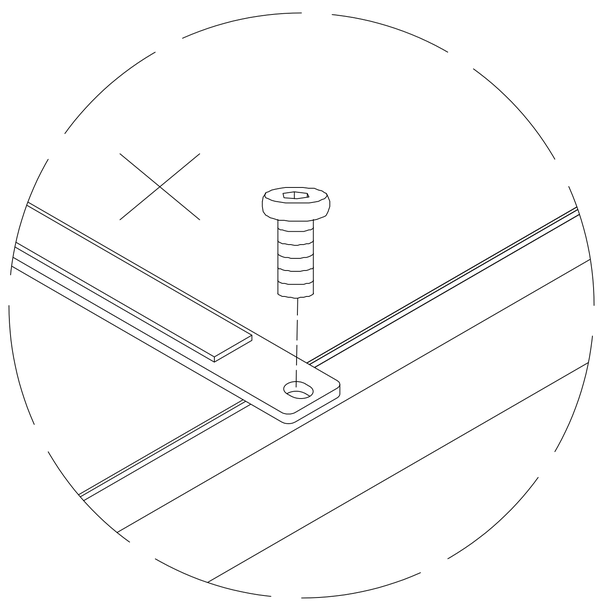

6

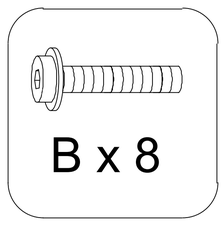


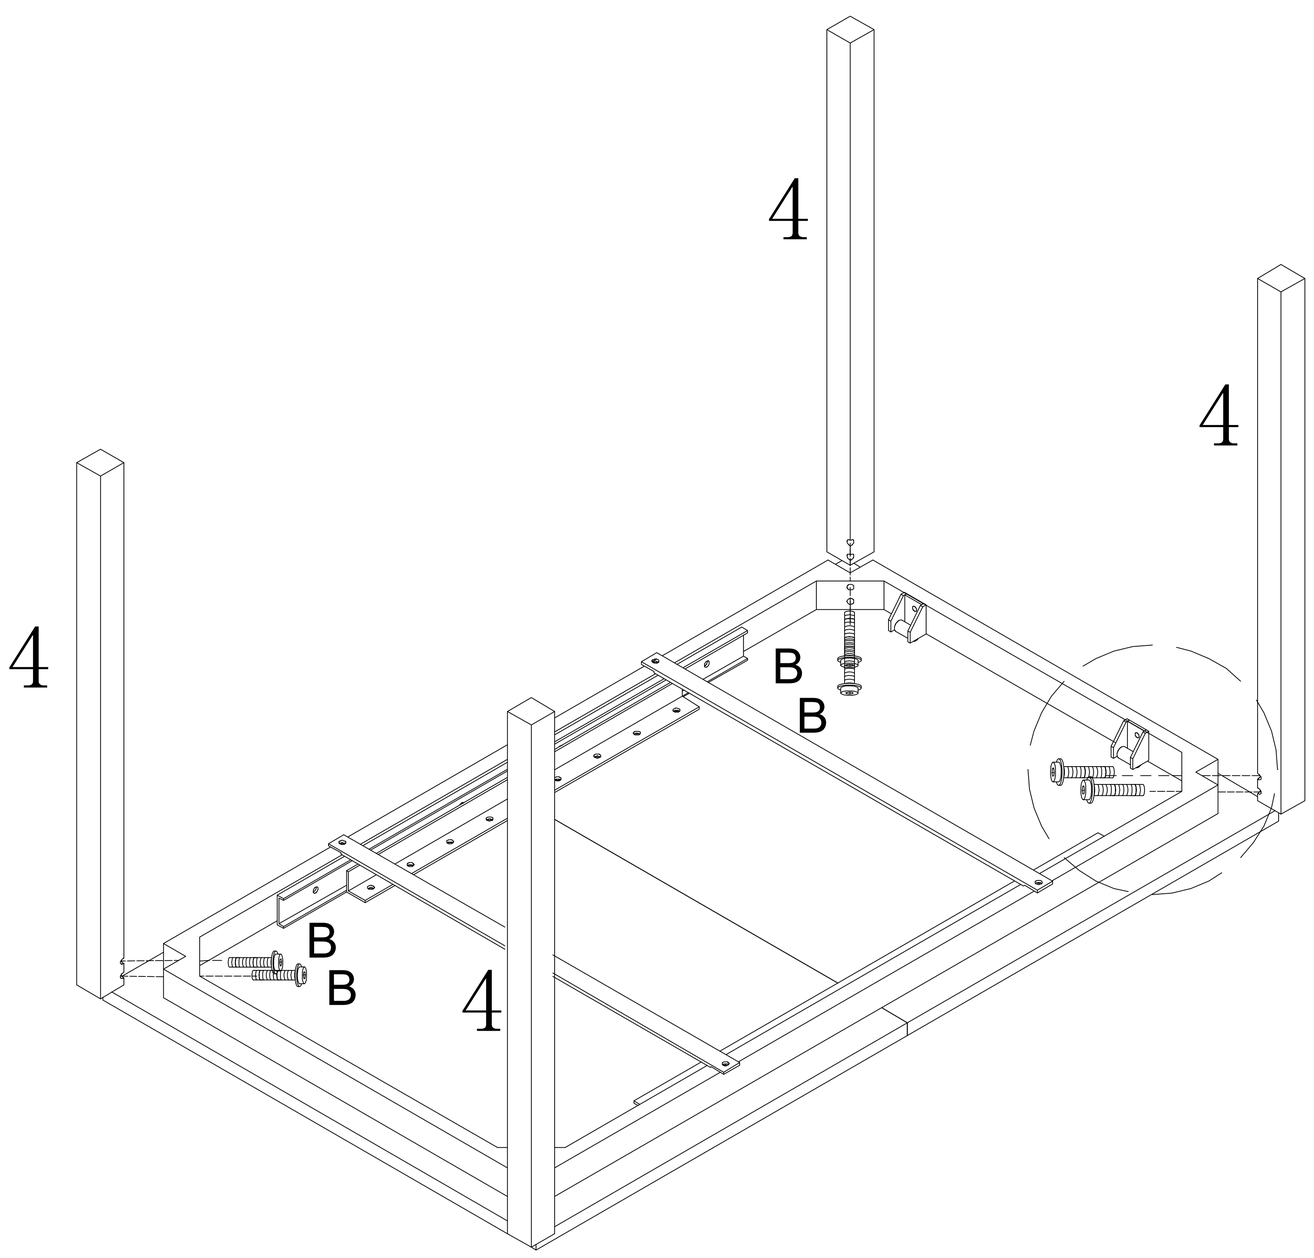

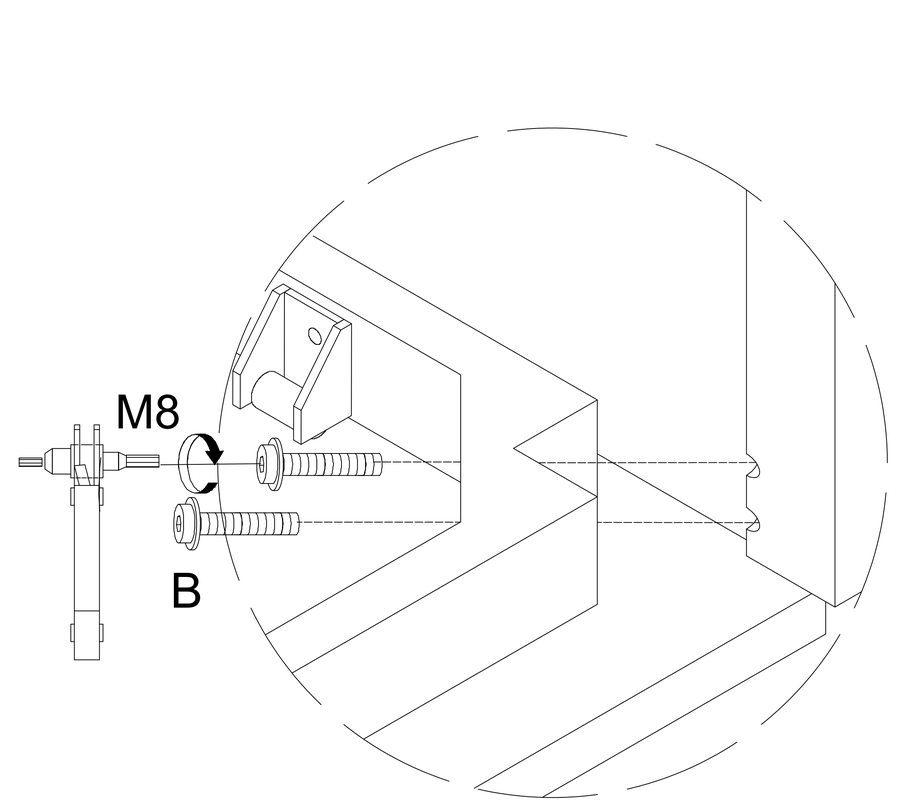


7


Open the bottom slide rail lock,
the desktop can be extended left and right

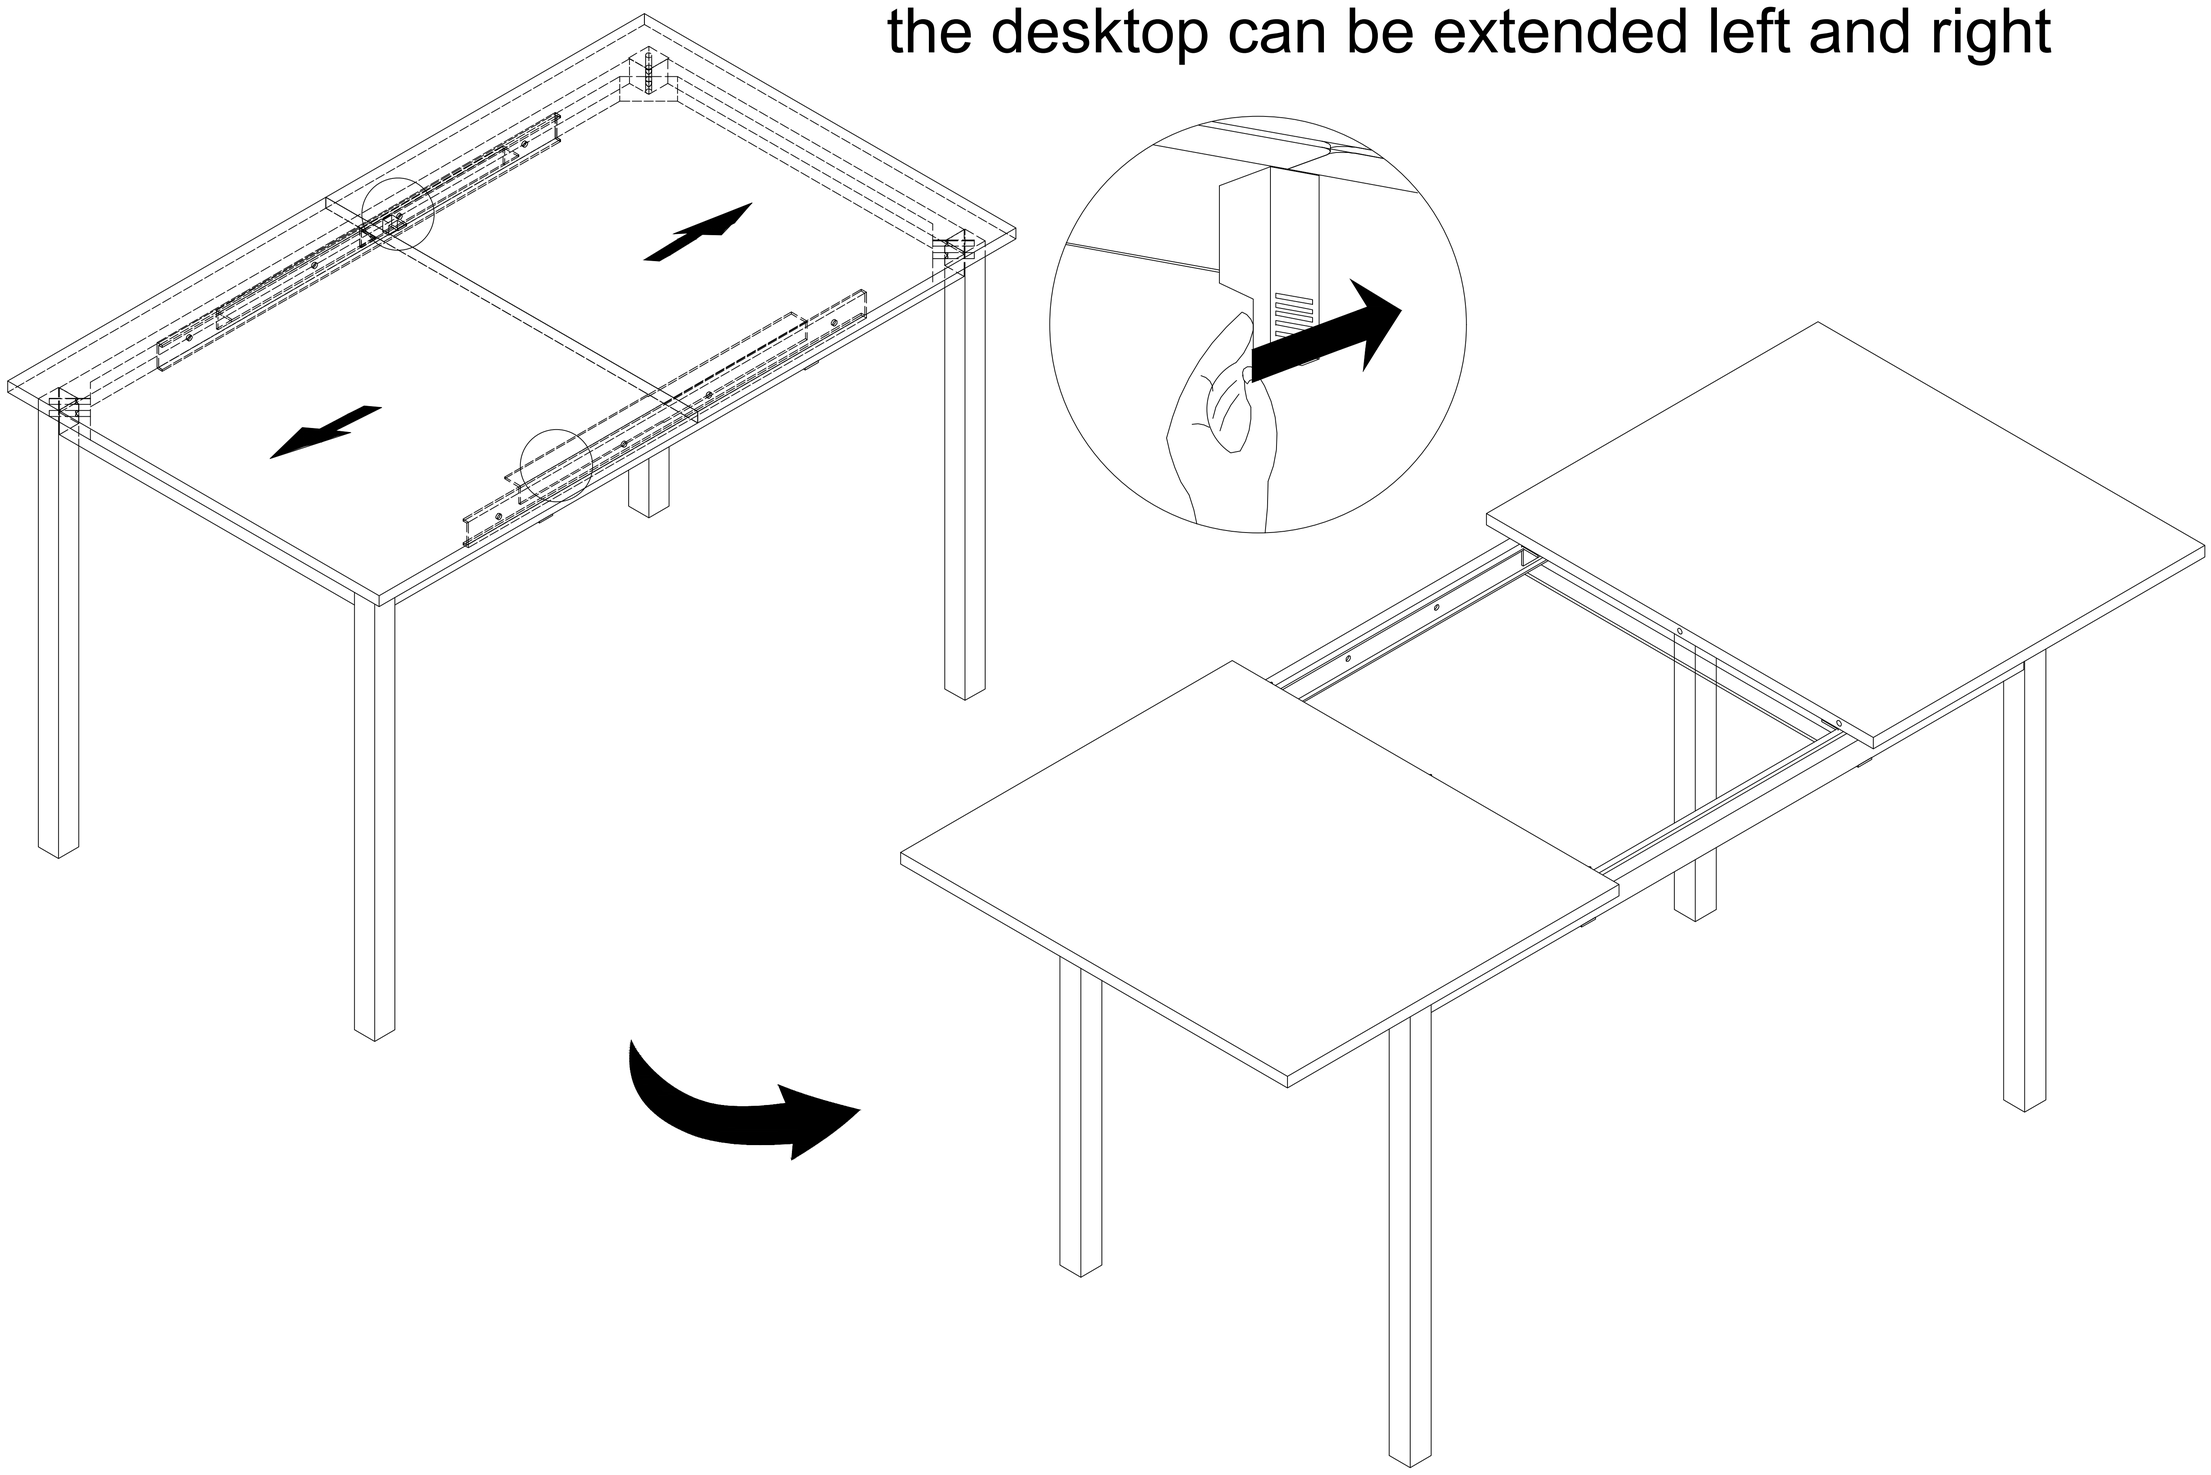


8


After the installation is complete,
close the bottom slide rail lock to prevent the desktop from sliding

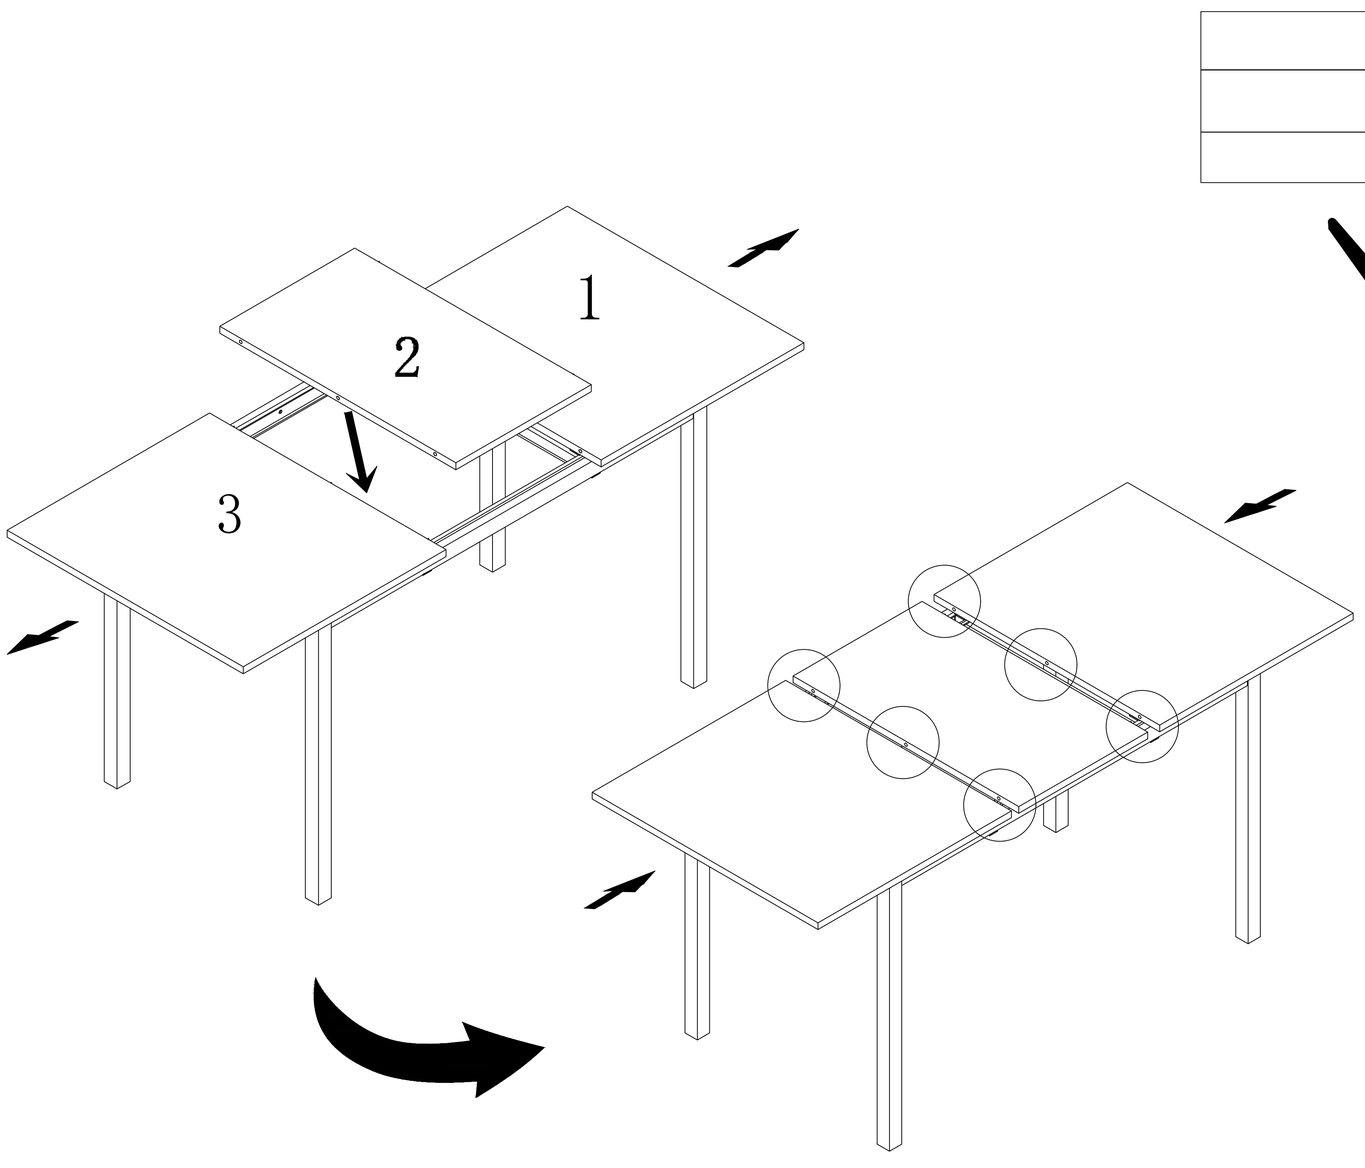


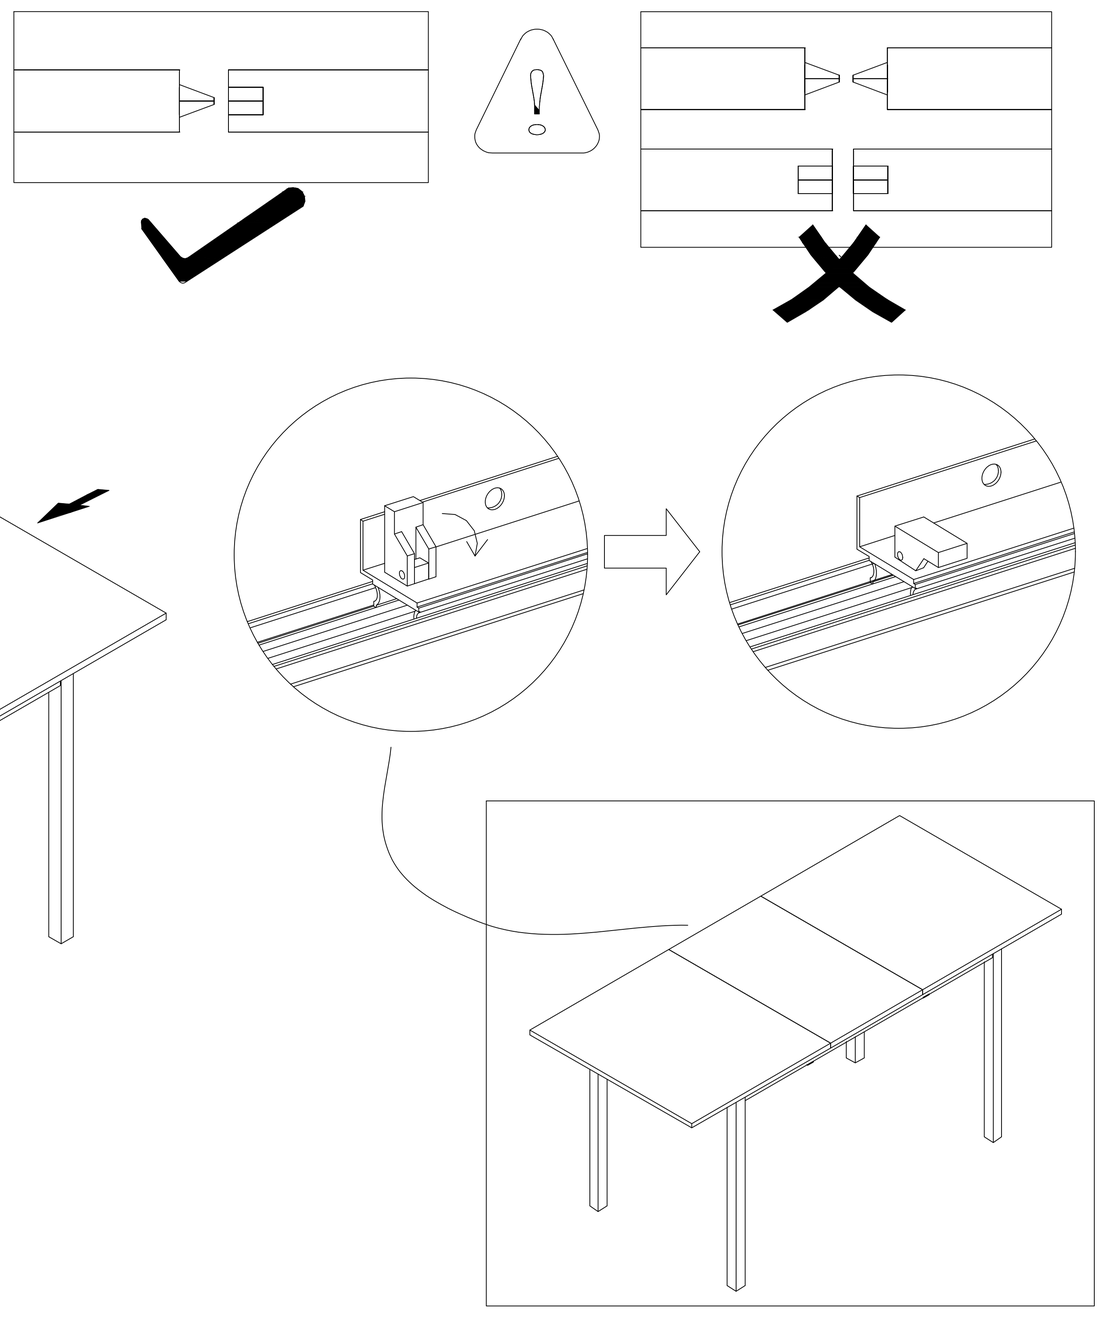


9

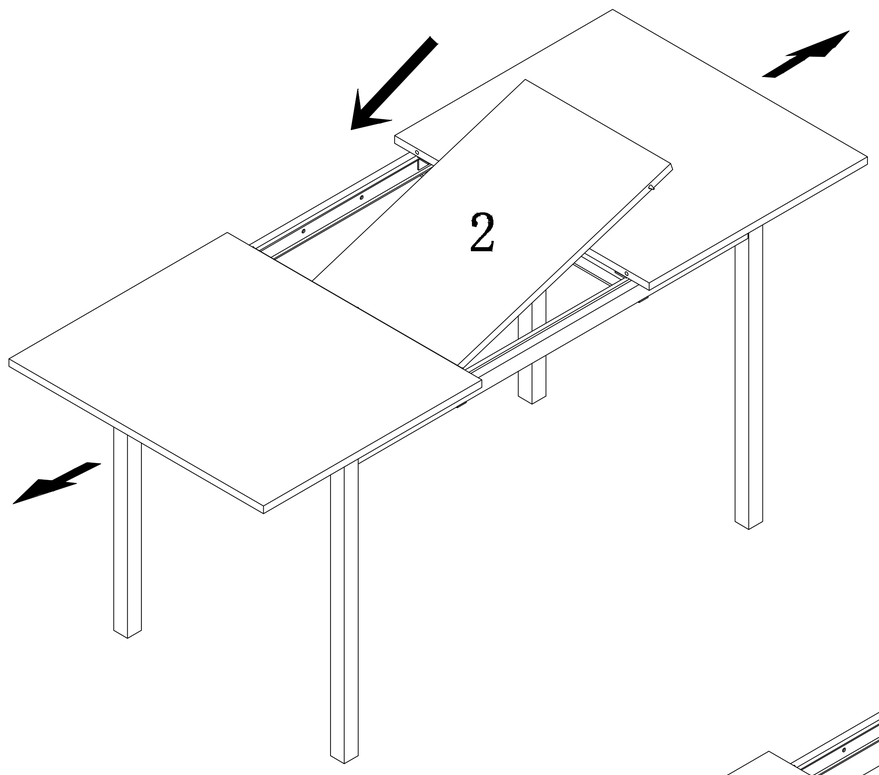

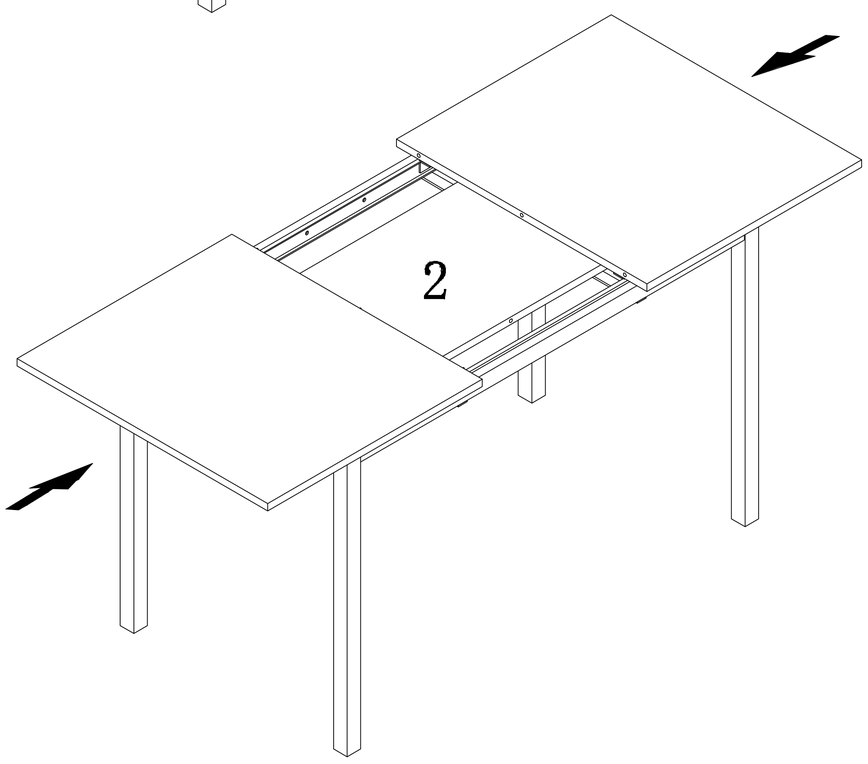


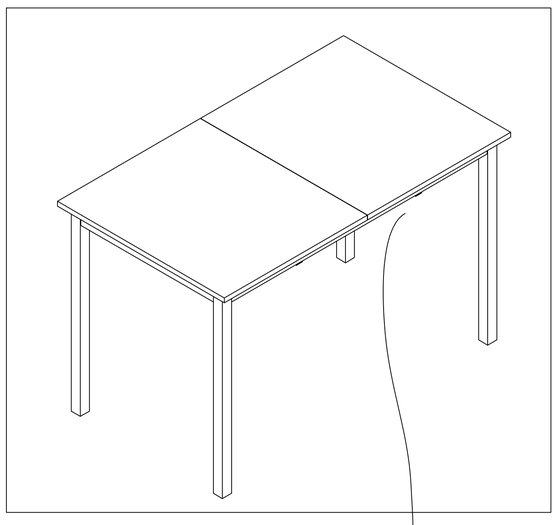


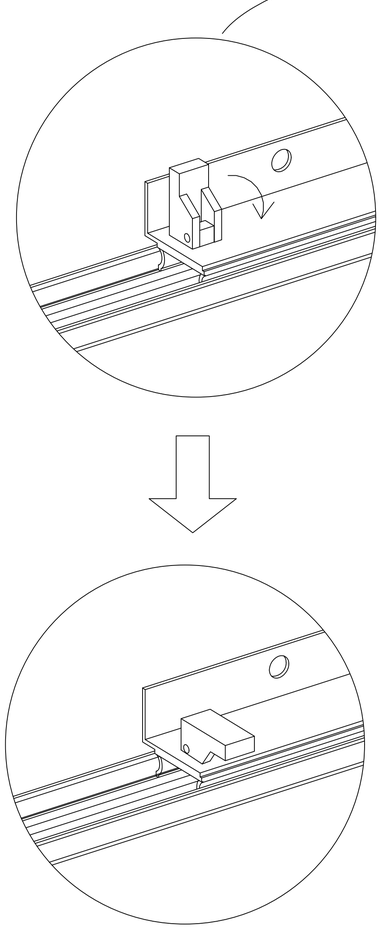


10

Assemble as needed

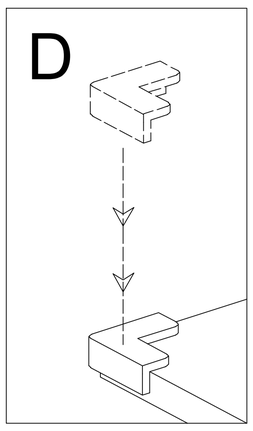

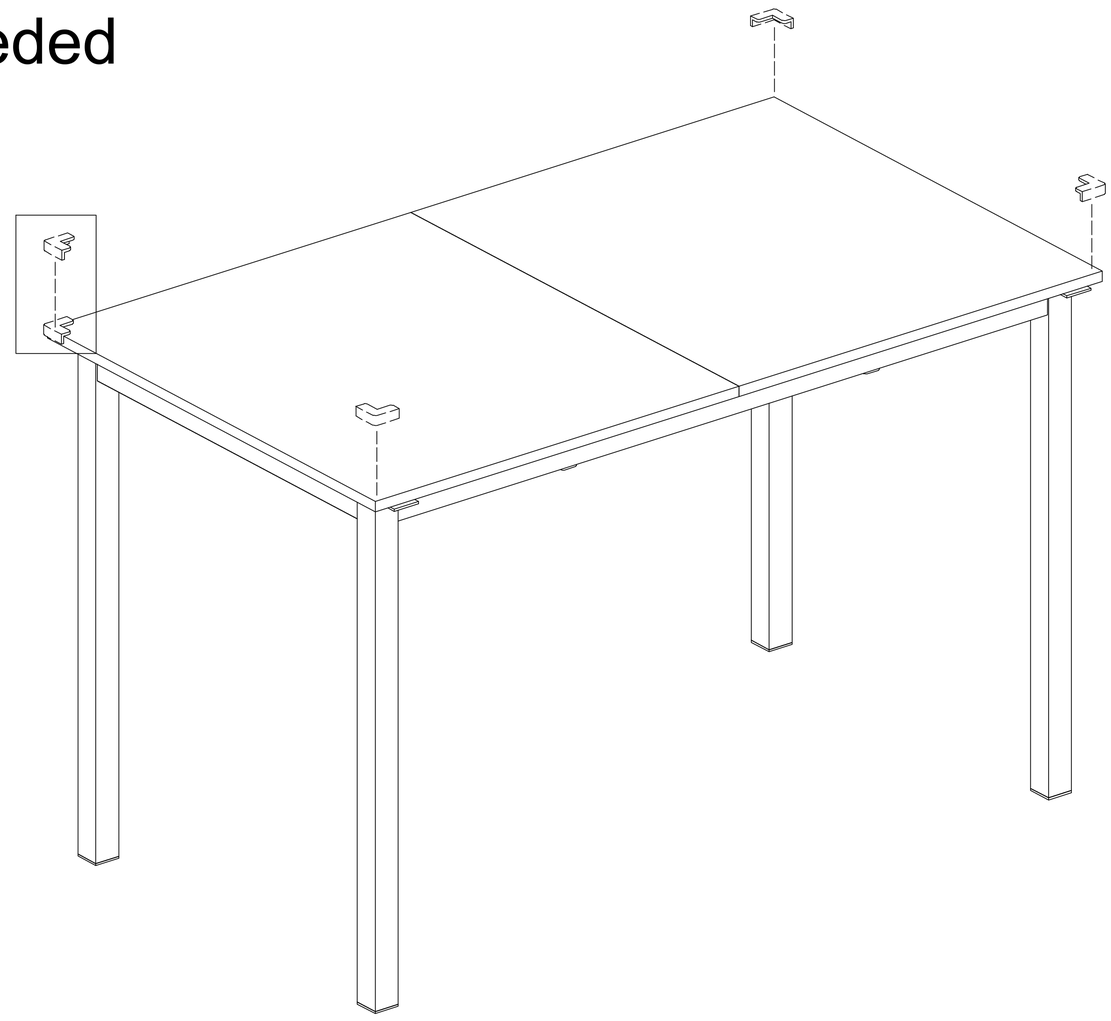

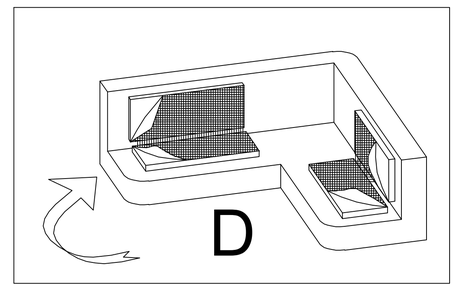

After the assembly, please remove the original plastic protective corner and replace it with the accessory D

Final Assembly