


Hall Tree

Assembly Instructions -Please keep for future reference

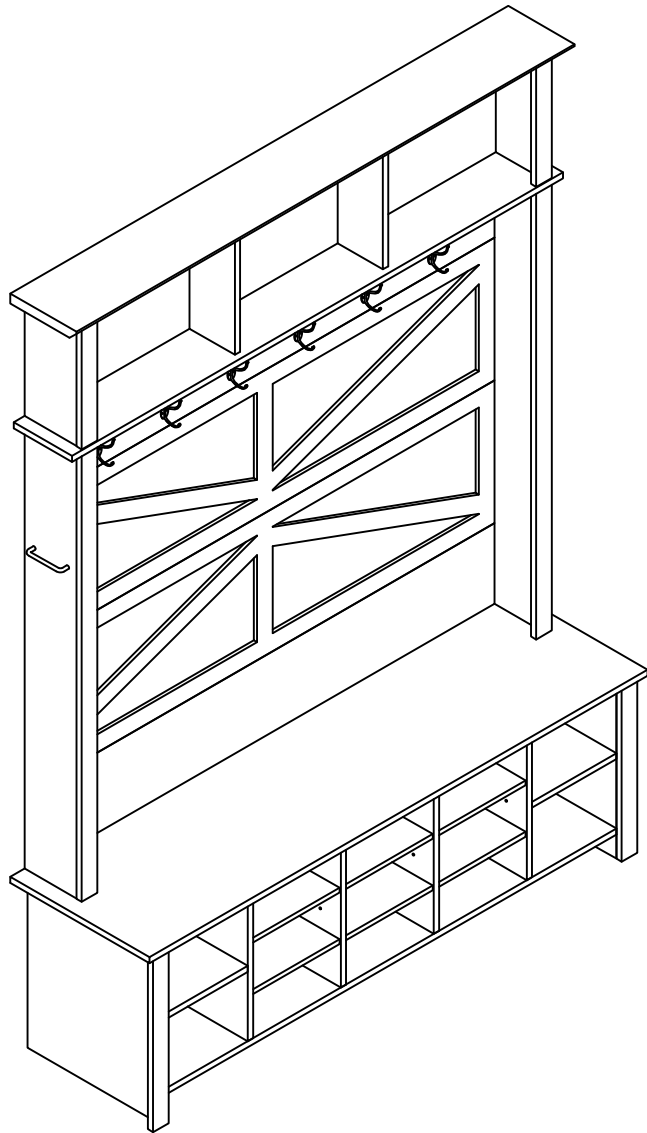

Dimensions

Width-56.3 inch

Depth-15.8 inch
















Height-74.8 inch

Important -Please read these instructions fully before starting assembly



Components -Fittings

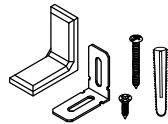Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

(A)  Cam Bolt x 62+3	(B)  Cam lock x 62+3	(C)  Dowel x 63+3	(D)  3.5*14mm Screw x 12+1
(E)  Clothes hook x 6	(F)  Sticker Cover x 42+2	(G)  Movable partition bracket x 24	(H)  Plastic buckle x 12
(I)  3*12mm Screw x 12	(J)  Anti-tipping device X 2	(K)  7*40mm Screw x 4+1	(L)  7*50mm Screw x 20+2
(M)  96mm Umbrella stand x 1	(N)  4*25mm Screw x 2	(O)  Wood legs x 2	

Tools required



Phillips screwdriver
(medium & large)



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

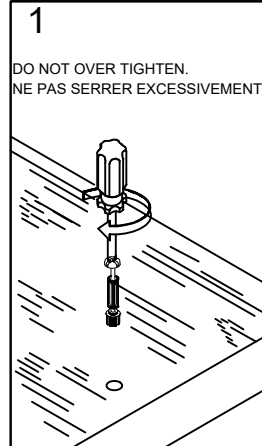

Step 2


Push the male camlock into the entry hole.

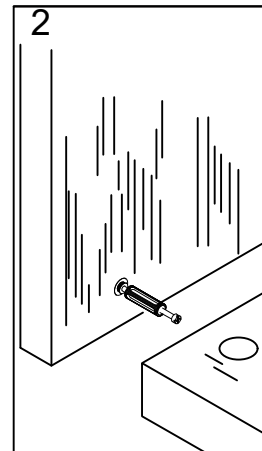

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

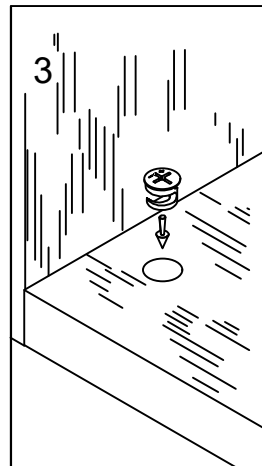


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.







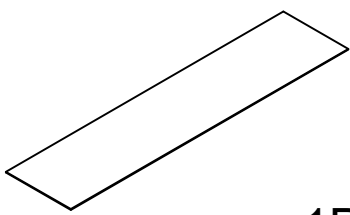
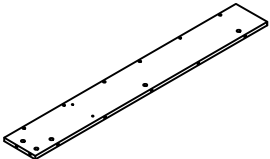
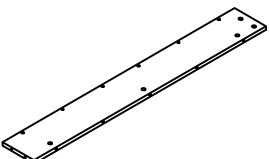
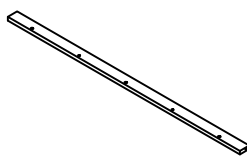
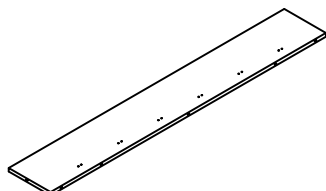
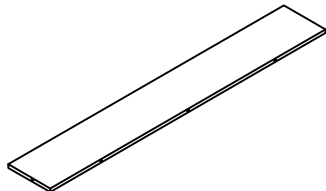
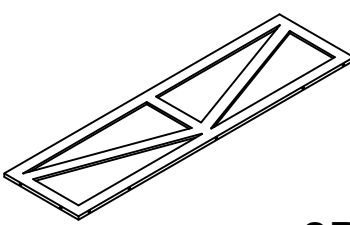
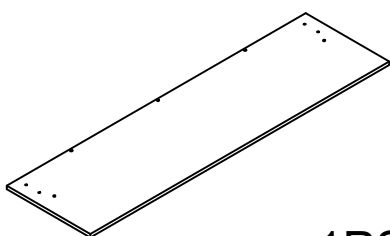
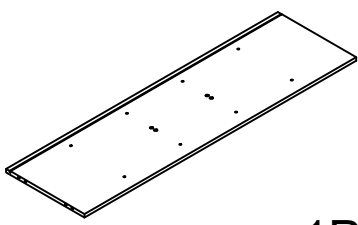
The joint is now secure.








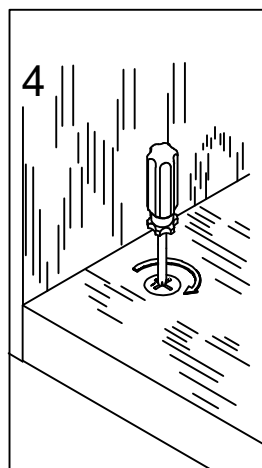

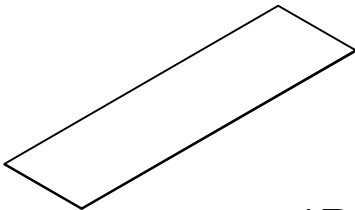
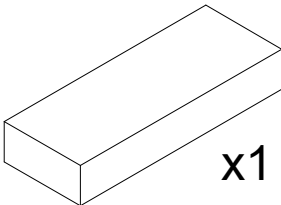


Assembly Instructions

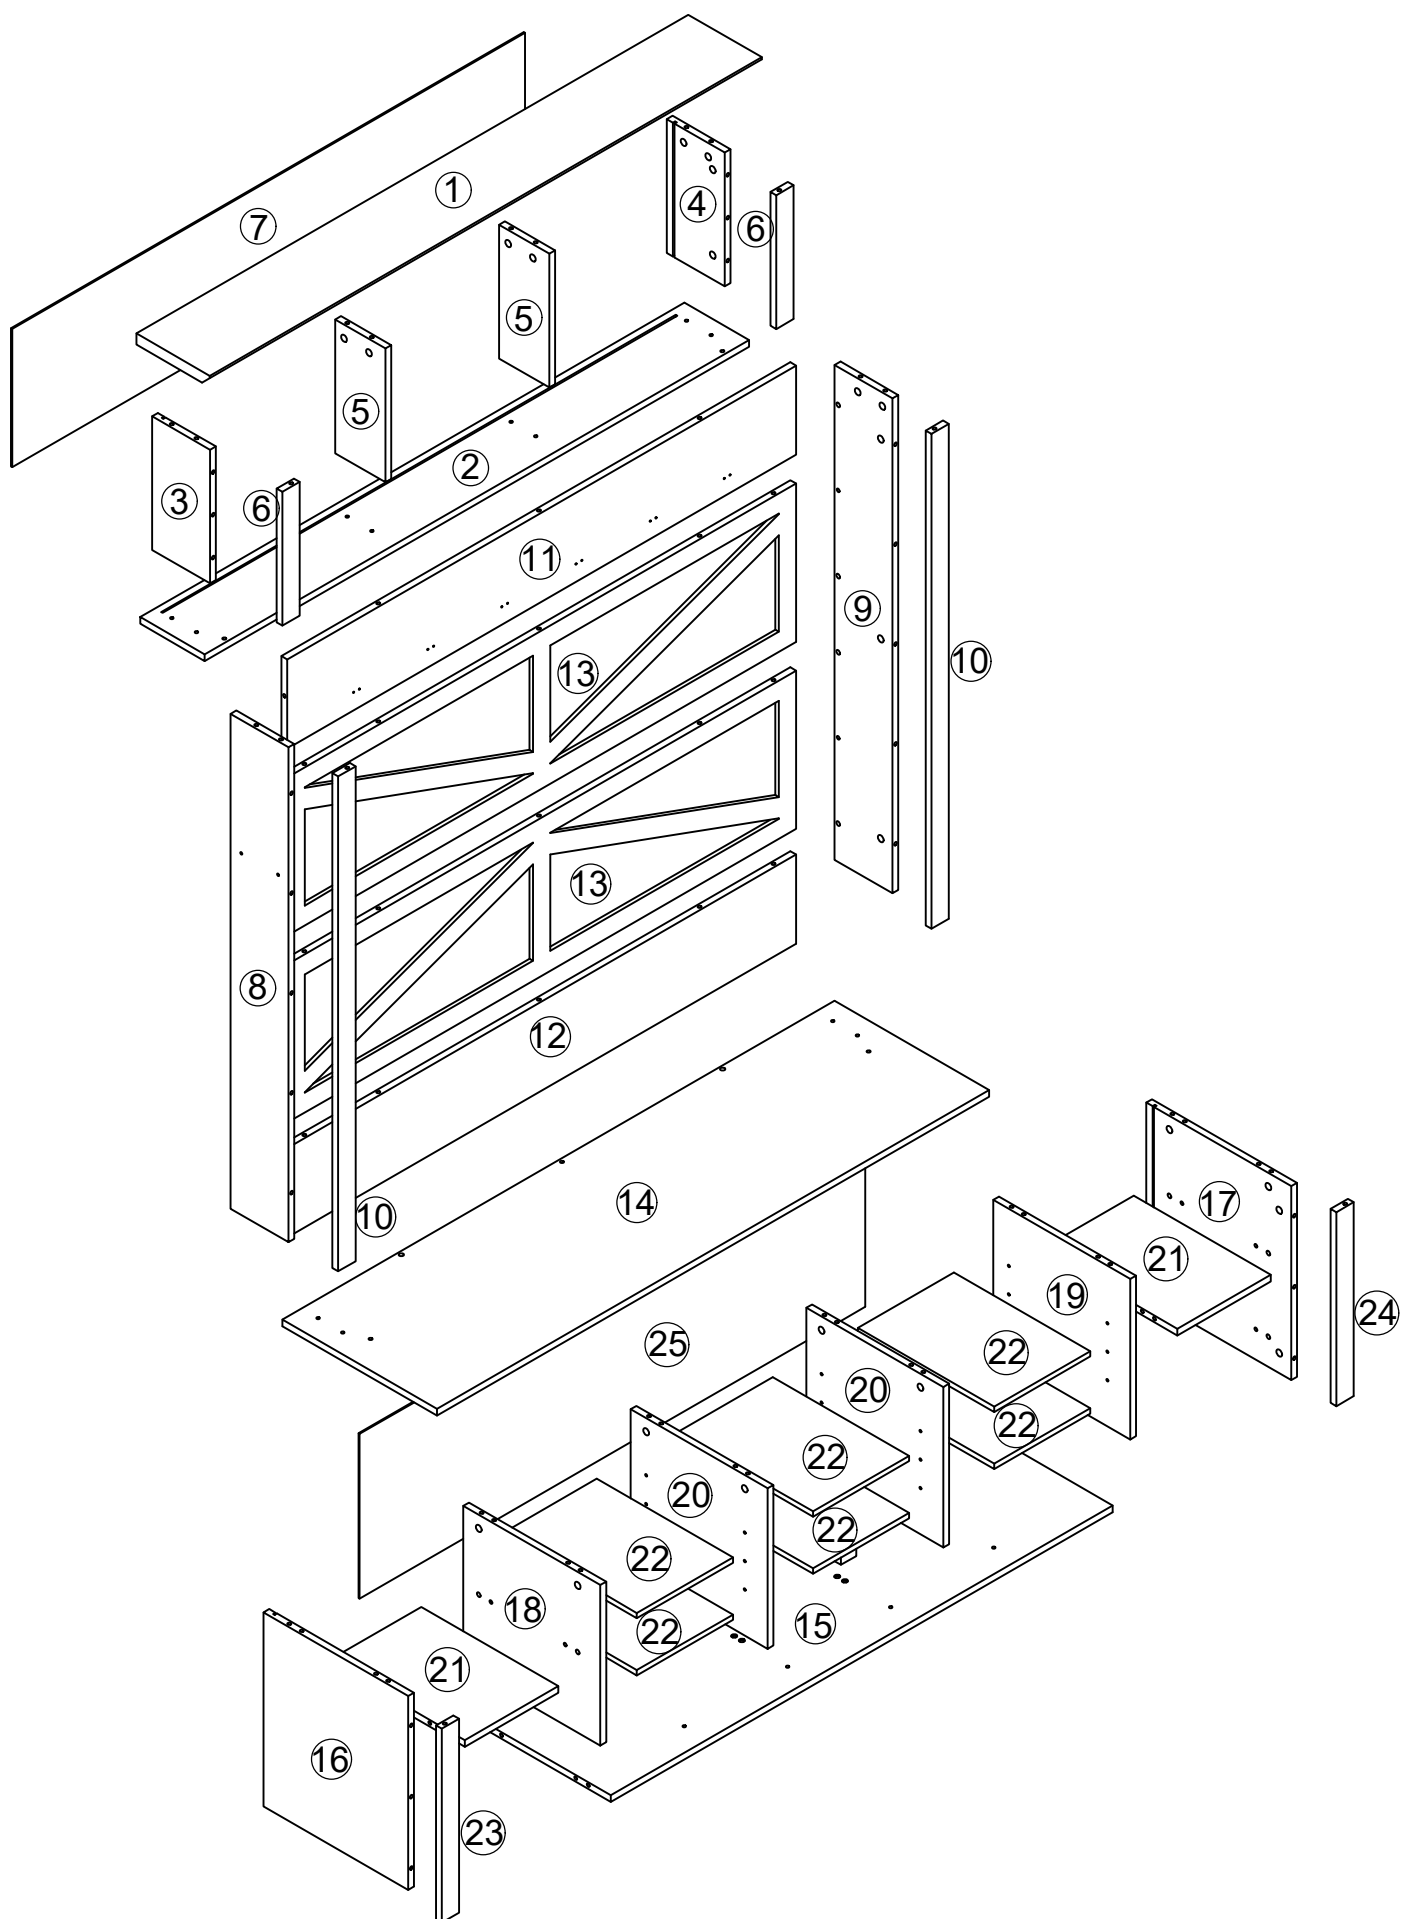


N721P264915
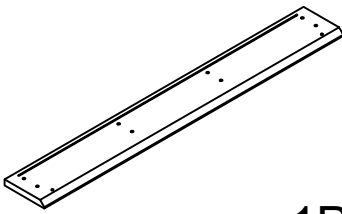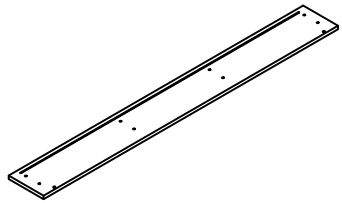
<p>① 1430*190*25mm</p>  <p>1PS</p>	<p>② 1410*167*15mm</p>  <p>1PS</p>	<p>③ 300*150*15mm</p>  <p>1PS</p>
<p>④ 300*150*15mm</p>  <p>1PS</p>	<p>⑤ 300*130*15mm</p>  <p>2PS</p>	<p>⑥ 300*45*15mm</p>  <p>2PS</p>
<p>⑦ 1328*310*3mm</p>  <p>1PS</p>	<p>⑧ 1110*150*15mm</p>  <p>1PS</p>	<p>⑨ 1110*150*15mm</p>  <p>1PS</p>
<p>⑩ 1110*45*15mm</p>  <p>2PS</p>	<p>⑪ 1318*200*15mm</p>  <p>1PS</p>	<p>⑫ 1318*200*15mm</p>  <p>1PS</p>
<p>⑬ 1318*355*15mm</p>  <p>2PS</p>	<p>⑭ 1430*400*15mm</p>  <p>1PS</p>	<p>⑮ 1300*375*15mm</p>  <p>1PS</p>

<p>①⑥ 435*375*15mm</p>  <p>1PS</p>	<p>①⑦ 435*375*15mm</p>  <p>1PS</p>	<p>①⑧ 360*355*15mm</p>  <p>1PS</p>
<p>①⑨ 360*355*15mm</p>  <p>1PS</p>	<p>②⑩ 360*355*15mm</p>  <p>2PS</p>	<p>②⑪ 242*355*15mm</p>  <p>2PS</p>
<p>②② 249*353*12mm</p>  <p>6PS</p>	<p>②③ 435*45*15mm</p>  <p>1PS</p>	<p>②④ 435*45*15mm</p>  <p>1PS</p>
<p>②⑤ 1310*370*3mm</p>  <p>1PS</p>	 <p>x1</p> <p>Hardware Kit</p>	

Assembly Instructions

Step 1

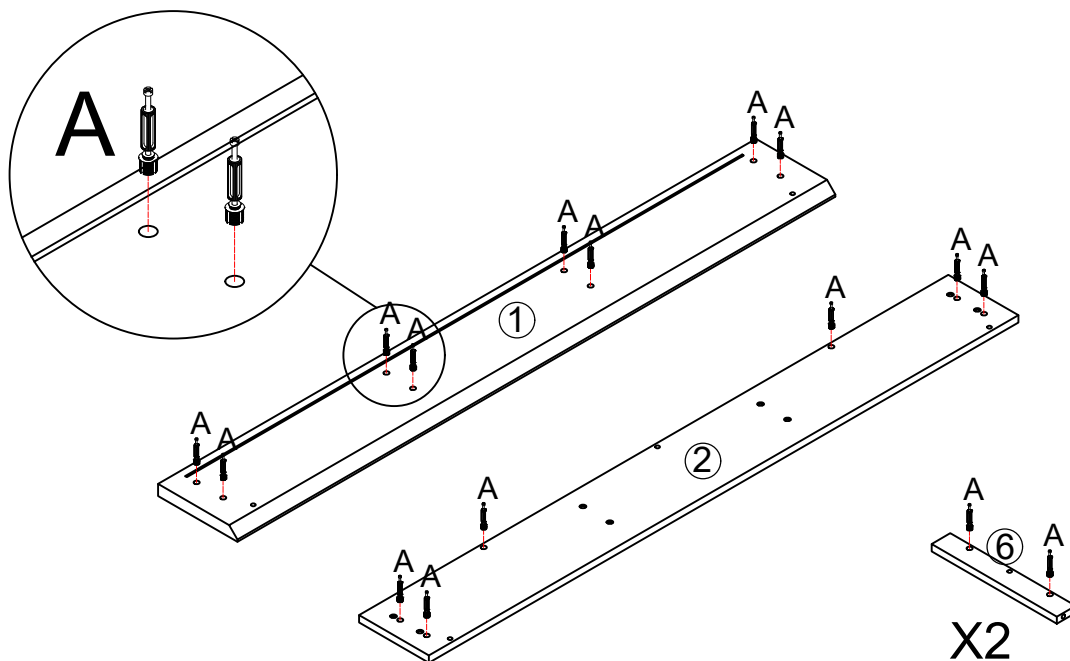


(A)



Cam Bolt x 18

Step 2

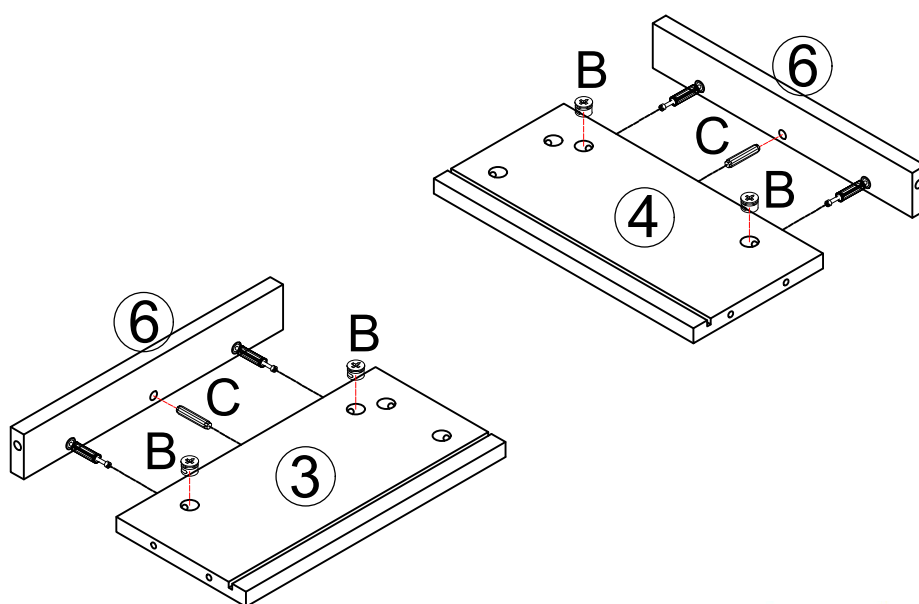


(B)




Cam lock x 4

(C)




Dowel x 2

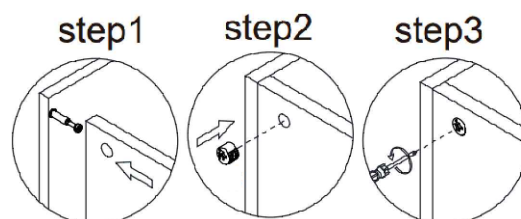

Assembly Instructions

Step 3

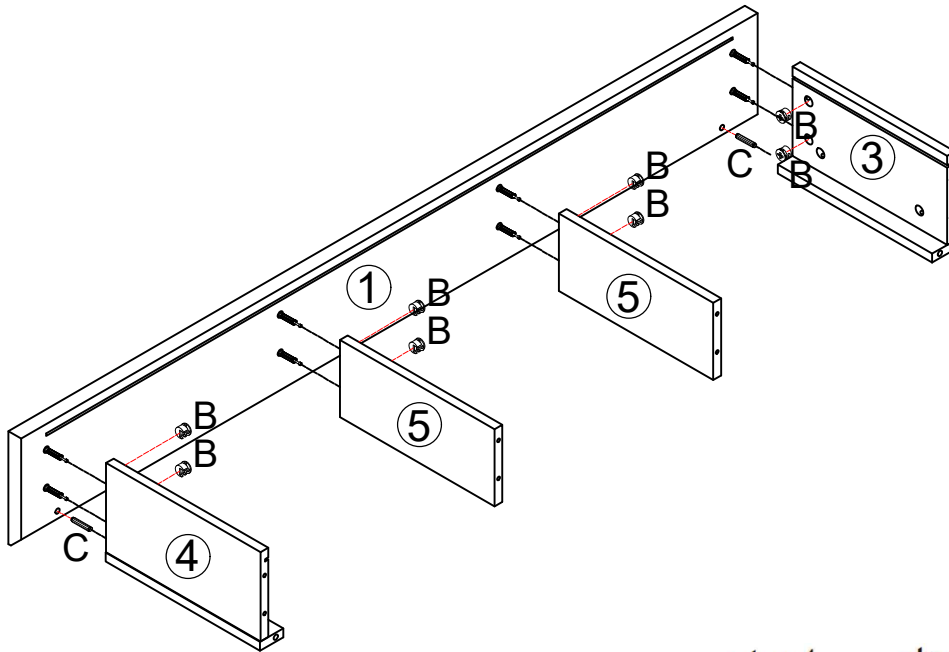


(B)




Cam lock x 8

(C)




Dowel x 2


step1

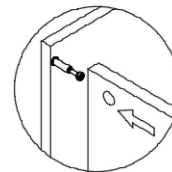


step2

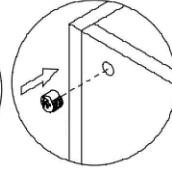

step3

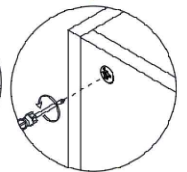


Step 4

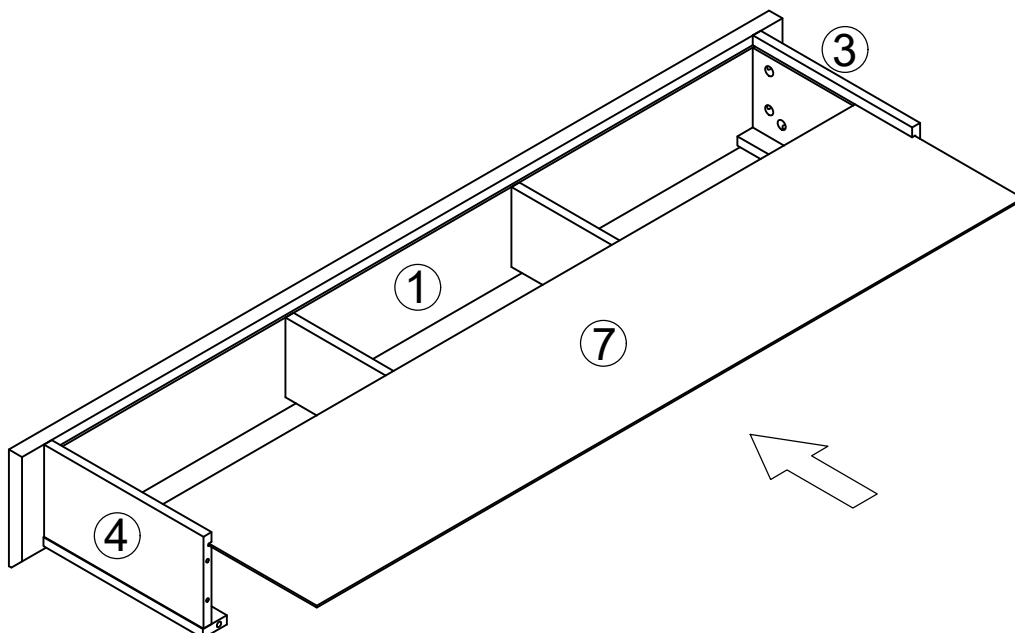


Assembly Instructions

Step 5

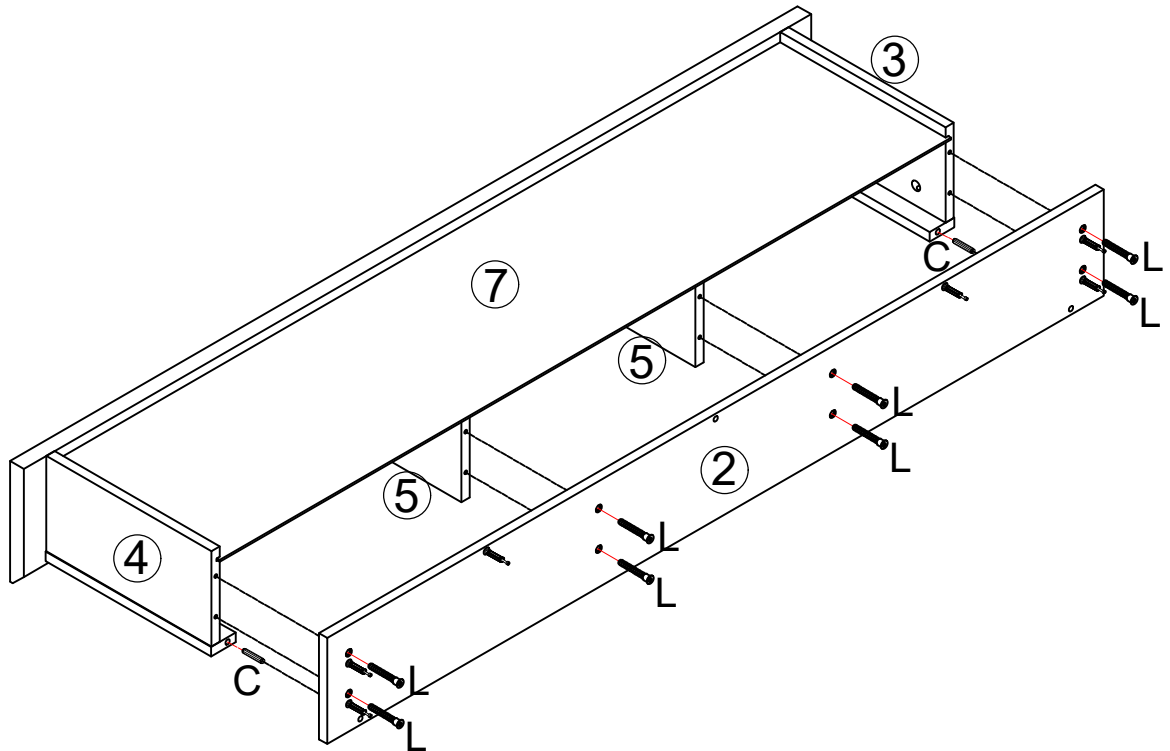

Ⓒ




Dowel x 2

Ⓐ




7*50mm Screw x 8

Step 6

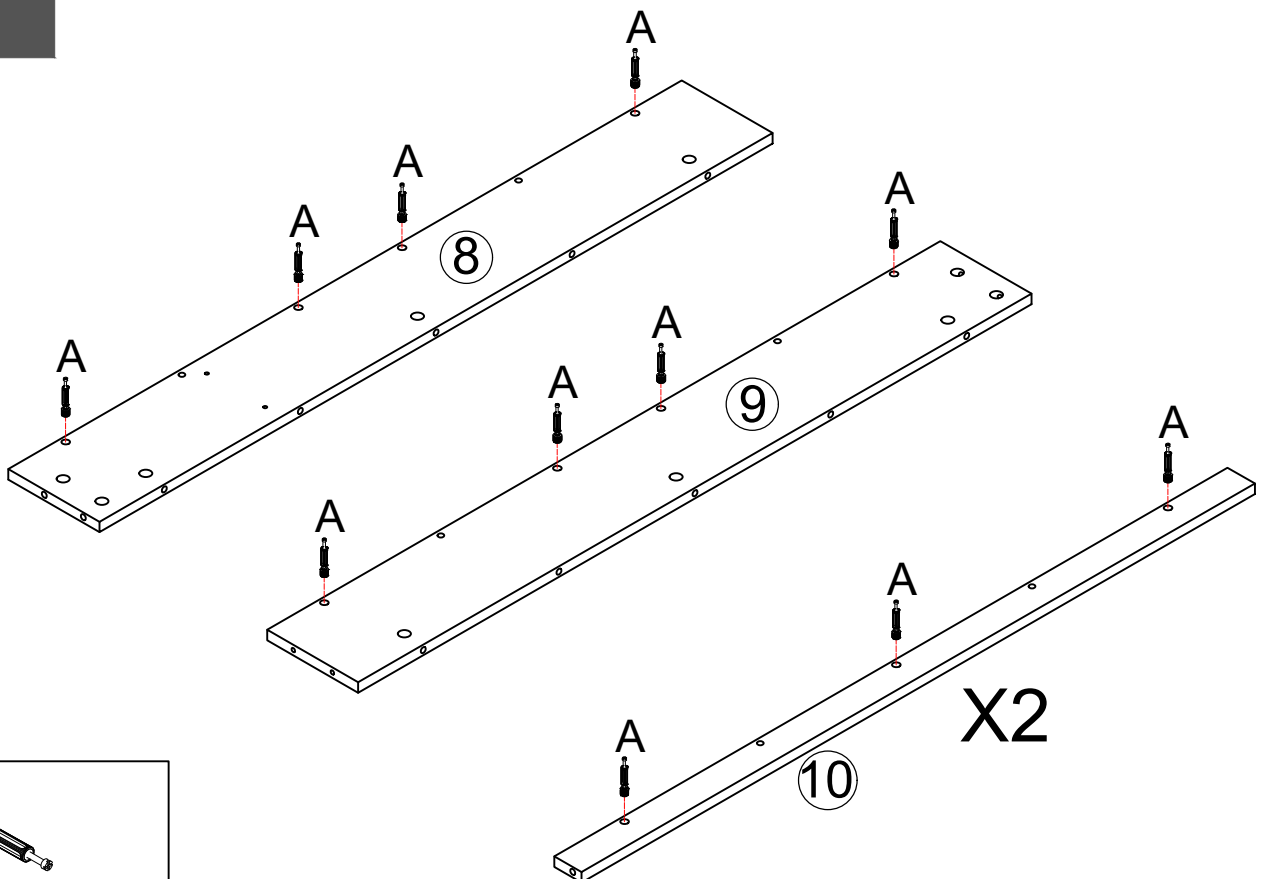


Ⓐ



Cam Bolt x 14

Assembly Instructions

Step 7

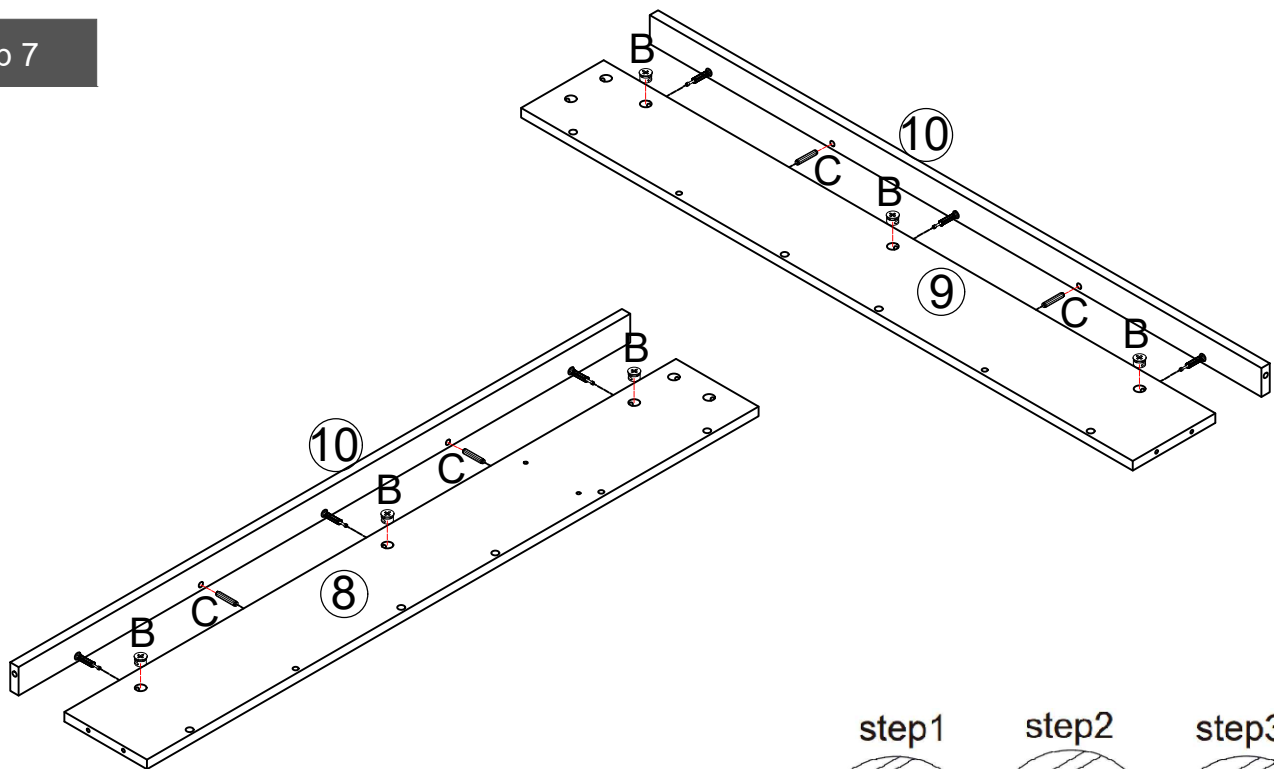


(B)




Cam lock x 6

(C)




Dowel x 4


step1

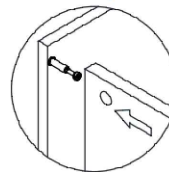


step2

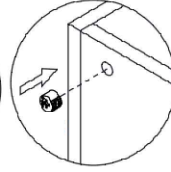


step3

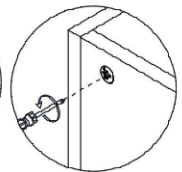

Step 8

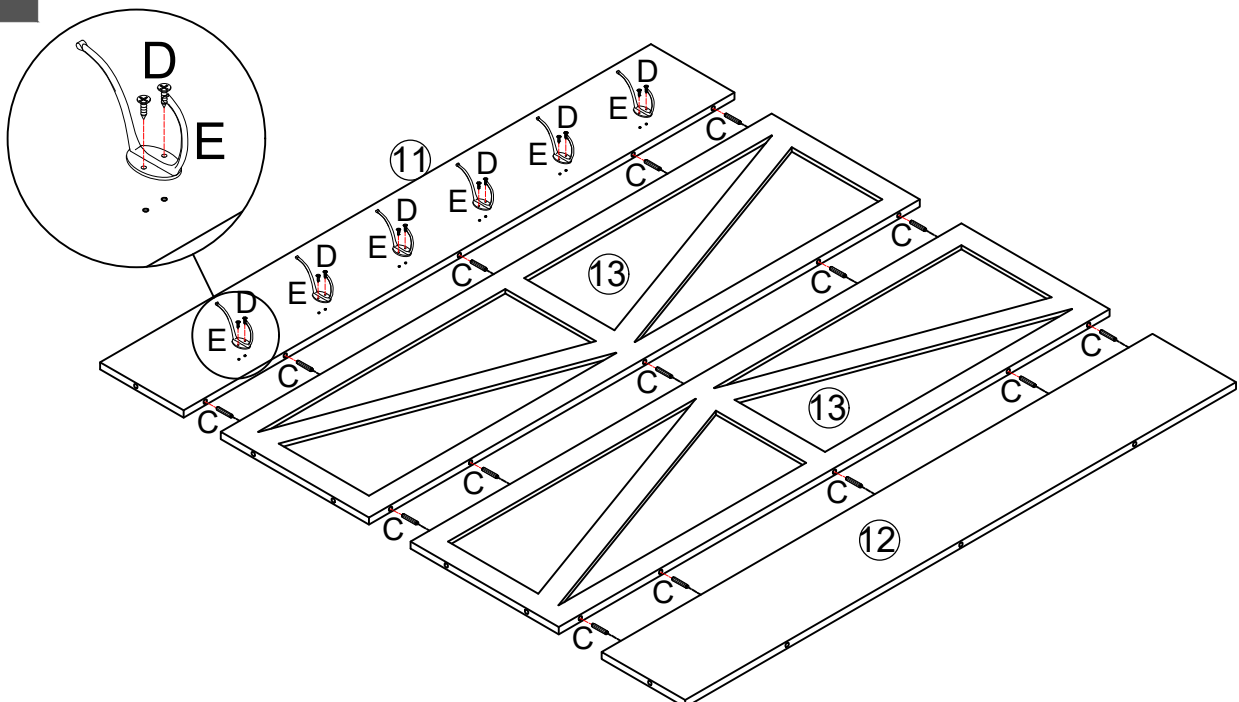

(C)



Dowel x 15

(D)



3.5*14mm Screw x 12


(E)




Clothes hook x 6

Assembly Instructions

Step 9

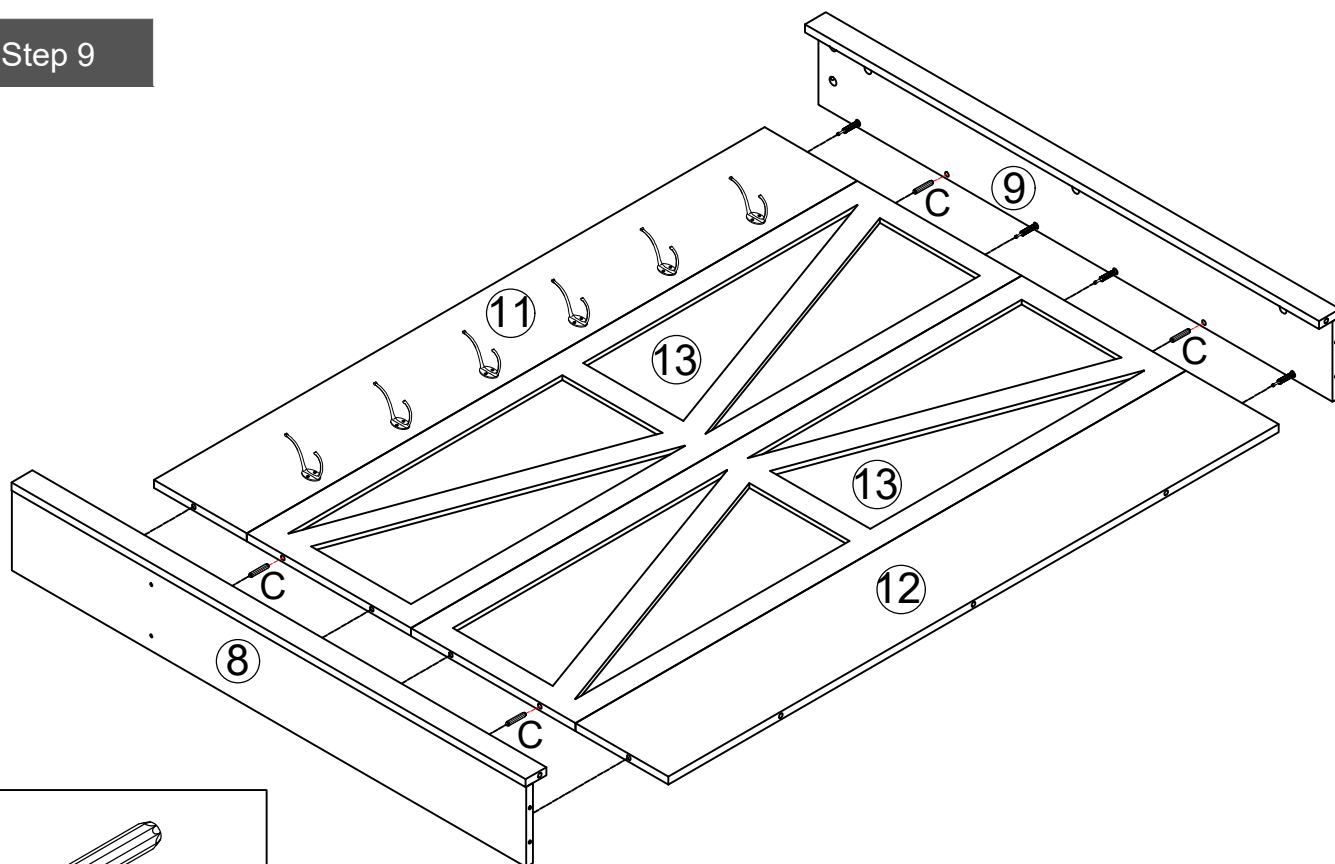


(C)



Dowel x 4

Step 10

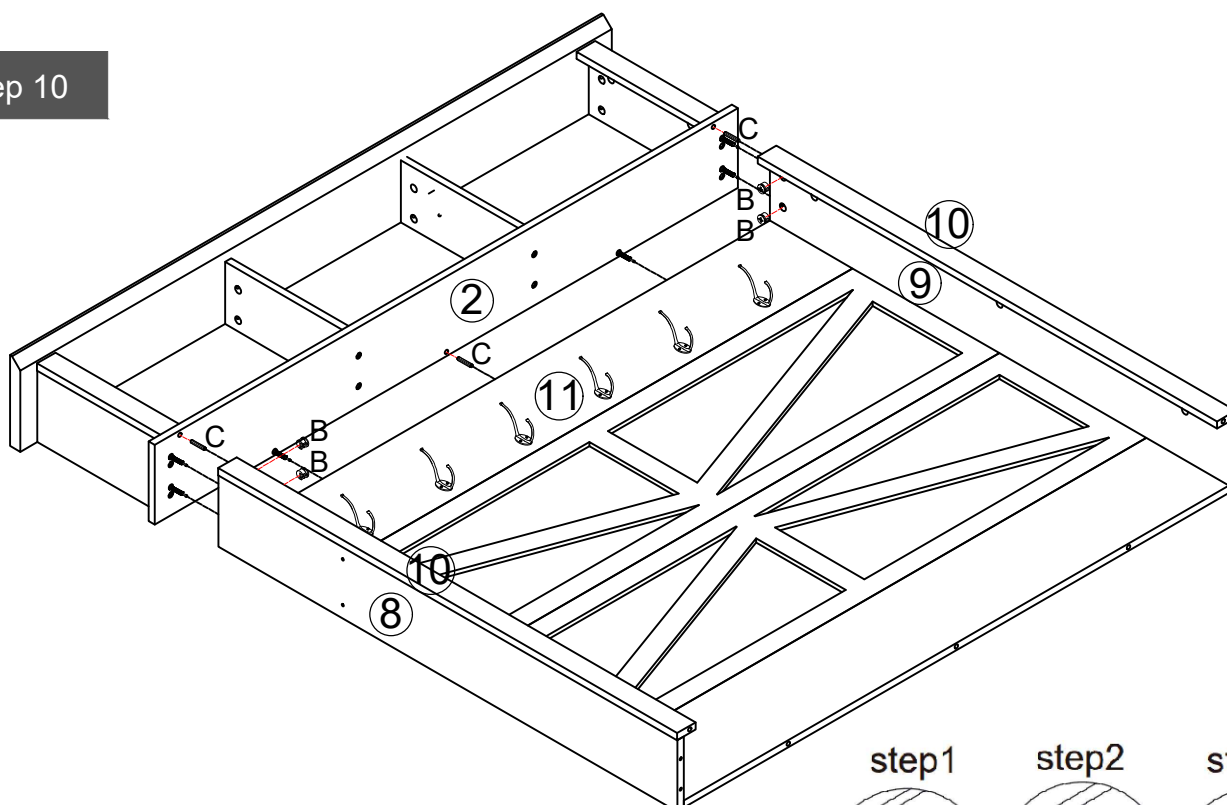


(B)




Cam lock x 4

(C)




Dowel x 3


step1

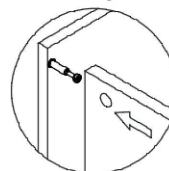

step2

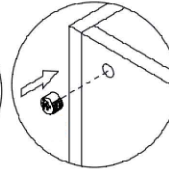


step3

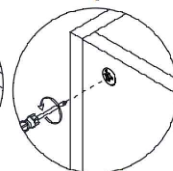


Assembly Instructions

Step 11

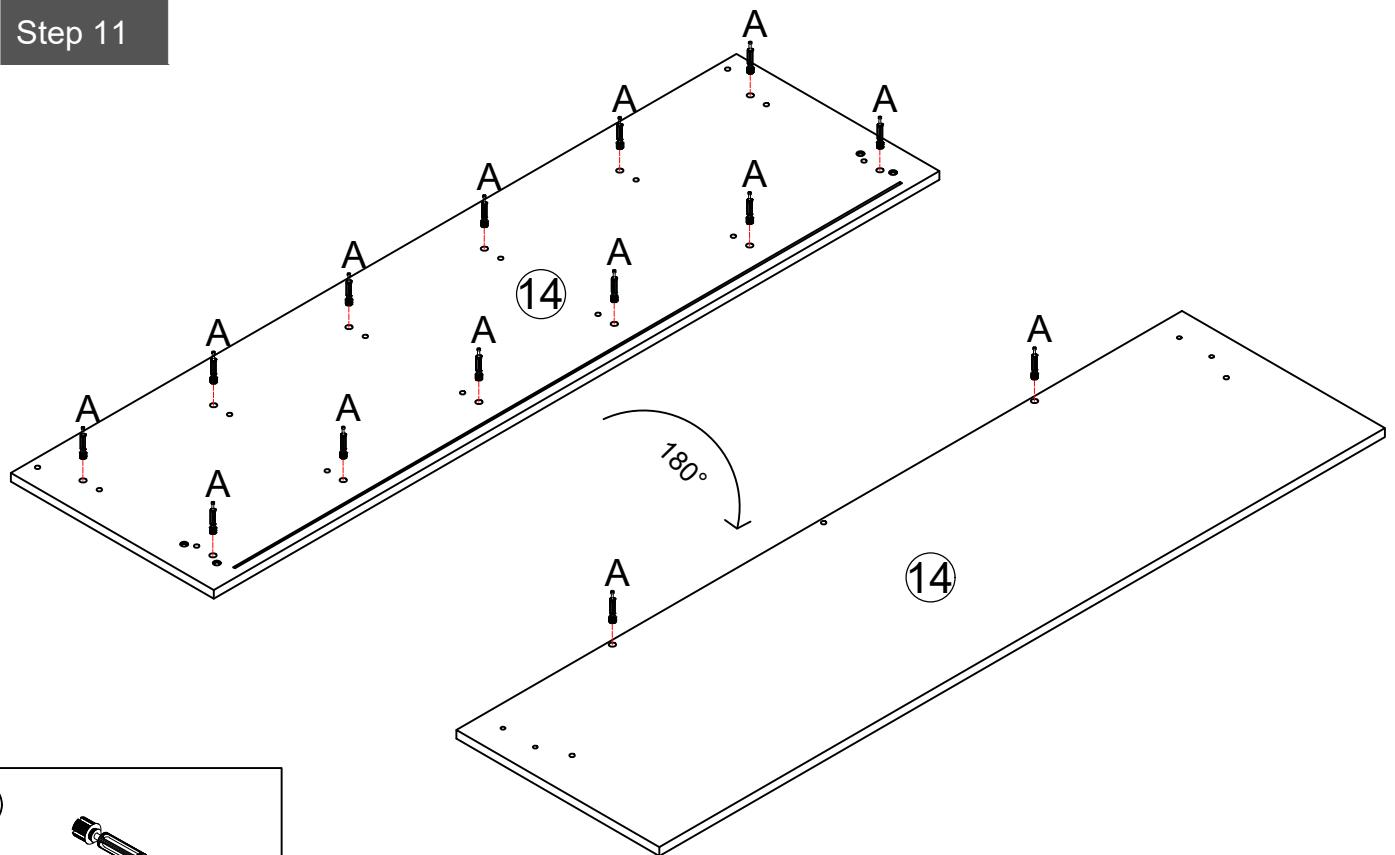


(A)



Cam Bolt x 14

Step 12

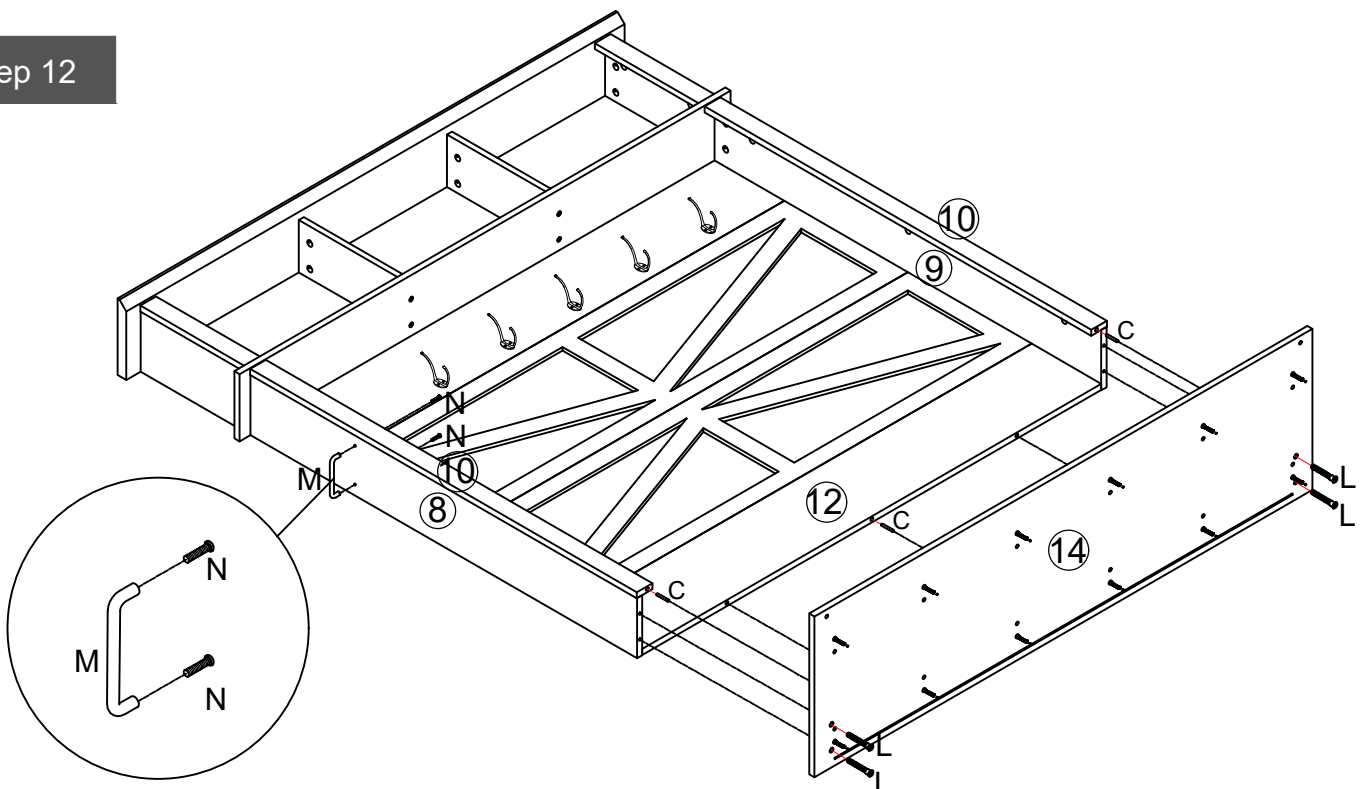

(C)



Dowel x 3

(L)



7*50mm Screw x 4

(M)



96mm Umbrella stand x 1


(N)




4*25mm Screw x 2

Assembly Instructions

Step 13

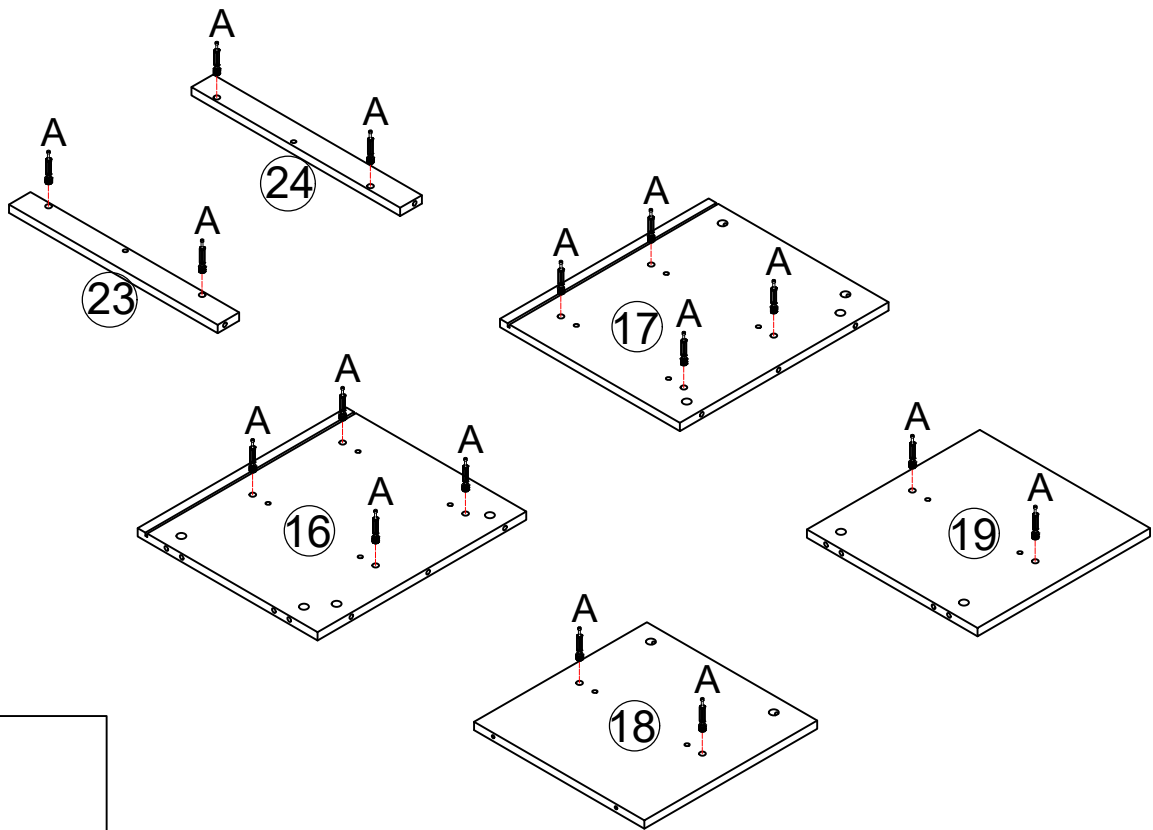


(A)



Cam Bolt x 16

Step 14

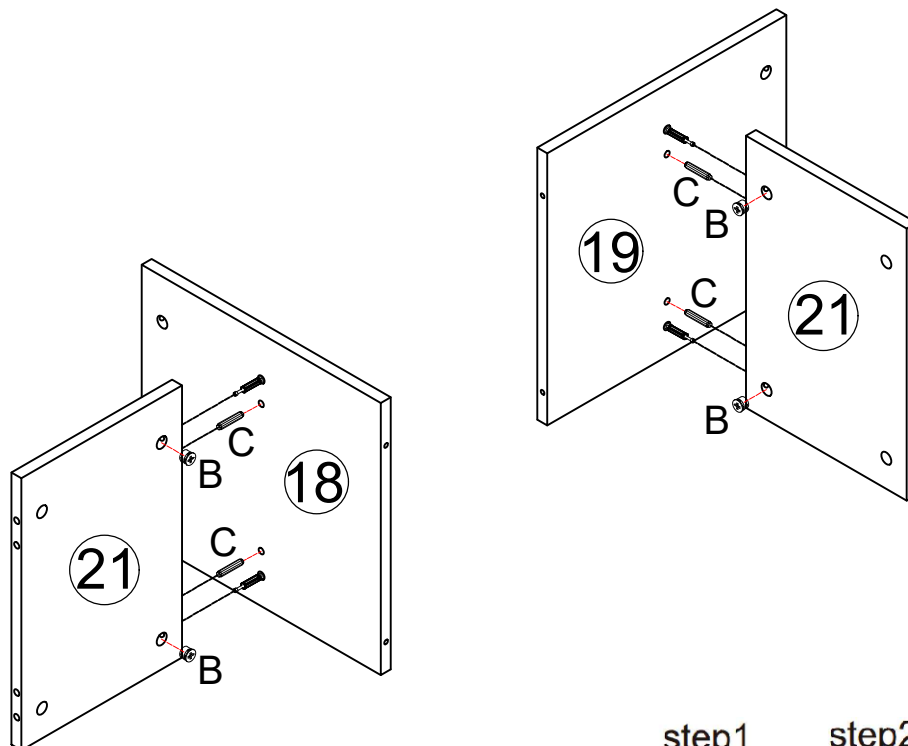


(B)




Cam lock x 4

(C)




Dowel x 4


step1

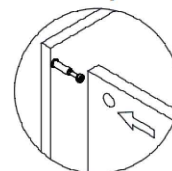

step2

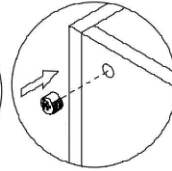


step3

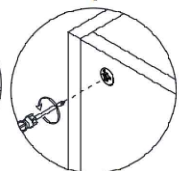

Assembly Instructions

Step 15

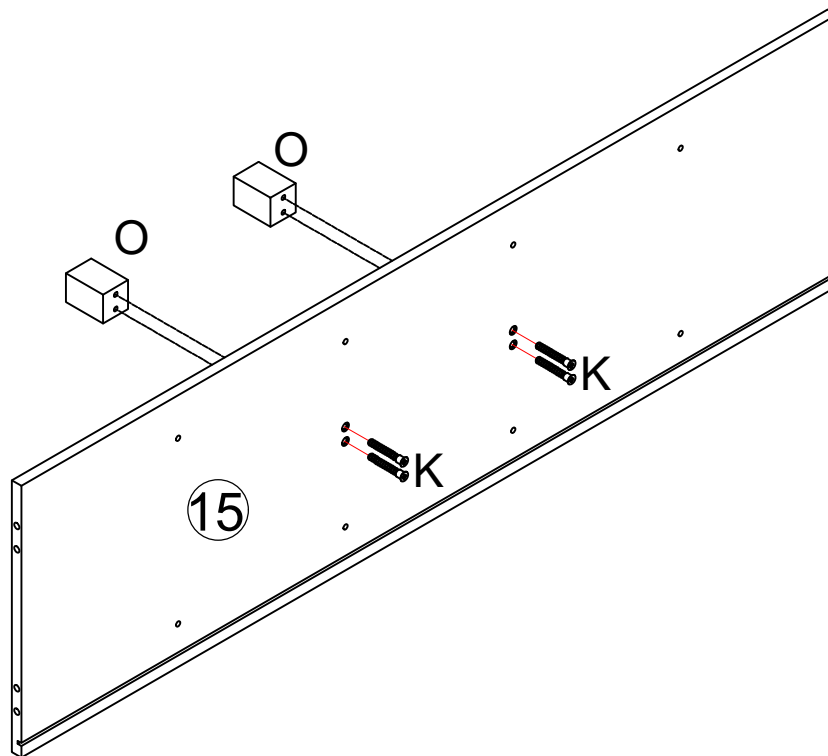

(K)




7*40mm Screw x 4

(O)



Wood legs x 2

Step 16

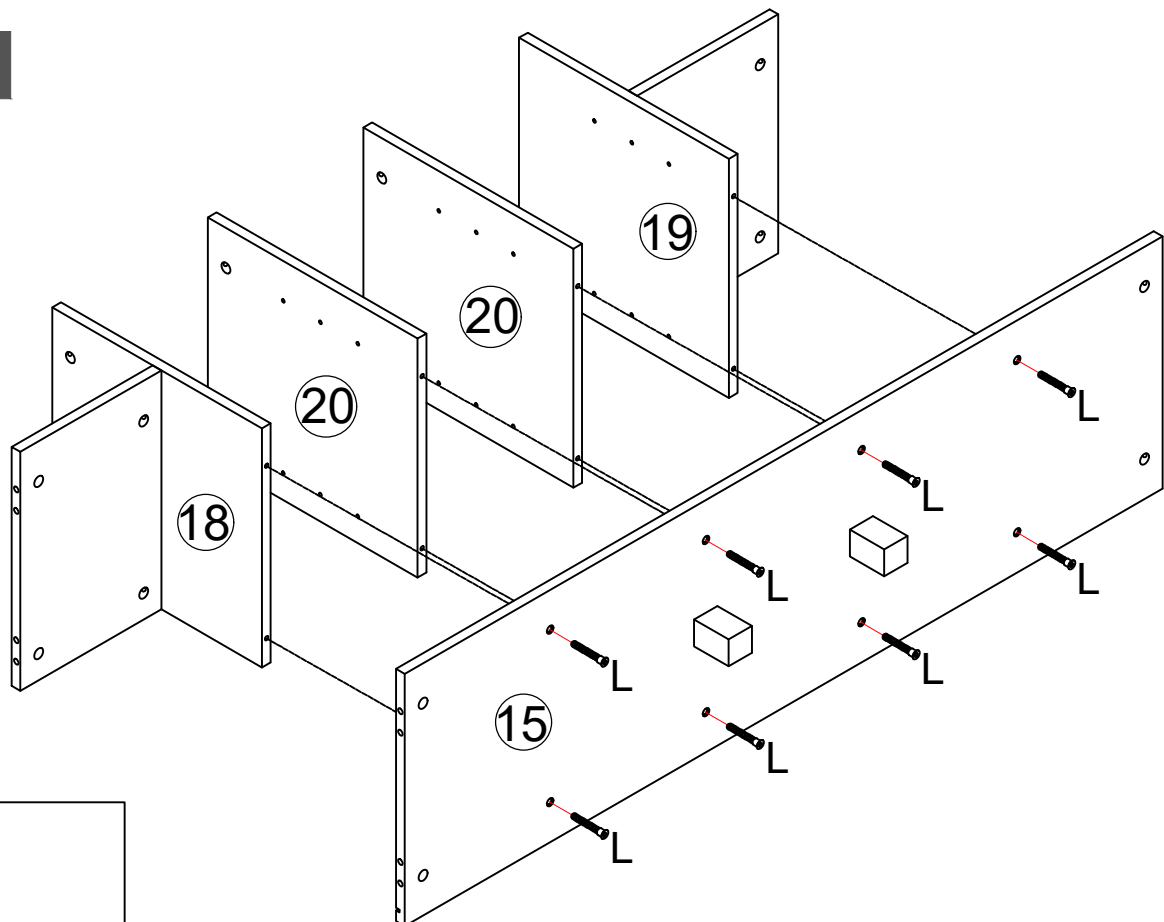


(L)



7*50mm Screw x 8

Assembly Instructions

Step 17

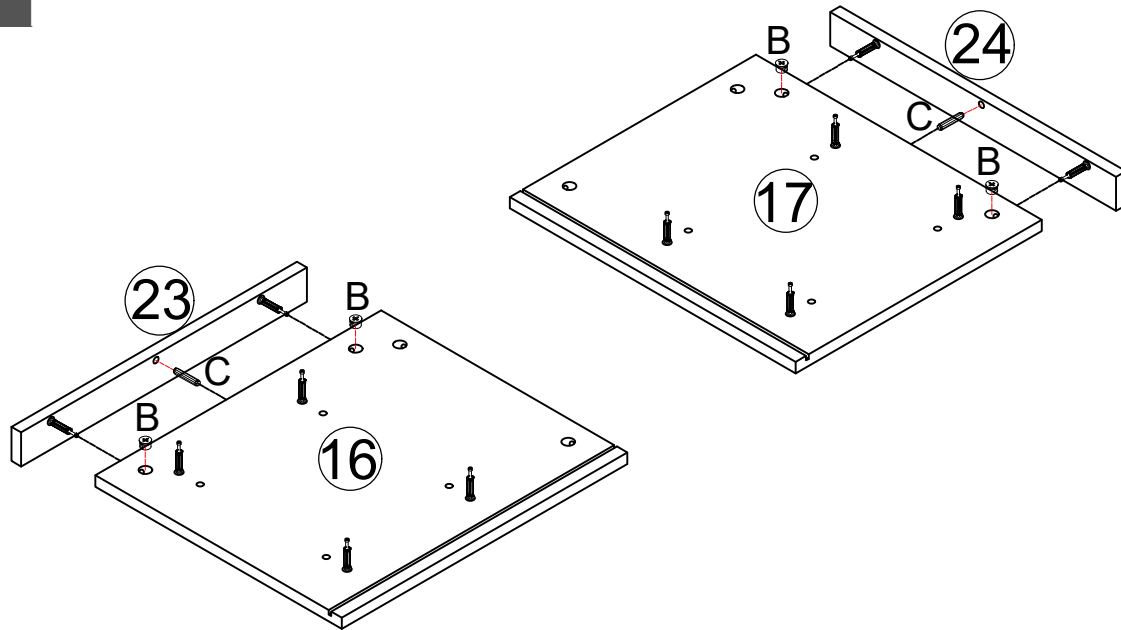


(B)




Cam lock x 4

(C)




Dowel x 2


step1

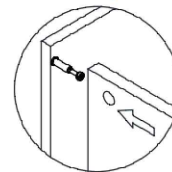


step2

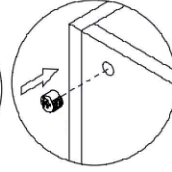

step3

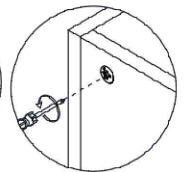

Step 18

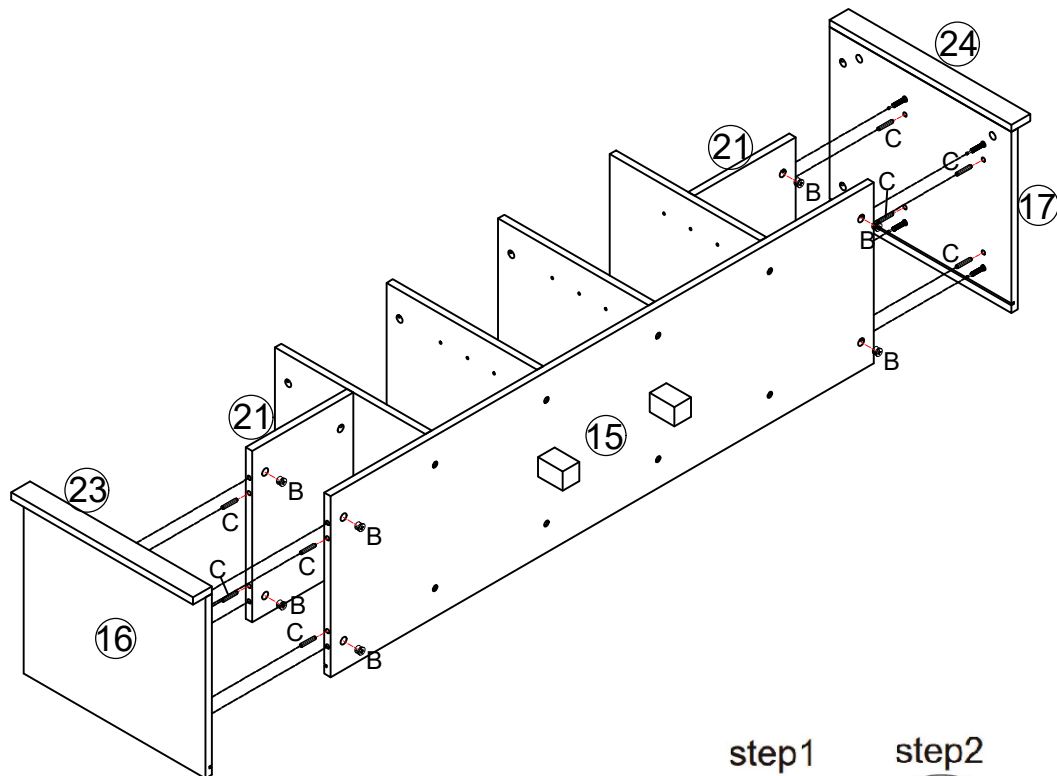


(B)




Cam lock x 8

(C)




Dowel x 8


step1

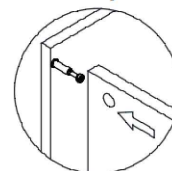

step2

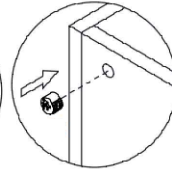


step3

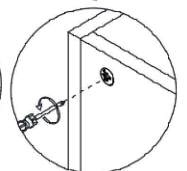


Assembly Instructions

Step 19

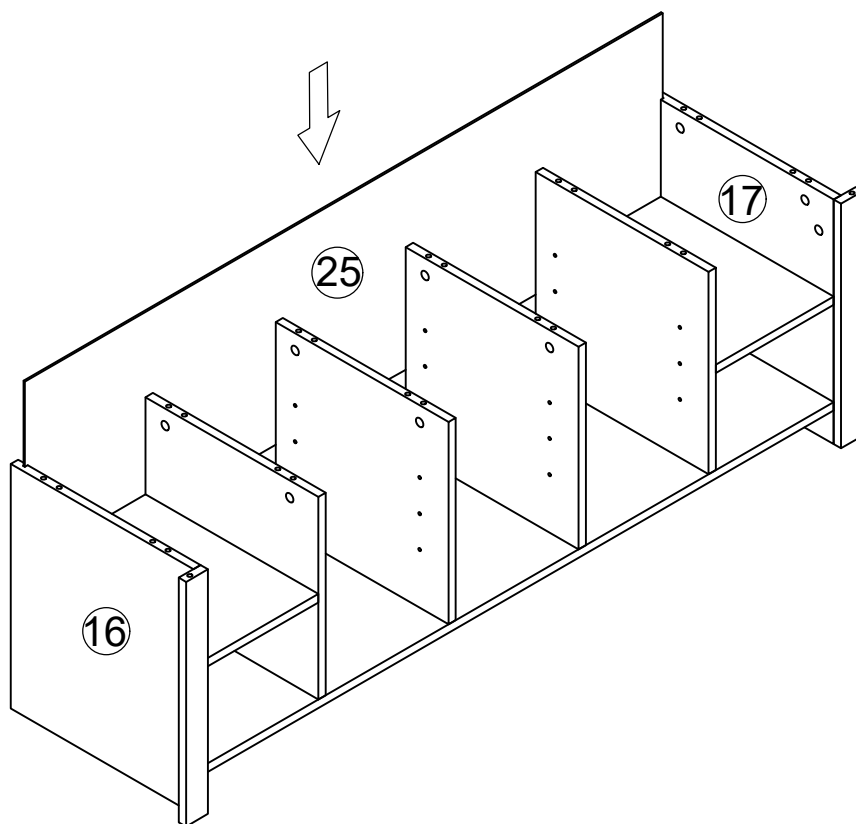

Step 20

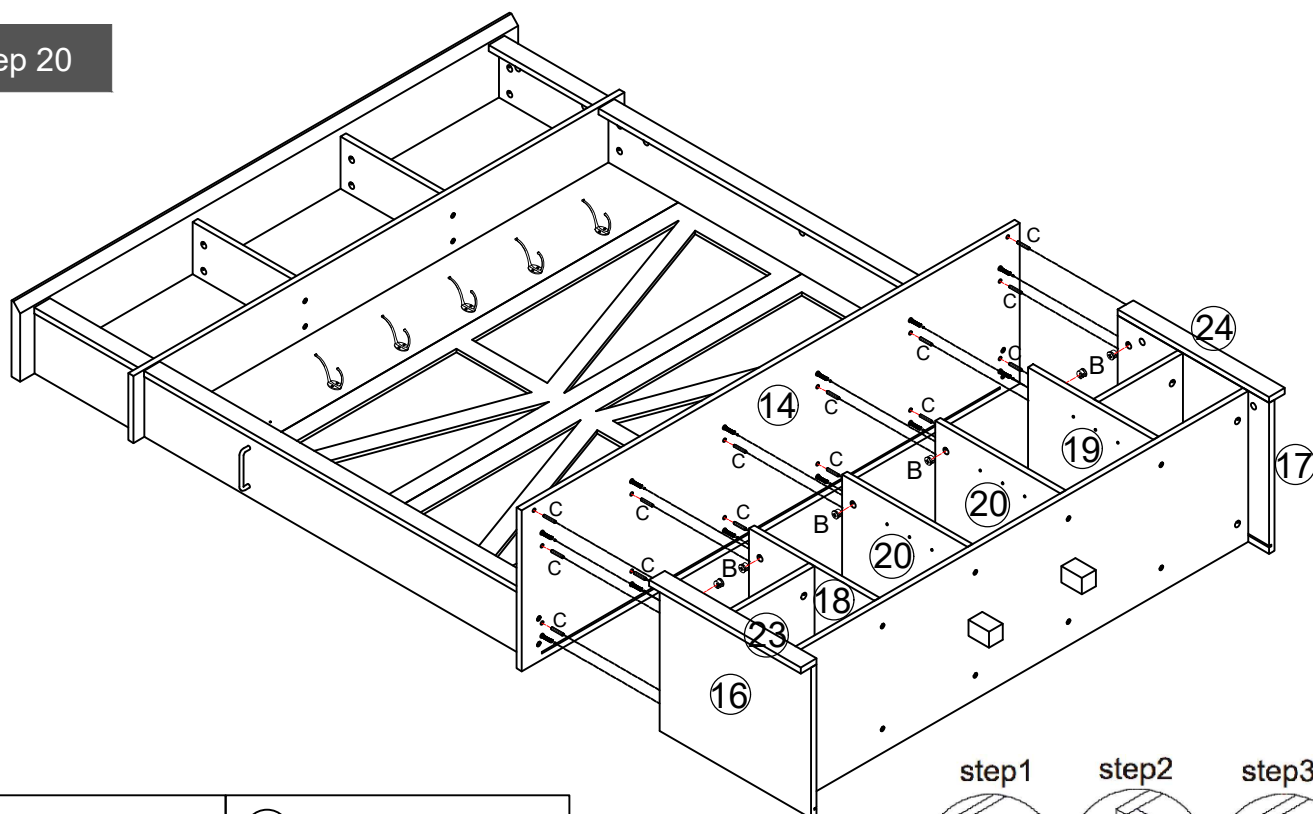


(B)




Cam lock x 12

(C)




Dowel x 14


step1

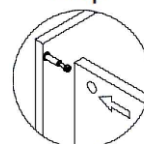

step2

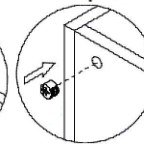




step3

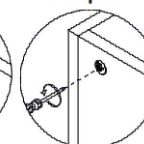

Assembly Instructions

Step 21

This step requires two people to work together to flip.
Please flip carefully.

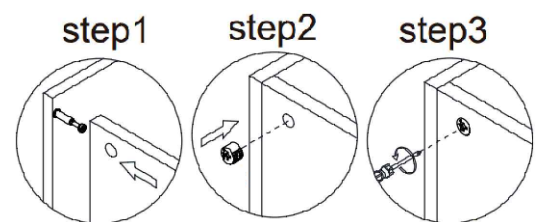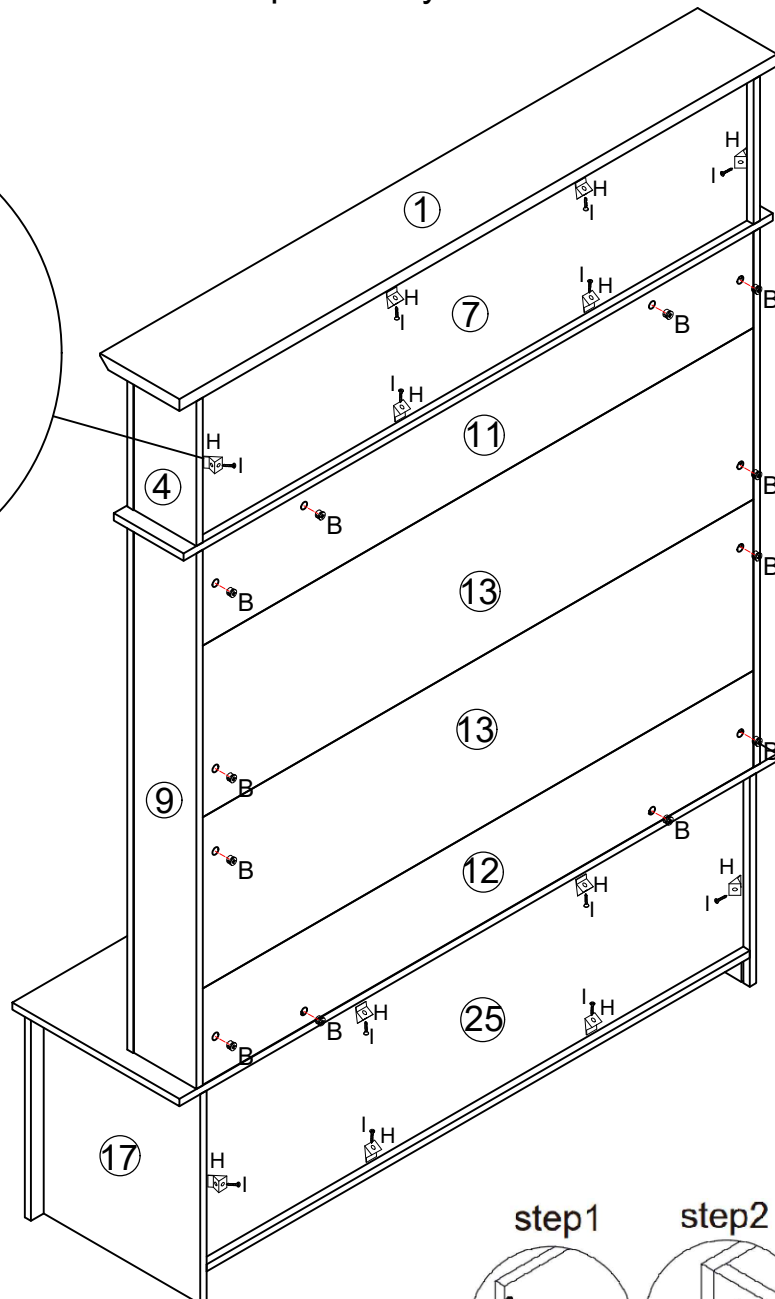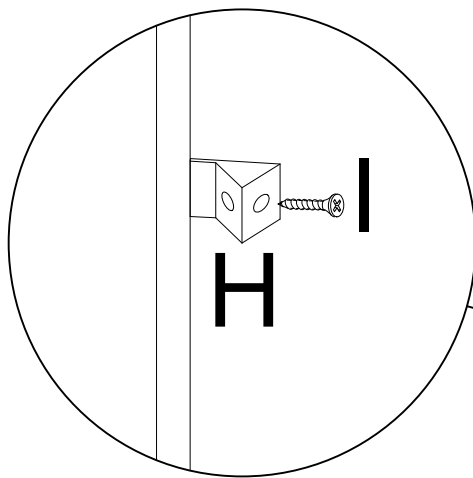

(B)



Cam lock x 12

(H)



Plastic buckle x 12


(I)



3*12mm Screw x 12

Assembly Instructions

Step 22

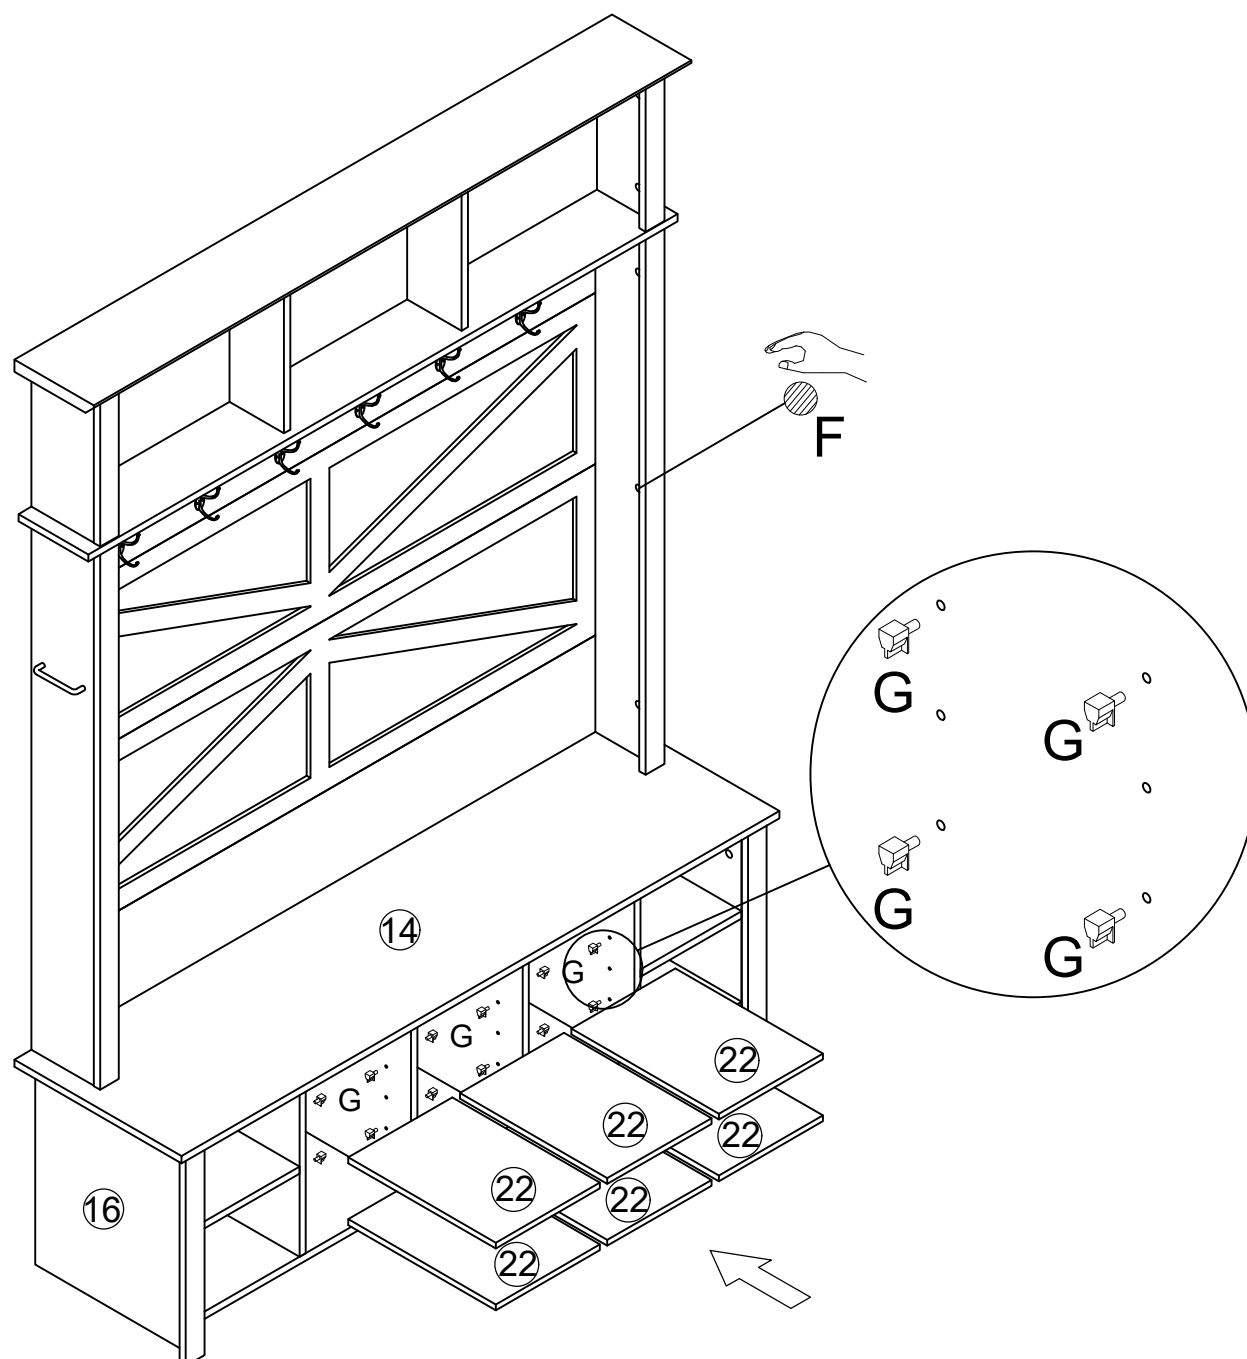

(F)



Sticker Cover x 42






(G)




Movable partition bracket x 24

Assembly Instructions

Step 23

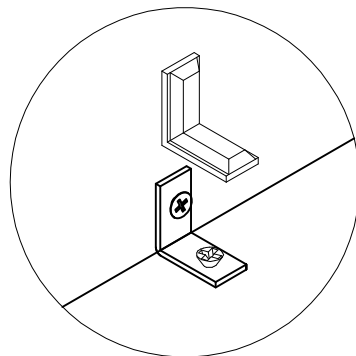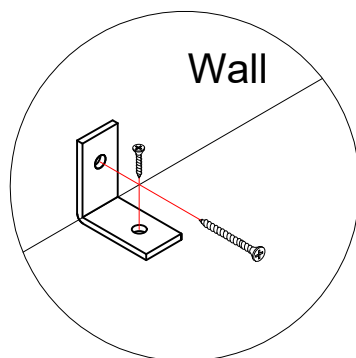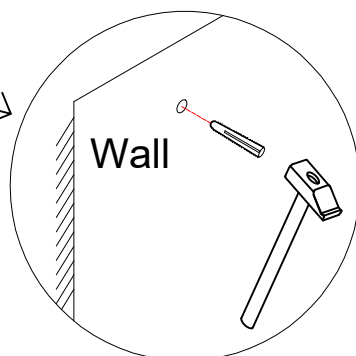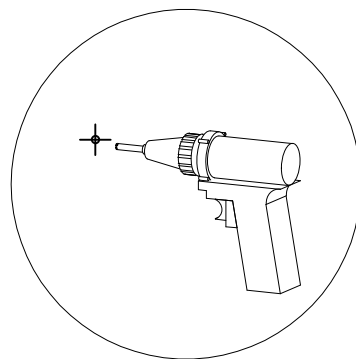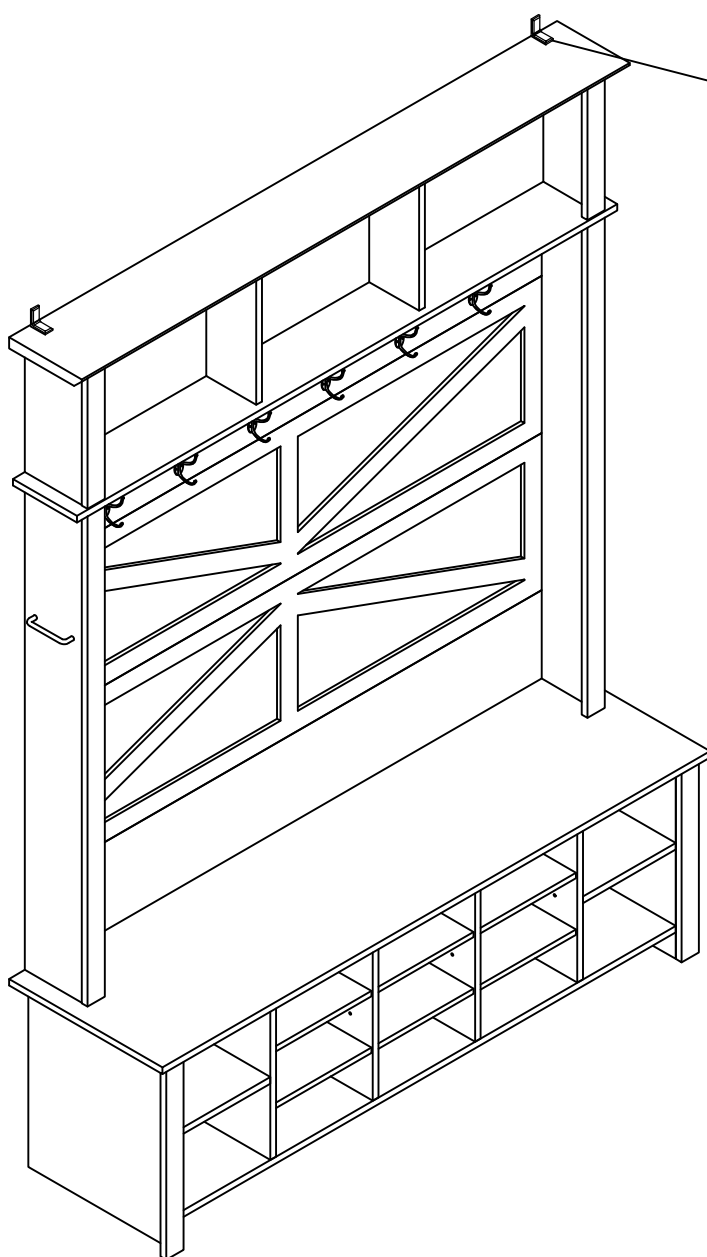

J

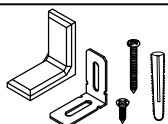

Anti-tipping device X 2

Assembly Instructions

