

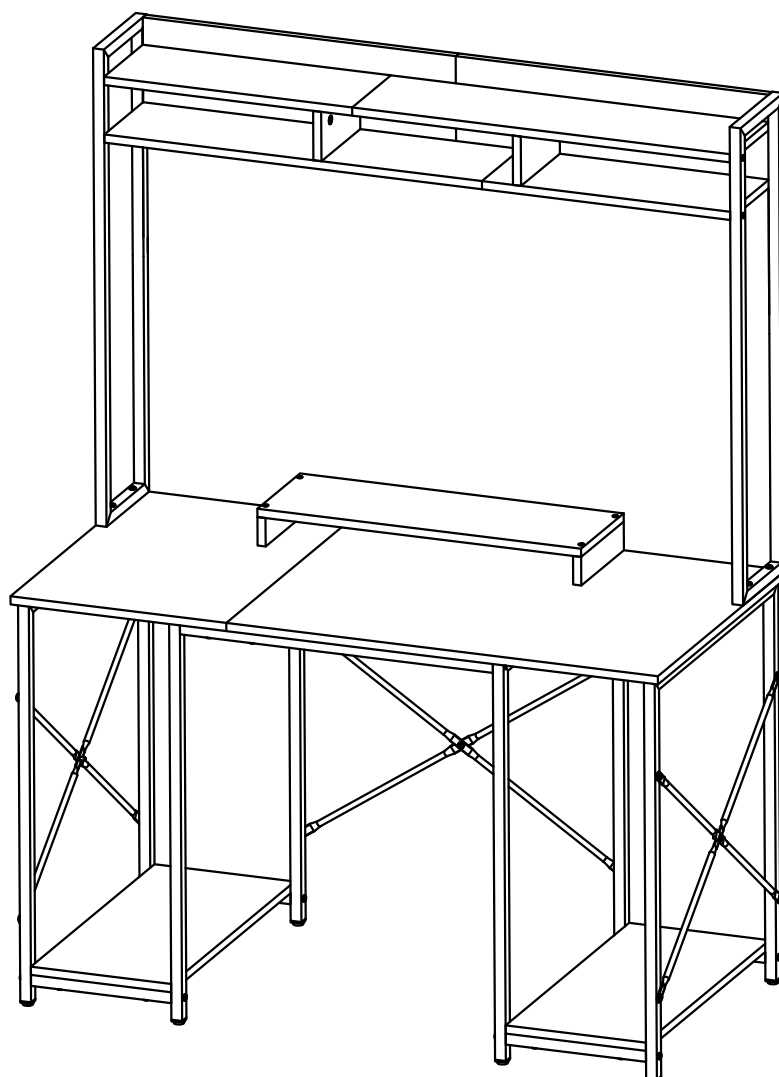
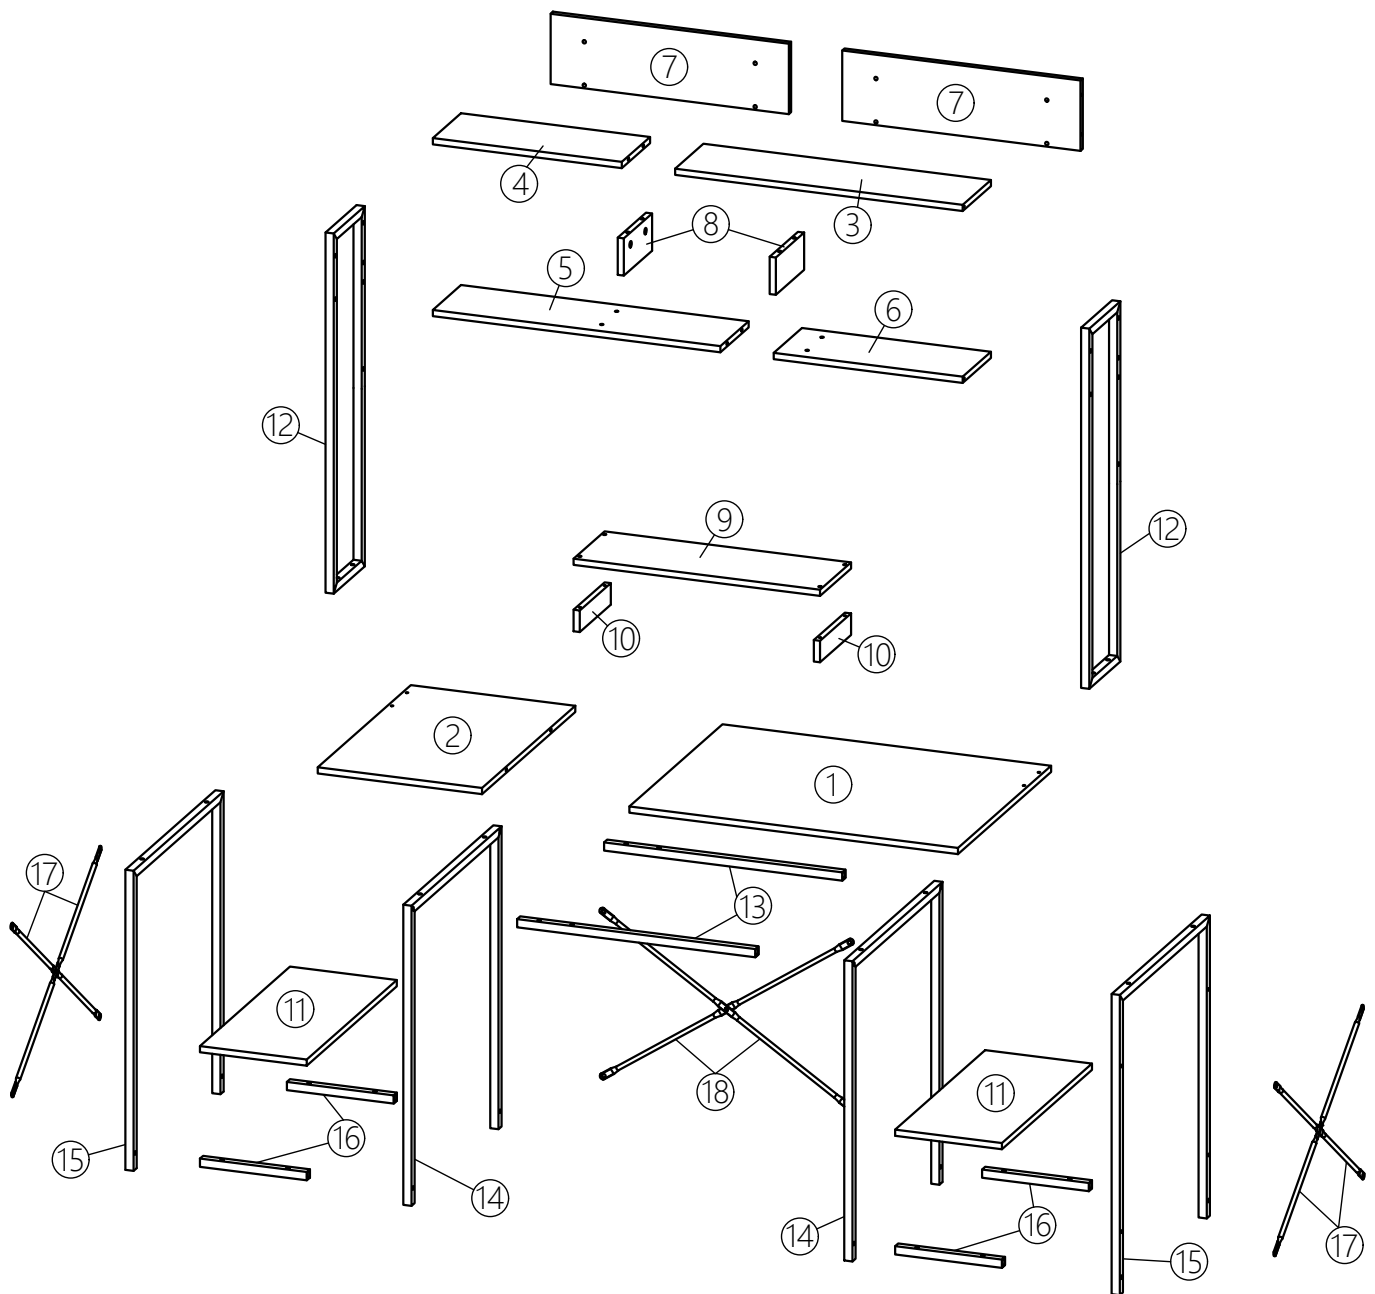

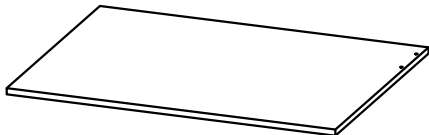




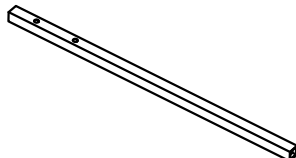
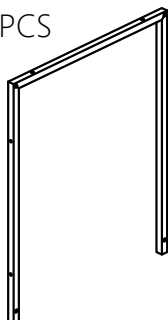
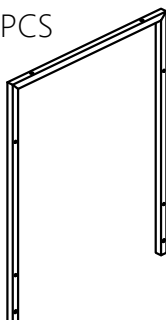


ASSEMBLY INSTRUCTION

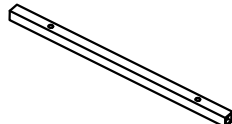




(A)	x 12	(B)	x 24	(C)	x 19	(D)	x 6	(E)	x 8	(F)	x 16
	M6x40		M6x30		M6x12				M7x50		M7x40
(G)	x 2	(H)	x 8	(I)	x 1	(J)	x 1	(K)	x 3	(L)	x 4
			M6x15		M4				M6		
(M)	x 4	(N)	x 2								
											
			4x30								
											


① x1PC 	② x1PC 	③ x1PC 	
④ x1PC 	⑤ x1PC 	⑥ x1PC 	
⑦ x2PCS 	⑧ x2PCS 	⑨ x1PC 	
⑩ x2PCS 	⑪ x2PCS 	⑫ x2PCS 	
⑬ x2PCS 	⑭ x2PCS 	⑮ x2PCS 	⑯ x4PCS 
⑰ x4PCS 	⑱ x2PCS 		

1

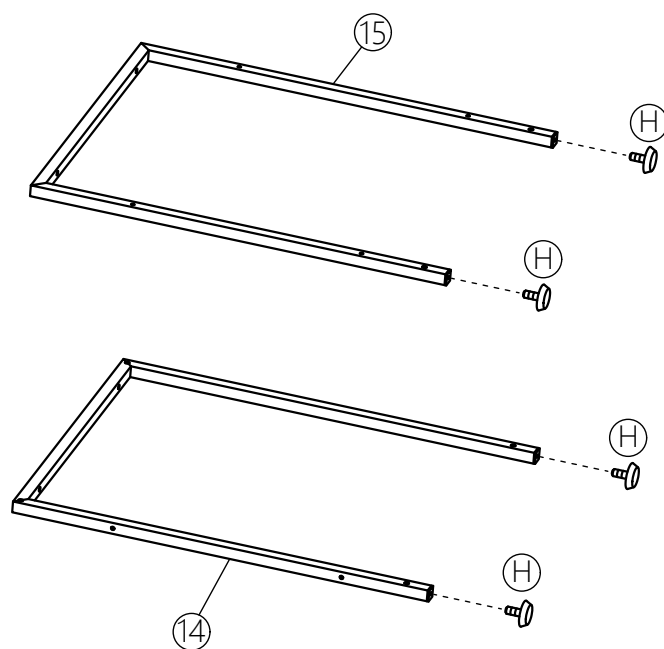


(H)	x 8
	
M6x15	

2

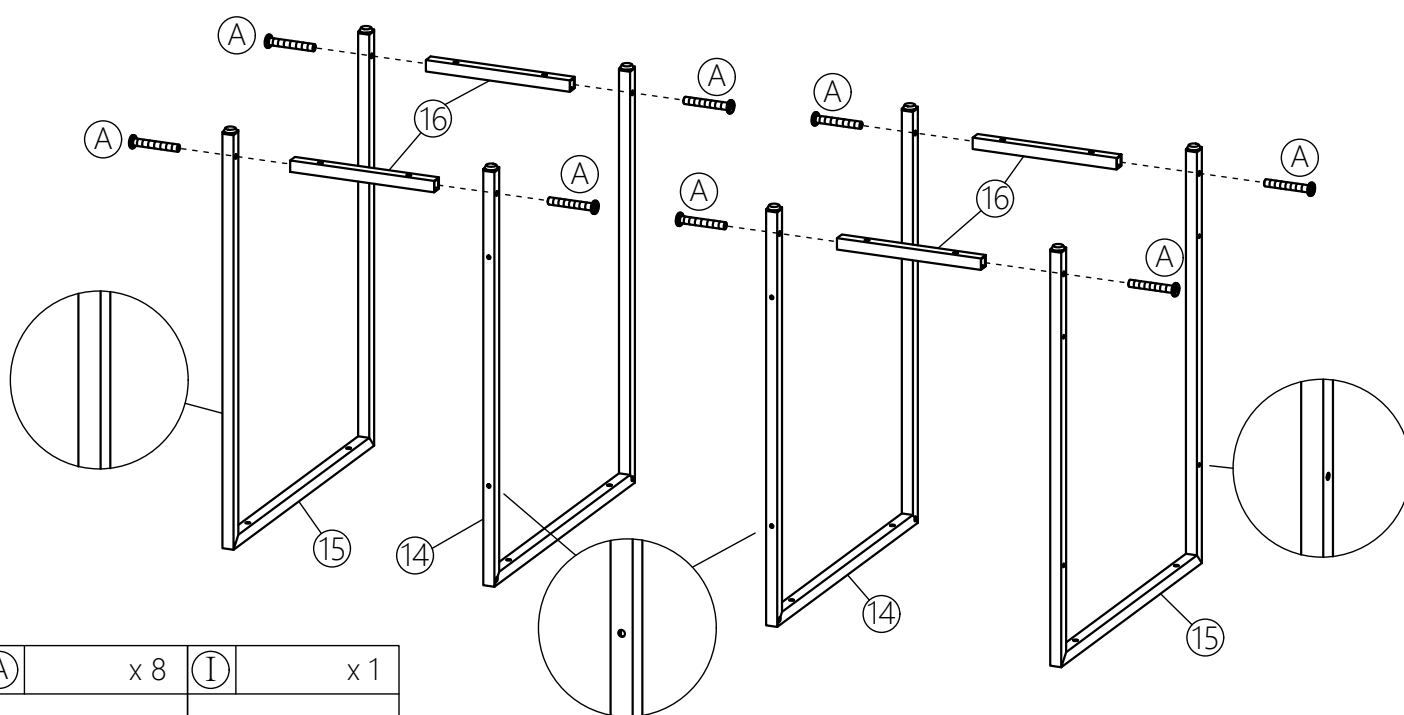


(A)	x 8	(I)	x 1
			
M6x40		M4	

3

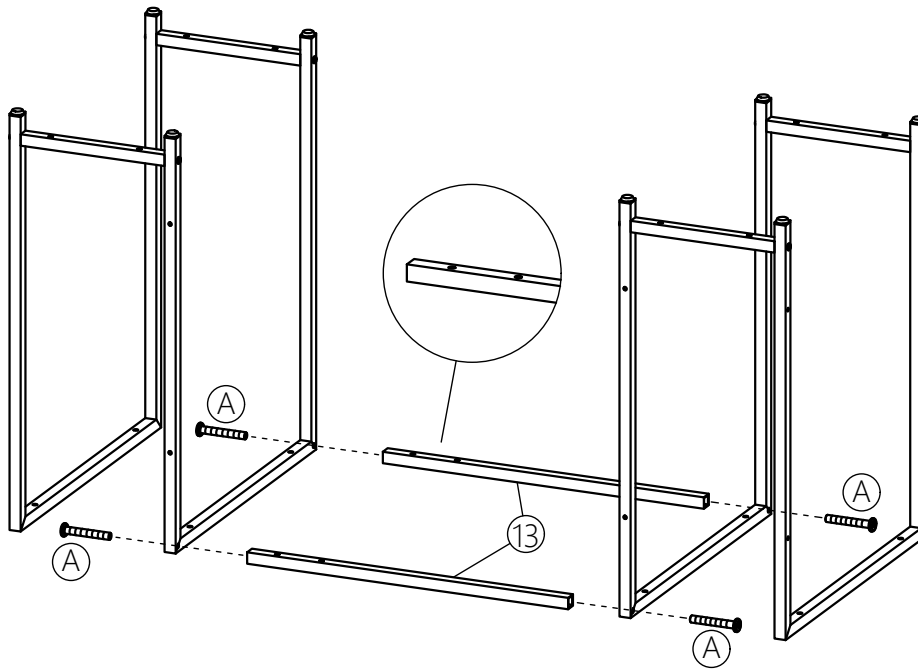


(A)	x 4	(I)	x 1
 M6x40		 M4	

4

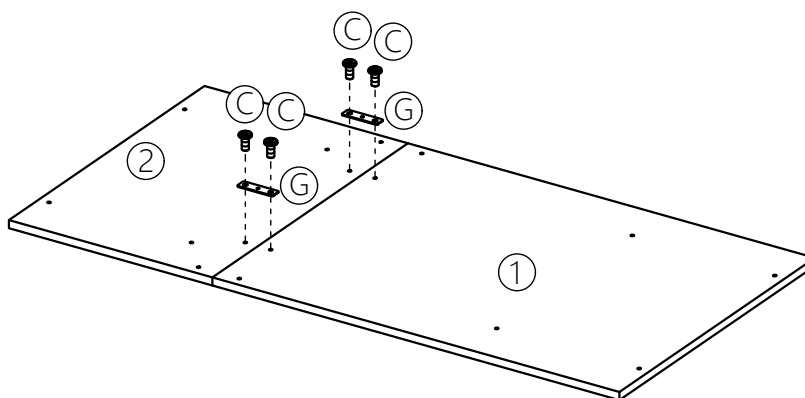


(C)	x 4	(G)	x 2	(I)	x 1
 M6x12		 		 M4	

5

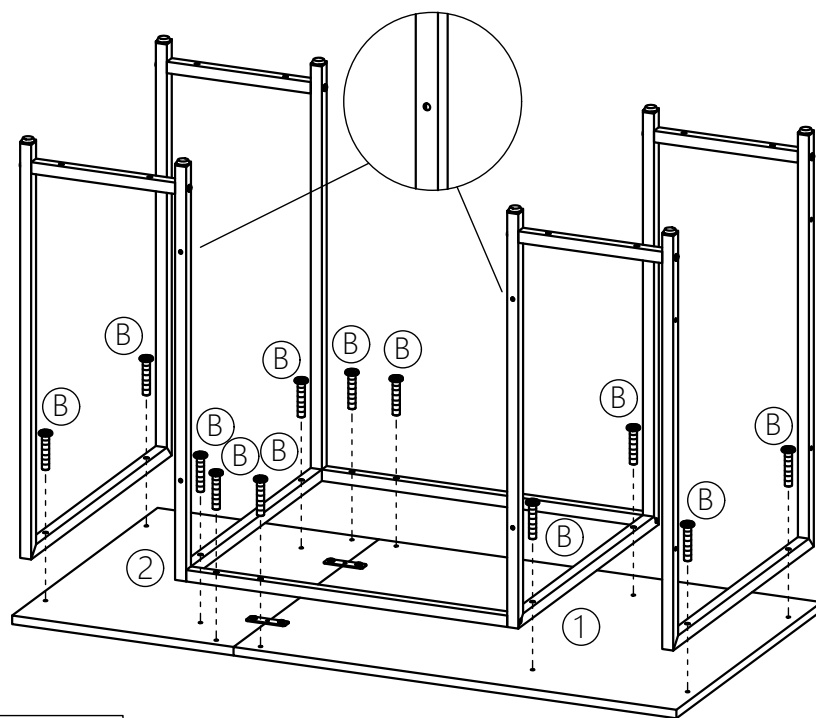


(B)	x 12	(I)	x 1
			
M6x30		M4	

6

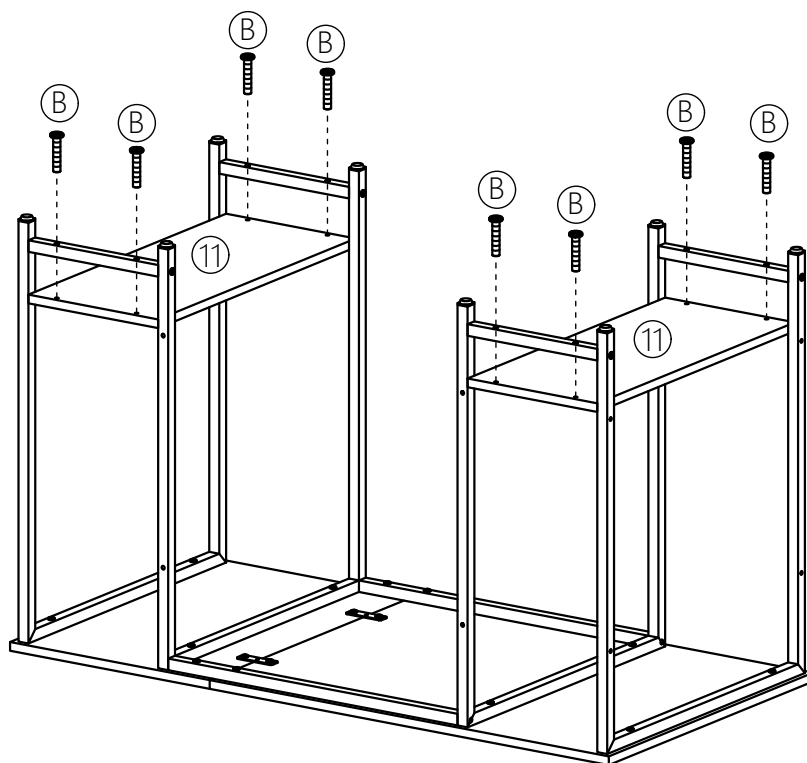


(B)	x 8	(I)	x 1
			
M6x30		M4	

7

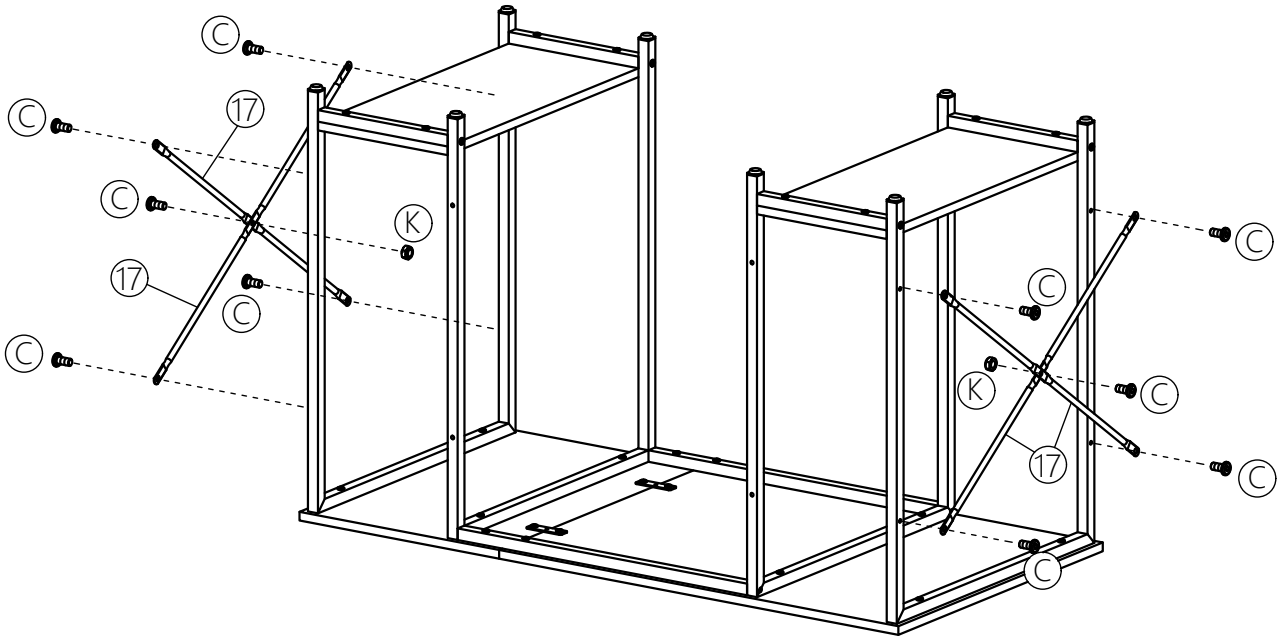


(C)	x 10	(I)	x 1	(J)	x 1	(K)	x 2
							
M6x12		M4		M10		M6	

8

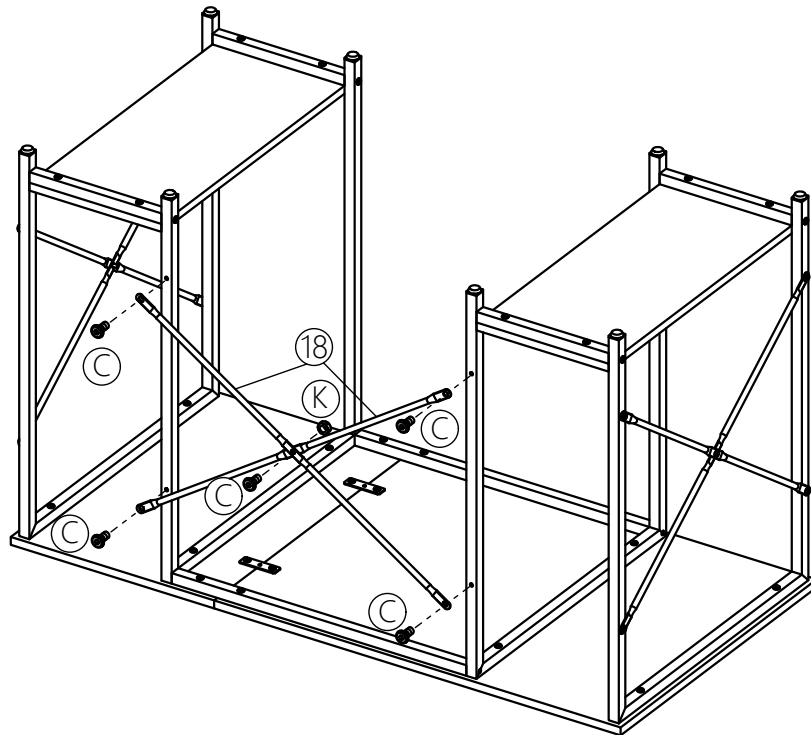


(C)	x 5	(I)	x 1	(J)	x 1	(K)	x 1
							
M6x12		M4		M10		M6	

9

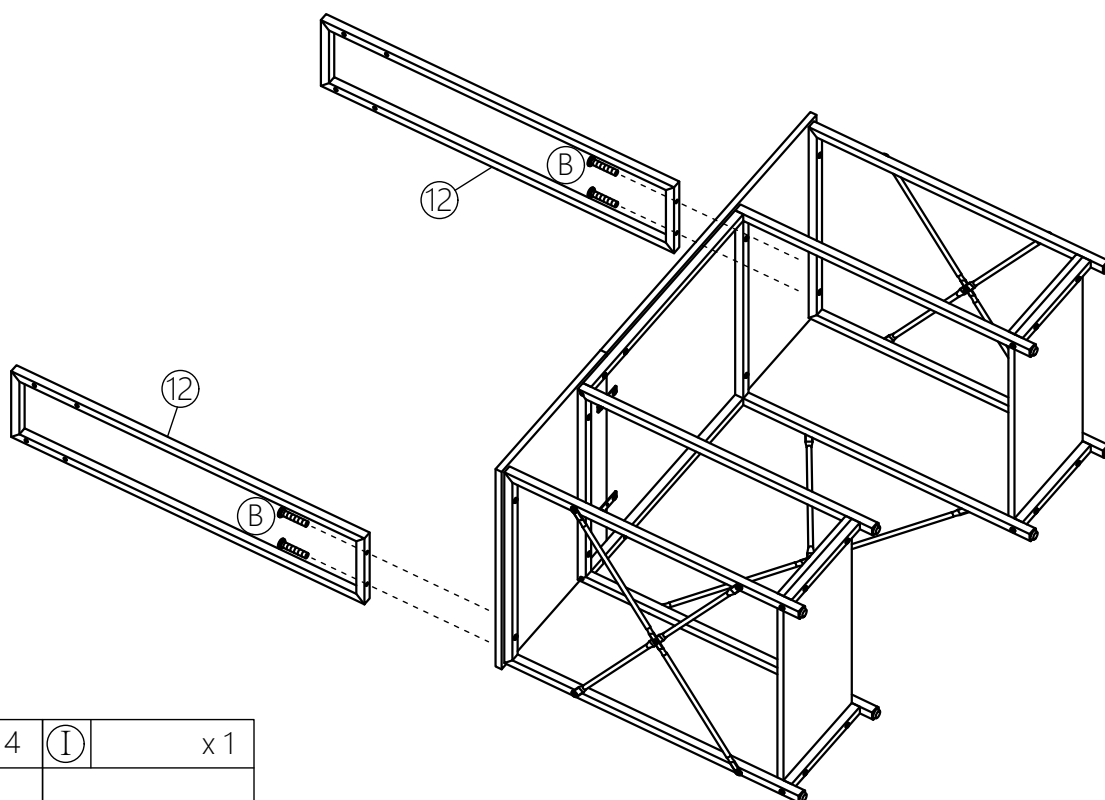


(B)	x 4	(I)	x 1
 M6x30		 M4	

10

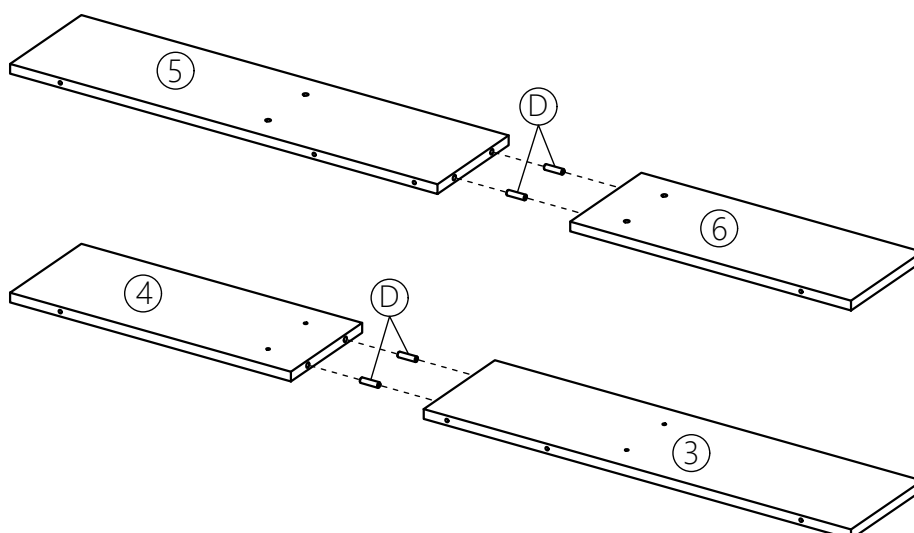


(D)	x 4
	

11

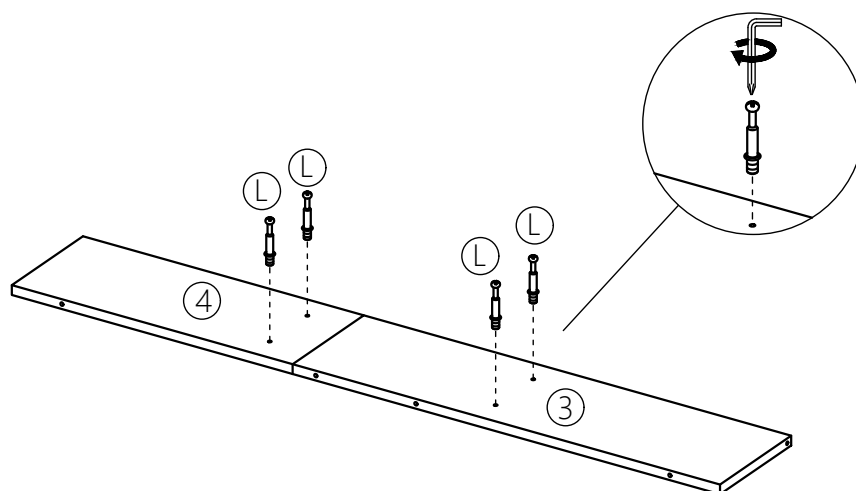


(L)	x 4	(I)	x 1
		 M4	


12

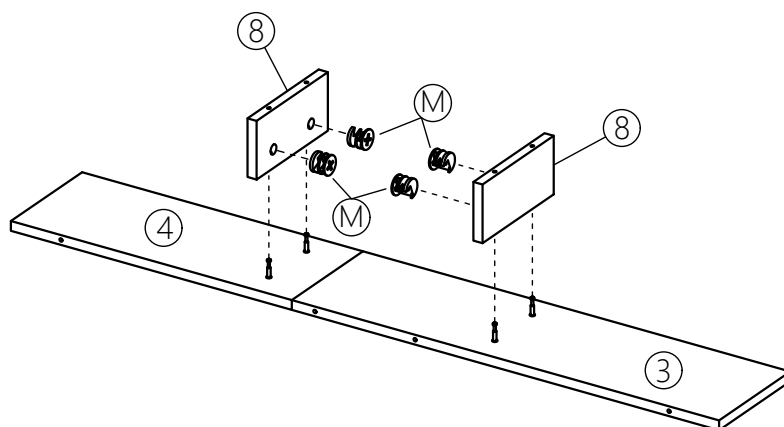

(M)	x 4	(I)	x 1
		 M4	

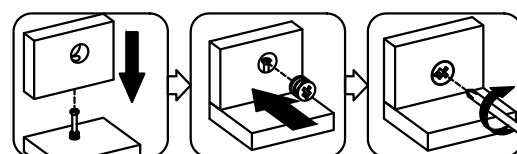


13

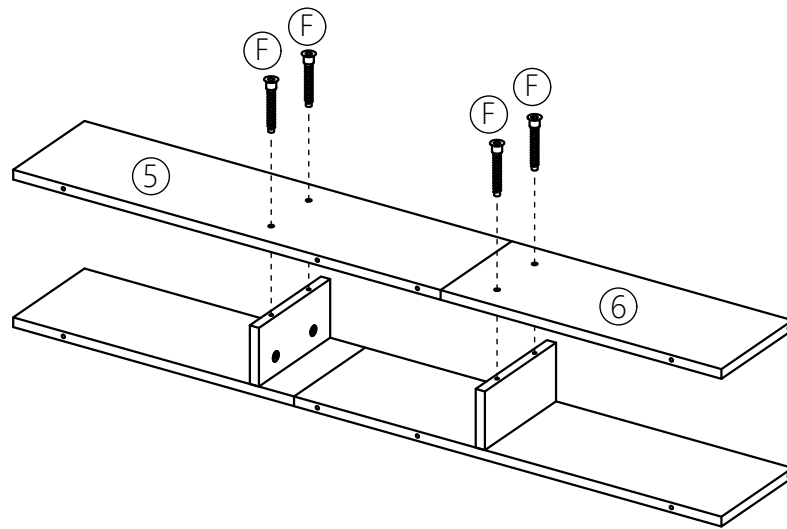


(F)	x 4	(I)	x 1
 M7x40		 M4	

14

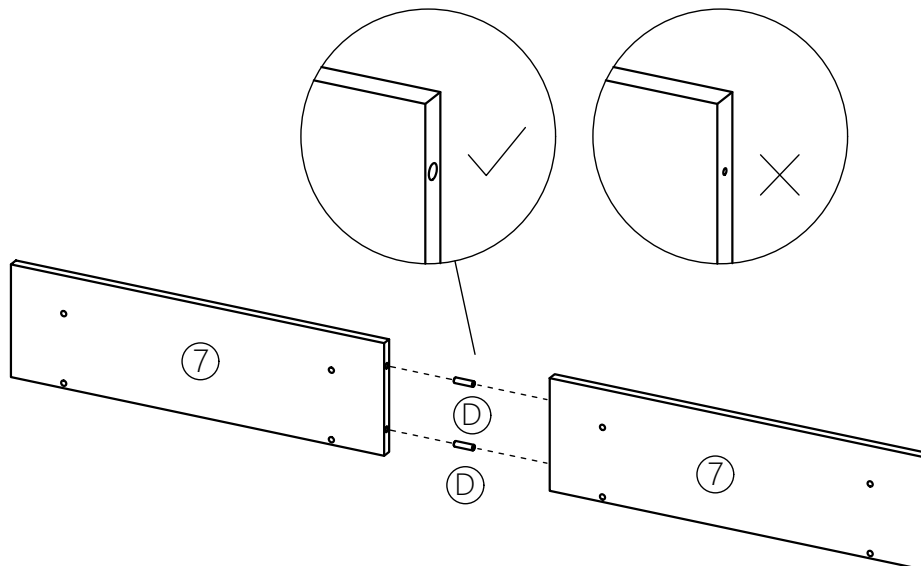


(D)	x 2
	

15

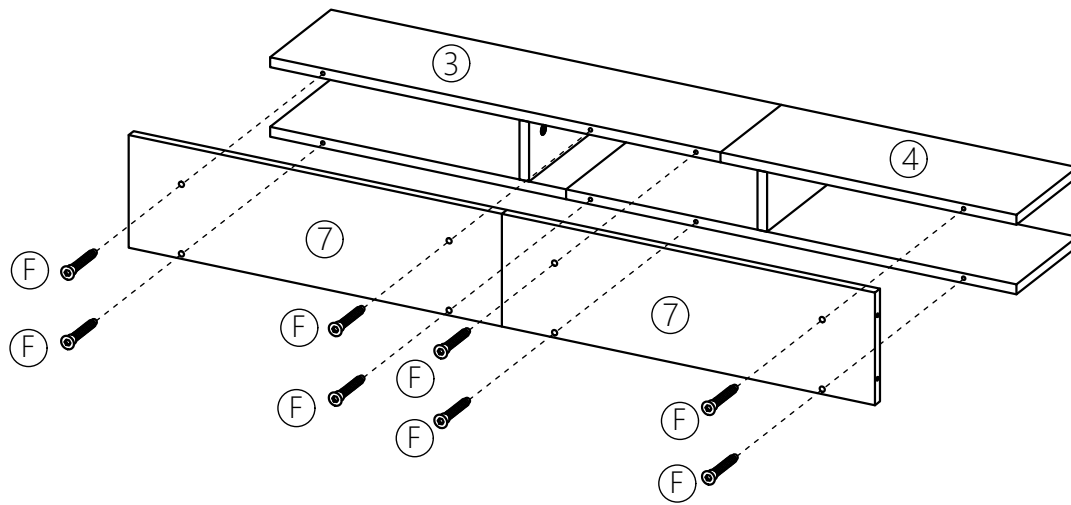


(F)	x 8	(I)	x 1
 M7x40		 M4	

16

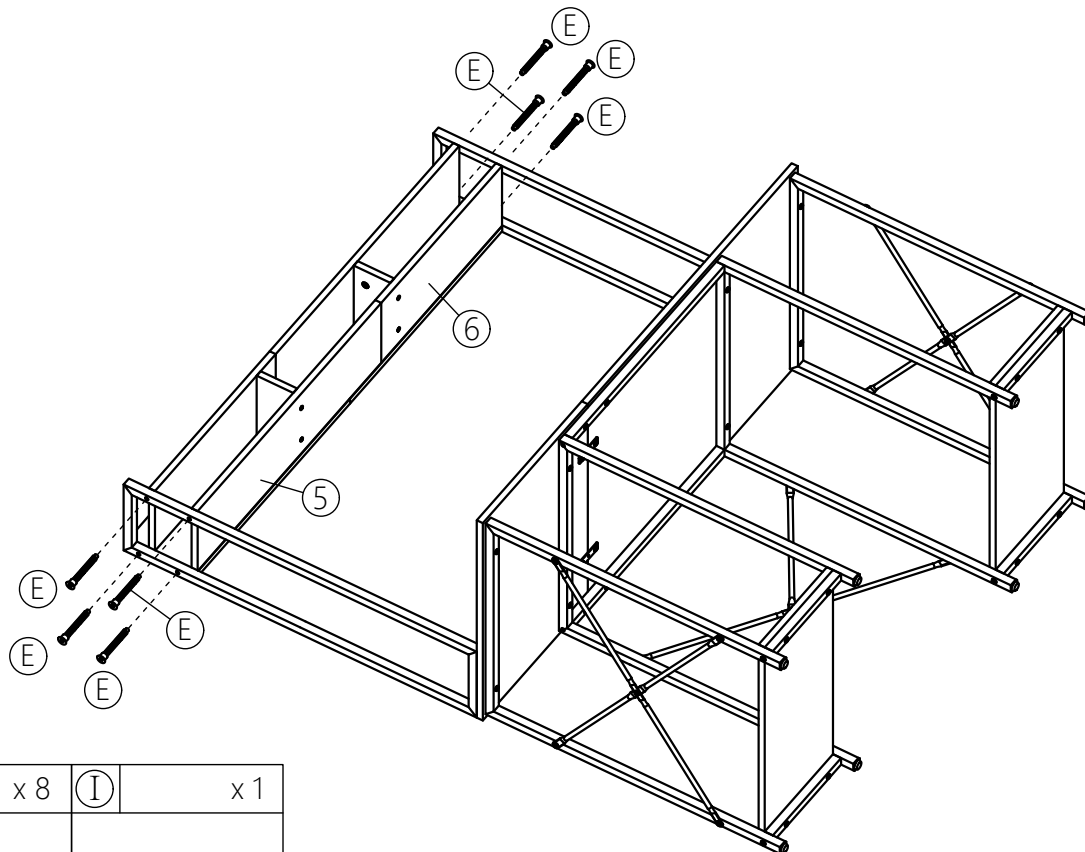


(E)	x 8	(I)	x 1
 M7x50		 M4	

17




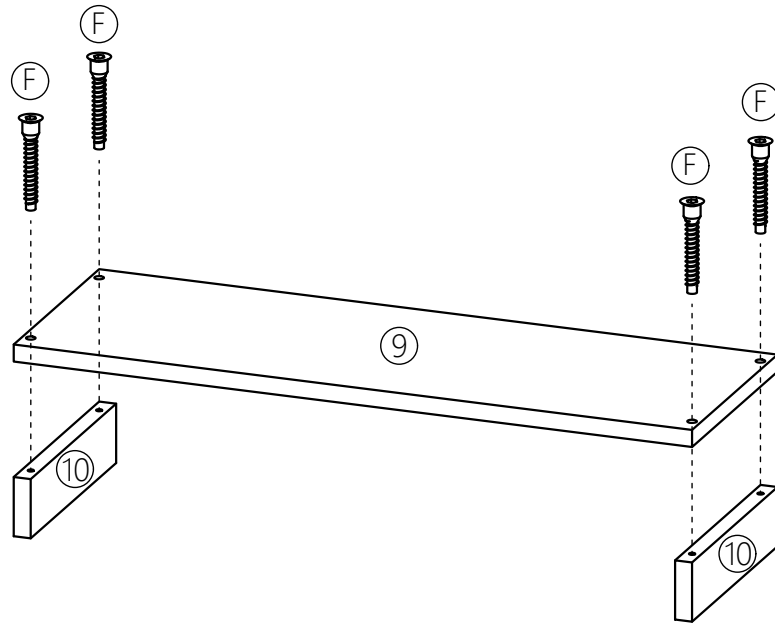




(F)	x 4	(I)	x 1
 M7x40		 M4	

18

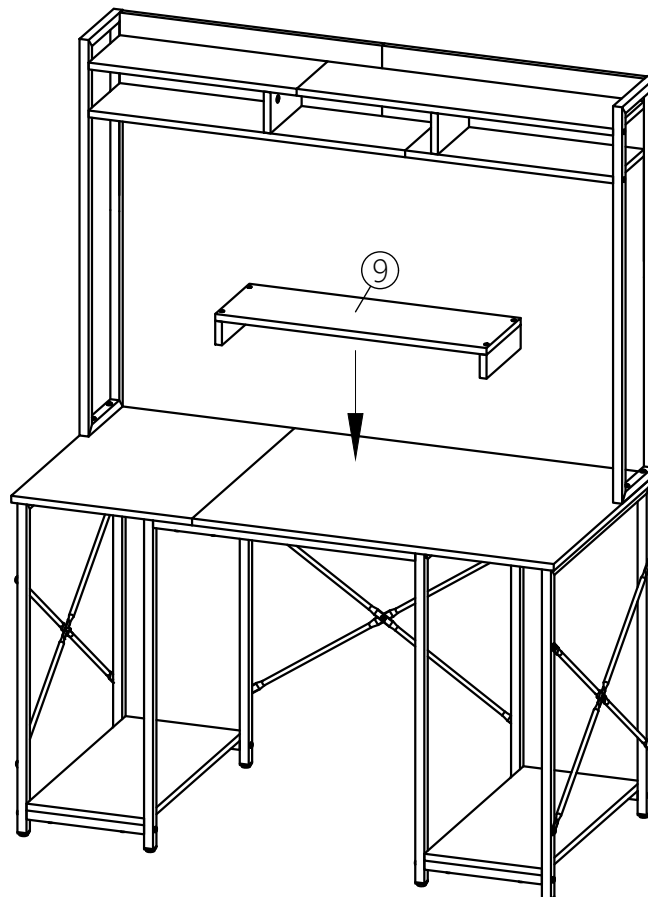

Please prepare the tools

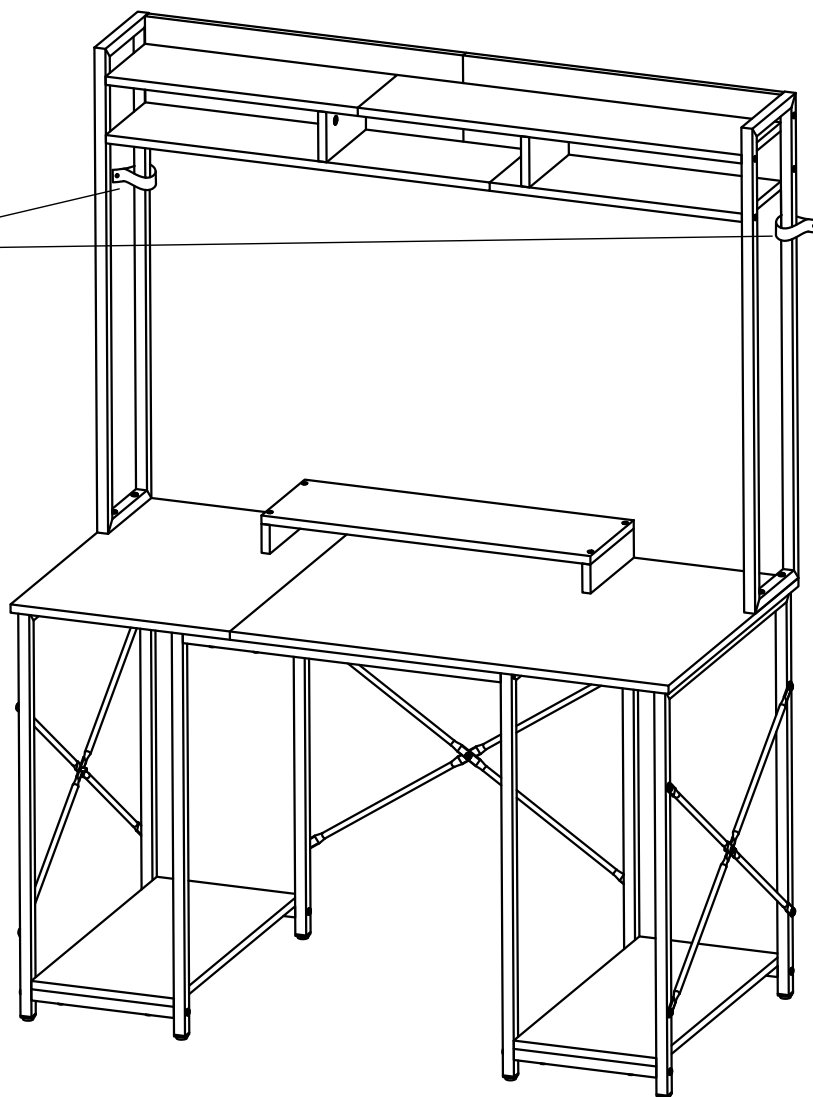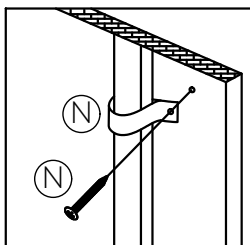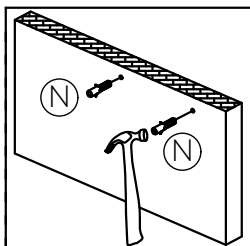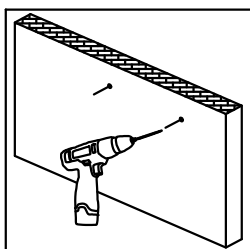

(N)	x 2
	
	4x30
	