


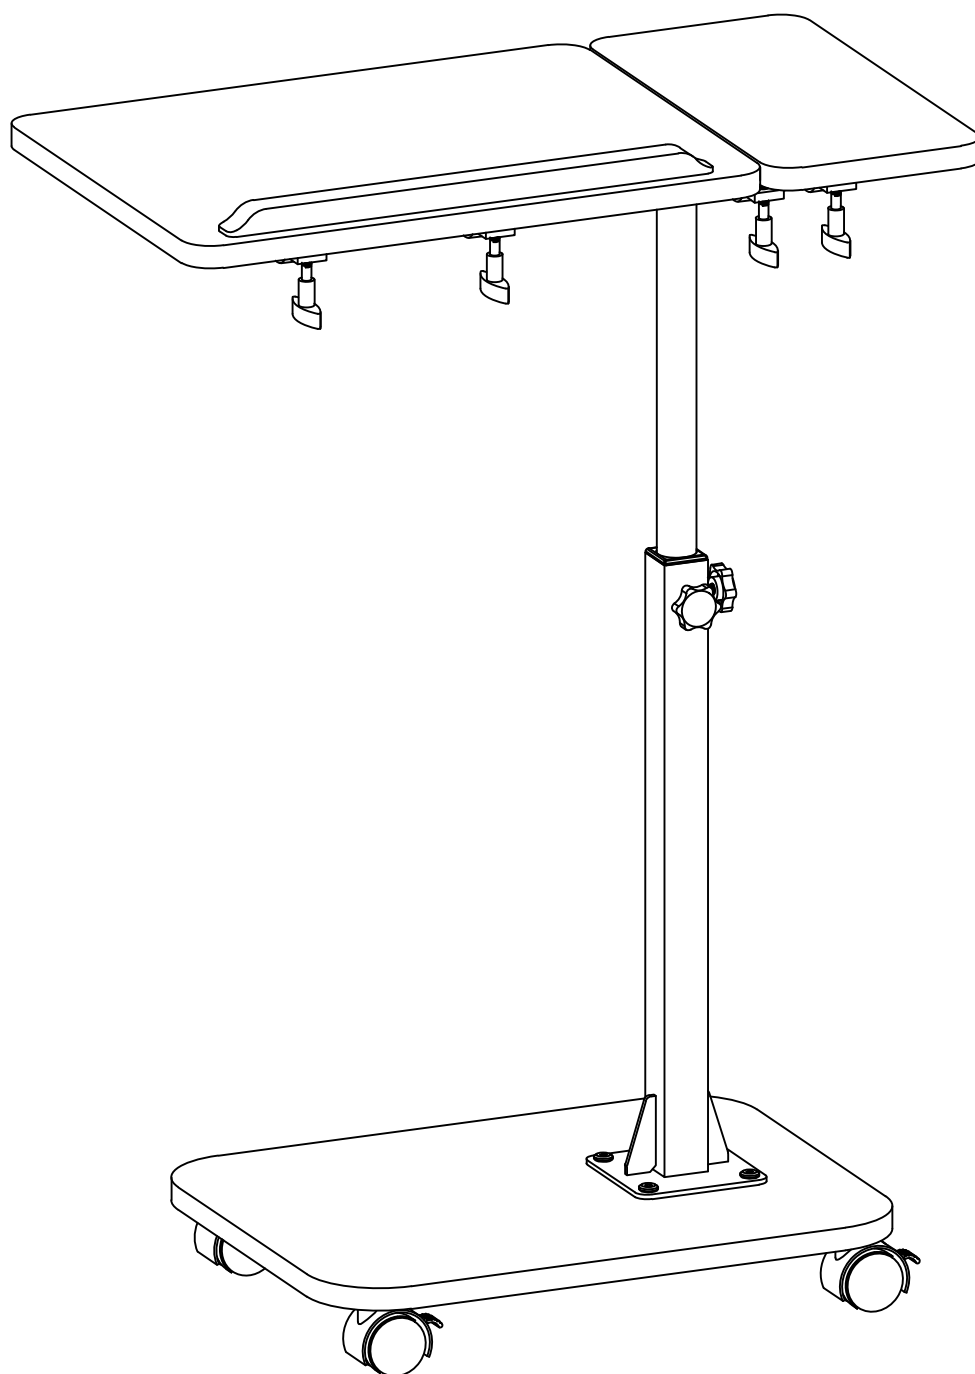
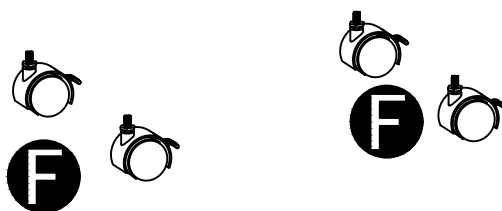
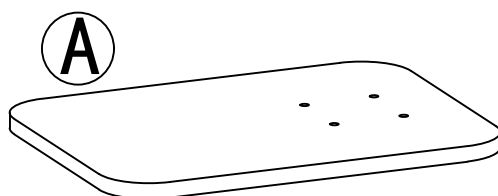
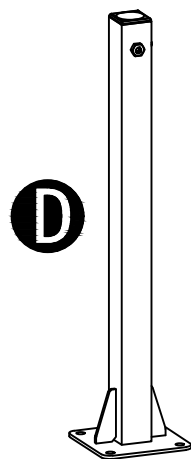
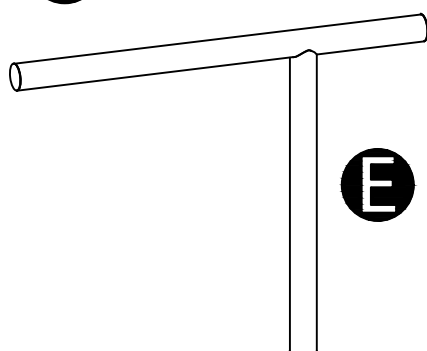


# INSTALLATION INSTRUCTIONS

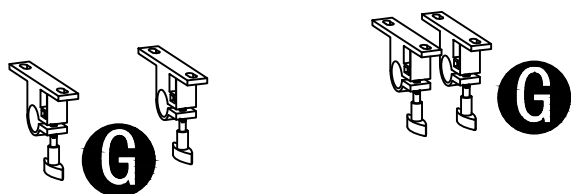

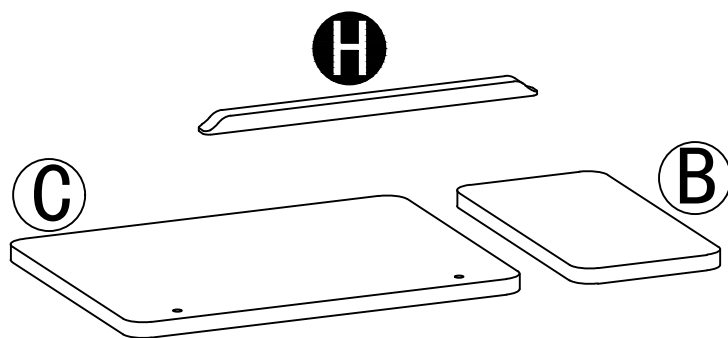


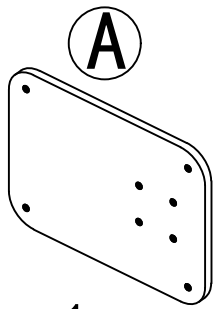


1 pc




1 pc

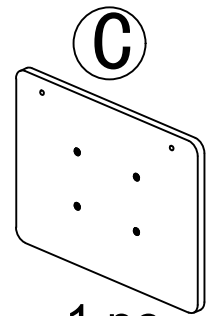


1 pc

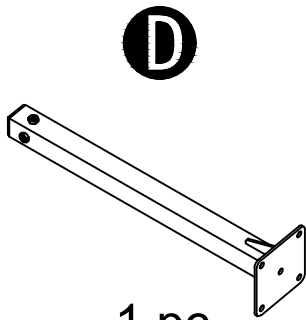

1 pc

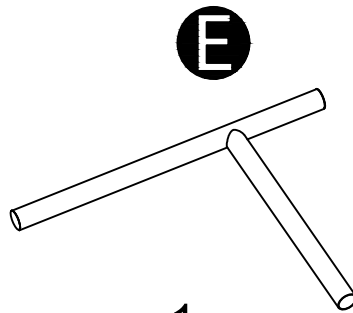


1 pc

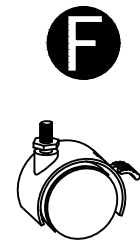

Swivel Caster  
4 pcs



Rotating Bracket  
4 pcs

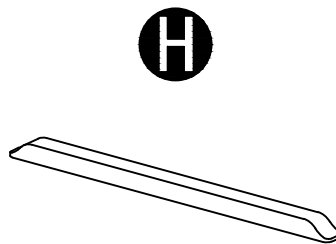

Plastic Baffle Strip  
1 pc

1




M6×14mm  
12 pcs

2




M6×20mm  
2 pcs

3




Plum Knob Screw  
2 pcs

4




M6 Hex Key  
1 pc

5





M6 Hex Wrench  
1 pc



1

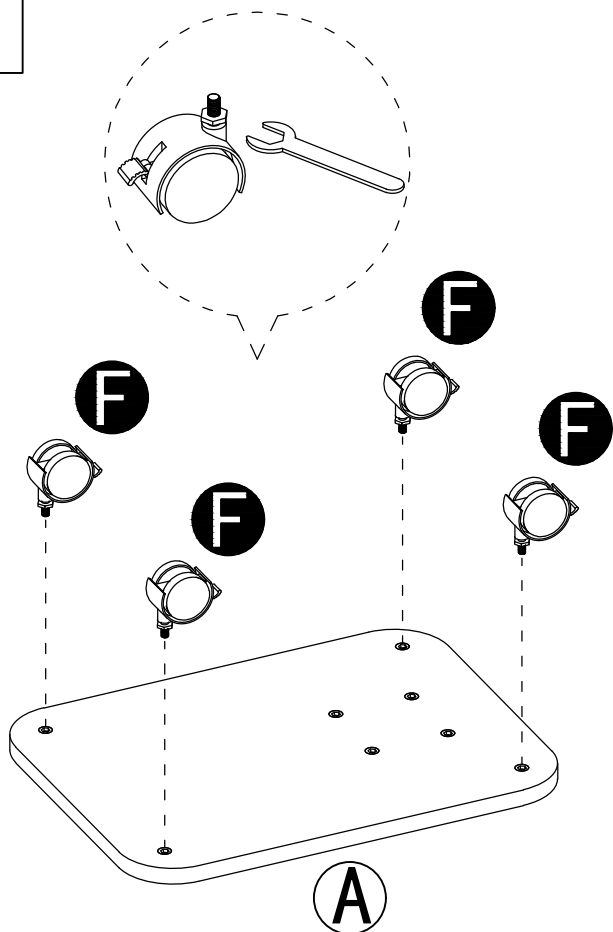



2

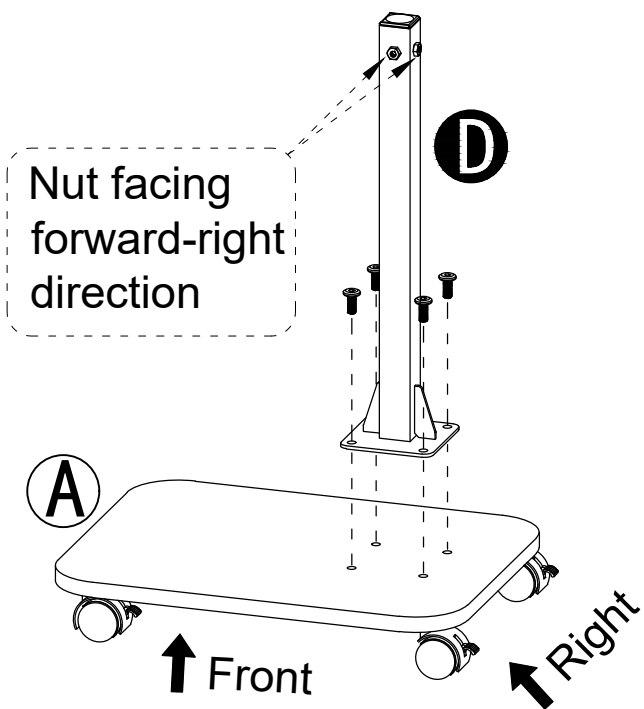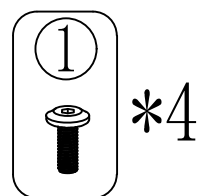


3

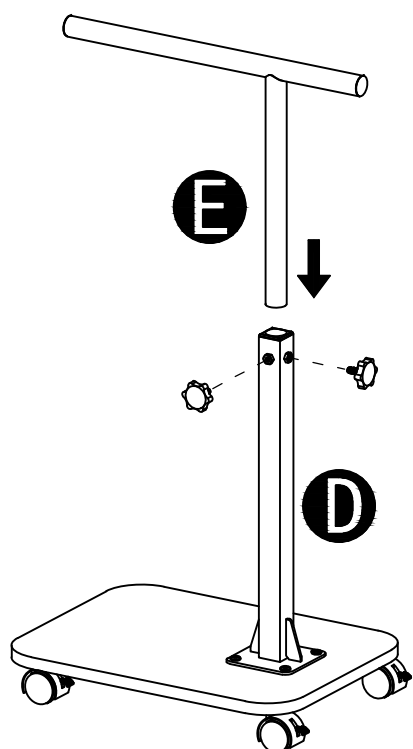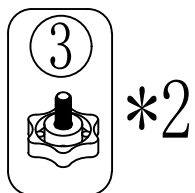

4

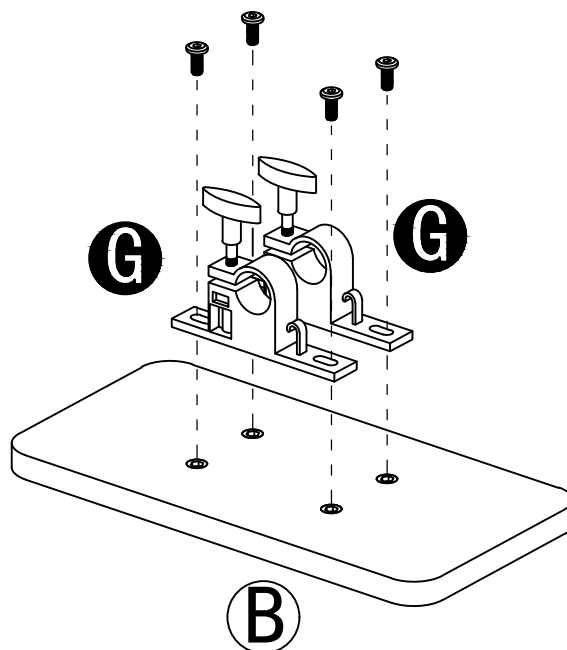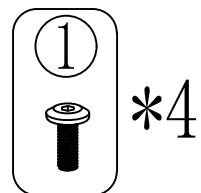


5

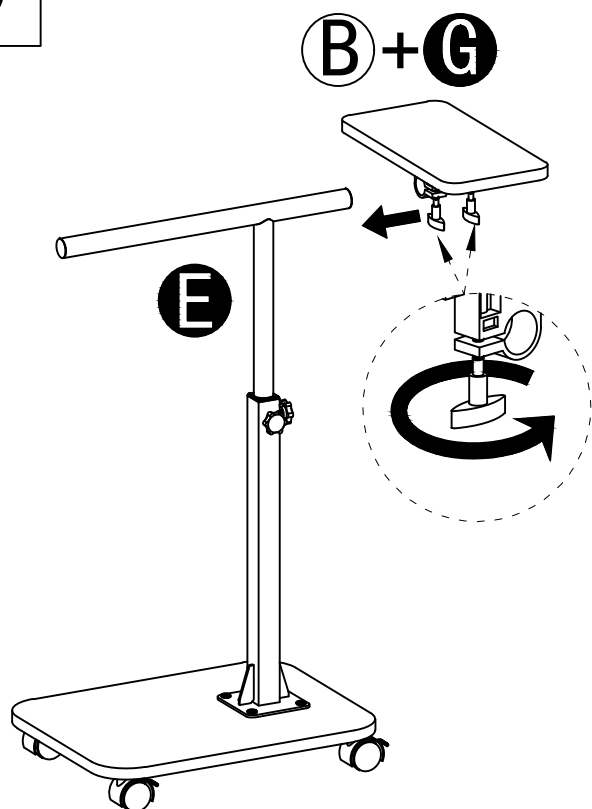


Tighten the screw handle after inserting the iron pipe.

6

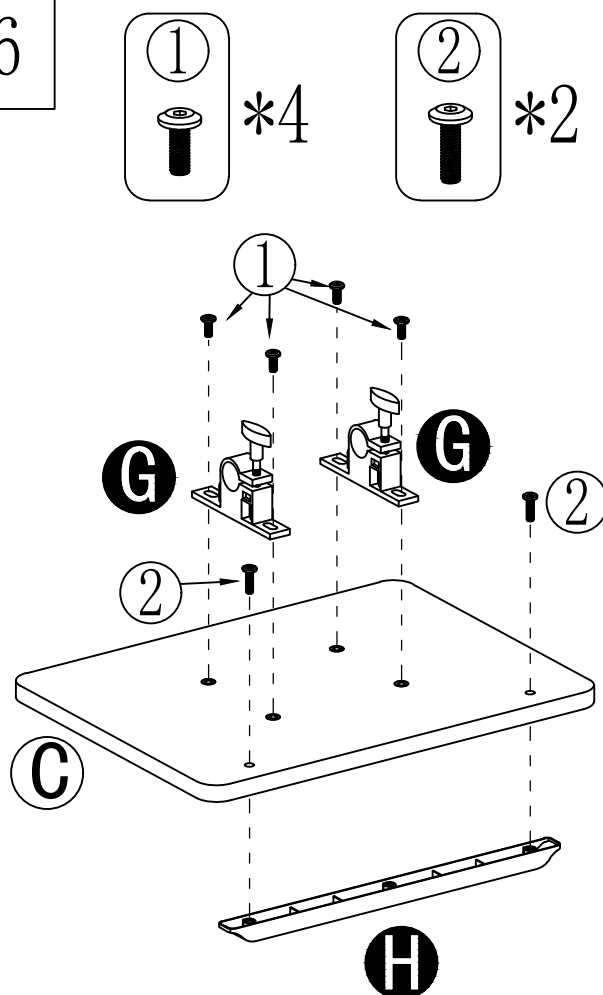


7

Adjust the desktop direction based on left- or right-hand preference.

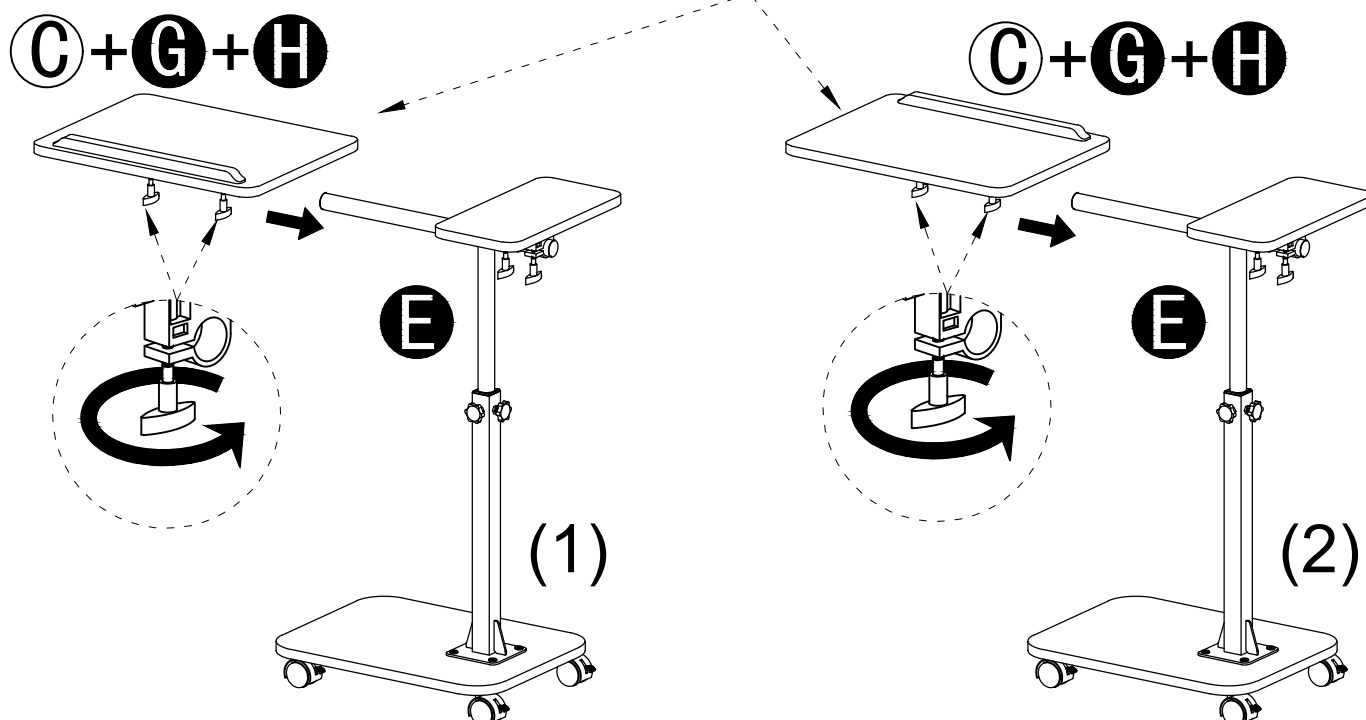


Tighten the screw handle after inserting the iron pipe.

# Height Adjustment

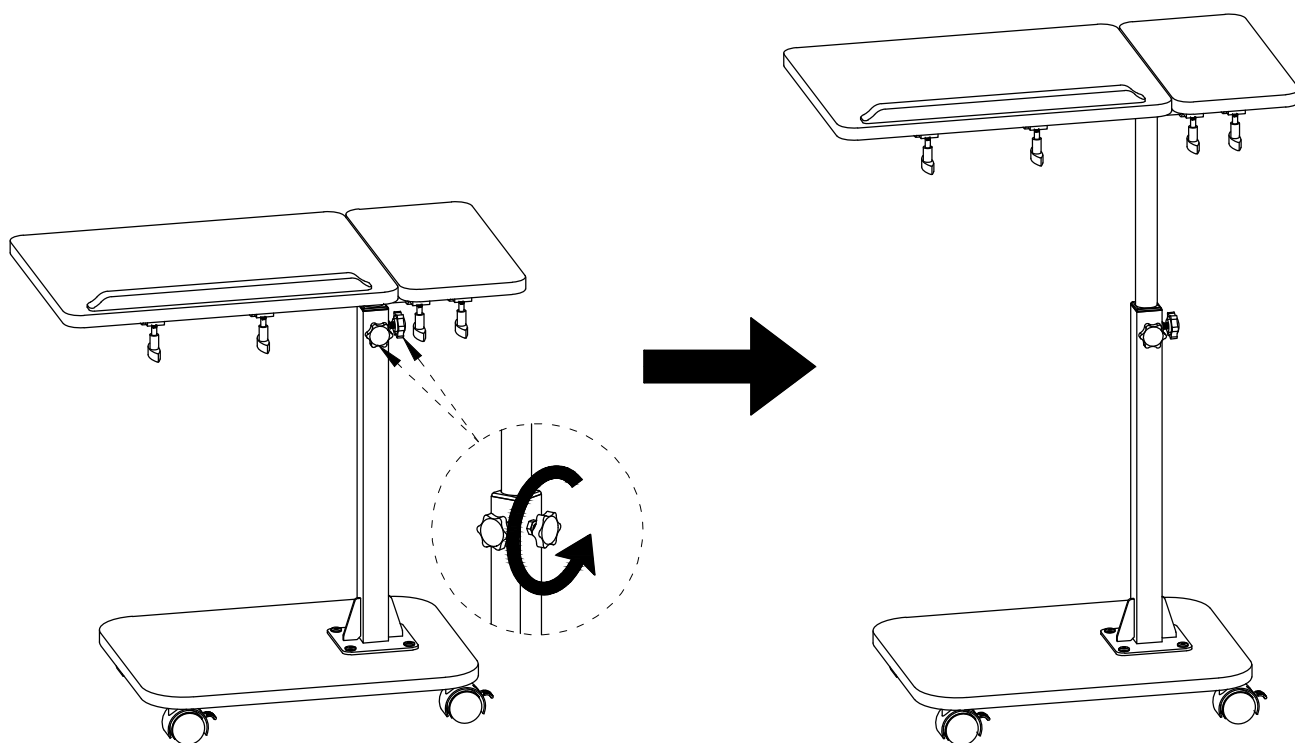

Loosen the screw handle here to adjust the desktop height.

# Angle Rotation Adjustment

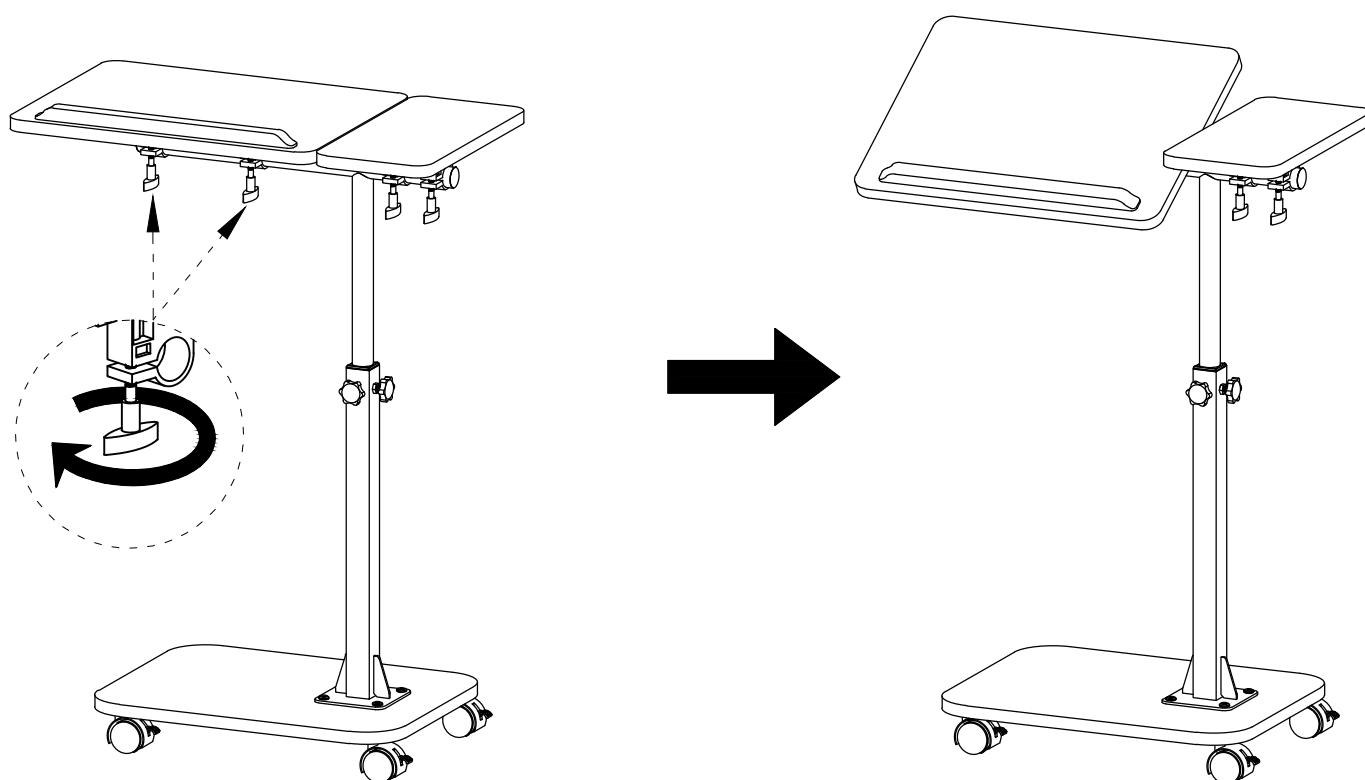

Loosen the screw handle here to adjust the desktop angle.