
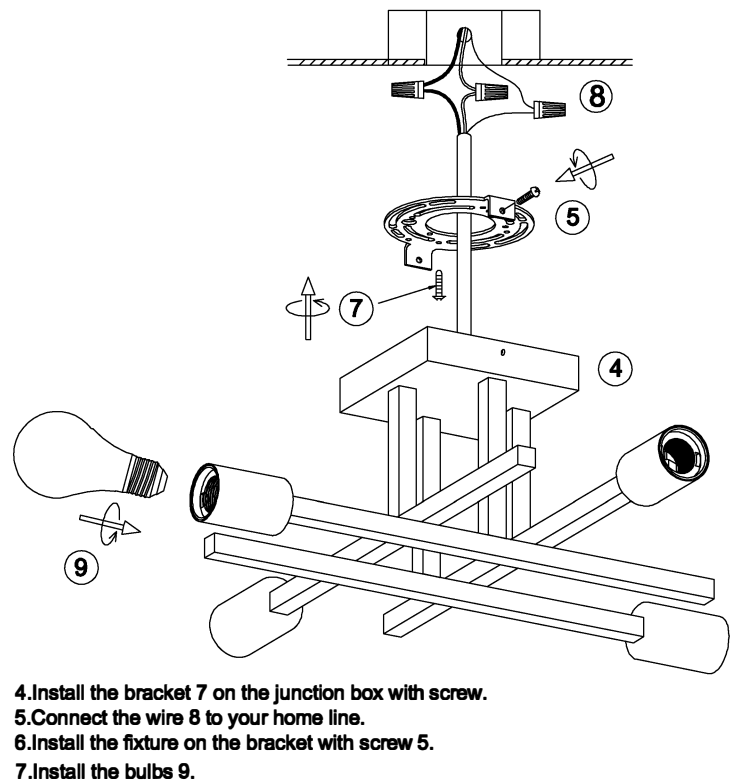
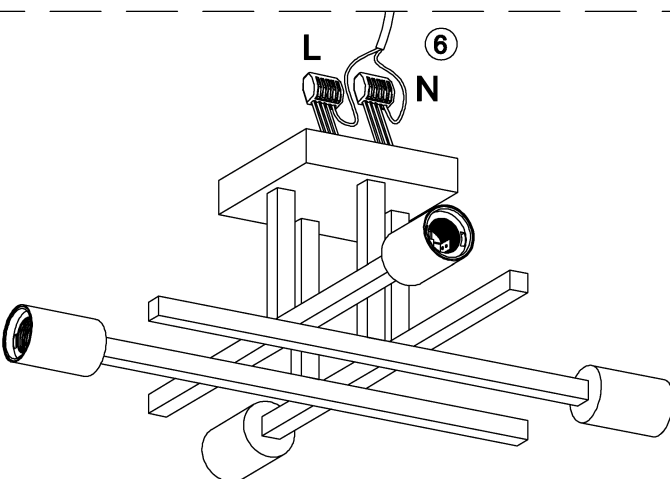


1. Pull the orange operating handle A to open the inlet hole, insert the wire B.
2. Press the operating handle A to finish wiring. (Note: one inlet hole can put 2 or 3 wires inside)

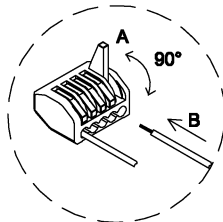

Please read carefully before Installation!!!

Note : Please make sure that the electricity is powered off during installation !

Only a professional electrician should install this kind of product !