

installation instructions:

PVC PEDIMENTS

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow fixture, power tools, paint manufacturers' instructions, and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- ☐ caulk
- ☐ caulking gun
- ☐ noncorrosive mechanical fasteners
- ☐ electric drill
- ☐ extra fine sandpaper
- ☐ tape measure


SPECIAL INSTRUCTIONS AND NOTES

- Hot-dipped galvanized or stainless steel nails/screws are best for PVC products.
- Fill fastener holes in with PVC acrylic caulk.
- Use 100% acrylic paint before installing, finish with final coat to cover caulked holes.

STEP BY STEP INSTRUCTIONS

1. Lay the pediment, face down on a soft surface that will not scratch/dent the pediment.
2. Apply a continuous 1/2" bead of adhesive acrylic caulk along the back.
3. Place the pediment on to your desired installation surface.
4. Align pediment with the outer edges of the door/window opening or pilasters. (Note: The pediment can be slightly larger than the opening as long as the overhang is equal on both sides.)
5. Adhere using premium acrylic construction adhesive and any necessary fasteners for additional support.
6. Use caulk to seal edges. Use a finger or putty knife to smooth caulk.
7. Once caulk is dry, touch up using a high quality acrylic paint.

EXAMPLE INSTALLATION DIAGRAMS

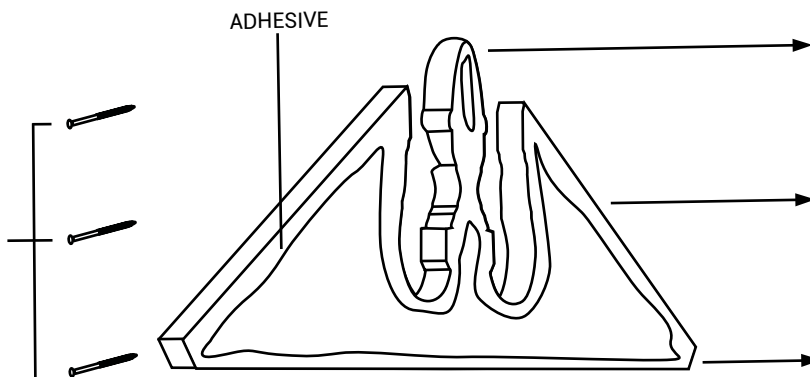

We Can Help. Call (866) 607-0453



EKENA
MILLWORK

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

www.ekenamillwork.com