


MOUNTING INSTRUCTIONS

| NO. | DRAWING                                                                           | DESCRIPTION    | QTY. |
|-----|-----------------------------------------------------------------------------------|----------------|------|
| A   |  | MANTLE SHELF   | 1    |
| B   |  | PLASTIC ANCHOR | 2    |
| C   |  | SCREW          | 2    |


**Step 1**  
MEASURE THE DISTANCE BETWEEN THE TWO HOLES OF THE KEY HOLE CENTER . MARK THE DESIRED LOCATION ON THE WALL WHERE YOU WANT TO HANG THE MANTLE SHELF

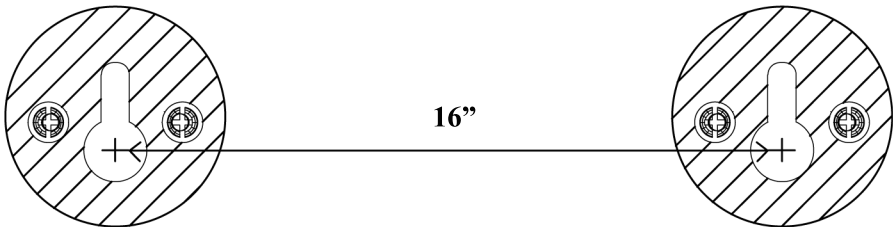


**Step 2**  
DRILL A 1/8" PILOT HOLE 3/4" DEEP . THIS WILL MARKS THEN LOCATION FOR THE SCREW THAT THE MANTLE SHELF WILL HANG FROM.

**Step 3**  
IF HOLE LOCATION IS ALIGNED WITH A STUD IN WALL , SECURE SCREW ( C ) DIRECTLY IN TO THE STUD .


NOTE : DO NOT DRIVE SCREW ALL THE WAY IN, KEEP HEAD OF SCREW OUT ABOUT 3/8"

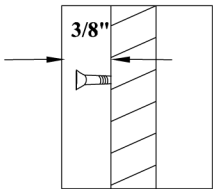

**Step 4**  
IF HOLE LOCATIONS DO NOT ALIGN WITH THE STUD IN WALL , INSTALL THE PLASTIC ANCHOR ( B ) . TAP THE PLASTIC ANCHOR IN TO THE DRYWALL .

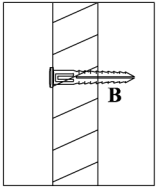

**Step 5**  
SECURE SCREWS INTO PLASTIC ANCHOR  
NOTE : DO NOT DRIVE SCREW ALL THE WAY IN , HAVE HEAD OF SCREW OUT ABOUT 3/8"

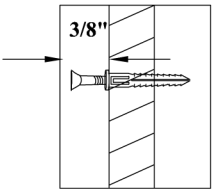

STEP 6 : HANG MANTLE SHELF

