


Assembly Instructions

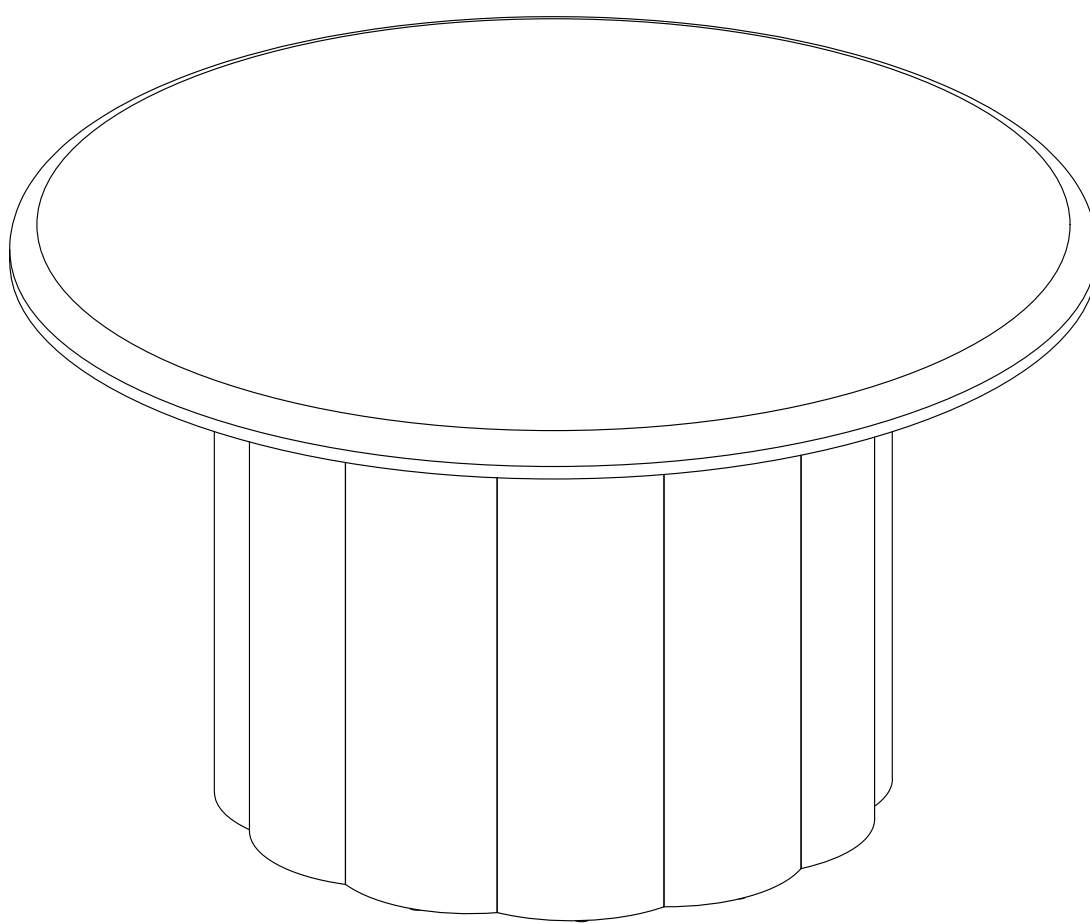

Coffee Table


Contact Us

We're here to help you.

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

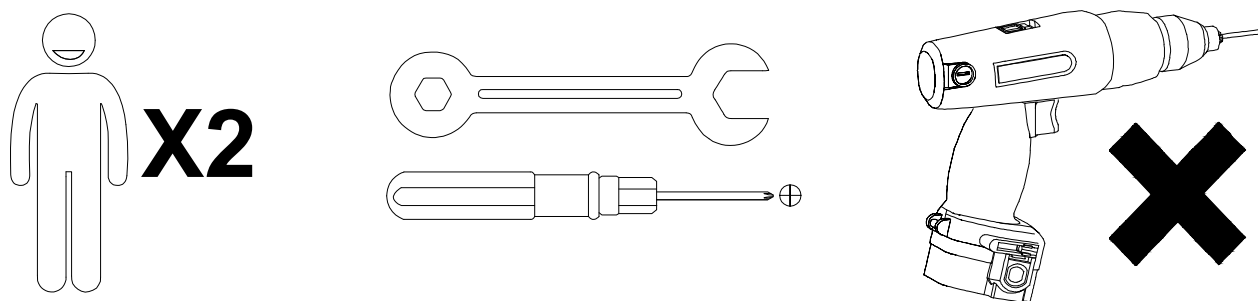


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

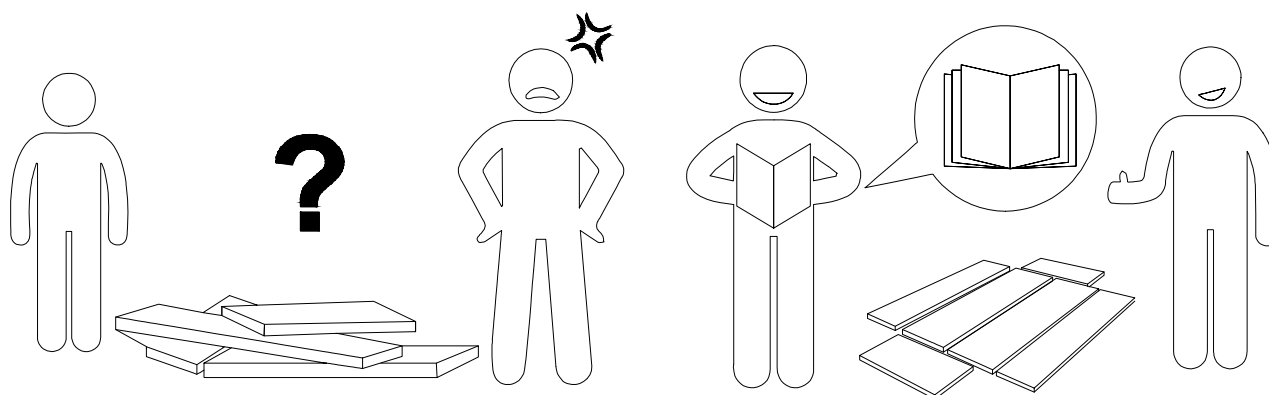

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.




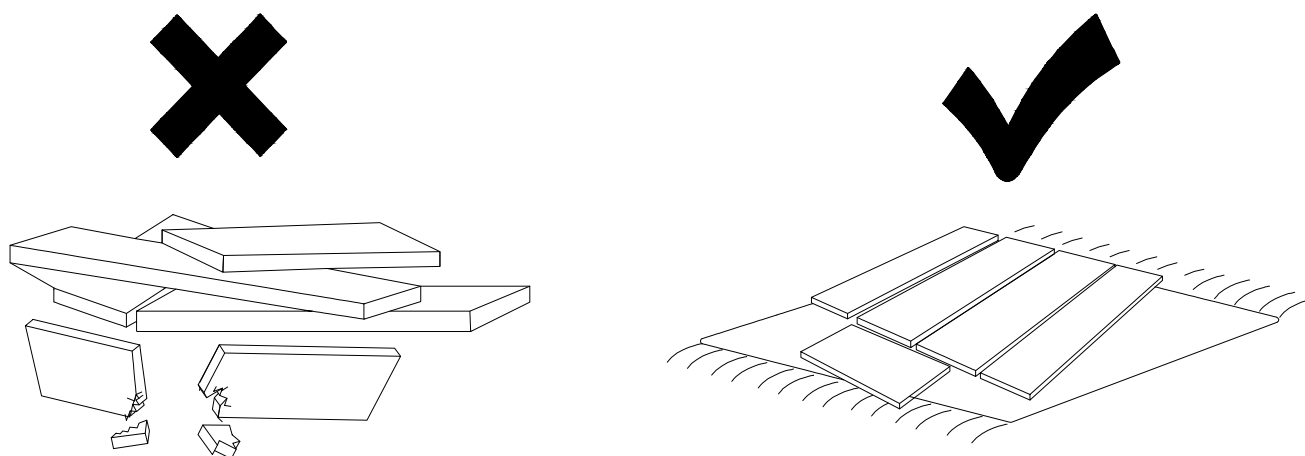


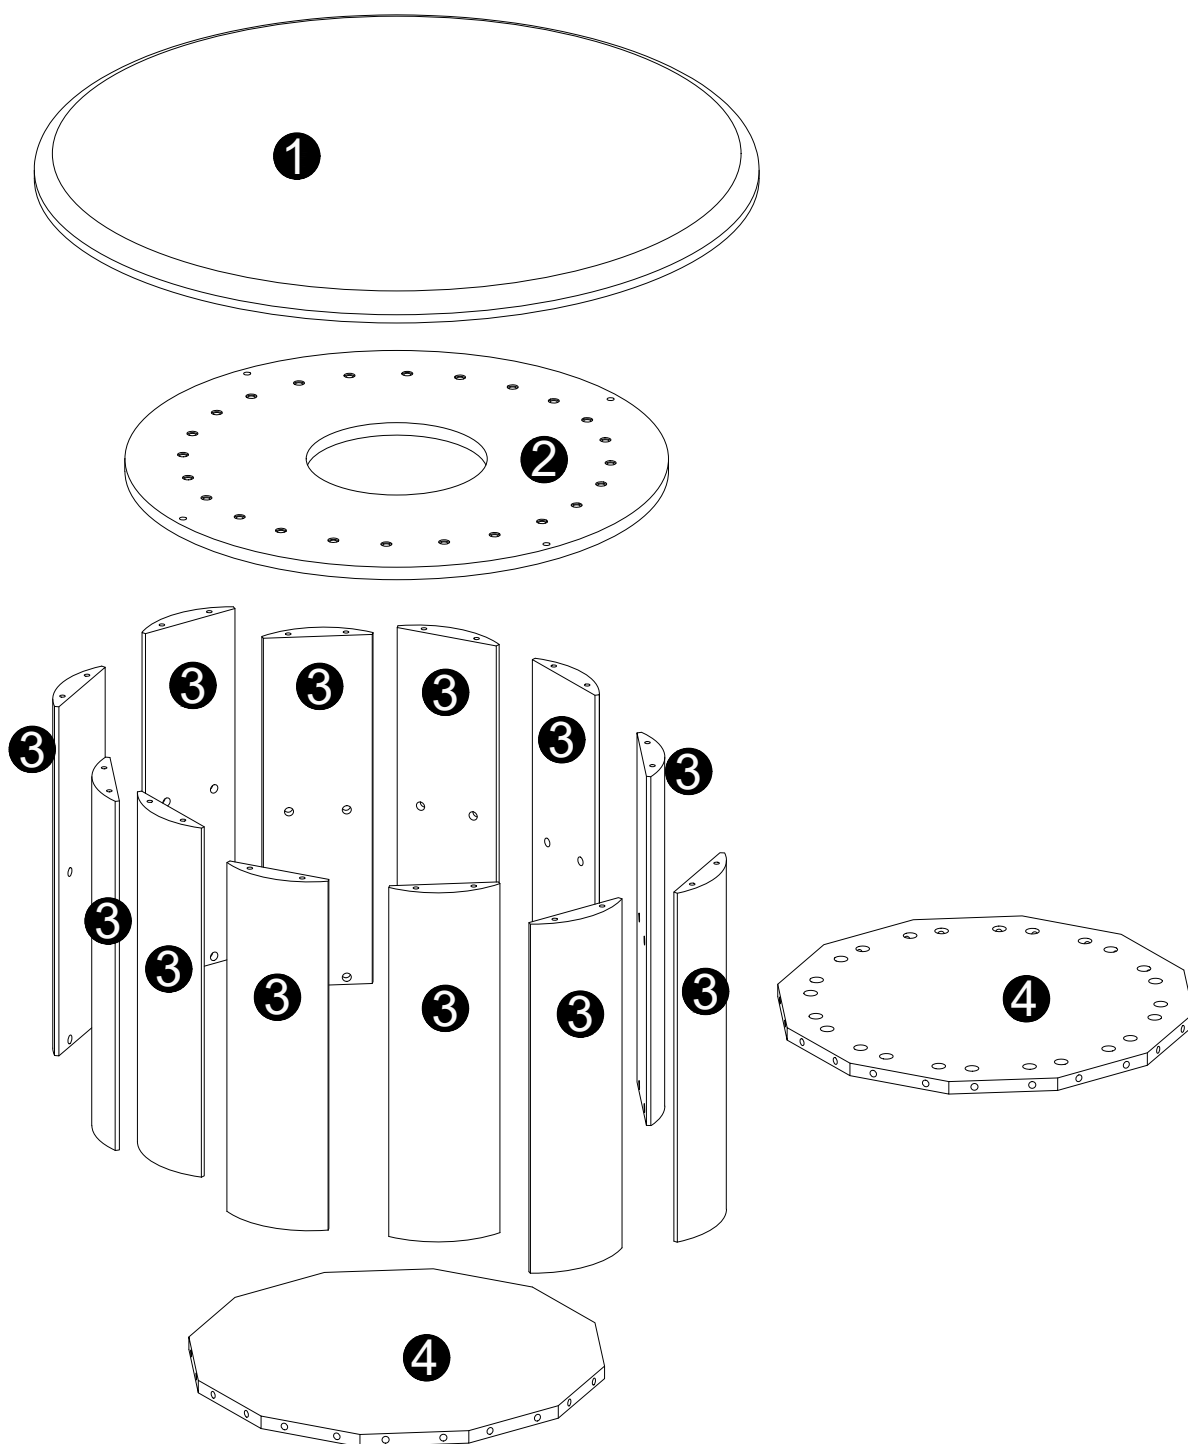






⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

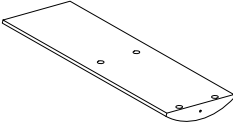
1  1 pc	2  1 pc	3  12 pcs	4  2 pcs	
---	---	---	--	--

Hardware List


A	B	C	D	E	F
 Ø6x40mm 49 pcs	 Ø15x12mm 49 pcs	 Ø7x38mm 25 pcs	 M6x25mm 5 pcs	 Ø14x4mm 13 pcs	 M4 1 pc

Installation of Cams and Pins



Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

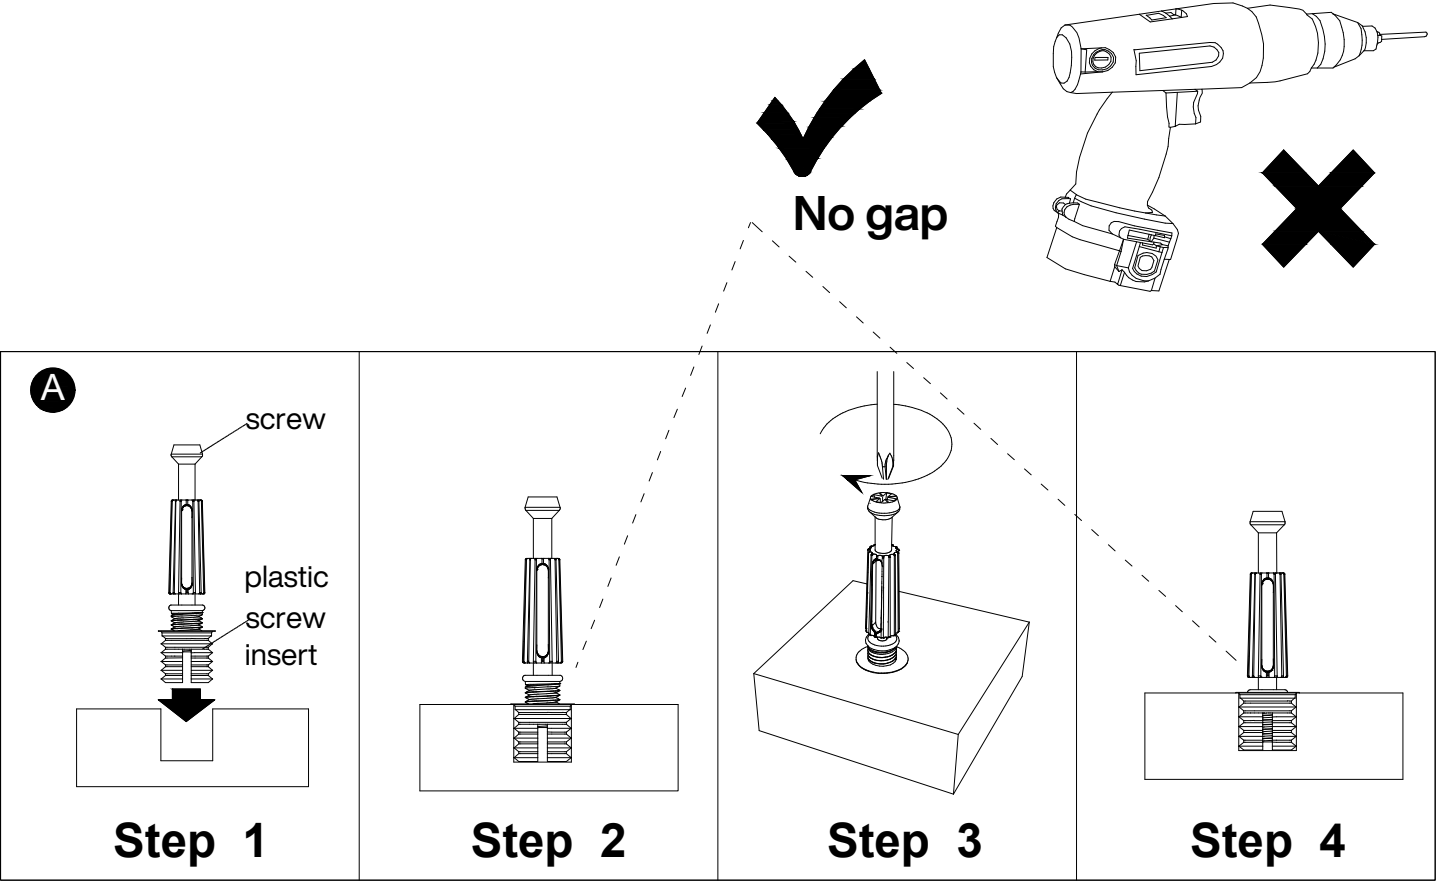


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

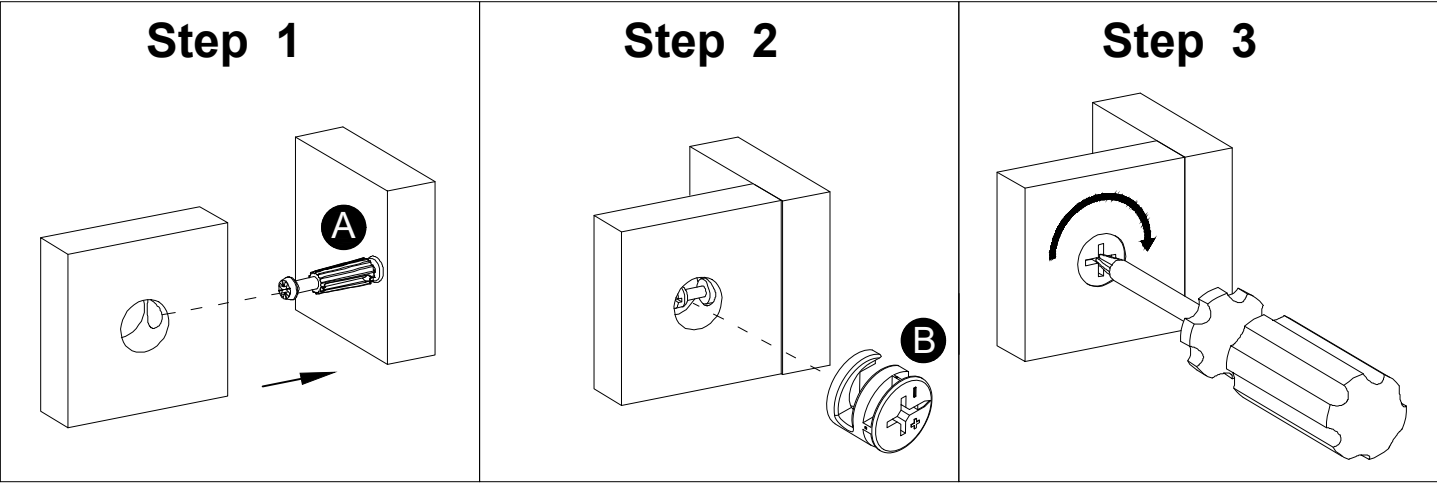




1

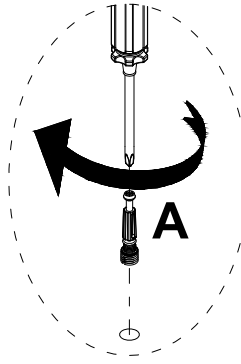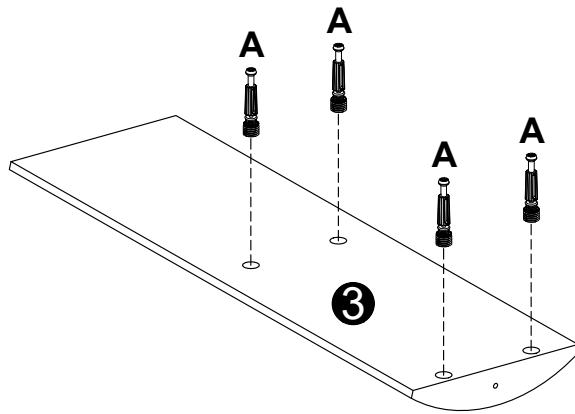



A

Ø6x40mm
48 pcs

x12

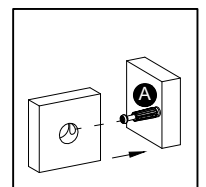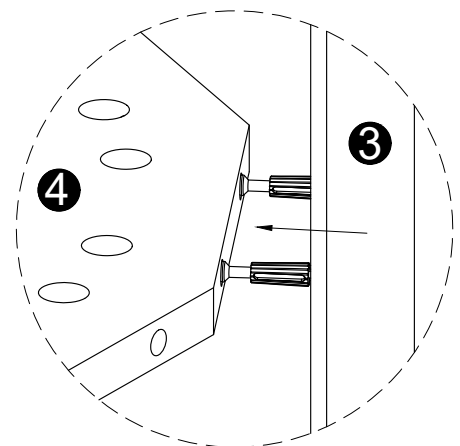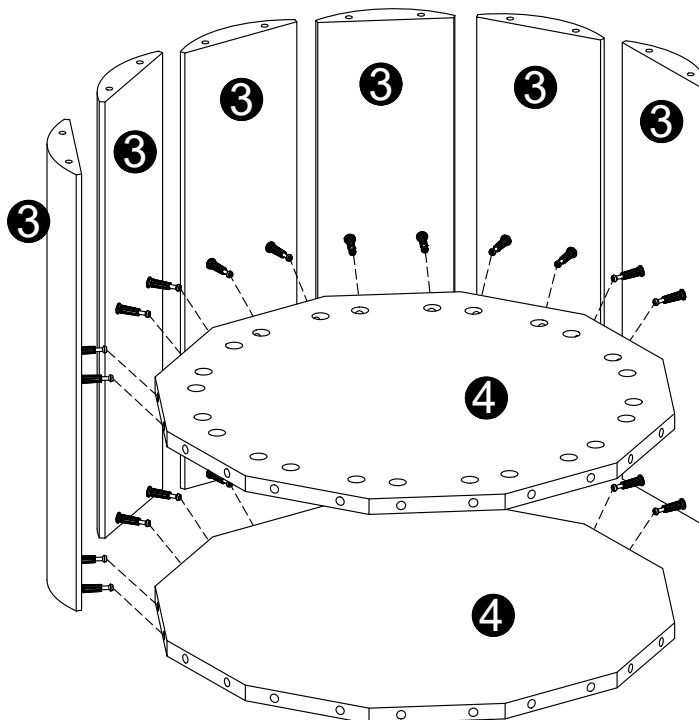
2

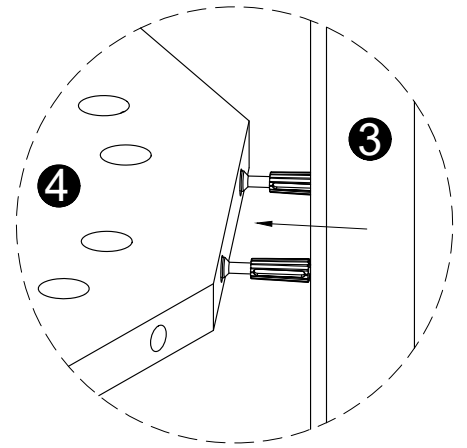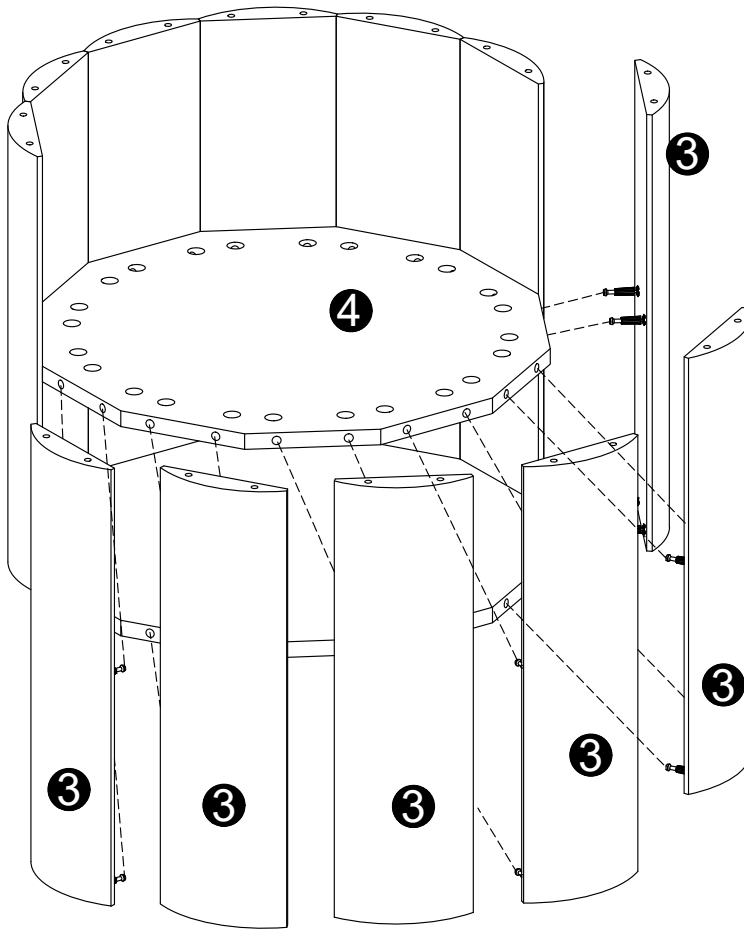


3



4

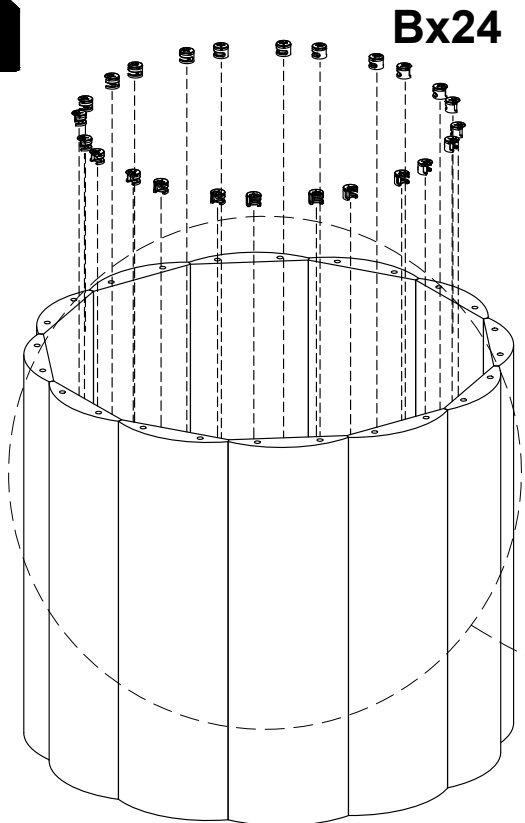



Bx24

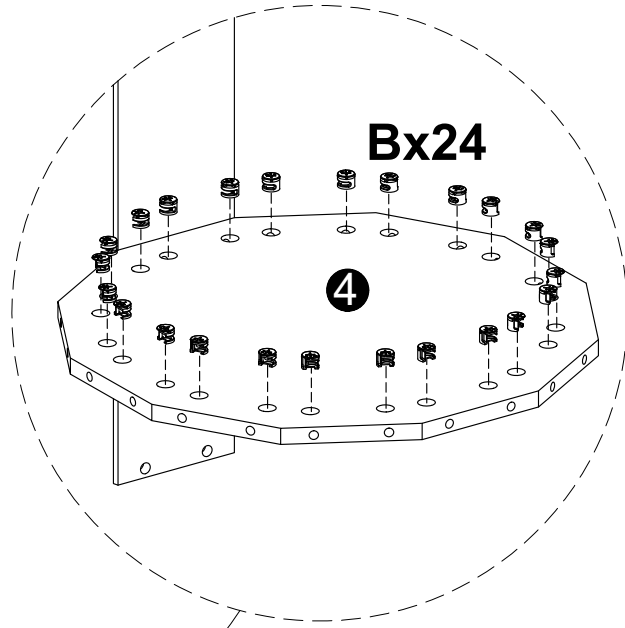

Bx24


B

Ø15x12mm
24 pcs

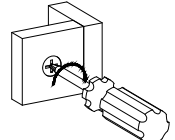
Step 1	Step 2
	

5

Rotate 180°

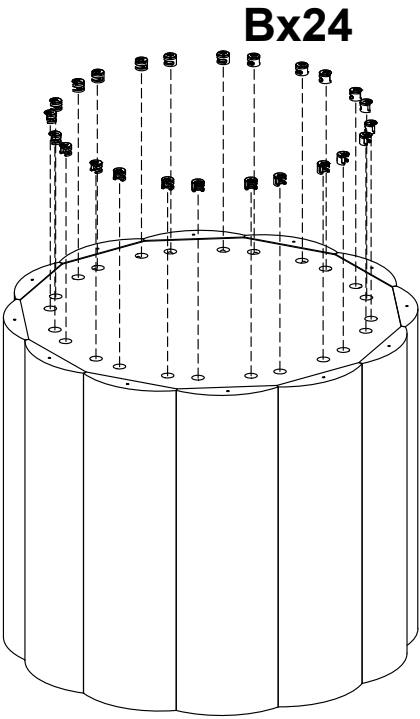

Bx24

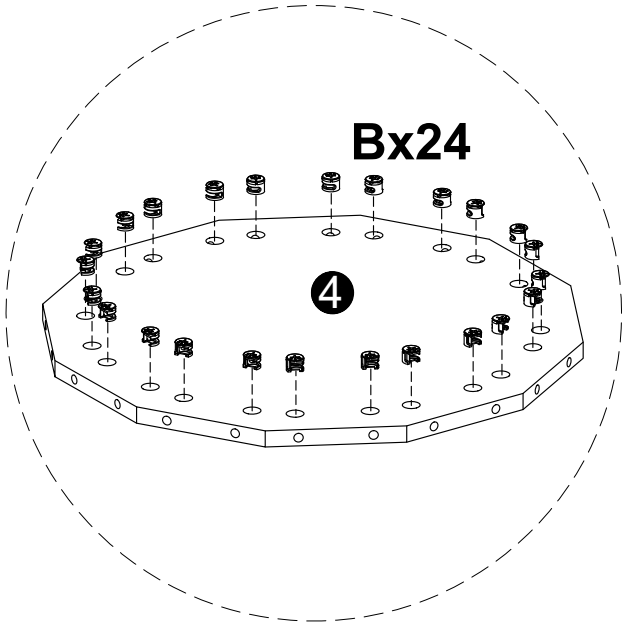

Bx24

4


B




Ø15x12mm

24 pcs


Step 1




Step 2

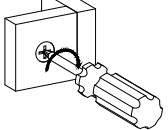

6

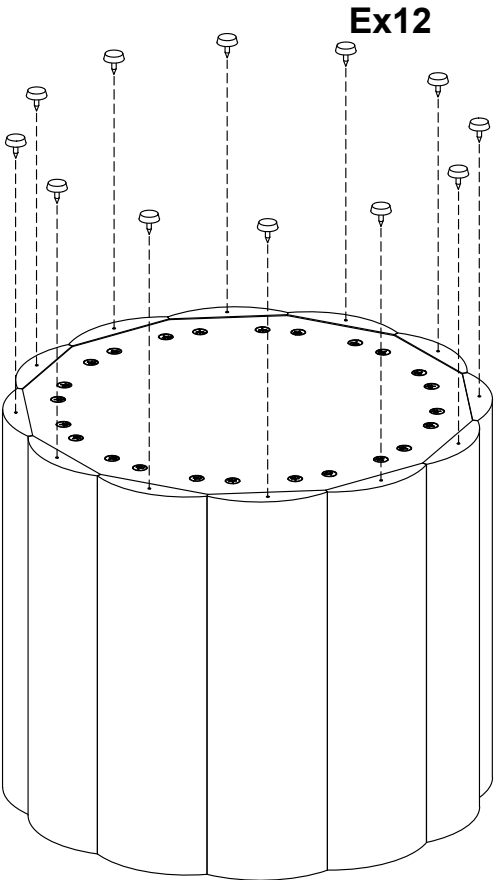

Ex12

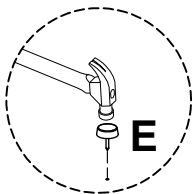

Caution! Tap lightly

E



Ø14x4mm




12 pcs

7

Note: Align holes and pre-place all screws #C before tightening any to prevent misalignment.

C	F
	
Ø7x38mm	M4
24 pcs	1 pc



Rotate 180°

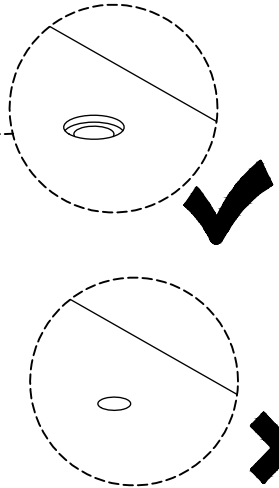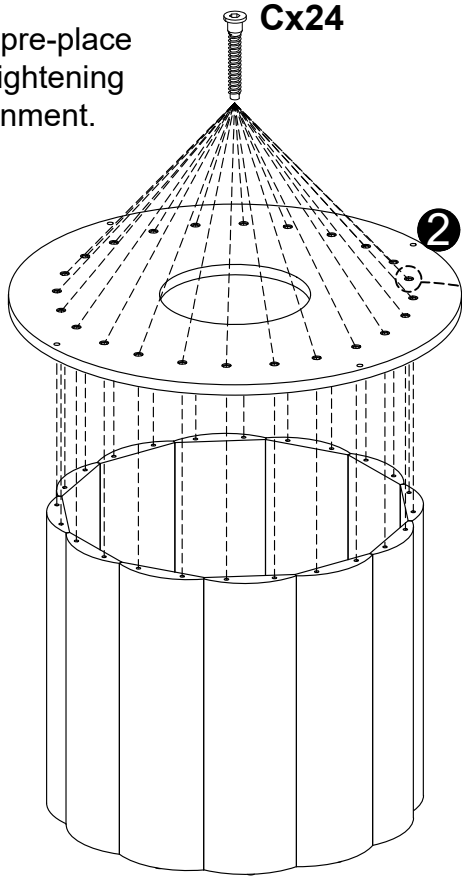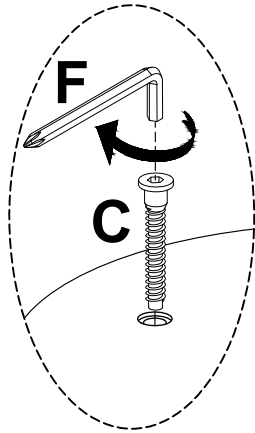


8

D

M6x25mm
4 pcs

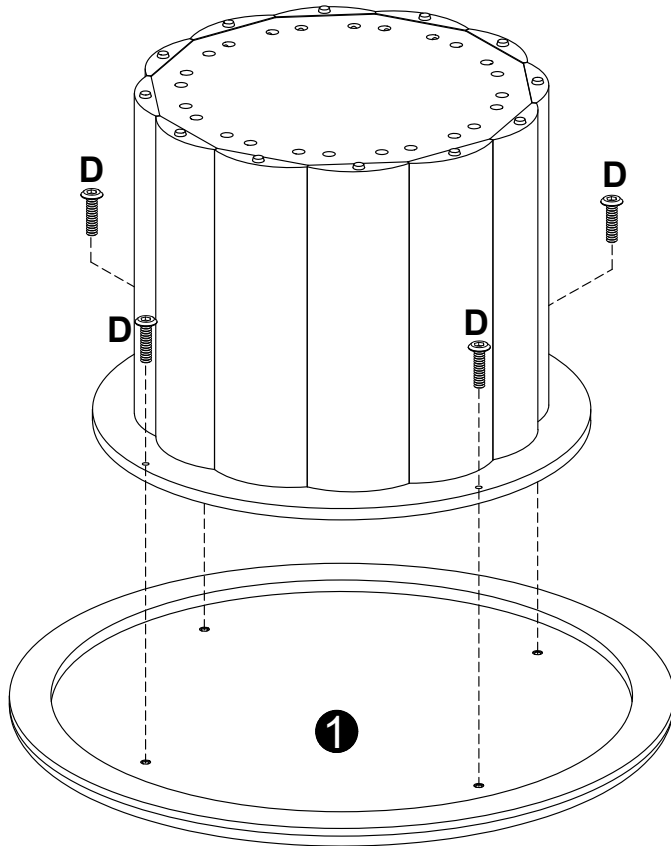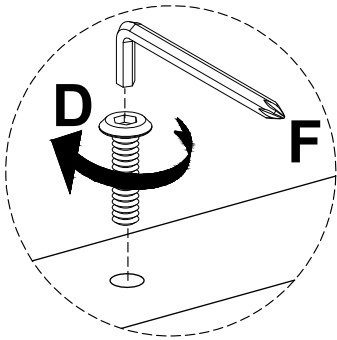

screw down 100%

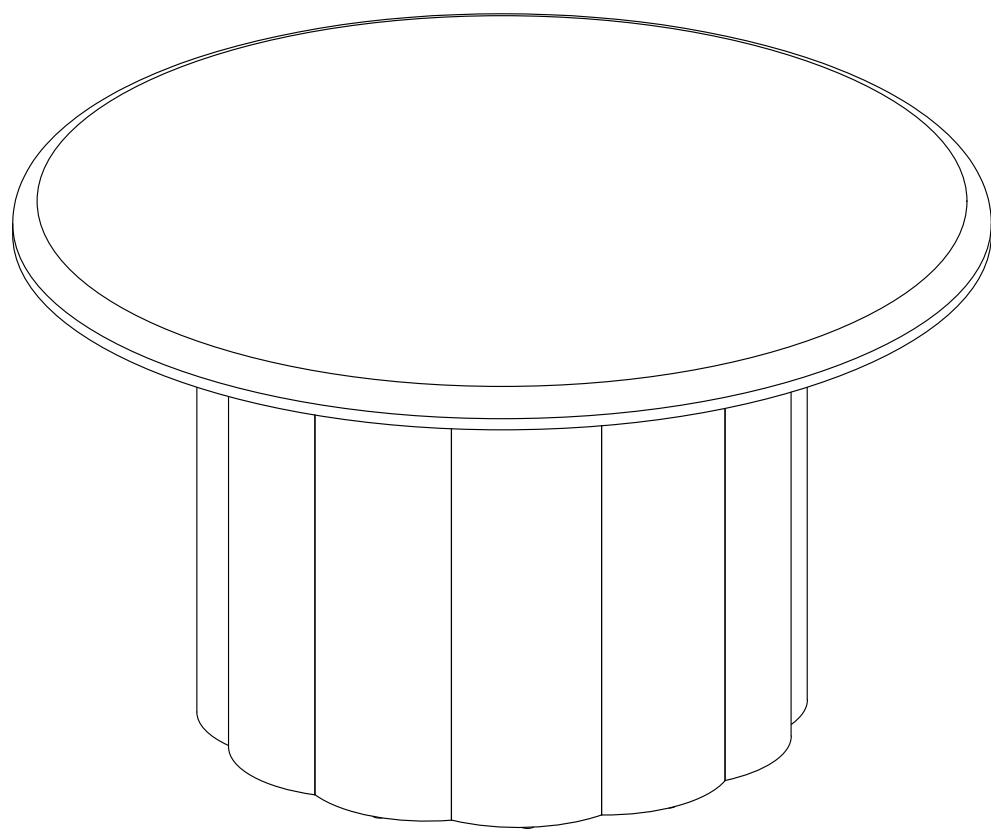

Thank you for your support!

