


Storage Bar Cabinet

Assembly Instructions-Please keep for future reference

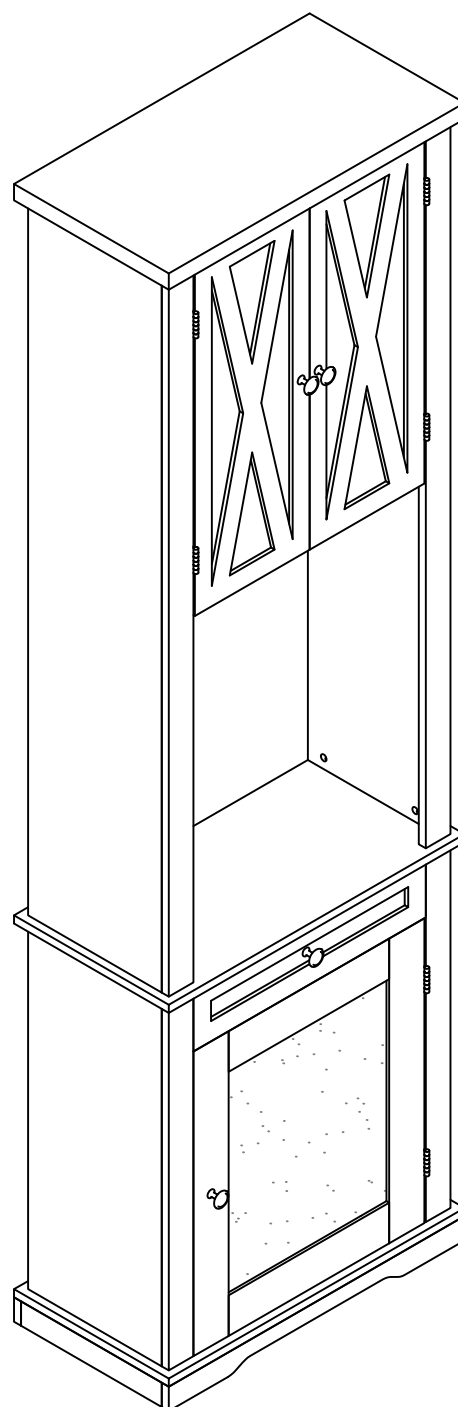

Dimensions

Width-30.3inch

Depth-15.7inch+11inch

Height-70.8inch

! WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.

Important -Please read these instructions fully before starting assembly




Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- . Check you have all the components and tools listed on the following pages.
- . Remove all fittings from the plastic bags and separate them into their groups.
- . Keep children and animals away from the work area, small parts could choke if swallowed.
- . Make sure you have enough space to layout the parts before starting.

- . During assembly do not stand or put weight on the product, this could cause damage.
- . Assemble the item as close to its final position (in the same room) as possible.
- . Assemble on a soft level surface to avoid damaging the unit or your floor.
- . Parts of the assembly will be easier with 2 people.

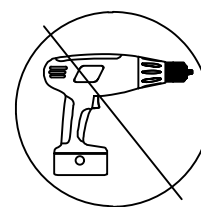

power drill is set on a low torque setting.

- . To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- . Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- . From time to time check that there are no loose screws on this unit.
- . This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- . Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- . Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning - please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose



















Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

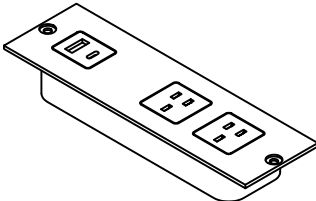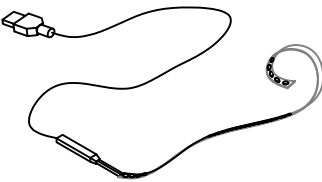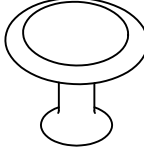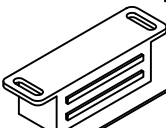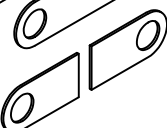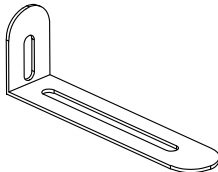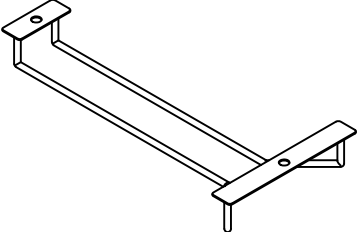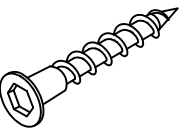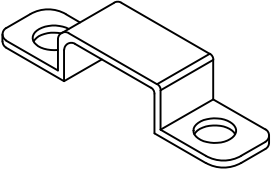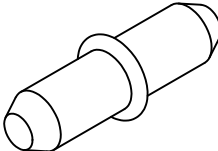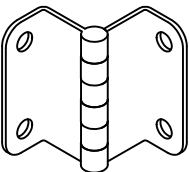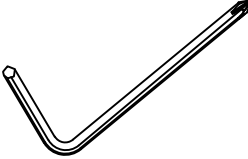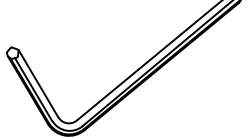A  72pcs	B  72pcs	C  1pcs	D  6*30=30pcs
E  1pcs	F  M3*12=62pcs	G   4pcs	H   2pcs
J   M6*30 2pcs	K  2pcs	L  M4*40=12pcs	M     1pcs
N  12pcs	P  2pcs	R  4pcs	Q  6pcs
S  1pcs	T  1pcs		

Ruler- Use this ruler to help correctly identify the screws

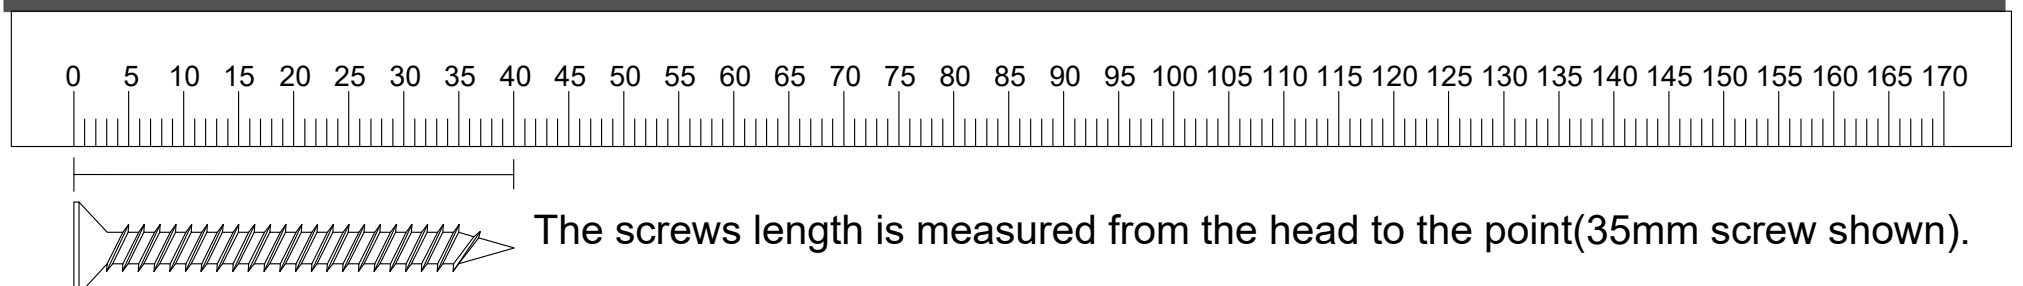


Using Camlocks

Step 1

Connect the camlock as directed in the assembly Instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

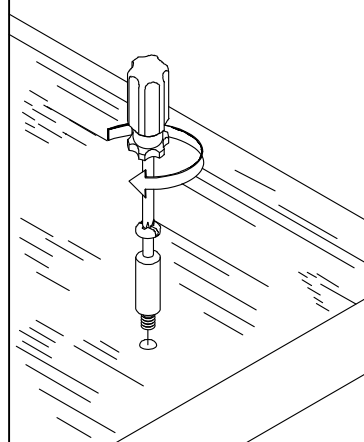

Step 2

Push the male camlock into the entry hole.

2

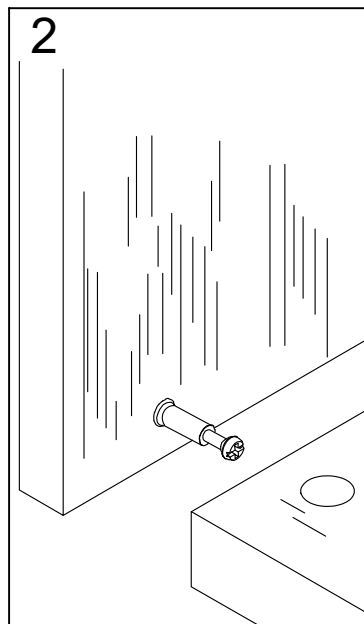


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

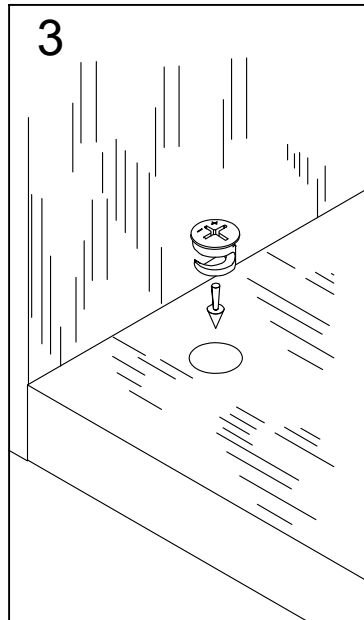


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

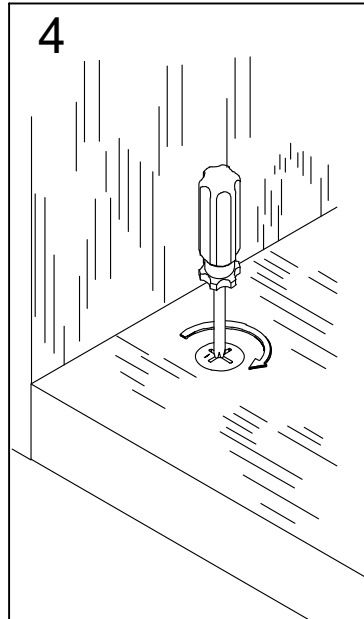


Assembly Instructions

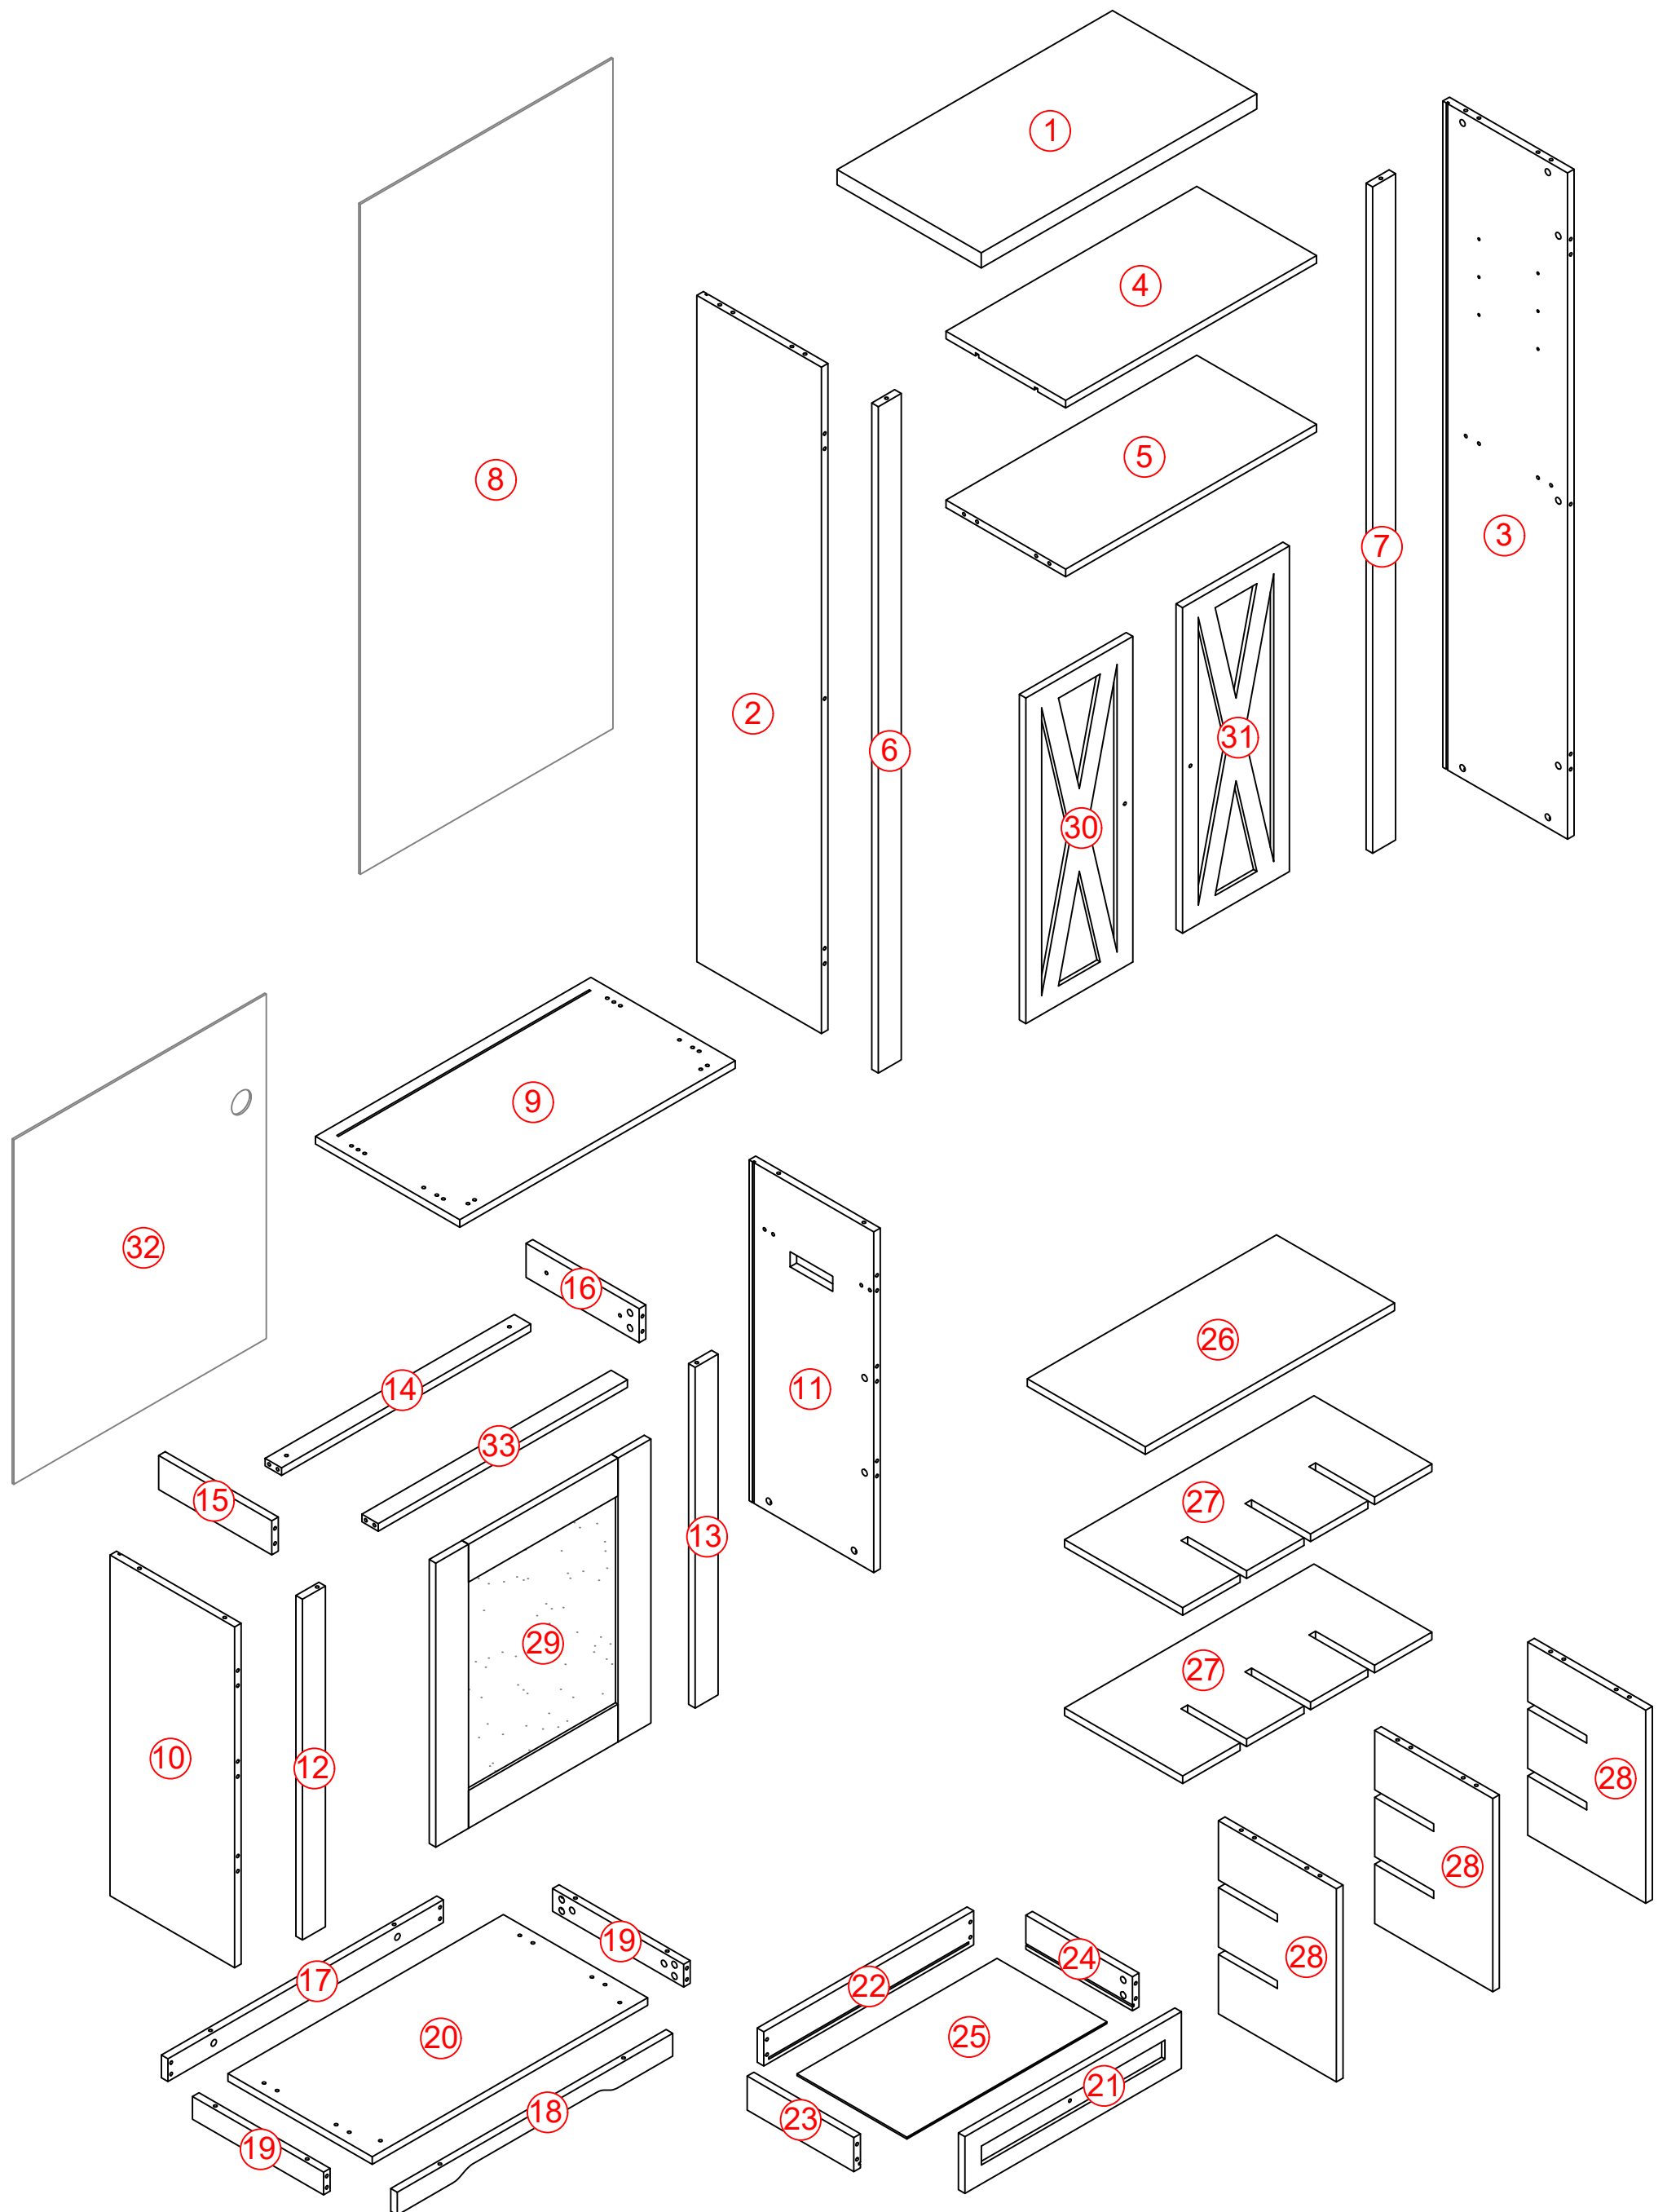


Assembly Instructions

①

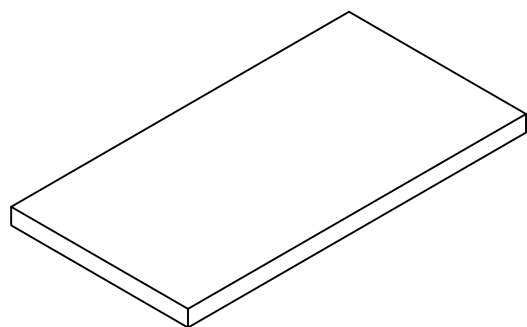

1pc

②




1pc

③




1pc

④

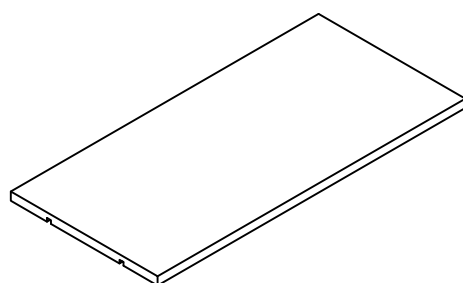

1pc

⑤

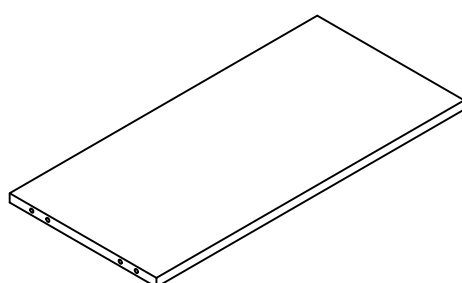

1pc

⑥



1pc

⑦




1pc

⑧




1pc

⑨

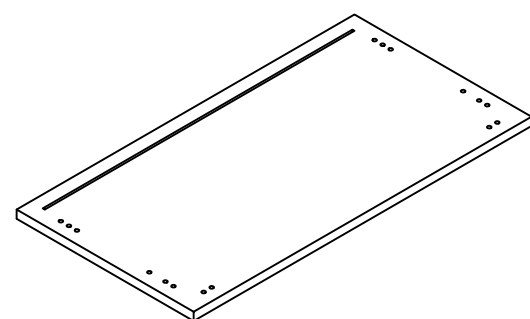


1pc

⑩

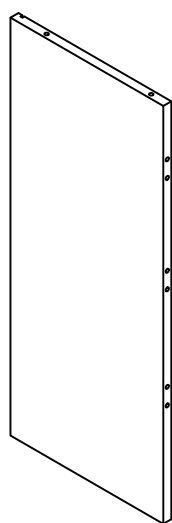


1pc

⑪

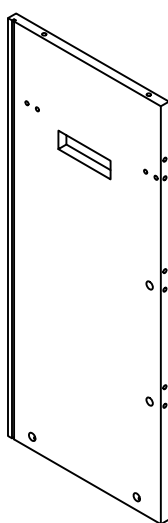


1pc

⑫




1pc

⑬




1pc

⑭

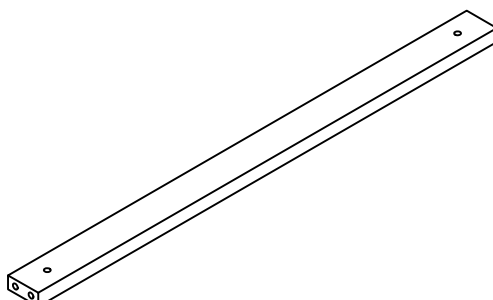

2pc


⑮

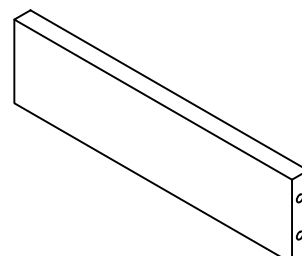

1pc


Assembly Instructions

16

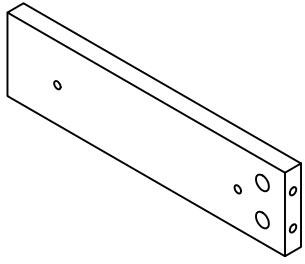


1pc

17

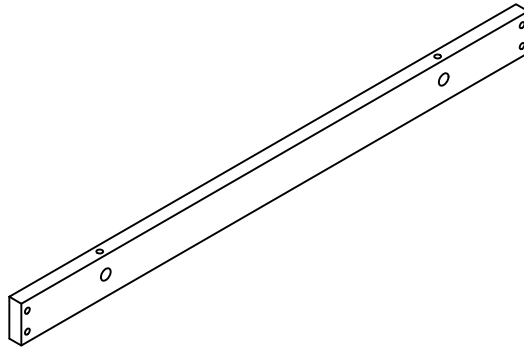


1pc

18

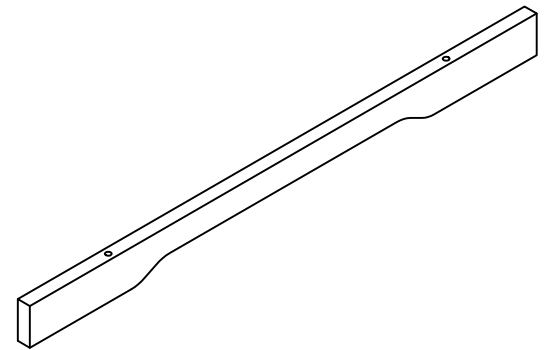


1pc

19

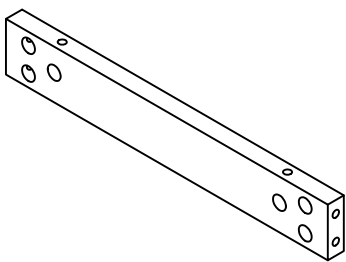


2pc

20

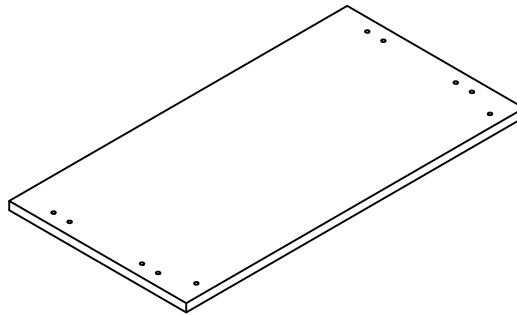


1pc

21

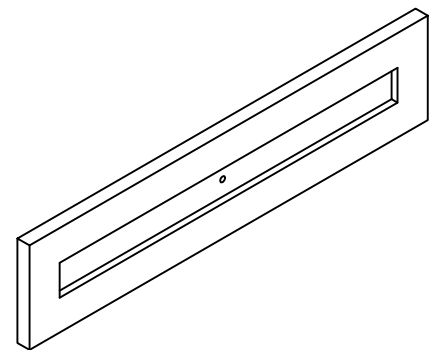


1pc

22

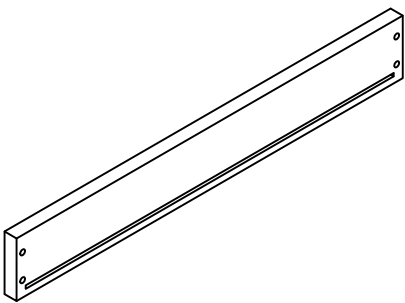


1pc

23

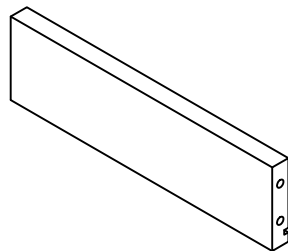


24

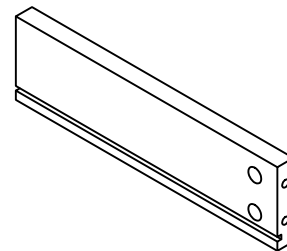


1pc

25

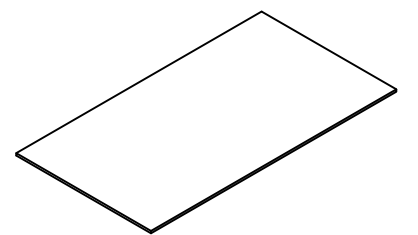


1pc

26

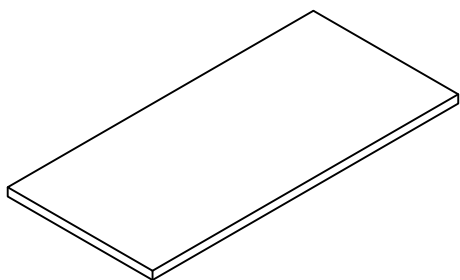


1pc

27

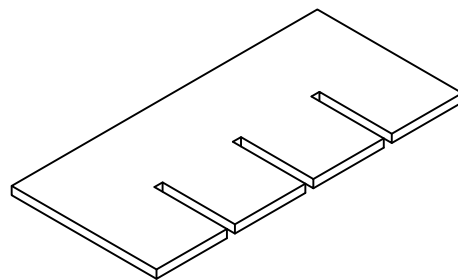


2pc

28

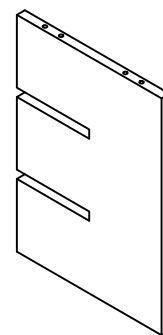


3pc

29

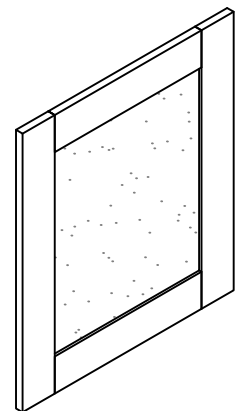


1pc

30

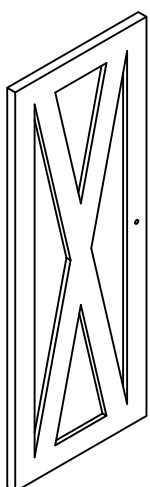

1pc

31

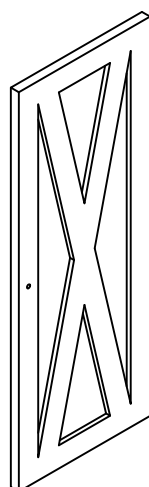


1pc

32



1pc




33

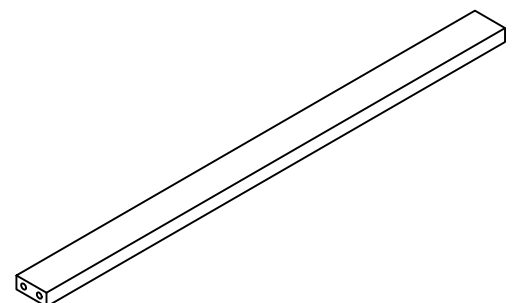


1pc

Assembly Instructions


Step1

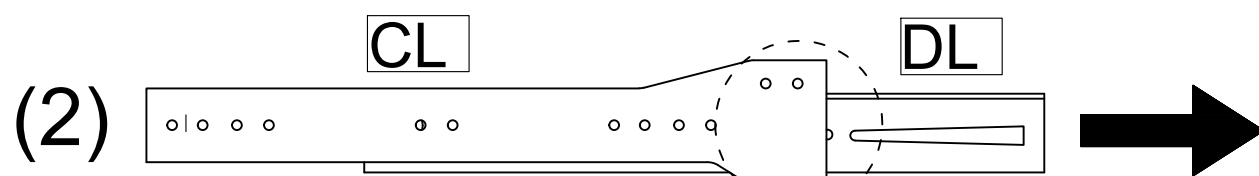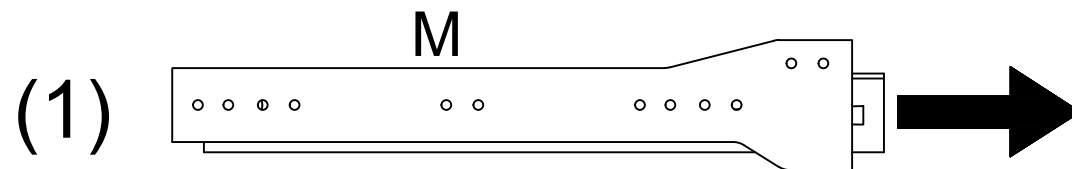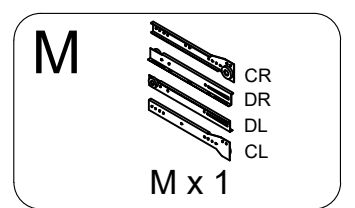

x2




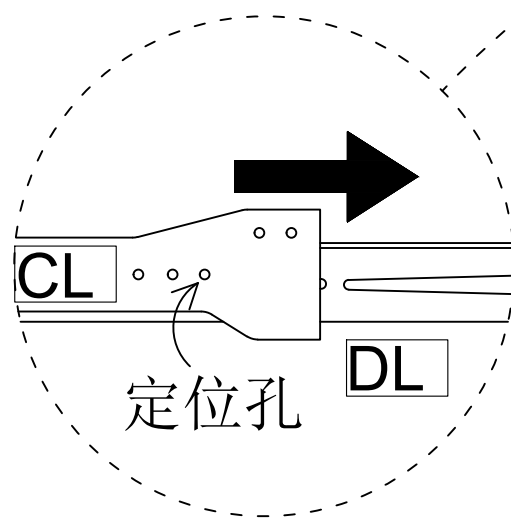


Move the black paddle upward and pull out (M2)to the right.





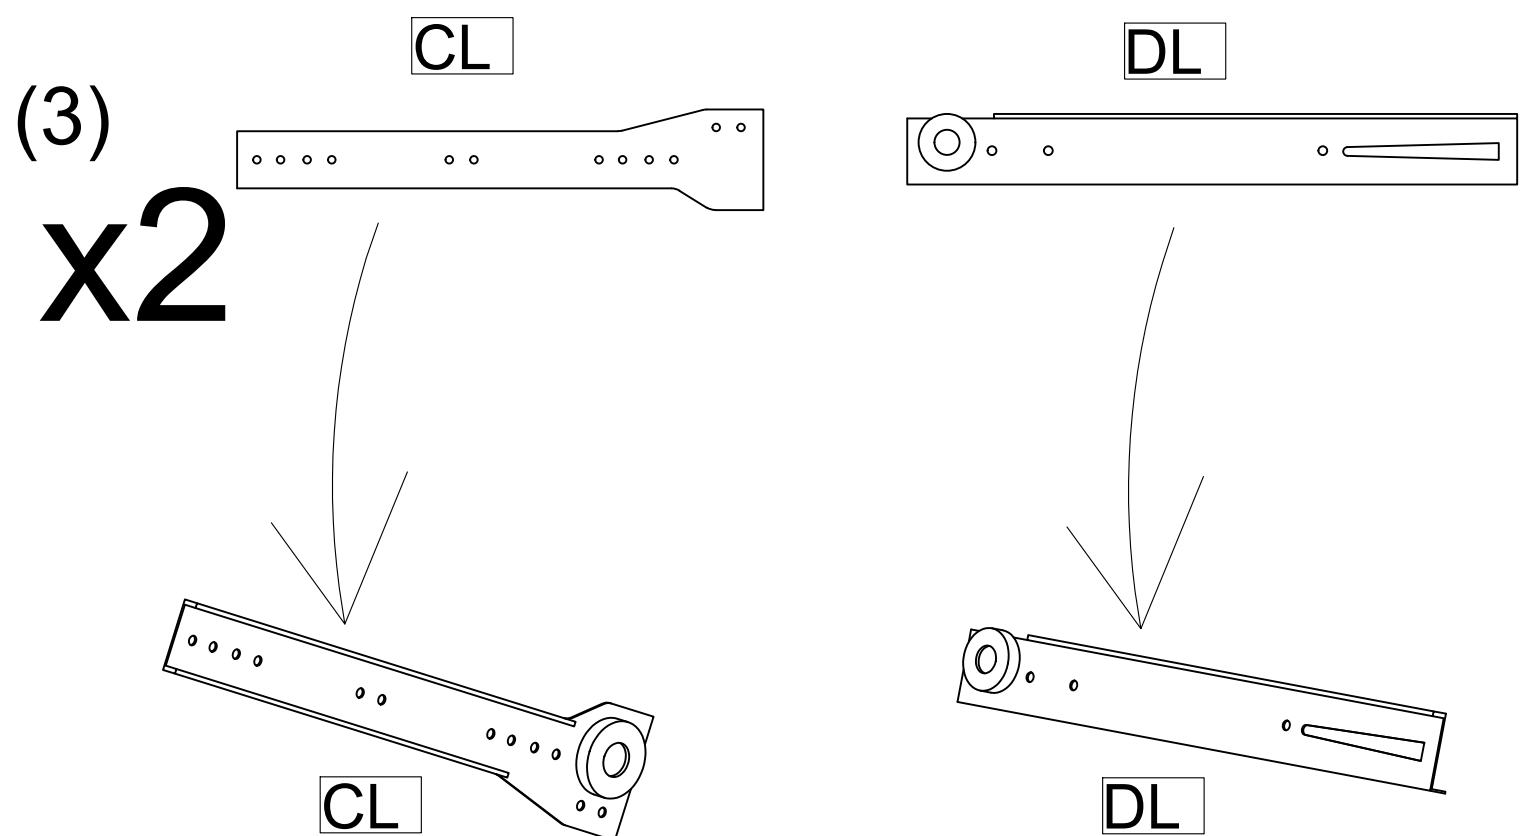


Assembly Instructions

Step2

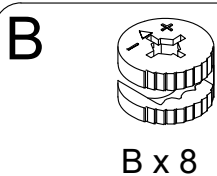
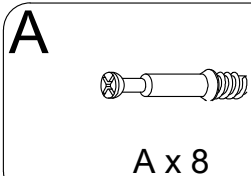
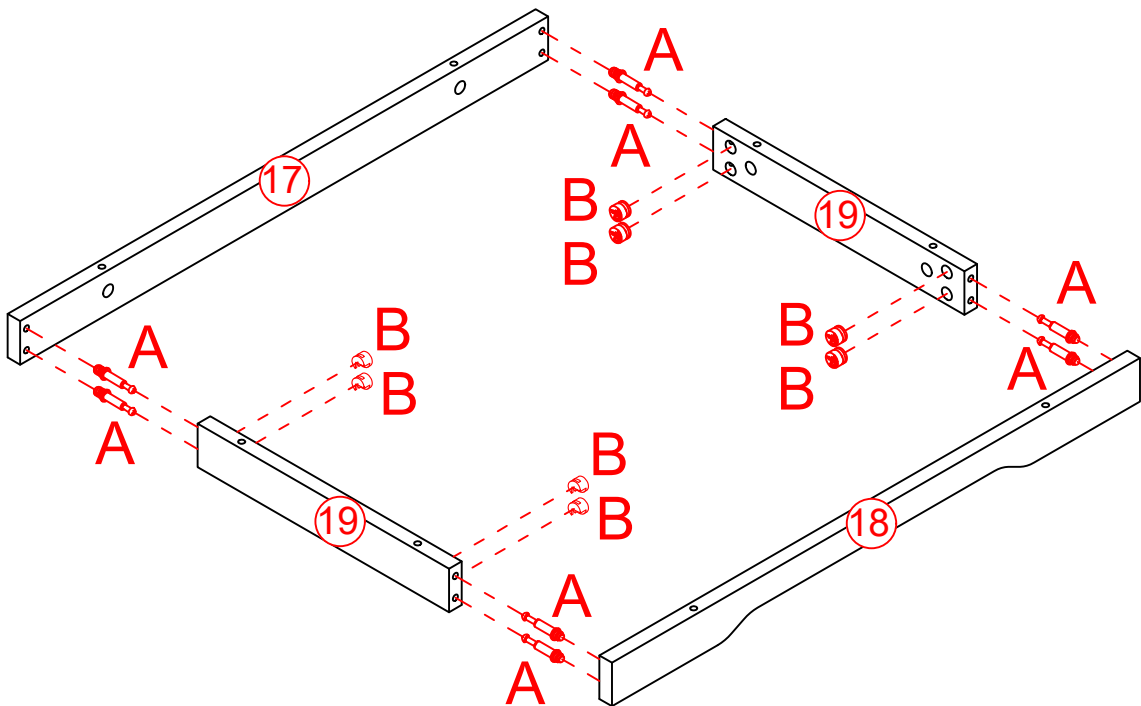
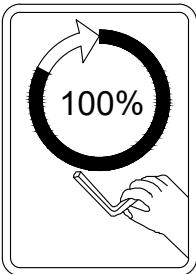


Step3


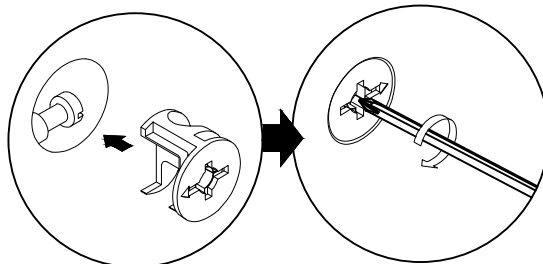
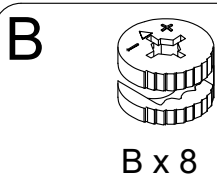
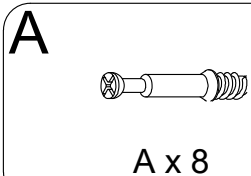
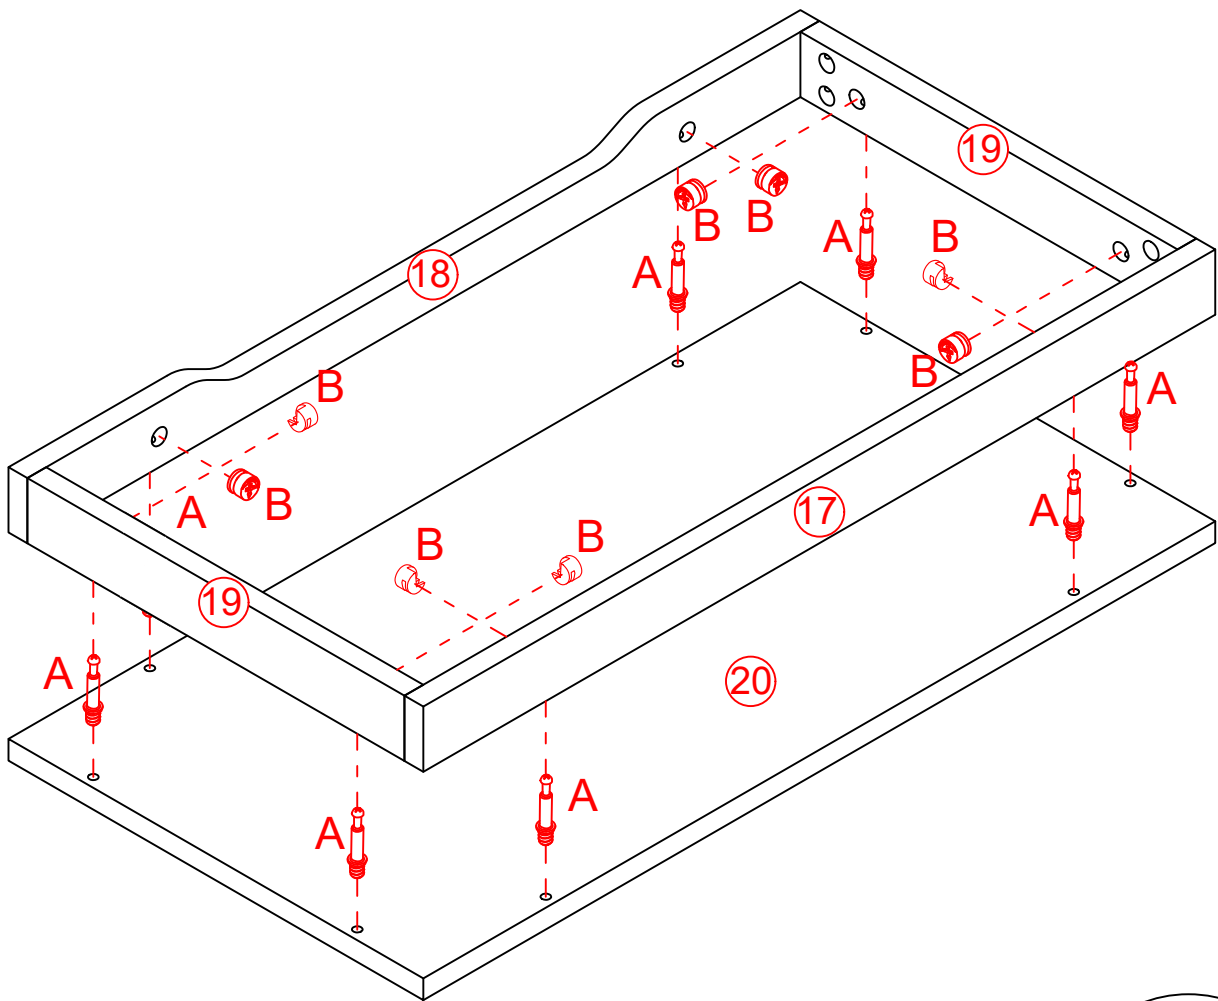
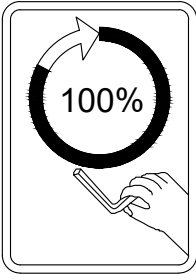


Assembly Instructions

Step4

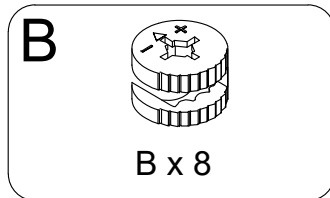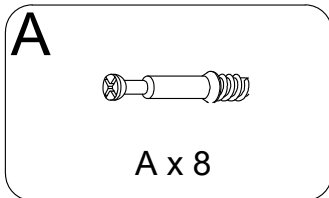
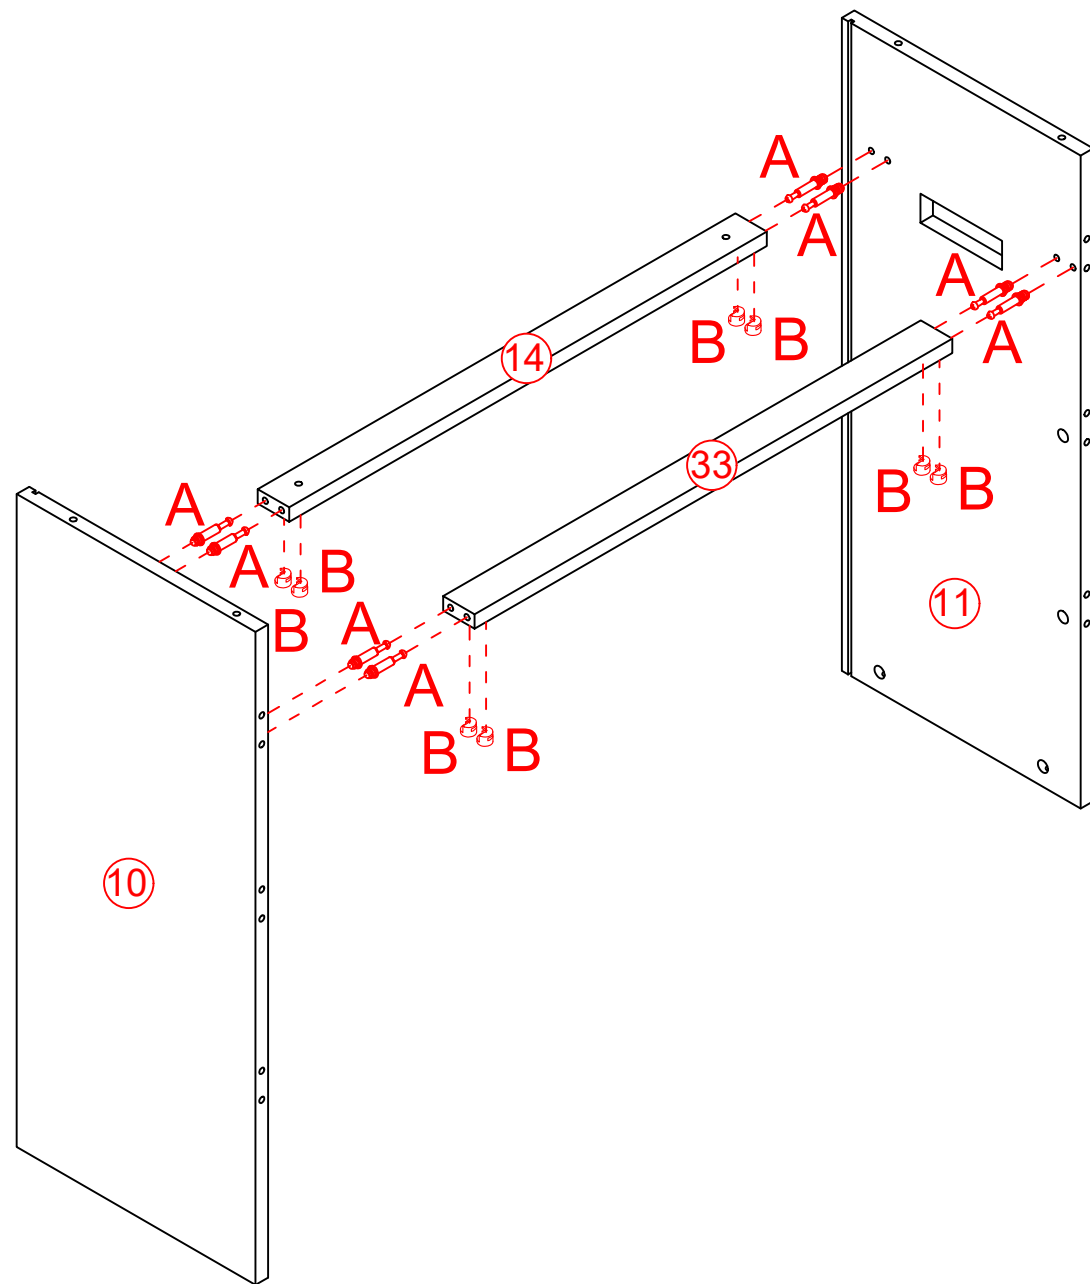
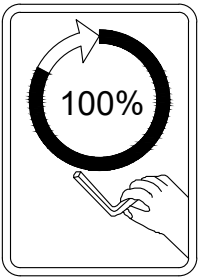


Step5

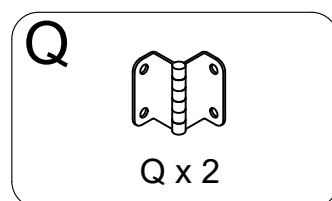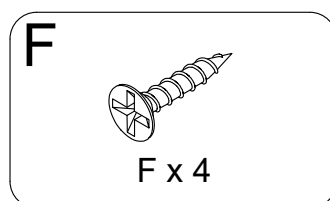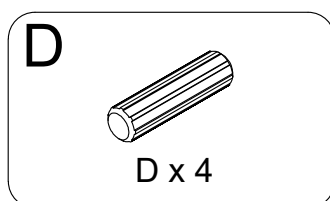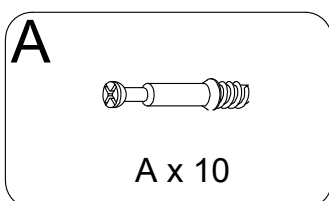
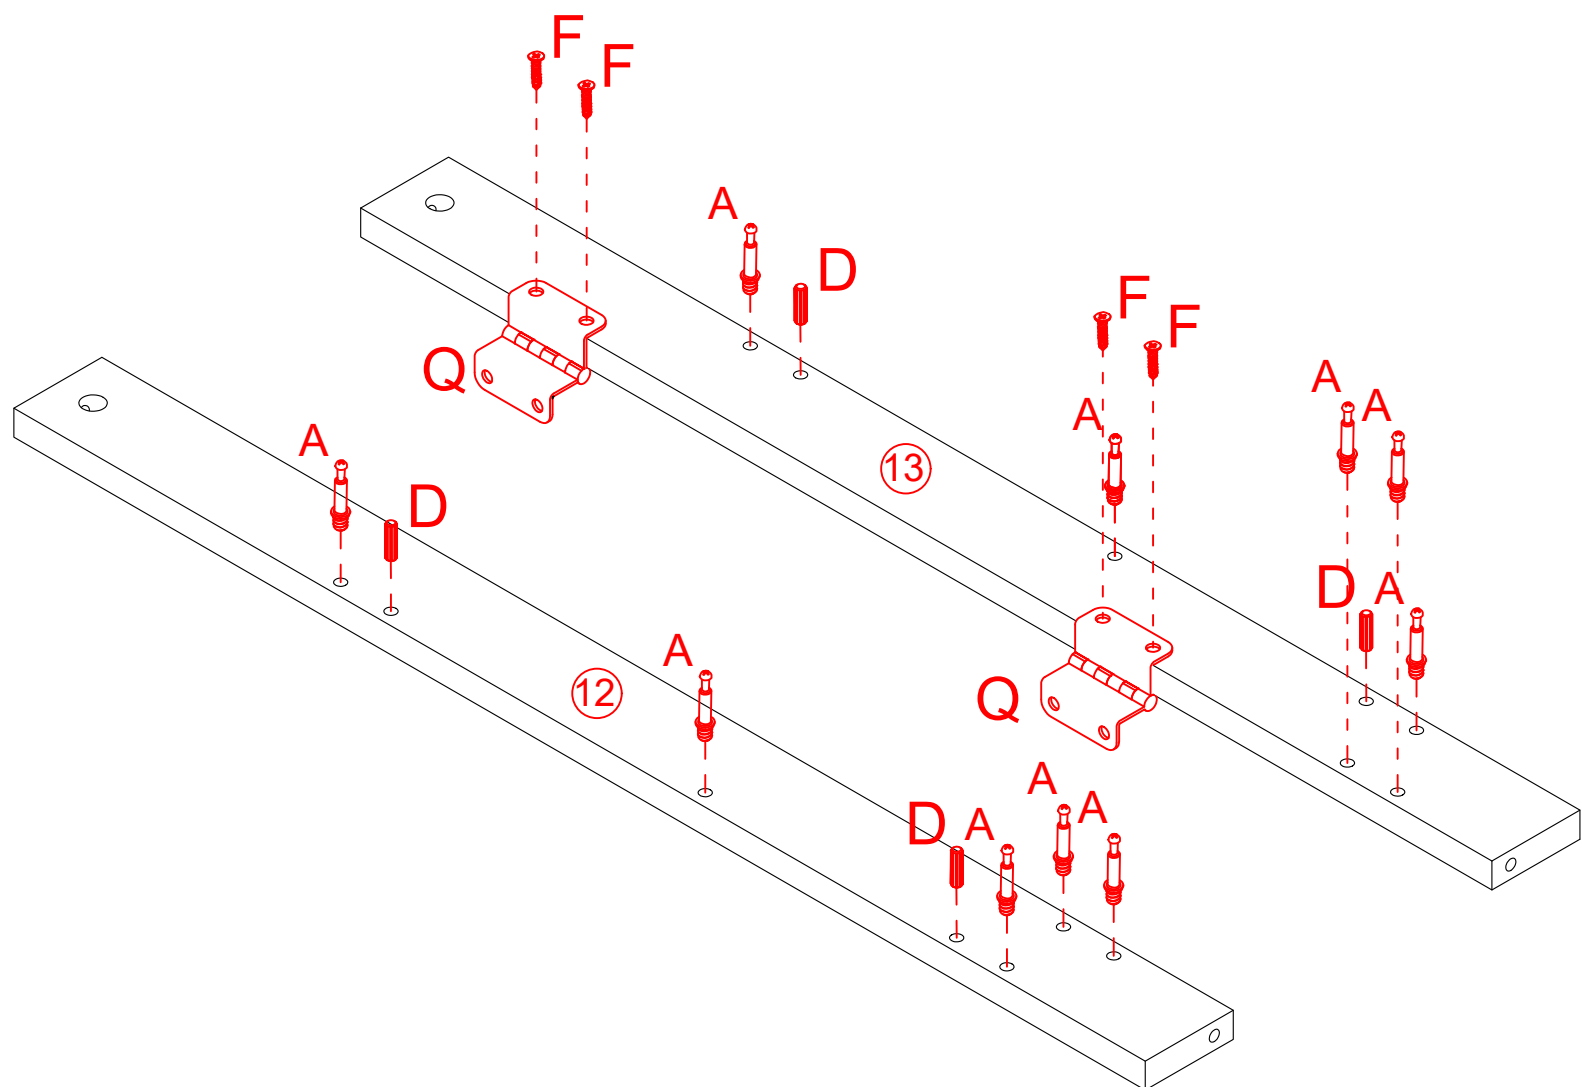
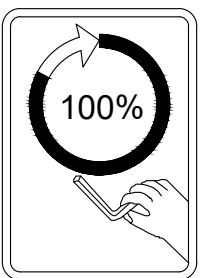


Assembly Instructions

Step6

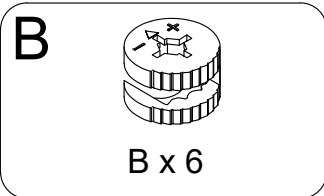
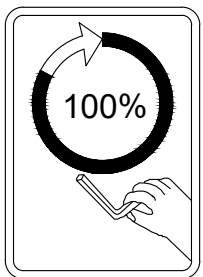
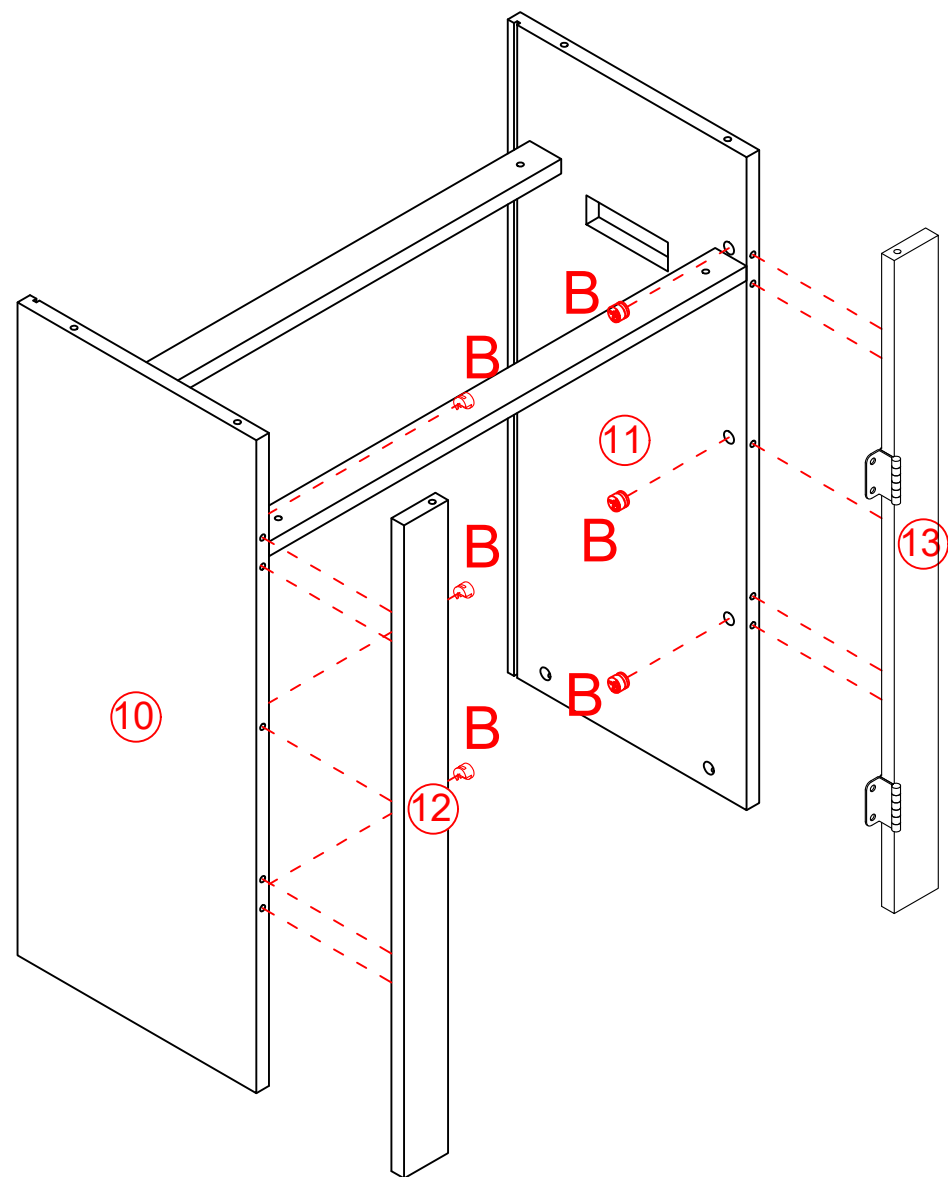


Step7



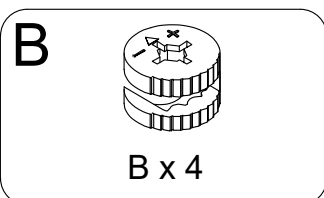
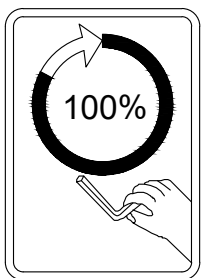
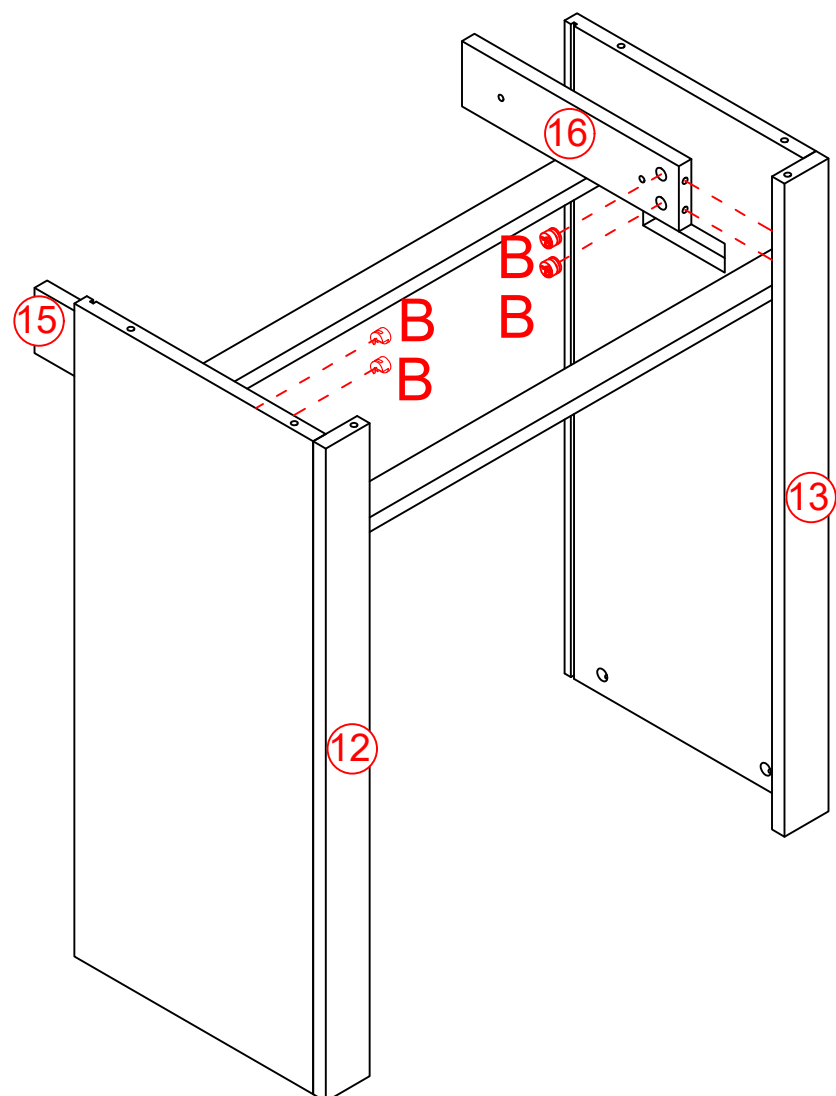


Assembly Instructions

Step8



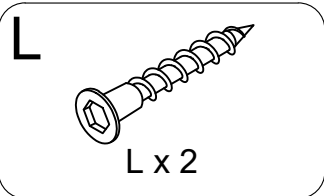
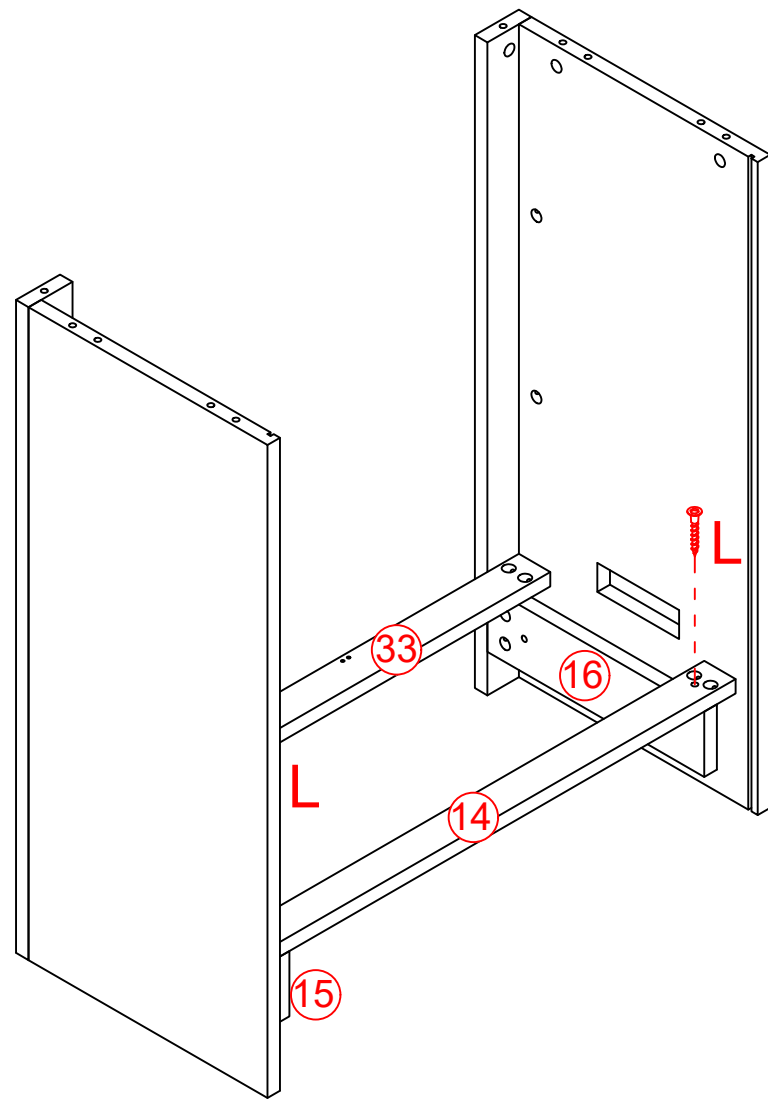
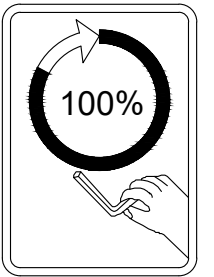


Step9

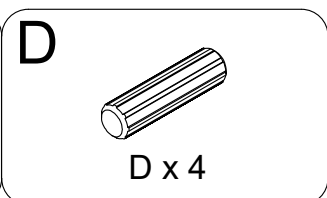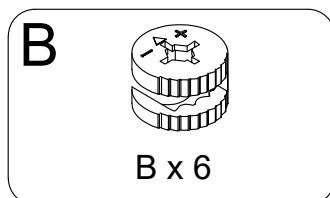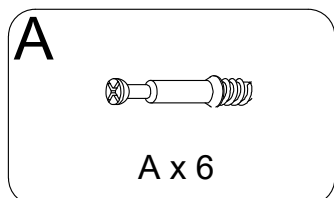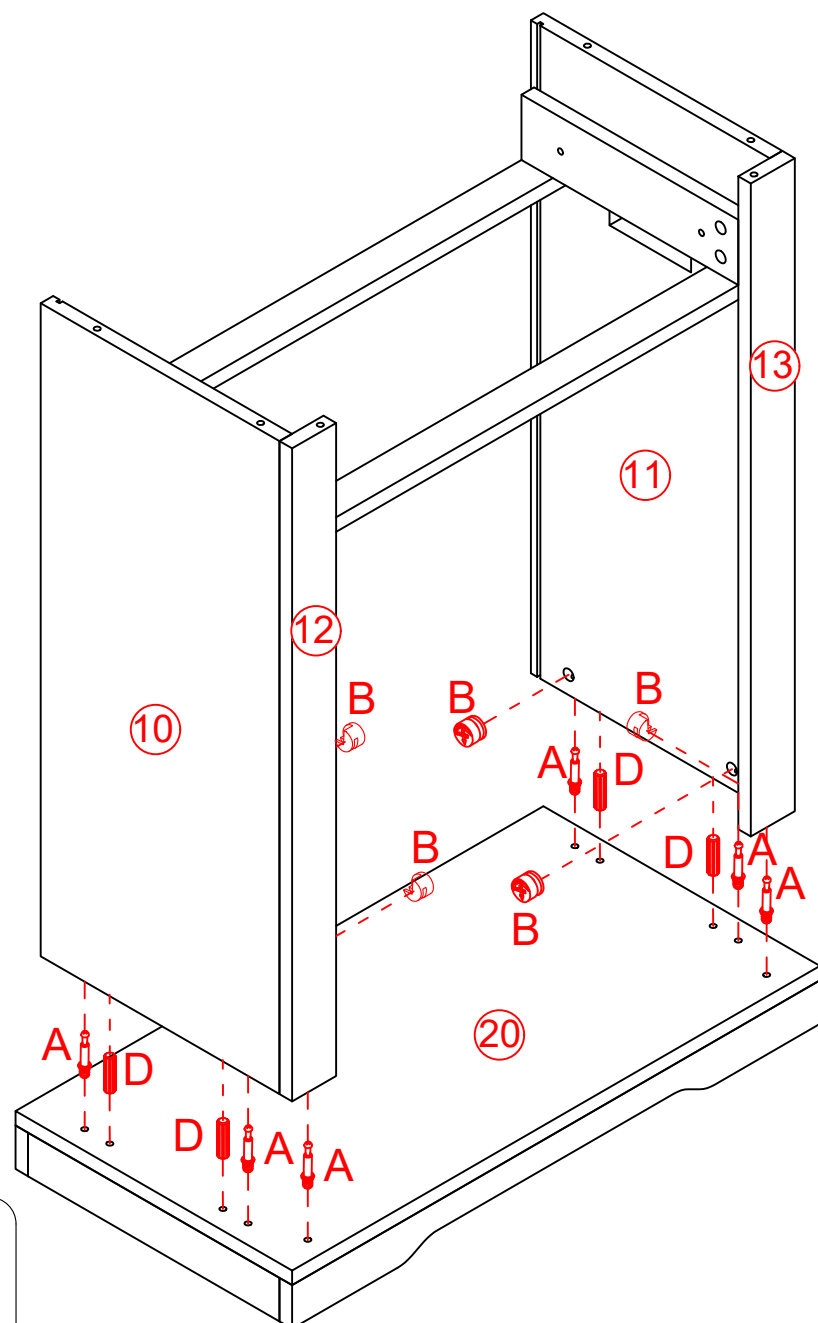
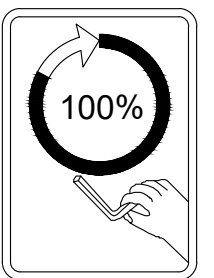


Assembly Instructions

Step10

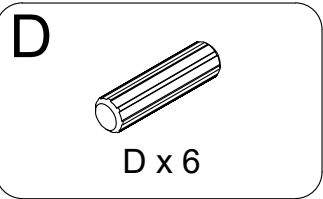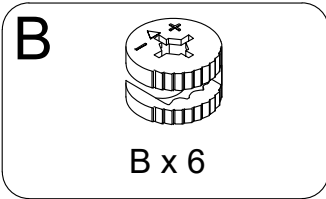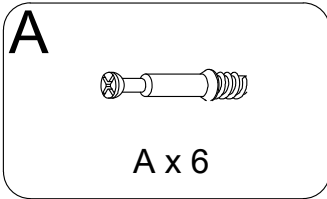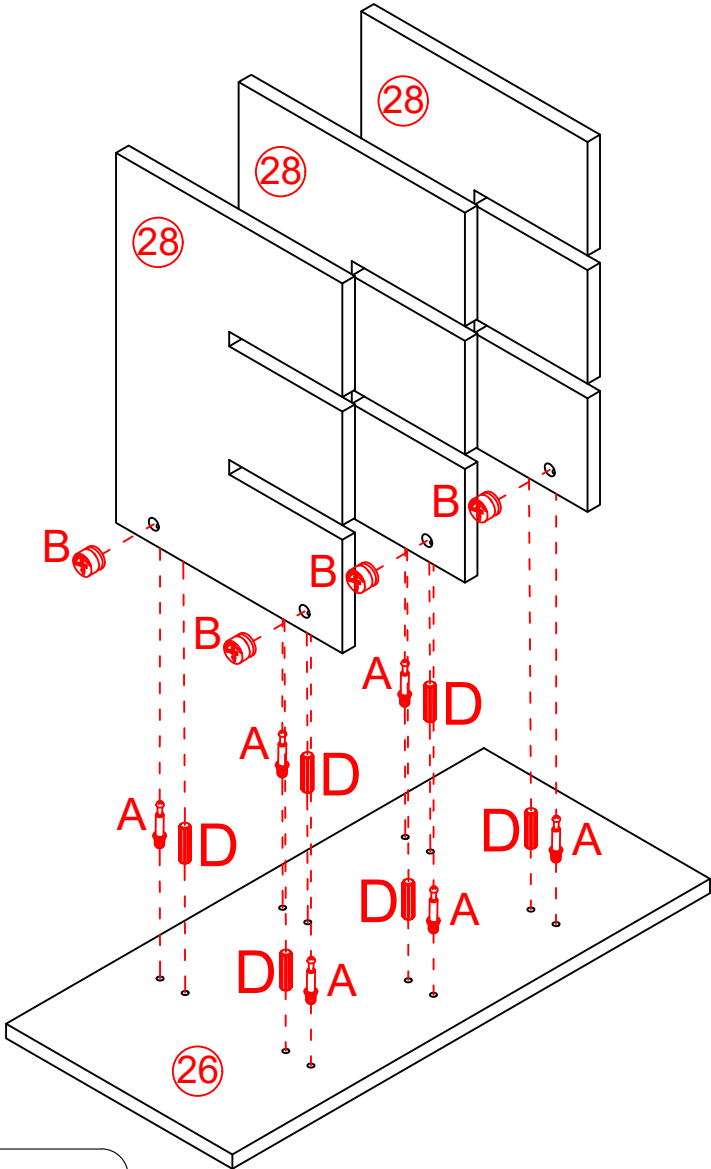
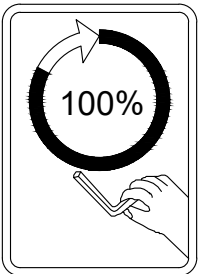


Step11

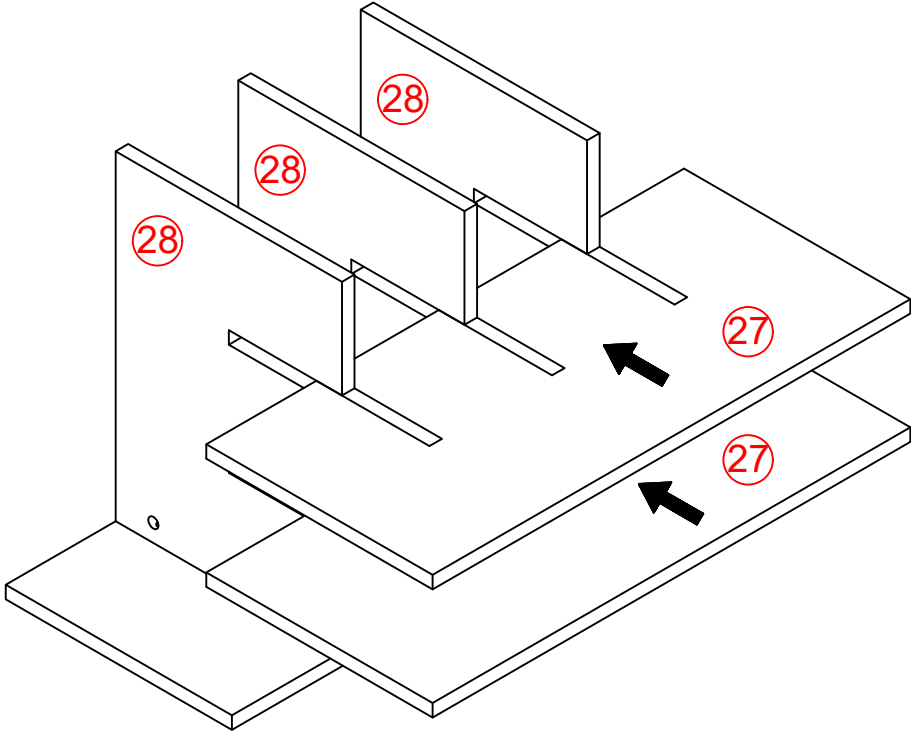
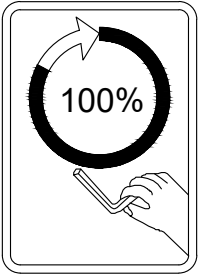


Assembly Instructions

Step12

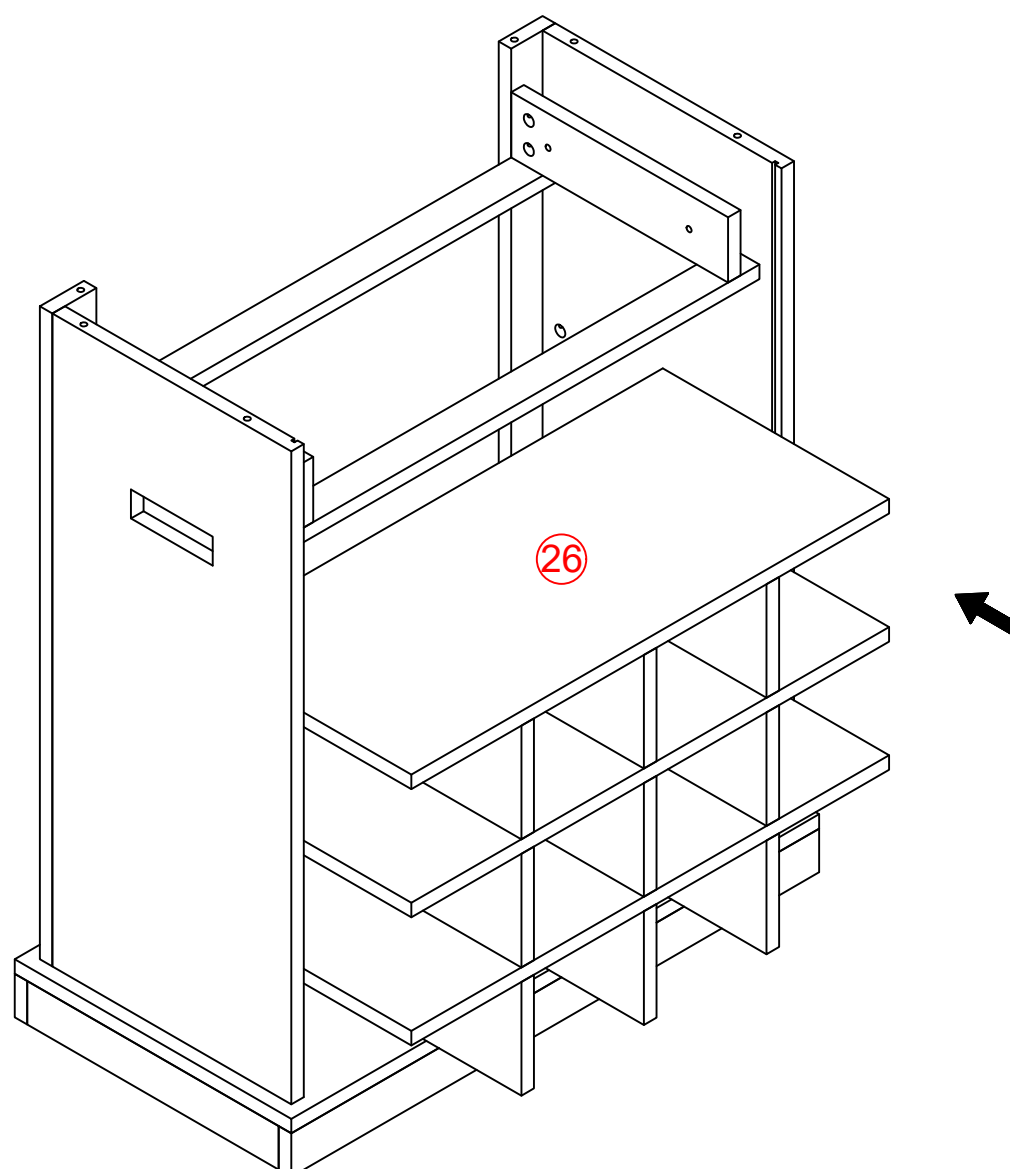
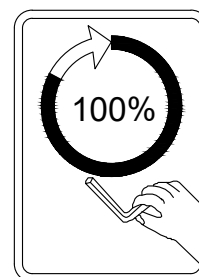


Step13

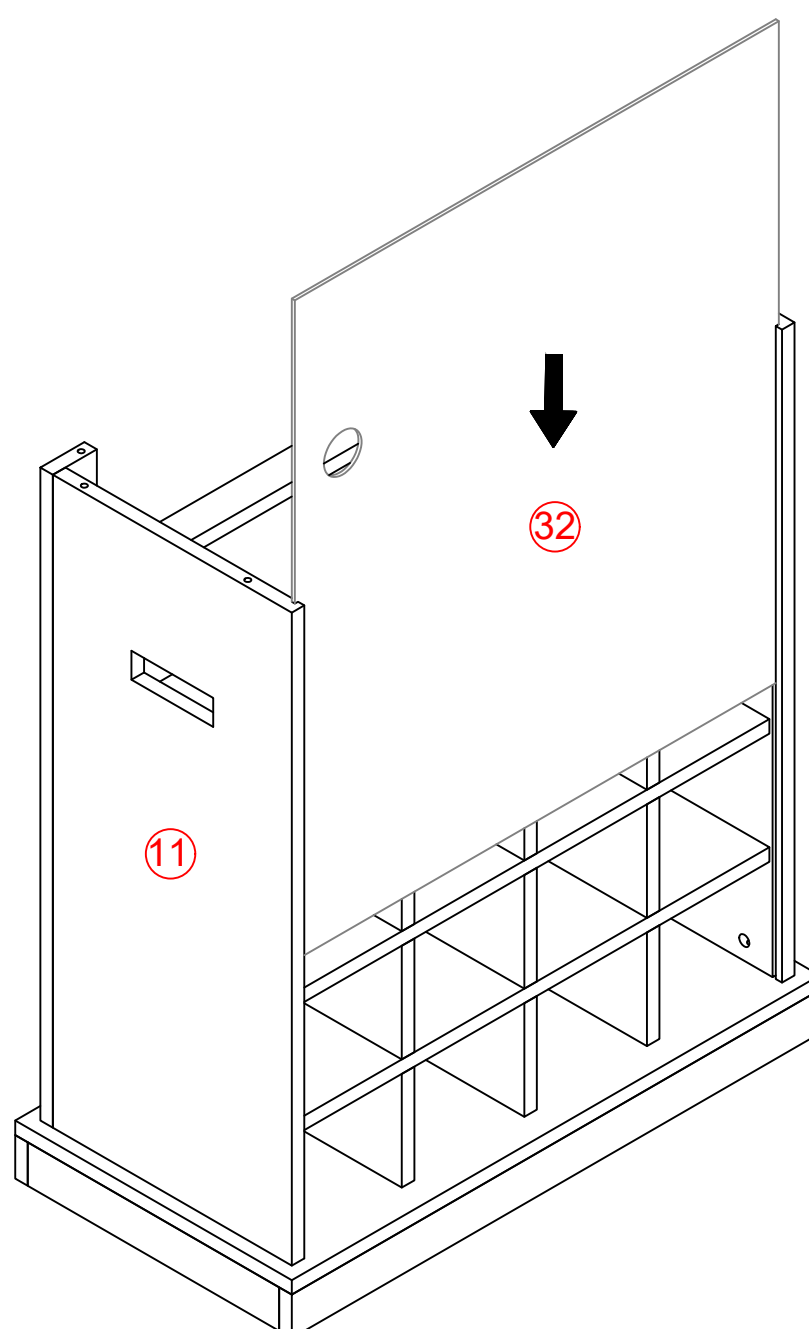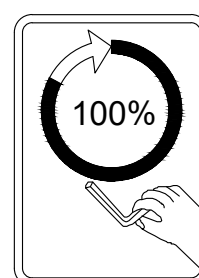


Assembly Instructions

Step14

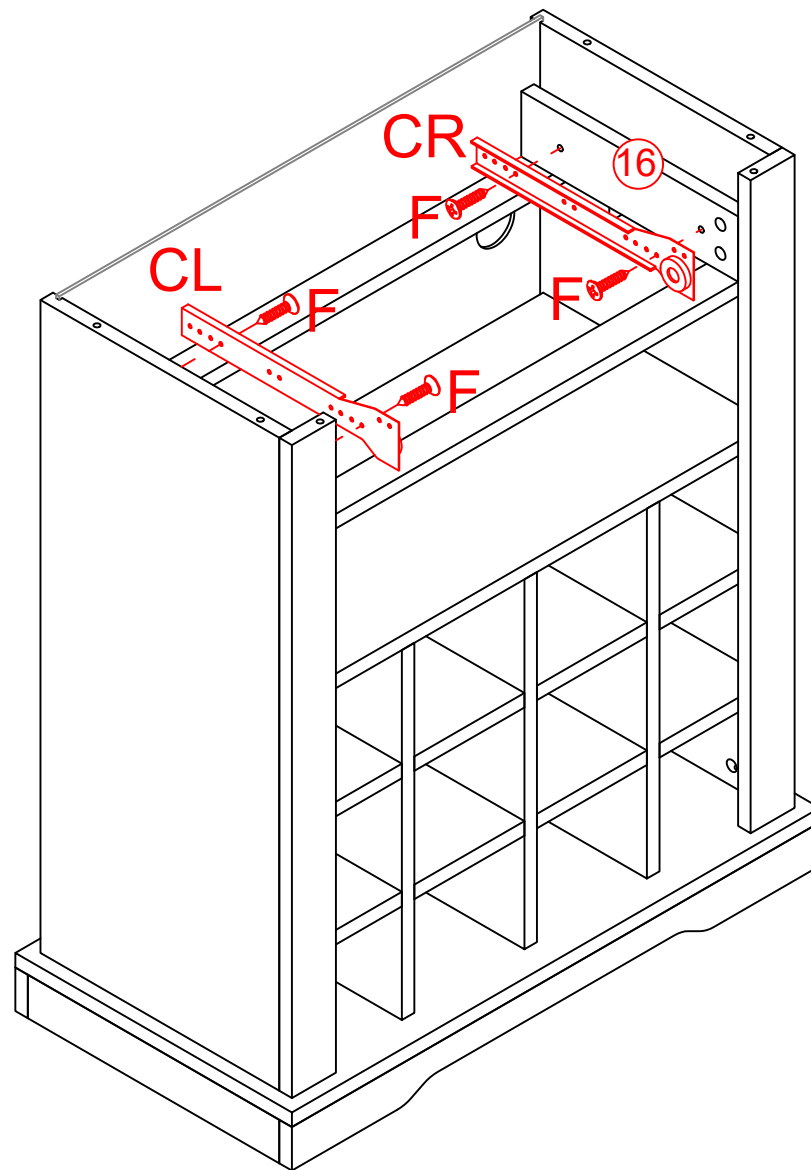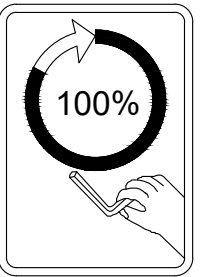

F





F x 4

M




M x 1

Step15

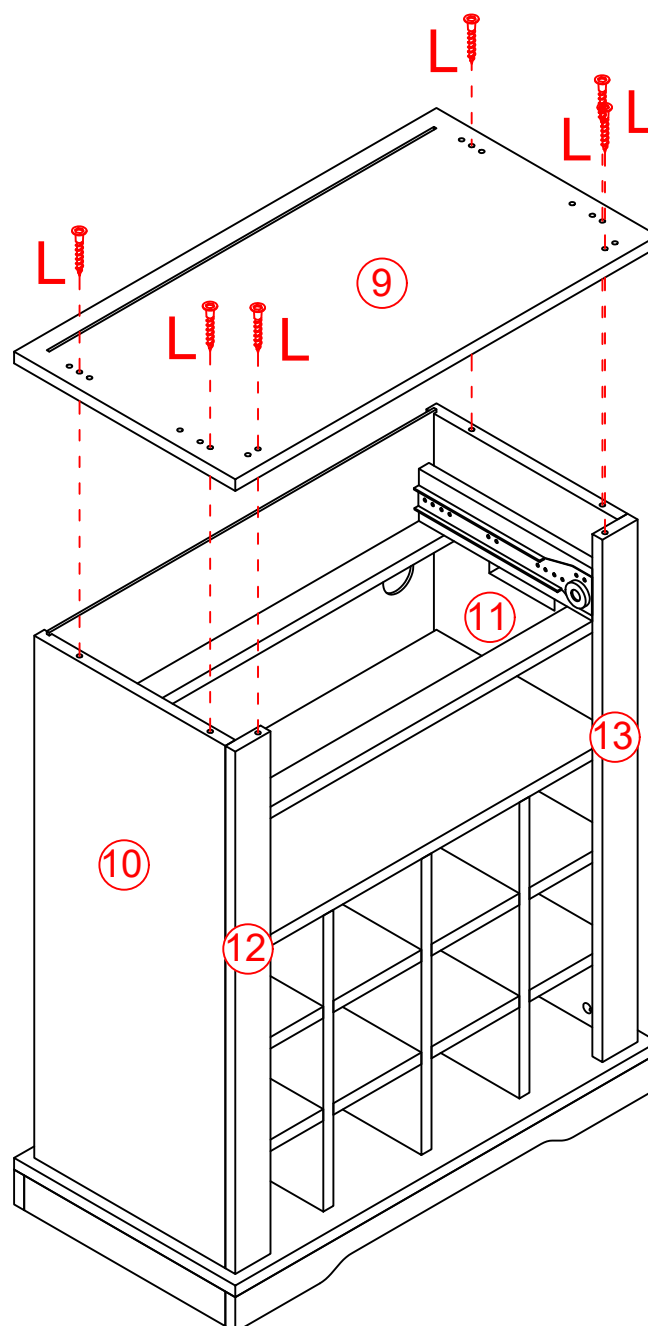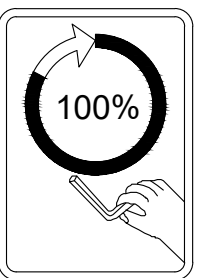







L

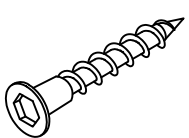






L x 6

Assembly Instructions

Step 16

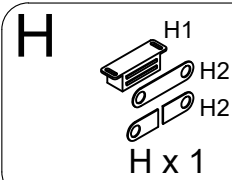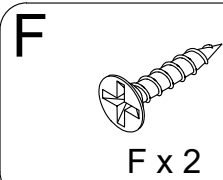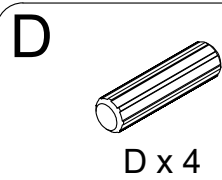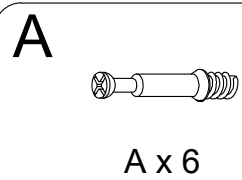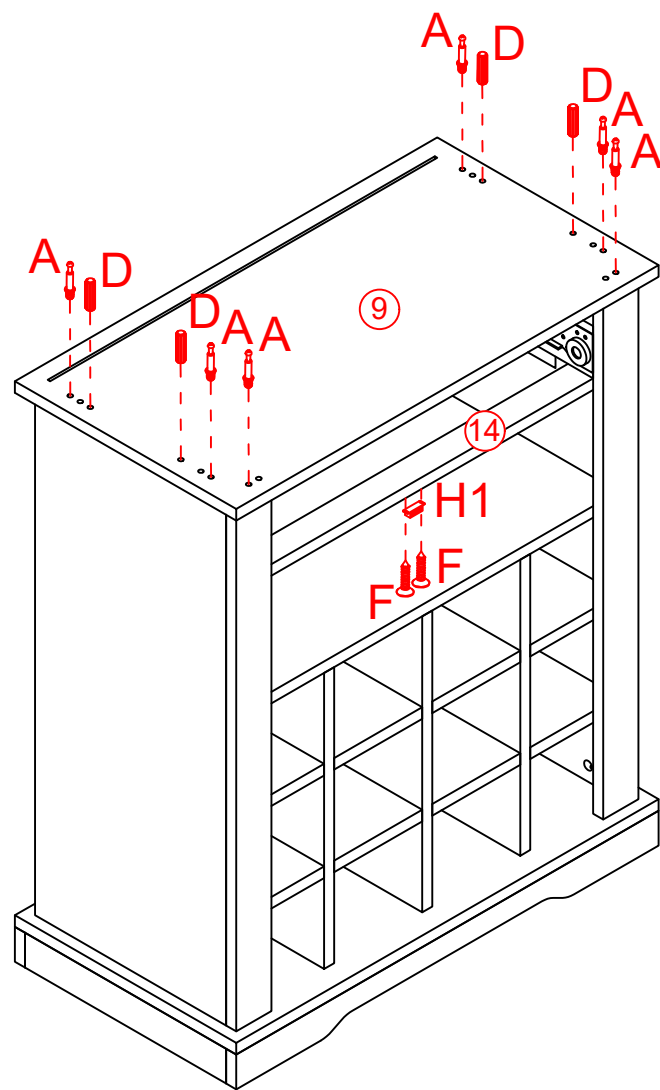
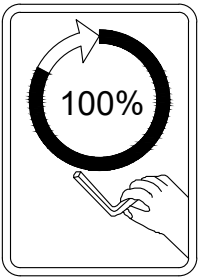


Step 17

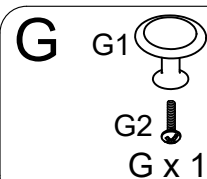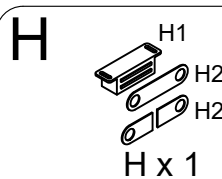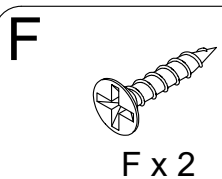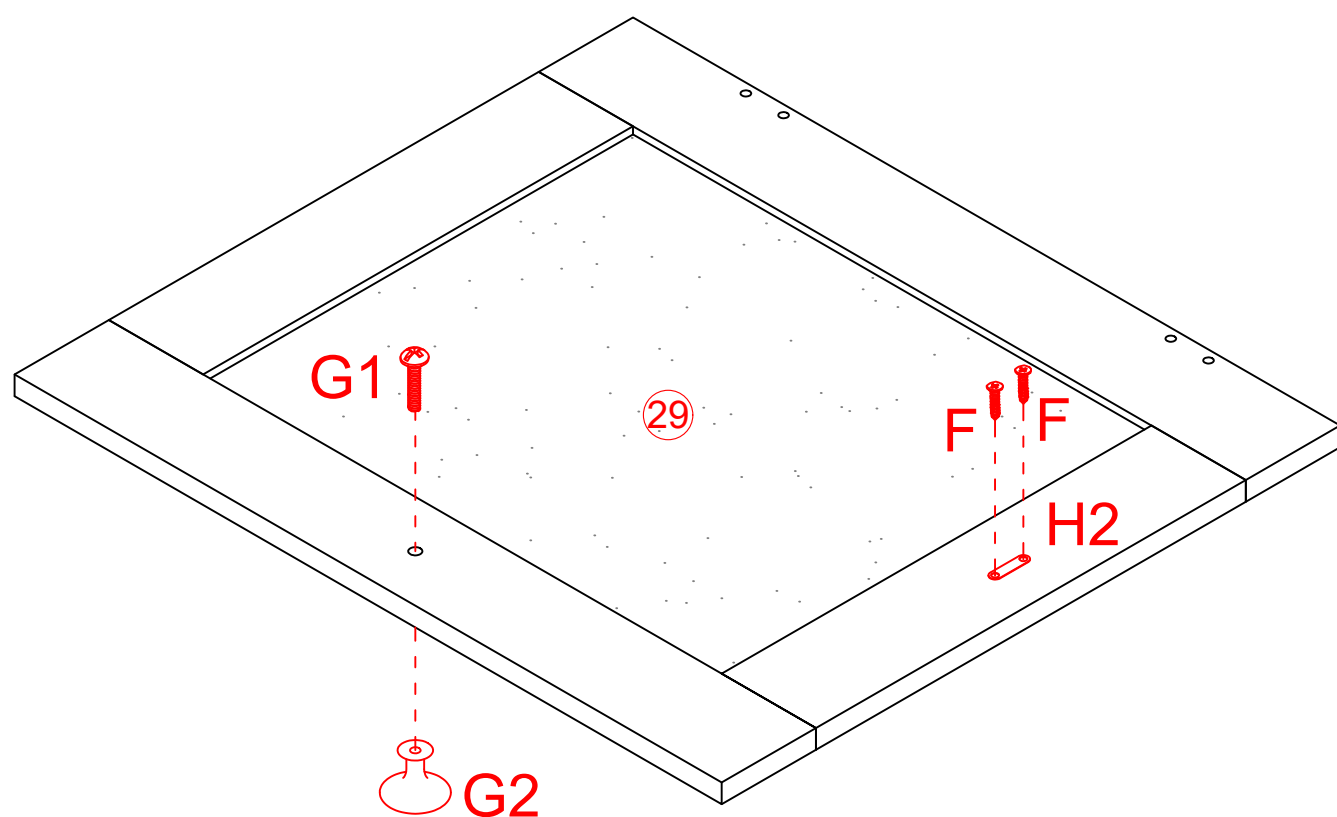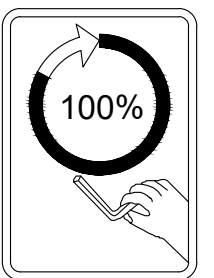


Assembly Instructions

Step18

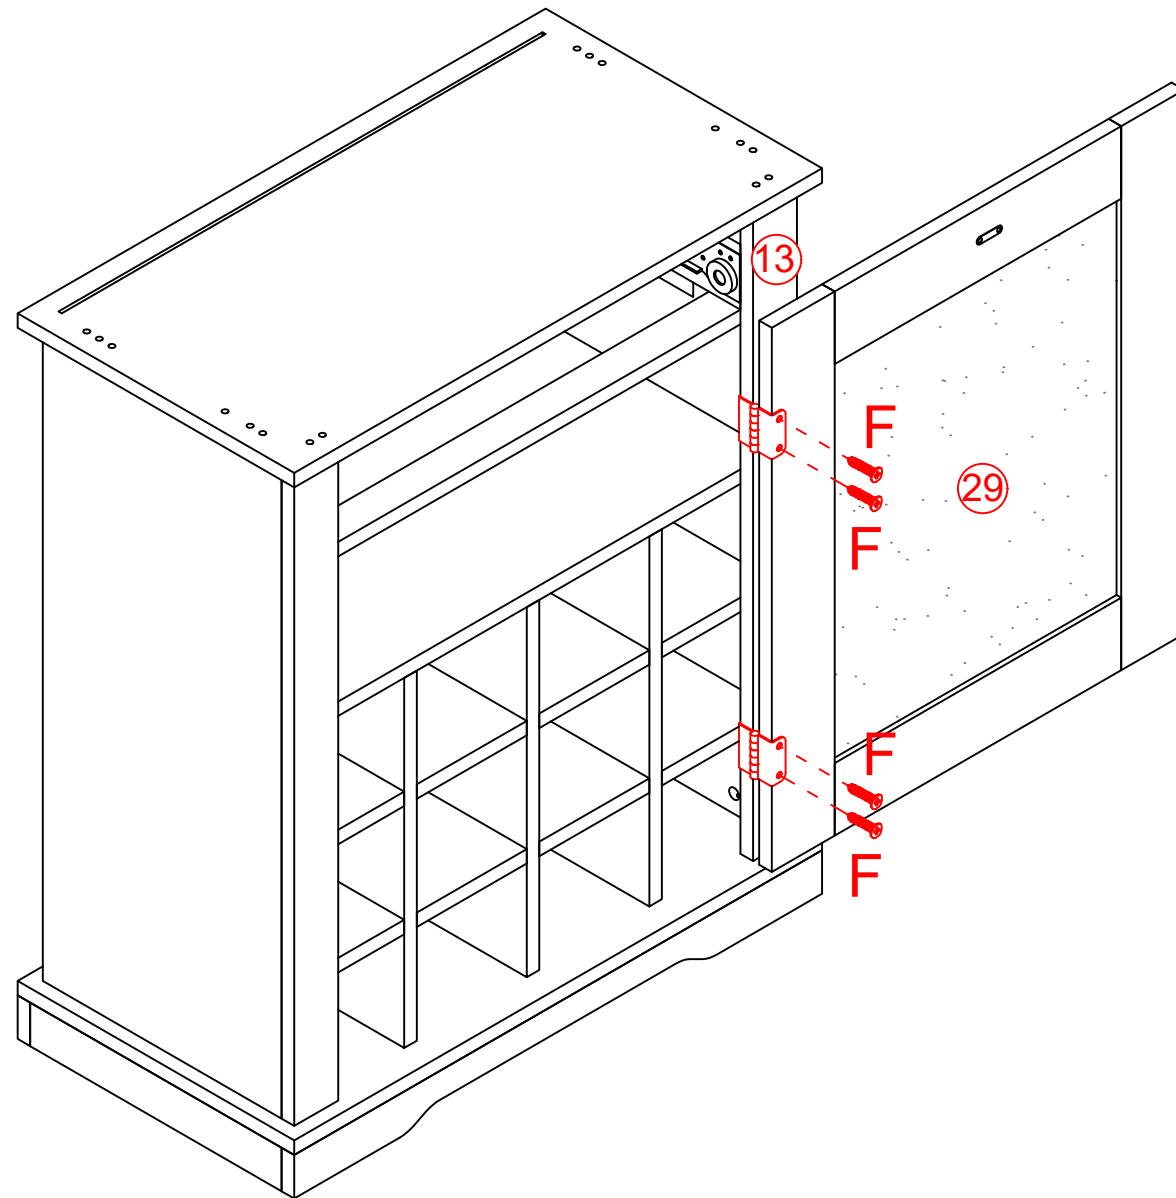
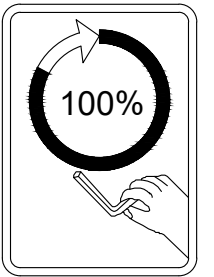


F




F x 4

Step19

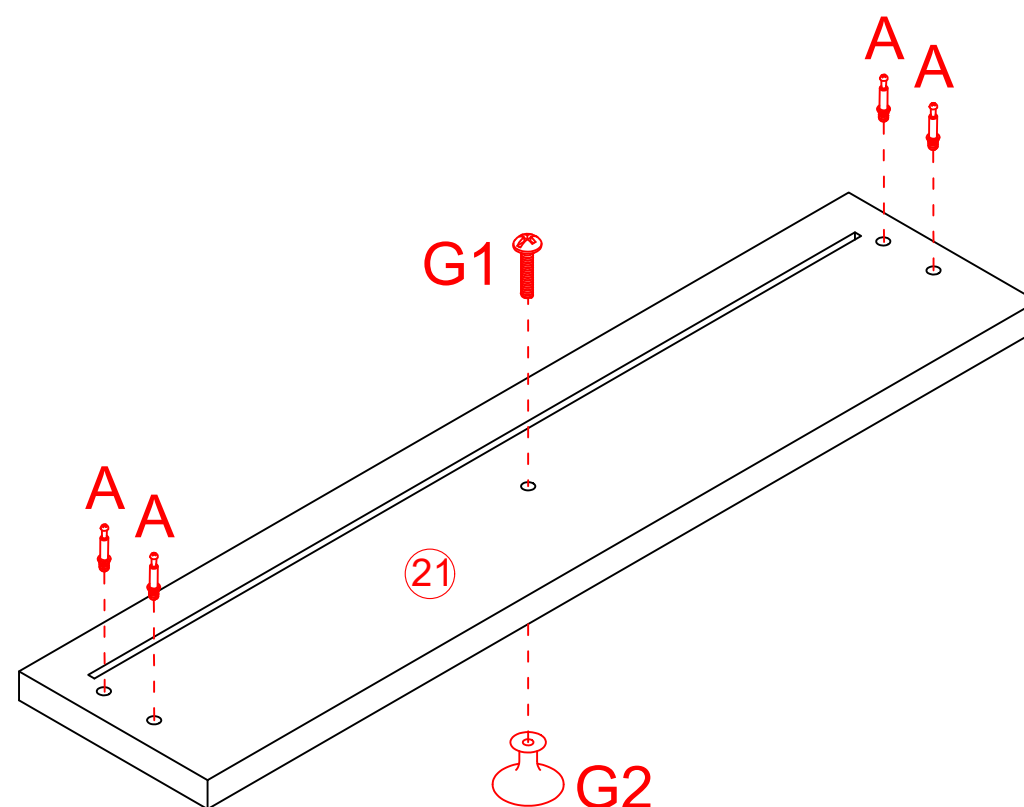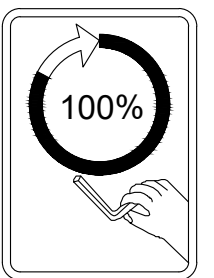

A



A x 4

G





G2


G x 1

Assembly Instructions

Step20

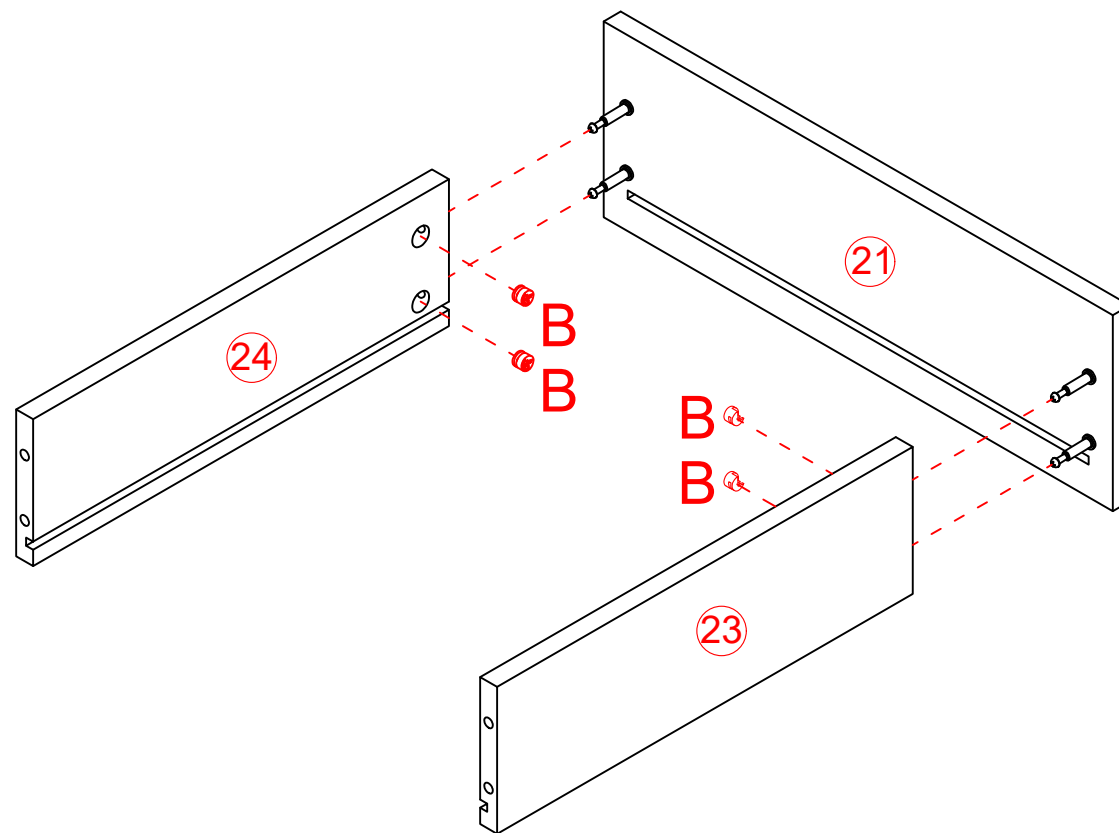
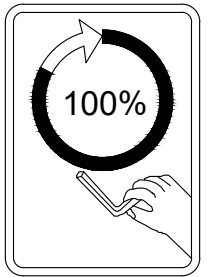


B





B x 4

Step21

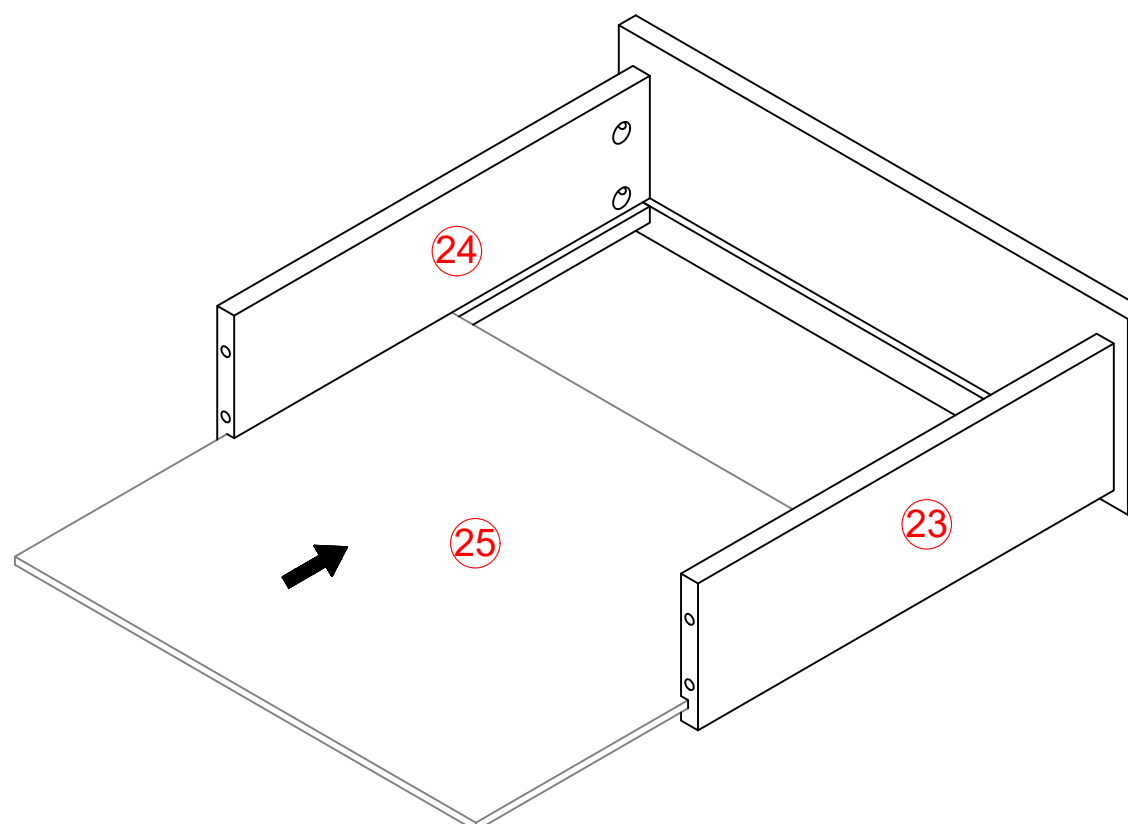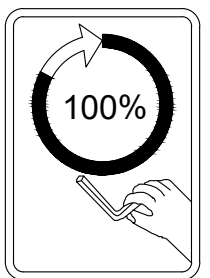


Assembly Instructions

Step22

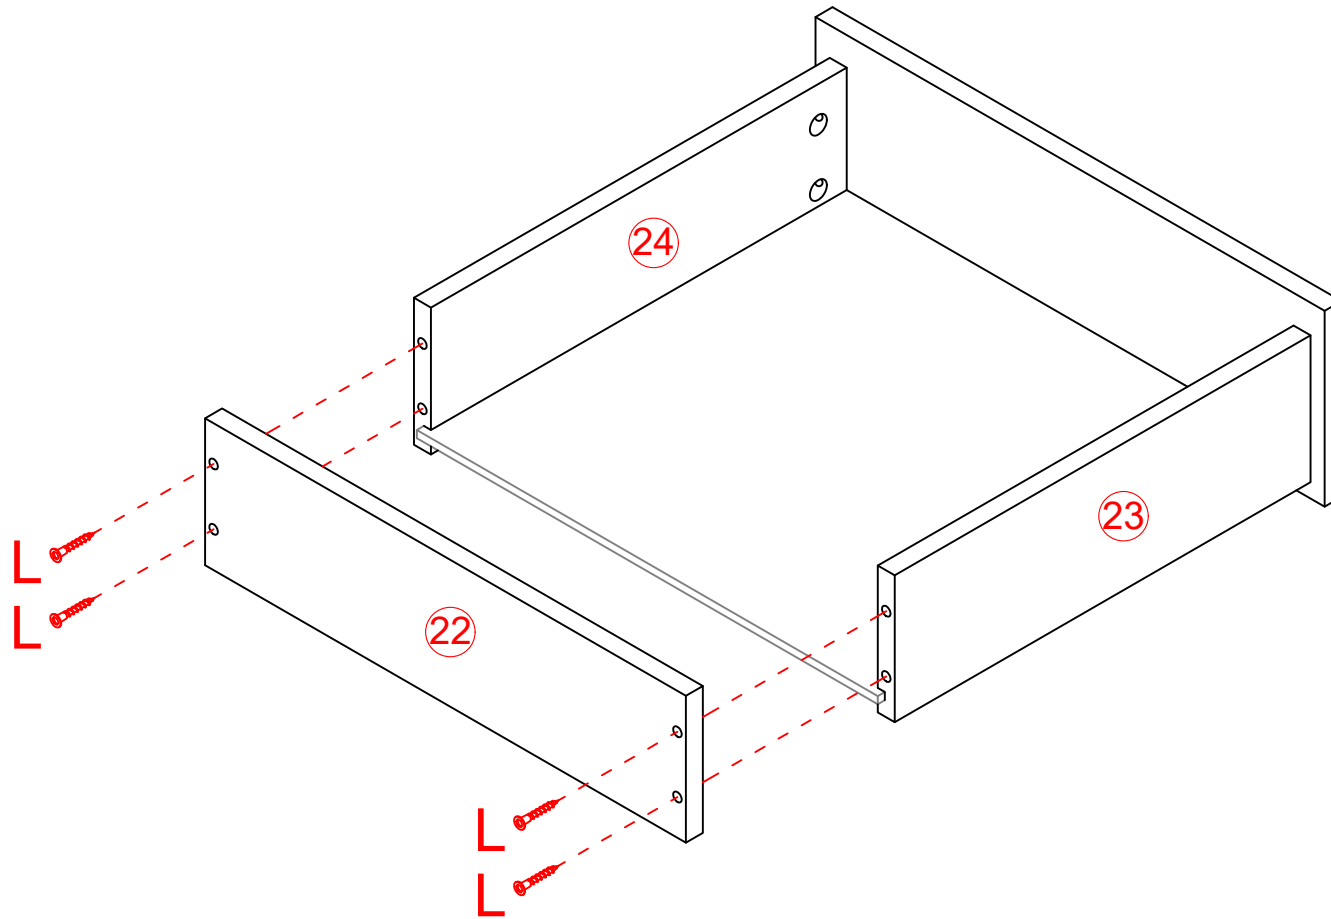
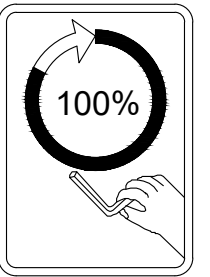


L

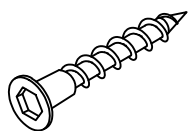


L x 4

Step23

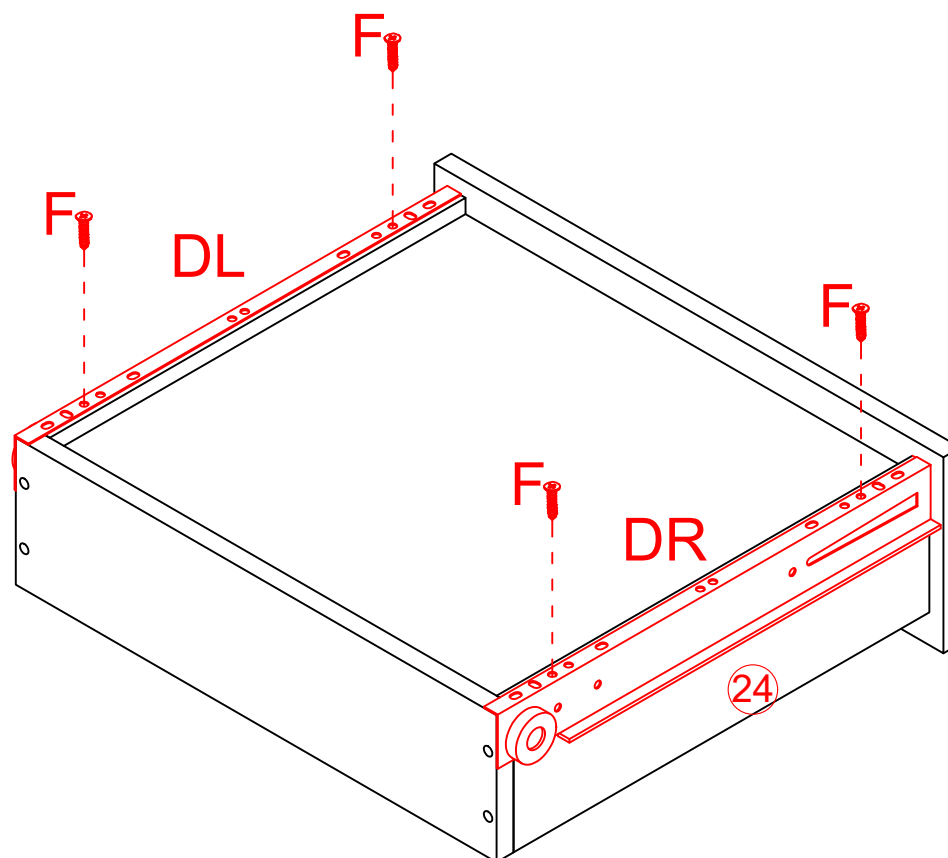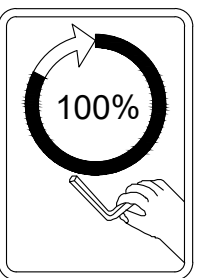


F



F x 4

M


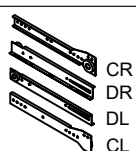


M x 1




CR
DR
DL
CL

Assembly Instructions


Step24

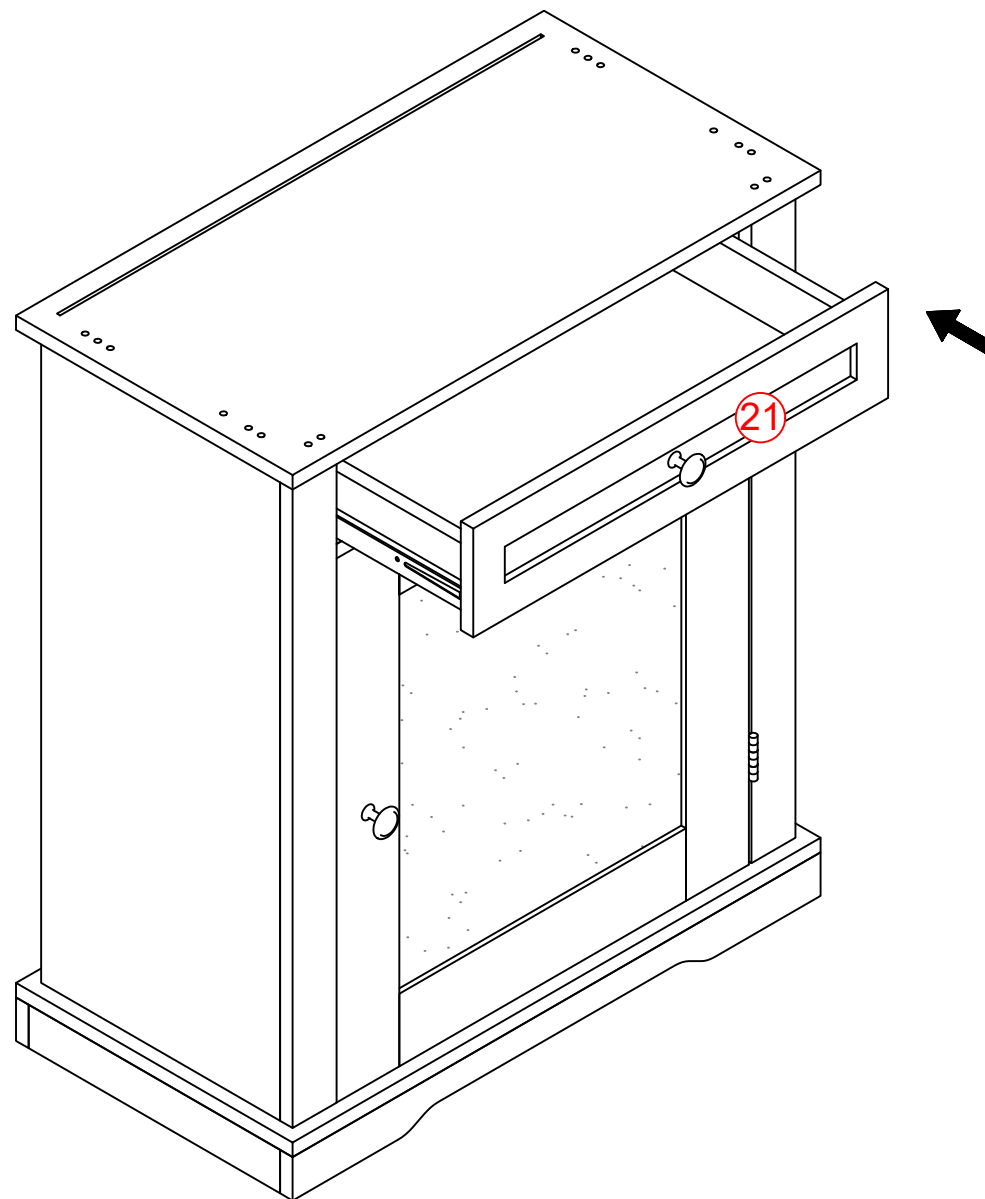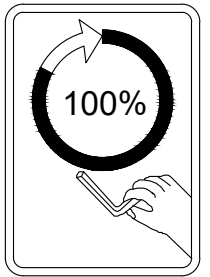

Step25

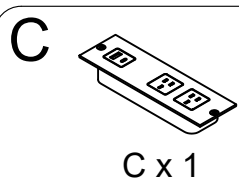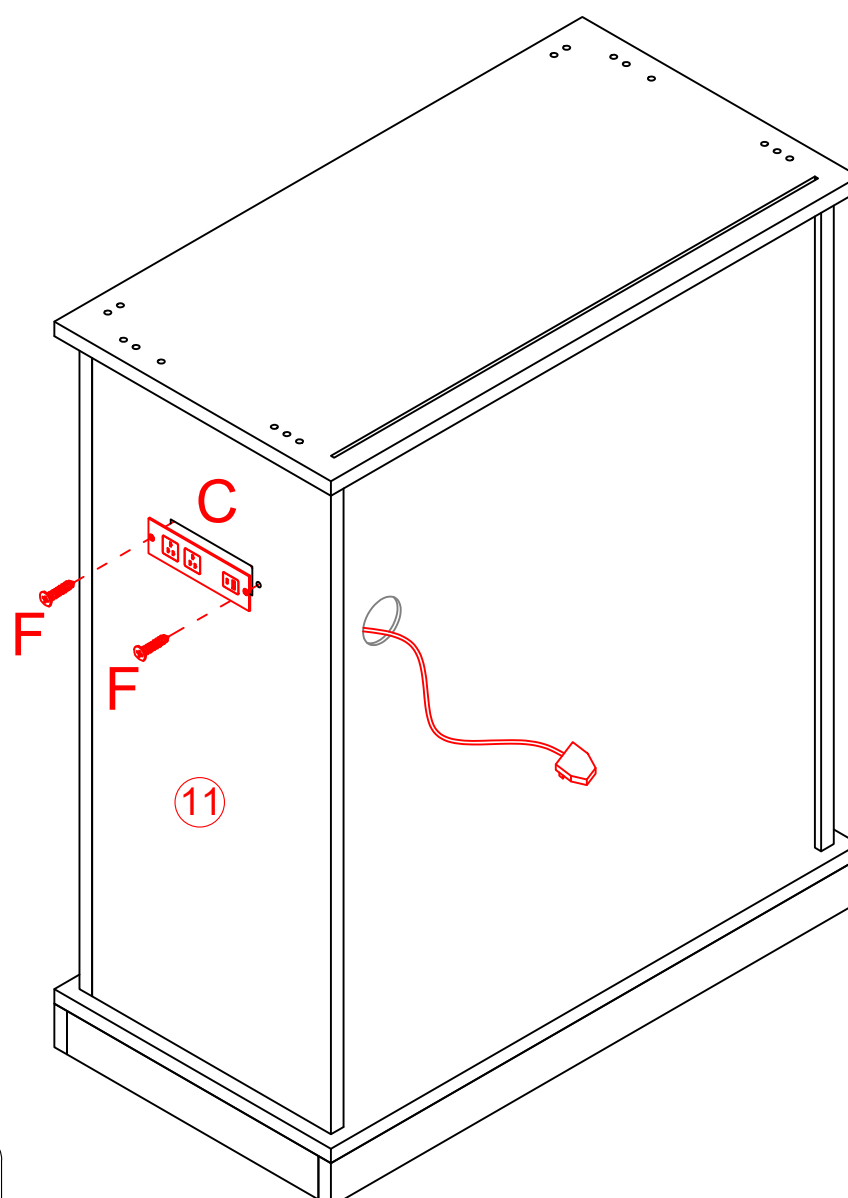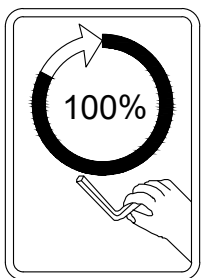








C x 1

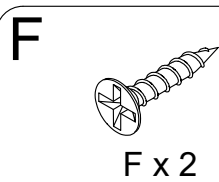








F x 2

Assembly Instructions

Step26

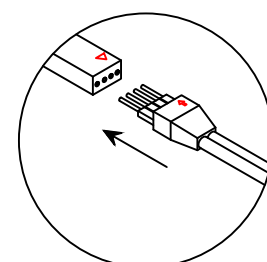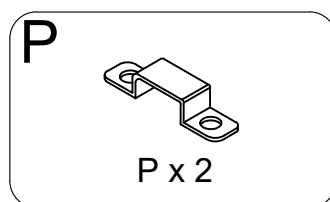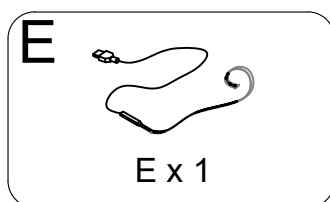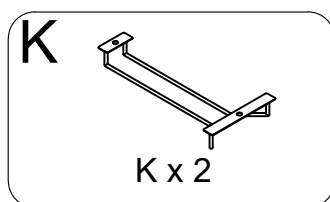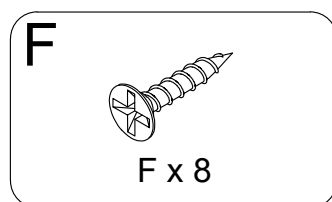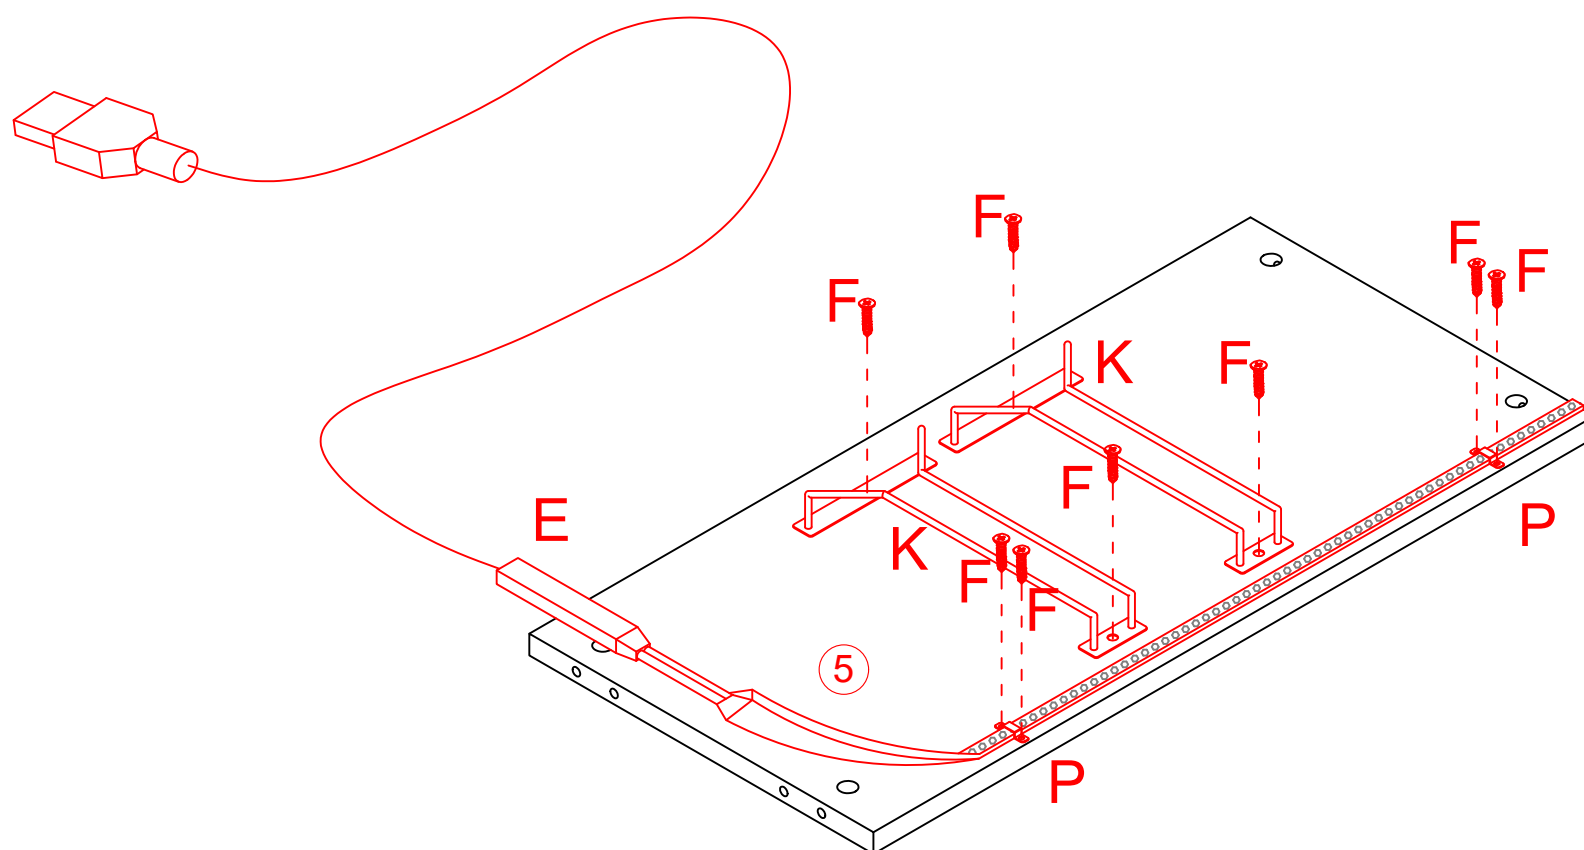
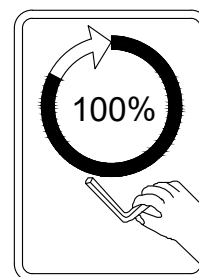


Step27

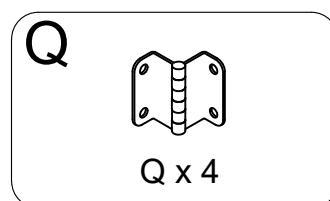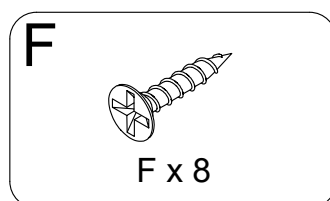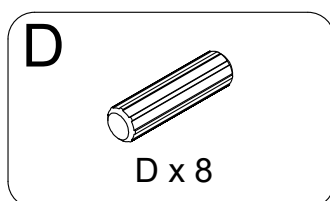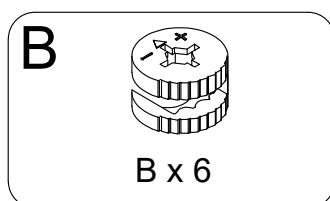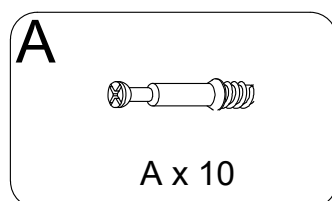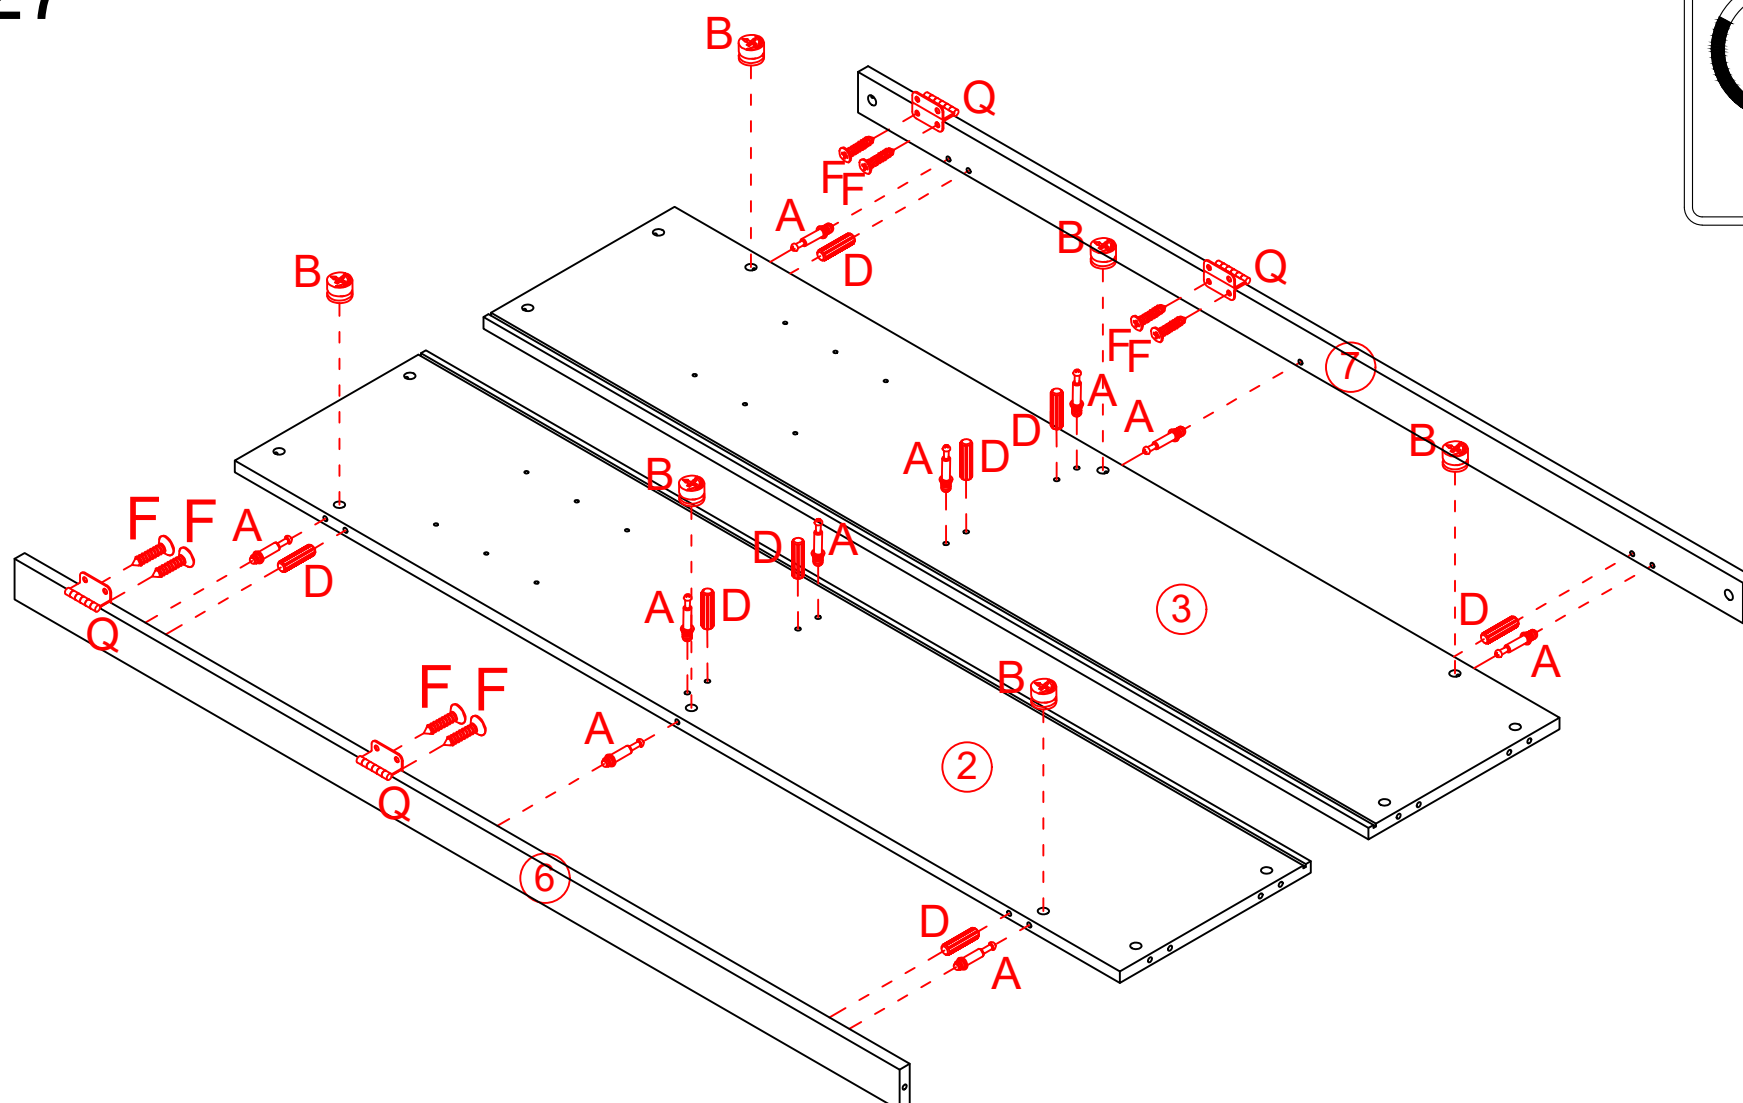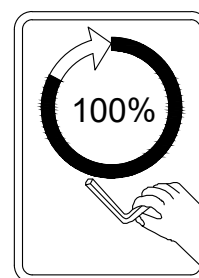


Assembly Instructions

Step28

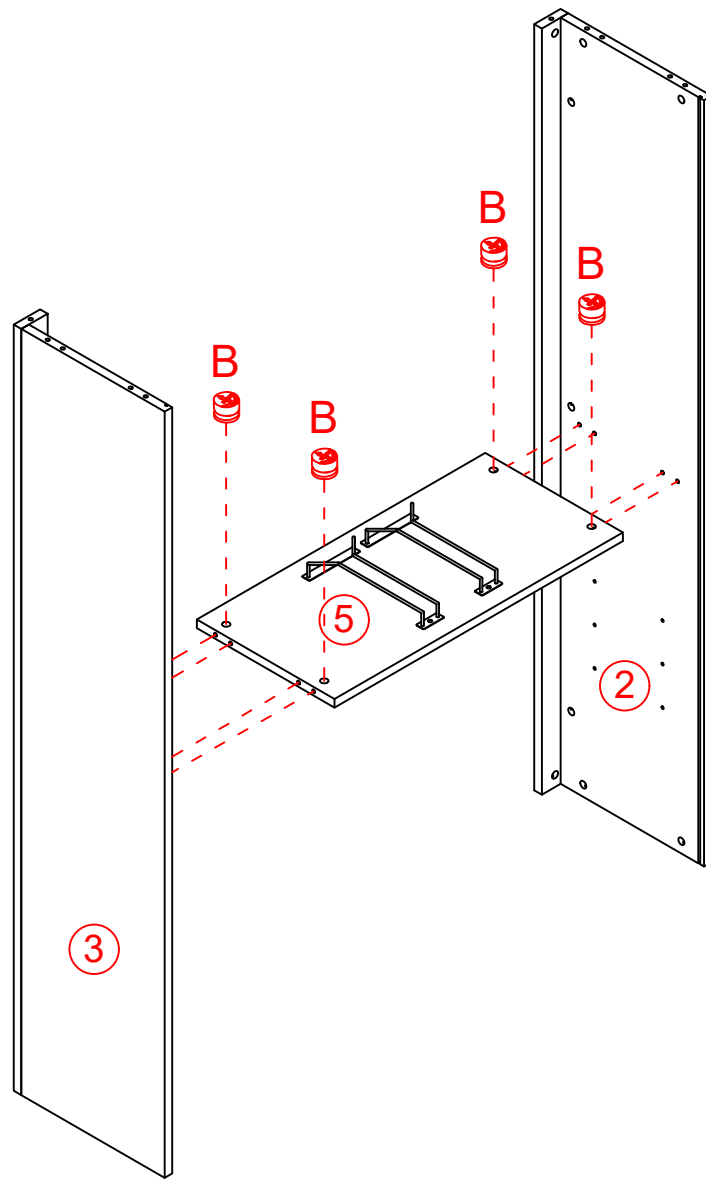
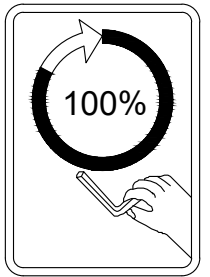


B




B x 4

Step29

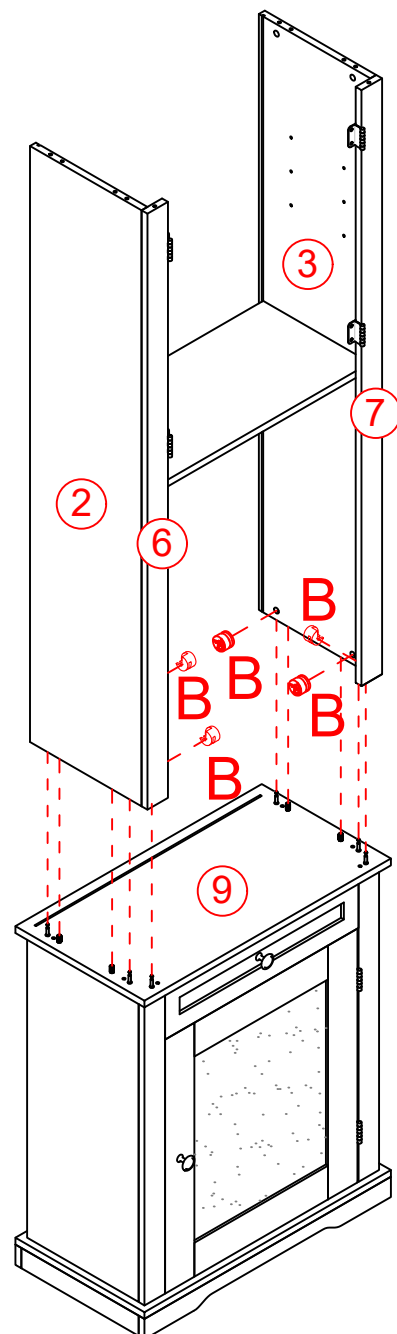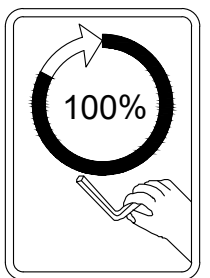



B









B x 6

Assembly Instructions

Step30

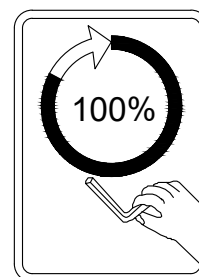
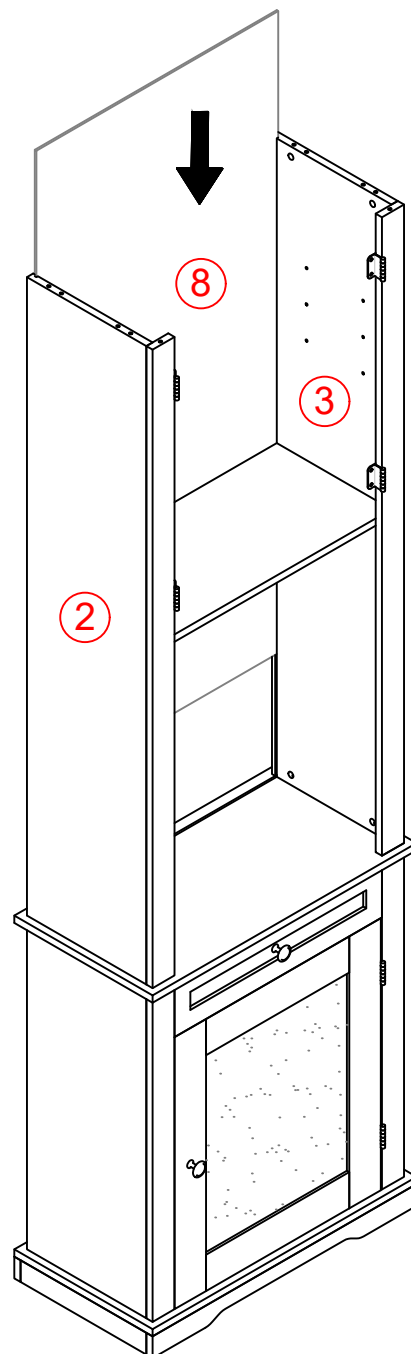


Step31

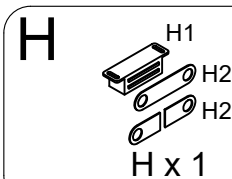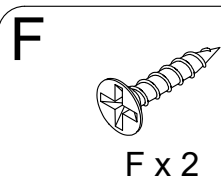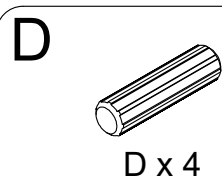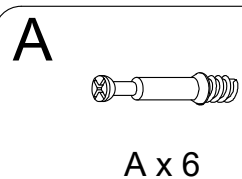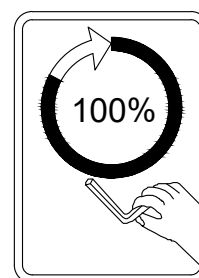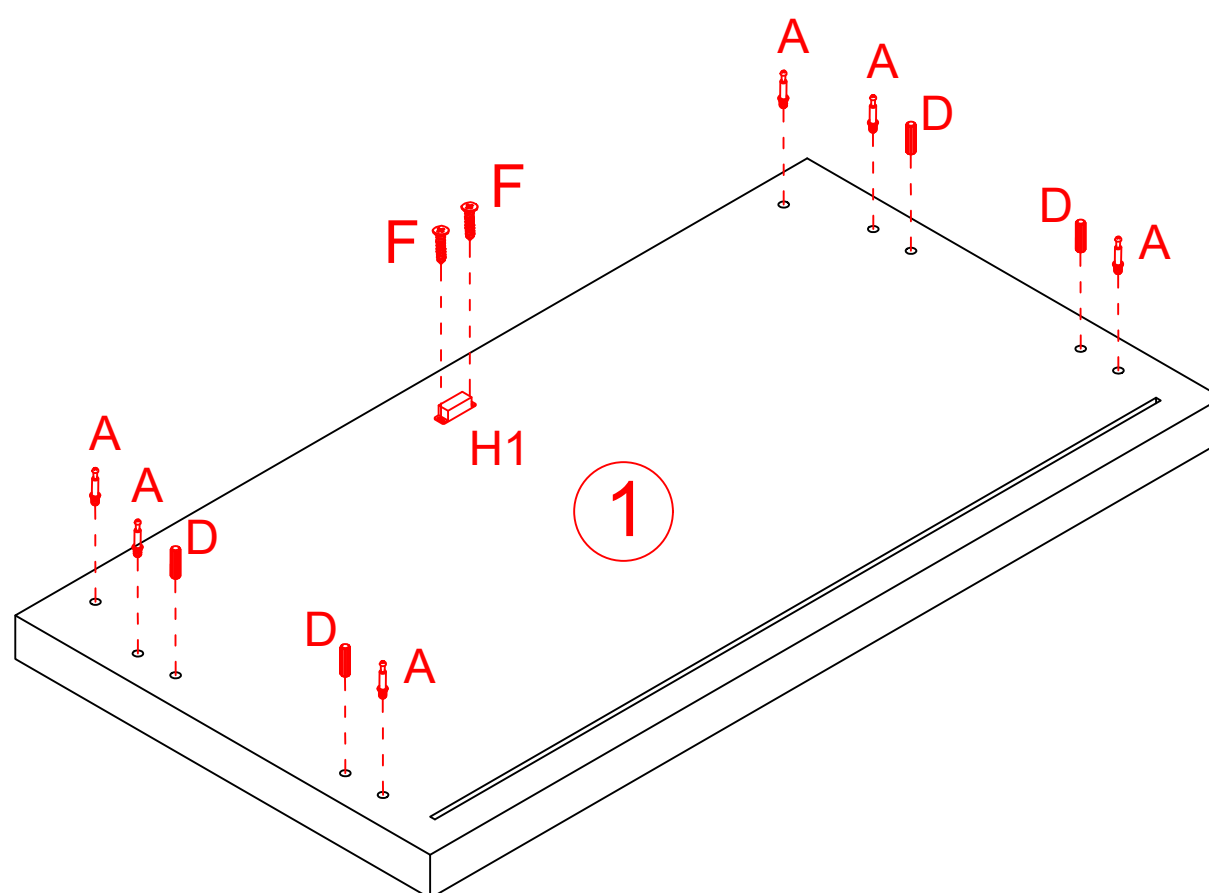


Assembly Instructions

Step32

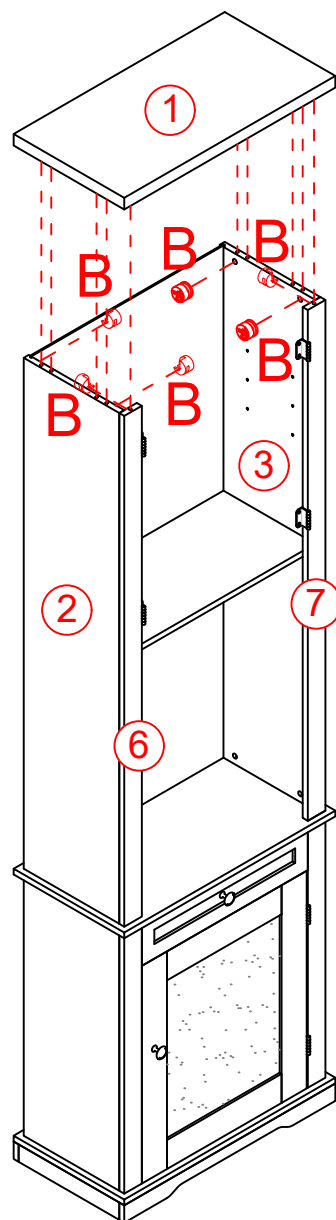
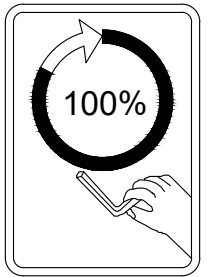


B



B x 6

Step33

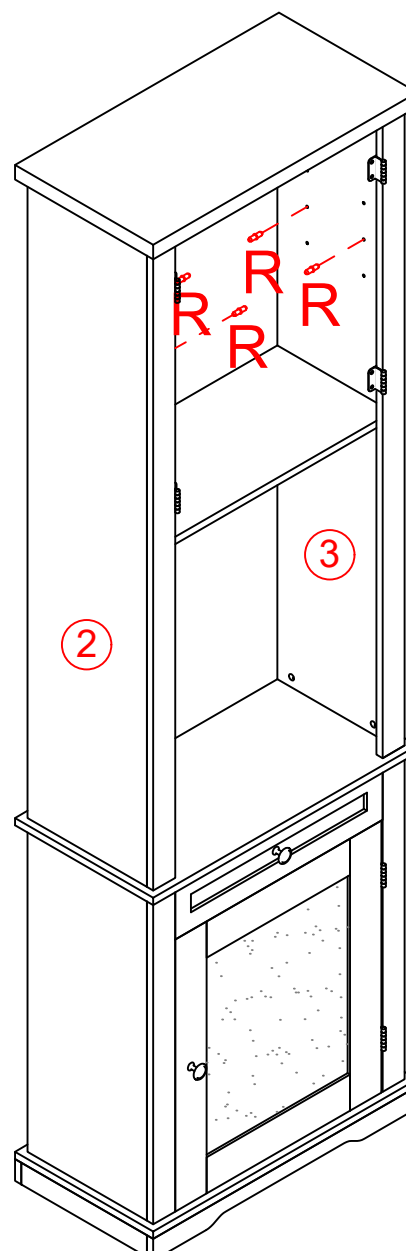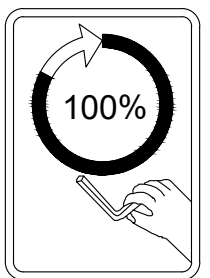



R





R x 4

Assembly Instructions


Step34

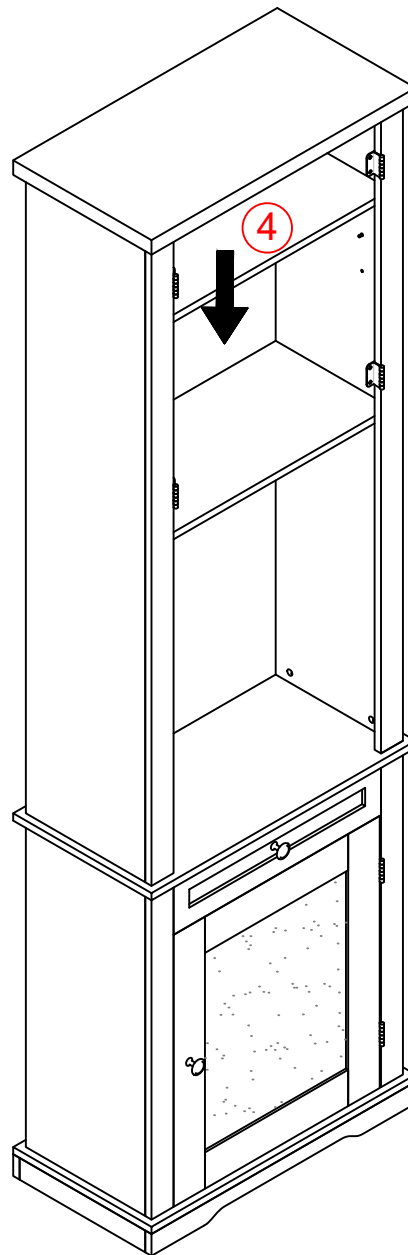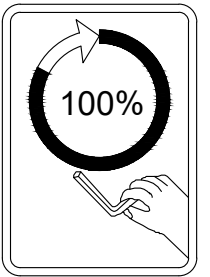

Step35

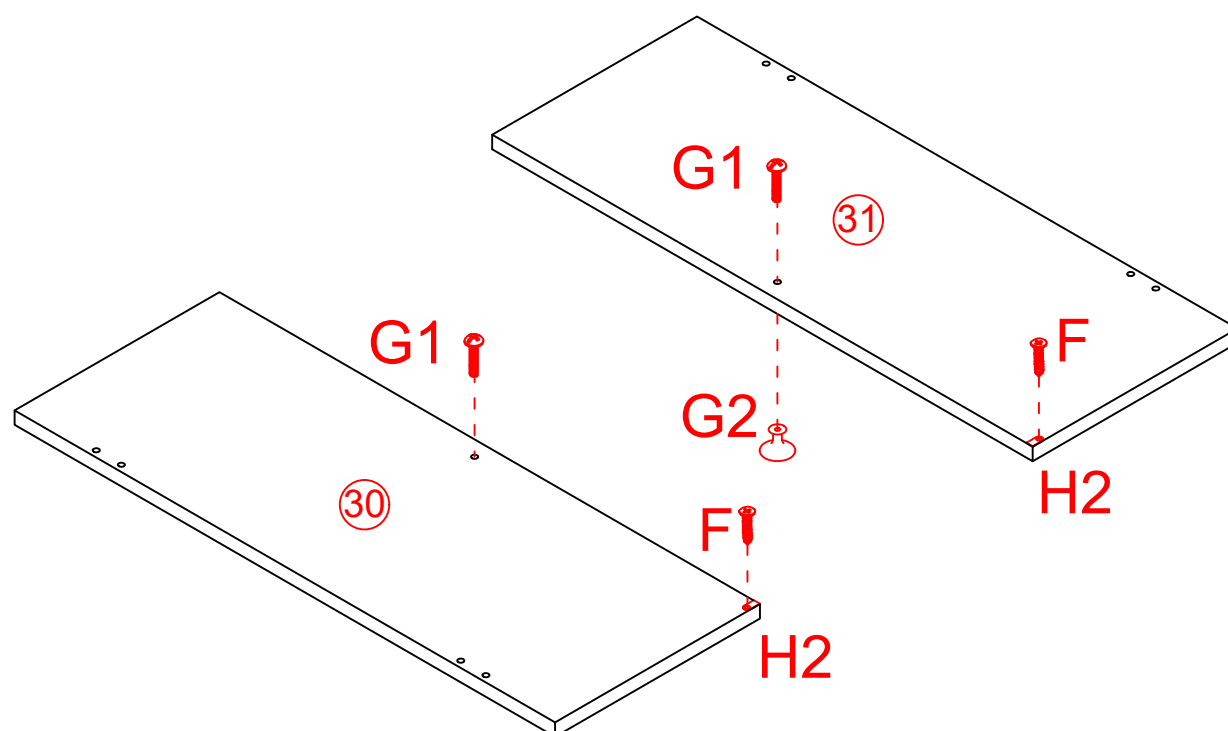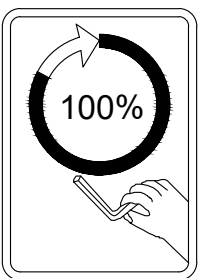


F




F x 2

G

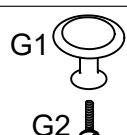

G x 2



H

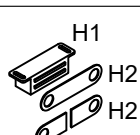


H x 1

Assembly Instructions

Step36

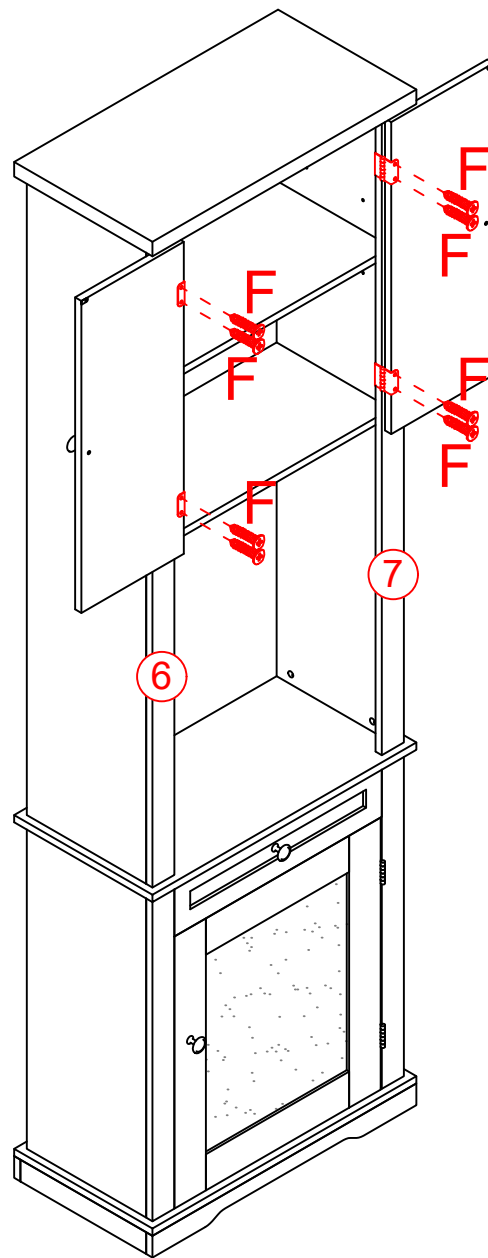
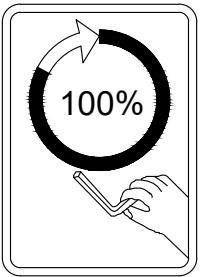


F




F x 8

Step37

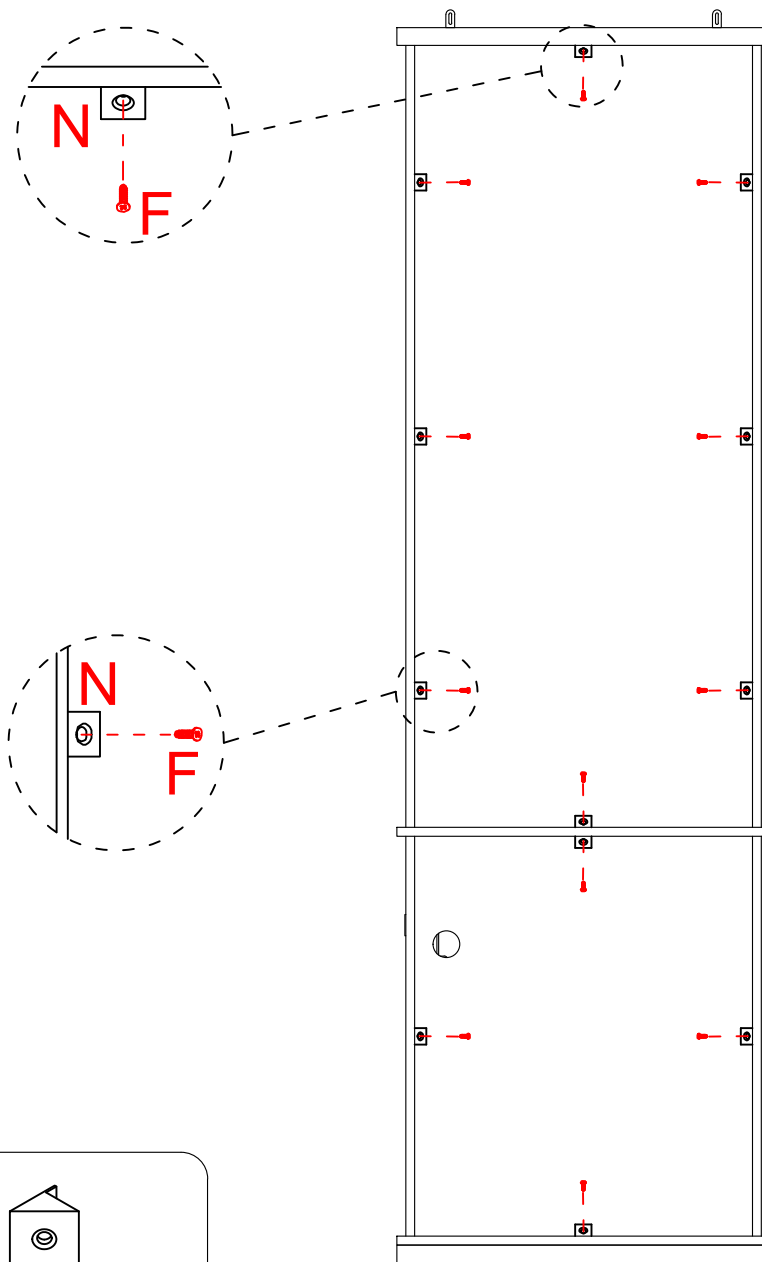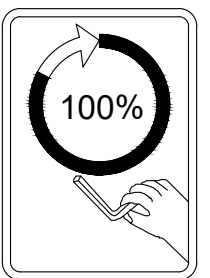

F



F x 12



N




N x 12

Assembly Instructions


Step 38

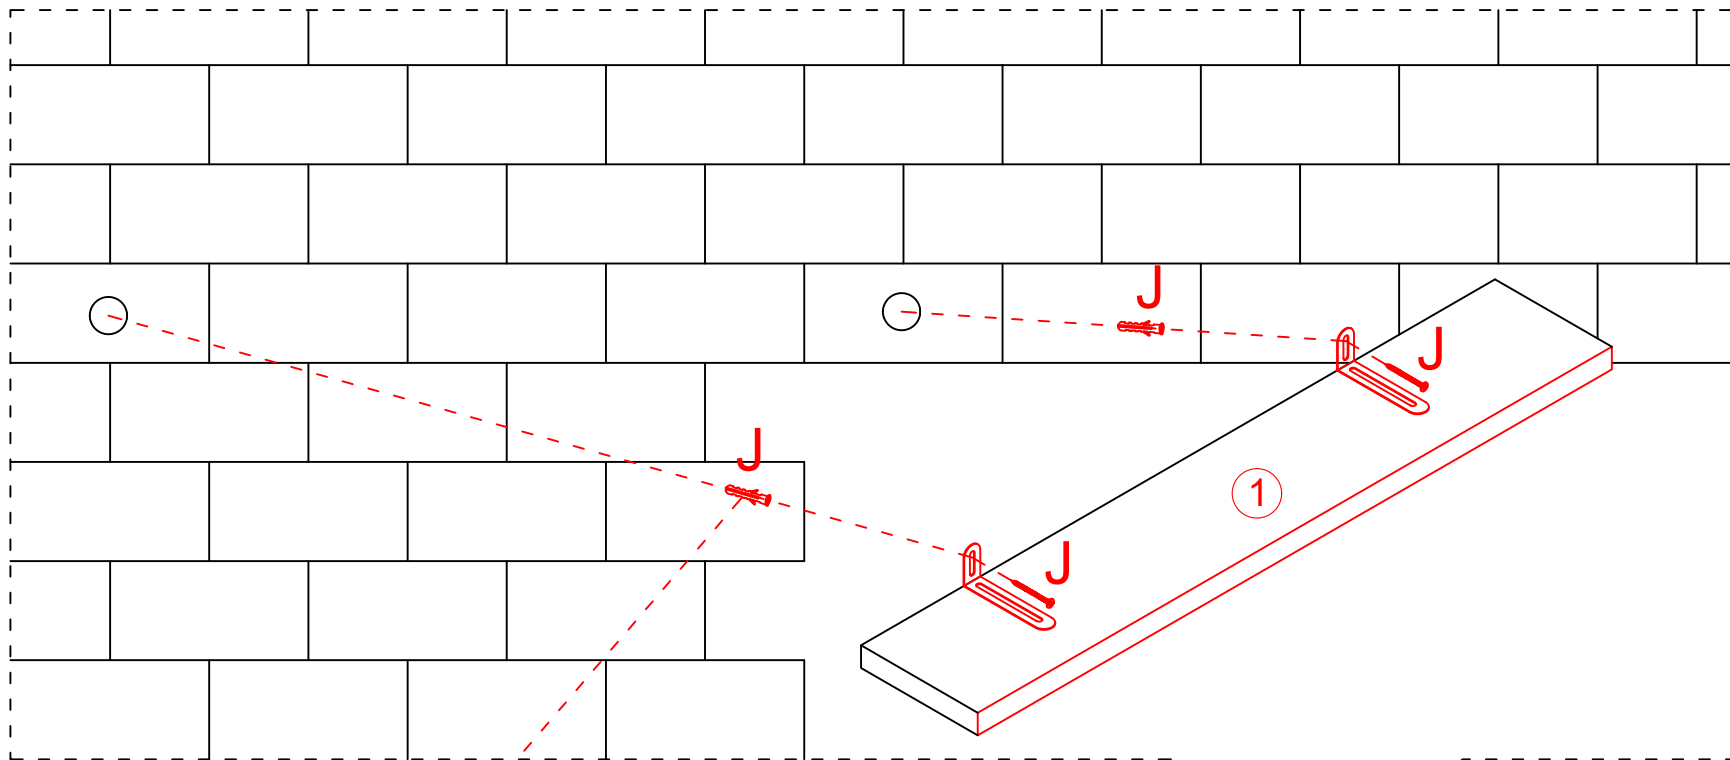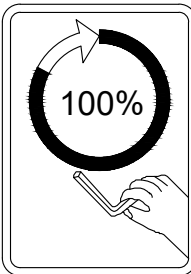

6*30

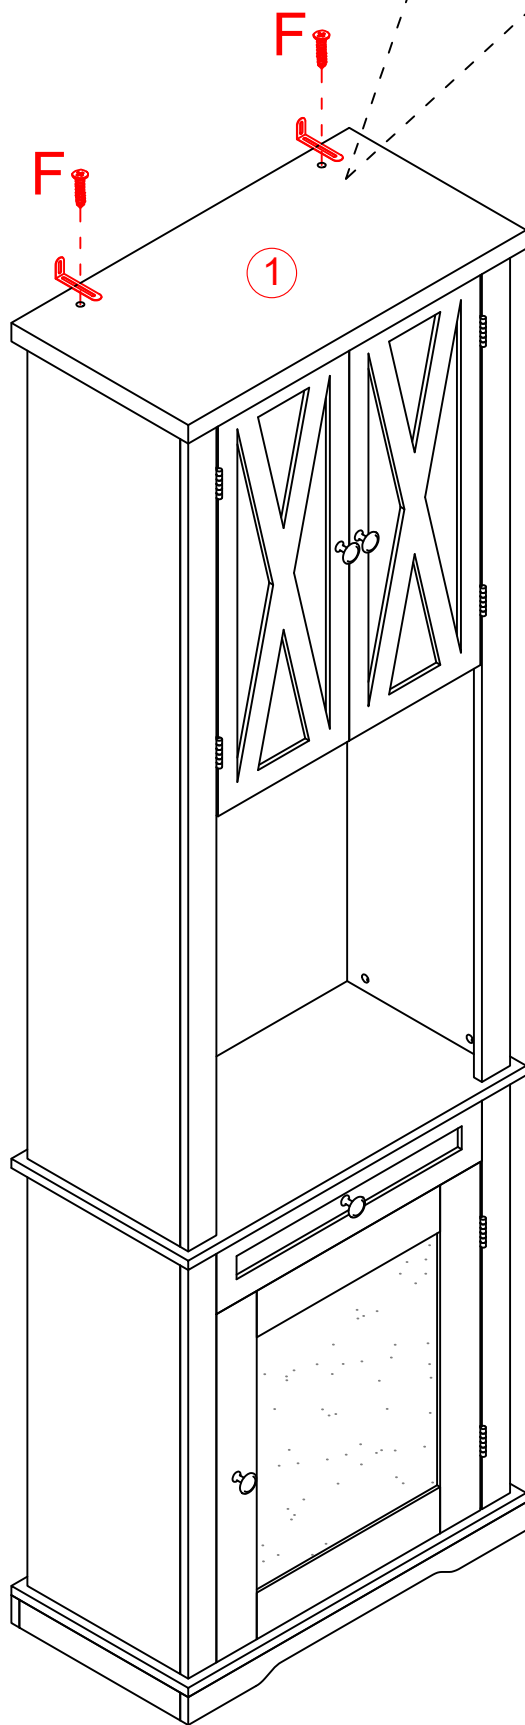


F



F x 2

J

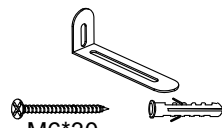

M6*30

J x 2