



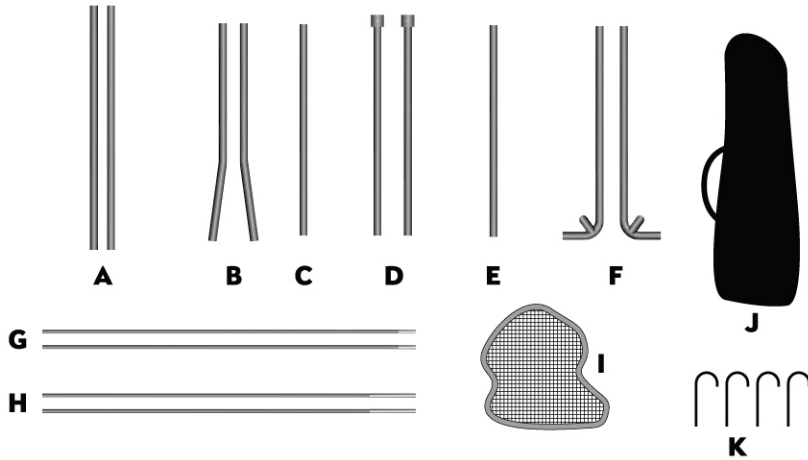

Letter	Part	QTY
A	Vertical Side Supports	2
B	Bent Horizontal Poles	2
C	Middle Horizontal Pole	1
D	Slide-on Poles	2
E	Middle Slide-on Pole	1
F	Corner Frame	2
G	Top Bending Poles	2
H	Bottom Bending Poles	2
I	Net	1
J	Carry Case	1
K	Stakes	4



STEP 1

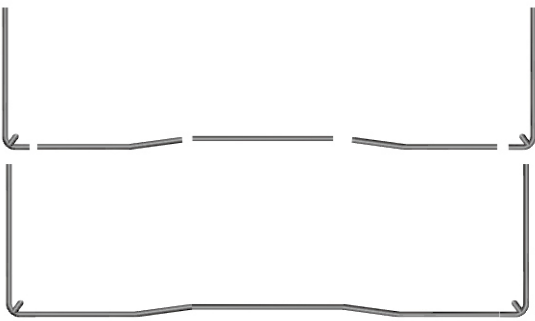


Place the **corner frames** about ten feet apart, then lay the **two bent horizontal poles** with the bent end close closer to the corner. In the gap between the two poles lay the **Middle horizontal pole**. Connect the **five poles together** as you placed them down.

STEP 2




Next, lay the **two Slide-on poles** with four feet between them, leaving the connector ends **away from each other**. Place the **Middle Slide-on pole** in-between them and connect the three poles together.

STEP 3

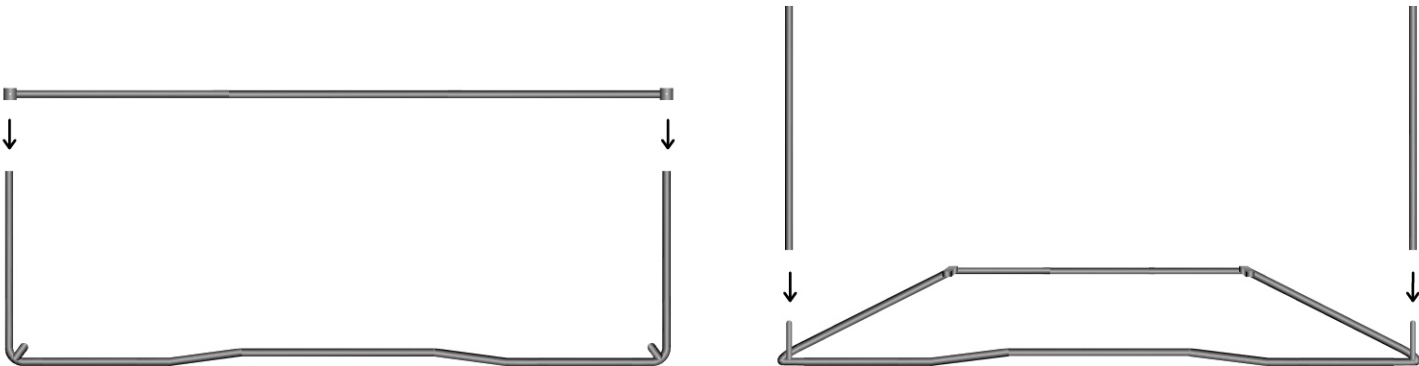


Slide the **connectors** onto the ends of the **corner poles** as shown.
Then insert the **two vertical side supports** into the **open end** of each **corner pole**.

STEP 4

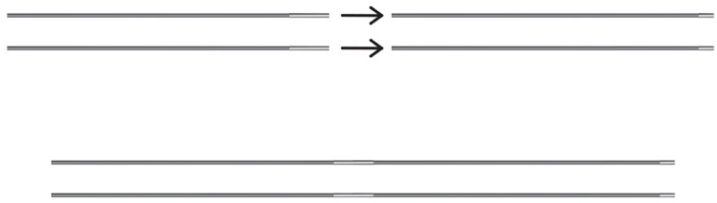


Combine the **Top** and **Bottom Bending Poles** into two longer bending poles.

STEP 5

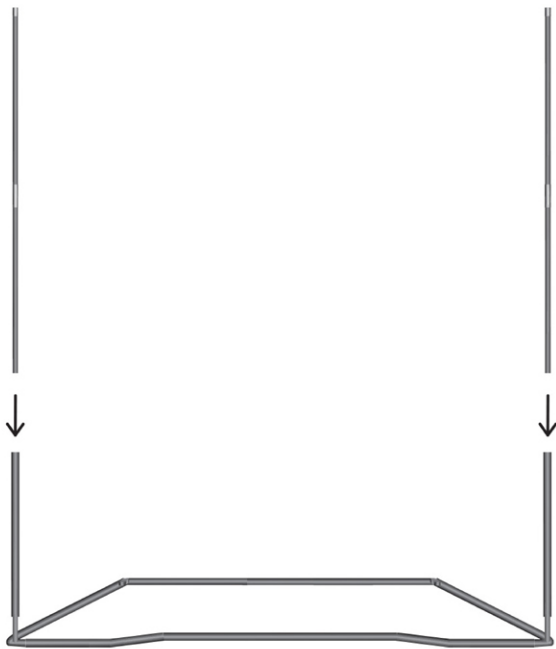

Place those two larger poles into the **vertical side supports**.

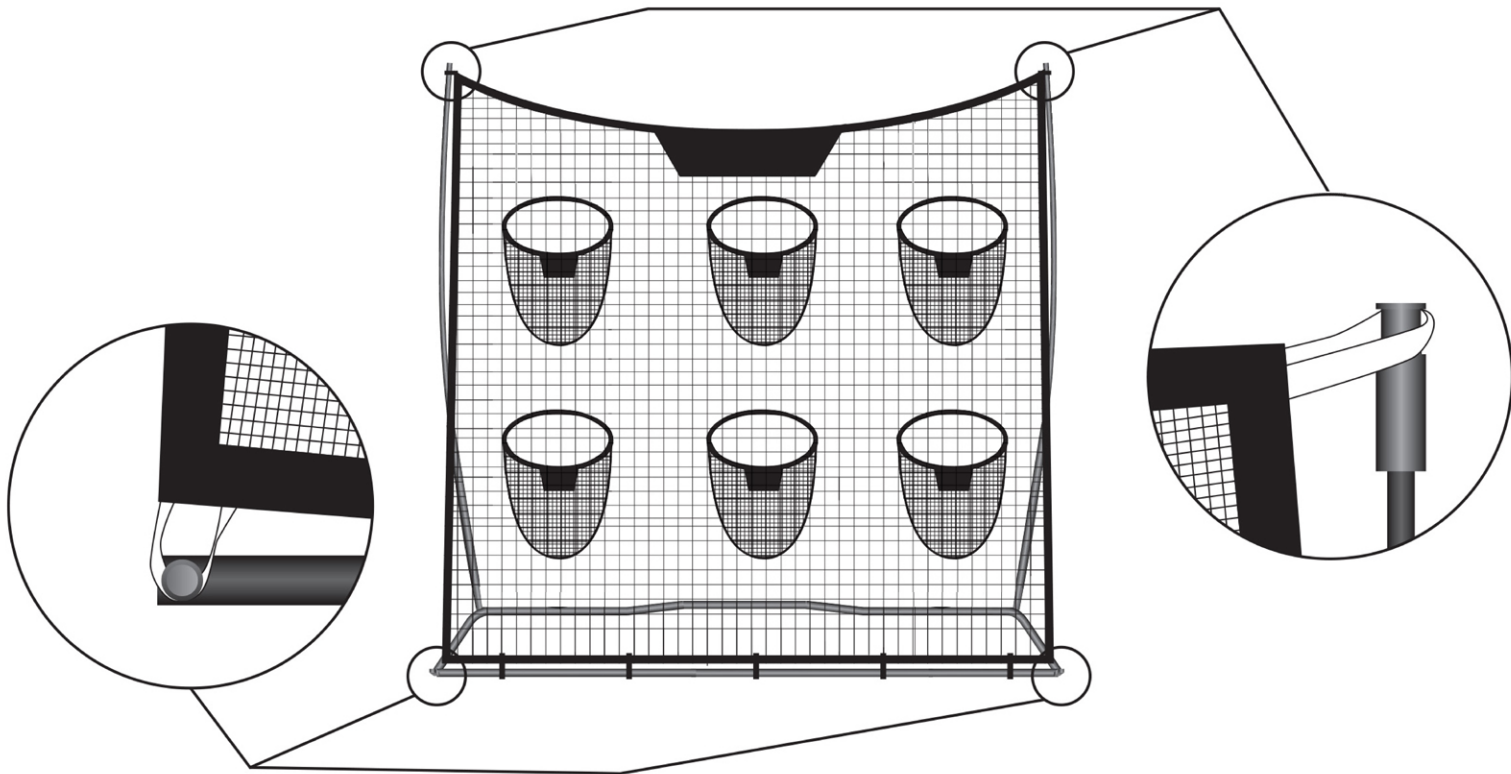

With the frame complete its time to attach the **Net**. First off you might need a stepping stool to get up the top of the bending poles. **Spread the Net out**, find the **top end**, and then **connect the loops** on the end of each end onto the top of the bending poles. Make sure the net is **facing the base frame**. The two lower end loops then get attached to the catch on the ends next to the slide-on connectors.

THANK YOU FOR YOUR PURCHASE.
WE VALUE OUR CUSTOMERS AND WANT TO BE SURE YOU ARE SATISFIED WITH YOUR PRODUCT.
IF YOU HAVE ANY QUESTIONS OR CONCERNS OR YOU ARE NOT COMPLETELY SATISFIED, PLEASE CONTACT OUR OFFICE AT 1-800-906-1639.