


Assembly Instructions

WALL CABINET

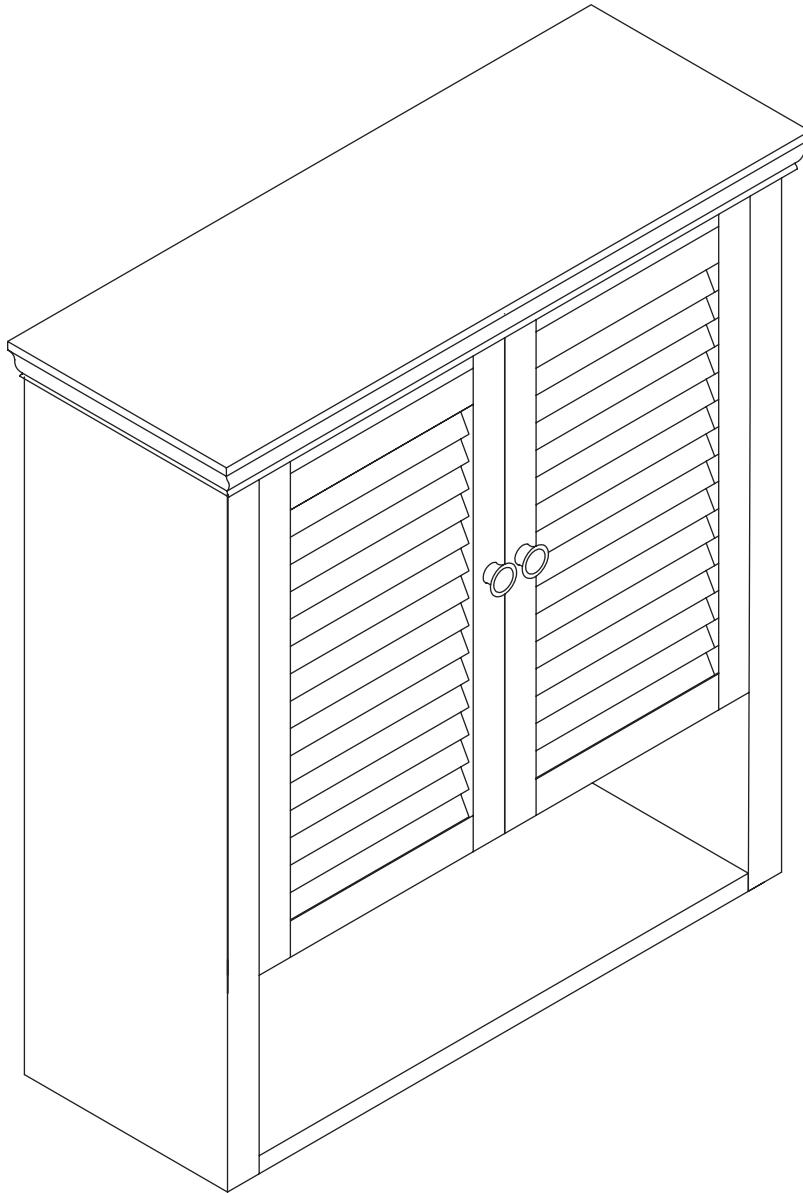


Carefully unpack and identify each component before beginning assembly. Before you begin, please refer to parts list to make sure that you have all parts. Please take care when assembling the unit and always place the parts on a clean, soft surface.










Get social with us and discover more about our products, tips and exclusive discounts!




Visit our YouTube channel for product assembly demonstrations

Parts List

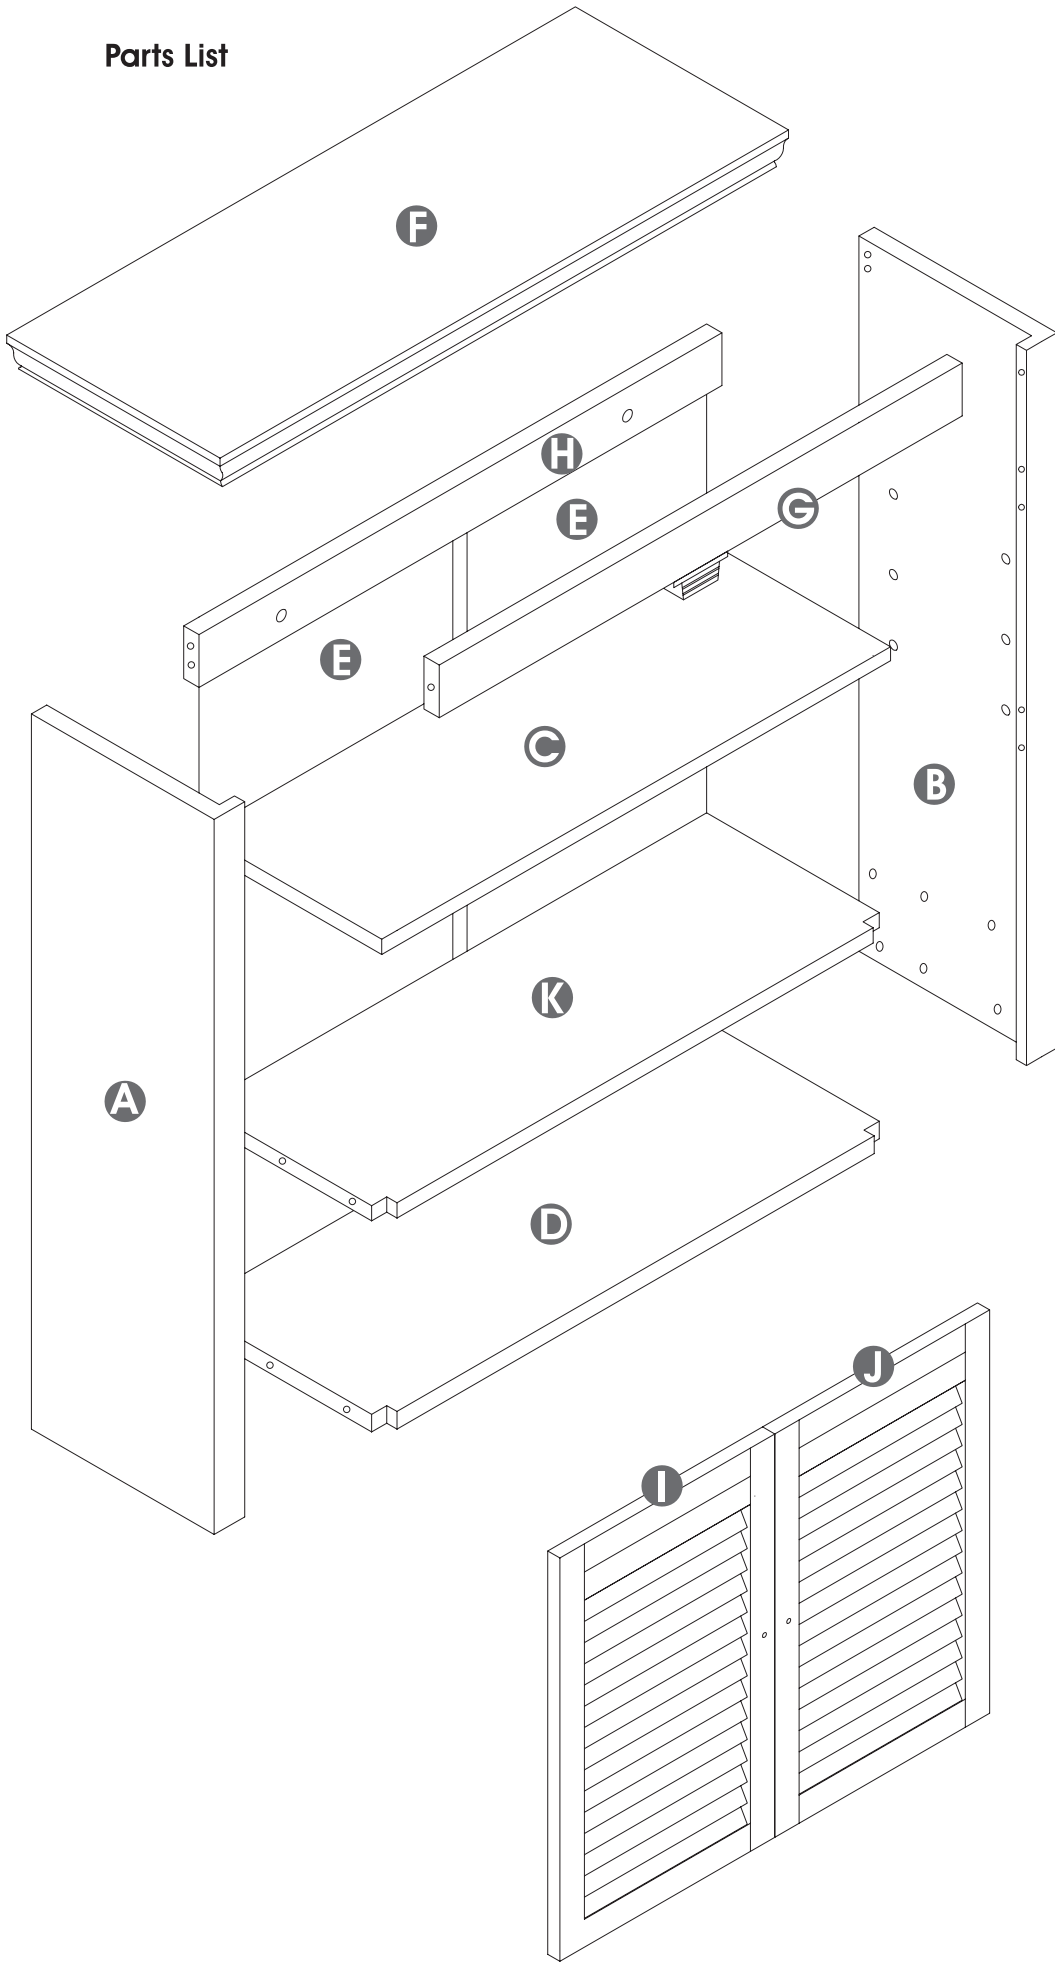


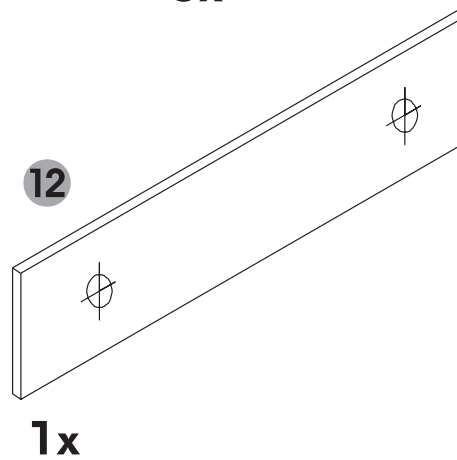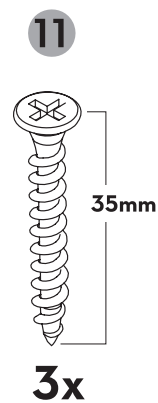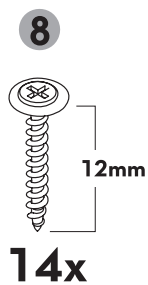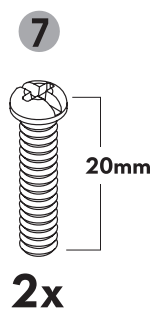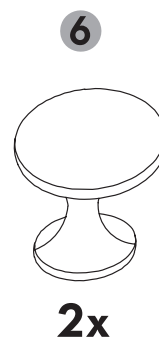

in **Step 1** you need **B H G K D**

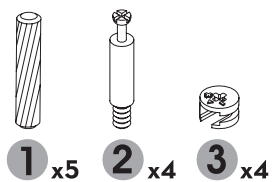



First screw cam bolt **2** into part B,
then slide part D, K into part H,
lastly tighten the cam lock **3** until secure.

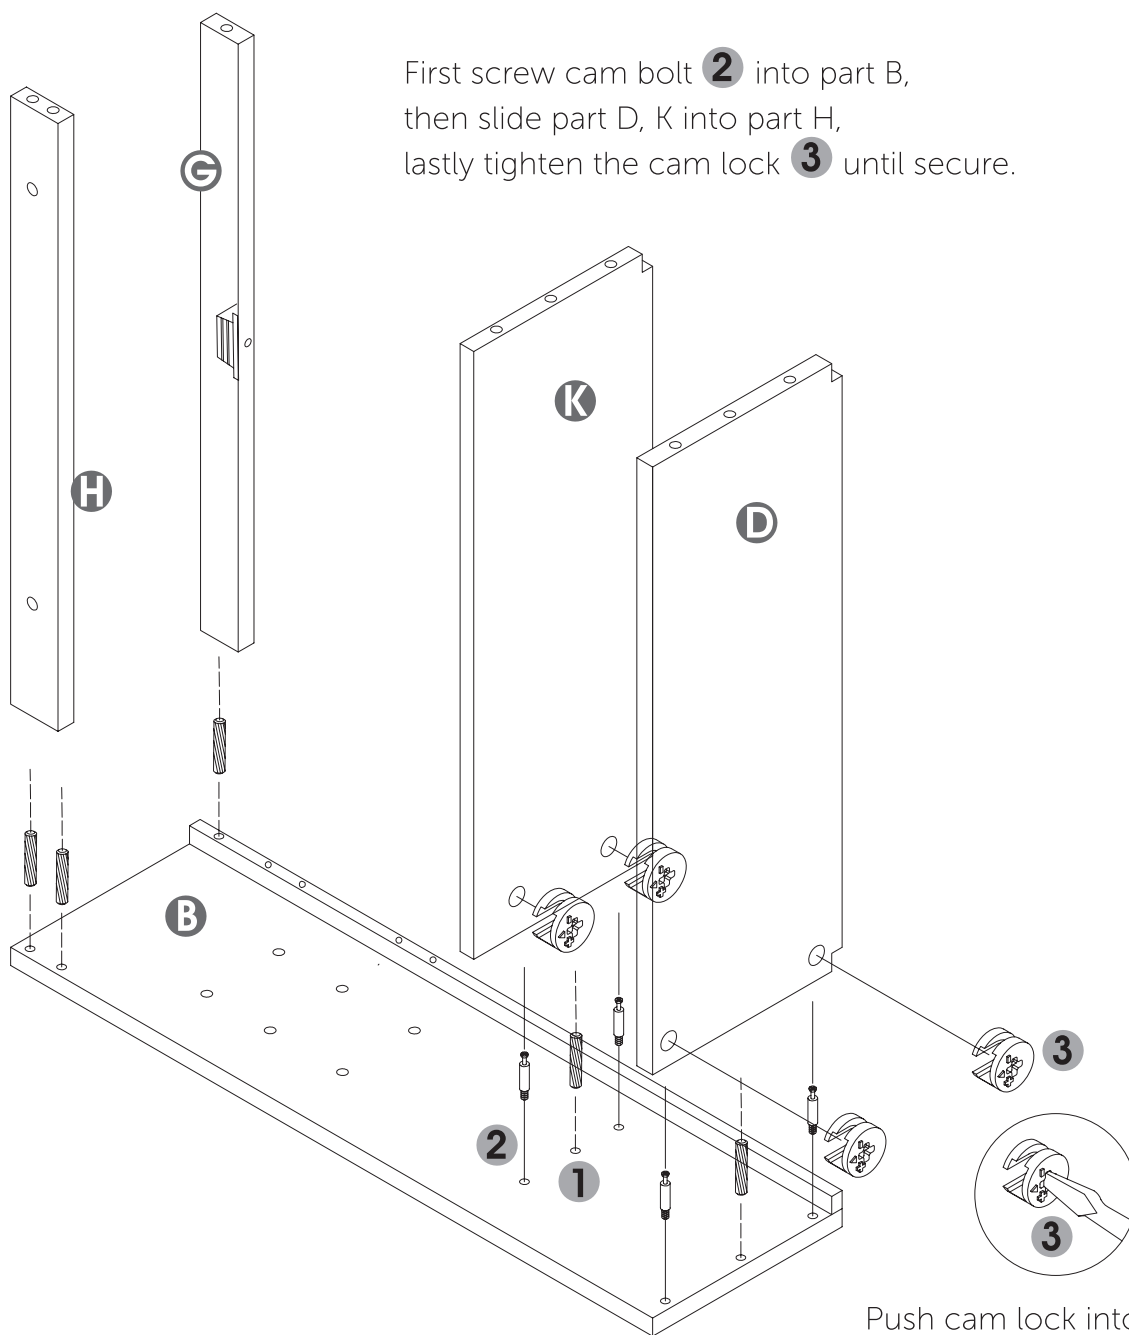

Push cam lock into the
hole, then take a flathead
screwdriver (as pictured) and
twist 45 degrees until it is
locked in place.



in **Step 2** you need

A

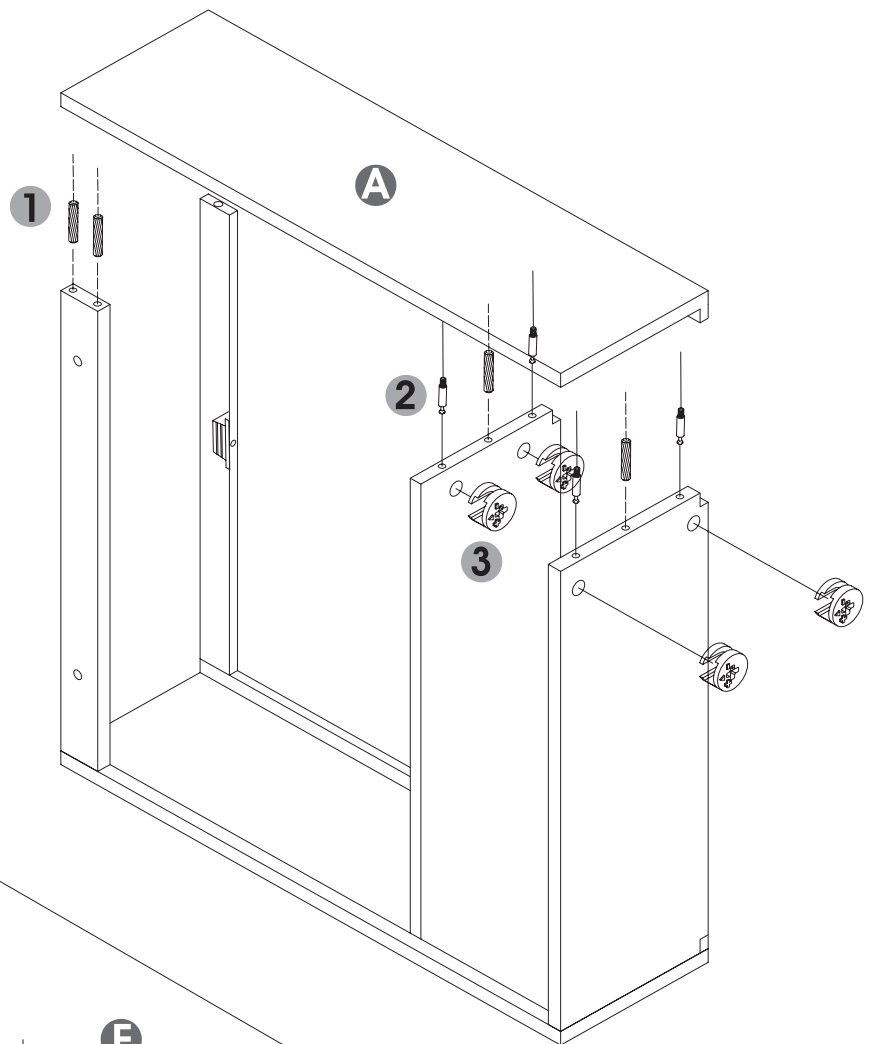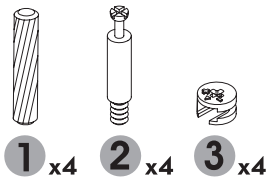

in **Step 3** you need

F

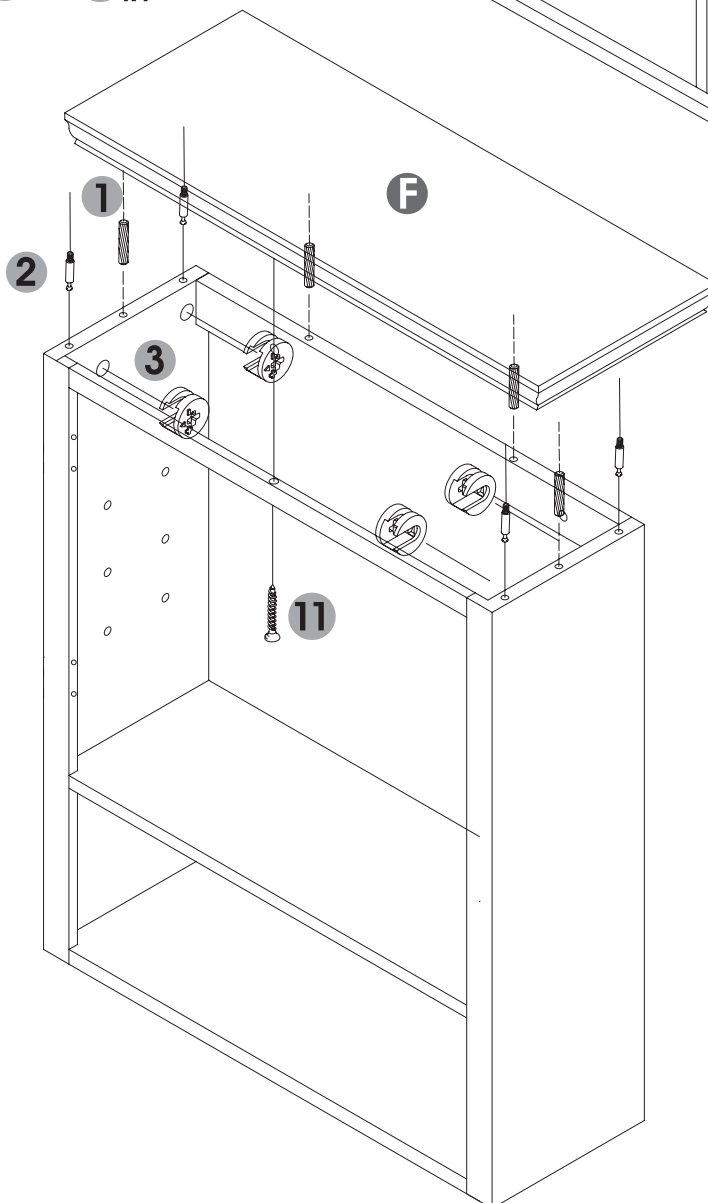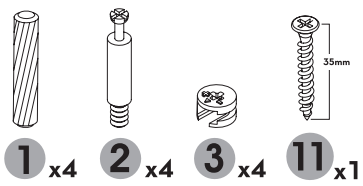


in **Step 4** you need

E




9 x1



8 x14

back connector slide

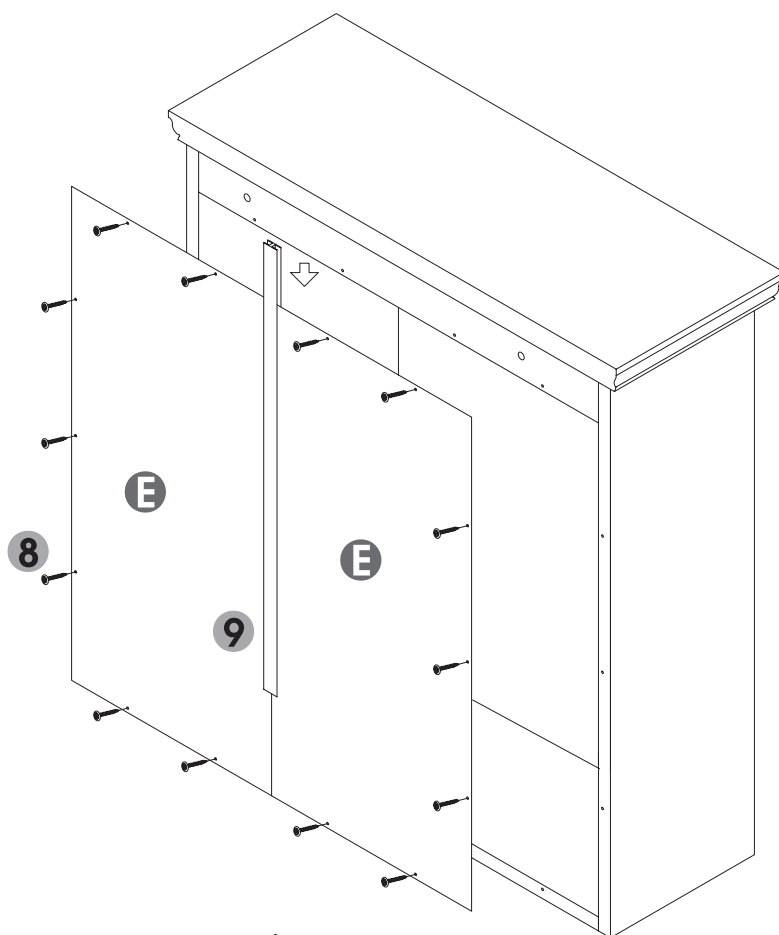


in **Step 5** you need

I



J



4 x8

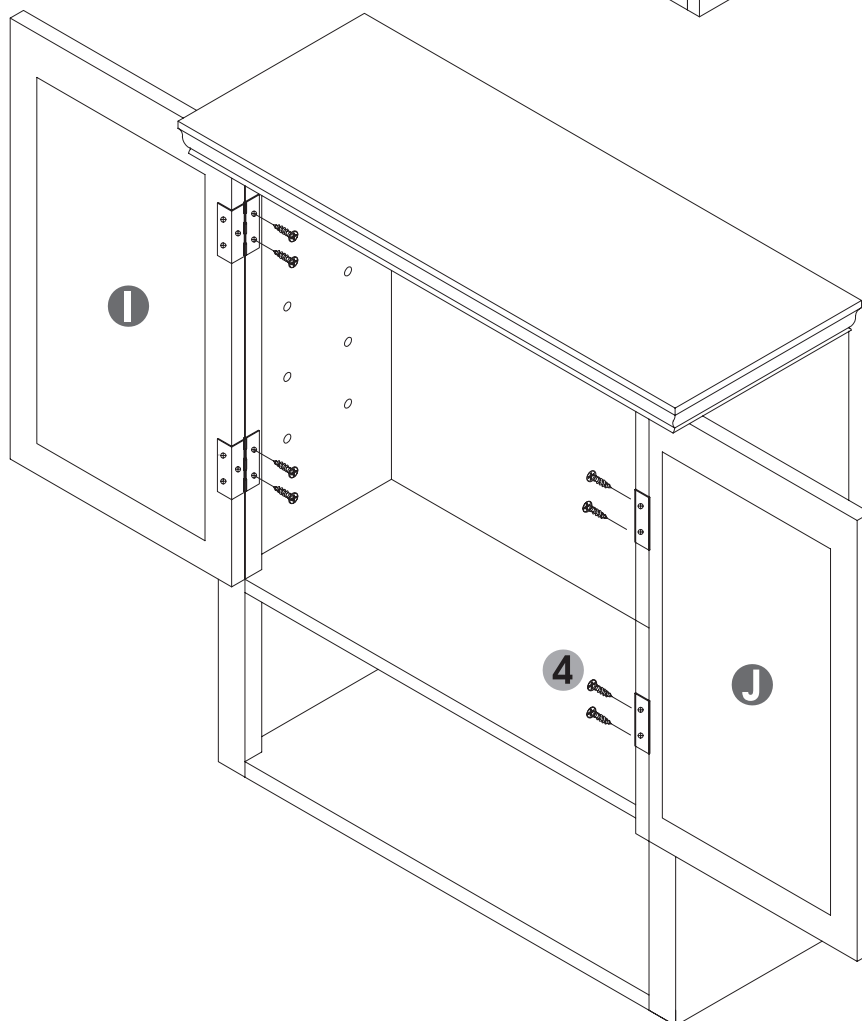

in **Step 6** you need

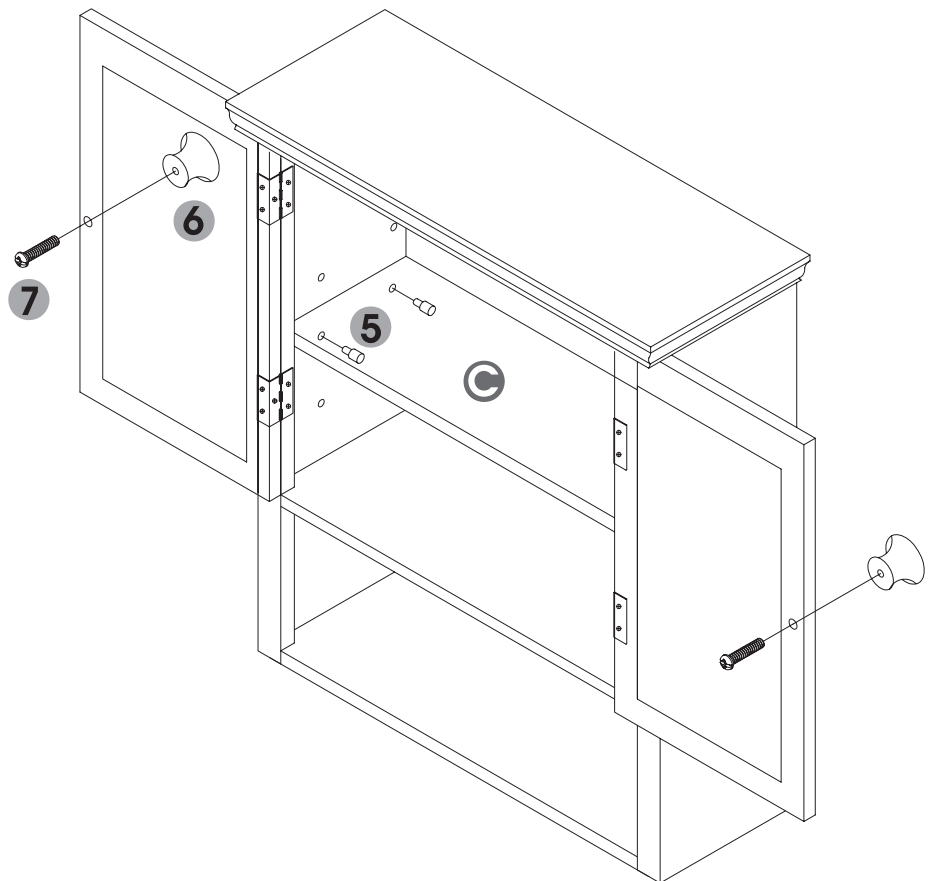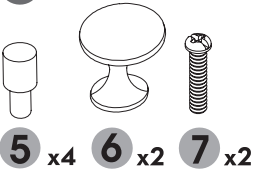

in **Step 7** you need

