


# ASSEMBLY INSTRUCTIONS

## QUEEN BED


**Caution:** Please read instructions thoroughly before unpacking assembly parts. Sharp exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

- 1 We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2 Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3 Please do not over-tighten screws or bolts.
- 4 Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

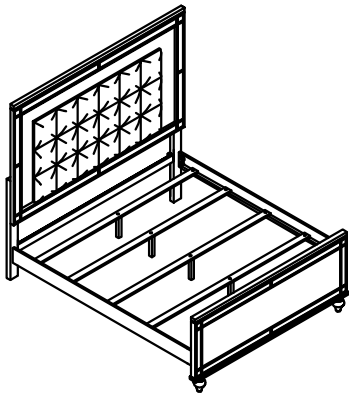

| Hardware List For Headboard                                                  |  |                               |       |                            | Hardware List For Footboard |                              |       |
|------------------------------------------------------------------------------|--|-------------------------------|-------|----------------------------|-----------------------------|------------------------------|-------|
| 1                                                                            |  | JCBC Bolt (Ø5/16" x 60mm)     | 6 Pcs | 8                          |                             | FULL THREAD BOLT (Ø5/16"x90) | 8 Pcs |
| 2                                                                            |  | Spring washer (Ø5/16"x13x1.2) | 6 Pcs | 9                          |                             | Corved Washer (Ø5/16")       | 8 Pcs |
| 3                                                                            |  | Flat washer (Ø5/16"x19x2)     | 6 Pcs | 10                         |                             | NUT washer (Ø5/16")          | 8 Pcs |
| 4                                                                            |  | JCBC Bolt (Ø1/4" x 38mm)      | 2 Pcs | 11                         |                             | Wrench key 1/2"x90mm         | 1 Pc  |
| 5                                                                            |  | Spring washer (Ø1/4"x13x1.2)  | 2 Pcs | Hardware Bag For Footboard |                             |                              |       |
| 6                                                                            |  | Flat washer (Ø1/4"x19x2)      | 2 Pcs |                            |                             |                              |       |
| 7                                                                            |  | Allen Key L57 x4 mm           | 1 Pc  |                            |                             |                              |       |
| Tools Required: Please use a screwdriver for the screwdriver is not included |  |                               |       | 12                         |                             | Wood Screw Ø4x25             | 8 Pcs |

### PARTS LIST - LISTA DE PARTES

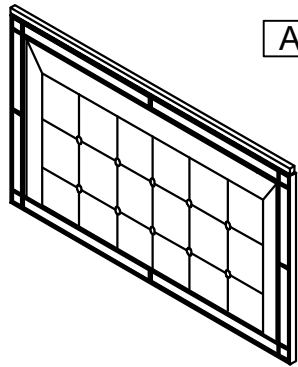


A x 1 Pc




B x 1 Pc




C x 1 Pc

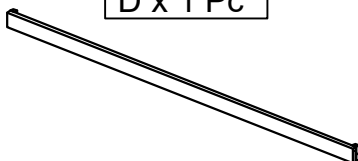

D x 1 Pc

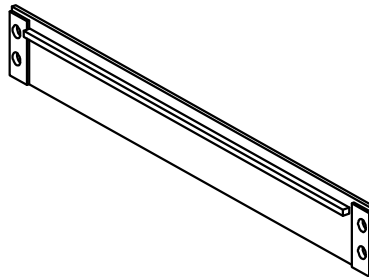


E x 2 Pcs

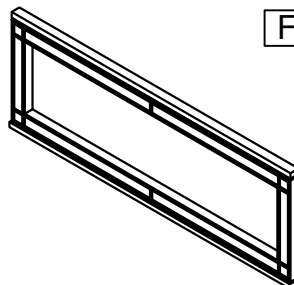

F x 1 Pc



G x 2 Pcs

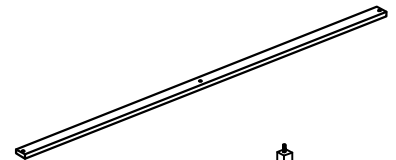

H x 4 Pcs




I x 4 Pcs


# ASSEMBLY INSTRUCTIONS

## QUEEN BED

### STEP 1

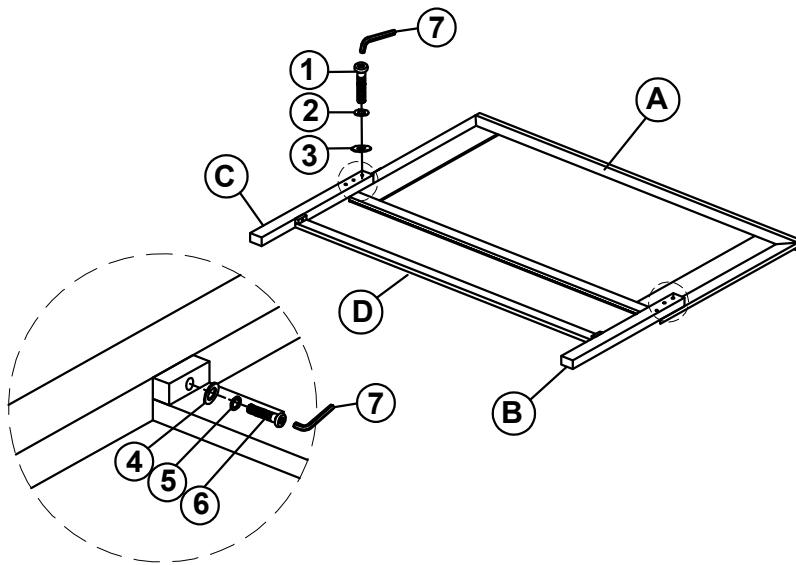


### STEP 2

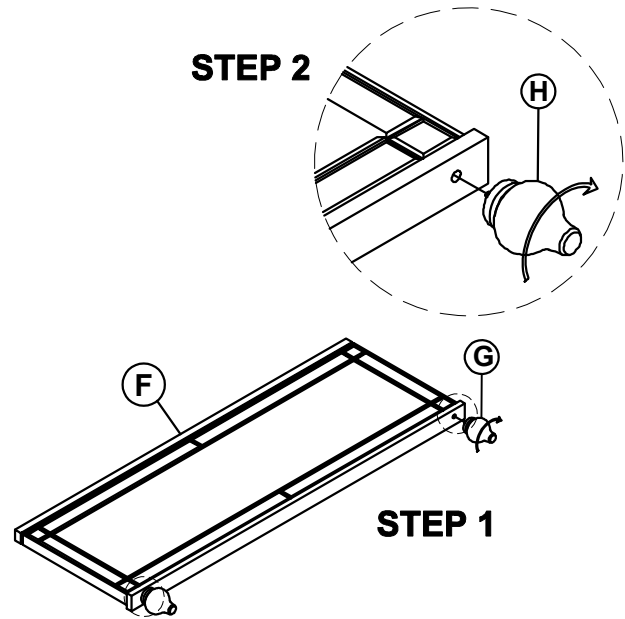


### STEP 1

### STEP 3

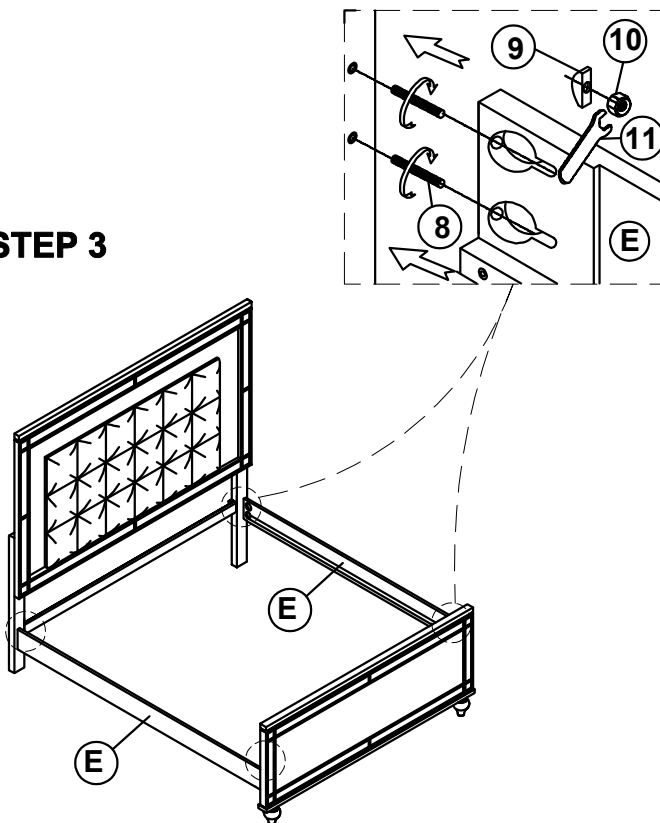

### STEP 4

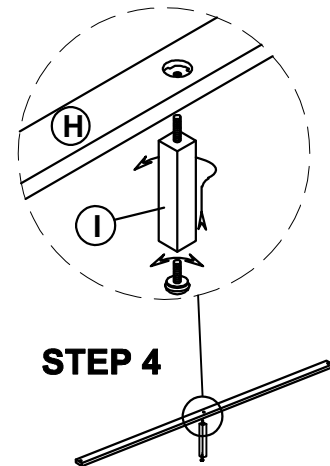

### STEP 5

