




Nut×2



Small screw×4

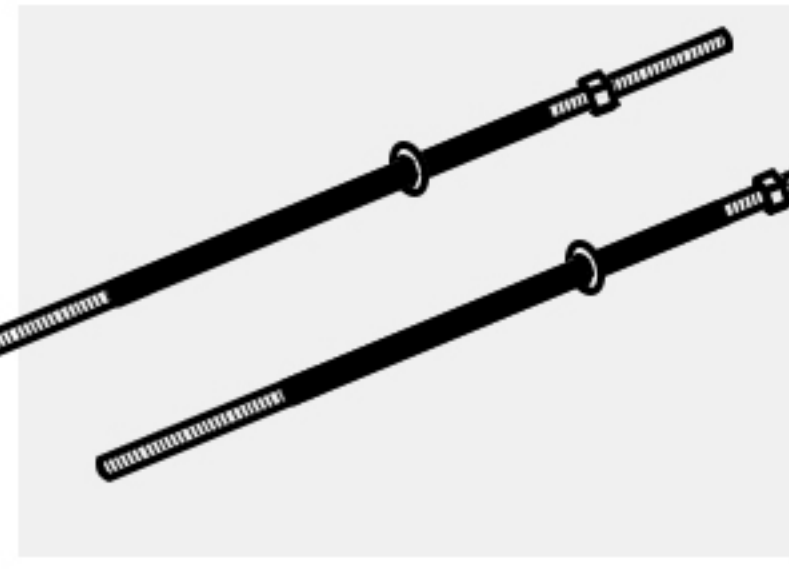

Long screw×2




tool×1





board×3

Retractable version
installation location:

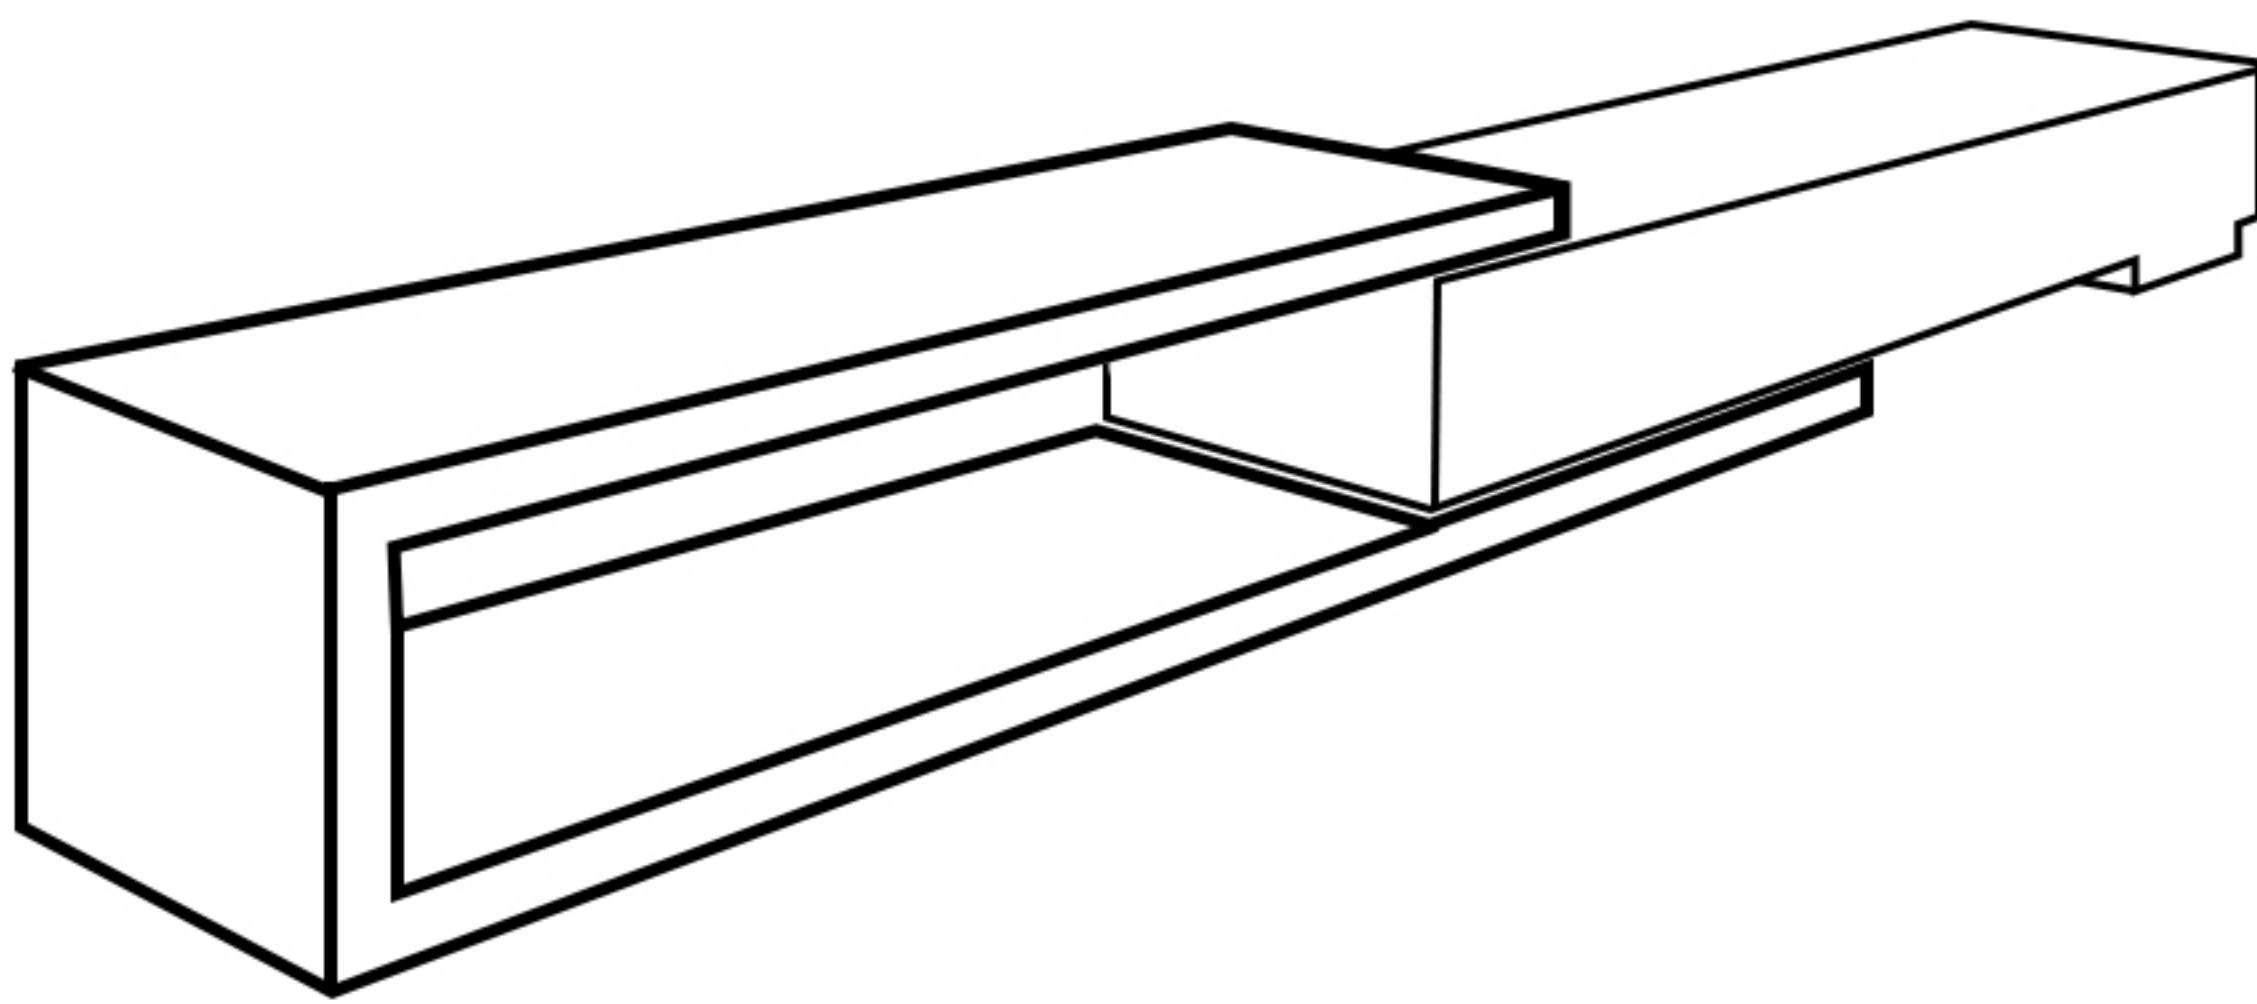

1. Insert the long screw, insert the width plate, and cover the bottom plate
2. Screw on the nut and cover with the white cap

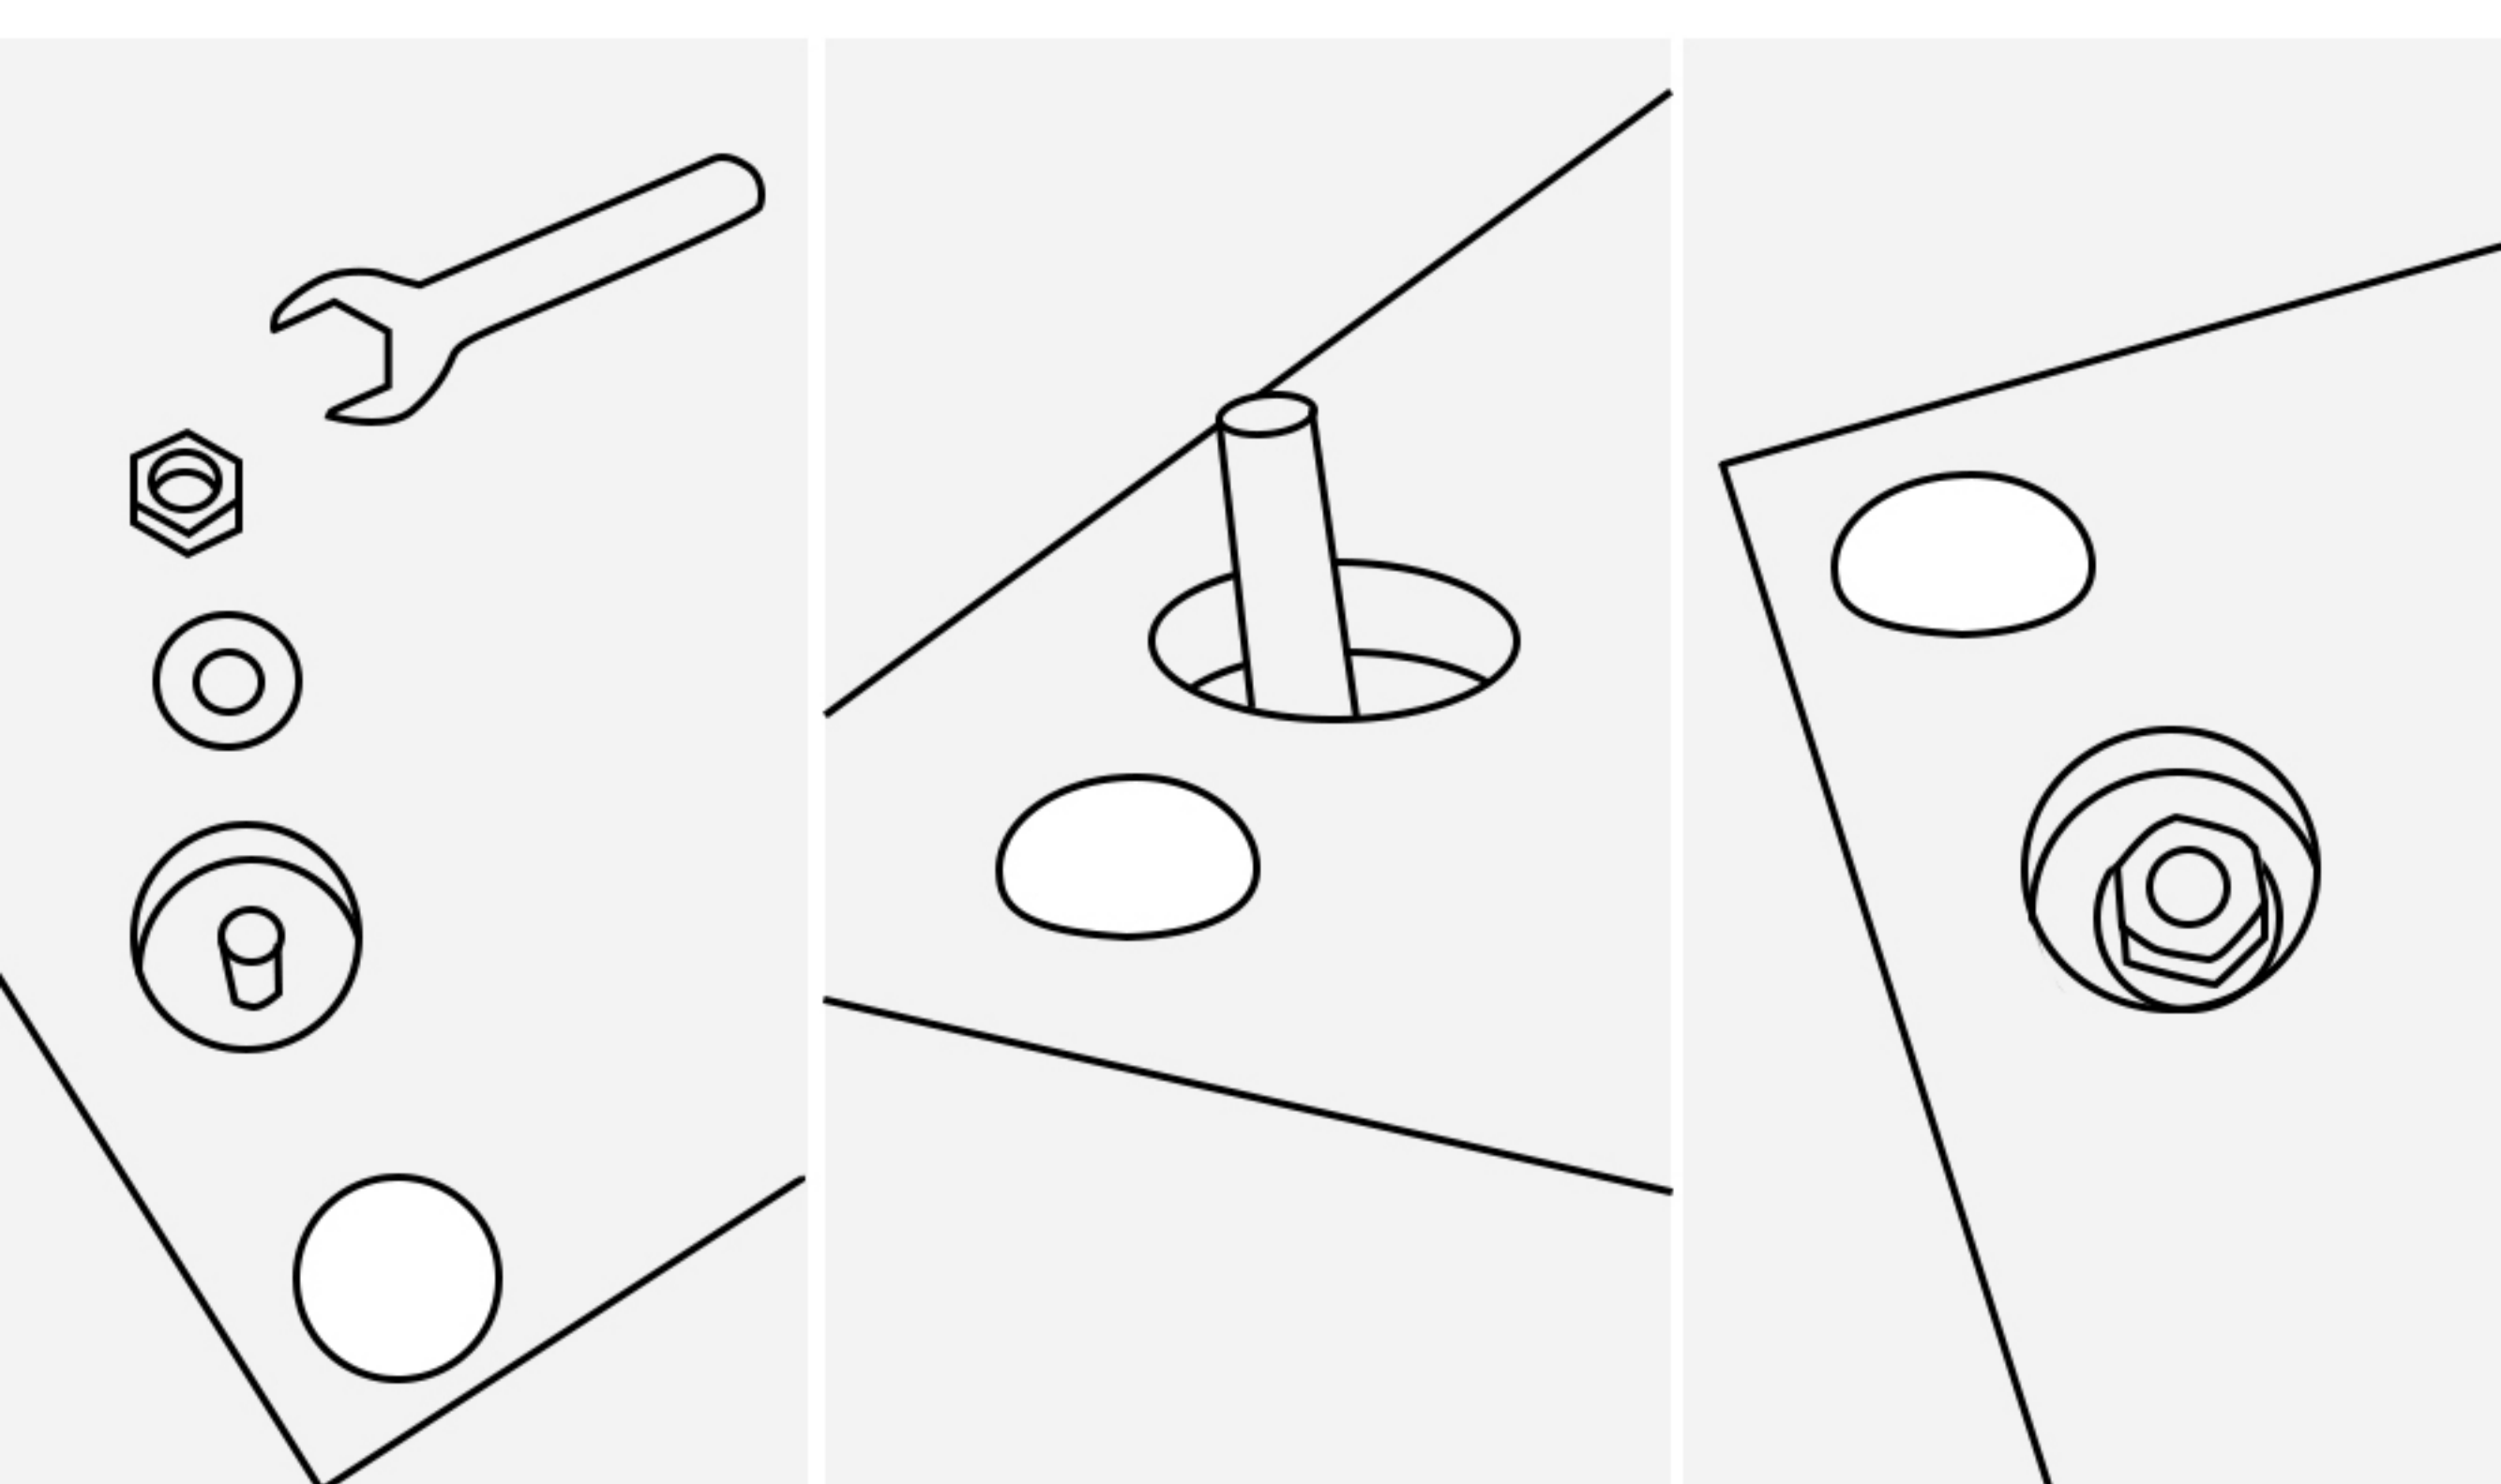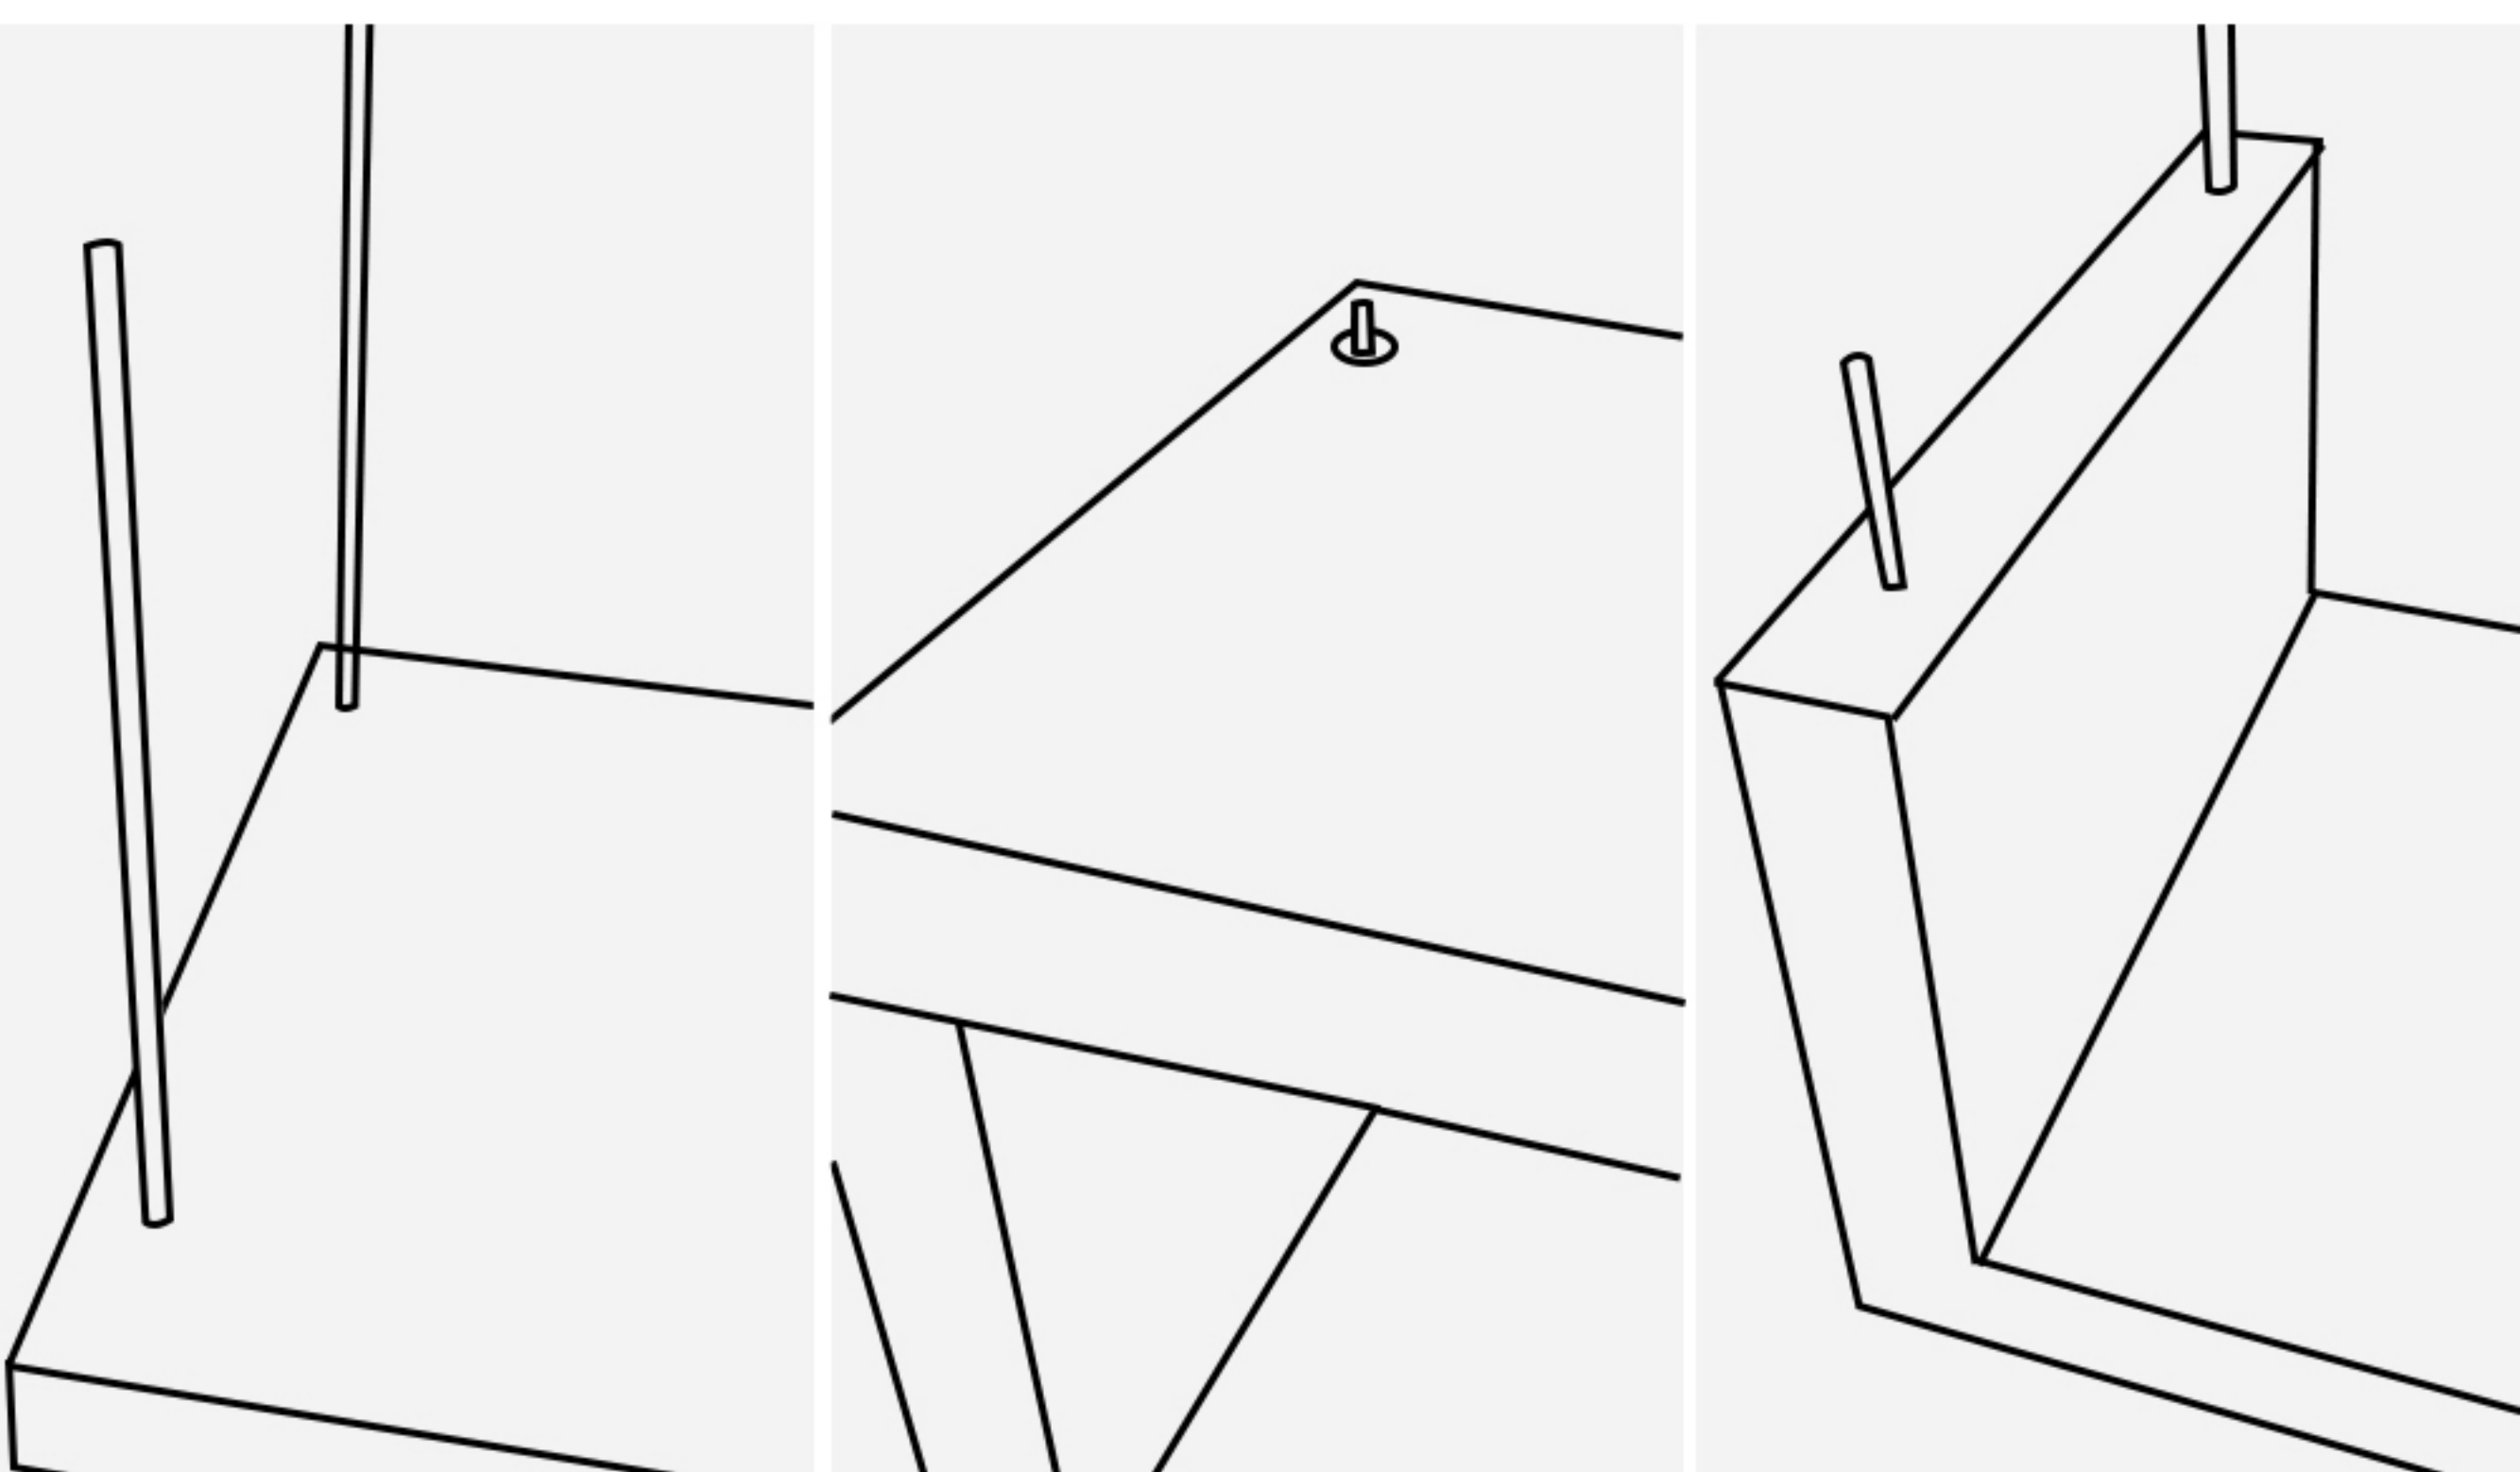

Final effect!

