





# MAGNO SCREEN

*Note: If you're installing on a sliding glass door, measure from the top of the frame to the top of the bottom track. If your door opens in, install on the outside of the door. If our door opens out, install on the inside of the door.*

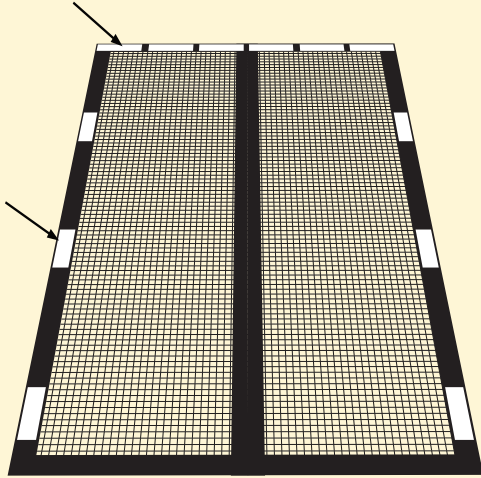


**STEP 1** Lay MagnOScreen onto the floor and attach Velcro® strips onto the screen in the areas shown in drawing. Before adhering the screen, clean the door frame with a moist cloth to remove any dust that may prevent the velcro adhesive from a secure bond.

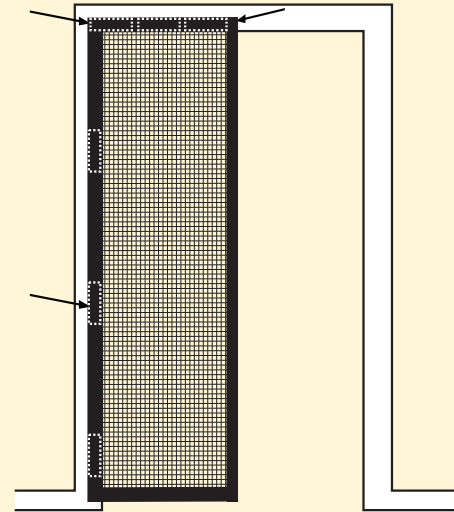


**STEP 2** Then begin hanging one side of MagnOScreen, lining up the screen at the center of the door, and adhering all Velcro strips starting at the top and working your way down along the side.

*Be sure the center of the Velcro is slightly higher so it can help in swinging the sides inwards and closing better.*

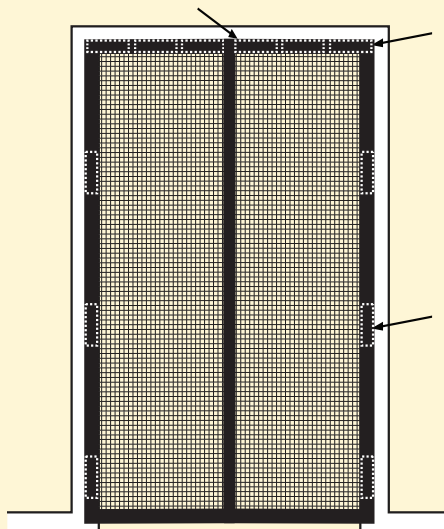

**STEP 3** Continue to hang the other side of MagnOScreen, again, lining up the screen at the center of the door, and adhering all Velcro strips starting at the top and working your way down along the side.

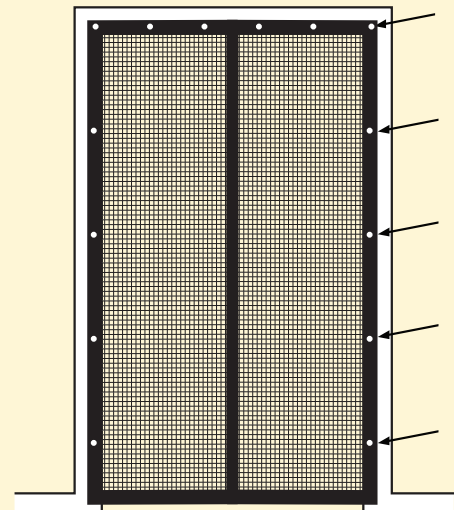

**STEP 4** Finish the installation by using the supplied tacks to ensure a strong adherence to the frame...and you're ready to use your MagnOScreen.

*To make a MagnOScreen close perfectly, hold the right side of the screen open a second longer than the left. This will allow the left side to come into position first and allow the right side to snap closed against it.*