



ASSEMBLY INSTRUCTIONS








FULL FLOOR BED WITH FENCE

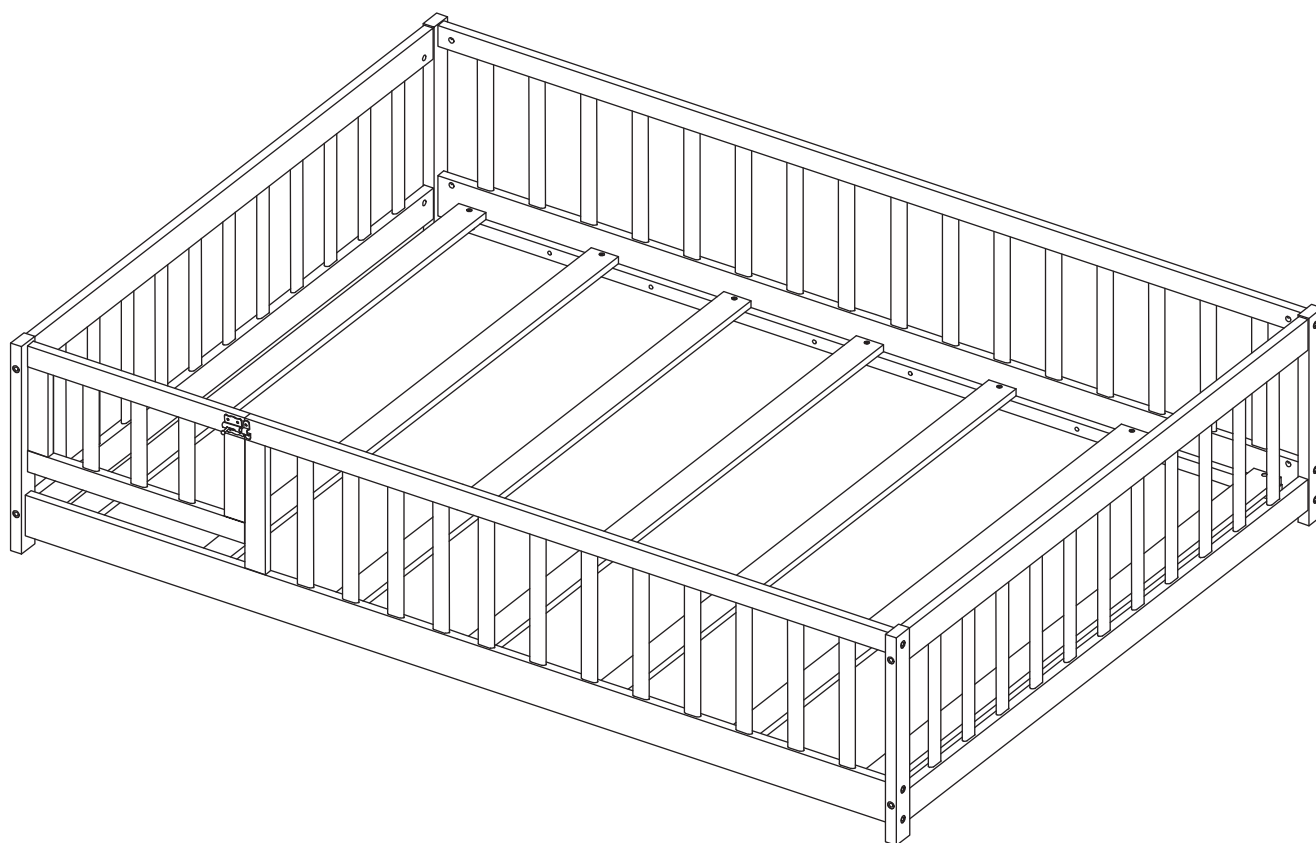





Detail View

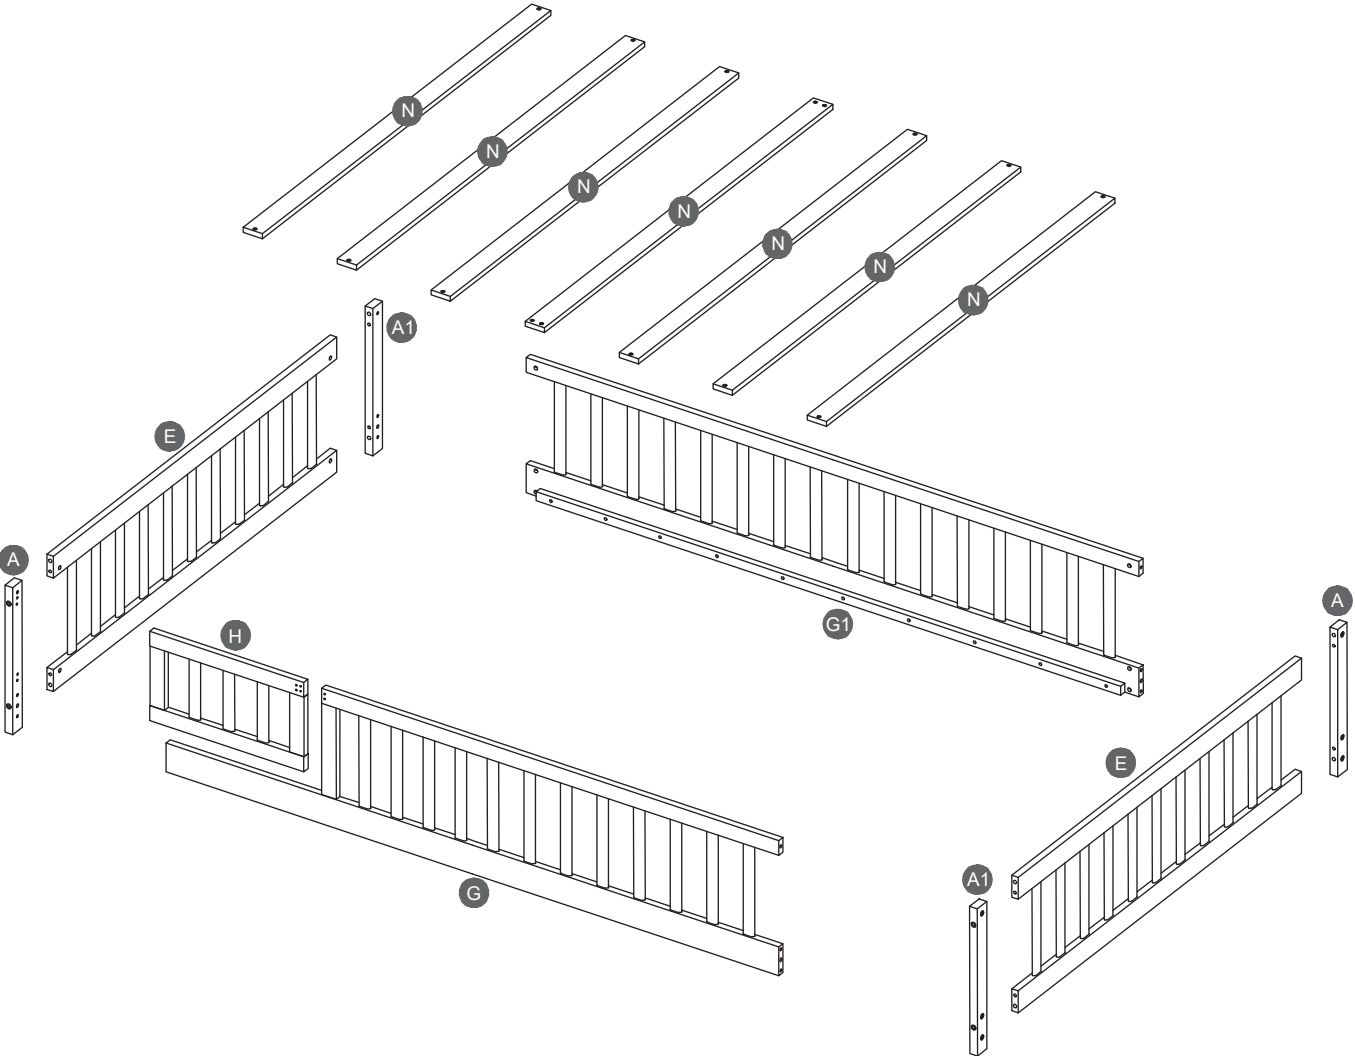


Part List

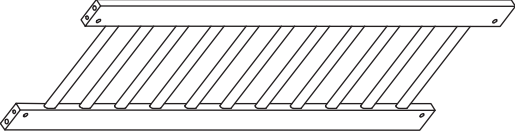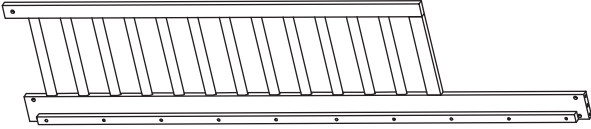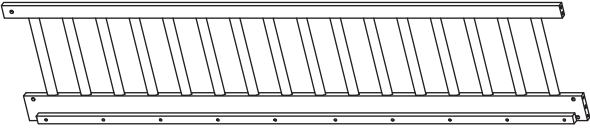A  Leg - 2pcs	A1  Leg - 2pcs
E  Hb. Fb. Panel - 2pcs	G  Side Rail Front - 1pc
G1  Side Rail Back - 1pc	H  Door - 1pc
N  Bed Slats - 7pcs	

Hardware List


1  M6 x 80mm JCBC (8pcs)	2  M6 x 15mm Barrel Nut (19pcs)	3  M10 x 30mm Wood Dowel (12pcs)
4  Sticker Cap (2pcs)	5  M6 x 65mm JCBC (11pcs)	6  20 x 20 x 233mm Wood Block (1pc)
7  M4 x 25mm CSK Screw (14pcs)	8  6 x 24 x 55mm (135°) Hinges (2pcs)	9  10 x 40 x 60mm Lock (1pc)
10  M3.5 x 16mm CSK Screw (14pcs)	11  M4 Allen Key (1pc)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

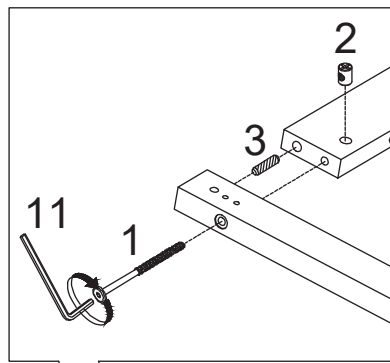


1		2		3	
	8PCS		8PCS		8PCS

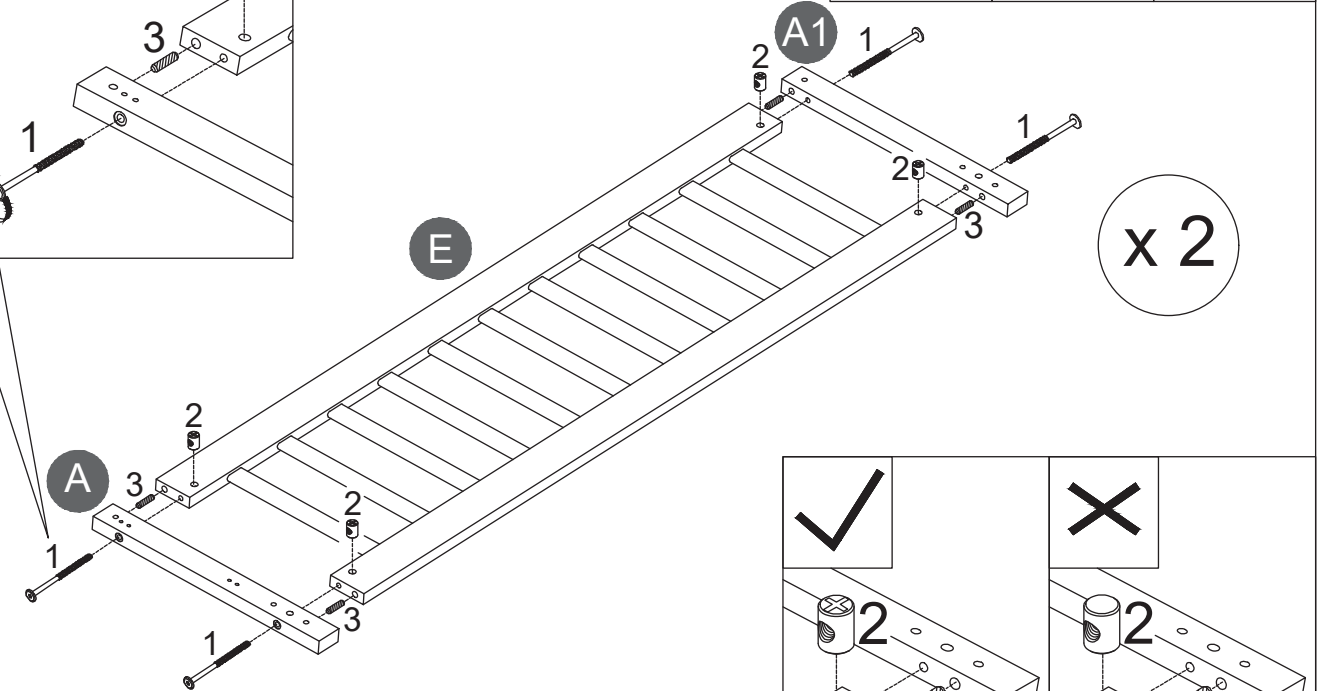


Note: Part 2 will face up with the "+" mark on it, otherwise it cannot be tightened

STEP 2:

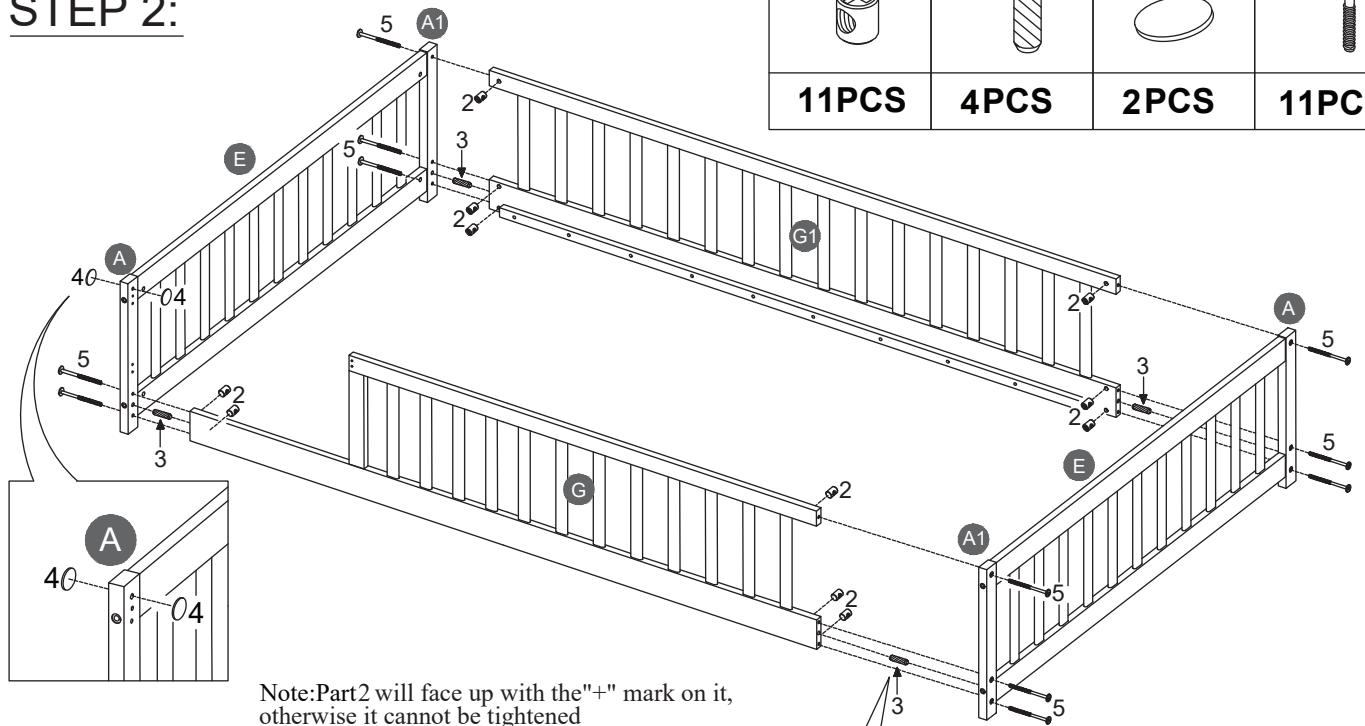



2		3		4		5	
	11PCS		4PCS		2PCS		11PCS

Note: Part 2 will face up with the "+" mark on it, otherwise it cannot be tightened

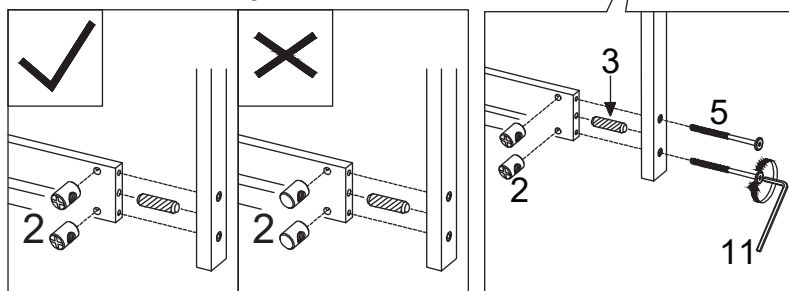


STEP 3:

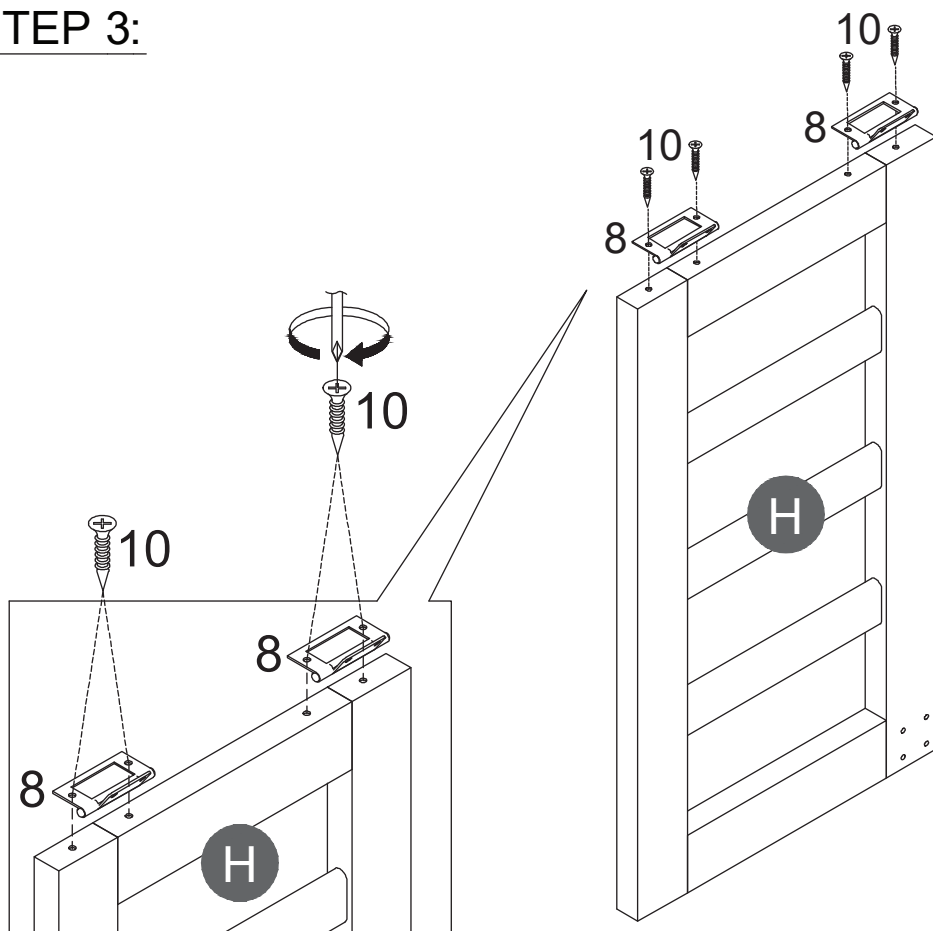

8	10
	
2PCS	4PCS


STEP 4:

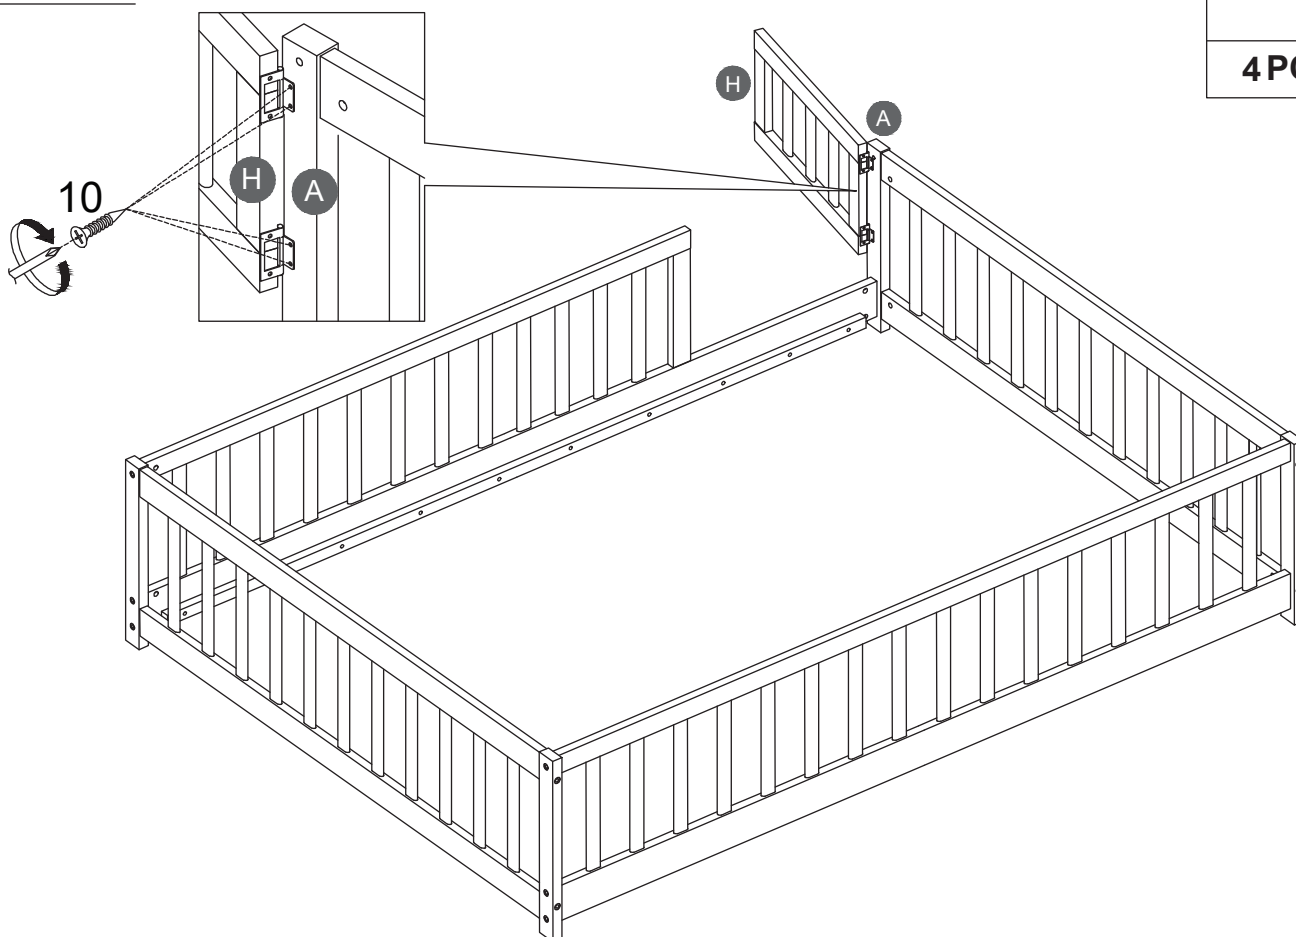


10


4PCS

STEP 5:

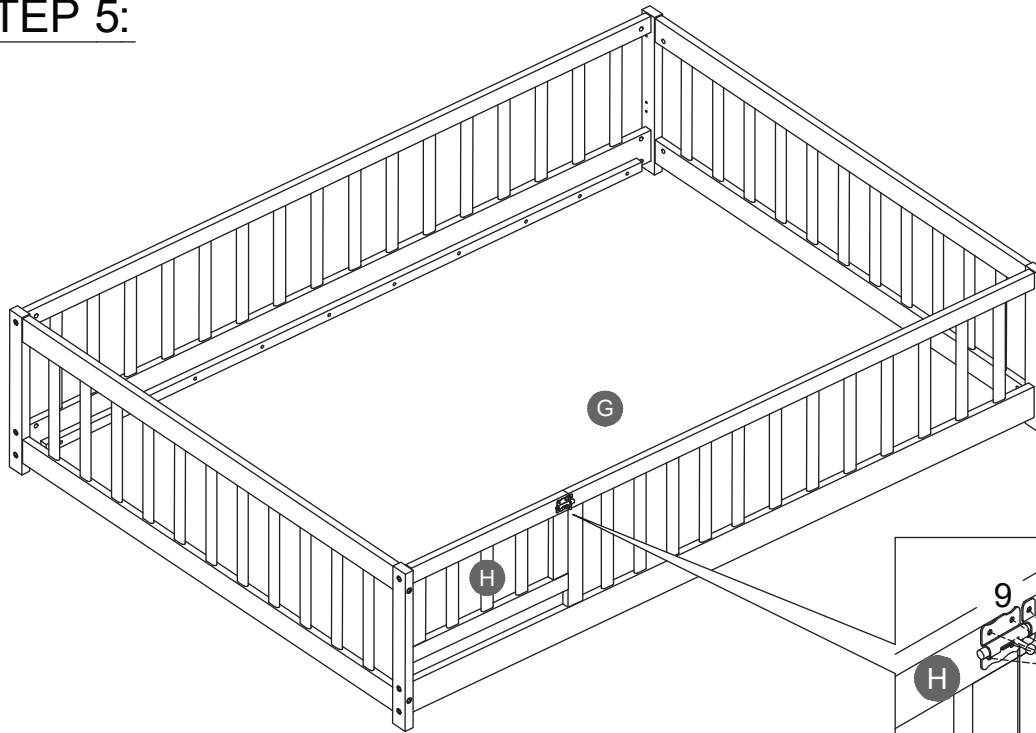


9	10
	
1 PC	6 PCS


STEP 6:

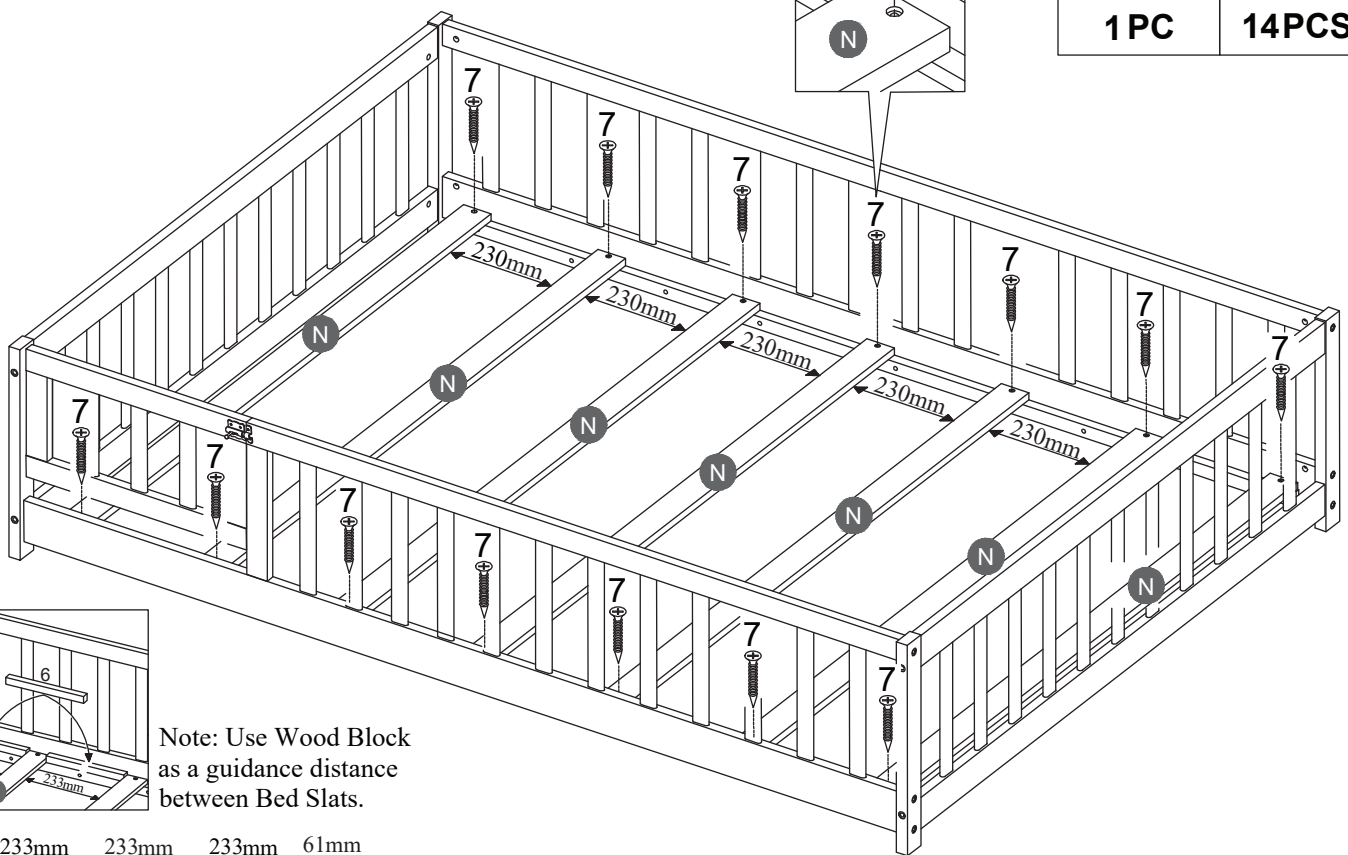

6	7
	
1 PC	14 PCS

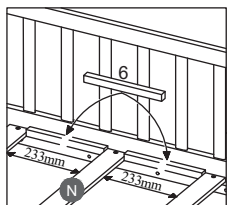

Note: Use Wood Block as a guidance distance between Bed Slats.

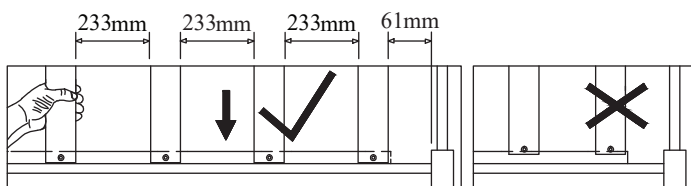

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.