





SOFT, DRY CLOTH

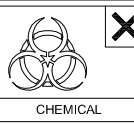

CHEMICAL

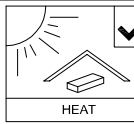

HEAT



KEEP DRY















HANDLE WITH CARE



DO NOT USE KNIFE

# ASSEMBLY INSTRUCTION

DESCRIPTION : 3 DOOR SHOE CABINET

<b>HARDWARE</b>	<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>	<b>E</b>	<b>F</b>	<b>G</b>	<b>H</b>	<b>I</b>	<b>J</b>	<b>K</b>	
	 CB SCREW M3.5X16MM 1X26	 CB SCREW M4X38MM 1X6	 NAIL 5/8 1X23	 3.5 KG MAGNET (1 HOLE) 3 SETS	 CB SCREW M3X12MM	 PVC SHELF SUPPORT 1X16	 DOOR SUPPORT SPRING 1X3	 MAS R4 1X1	 MAS L4 1X2	 ROUND PLASTIC LEG (PVC) 1X5	 MINIFIX 5654+5546 6 SETS	 L-KEY 1X1

