


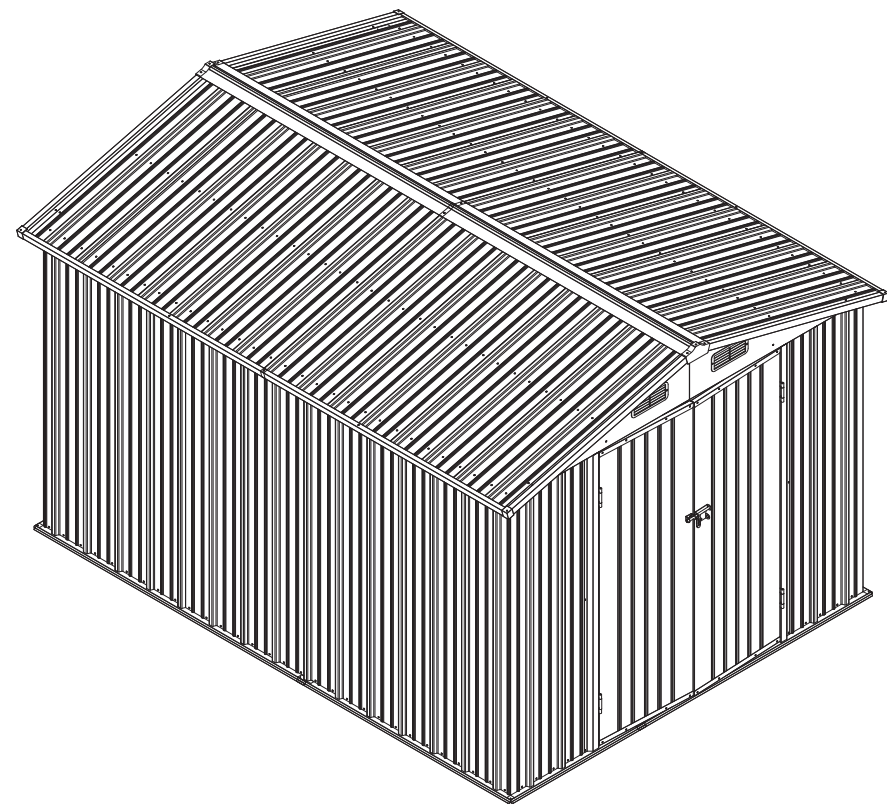


ASSEMBLY INSTRUCTIONS

METAL GARDEN SHED

SKU: T-PS23-0355A

BE
YOUR
LIFE BUILDER

www.patiowell.com

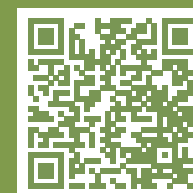

Patiowell
Metal Garden House
Installation Tutorial
[https://www.patiowell.com/
pages/video-t-ps23-0355a](https://www.patiowell.com/pages/video-t-ps23-0355a)


 saleservice@patiowell.com

SITE PREPARATION


Level the ground surface.



Recommendation: Construct a wooden or concrete base as a foundation.

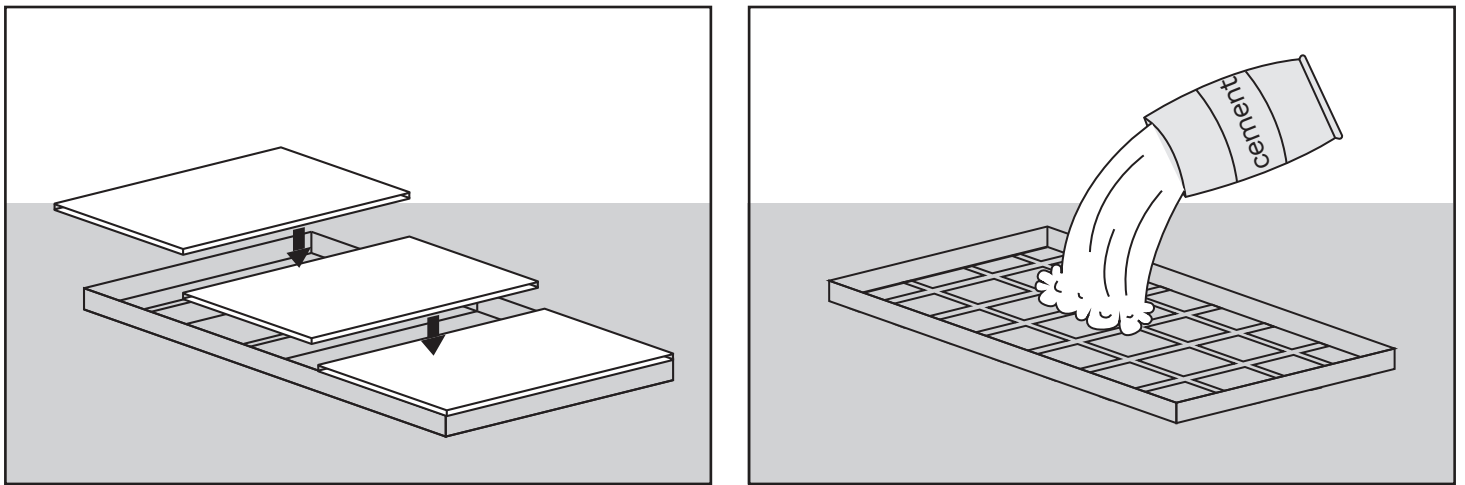

The external dimensions of the product :

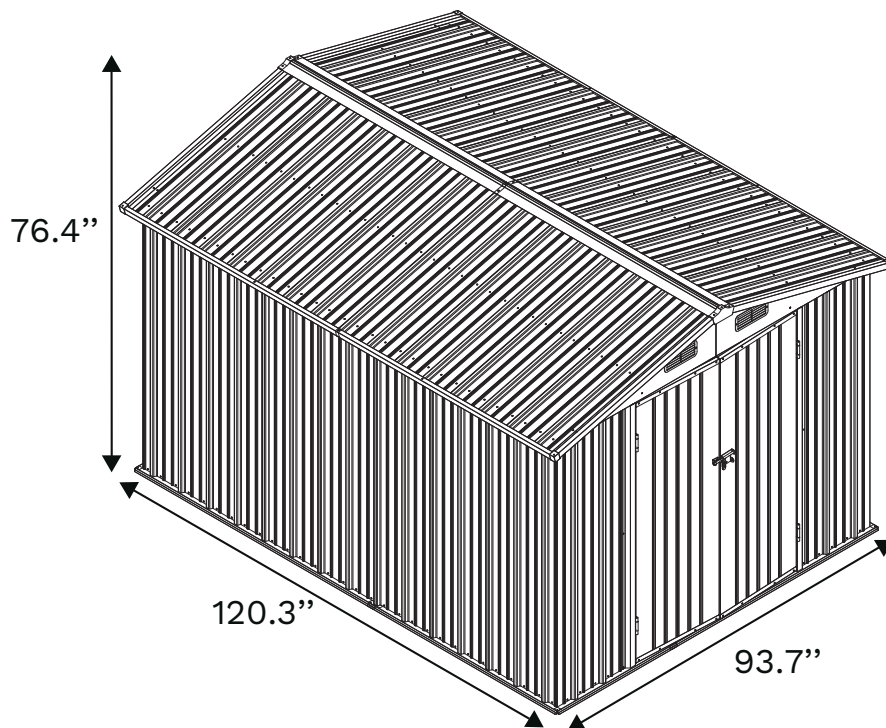

BEFORE STARTING ASSEMBLY


Remove all of the pieces from the 3 packages and spread them out on the ground. Before installation, please check the type and quantity of parts first.

It is recommended to use a clean work surface to spread the parts out and for pre-assembly steps. Review all instructions before you begin, continue to refer to instructions during assembly.

Be sure to follow all steps thoroughly.

Please prepare these components in advance at the beginning of each stage.

REQUIRED TOOLS

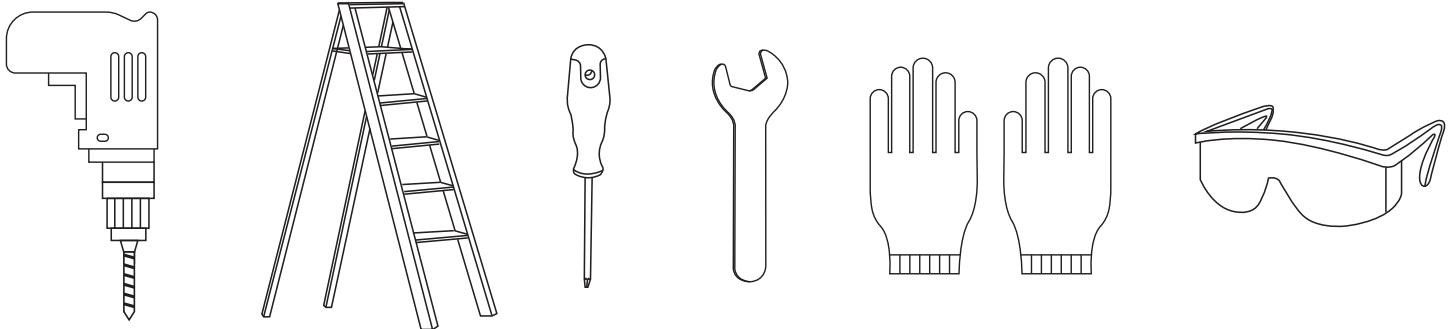

CAUTION

Some parts have steel edges. Please be careful when handling components. Always wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your shed. Do not attempt assembly on days with strong winds or low temperatures.









Requires two people and takes 2-3 hours for Installation.
Recommended to wear gloves to avoid scratches.
Please read the manual carefully before installation.

**DO NOT RETURN YOUR UNIT
TO THE STORE**








Contact us first

saleservice@patiowell.com







FOUNDATION

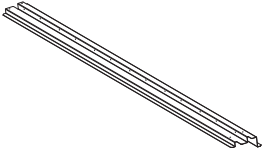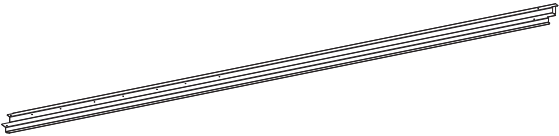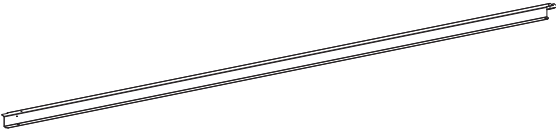 1 X2	 2 X2
 BE1L X1	 BE1 X1
 BE2L X1	 BE2 X1









PLATES

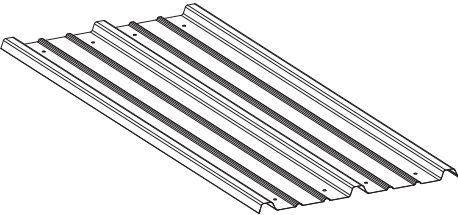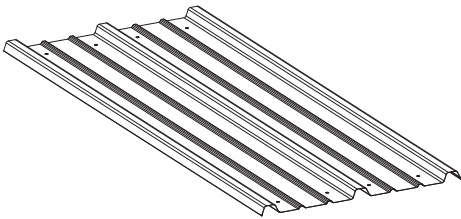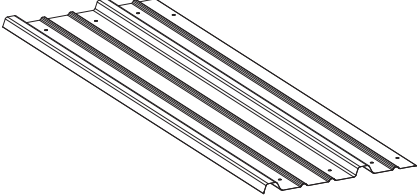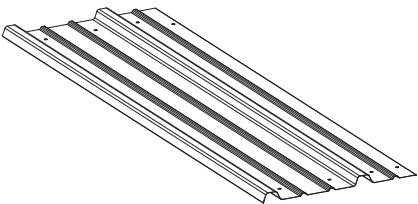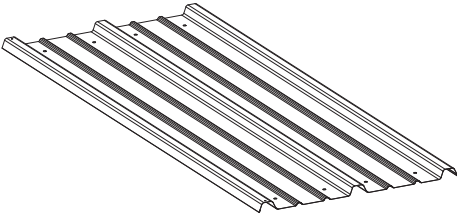 W1A X18	 WS2A X4	 PE3 X4
		 PE4 X4
 WS3A X2		 PE5 X2
 PE6 X2		 P4 X2




PLATES

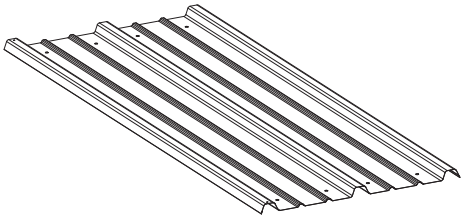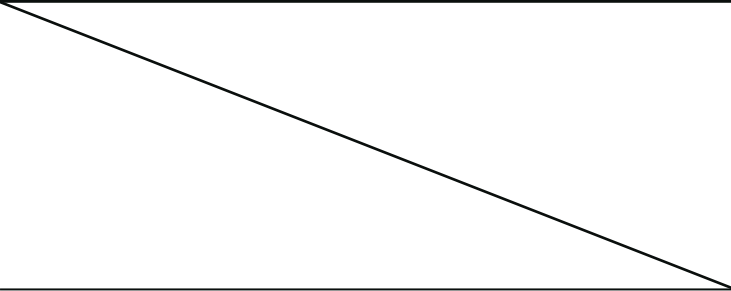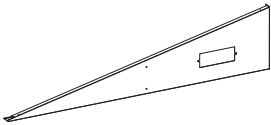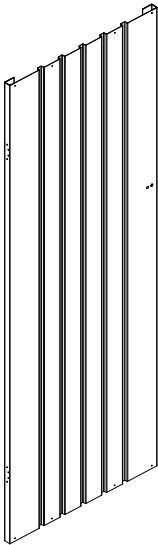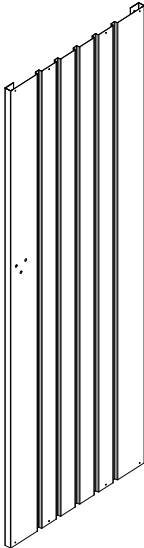 P5 X2	
 A3 X2	 A4 X2
 DLA X1	 DRA X1




STRIPS

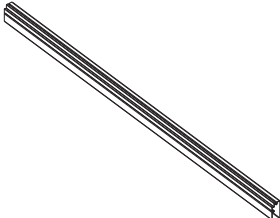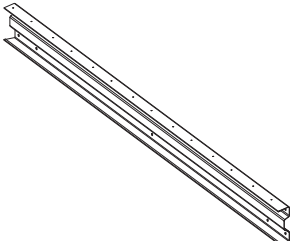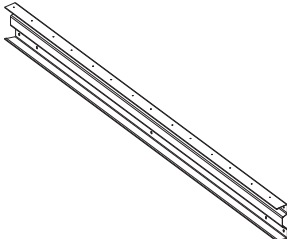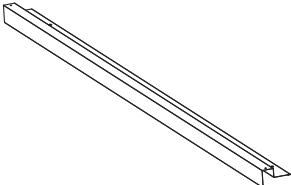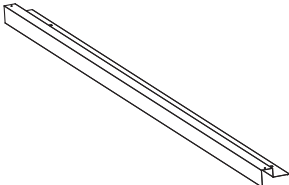		 DX2 X4
ULA X1	UR1 X1	 7 X1
 8 X1	 9 X4	
 10L X1	 10R X1	
 13 X4	 14 X4	
 M9 X2	 M10 X2	







STRIPS

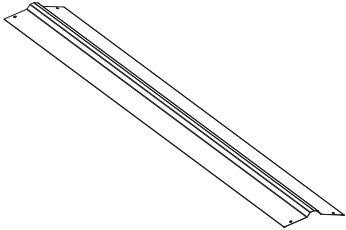
 17 X2		 18 X2	
 19 X2		 20 X4	
 C4L X2	 C5 X4	 C4R X2	

STANDARD



 DG X1	 DF X1	 DC X2	 DH X4
 C2 X4	 GF X4	 GR X2	 GE X2
 GS X2	 GC X4	 S1 X104	 V2 X418

SCREW

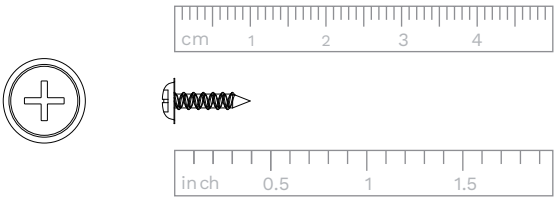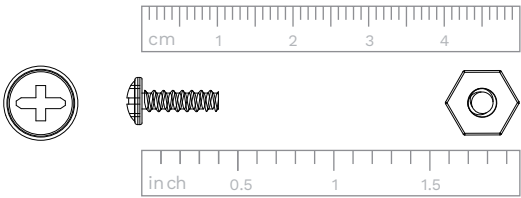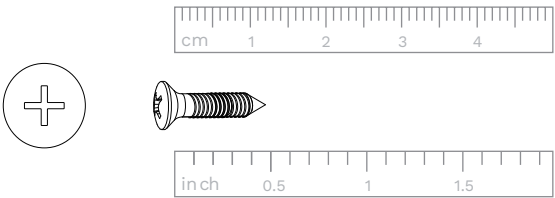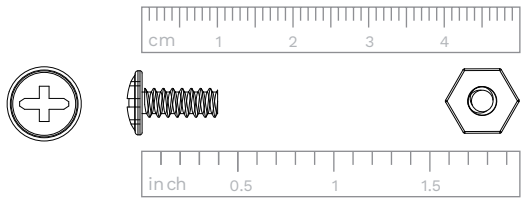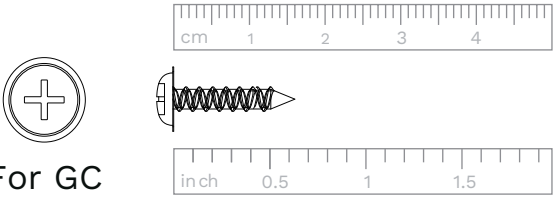
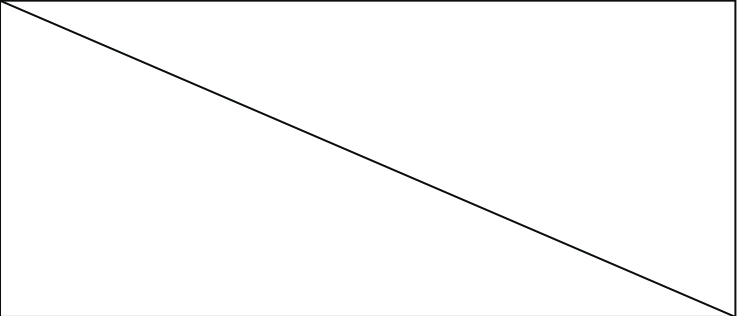
 F1(X487) M4*10	 F2(X54) M4*10
 F3(X32) M5*12	 F4(X5) M6*10
 For GC F5(X4) M4*16	

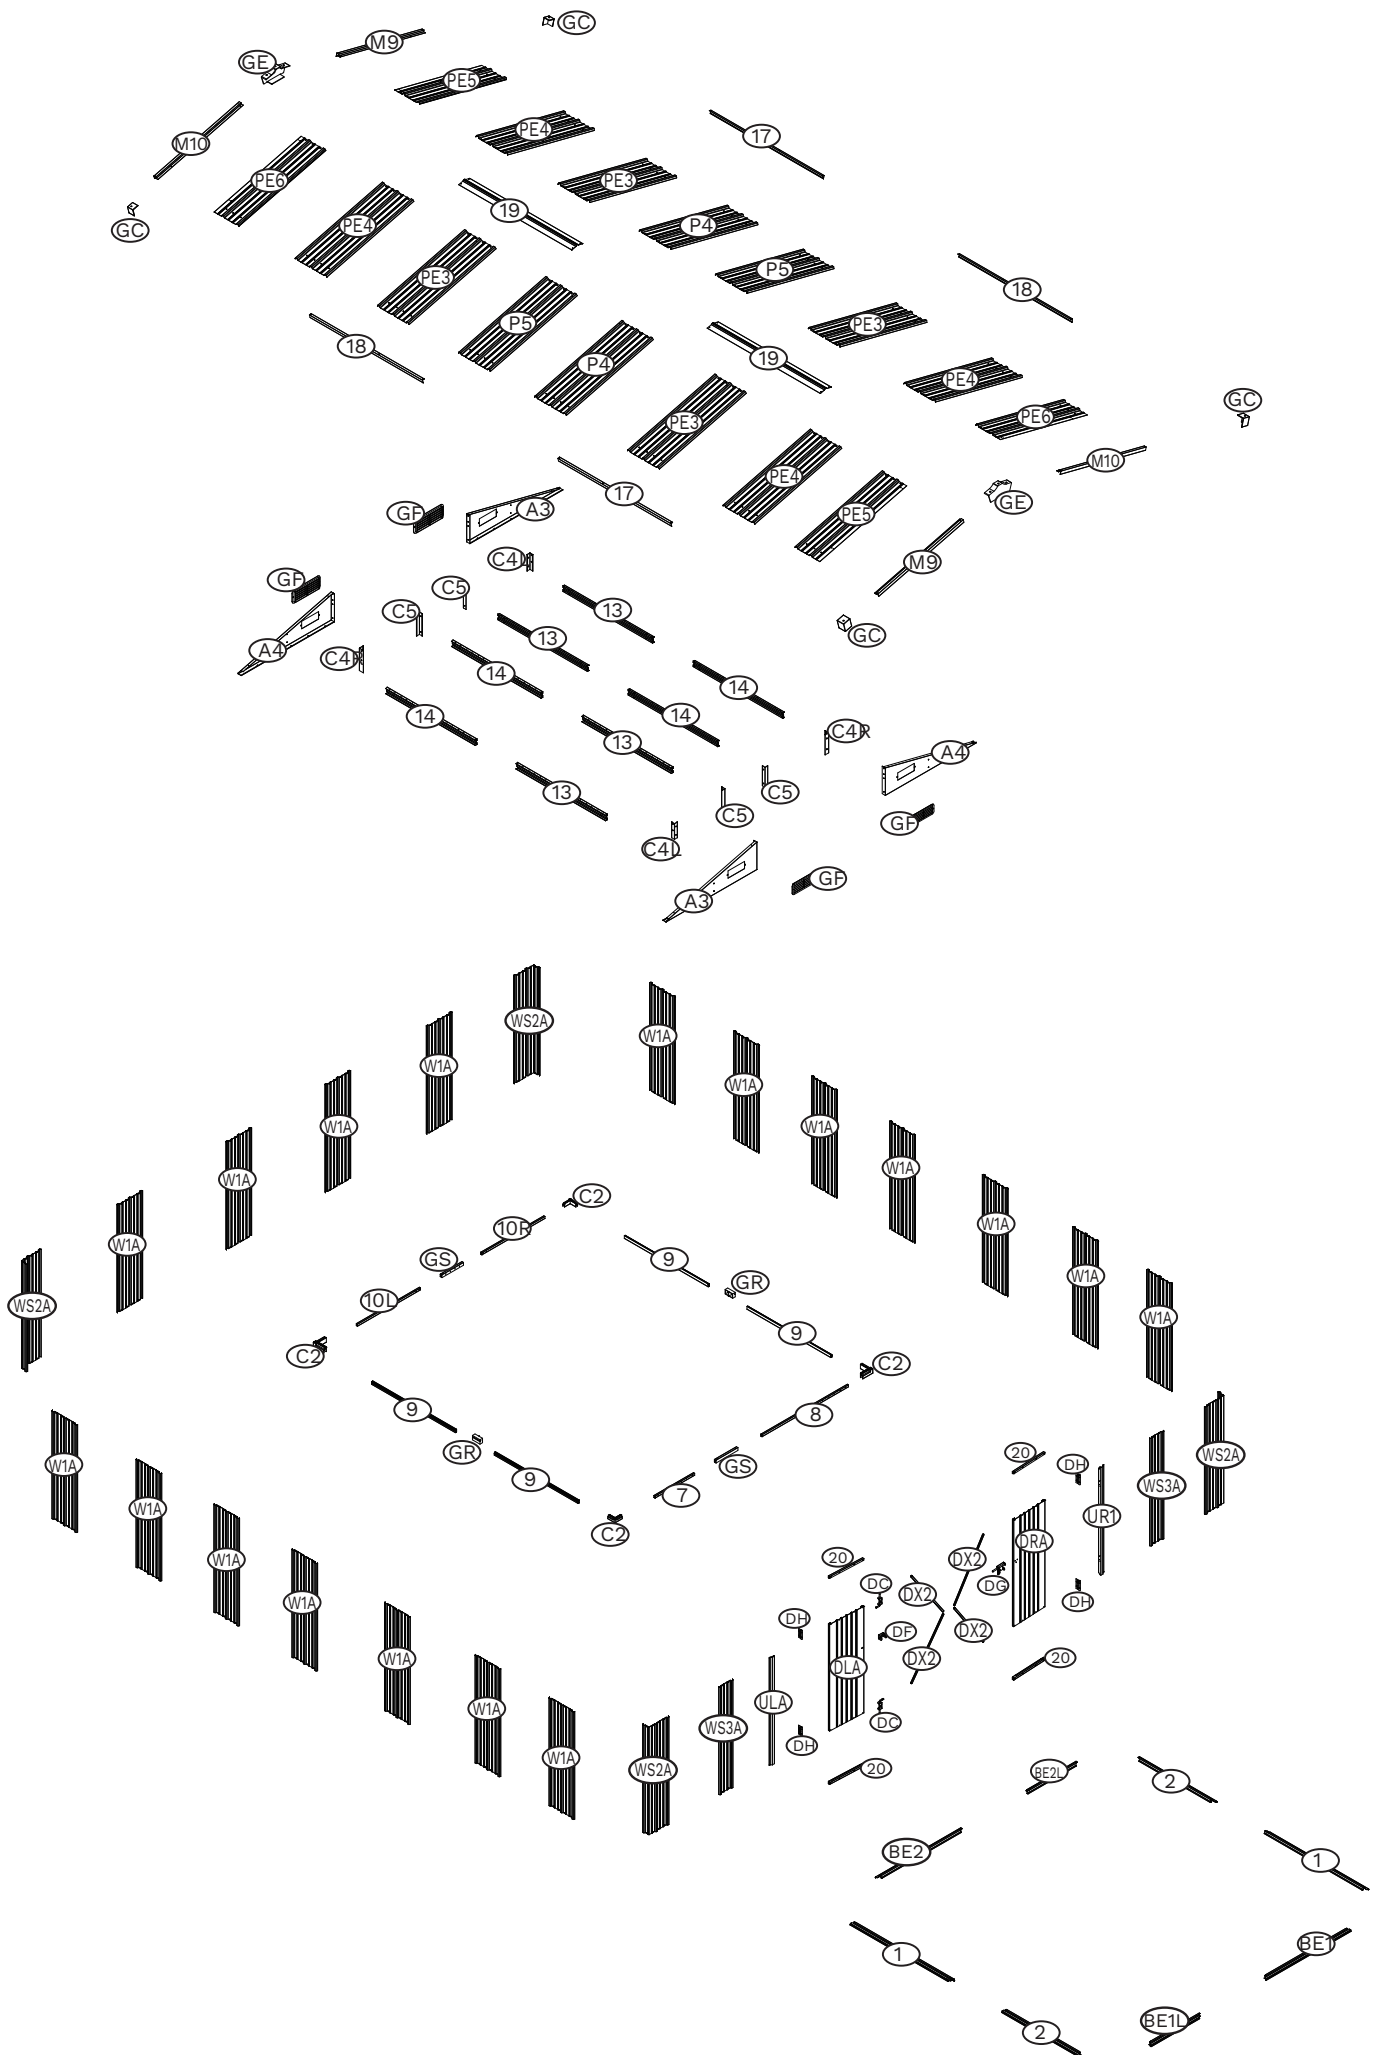


STEP 1

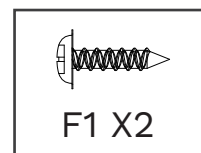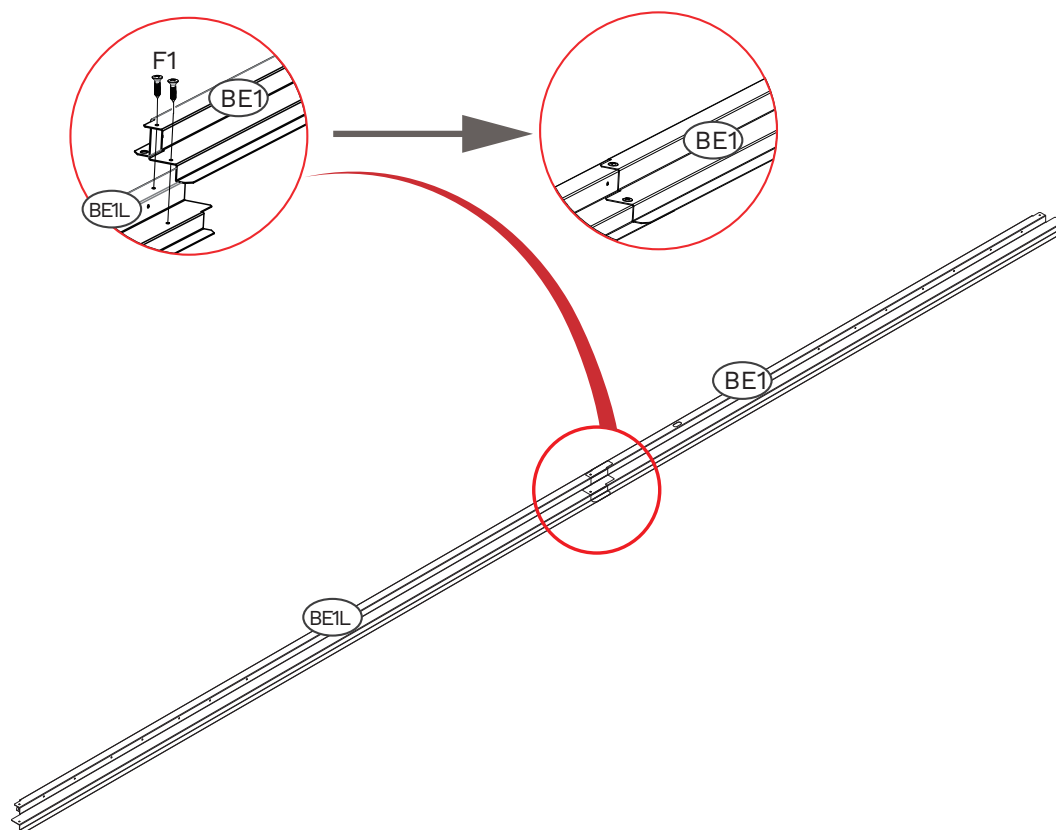


STEP 2

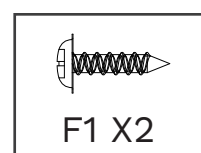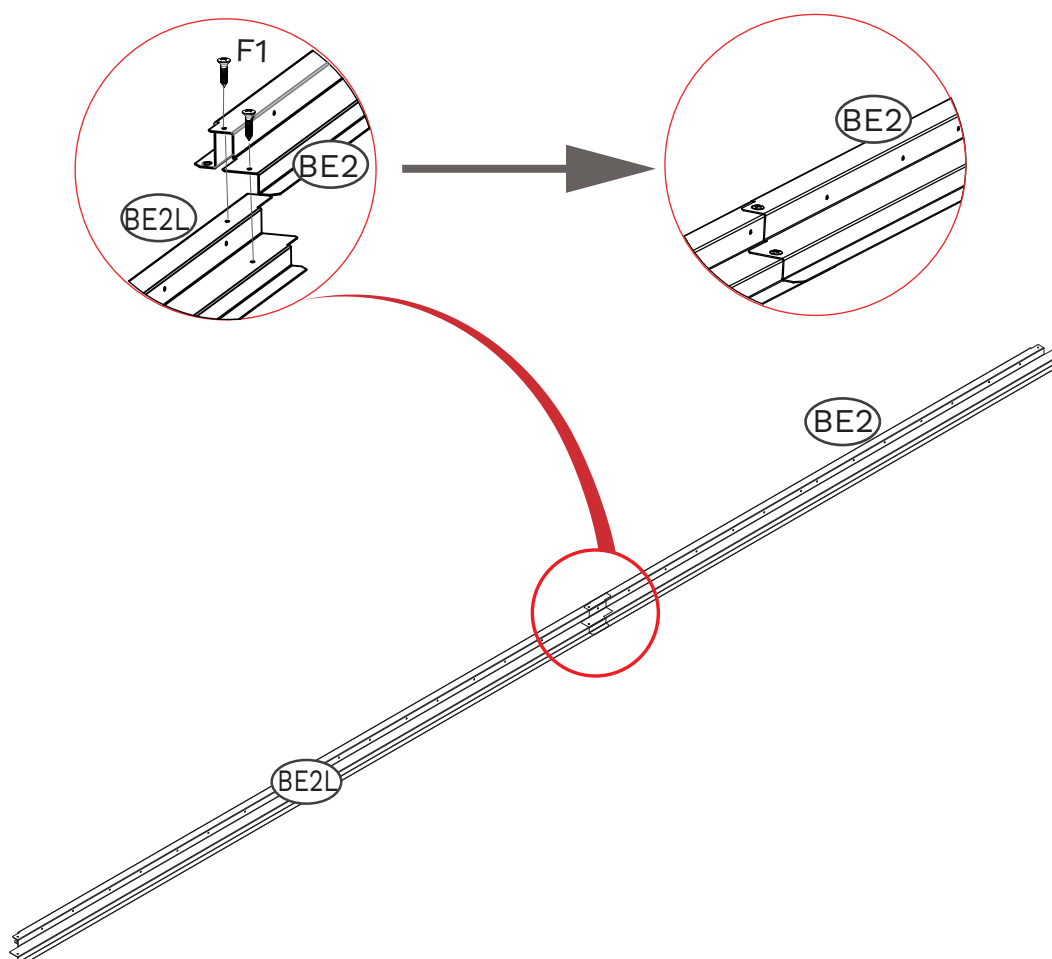


STEP 3

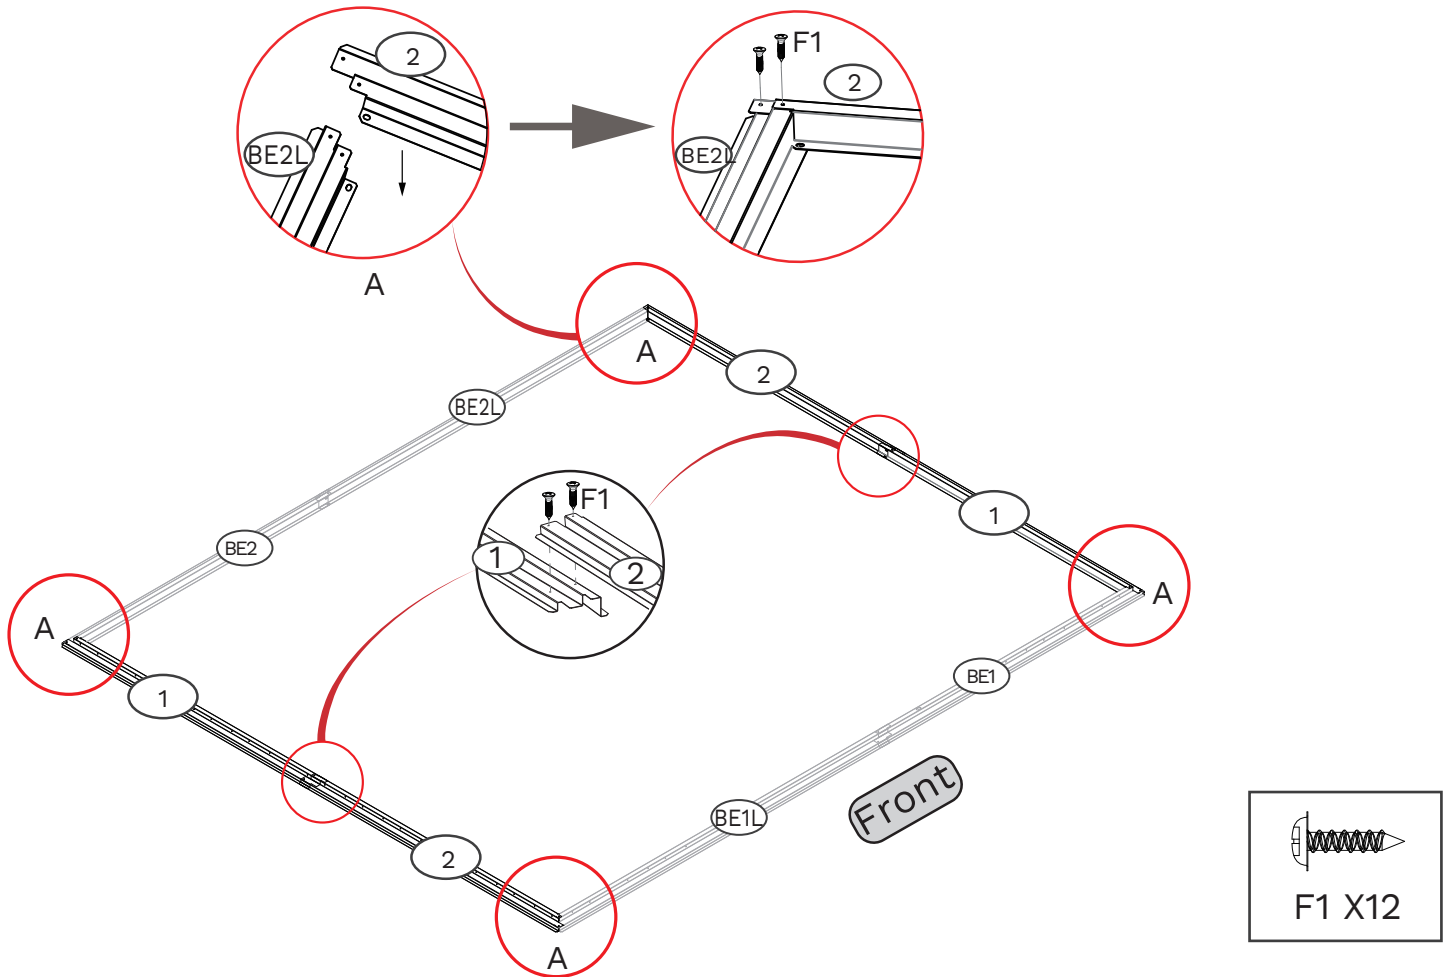


STEP 4

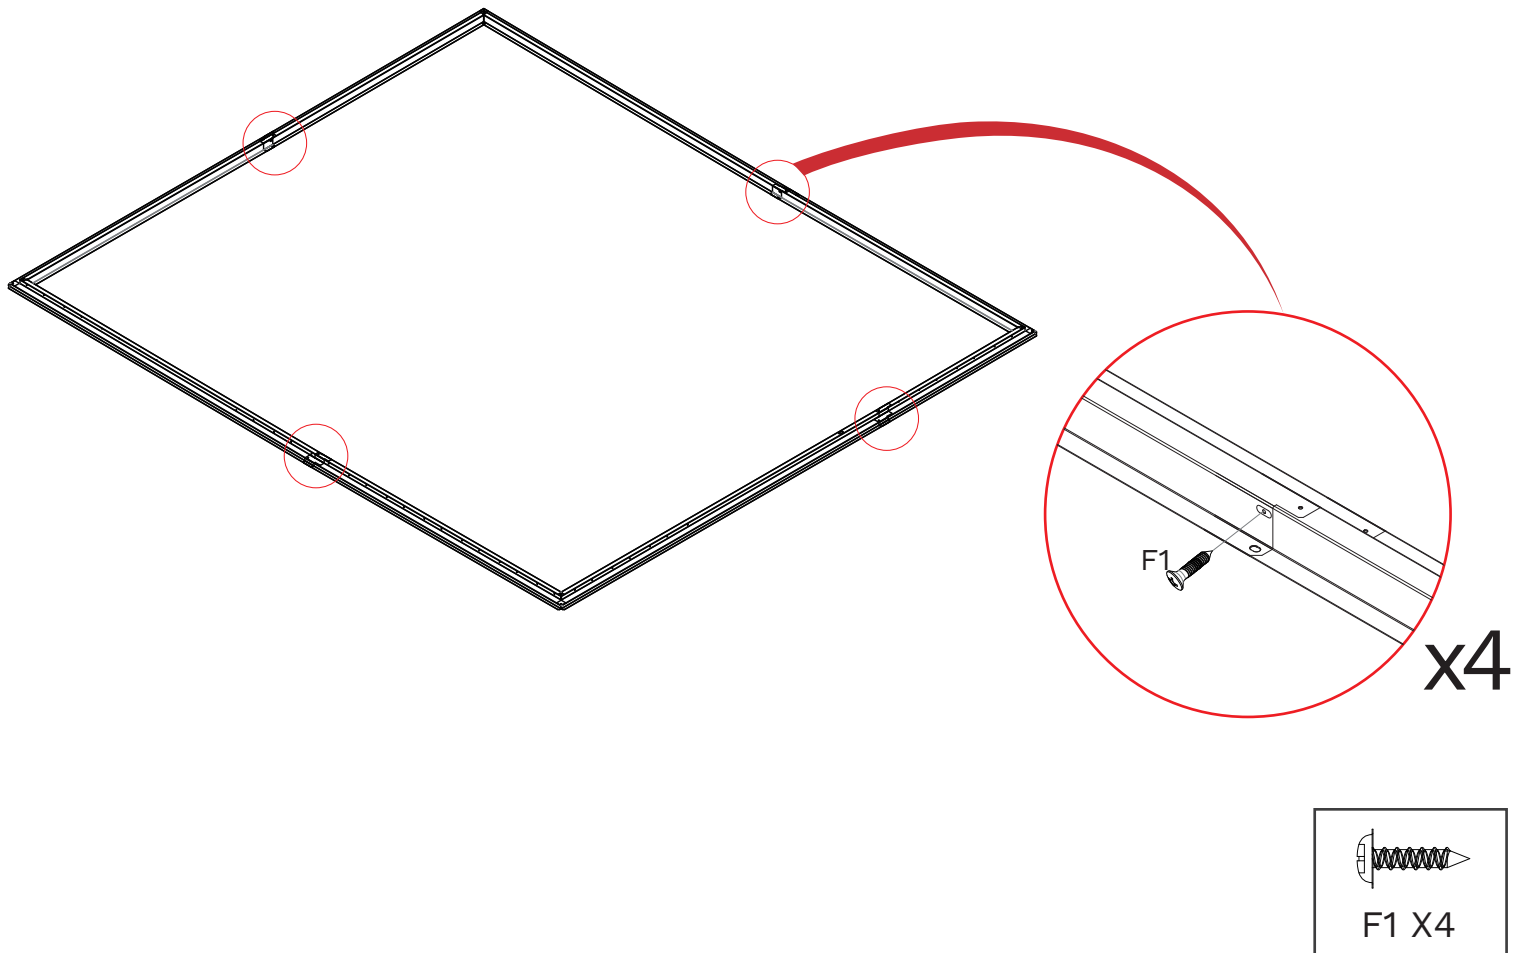


STEP 5

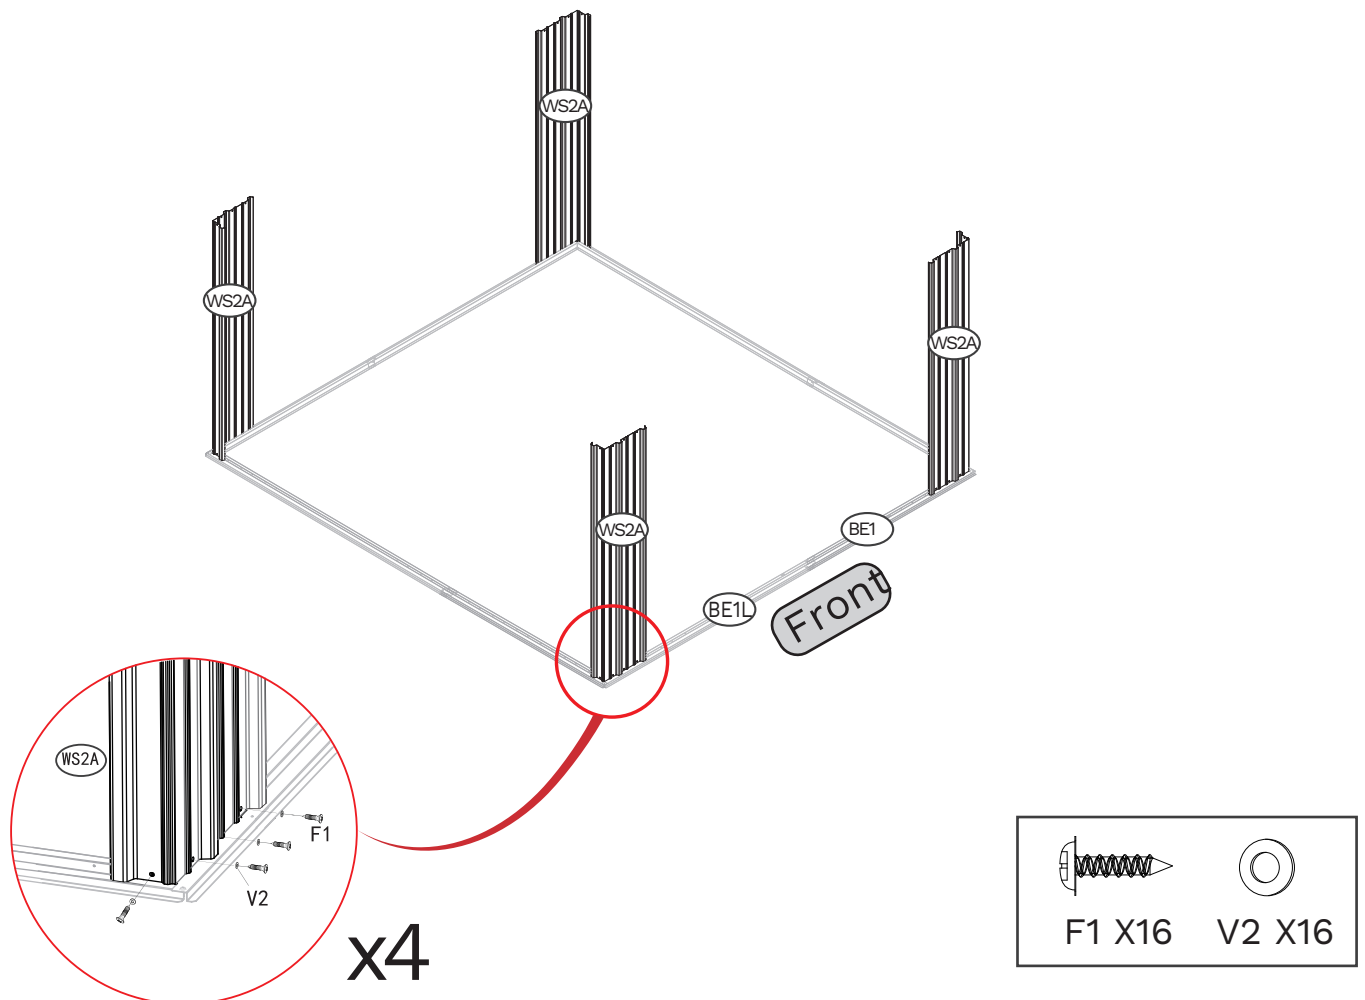


STEP 6

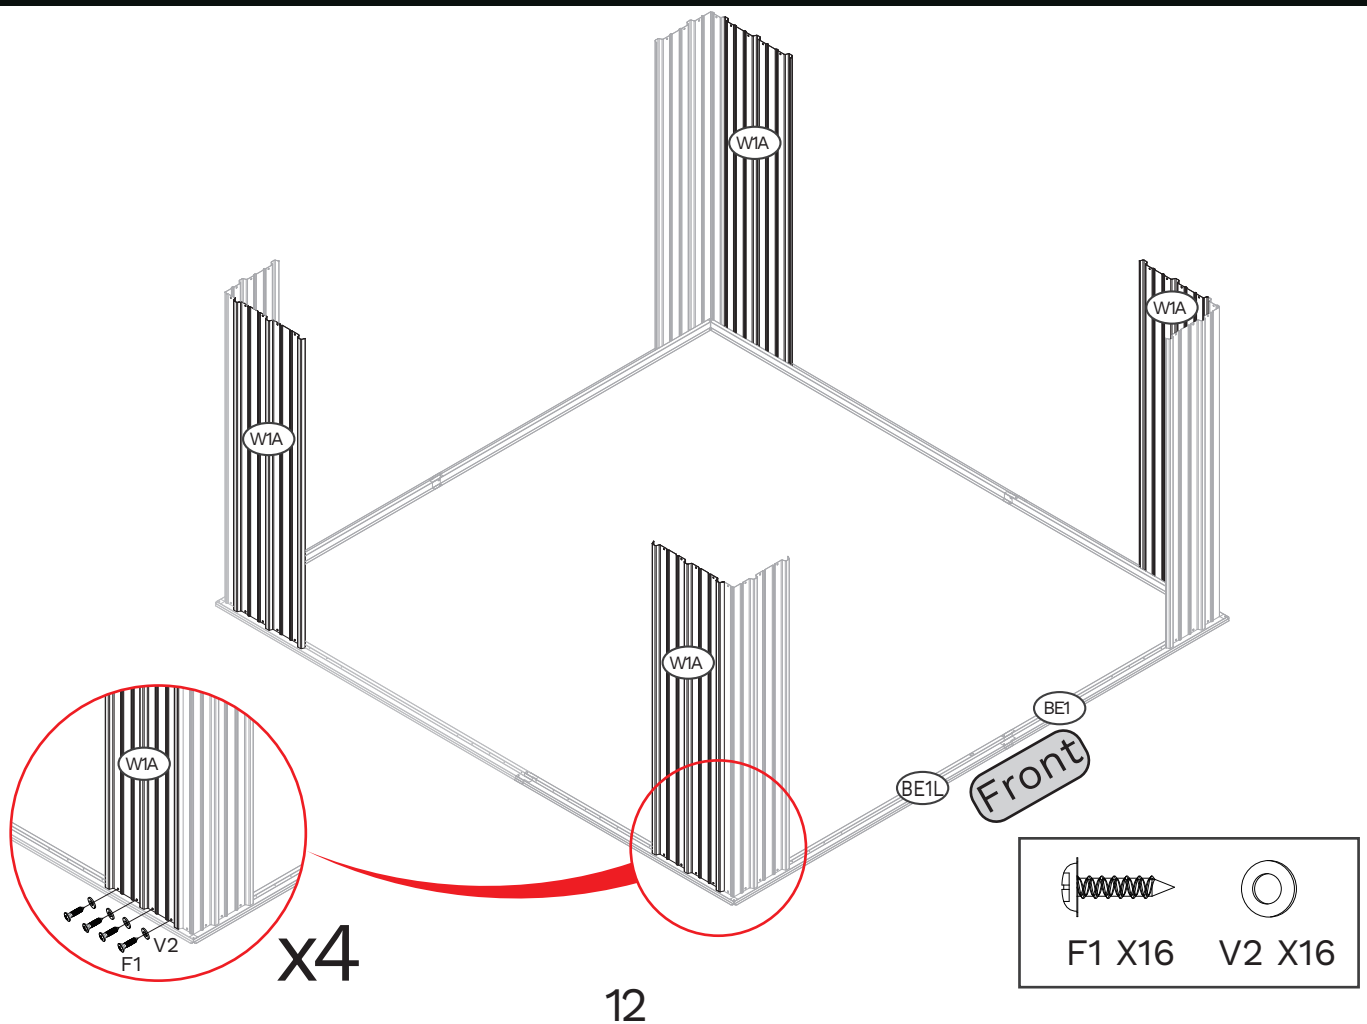


STEP 7

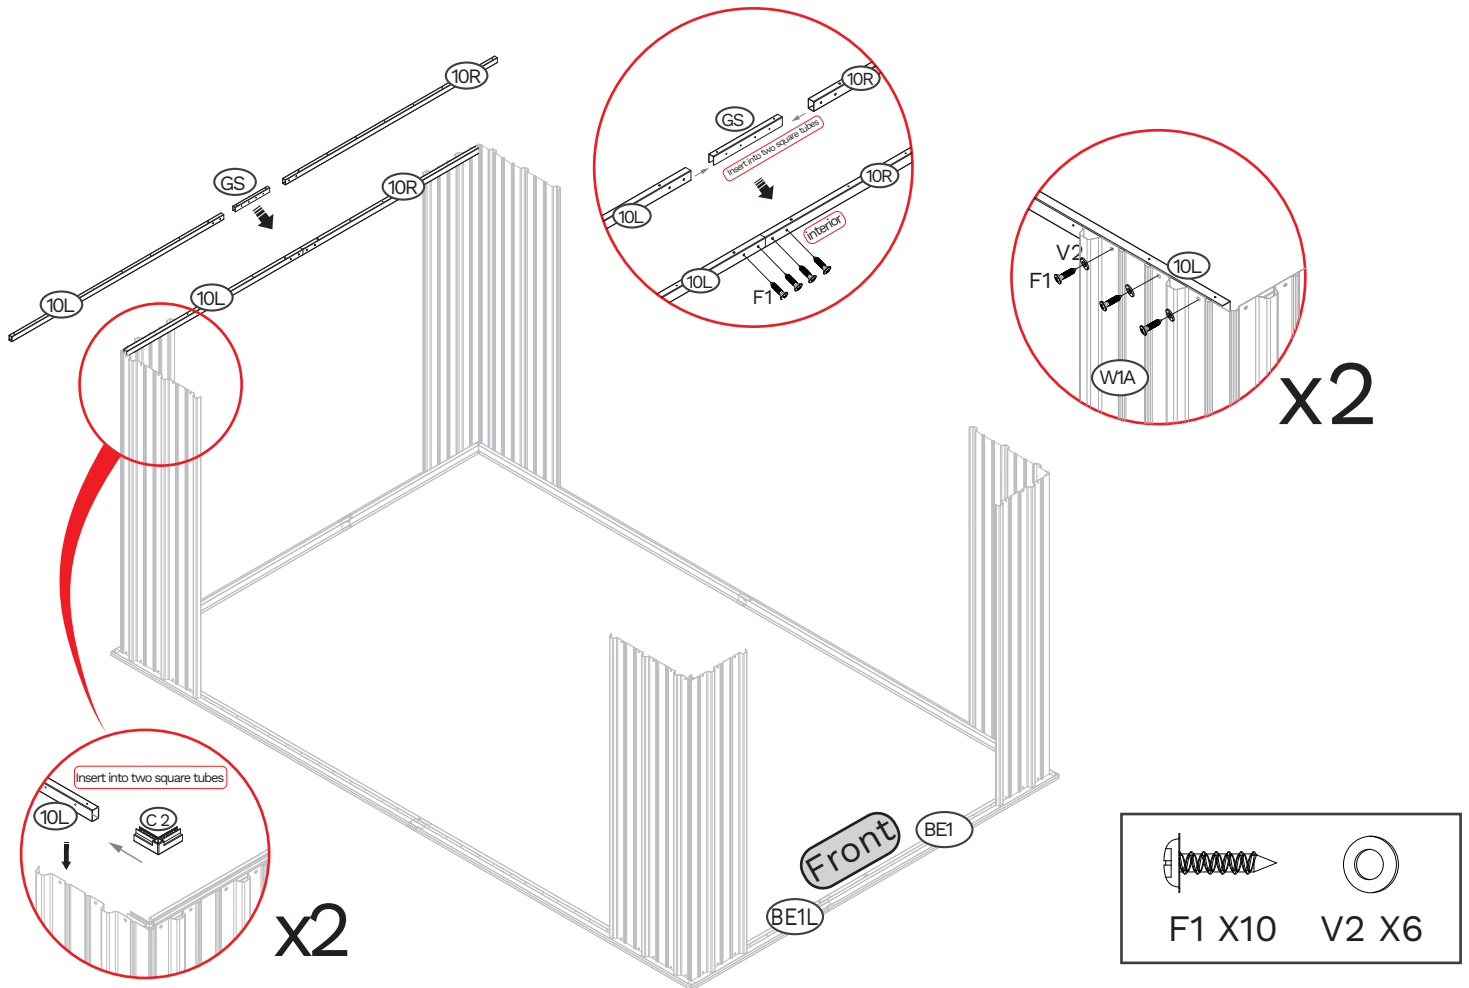


STEP 8

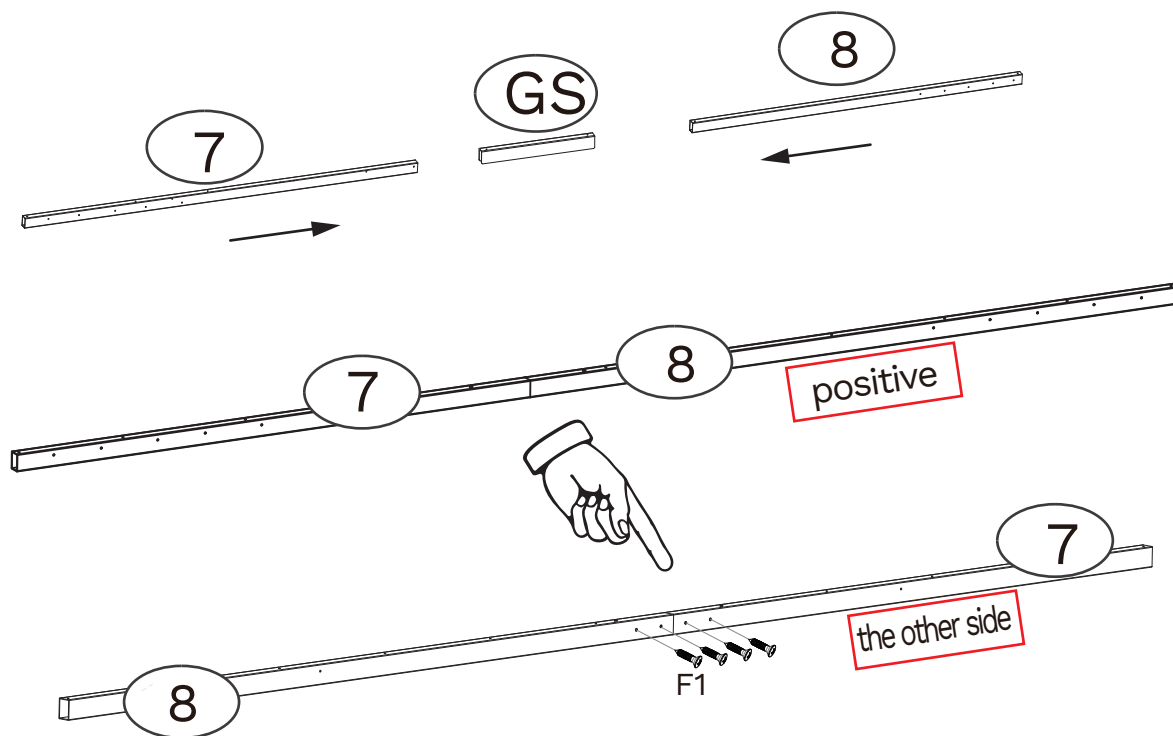



STEP 9

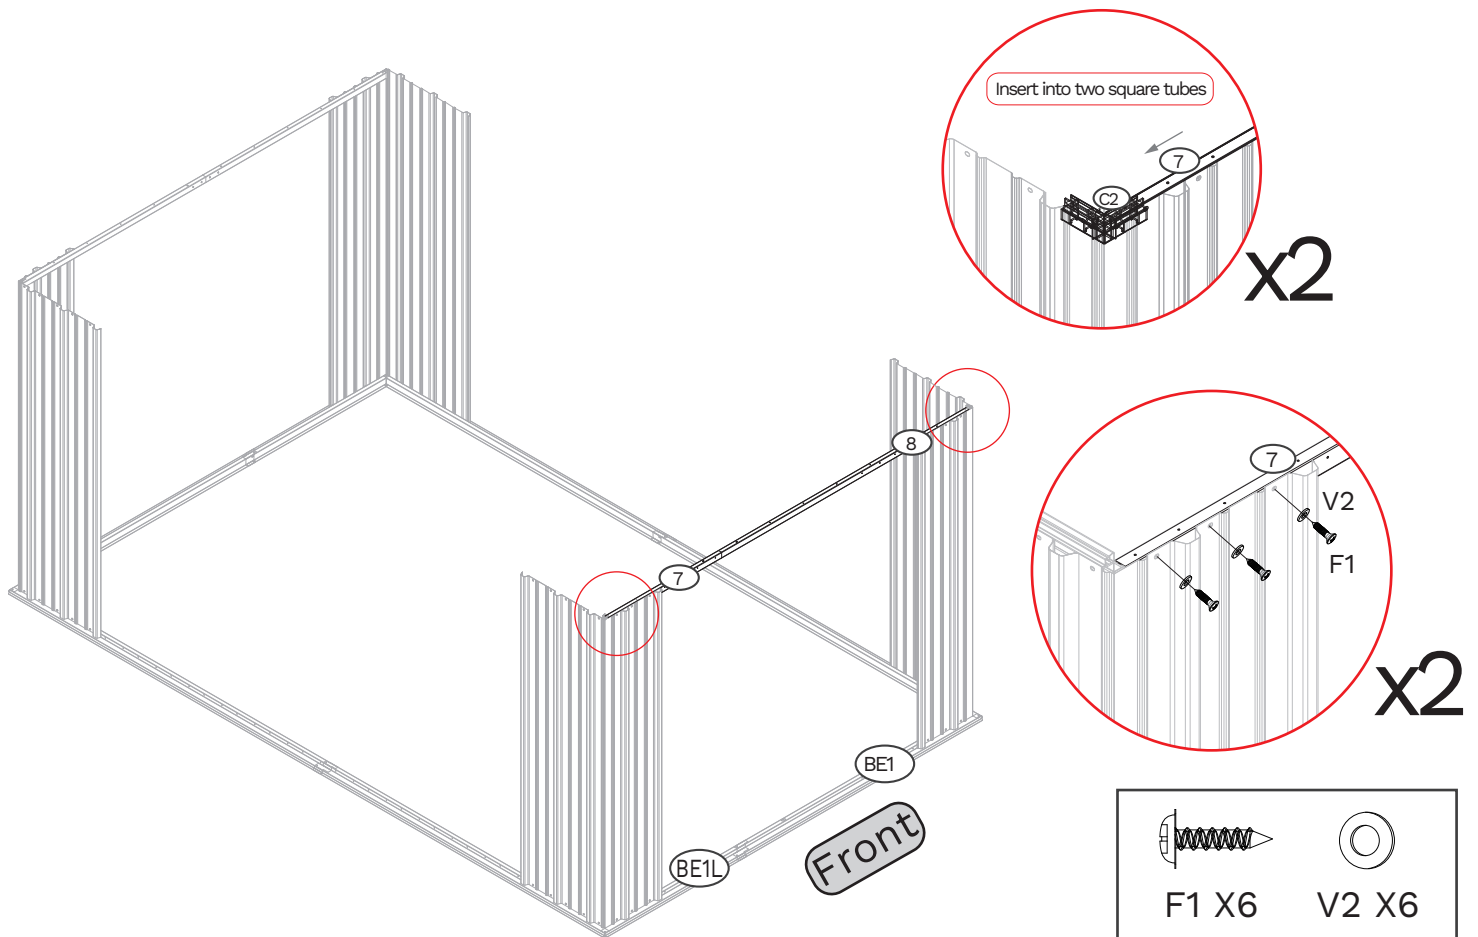




STEP 10

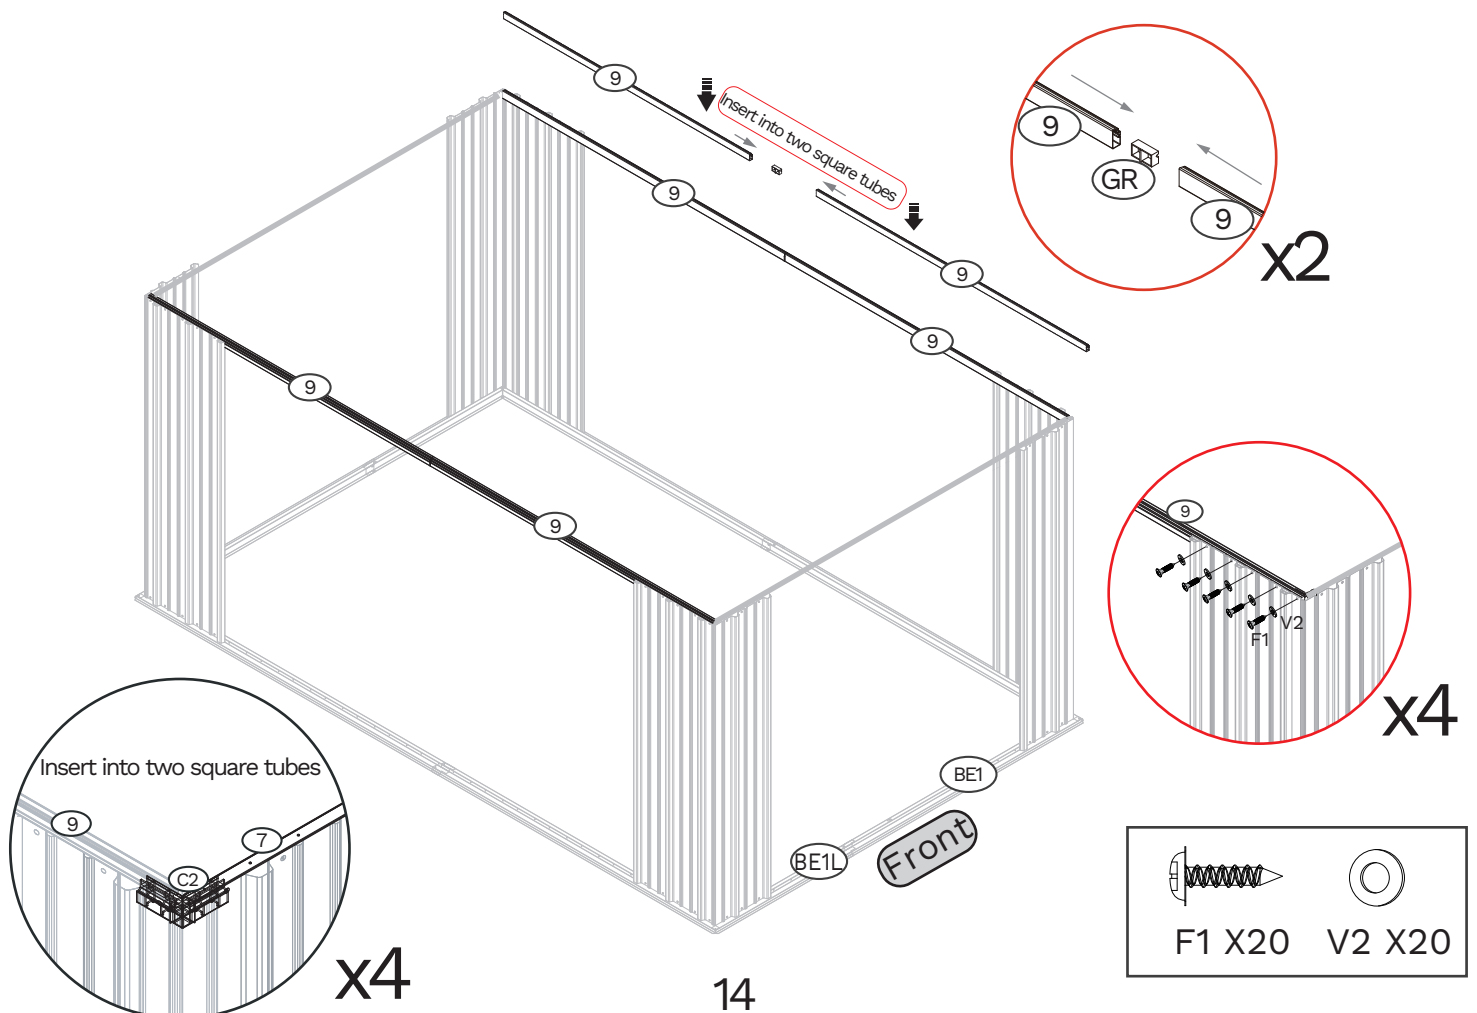



STEP 11

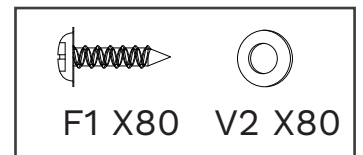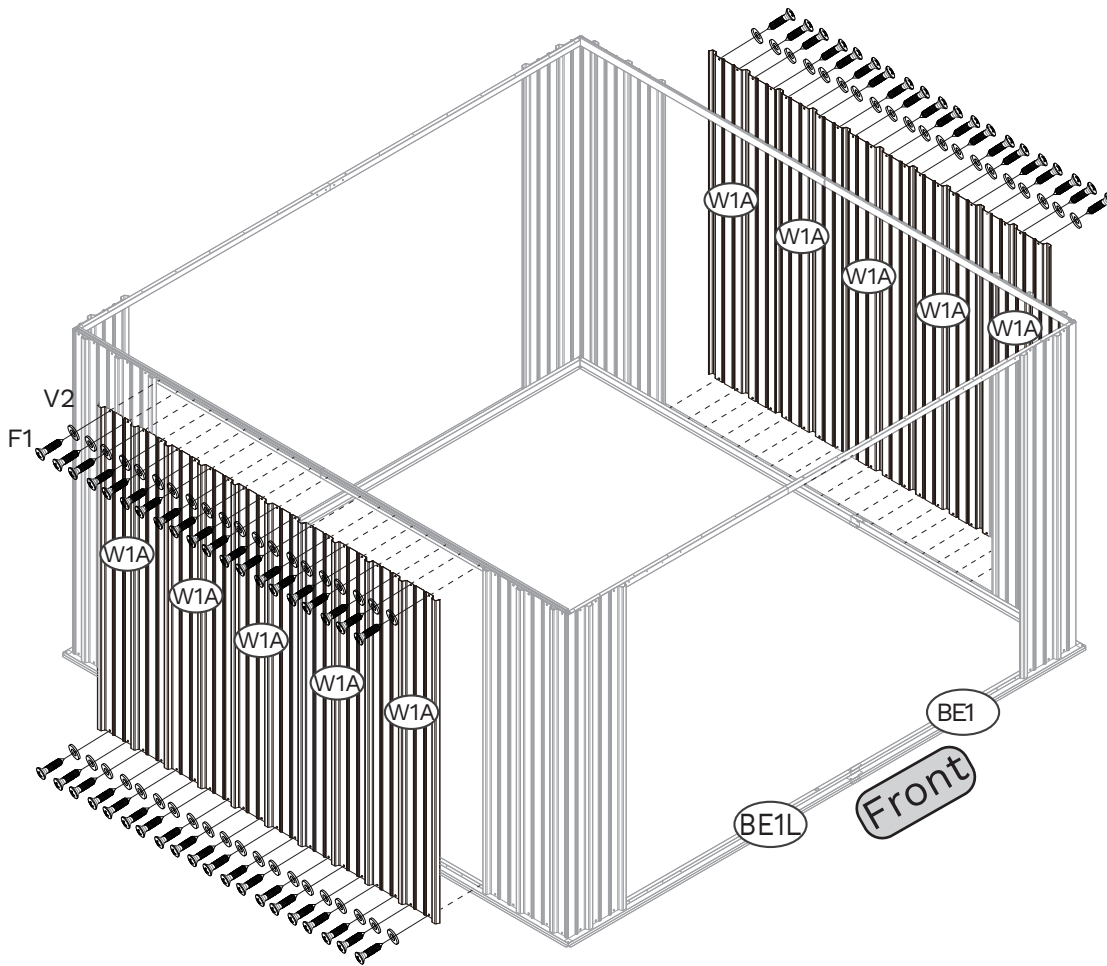




STEP 12

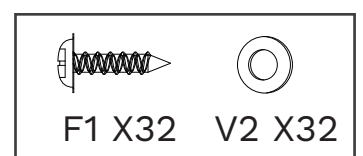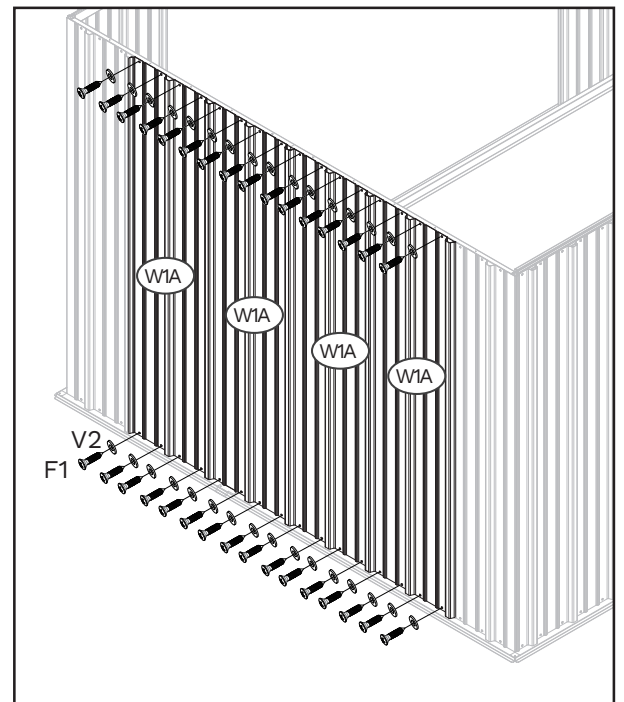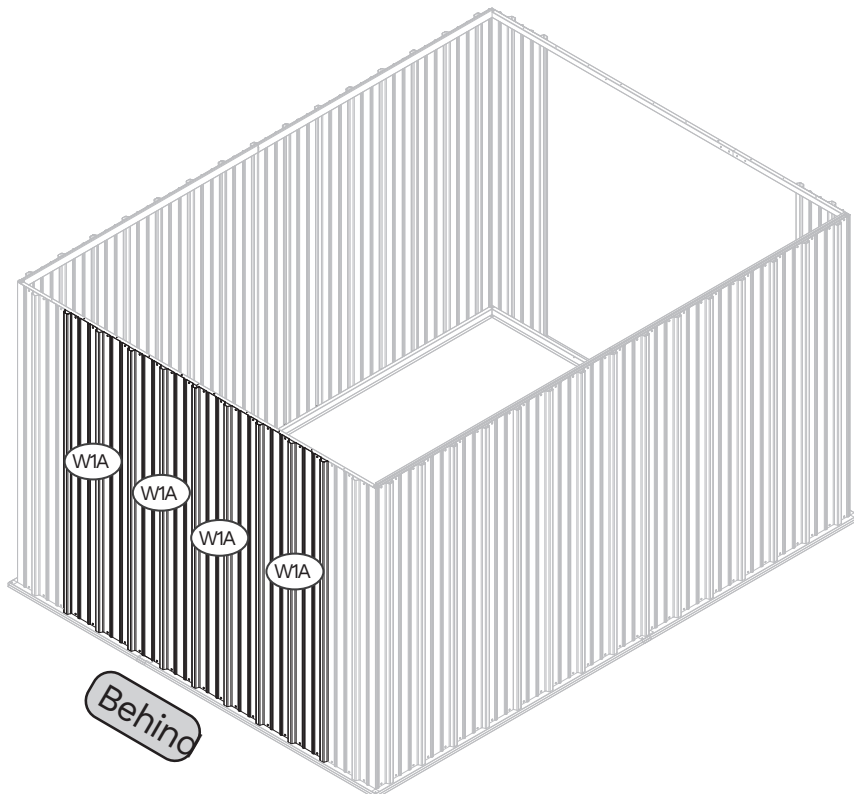


STEP 13

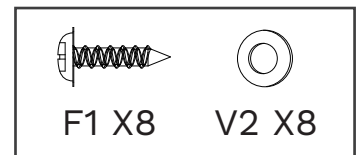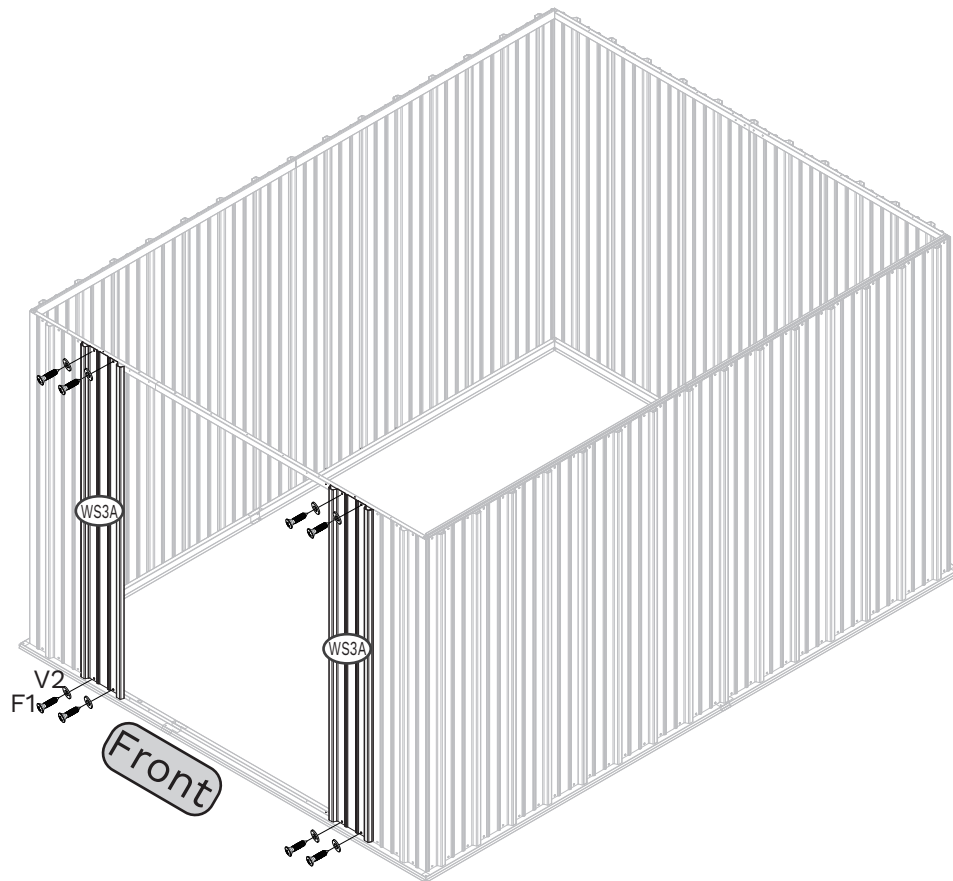


STEP 14

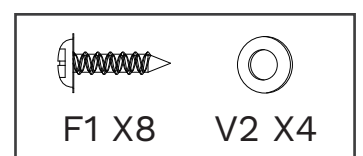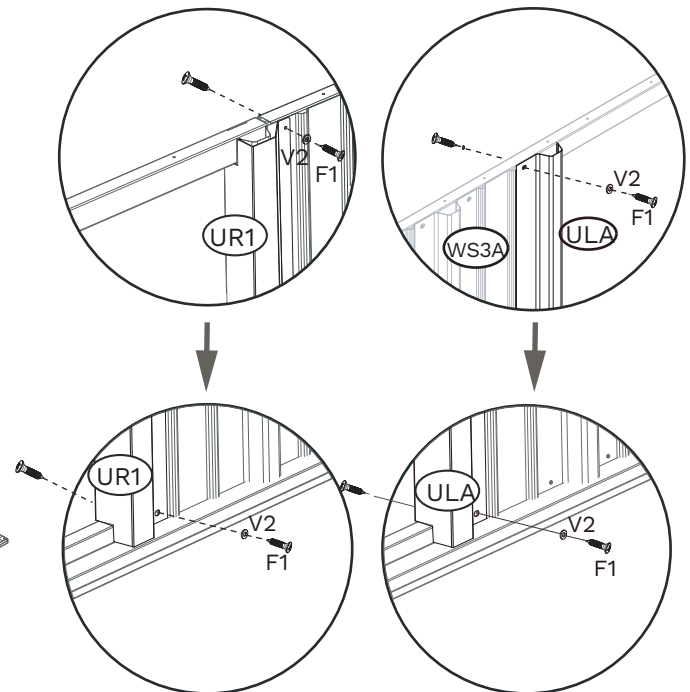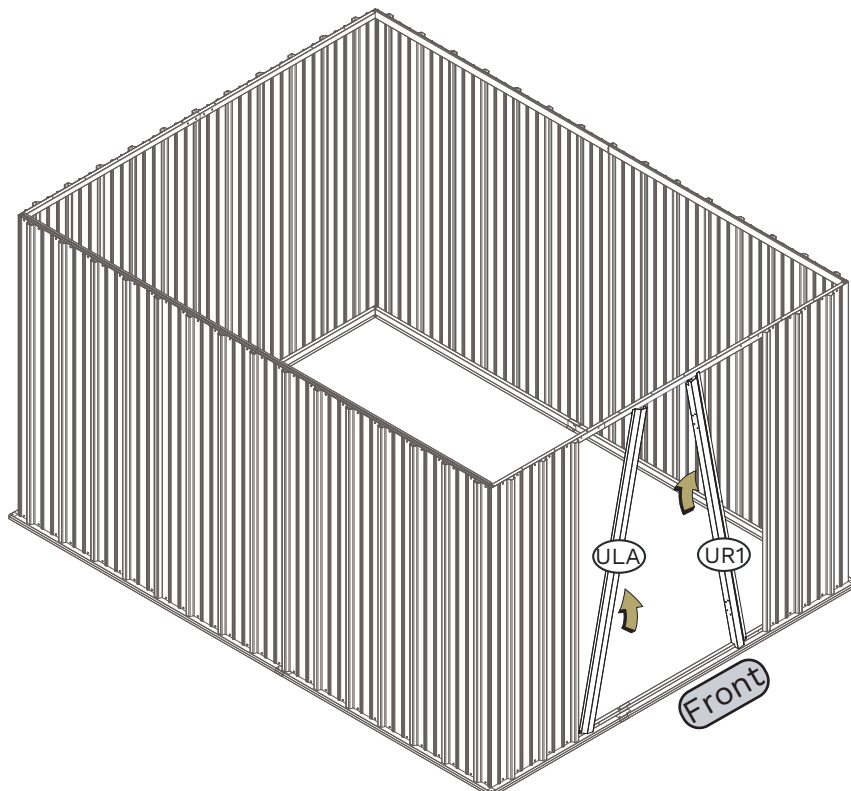

STEP 15

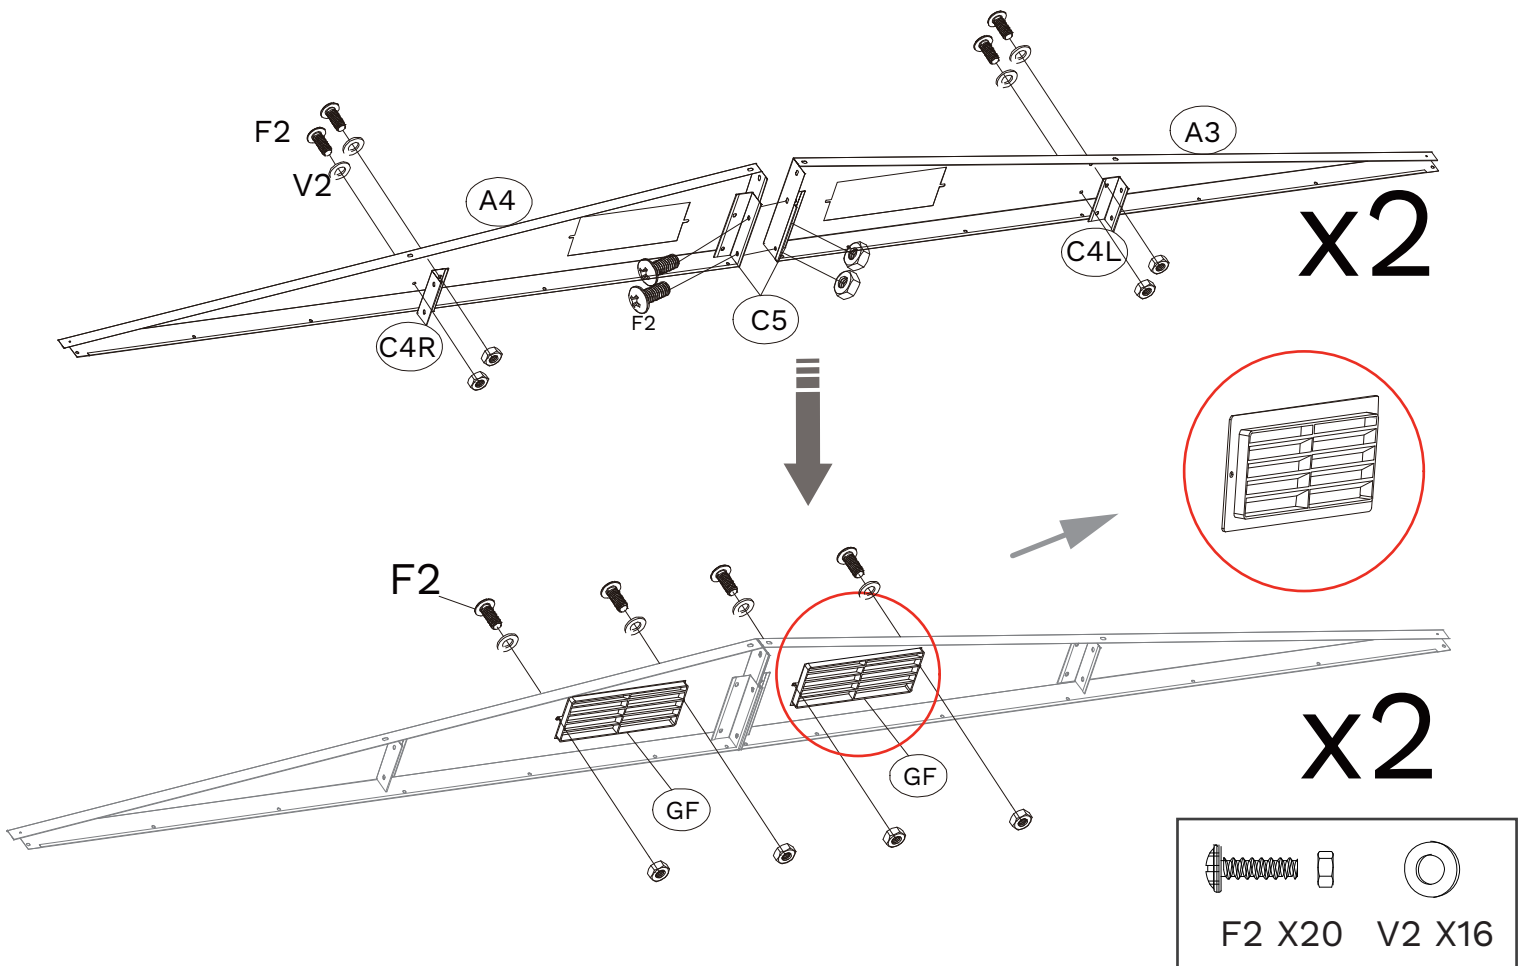


STEP 16

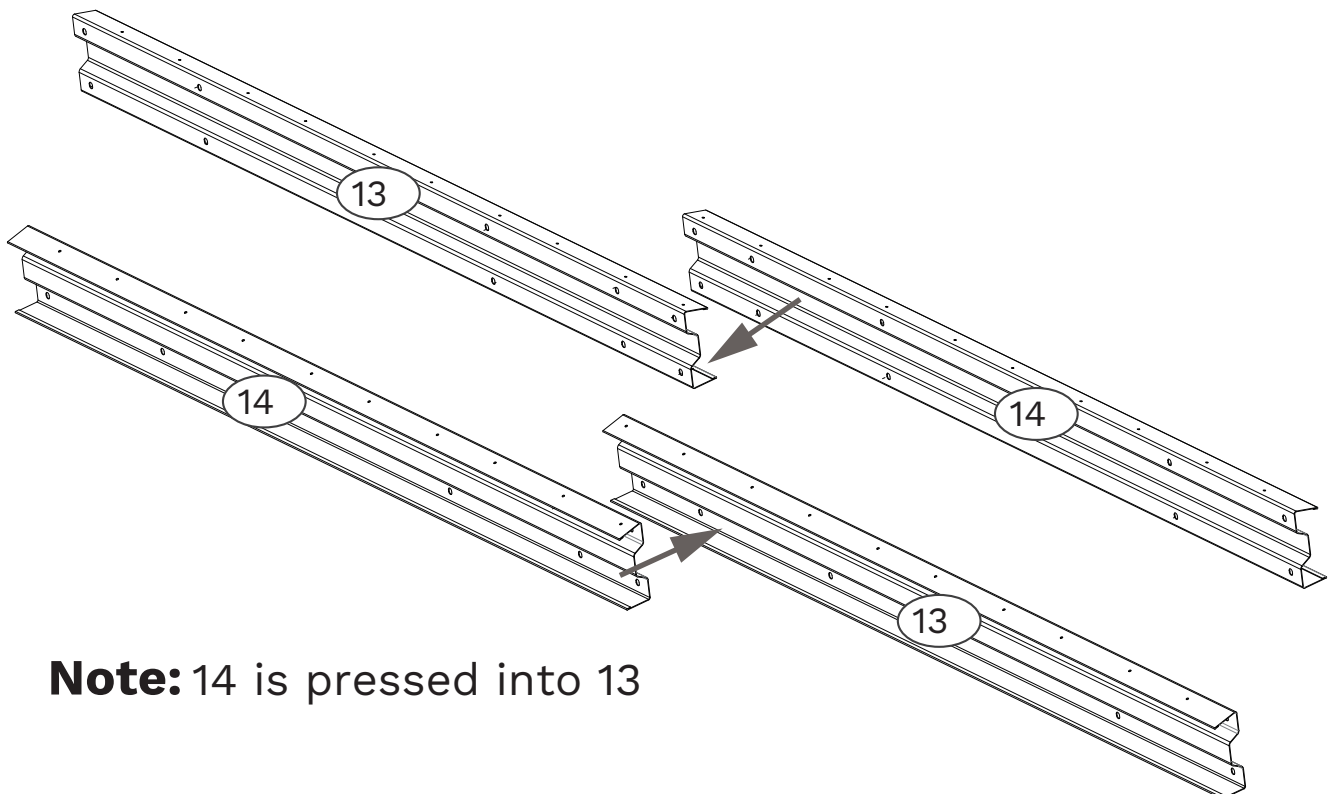

Note: 14 is pressed into 13

STEP 17


Don't tighten these two screws too tightly

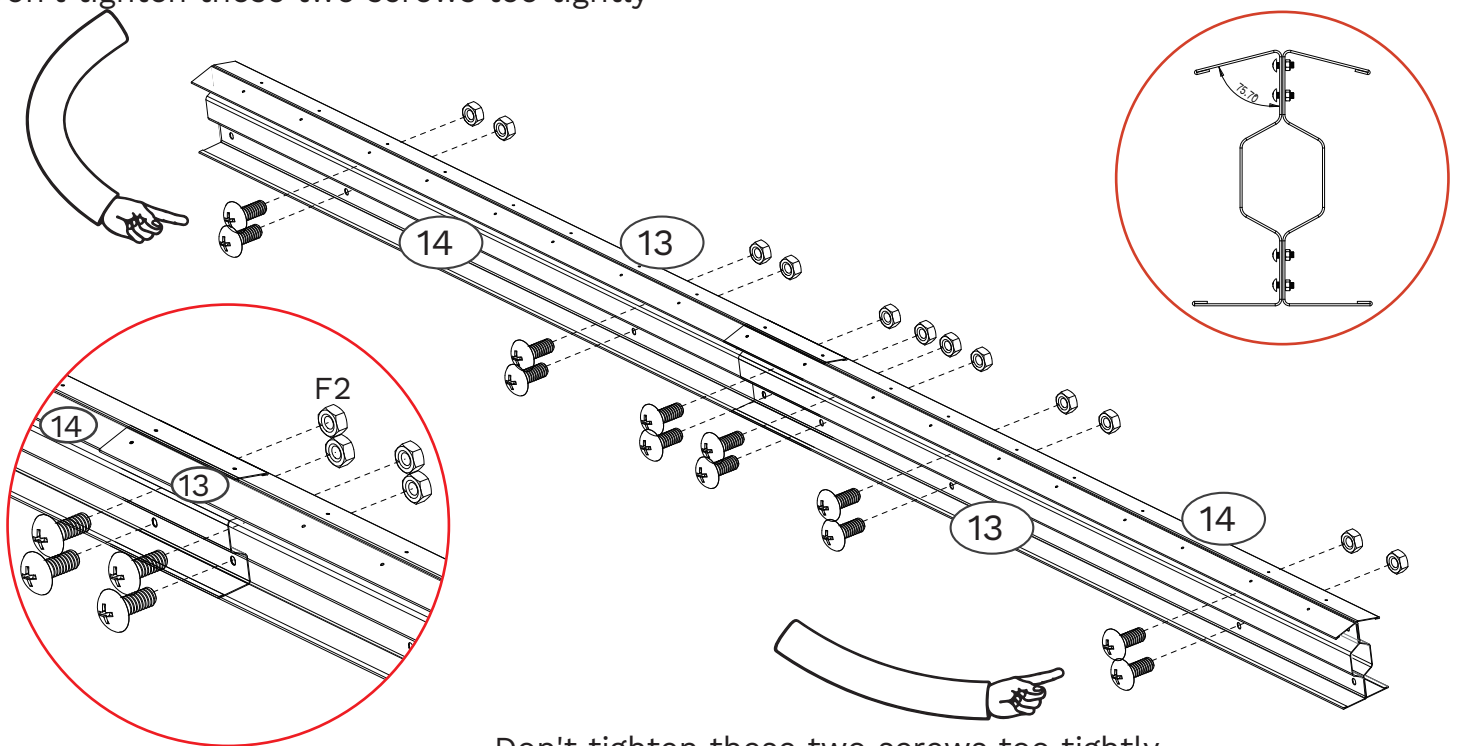

Don't tighten these two screws too tightly

F2 X12



STEP 18

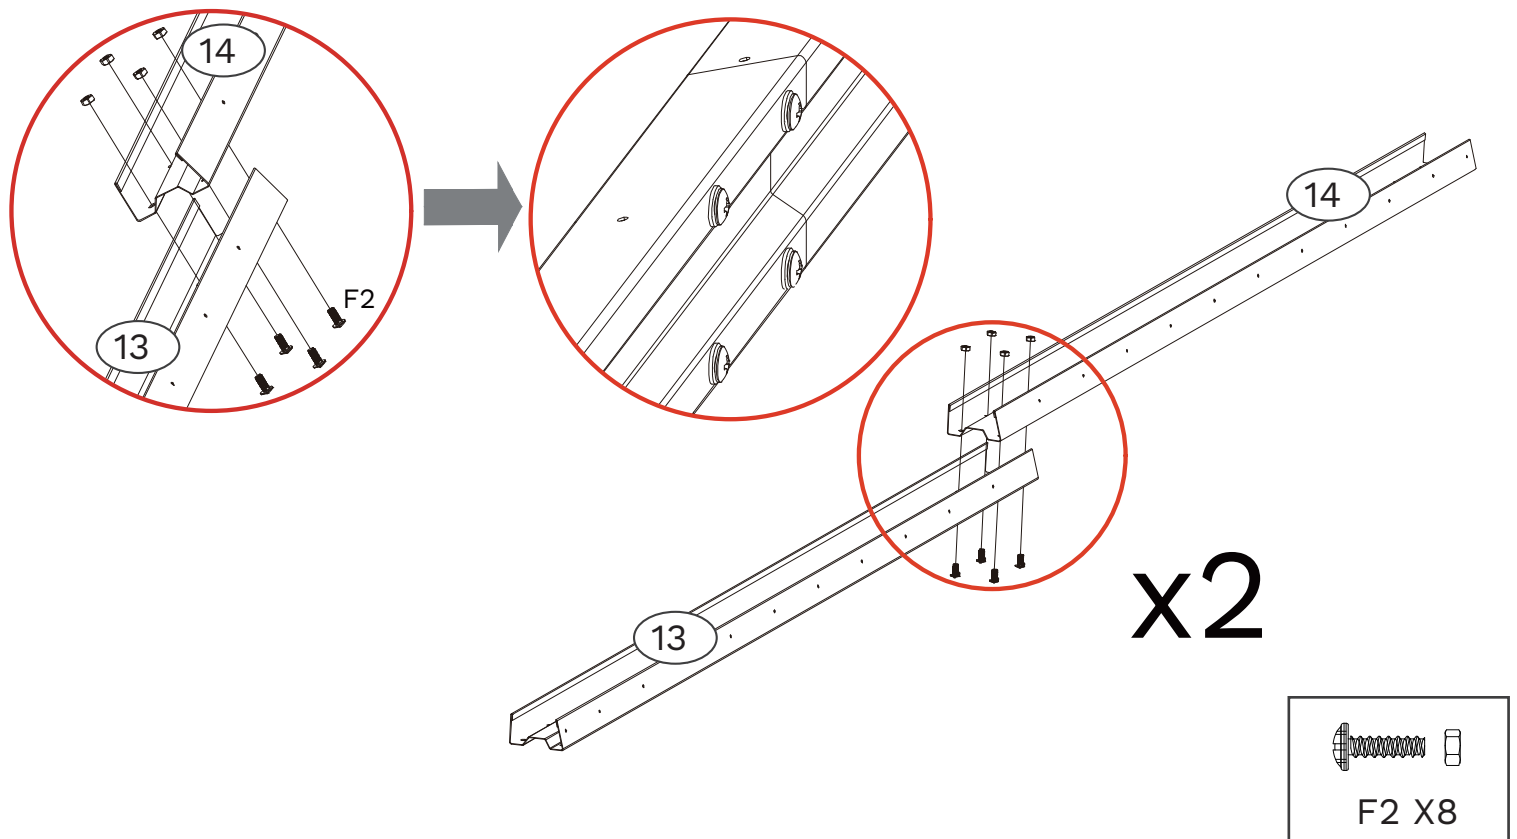



x2

F2 X8



STEP 19

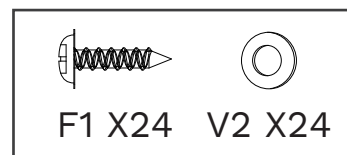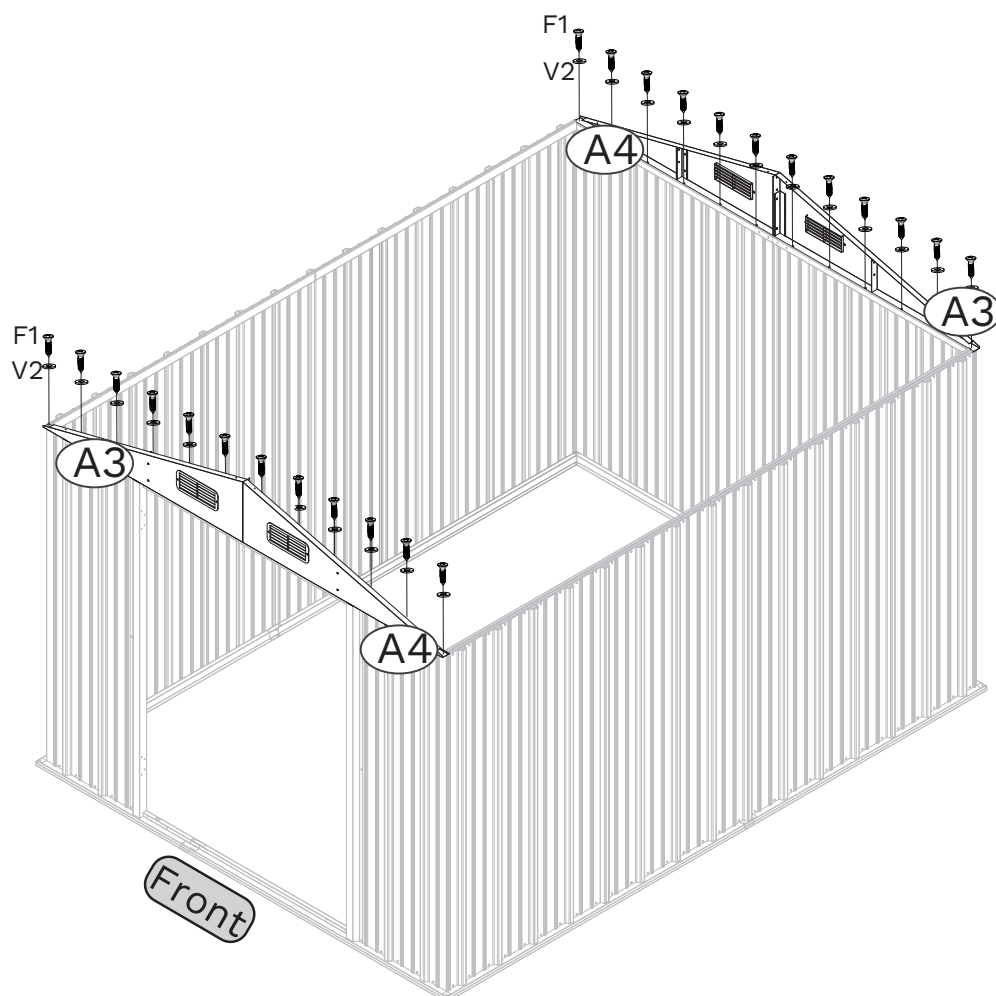


STEP 20

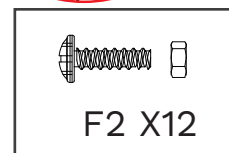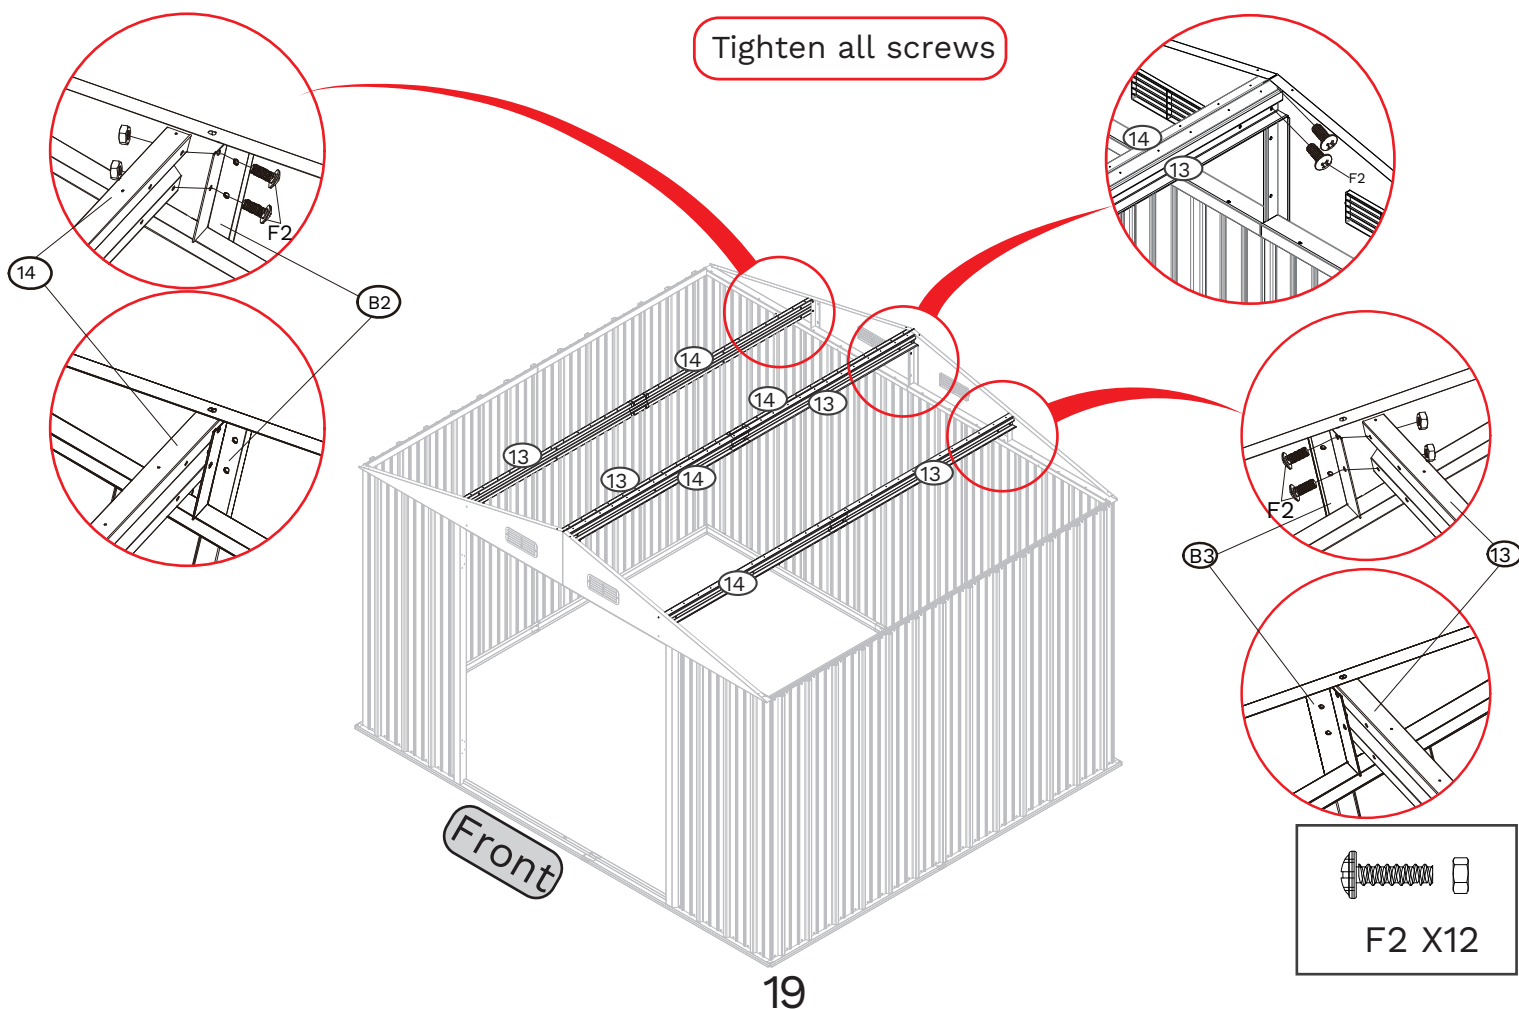


STEP 21

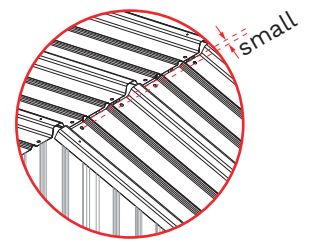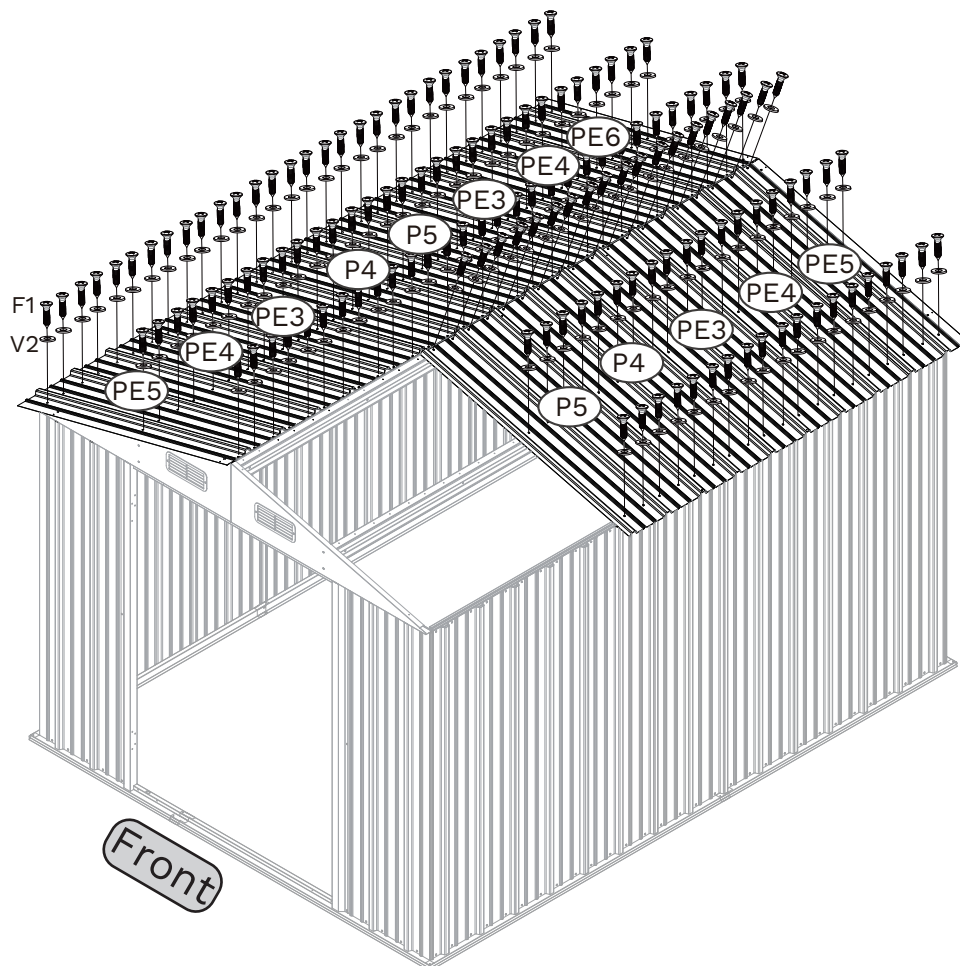



A

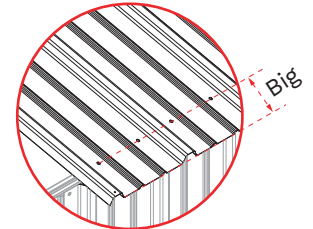


B

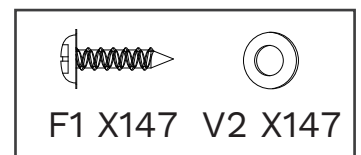

STEP 22

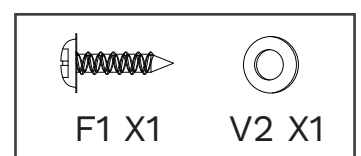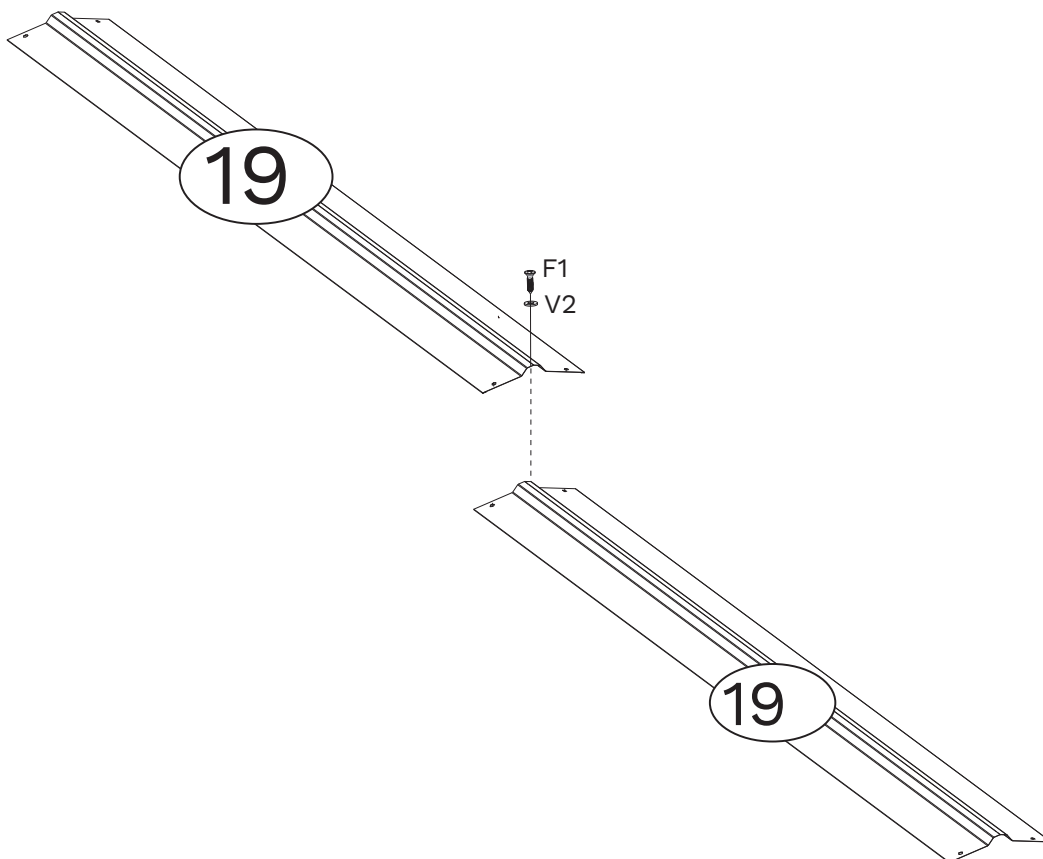


STEP 23

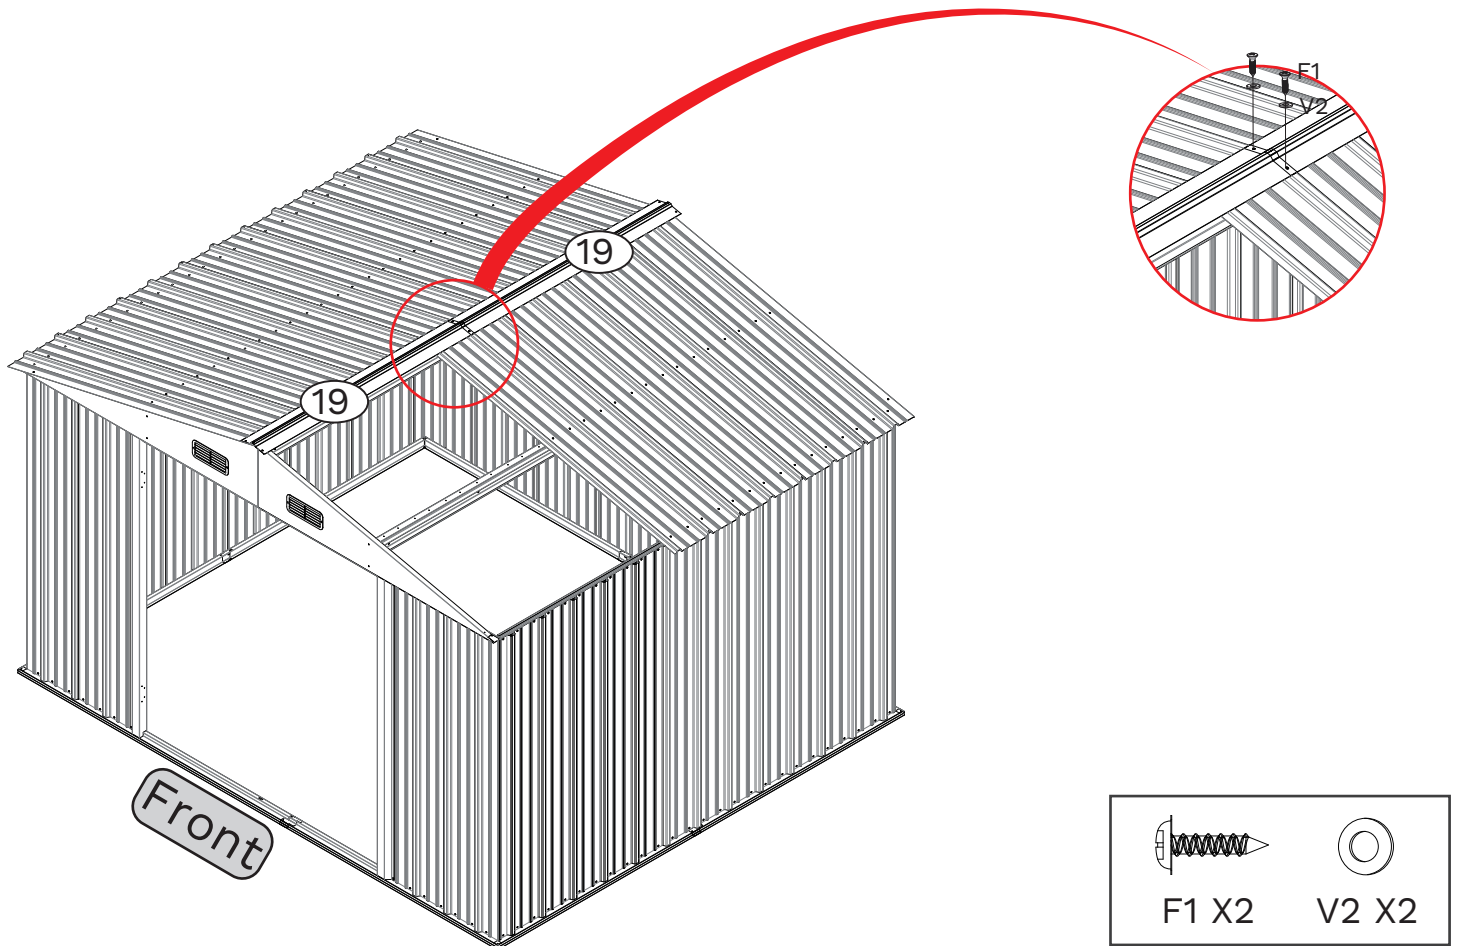



STEP 24

Installation tips: You need to gently lift the 19 and then screw it.


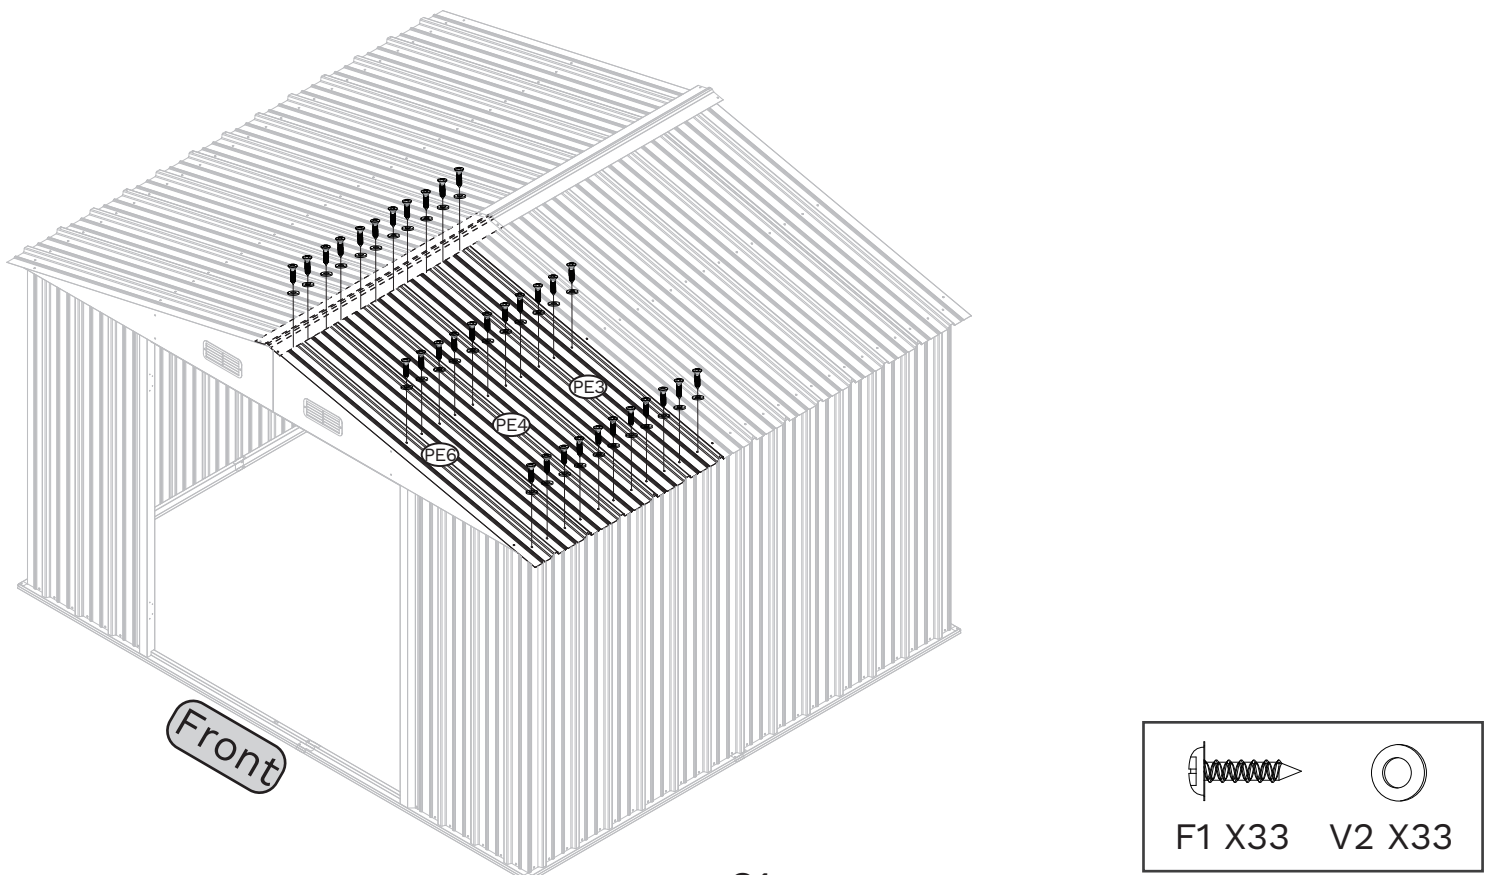


STEP 25


When installing the hole at the bottom of 19, 19 needs to be moved or lifted

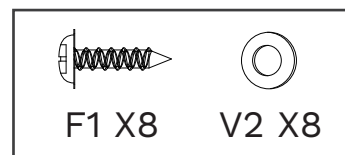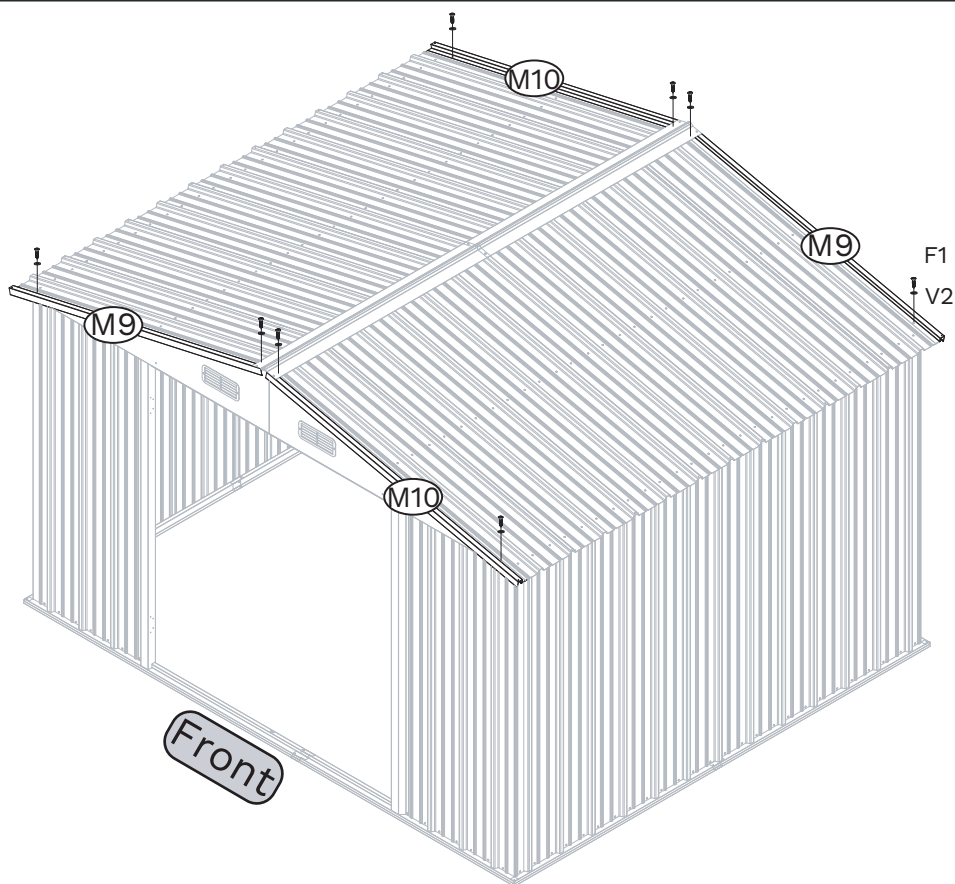


STEP 26

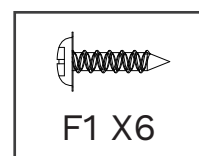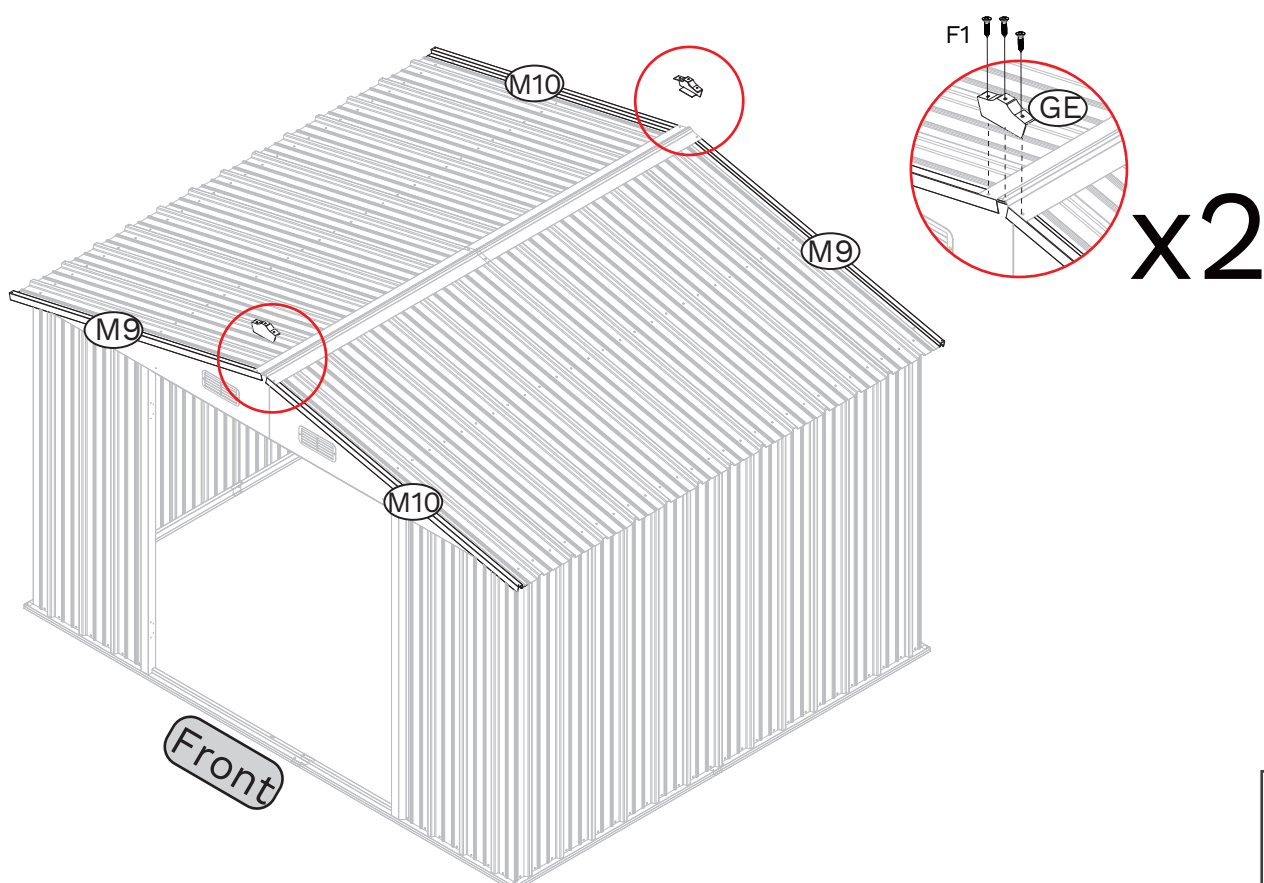

STEP 27

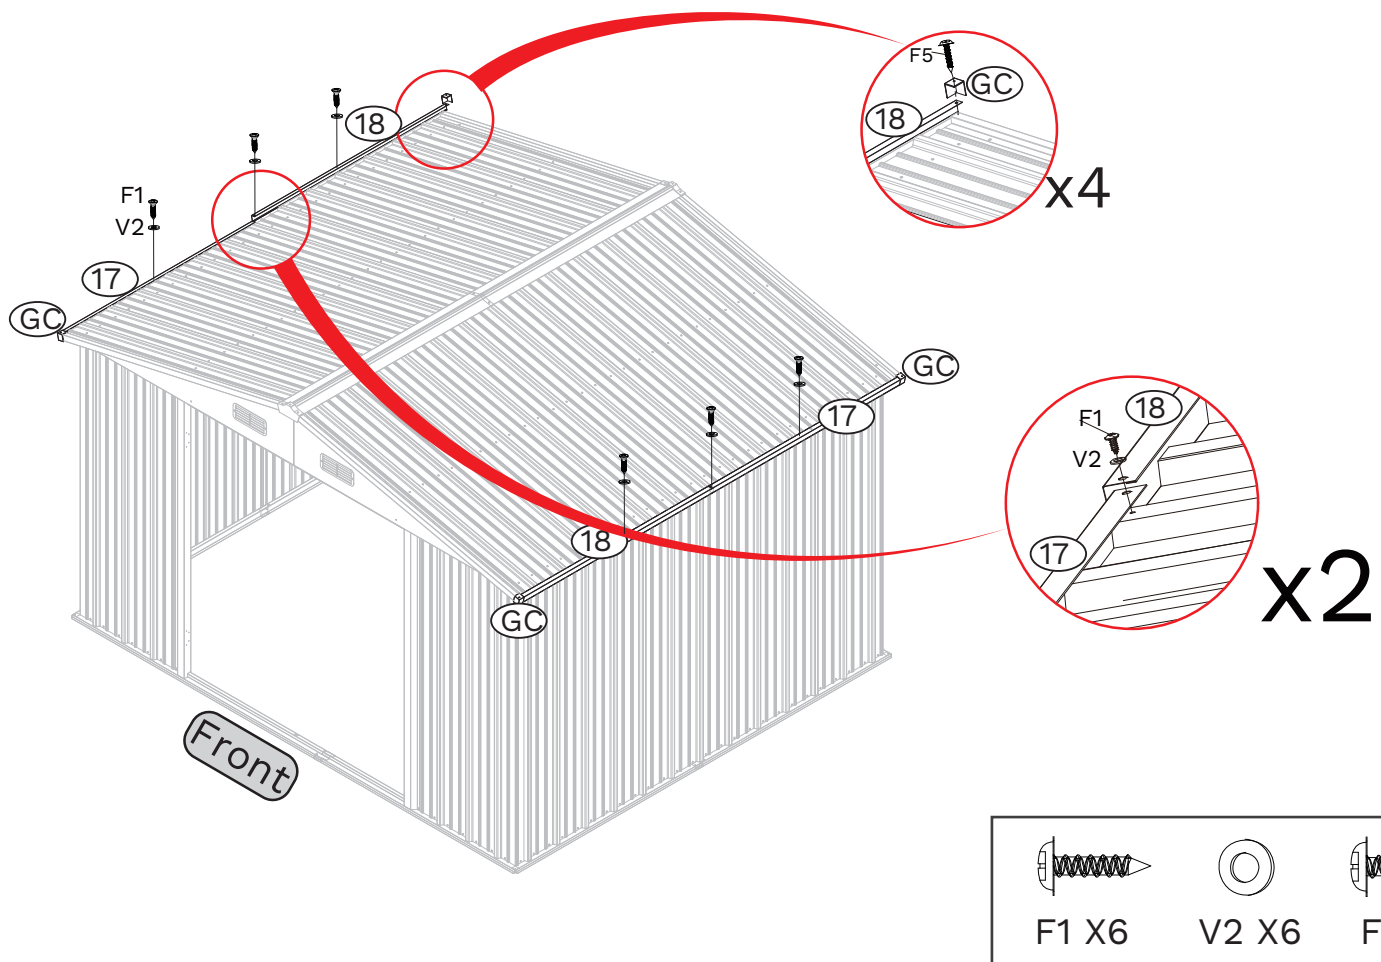


STEP 28

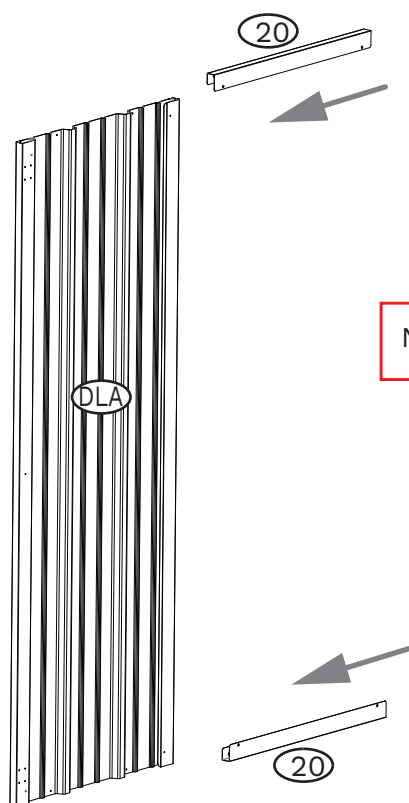


Note: make clear the front and back of the door panel



STEP 29

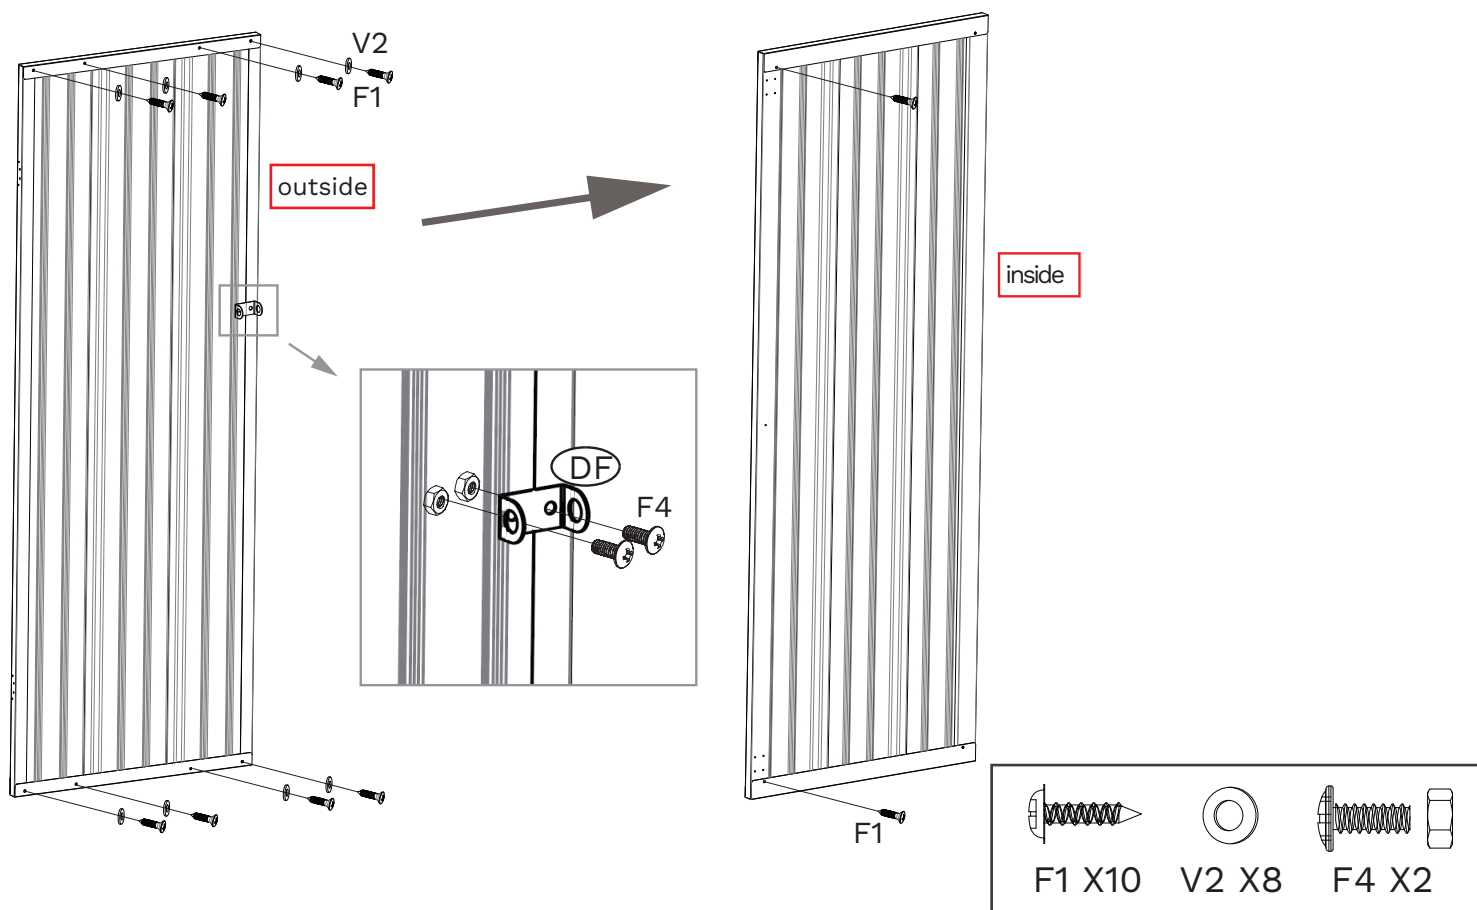


STEP 30

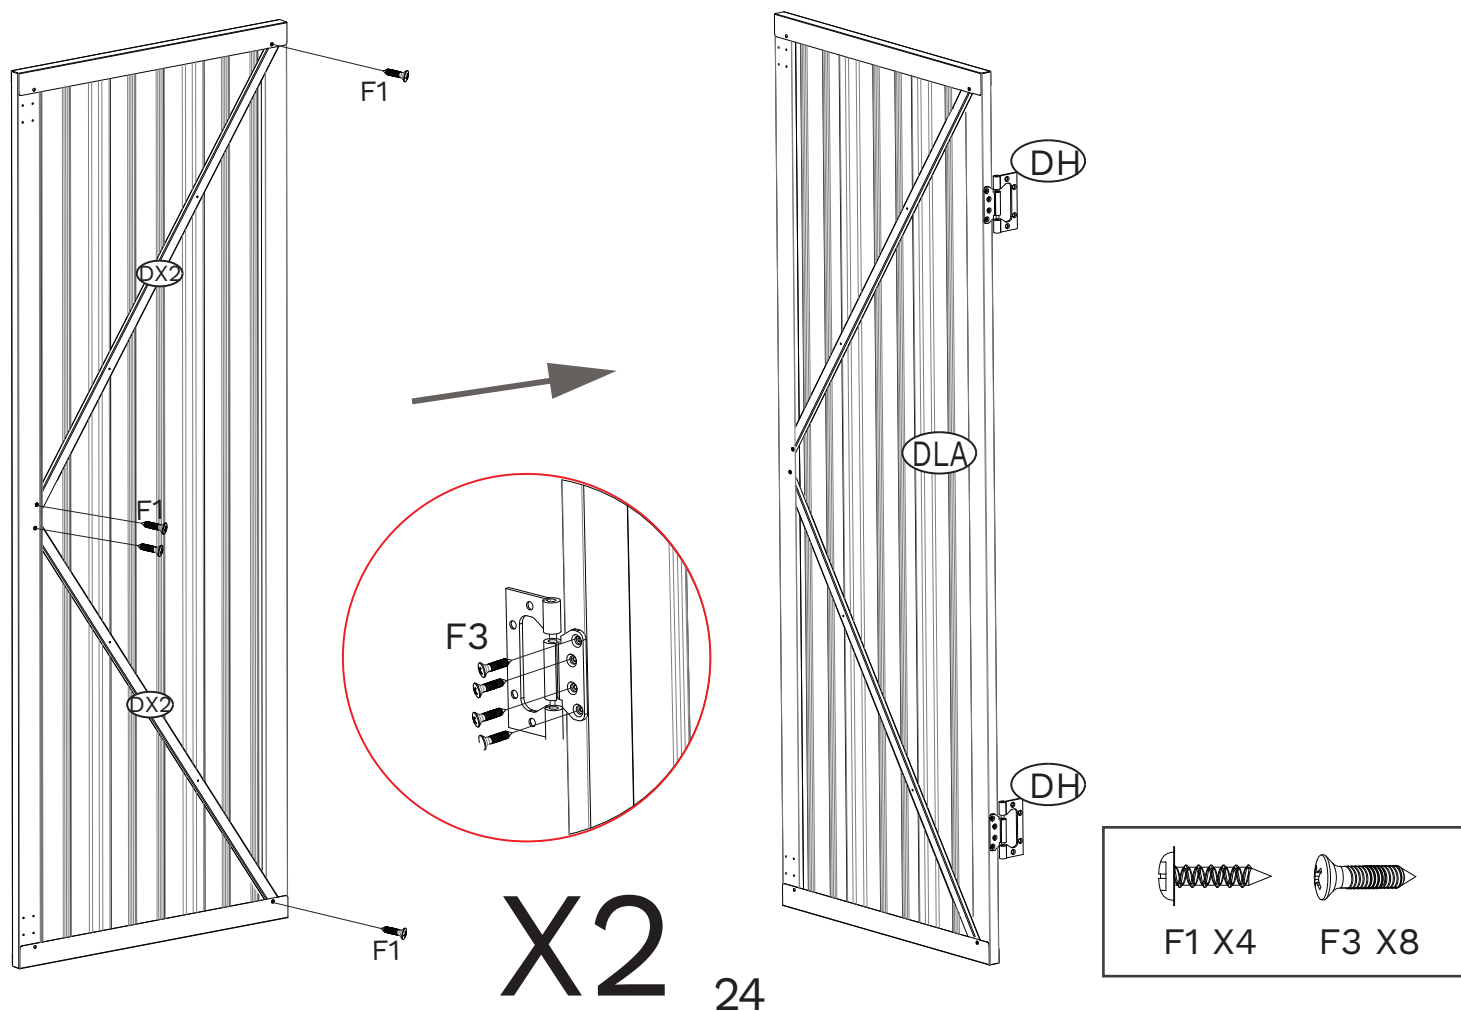



STEP 31

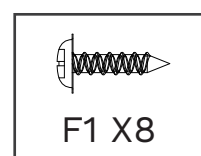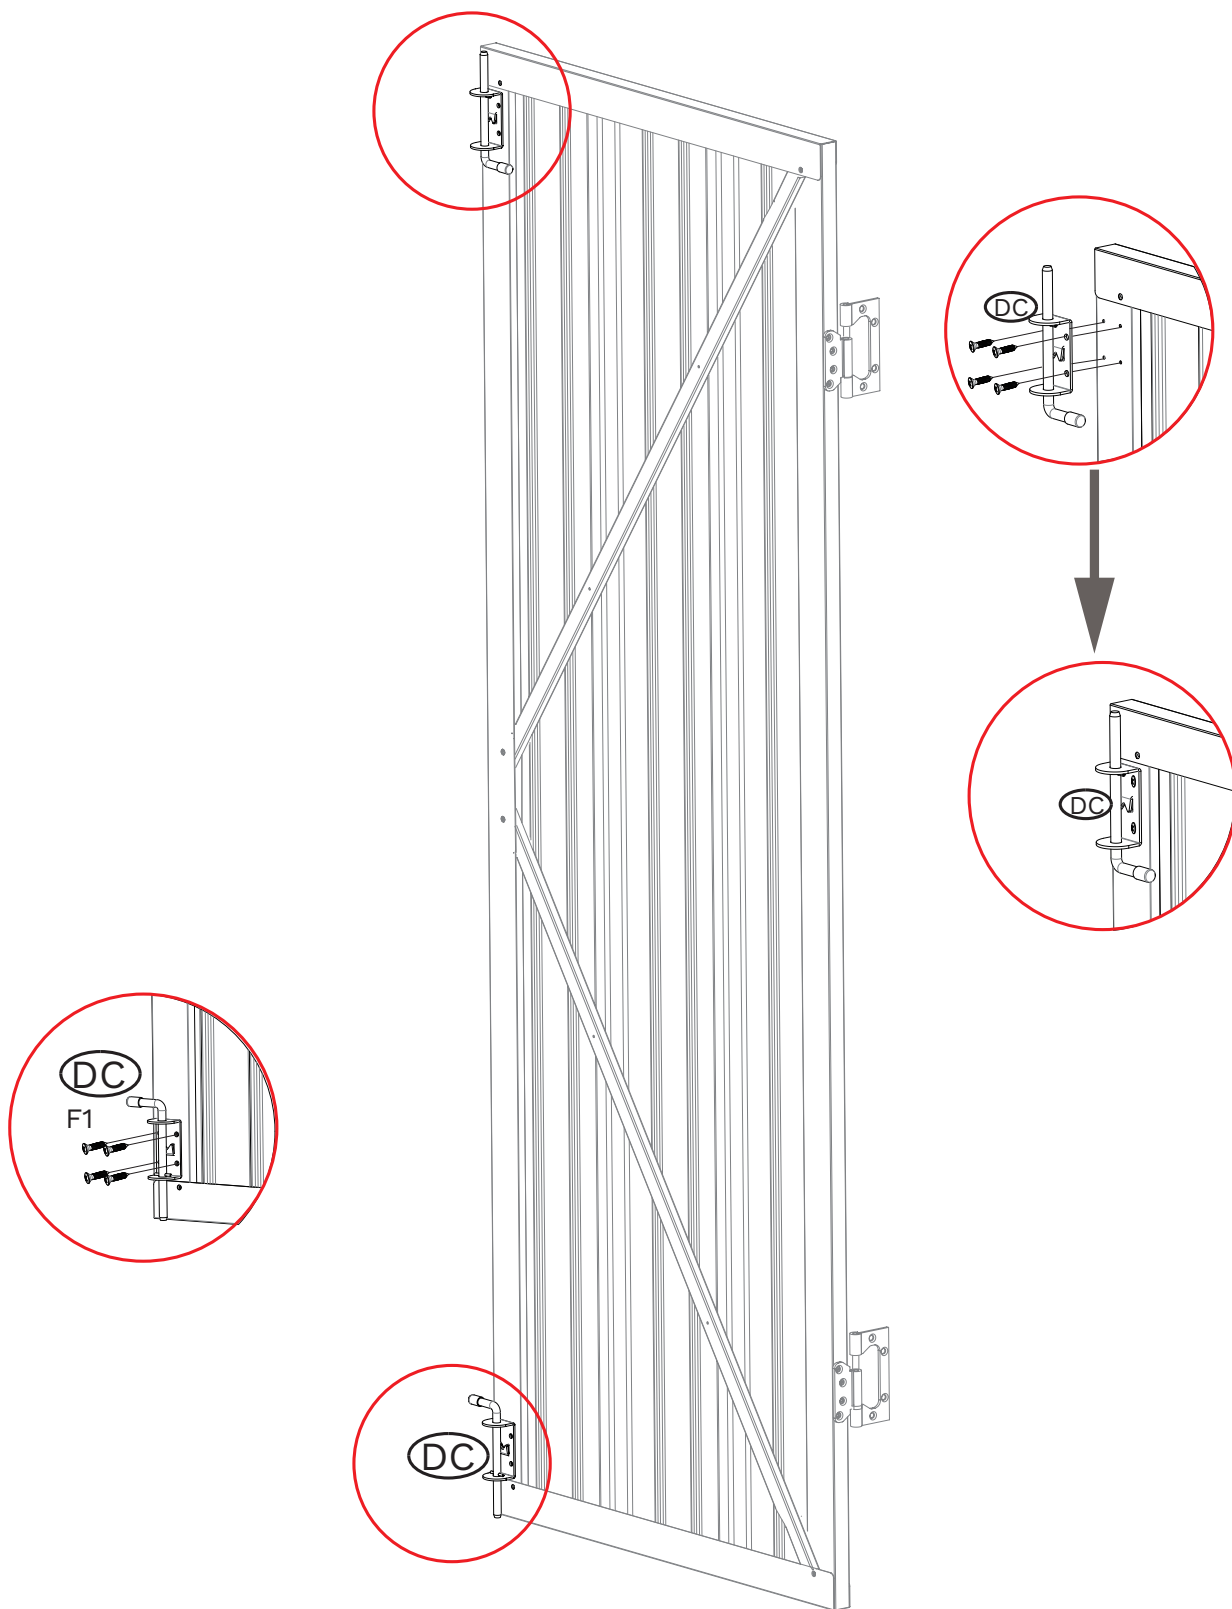


STEP 32

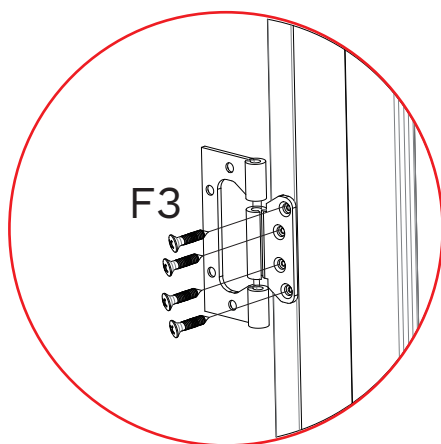

X2

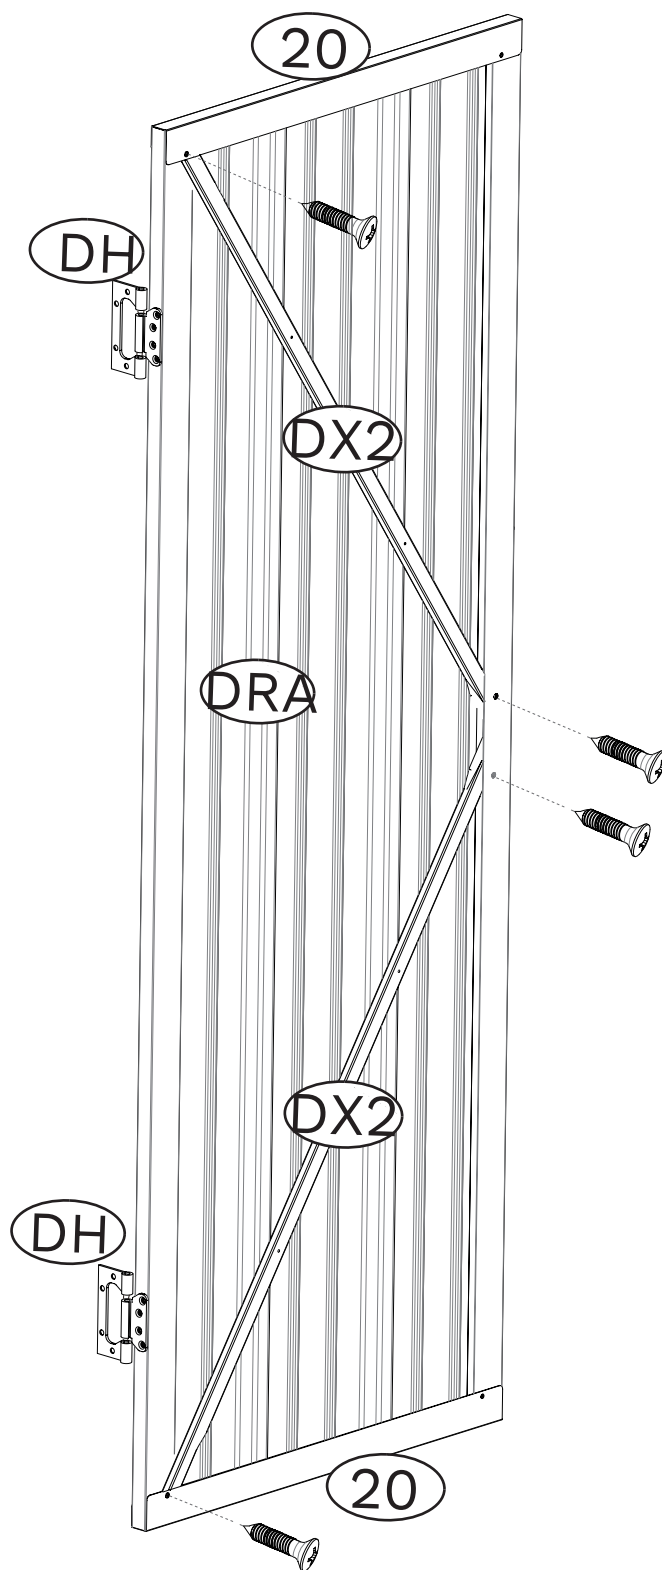


F1 X4




F3 X8

STEP 33


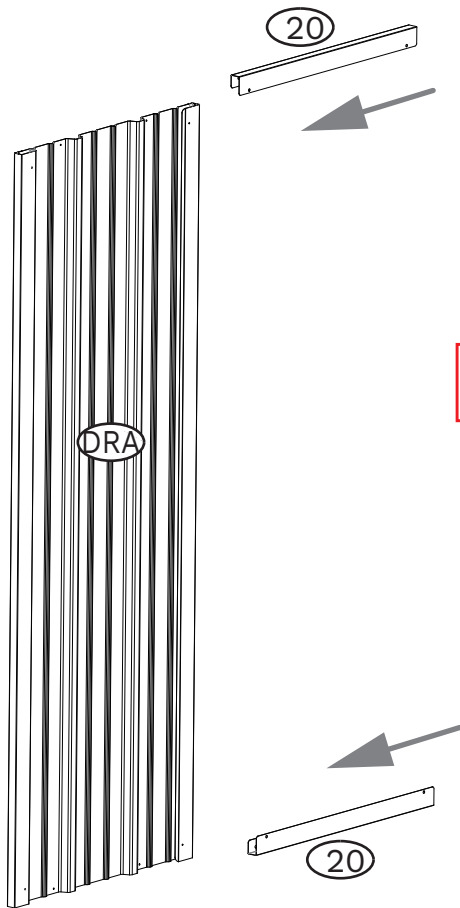


Note: make clear the front and back of the door panel


STEP 34

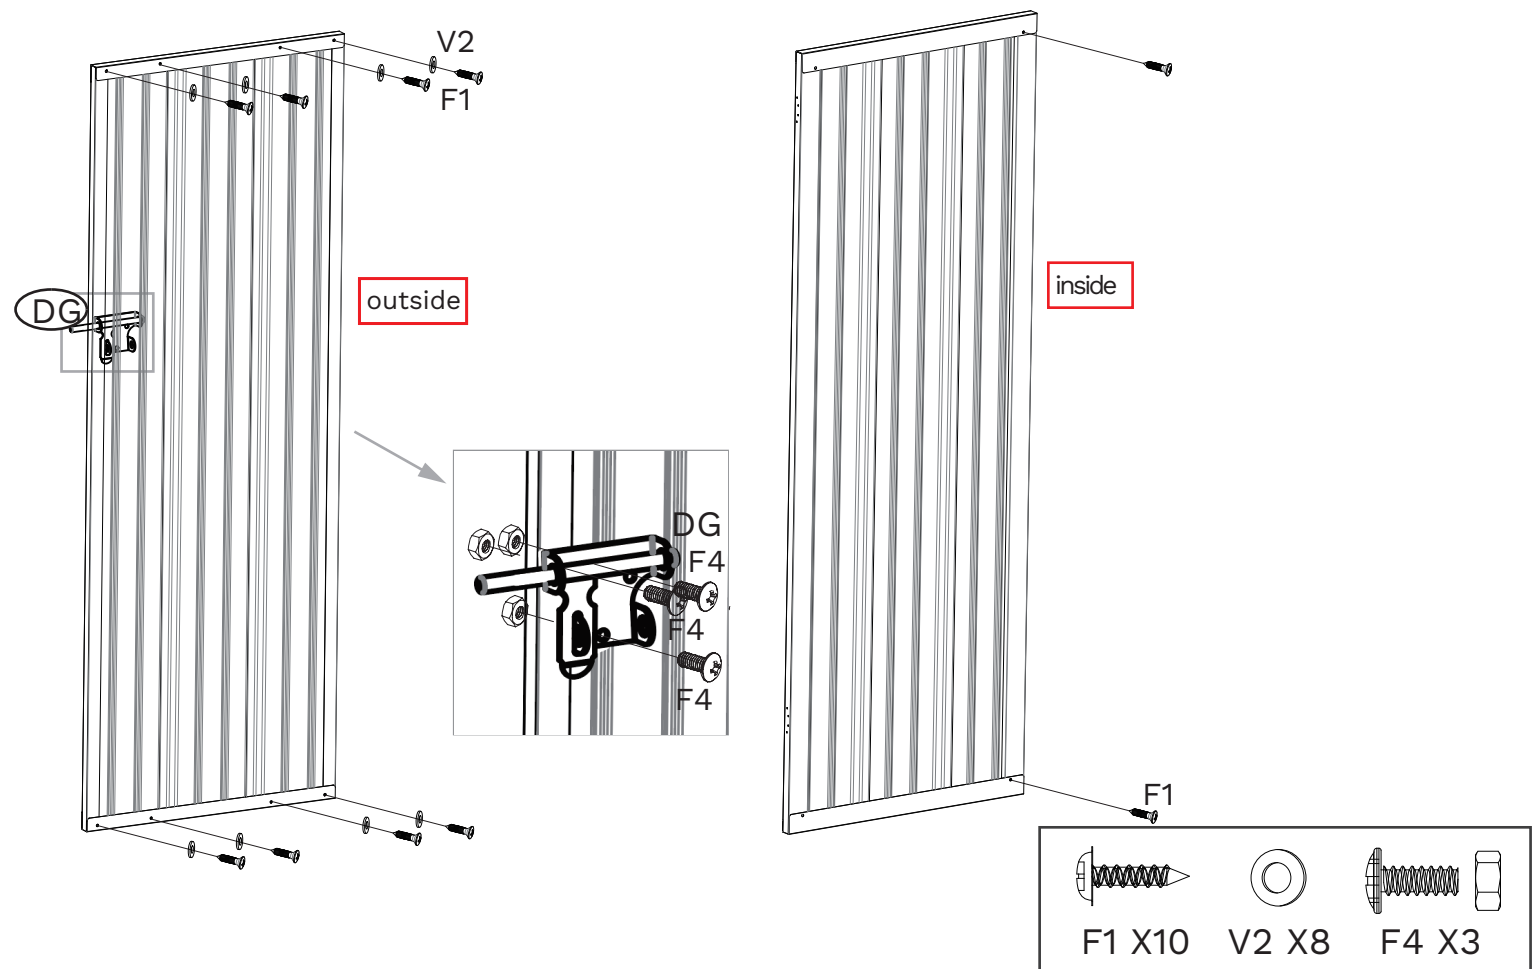




STEP 35

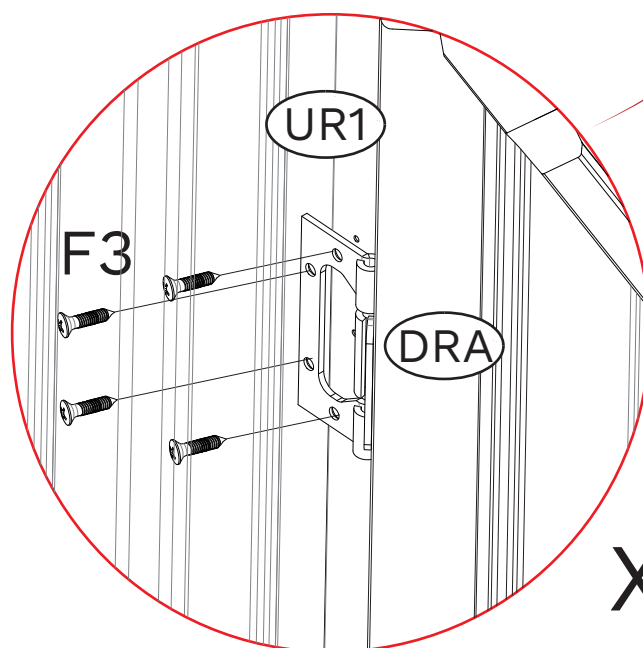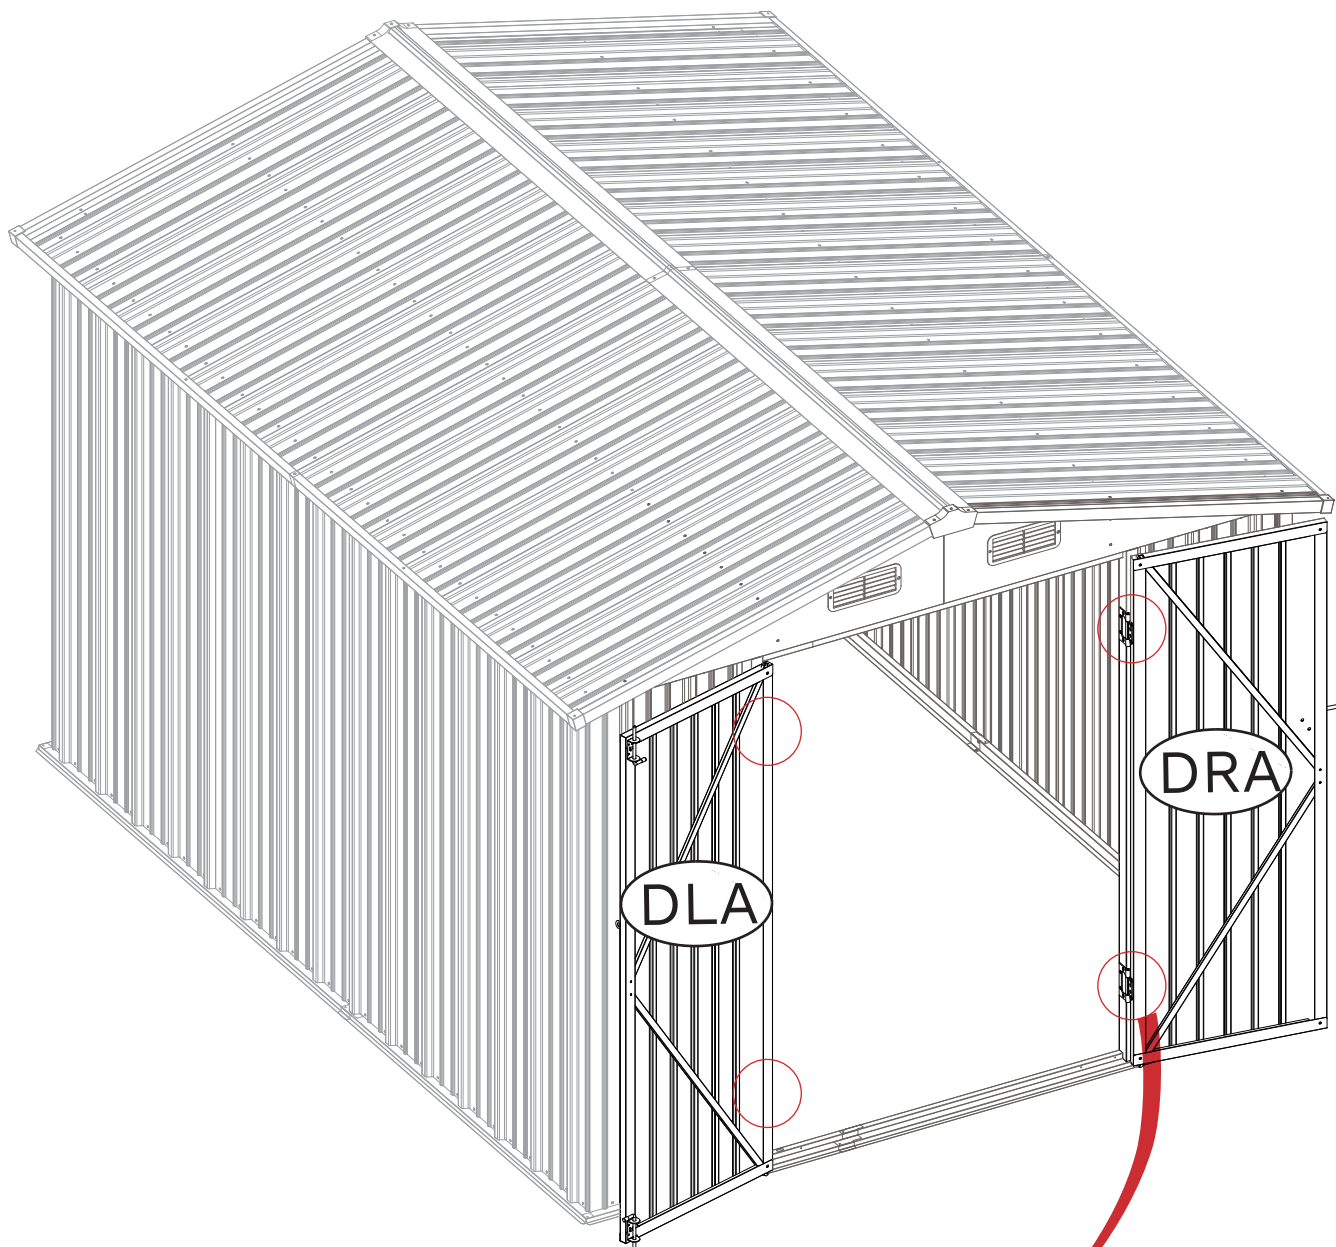


X4

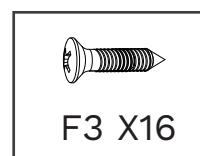

STEP 36

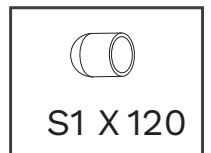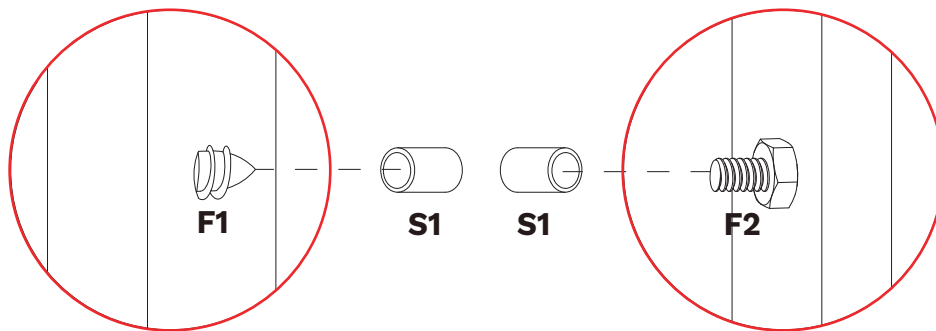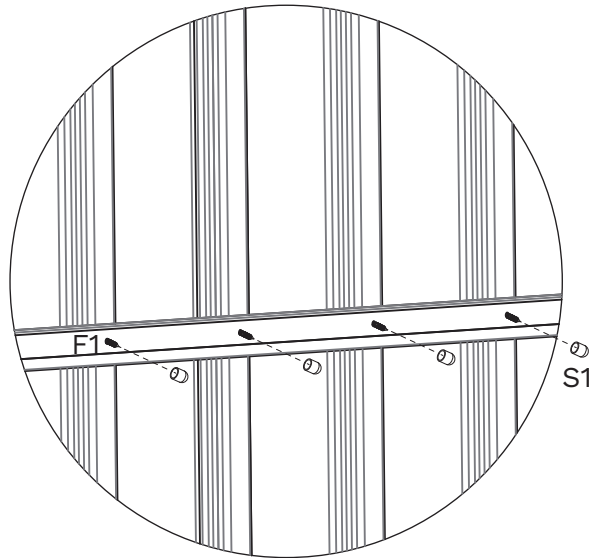

FINISH

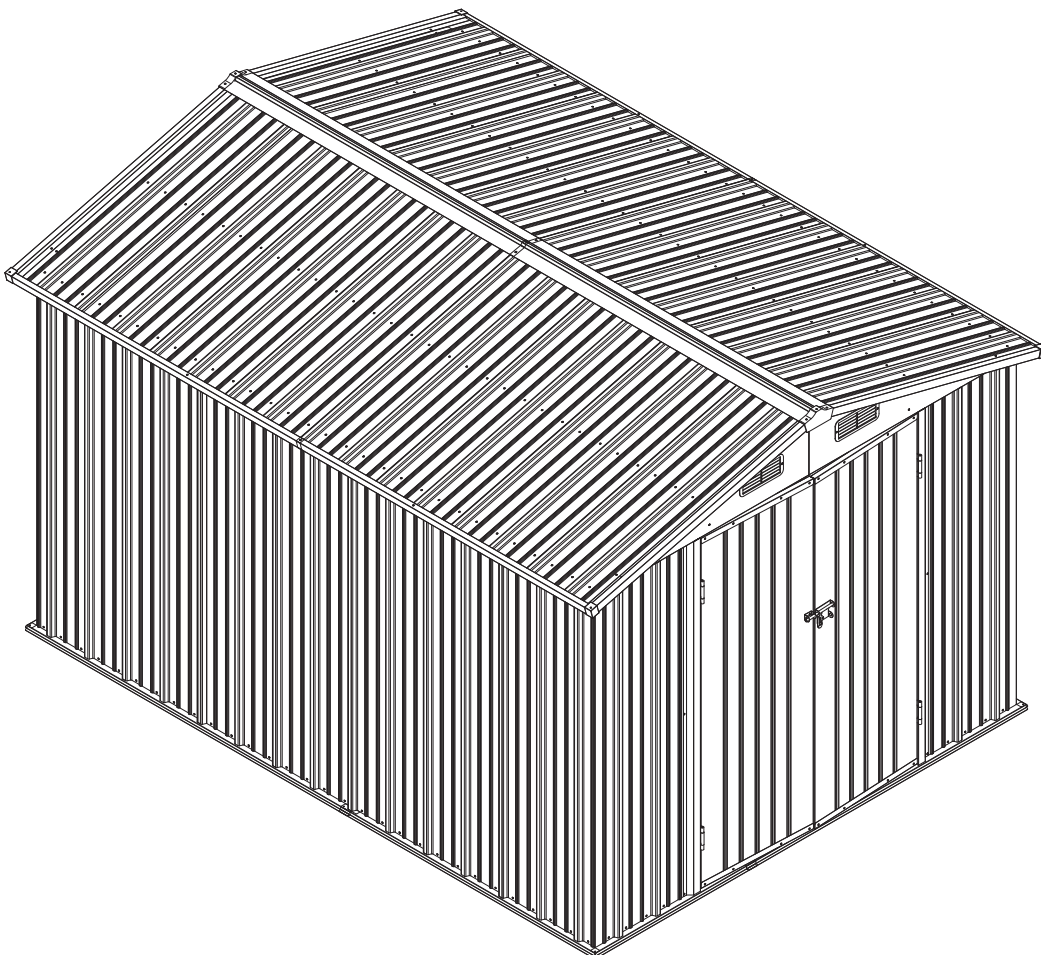

CARE & SAFETY

- In case of fire, do not attempt to extinguish any burning polypropylene with water. Unsuitable for storage of flammable or corrosive substances.
- It is of utmost importance to assemble all of the parts according to the directions. Do not skip any step.
- Please consult your local authorities if any permits are required to erect shed.
- Periodically check shed to assure that it remains stable and that the site remains level.
- It is highly recommended to secure the shed to an immovable object or to the ground by drilling holes in the floor at the pre-marked locations and inserting proper screws into the ground (size: 1.9"-3", screws are not included).
- Wear safety-goggles and always follow the manufacturer's instructions when using power tools.
- Wash shed with garden hose or a mild detergent solution. Using a stiff brush or abrasive cleaner could damage shed.
- Hot items such as recently used grills, blowtorches, etc. must not be stored in the shed.
- Heavy articles should not be leaned against the walls, as this may cause distortion.
- Keep roof clean of snow and leaves. Heavy amounts of snow on roof can damage the shed making it unsafe to enter.
- Although wind direction varies, it is an important factor when taking into account where to place your shed. Therefore, it is recommended to reduce wind exposure of the shed in general, and the door side in particular.
- Keep doors closed and locked to prevent wind damage.
- Do not stand on the roof.