



# ASSEMBLY INSTRUCTIONS

## TWIN FLOOR BED




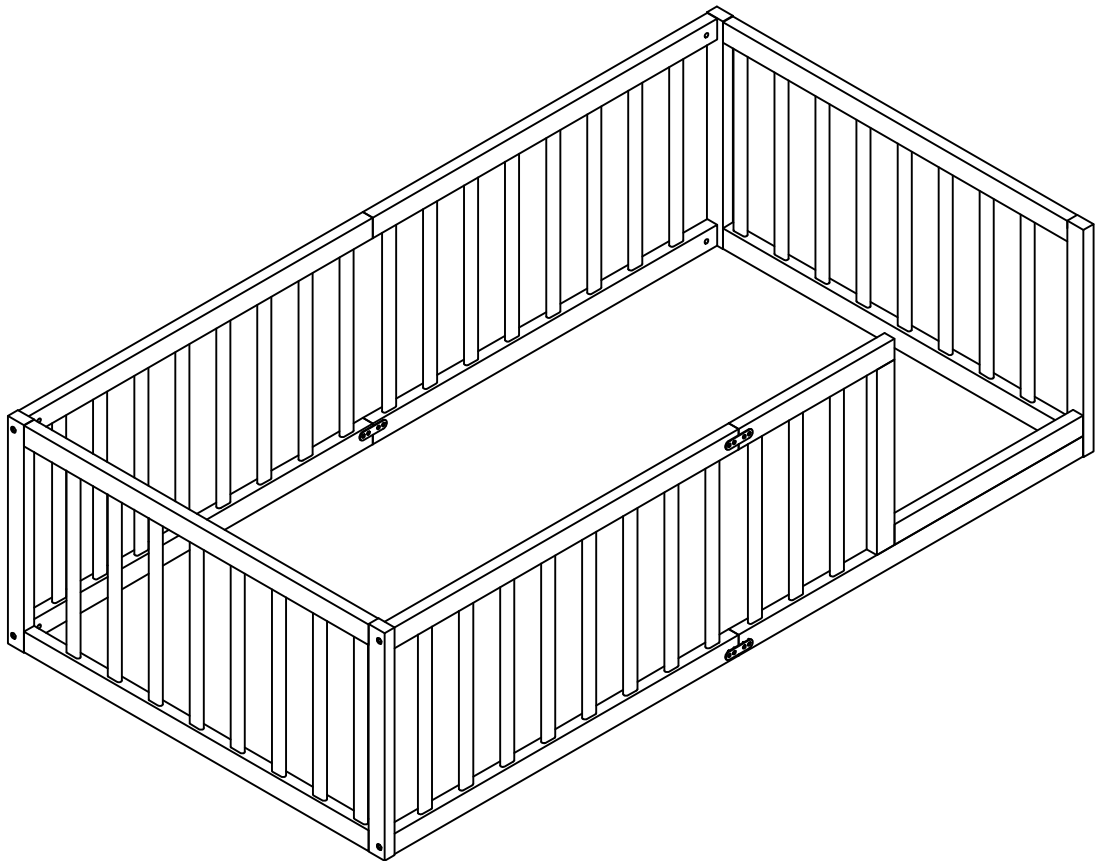


**DN33755**





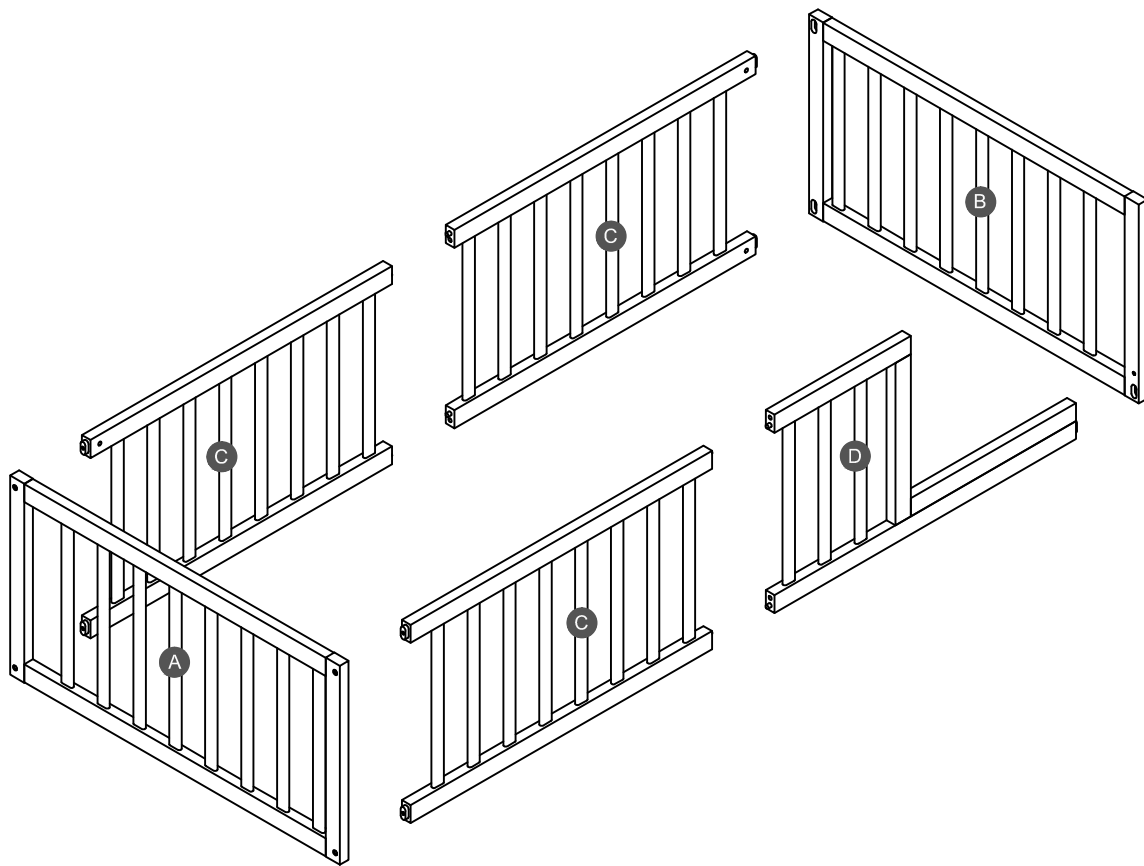
## Detail View

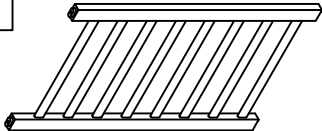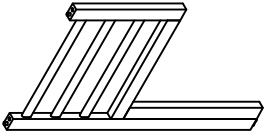


## Part List

<b>A</b>  Guard rail (Left) - 1pc	<b>B</b>  Guard rail (Right) - 1pc	<b>C</b>  Guard rail (Front/Back) - 3pcs
<b>D</b>  Guard rail (Front) - 1pc		

## Hardware List


<b>1</b>  (Ø12)1/4"*70mm Hex-Head bolts (8pcs)	<b>2</b>  1/4"*15 (9.5mm) Horizontal-Hole bolts(8pcs)	<b>3</b>  Metal bracket (8pcs)
<b>4</b>  Ø3.5*15mm Wood screws (32pcs)	<b>5</b>  (1/4")4.5*58mm Allen key (1pc)	

### ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

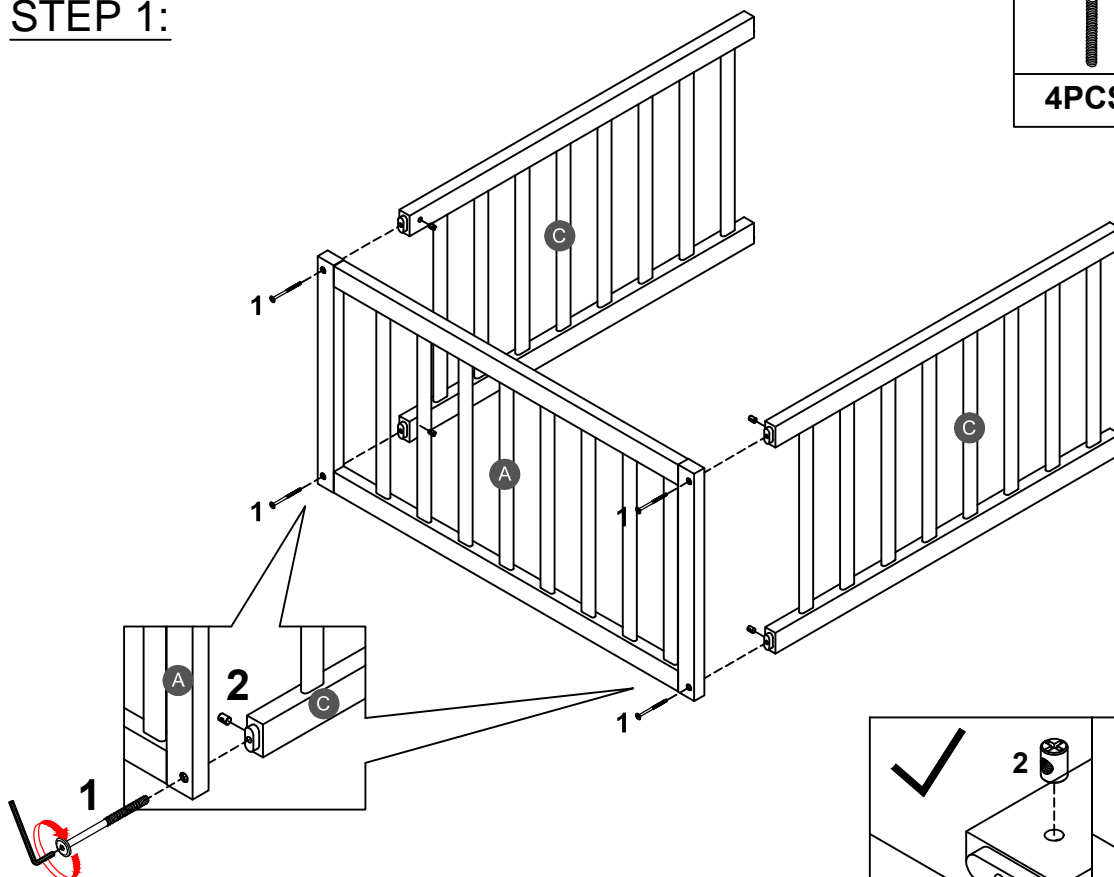
## STEP 1:





Note: Part 2 will face up with the "x" mark on it, otherwise it cannot be tightened


1		2	
4PCS		4PCS	
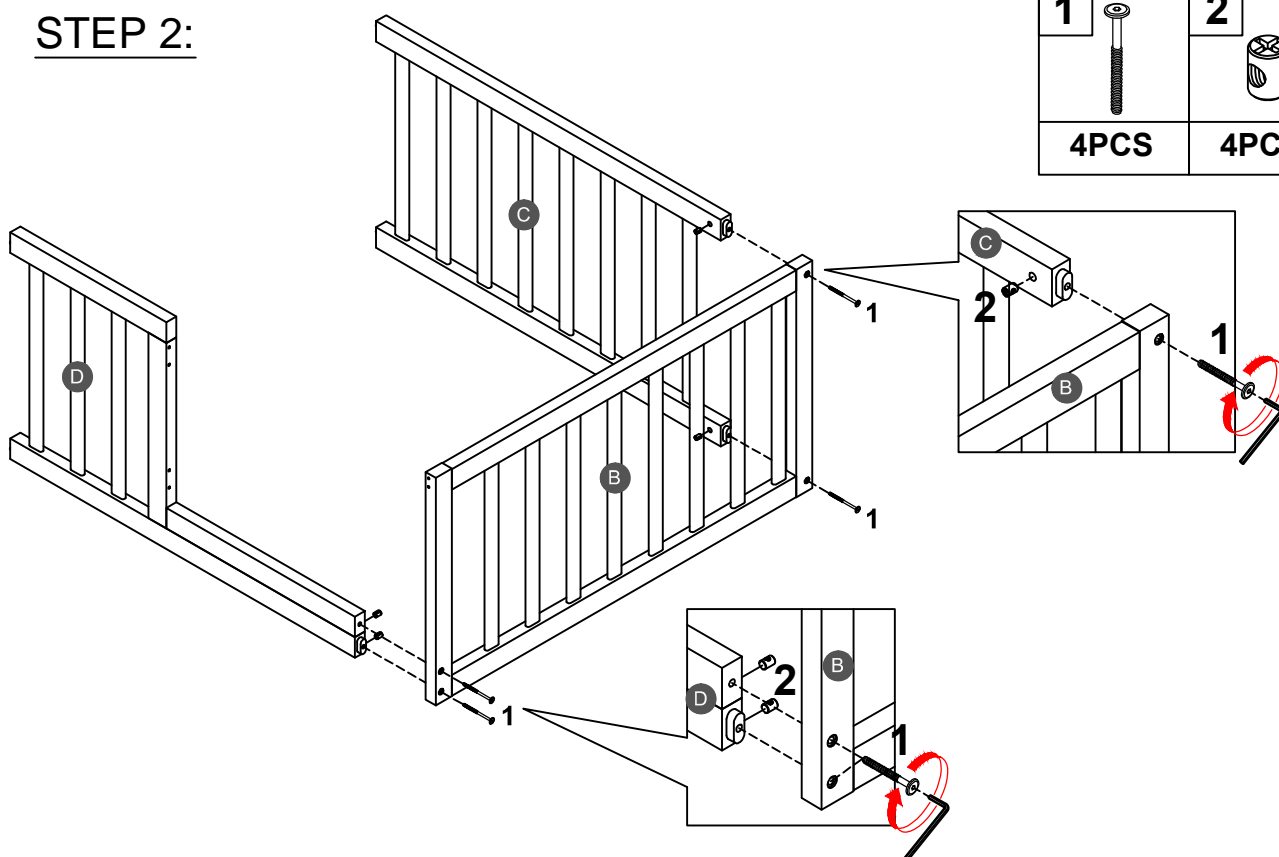
## STEP 2:



1		2	
4PCS		4PCS	

### STEP 3:

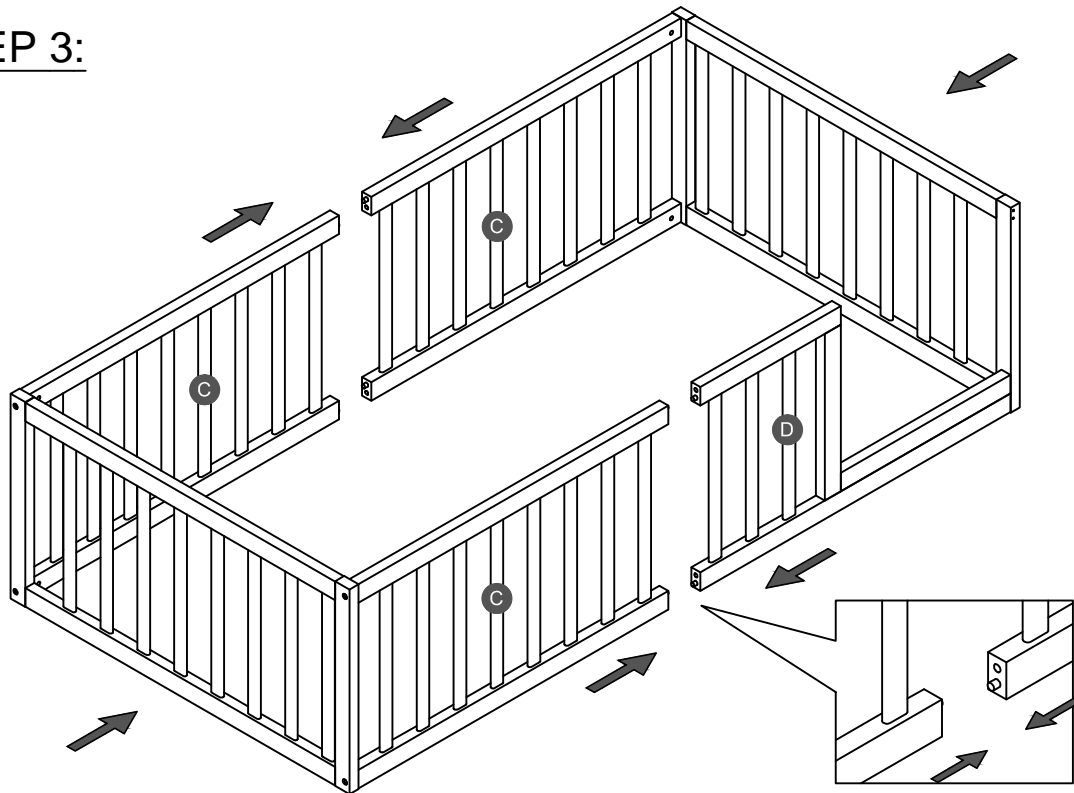

### STEP 4:

