



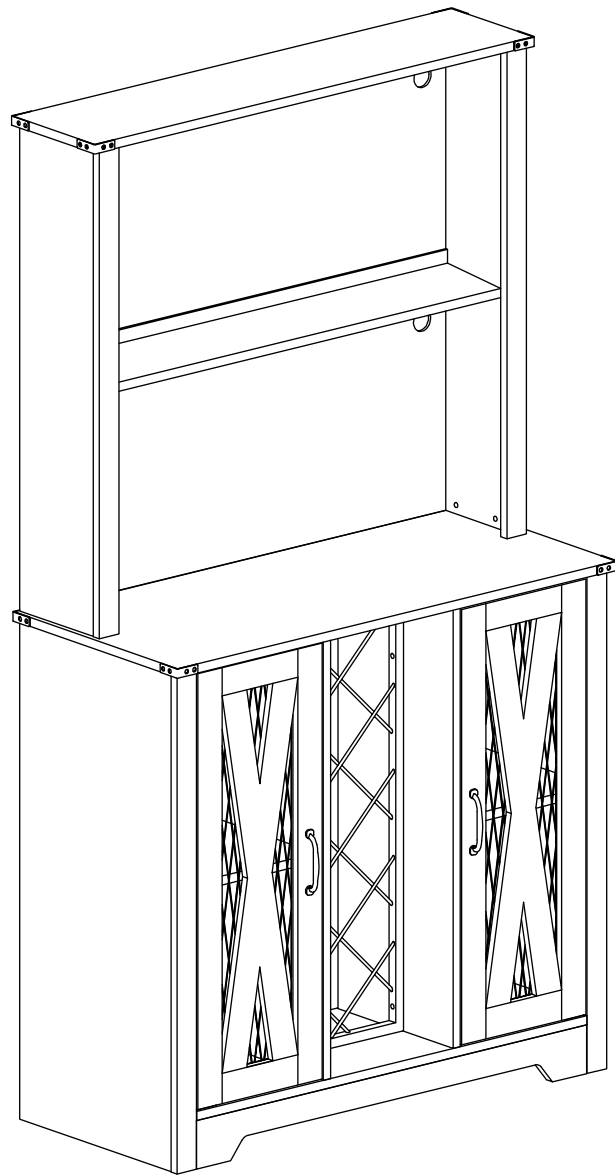


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

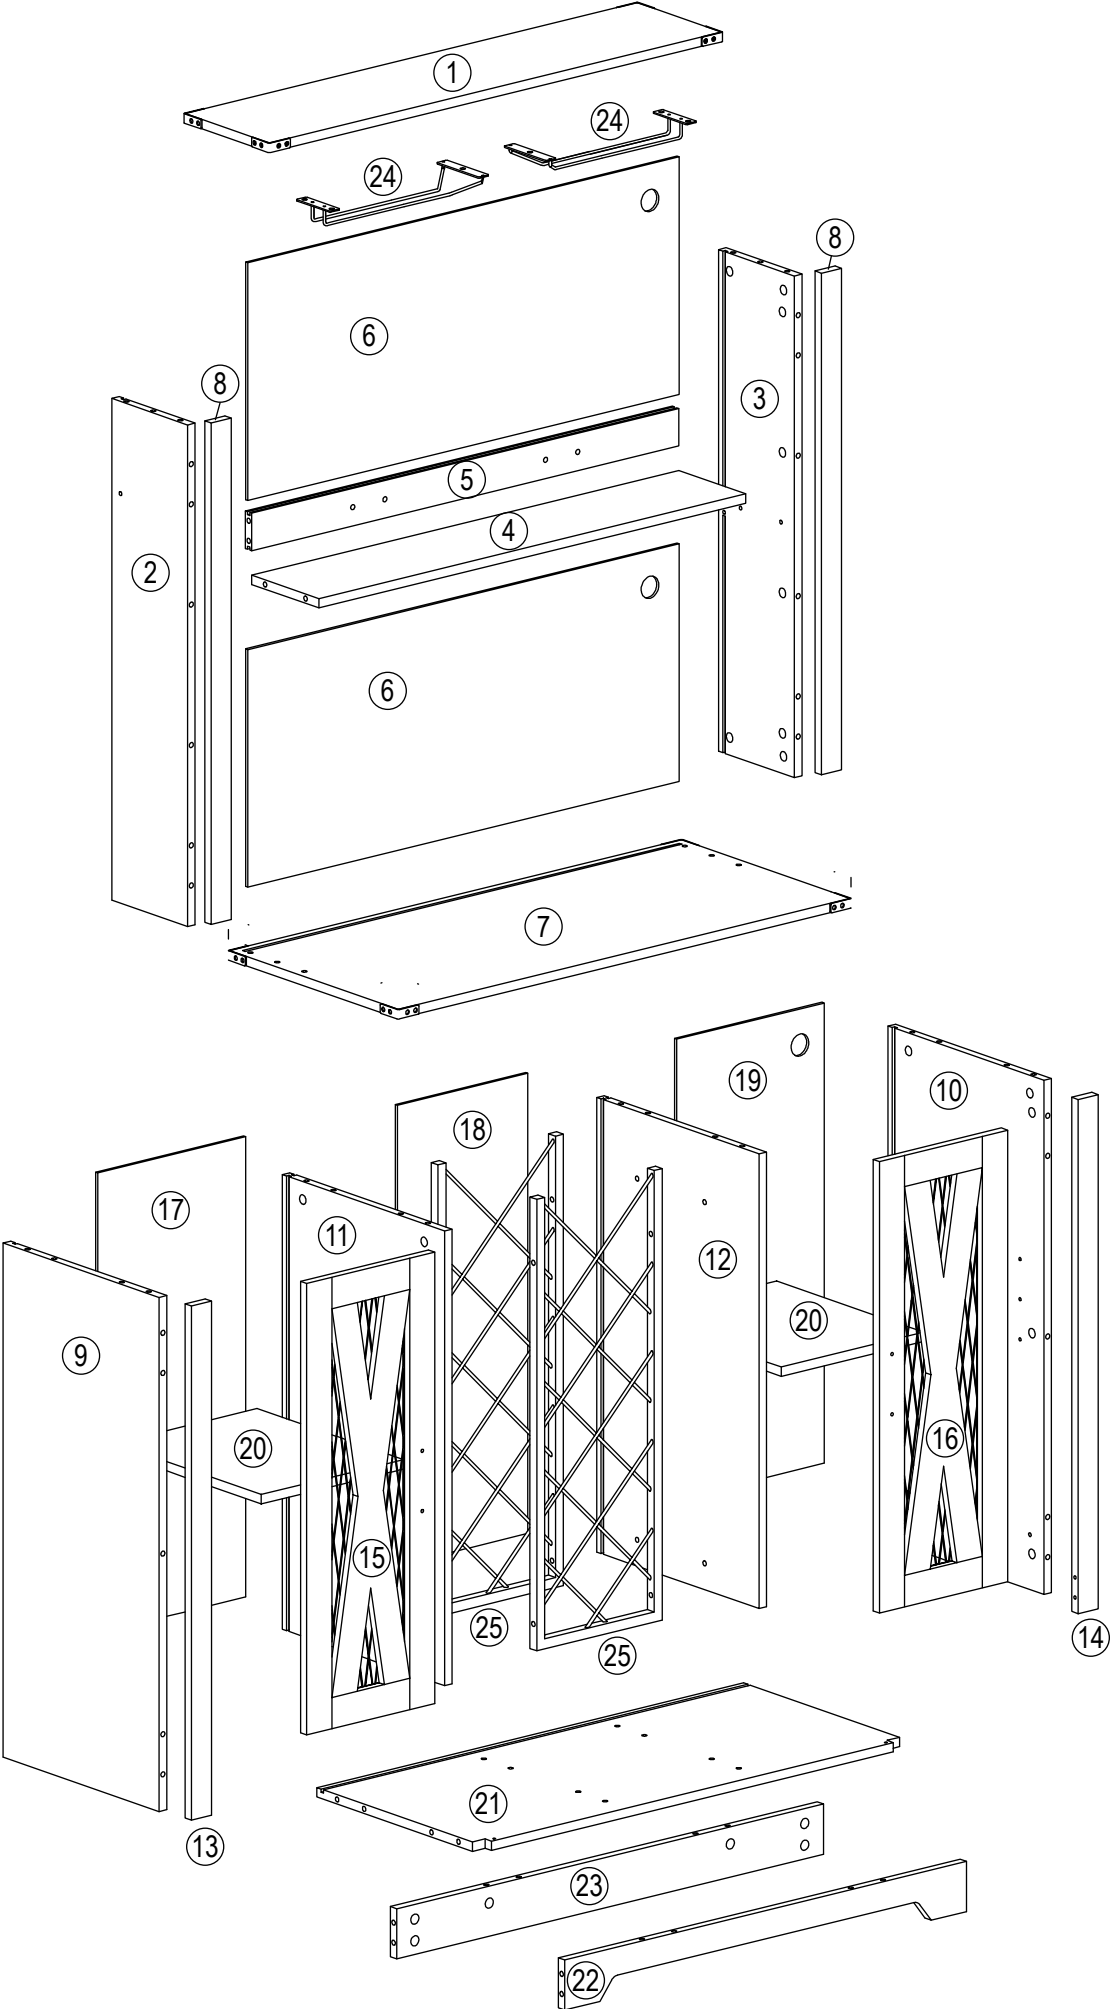





① ×1




② ×1




③ ×1



④ ×1




⑤ ×1

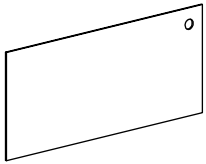


⑥ ×2



⑦ ×1



⑧ ×2



⑨ ×1




⑩ ×1




⑪ ×1




⑫ ×1




⑬ ×1



⑭ ×1



⑮ ×1




⑯ ×1




⑰ ×1



⑱ ×1



⑲ ×1



⑳ ×2




㉑ ×1




㉒ ×1



㉓ ×1



㉔ ×2





㉕ ×2


A	×56	B	×56	C	×34	D	×42	E	×2	F	×4	G	×1	H	×2
φ6×35mm		φ15×12mm		φ8×30mm		3.5×14mm		φ4×35mm		φ7×47mm		M4×64mm		45×12×1mm	

I	×2	J	×2	K	×4	L	×8	M	×8	N	×8	O	×6	P	×14
46×16×14mm		131×20×23mm		M4×18mm		φ15×13mm		M6×12mm		M6×25mm		30×8×8mm		14×14×9mm	


Q	×2	R	×2	S	×2	T	×2	U	×4	V	×8	W	×1
L40mm		L40mm		φ8×40mm		60×35×20mm		φ20mm		40×15×5mm			


STEP 1

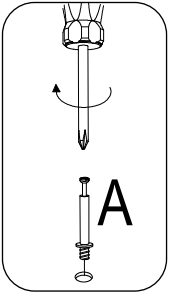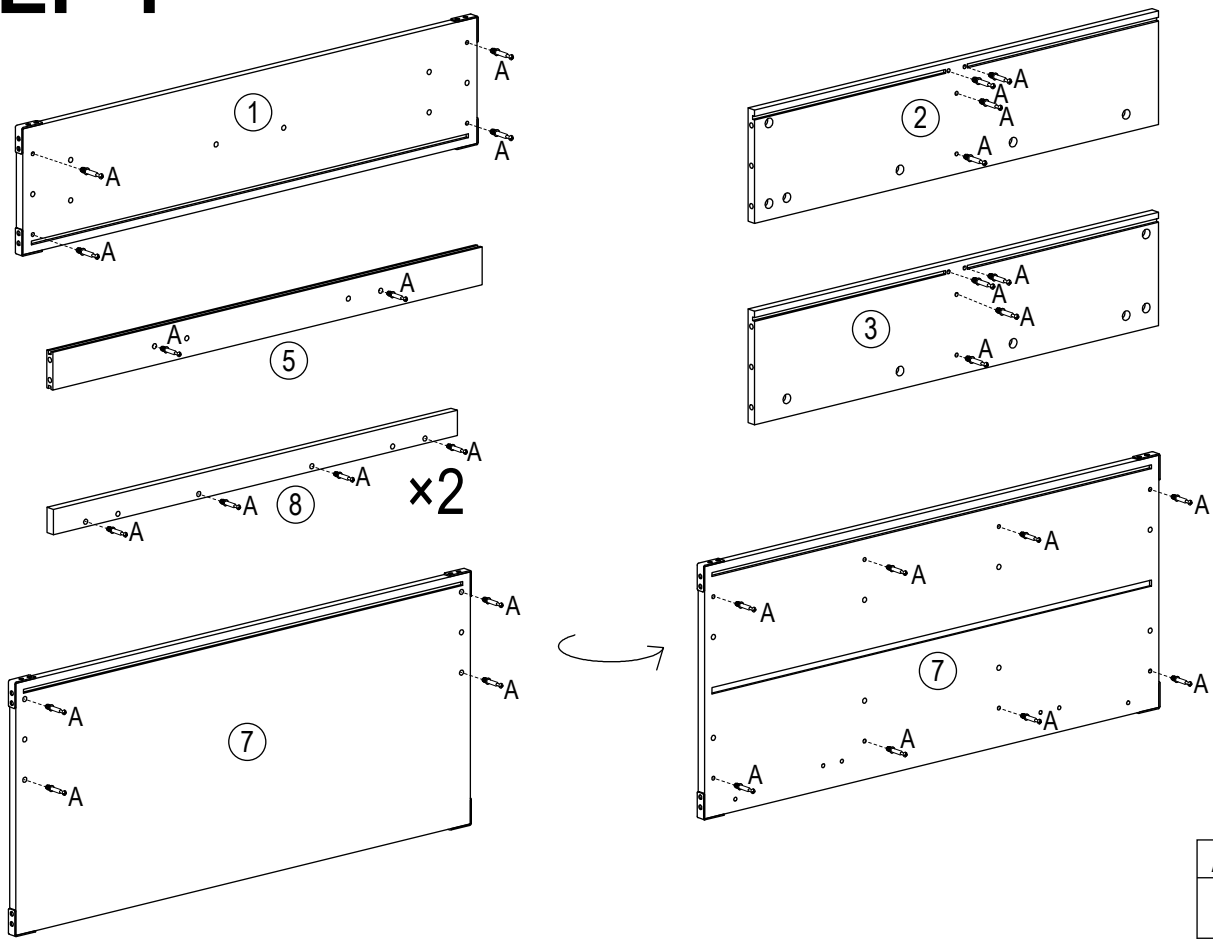


A	x34
	
φ6×35mm	

STEP 2

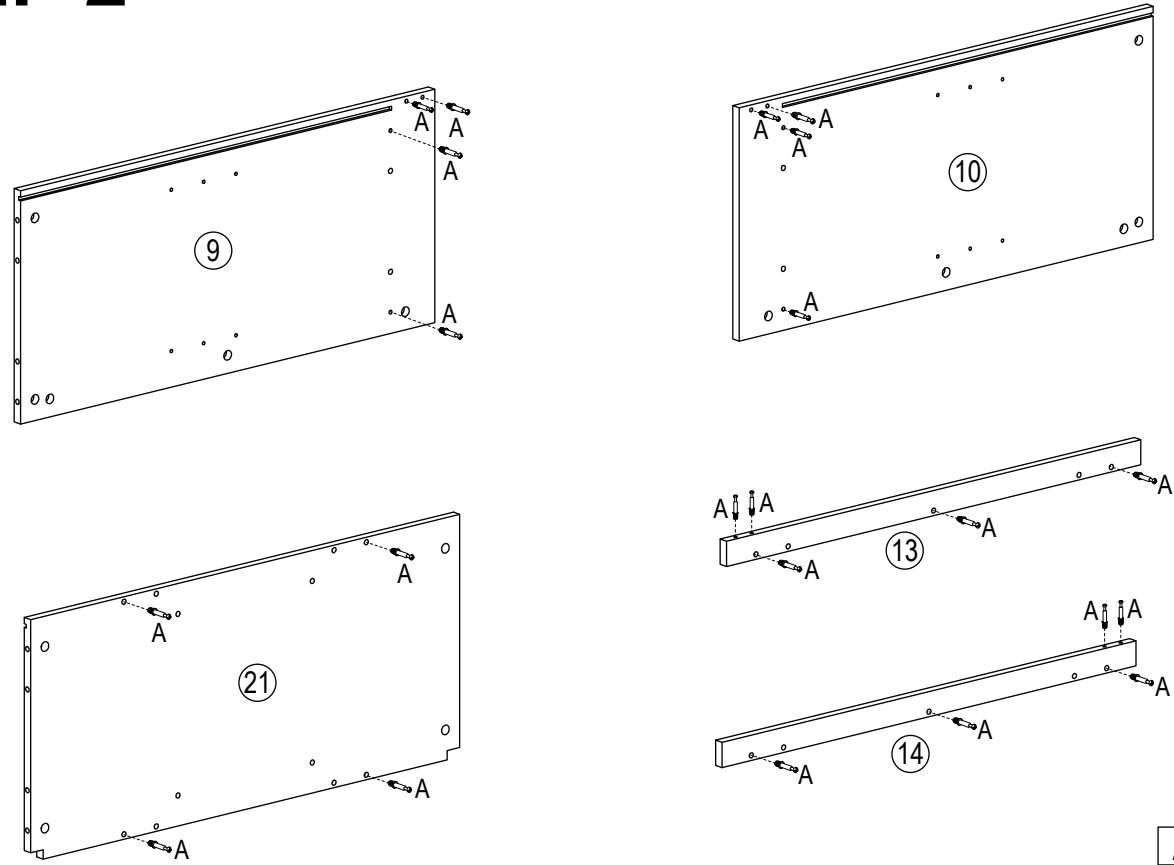


A	x22
	
φ6×35mm	

STEP 3

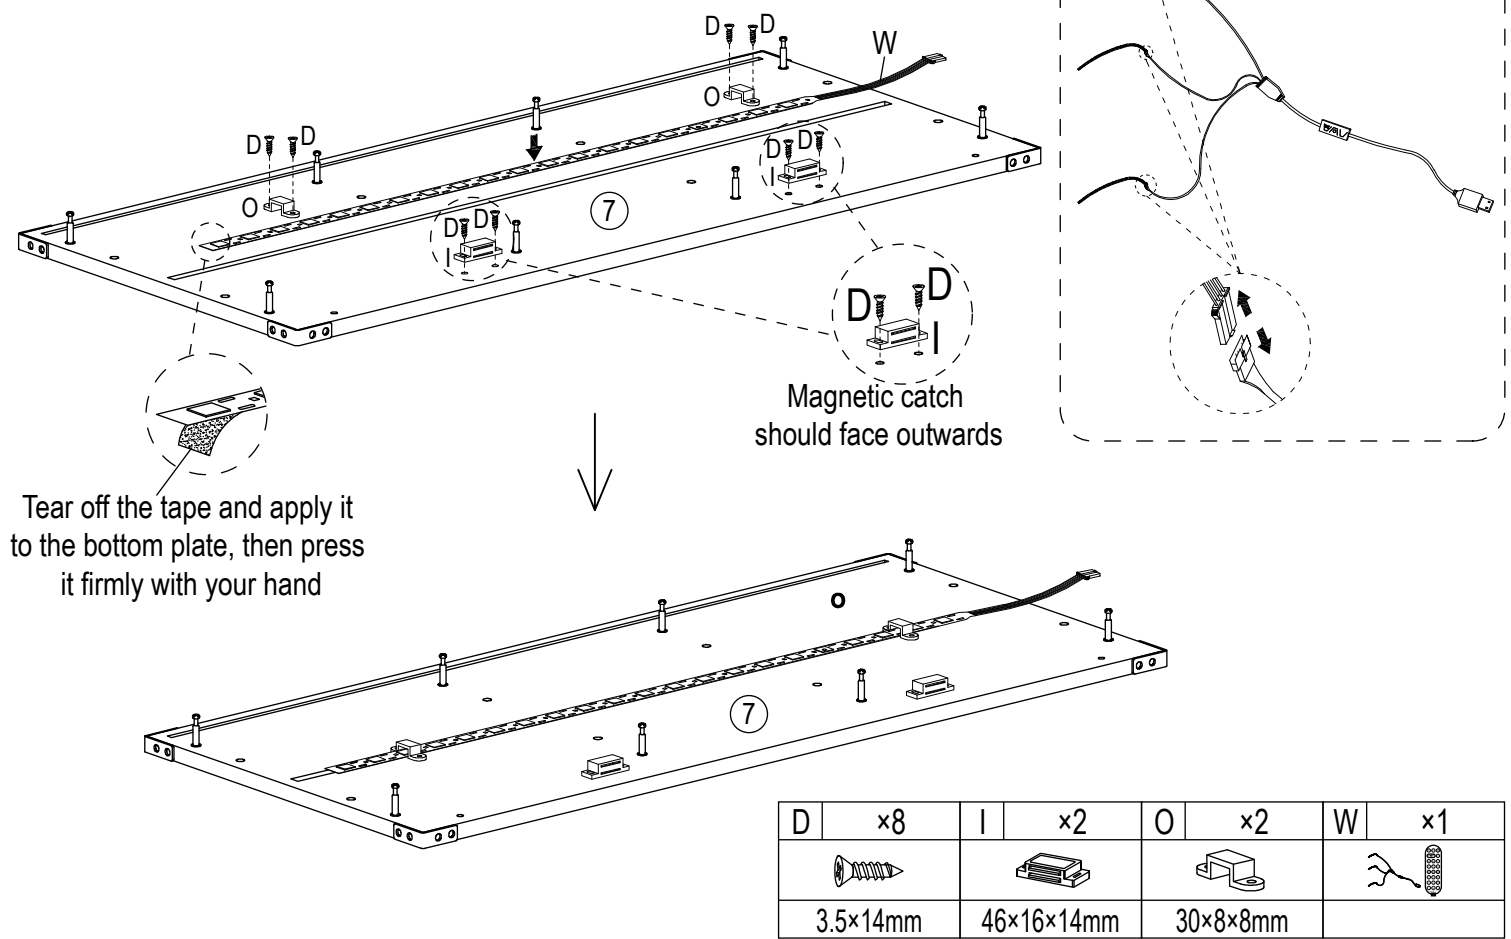


STEP 4

Pay attention to the orientation of the holes

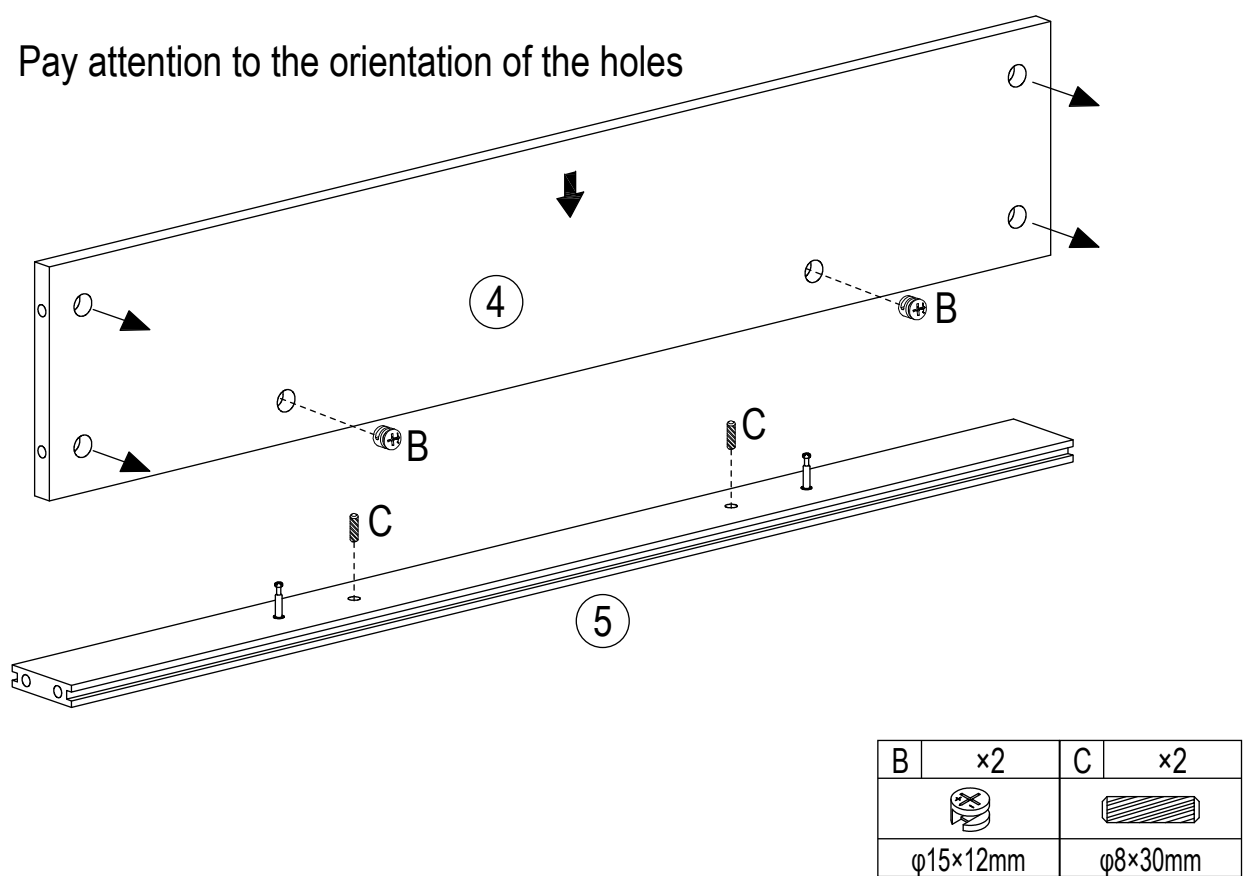


STEP 5

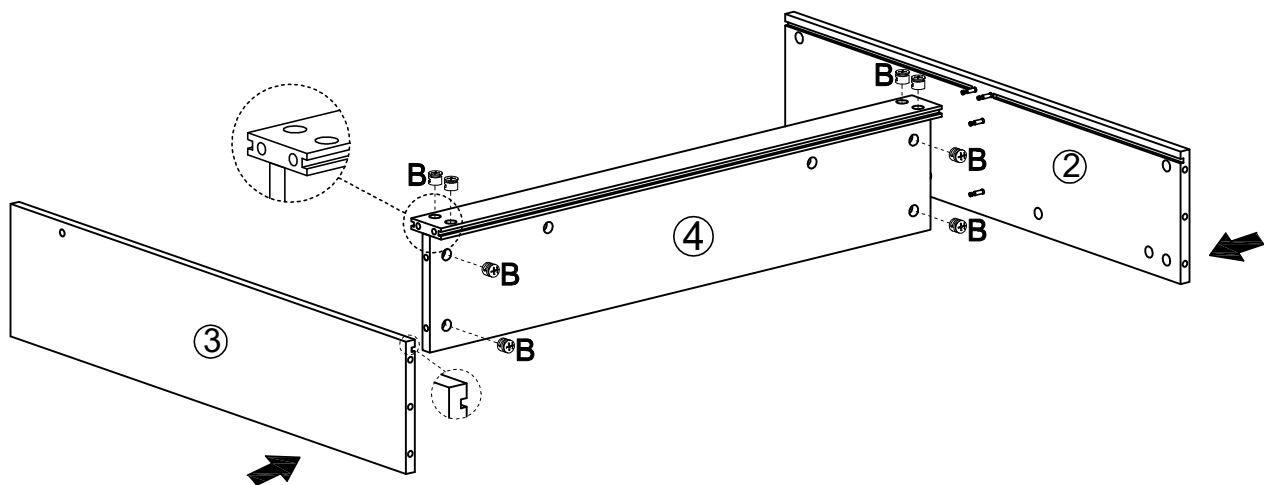


B	X8
	
φ15X12mm	

STEP 6

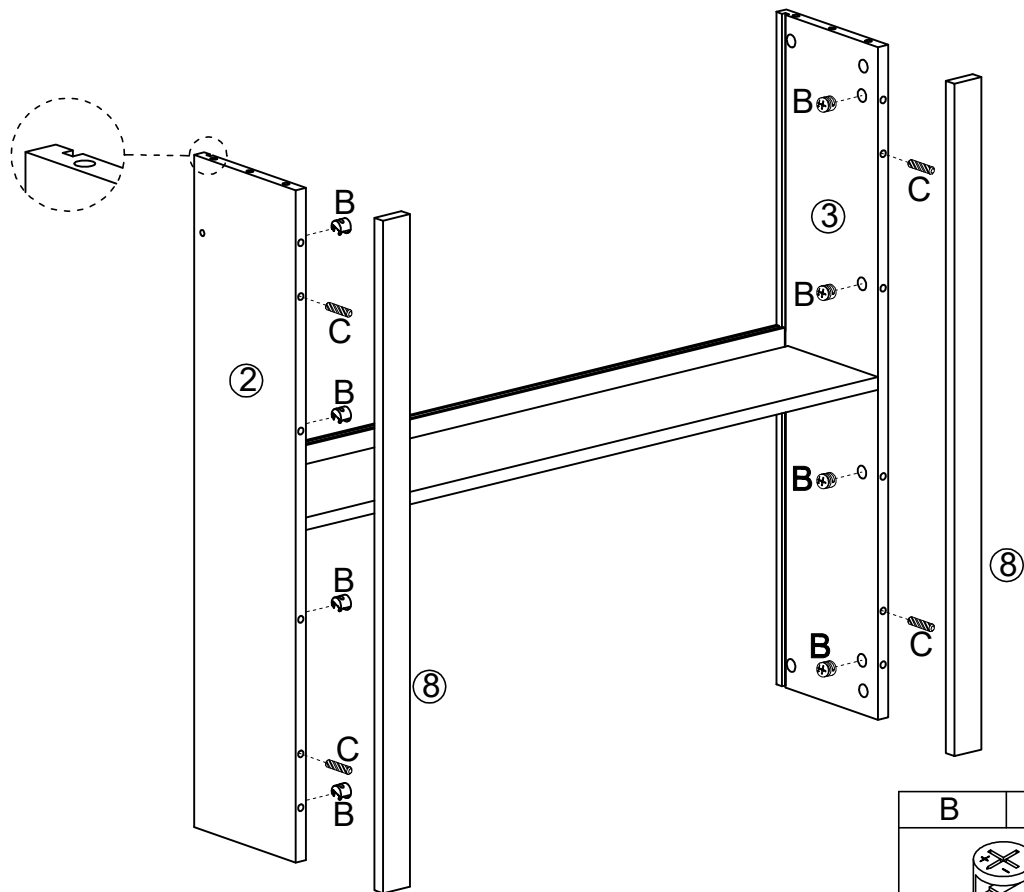



B	X8	C	X4
			
φ15X12mm		φ8X30mm	

STEP 7

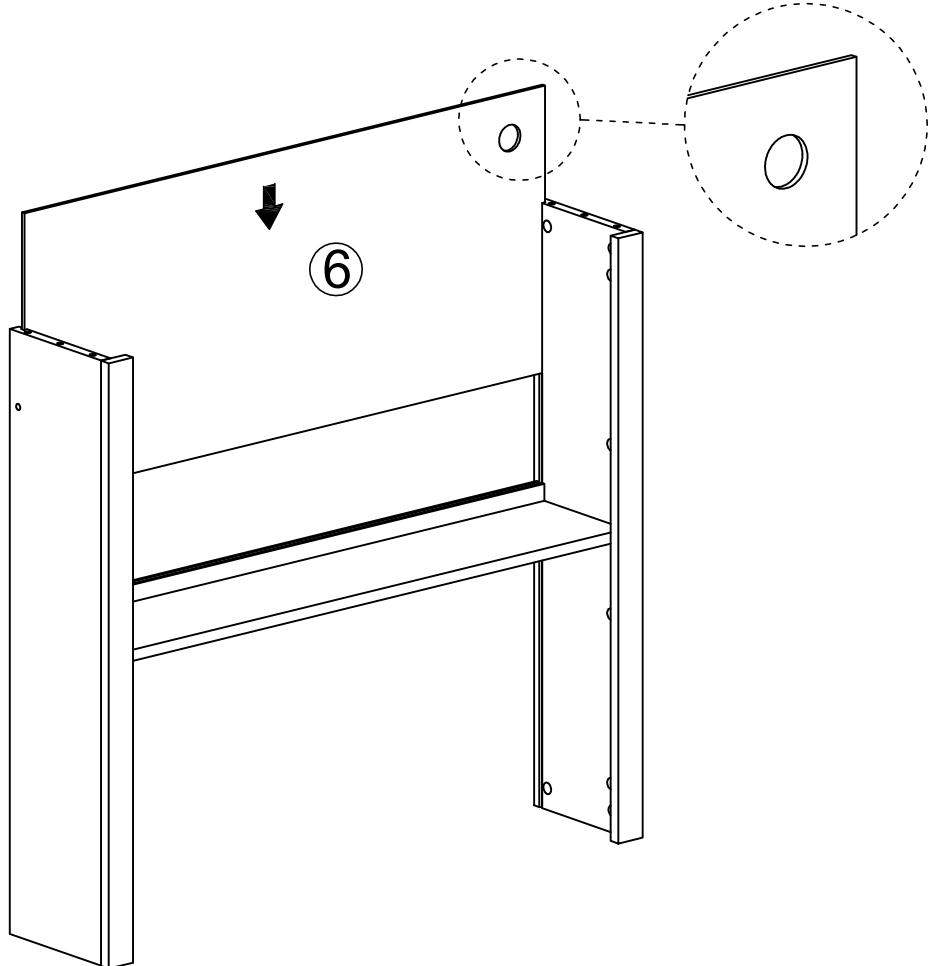


STEP 8

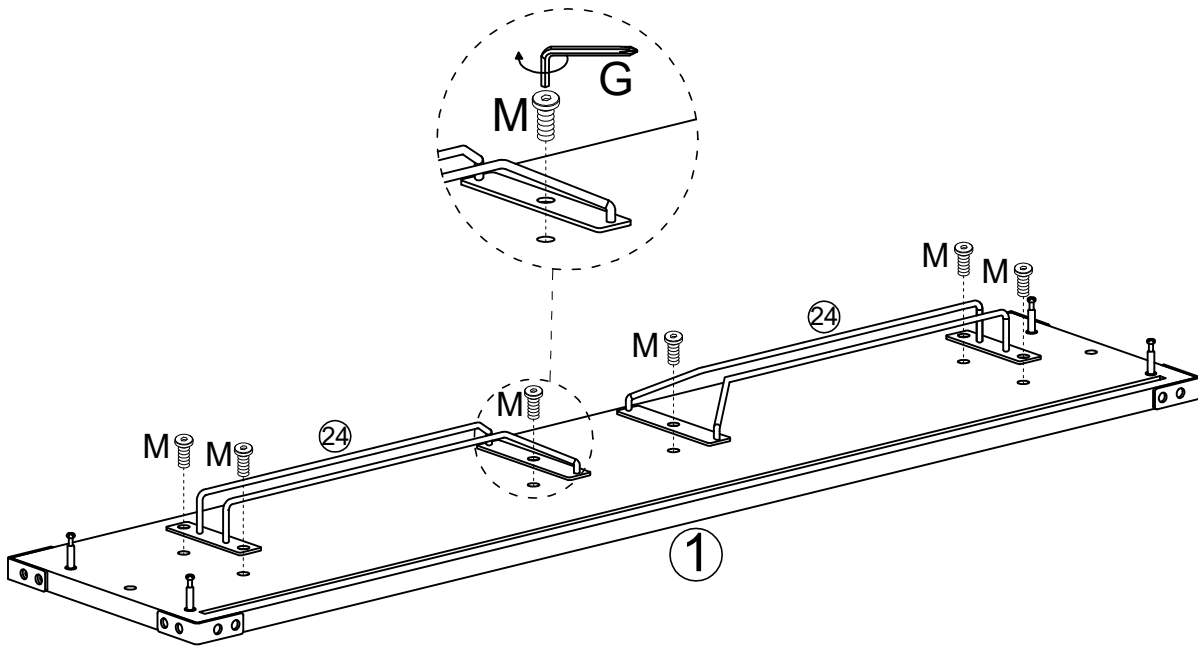

M	X6	G	X1
			
M6X12mm		M4X64mm	


STEP 9

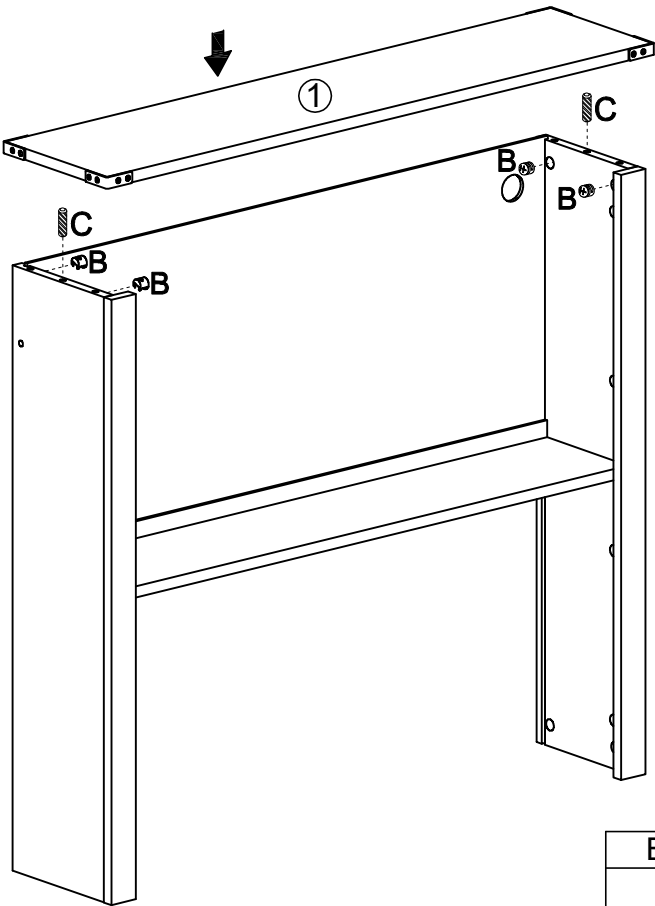

B	X4	C	X2
			
φ15X12mm		φ8X30mm	


STEP 10

Pay attention to the orientation of the holes

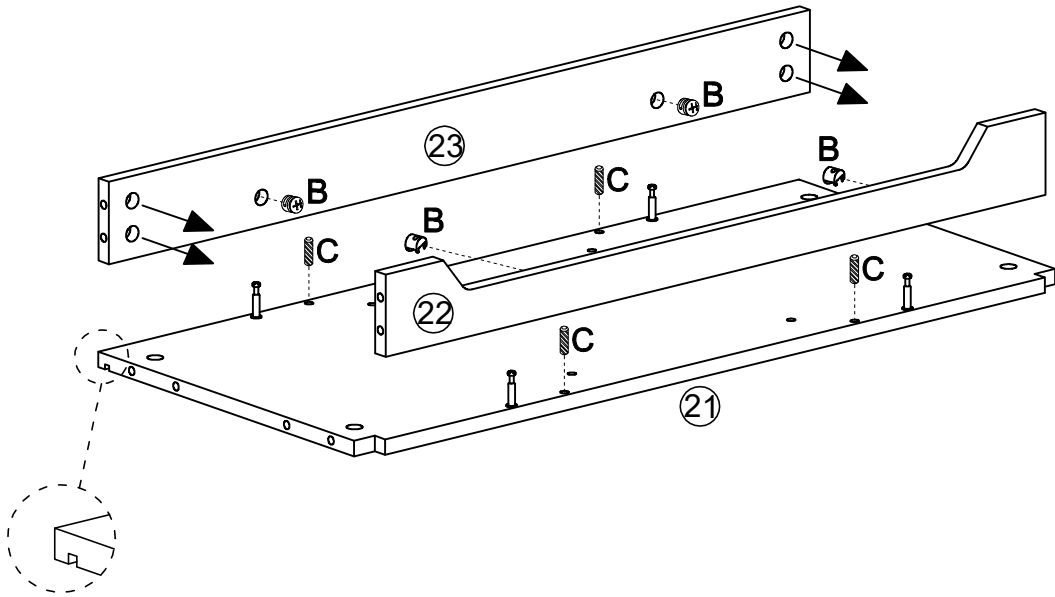


B	X4	C	X4
			
φ15X12mm		φ8X30mm	

STEP 11

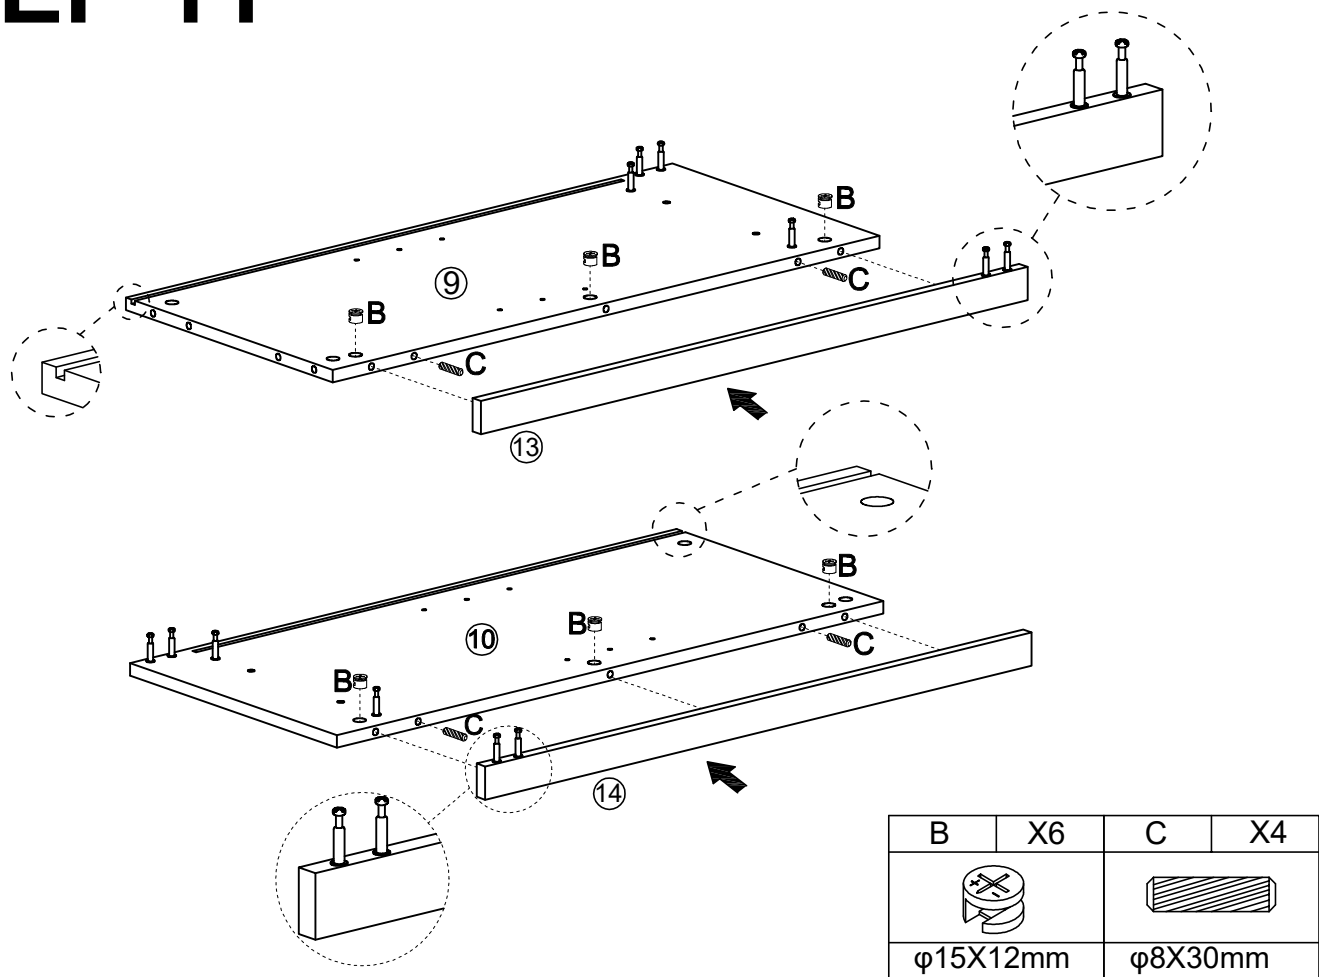


STEP 12

Pay attention to the orientation of the holes


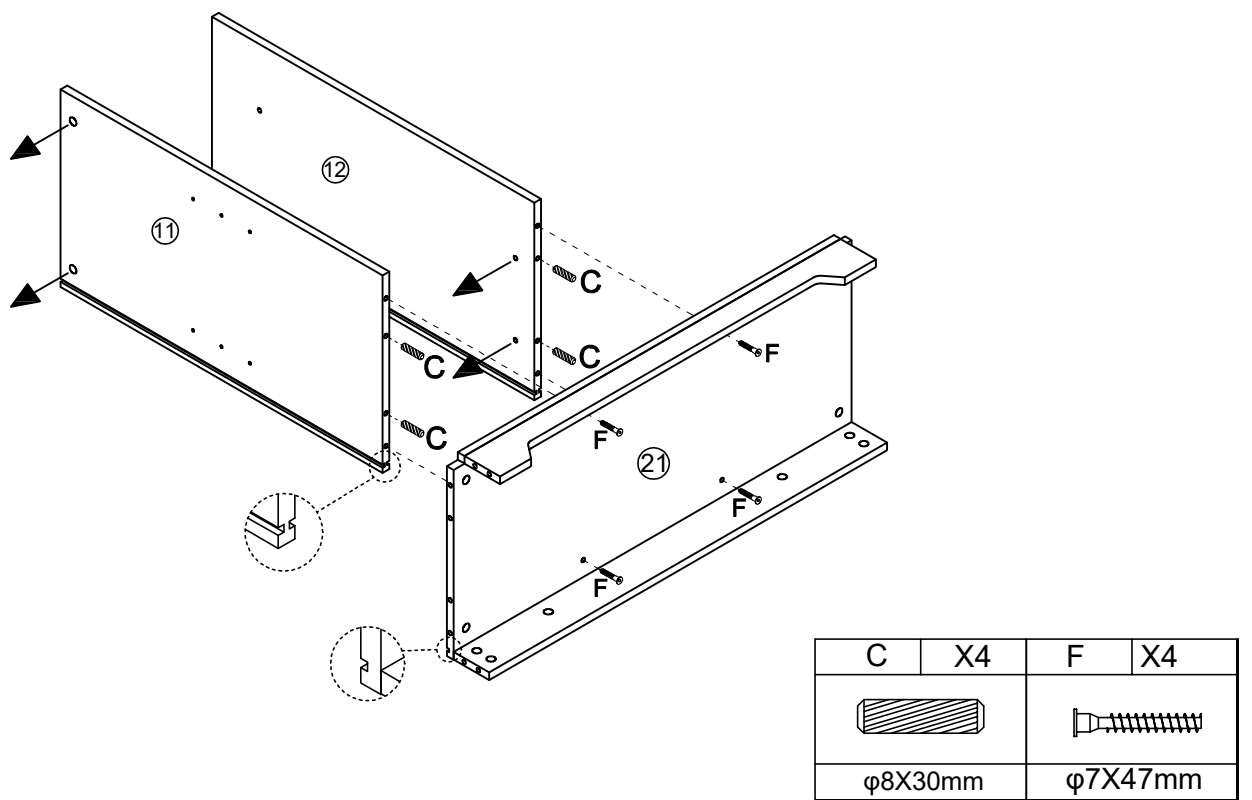



STEP 13

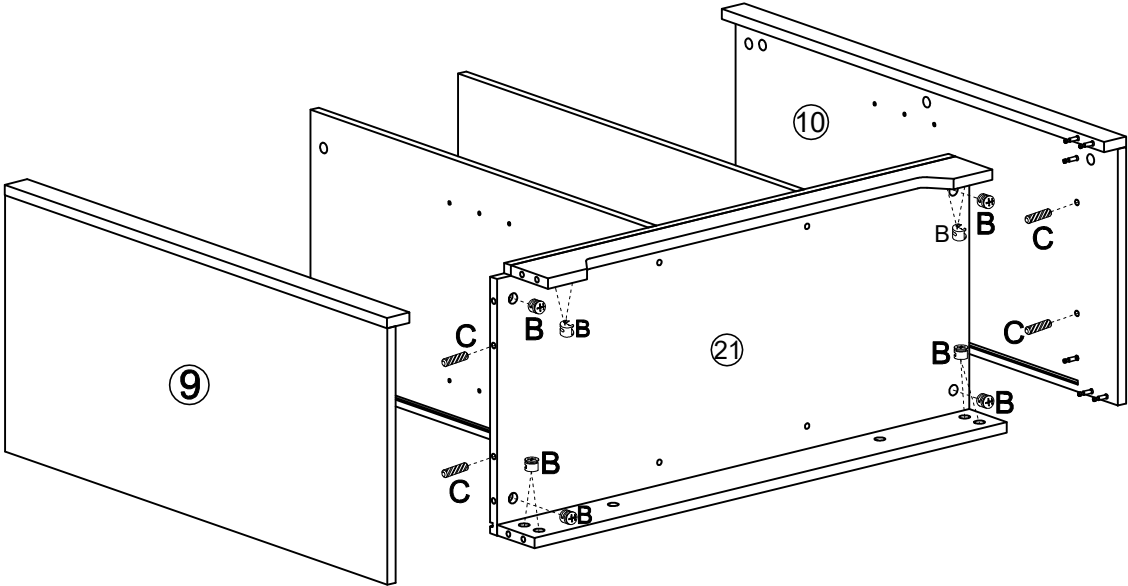


B	X12	C	X4
			
φ15X12mm		φ8X30mm	


STEP 14

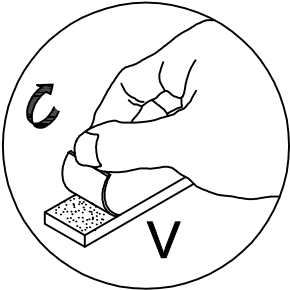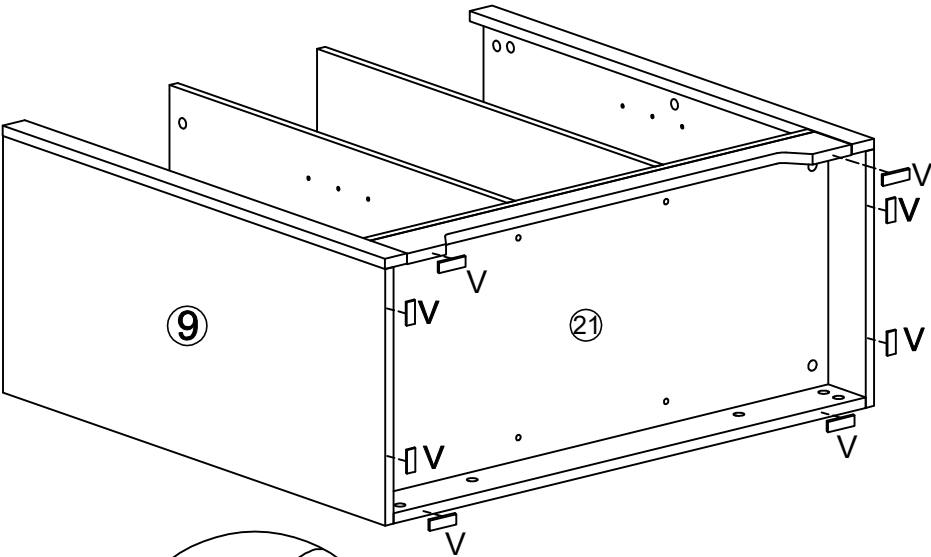


V	X8
	
40X15X5mm	


STEP 15

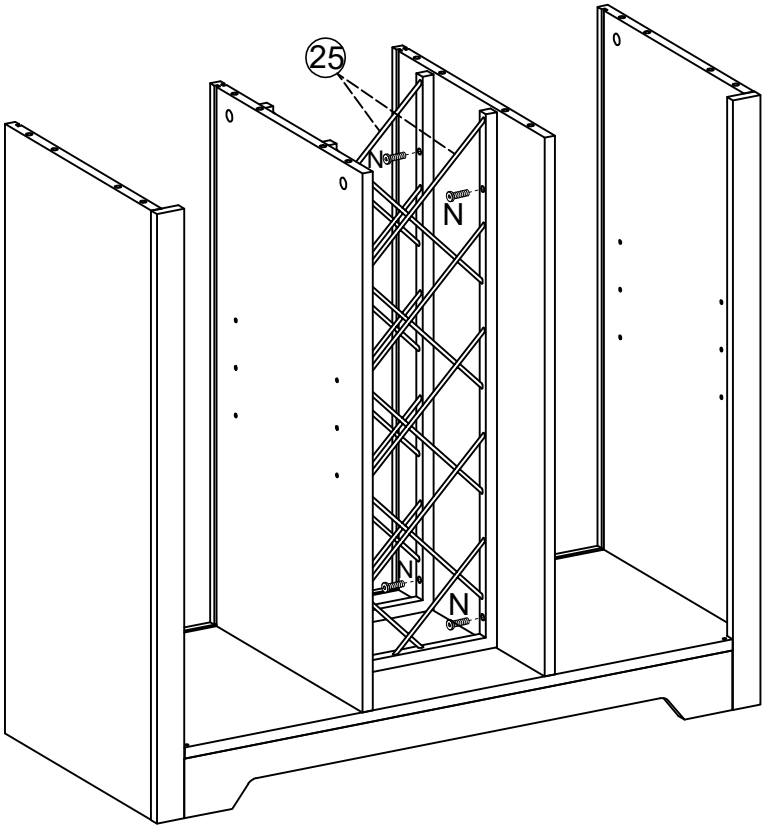


N	X4
	
M6X25mm	

STEP 16

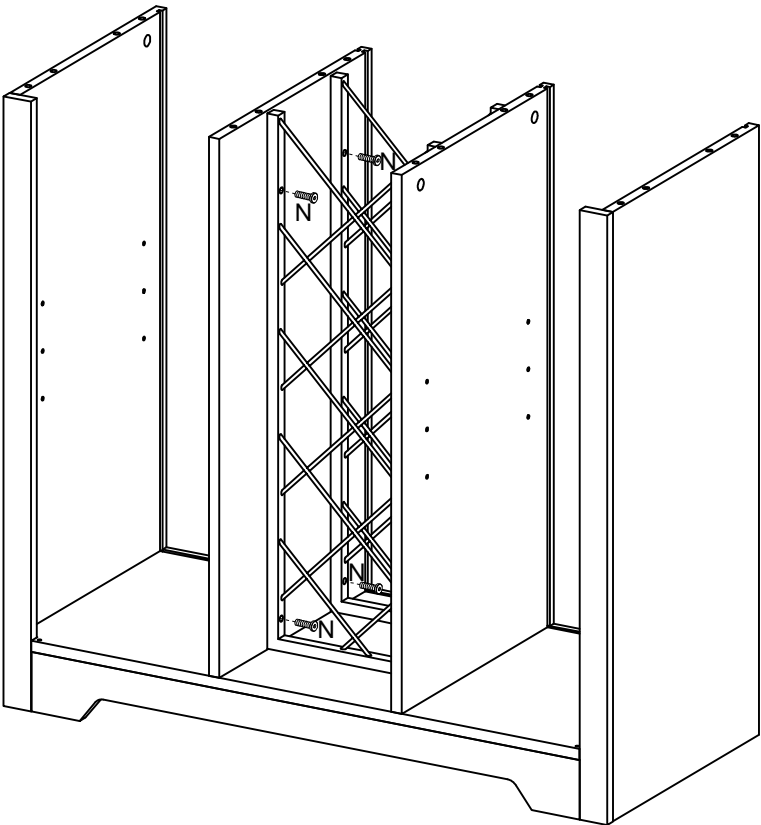


N	X4
	
M6X25mm	

STEP 17

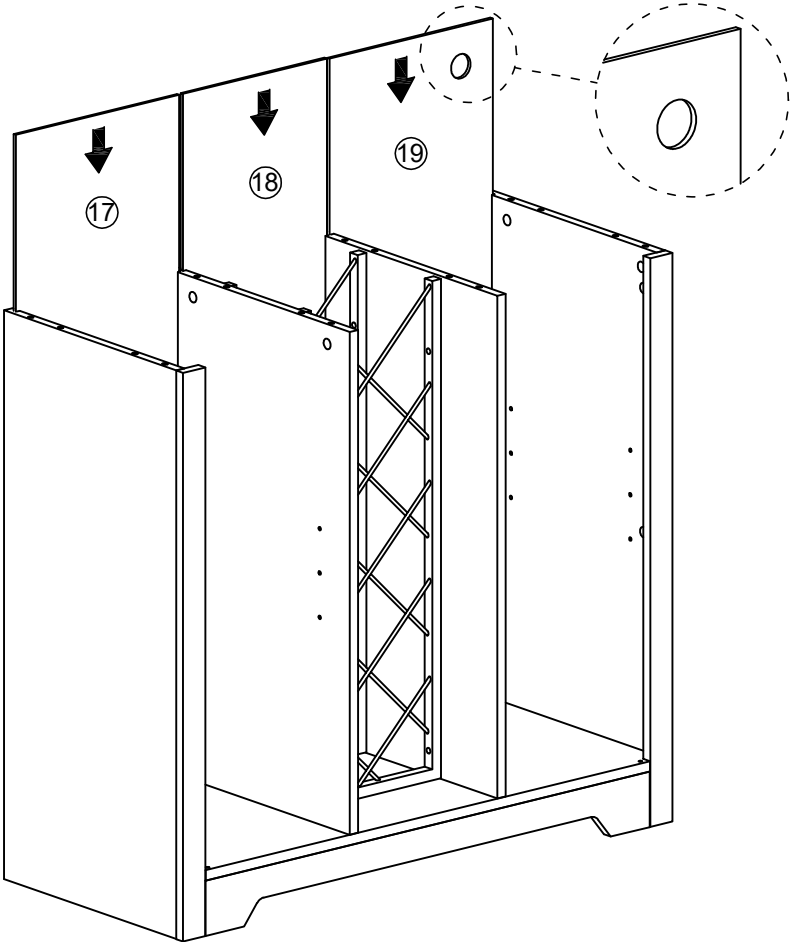


STEP 18

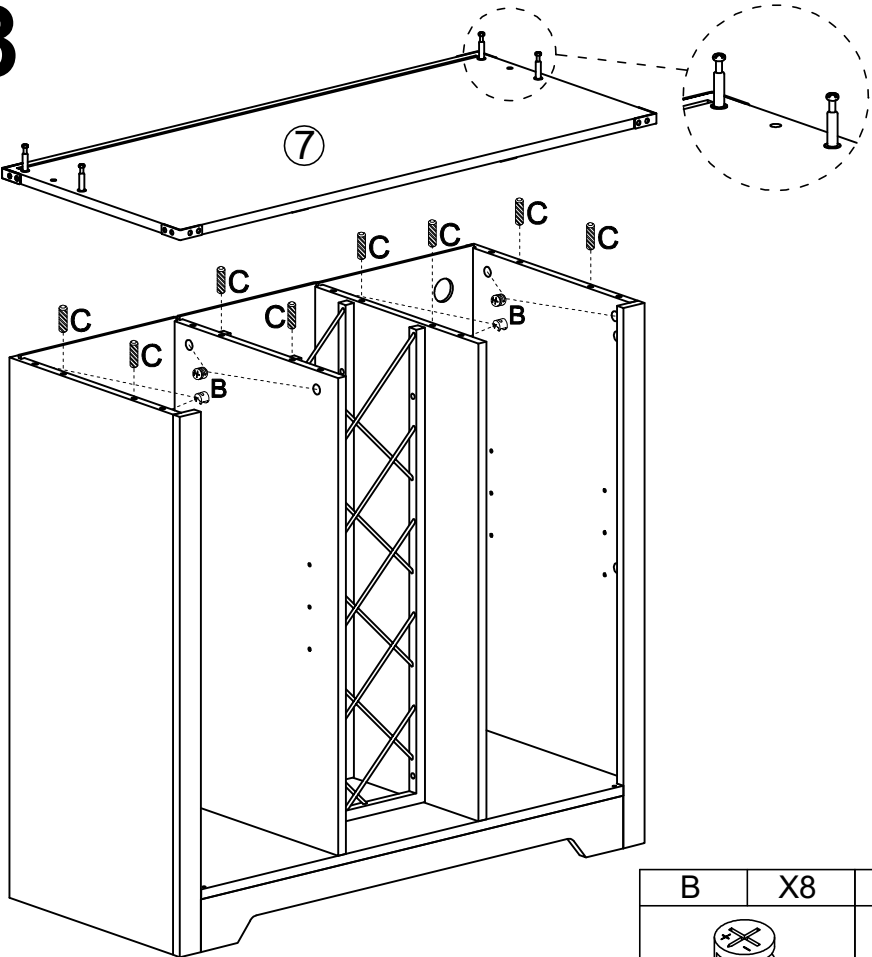


B	X8	C	X8
			
φ15X12mm		φ8X30mm	

STEP 19

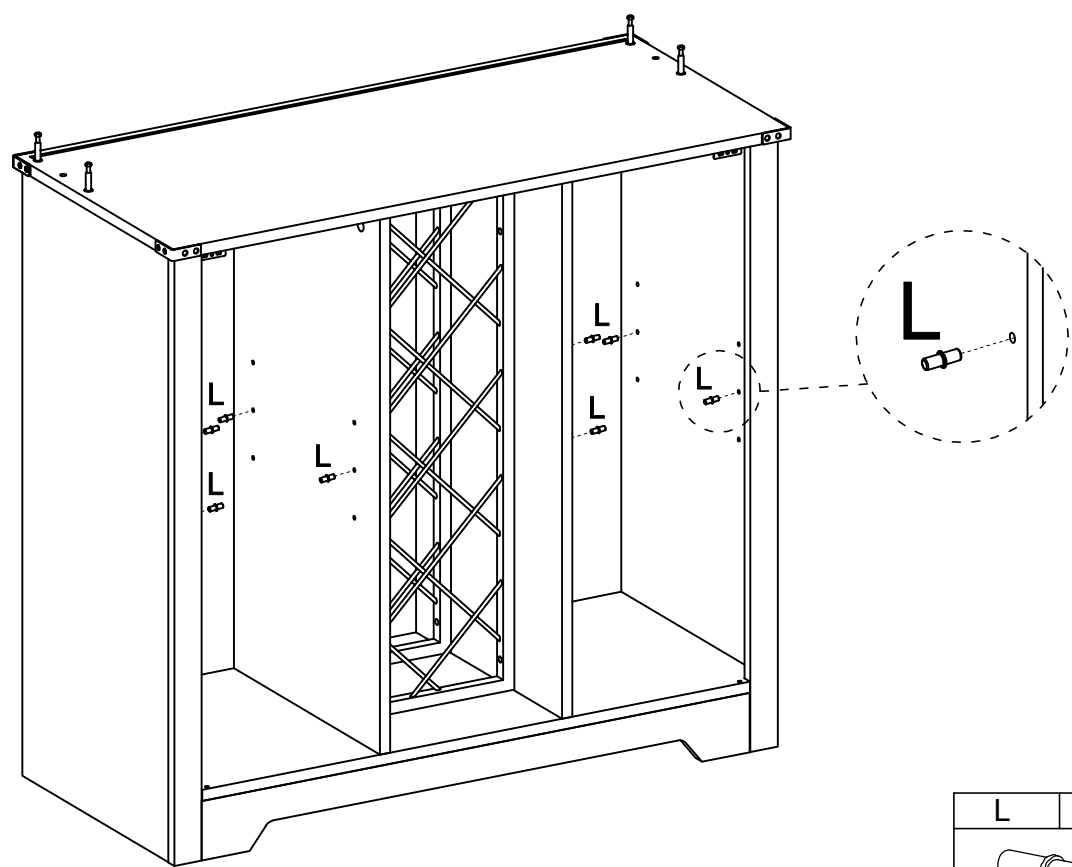


L	X8
	
φ5X13mm	

STEP 20

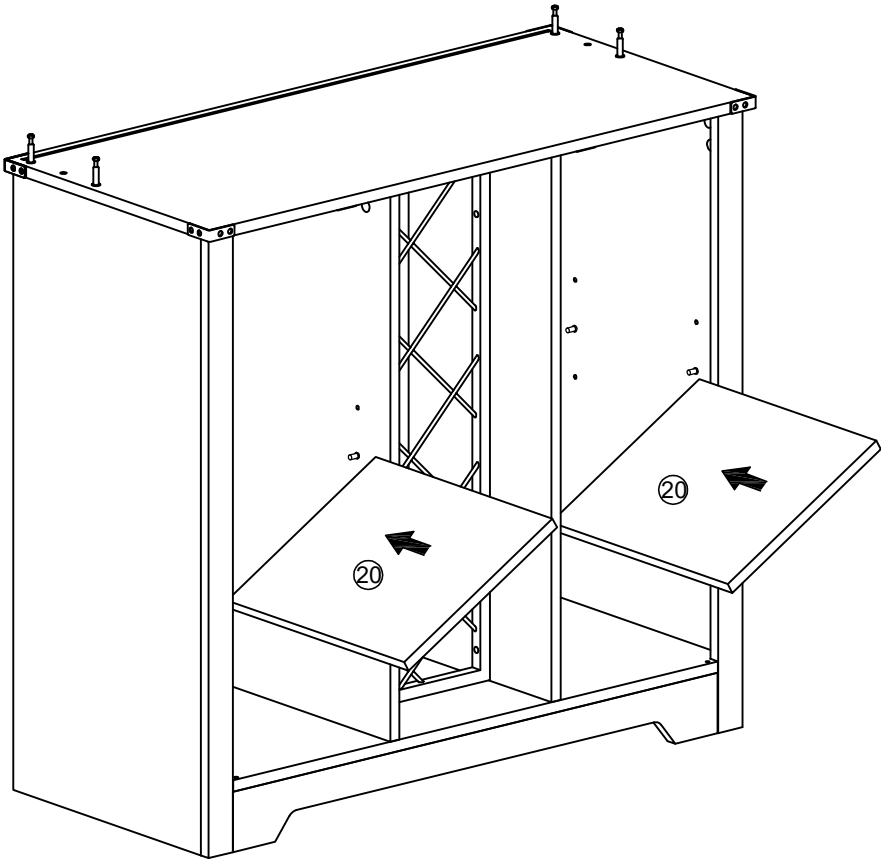


STEP 21

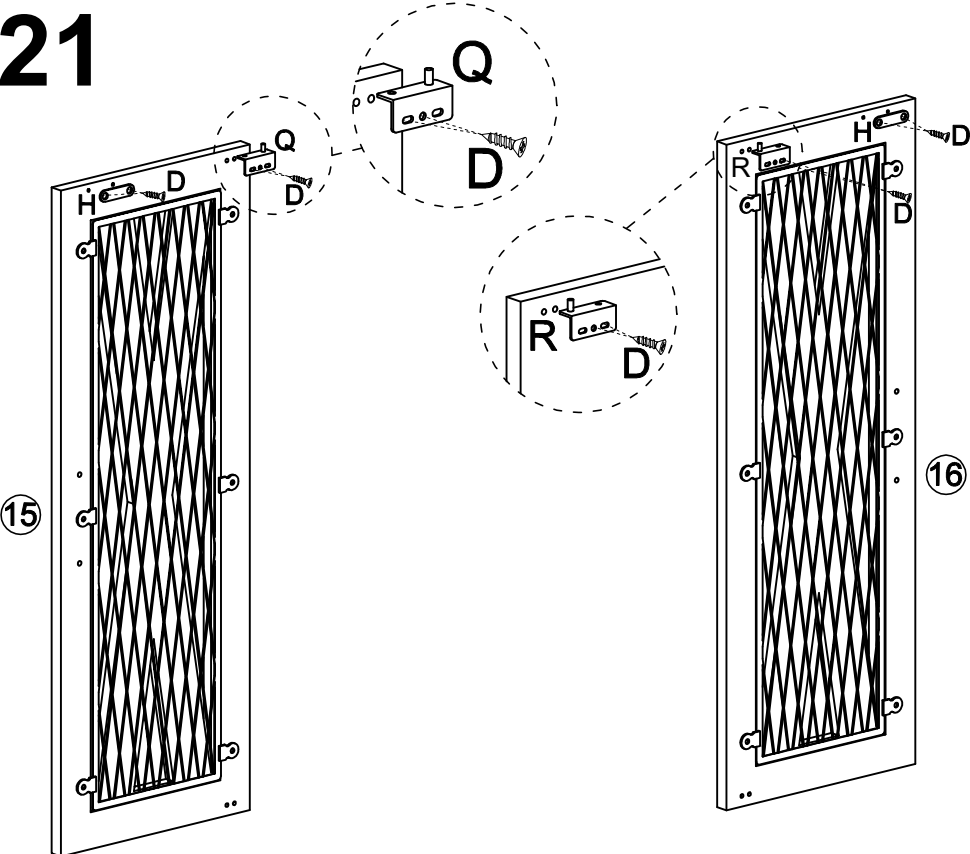


D	X8	H	X2	Q	X1	R	X1
							
3.5X14mm		45X12X1mm		L40mm		L40mm	

STEP 22

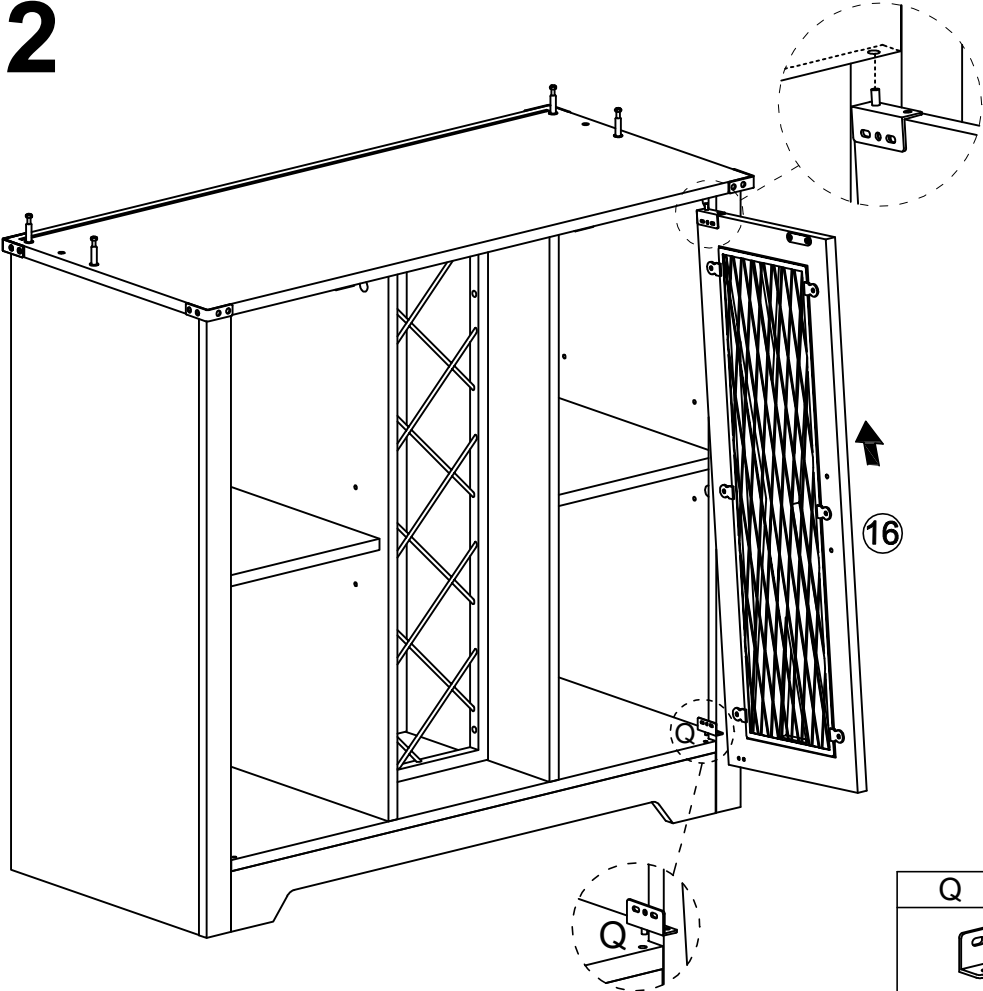


Q	X1
	
L40mm	

STEP 23

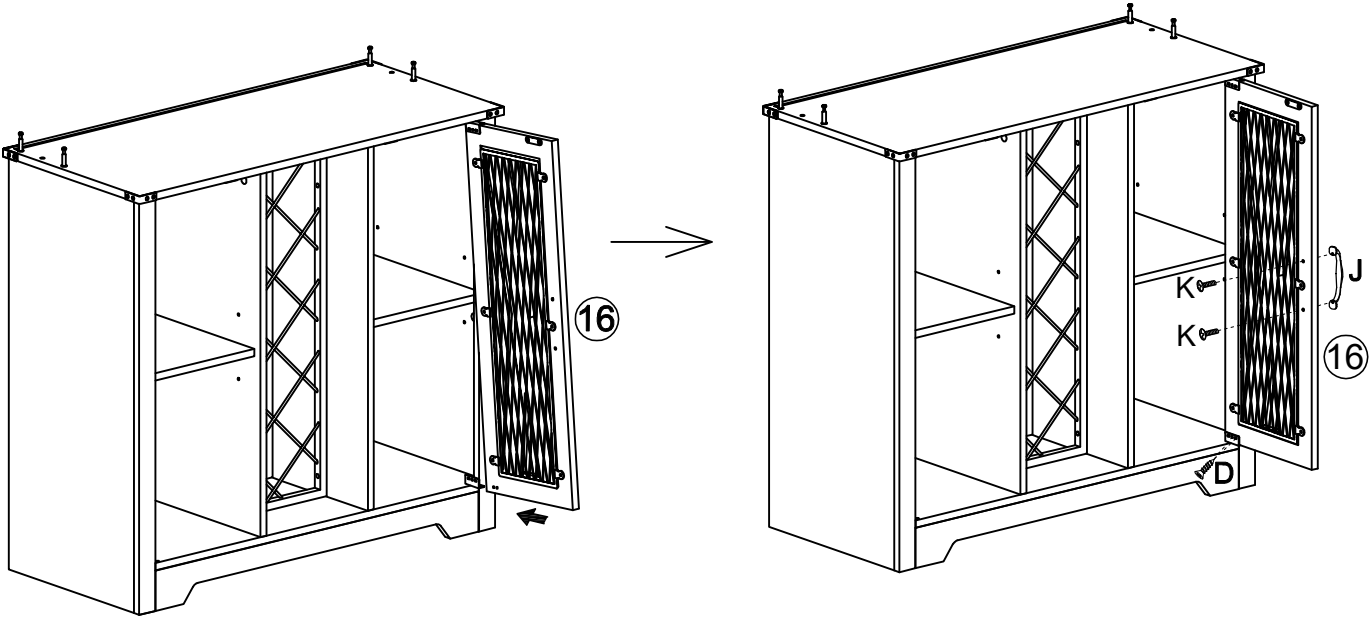


D	X2	J	X1	K	X2
					
3.5X14mm		131X20X23		M4X18mm	

STEP 24

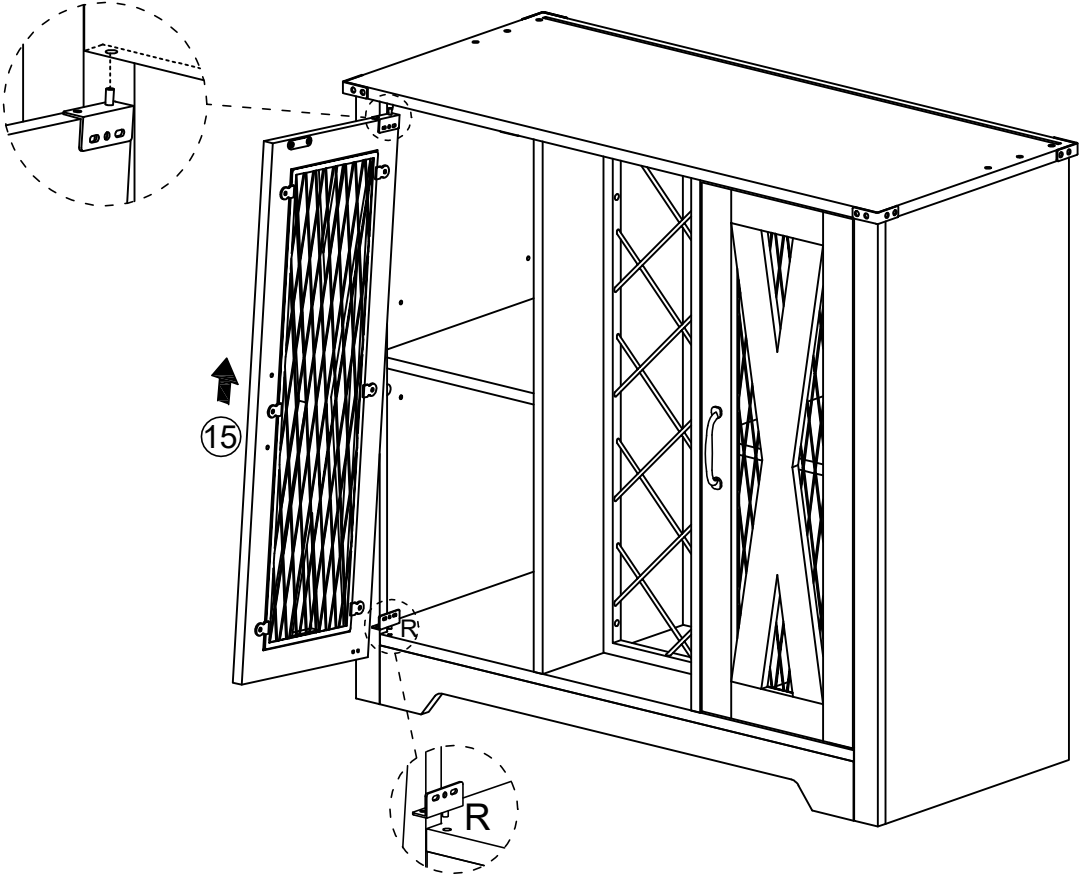


R	X1
	
L40mm	

STEP 25

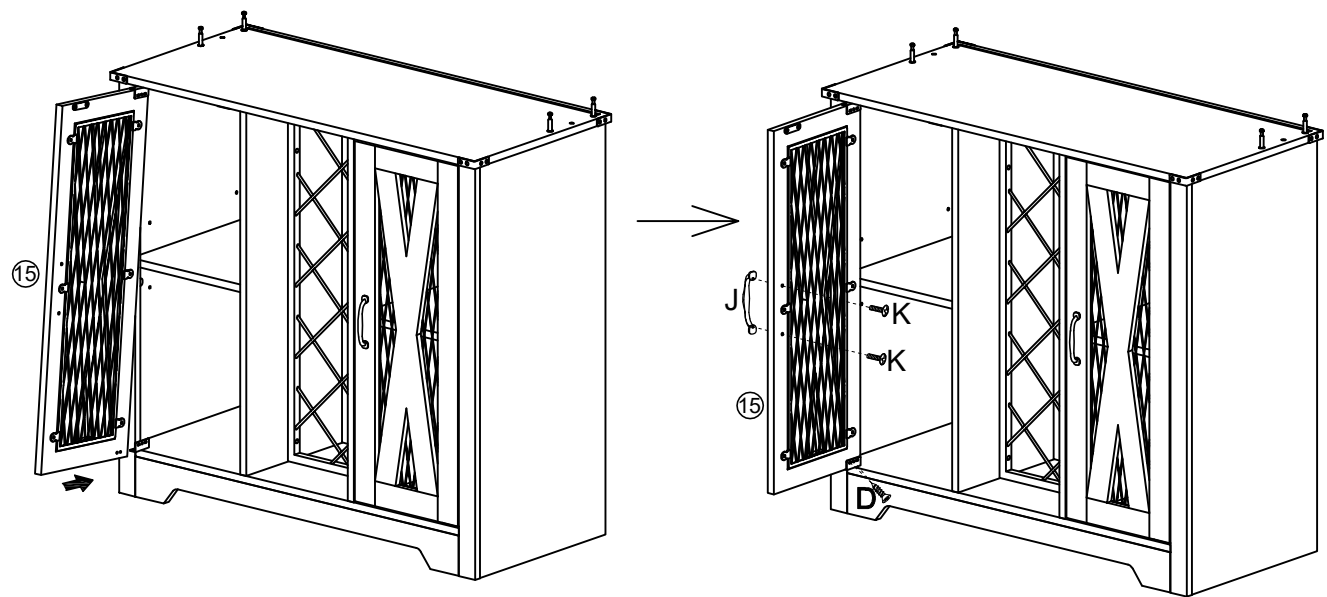


D	X2	J	X1	K	X2
					
3.5X14mm		131X20X23		M4X18mm	

STEP 26

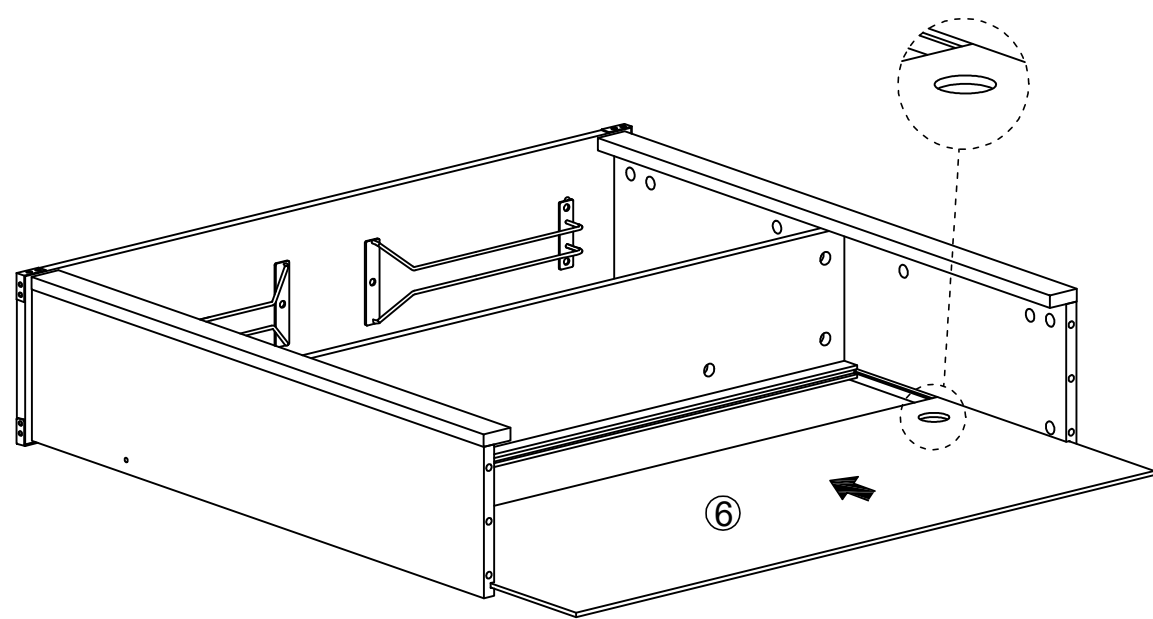


STEP 27

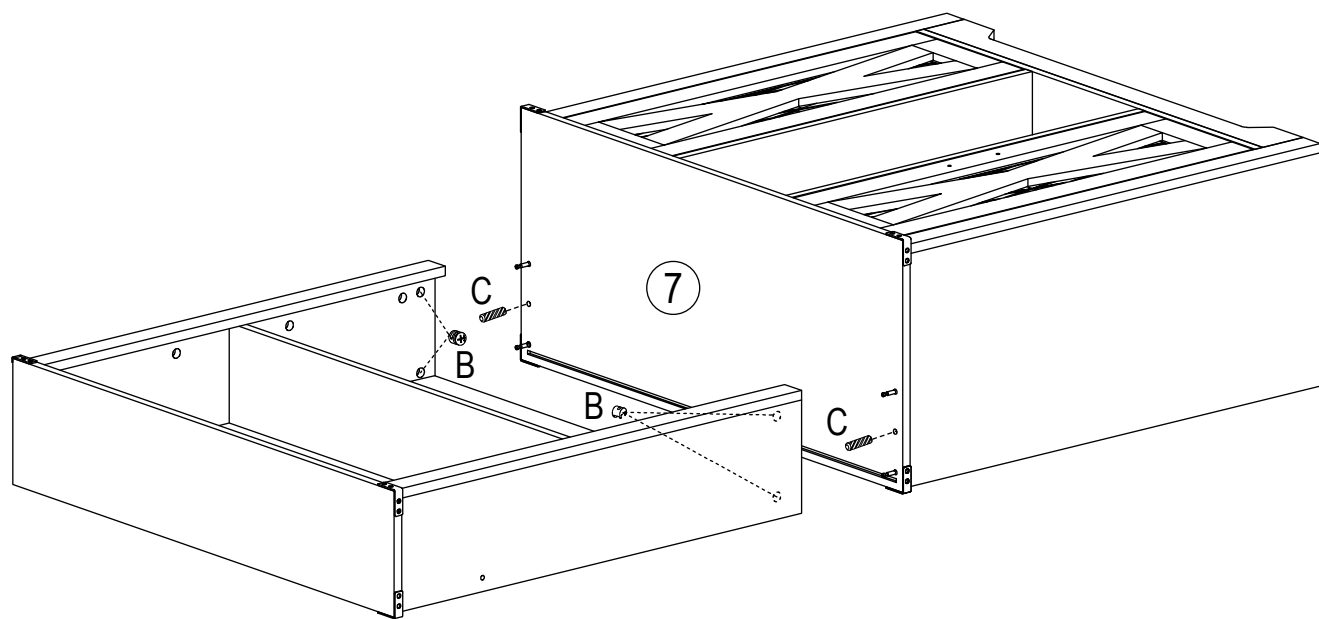

B	x4	C	x2
			
φ15×12mm		φ8×30mm	


STEP 28

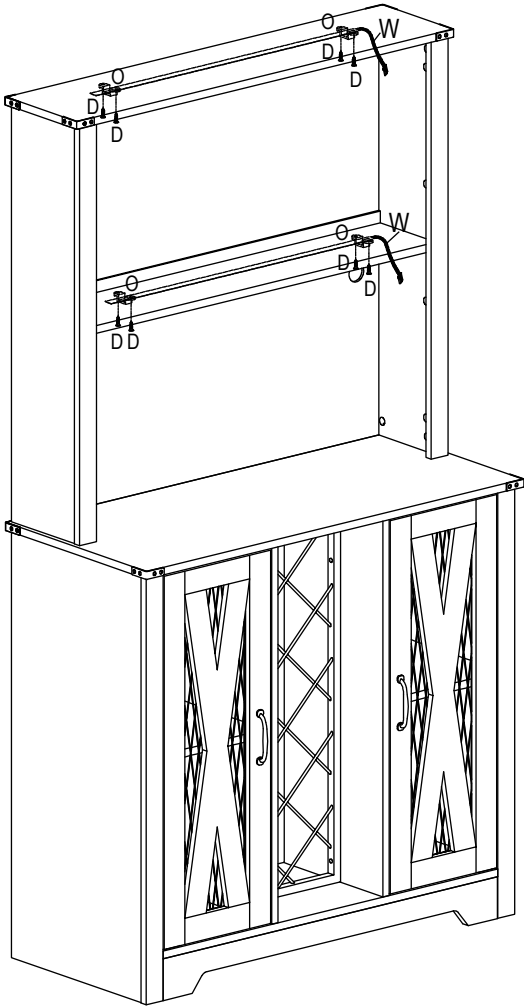

Tear off the tape and apply it to the bottom plate, then press it firmly with your hand


D	x8	O	x4	W	x1
					
3.5×14mm		30×8×8mm			

STEP 29

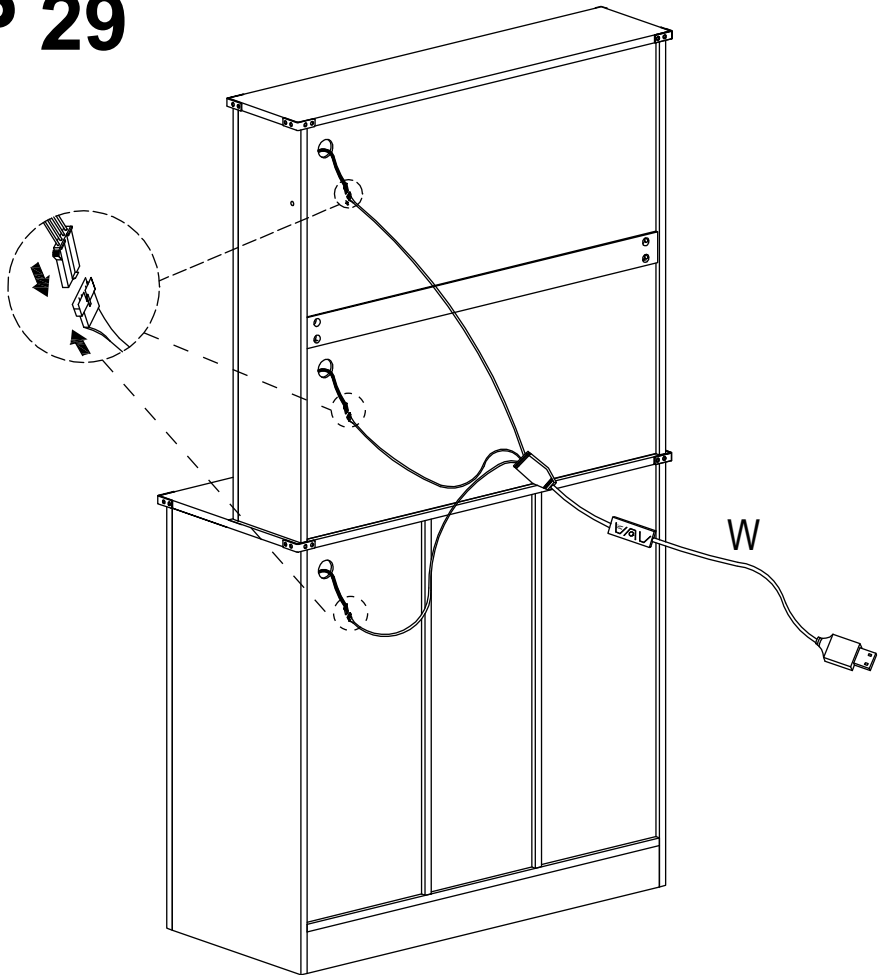

W	x1

STEP 30

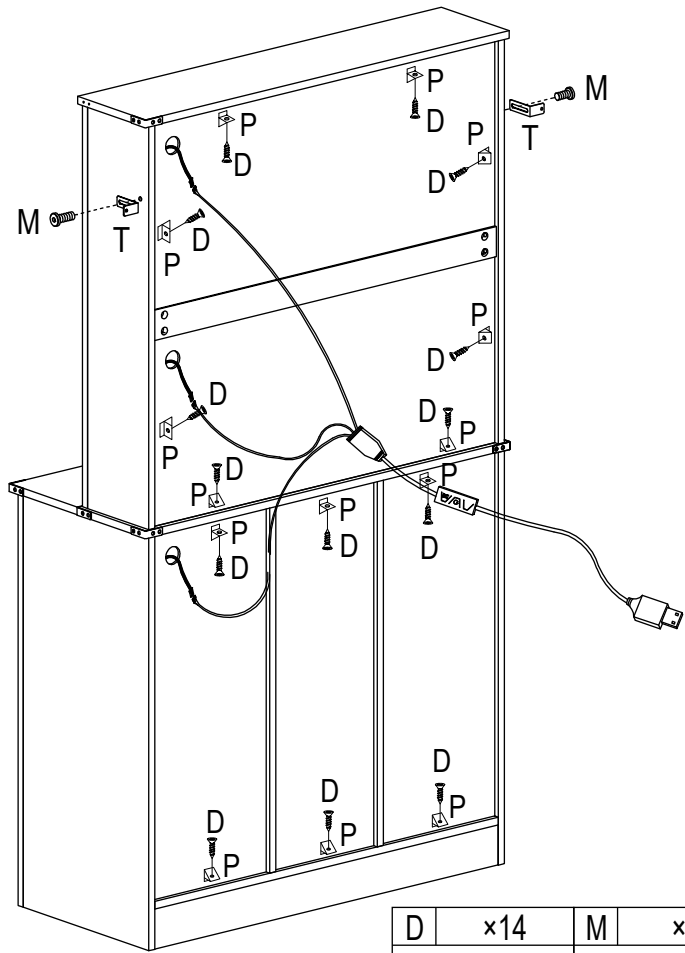


D	x14	M	x2	P	x14	T	x2
3.5×14mm		M6×12mm		14×14×9mm		60×35×20mm	


STEP 31



Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

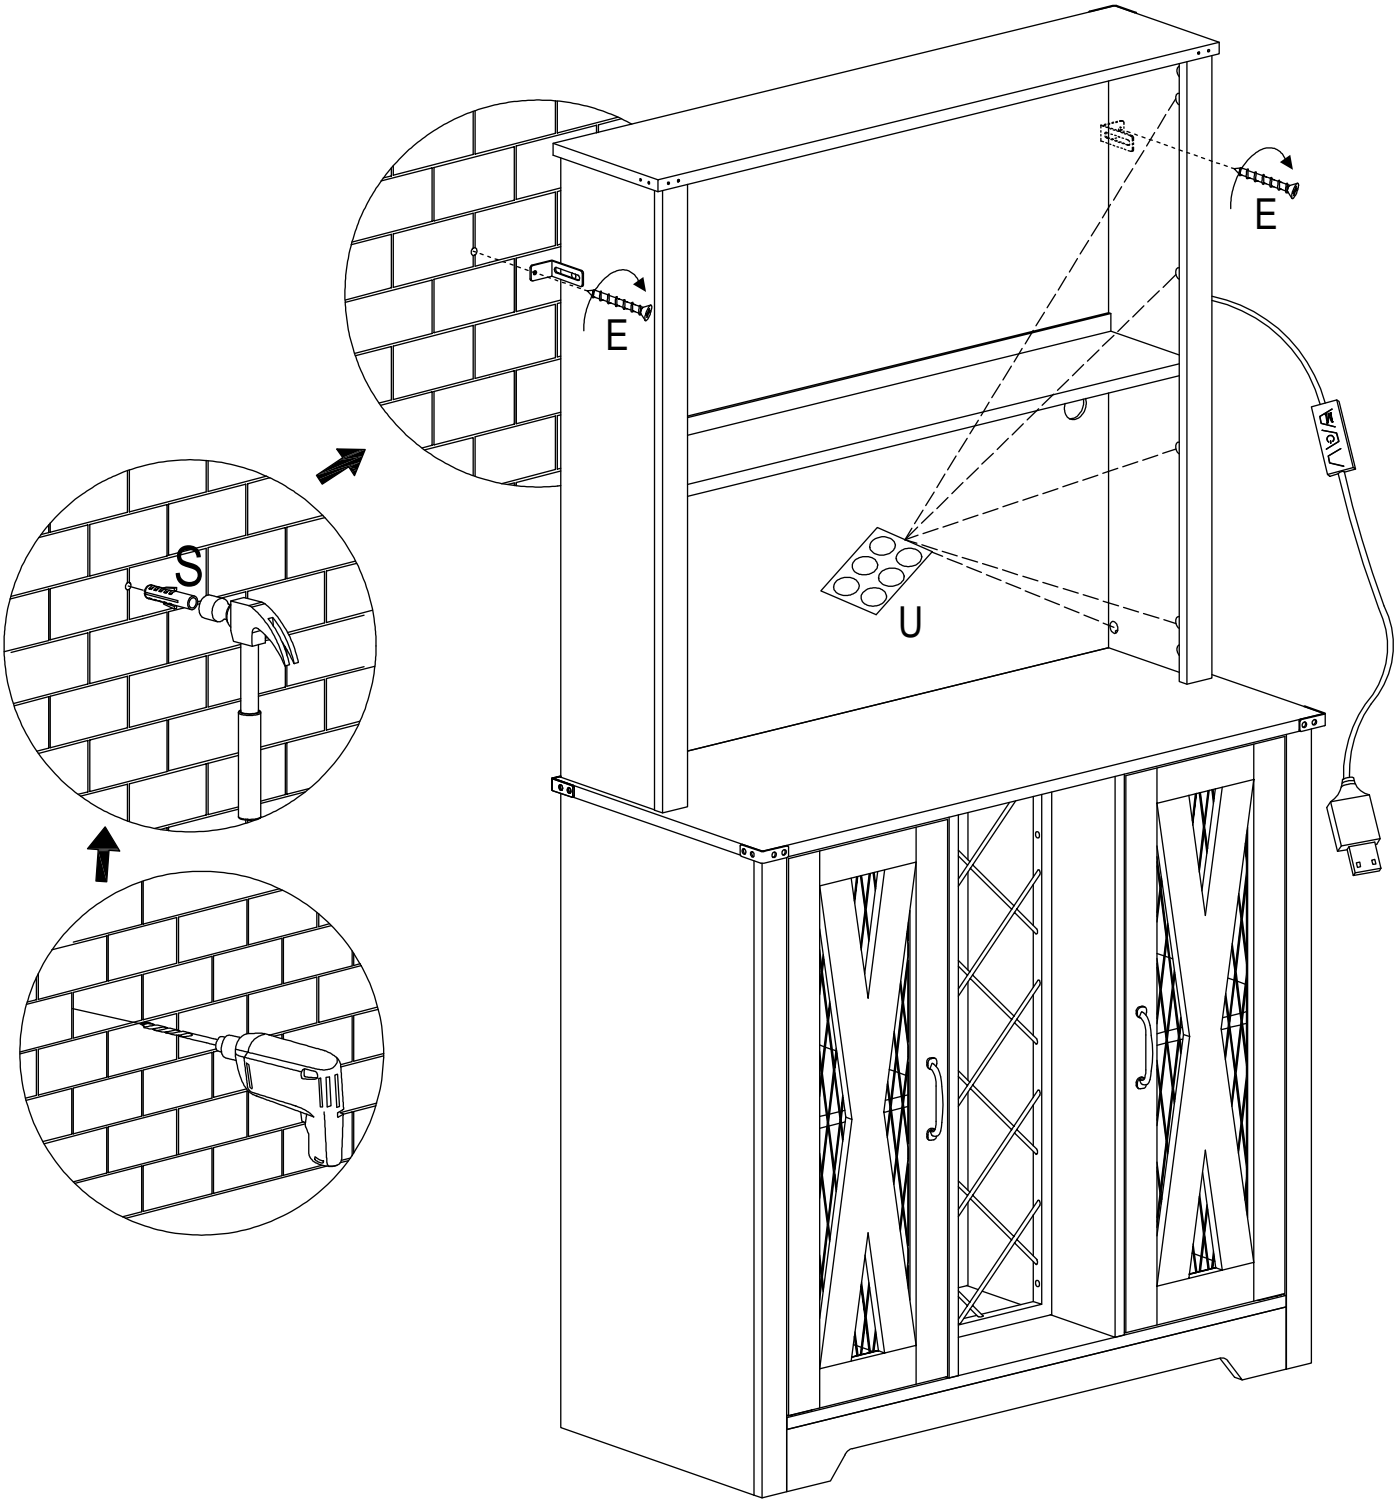

Installation Completed

E	x2	S	x2	U	x4
					
φ4×35mm		φ8×40mm		φ20mm	